



Dec 04, 2020

Full-UDG treated double-stranded ancient DNA library preparation for Illumina sequencing

Forked from Full-UDG treated double-stranded ancient DNA library preparation for Illumina sequencing (reduced input DNA)

Franziska Aron¹, Gunnar U Neumann¹, Guido Brandt¹

¹Department of Archaeogenetics, Max Planck Institute for the Science of Human History

1

Works for me

dx.doi.org/10.17504/protocols.io.bqbpmsmn

MPI-SHH Archaeogenetics



James Fellows Yates

Max Planck Institute for the Science of Human History

ABSTRACT

Protocol for the preparation of double-stranded genomic libraries for Illumina sequencing, optimised for ancient DNA (aDNA) with initial USER enzyme treatment. This protocol generates adapter ligated DNA fragments that can be used in conjunction with downstream indexing protocols.

The initial treatment with UDG (USER) removes molecular 'damage' in the form of deaminated cytosines characteristic of aDNA. This protocol is modified after Meyer & Kircher (2010) Cold Spring Harb. Protoc. (doi: 10.1101/pdb.prot5448) and Briggs et al. (2010) Nucleic Acids Research 38 (6) (doi: 10.1093/nar/gkp1163)

DOI

dx.doi.org/10.17504/protocols.io.bqbpmsmn

PROTOCOL CITATION

Franziska Aron, Gunnar U Neumann, Guido Brandt 2020. Full-UDG treated double-stranded ancient DNA library preparation for Illumina sequencing. **protocols.io**

https://dx.doi.org/10.17504/protocols.io.bqbpmsmn

FORK NOTE

FORK FROM

Forked from Full-UDG treated double-stranded ancient DNA library preparation for Illumina sequencing (reduced input DNA), Franziska Aron

KEYWORDS

ancient DNA, sequencing, nonUDG, double-stranded, DNA, genomic DNA, genomics, palaeogenetics, archaeogenetics, paleogenetics, archaeogenetics, aDNA, Illumina, library preparation, nucleic acids

LICENSE

This is an open access protocol distributed under the terms of the Creative Commons Attribution License, which permits unrestricted use, distribution, and reproduction in any medium, provided the original author and source are credited

IMAGE ATTRIBUTION

Matthäus Rest

CREATED

Dec 02, 2020

LAST MODIFIED

Dec 04, 2020

protocols.io

12/04/2020

Citation: Franziska Aron, Gunnar U Neumann, Guido Brandt (12/04/2020). Full-UDG treated double-stranded ancient DNA library preparation for Illumina sequencing. https://dx.doi.org/10.17504/protocols.io.bgbpmsmn

Dec 02, 2020 Franziska Aron

Max Planck Institute for the Science of Human History

PROTOCOL INTEGER ID

45135

GUIDELINES

Working in an Ancient DNA Laboratory

- All steps of the protocol (except the qPCR at the end) should take place in a clean room facility specifically designed for ancient DNA.
- The researcher performing lab work should be dressed in correspondingly suitable lab-wear, such as:
- full-body suit with hood (e.g., Tyvek)
- hairnet
- face mask
- two pairs of clean gloves
- clean shoes
- protective glasses
- Sample processing and buffer/master mix preparation should be carried out in separated work benches with integrated UV irradiation (e.g. Dead Air PCR work bench)
- Surfaces and equipment should be regularly decontaminated with e.g. bleach solution or Thermofisher's DNA AWAY (or similar) and irradiated with UV.
- All home-made buffers should be prepared in a seperate decidated PCR-free ultra-clean room and UV-irradiated for 30 min.

Please see the following for more detailed guidance:

Llamas, B. et al., 2017. From the field to the laboratory: Controlling DNA contamination in human ancient DNA research in the high-throughput sequencing era. *STAR: Science & Technology of Archaeological Research*, 3(1), pp.1–14. Available at: https://doi.org/10.1080/20548923.2016.1258824.

Working in an Molecular Biology Laboratory

The qPCR reaction takes place in a standard DNA-based molecular biology lab.

Please keep in mind the safety guidelines of your specific country and institution.

Recommendations include wearing of:

- lab coats
- closed shoes and trousers
- safety glasses
- nitrile or latex gloves

Protocol Specific Guidelines

This protocol requires the use of two rooms - a dedicated PCR-free ultra-clean library building room and a standard molecular biology lab for qPCR.

MATERIALS TEXT

MATERIAI S

XT4 DNA Polymerase - 750 units New England

Biolabs Catalog #M0203L

■ NEBuffer 2 (10X) New England

Biolabs Catalog #B7002S

⊠ 1.5 mL Biopur Safe-Lock

Tubes Eppendorf Catalog #0030121589

Adhesive clear gPCR

sheets Biozym Catalog #600238

⊠ DNA LoBind Tubes 1.5

mL Eppendorf Catalog #0030108051

users Catalog #4ti-0951

⋈ 0.2 mL PCR Tube

strips Eppendorf Catalog #0030124359

Biolabs Catalog #P0756S

■BSA molecular biology grade 20 mg/ml New England

Biolabs Catalog #B9000S

Biolabs Catalog #M0537S

⊠ dNTP Mix - 25 mM each **Thermo**

Scientific Catalog #R1121

⊠ Ethanol Merck

Millipore Catalog #100983

Biolabs Catalog #M0201L

⊠TWEEN® 20 Sigma

Aldrich Catalog #P9416-50ML

₩ Water Chromasolv Plus for HPLC 2.5L **Sigma**

Aldrich Catalog #34877-2.5L

☑ DyNAmo Flash sYBR Green qPCR Kit **Thermo Fisher**

Scientific Catalog #F415L

MinElute PCR Purification

Kit Qiagen Catalog #28004

Biolabs Catalog #M2200L

⊗ User

Enzyme NEB Catalog #M5505 L

Additional Reagents


Adapter-Mix (10 µM), for preparation see the following protocol: <u>Library Adapter Preparation for Dual-Index Double Stranded</u> DNA Illumina Sequencing

Primers

Primer ID	Sequence (5'-3')	Concentration
IS7	ACACTCTTTCCCTACACGACGC	10 μΜ
IS8	GTGACTGGAGTTCAGACGTGTGC	10 μM

aPCR-Standard

Custom-ordered standard based on a synthetic 224 bp oligo including primer binding sites for the primer pairs IS7/8 (and IS5/IS6 - this standard is also used for the indexing protocol Illumina double-stranded DNA dual-indexing for ancient DNA) ranging from 10⁹ to 10³ DNA copies/µl in serial 1:10 dilutions.

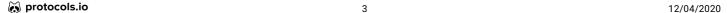

Lab equipment

PCR Thermocycler (e.g. Eppendorf Thermomaster Nexus)

Thermomixer or heatblock (to pre-heat buffers)

Centrifuge 1.5/2.0 ml (e.g. Eppendorf 5424)

Rotor 1.5/2.0ml (e.g. Eppendorf F-45-24-11)

Mini table centrifuge

qPCR machine (e.g. Roche LightCycler® 96 System)

PCR work bench (e.g. AirClean Dead Air PCR Werkbank, 48")

UV irradiation box or cross linker (e.g. Vilber Lourmat Bio-Link BLX-254)

Vortex mixer (e.g. Scientific Industries Vortex-Genie® 2)

Generic Reagents

Solution of household bleach (2-6% NaClO, then diluted to a working solution concentration of 0.2-0.5% NaClO)

Thermofisher DNA AWAY

Paper towels or tissues

SAFETY WARNINGS

Reagents

Household bleach solution (0.2-0.5 % NaClO in total)

- H290 May be corrosive to metals.
- H314 Causes severe skin burns and eye damage.
- H411 Toxic to aquatic life with long lasting effects.
- EUH206 Warning! Do not use together with other products. May release dangerous gases (chlorine). Remove from surface after recommended incubation time with water-soaked tissue.





DNA AWAY

- H314 Causes severe skin burns and eye damage.



Note: Both bleach solutions and DNA AWAY are used for decontamintation. DNA AWAY is less corrosive than bleach and should be preferred for decontamination of sensitive equipments such as surfaces of electric devices.

Guanidinium hydrochloride (GuHCI) (in PB buffer of Qiagen MinElute kit)

- H302 Harmful if swallowed.
- H332 Harmful if inhaled.
- H315 Causes skin irritation.
- H319 Causes serious eye irritation.



Ethanol

- H225 Highly flammable liquid and vapour.
- H319 Causes serious eye irritation.





Kits

Check manufacturer's safety information for the High Pure Viral Nucleic Acid Large Volume Kit used in this

Citation: Franziska Aron, Gunnar U Neumann, Guido Brandt (12/04/2020). Full-UDG treated double-stranded ancient DNA library preparation for Illumina

protocol.

Equipment

UV radiation

- UV radiation can damage eyes and can be carcinogenic in contact with skin. Do not look directly at unshielded UV radiation. Do not expose unprotected skin to UV radiation.
- UV emitters generate ozone during operation. Use only in ventilated rooms.





ABSTRACT

Protocol for the preparation of double-stranded genomic libraries for Illumina sequencing, optimised for ancient DNA (aDNA) with initial USER enzyme treatment. This protocol generates adapter ligated DNA fragments that can be used in conjunction with downstream indexing protocols.

The initial treatment with UDG (USER) removes molecular 'damage' in the form of deaminated cytosines characteristic of aDNA. This protocol is modified after Meyer & Kircher (2010) Cold Spring Harb. Protoc. (doi: 10.1101/pdb.prot5448) and Briggs et al. (2010) Nucleic Acids Research 38 (6) (doi: 10.1093/nar/gkp1163)

BEFORE STARTING

Planning

This protocol takes approximately 8-9 hours!

While all steps of the protocol are performed in an Ancient DNA facility, the qPCR will be performed in a modern DNA facility with a 1:10 dilution of the samples, which were prepared in the cleanroom facilities. The library remains in the cleanroom for further processing.

Check waste disposal guidance for all reagents in this protocol against your corresponding laboratory regulations.

Preparation of reagents

All home-made buffers should be prepared in a separate dedicated PCR-free ultra-clean room and UV-irradiated for 30 min. Purchased kits should be DNA-free.

Qiagen MinElute kit

- Add ethanol to PE wash buffer according to manufacturer's instructions.
- Add Tween-20 to EB elution buffer to a final concentration of 0.05% (Tween-20 in EB). This solution is referred
 to as EBT throughout the protocol.
- All reagents of MinElute PCR Purification Kit should be decontaminated with a 30 min UV irradiation before
 use.

HPLC-Water should be decontaminated with a 30 min UV irradiation before use.

Equipment

Make sure all necessary equipment is available (see Materials).

Abbreviations

EBT = EB elution buffer with 0.05% Tween-20
GuHCl = Guanidinium chloride or Guanidine hydrochloride
HPLC = High Performance Liquid Chromatography (-Grade Water)
NaClO = Sodium hypochlorite
UV = Ultraviolet (radiation)

Controls

Take along extraction positive and negative (blank) controls generated during your extraction (see example Extraction Protocol <u>dx.doi.org/10.17504/protocols.io.baksicwe</u>)

For this protocol you should also add another negative control (HPLC water) to monitor the library preparation experiment. Consider these three extra samples in your calculations for mastermixes and buffer preparations.

Additional Tips

It is recommended to prepare 10% more of the calculated volume of all mastermixes to compensate for possible pipetting error.

UDG Treatment and Blunt End Repair (aDNA library preparation room)

Prepare a mastermix for the blunt end repair calculating $\Box 150 \ \mu l$ / reaction. Use a new 1.5 ml LoBind tube to set up the mastermix.

Α	В	С	D
Reagent	Stock	Final	1 x Volume [µl]
	concentration	concentration	
NEB Buffer 2	10 x	1 x	15
ATP	10 mM	1 mM	15
BSA	20 mg/ml	0.1 mg/ml	0.75
dNTPs	25 mM each	0.3 mM	1.8
T4 PNK	10 U	0.4 U	6
USER Enzyme	1 U	0.06 U	9
UV HPLC-water			22.45
DNA or UV HPLC-water			80
Total			150

Do not add the DNA to the mastermix if you set it up for 2 or more reactions!

You can also split the 1x mastermix in half to reduce the volume down to 75 µl, if you just want to use 40 µl of DNA.

- 1.1 Add **370 μl** mastermix to each reaction tube and then add **380 μl** sample DNA (use 0.2 ml PCR strip-tubes). Mix by flicking the tubes and spin down briefly.
- 2 Incubate at § 37 °C for © 03:00:00 in the thermocycler.

3h

During this incubation take MinElute tubes out of the fridge so that they warm to room temperature before use in the next step. Also label two sets of 1.5 ml LoBind tubes per sample and one set of 0.2 ml PCR tubes for the next steps. At this time you can also add the PB-Buffer ($650\,\mu$ l) to one set of 1.5 ml LoBind tubes for Step 5.2

3 Add **□6 µl** T4 Polymerase ([M]3 U stock, [M]0.115 U final) to each library.

4 Incubate at § 25 °C for © 00:20:00, then at § 12 °C for © 00:10:00 in the thermocylcer.

MinElute Purification

- 5 Purify the UDG-treated and blunt-end repaired DNA with a MinElute kit, with the following modifications to the manufacturer's protocol.
 - 5.1 Pre-heat elution buffer EBT to A 50 °C.
 - 5.2

For each reaction, add $\bigcirc 650~\mu I$ PB (binding) buffer to a new 1.5 ml LoBind tube and add the UDG-treated and blunt end repaired sample, then vortex briefly to mix.

 $5.3 \quad \text{Load each reaction (PB buffer + sample) onto a MinElute column and incubate at RT for } \textcircled{00:02:00} \; .$

This allows sufficient time for the DNA to bind to the silica membrane.

5.4 Spin **(3)15800 x g, 00:01:00** and discard flow-through.

Discard flow-through in one of two following ways:

- Remove all liquid in the collection tube with a pipette, or
- Pour off the liquid into a fresh waste tube, and pat the rim of the collection tube dry on a paper tissue or towel. Use just one spot on the paper tissue per sample. Be careful not to touch the rim of the tube on the waste container. After you are finished with all samples, discard the paper and wipe clean the surface underneath with water and then sterilize the surface with bleach (or DNA Away).



During cleaning of surfaces after flow-through discard, do NOT apply bleach before first cleaning with water. Residual GuHCl will react with bleach to form toxic gases.

5.5

Add 700 µl PE (wash) buffer to the MinElute column.

5.6 Spin at 315800 x g, 00:01:00 and discard flow-through as in step 5.4.

protocols.io
7
12/04/2020

- 5.7 Dry spin for $\$15800 \times g$, 00:01:00.
- 5.8

Flip columns 180° and dry spin again for \$\mathbb{3}15800 \text{ x g, 00:01:00}\$.

- 5.9 Remove columns from their collection tubes and place them in new labeled 1.5 ml LoBind tubes.
- 5.10 Add \square 20 μ I pre-heated EBT to the column, let stand for \bigcirc 00:01:00 then spin \bigcirc 15800 x g, 00:01:00 to elute.

Carefully pipette EBT directly onto the center of the membrane without touching the membrane.

Optional: In case the library preparation can not be done in one day, this is a good point to pause the protocol. Freeze samples at § -20 °C for up to two weeks until continuation.

Adapter Ligation

Prepare a mastermix for adapter ligation calculating $\Box 40~\mu I$ / reaction . Use a 1.5 ml LoBind tube to set up the ligation mastermix.

The mastermix is calculated to accommodate addition of Quick Ligase to each reaction individually after aliquotting to individual reaction tubes.

A	В	С	D
Reagent	Stock	Final	1 x Volume [µl]
	concentration	concentration	
Quick Ligase Buffer	2 x	1 x	20
Adapter Mix	10 μΜ	0.25 μΜ	1
Eluate from Step 5.10			18
Total			40

Do not add the eluate to the mastermix if you set it up for 2 or more reactions!

6.1 Aliquot 21 μl of mastermix to each tube (use 0.2 ml PCR strips). Transfer the complete eluate (step 5.10) (~ 18 μl) per sample to each new tube.

Alternatively, if you have a heat block available, you can add the mastermix to the eluate directly in the 1.5 ml tubes from the elution step without transferring it into 0.2 ml PCR strips. For purification after ligation you can then also add the PB-Buffer into these tubes (step 9.2).

7

Then add $\blacksquare 1 \mu l$ of Quick Ligase ($\blacksquare 15 U$ stock, $\blacksquare 10.125 U$ final concentration) to each library sample. Mix by flicking the tubes and spin down.

Make sure to add the full volume of ligase by pipetting up and down several times to get all of it off the walls of the pipette tip.

8 Incubate at § 22 °C for © 00:20:00 in the thermocycler.

During this incubation take MinElute tubes out of the fridge so that they warm to room temperature before use in the next step. Also label two sets of 1.5 ml LoBind tubes and 0.2 ml PCR tubes per sample for the next steps. At this time you can also add the PB-Buffer $(650\mu l)$ to one set of 1.5 ml LoBind tubes for Step 9.2.

MinElute Purification

- 9 Purify the adapter-ligated libraries with a MinElute kit, with the following modifications to the manufacturer's instructions
 - 9.1 Pre-heat EBT to § 50 °C .
 - 9.2

For each sample, add $\bigcirc 650~\mu I$ PB buffer to a new 1.5 ml LoBind tube and add the entire volume of the adapter ligation mix, then vortex briefly.

9.3 Load each reaction (PB buffer + adapter-ligated library) onto a MinElute column and incubate for **00:02:00**.

This allows the DNA sufficient time to bind to the silica membrane.

- 9.4 Spin at $@15800 \times g$, 00:01:00 and discard flow-through as in step 5.4.
- 9.5

Add 700 µl PE buffer to the MinElute column.

- 9.6 Spin at **315800 x g, 00:01:00** and discard flow-through as in step 5.4.
- 9.7 Dry spin at $\$15800 \times g$, 00:01:00.
- 9.8

Flip columns by 180° and dry spin again at $@15800 \times g$, 00:01:00.

- 9.9 Remove columns from their collection tubes and place them in new labeled 1.5 ml LoBind tubes.
- 9.10 Add \blacksquare 22 μ I of pre-heated EBT to column, let stand for \bigcirc 00:01:00 , then spin \bigcirc 15800 x g, 00:01:00 to elute.

 $\label{lem:carefully pipette EBT directly onto the center of the membrane without touching it. \\$

Optional: In case the library preparation can not be done in one day, this is a good good point to pause the protocol. Freeze samples at 8-20 °C for up to two weeks until continuation.

Adapter Fill-in

10 Prepare adapter fill-in reaction calculating **40 μl / reaction**. Use a 1.5 ml LoBind tube to set up the adapter fill-in mastermix.

Α	В	С	D
Reagent	Stock concentration	Final	1 x Volume [µl]
		concentration	
Isothermal Buffer	10 x	1 x	4
dNTPs	25 mM each	0.125 mM each	0.2
Bst Polymerase	8 U	0.4 U	2
UV HPLC-water			13.8
Eluate from step 9.10			20
Assay total			40

Do not add the eluate to the mastermix if you set it up for 2 or more reactions!

- 10.1 Add **20 μl** of mastermix and the complete eluate (step 9.10) (~ **20 μl**) to each tube (use 0.2 ml PCR strips). Mix by flicking the tubes and spin down briefly.
- 11 Incubate at § 37 °C for © 00:30:00 then § 80 °C for © 00:10:00 in the thermocycler.

During this incubation label new 0.2 ml tubes for step 12 and new 1.5 ml LoBind tubes for step 13.

- 12 Aliquot **18 μl** water to the 0.2 ml PCR tubes. Aliquot **2 μl** per library to 0.2 ml PCR tubes with 18 uL water (making a 1:10 dilution of the library) for the qPCR quality check (steps 15-16).
- 13 Transfer the remaining $\sim 36 \, \mu l$ of the final library to a fresh 1.5 ml LoBind tube.
- 14 Freeze the library at § -20 °C without purification until further processing.

qPCR_quality check (modern DNA facility)

Prepare a qPCR assay calculating **20 μl / reaction**. Prepare 2 reactions per sample, plus 16 additional reactions for 7 qPCR standards in duplicates and 2 qPCR blanks. This qPCR uses a 1:10 dilution of the samples.

The 1:10 dilutions of the samples are prepared in the cleanroom, but the qPCR is performed in the modern lab.

Α	В	С	D
Reagent	Stock	Final	1 x Volume [µl]
	concentration	concentration	
DyNAmo MasterMix	2 x	1 x	10
IS7 primer	10 μΜ	1 μΜ	1
IS8 primer	10 μΜ	1 μΜ	1
HPLC-Water (non UVed)			7
DNA or HPLC-Water (1:10 dilution)			1
Total			20

Do not add the DNA dilutions to the mastermix.

Important

Do NOT vortex the DyNAmo mastermix, it will create bubbles that are nearly impossible to remove. The bubbles will interfere with the qPCR measurements. Gently pipette the DyNAmo mastermix to equally distribute the fluorescent dye.

Gently pipette the qPCR mastermix, or gently invert the tube several times to mix. Again avoid creating any bubbles.

15.1 Add **19 μl** mastermix and **11 μl** 1:10 diluted libraries, standard, or water to a fresh 96-well qPCR plate. Seal with adhesive clear qPCR seal sheets and briefly spin down.

Be sure to check that the reactions do not contain bubbles, because this will affect the qPCR readings and subsequent downstream calculations. If bubbles are present, briefly centrifuge the plate at maximum speed to remove them.

16 Amplify the qPCR reactions with the following program:

Α	В	С
Temperature	Time	
95°C	10 min	Inital denaturation
95°C	30 sec	40 cycles
60°C	1 min	
72°C	30 sec	
60-95°C		Melting curve
Finally hold		

The number of DNA copies determined with this qPCR is used to determine the amount of sample used as input for indexing protocols.