

MAY 17, 2023

OPEN ACCESS

DOI:

dx.doi.org/10.17504/protocol s.io.bp2l69b8dlqe/v1

Protocol Citation: Sven Truxa, Felix J Hartmann 2023. MIBI: MIBI staining of freshfrozen/OCT-embedded samples. **protocols.io** https://dx.doi.org/10.17504/p rotocols.io.bp2l69b8dlqe/v1

License: This is an open access protocol distributed under the terms of the Creative Commons
Attribution License, which permits unrestricted use, distribution, and reproduction in any medium, provided the original author and source are credited

Protocol status: Working We use this protocol and it's working

Created: Oct 10, 2022

Last Modified: May 17,

2023

PROTOCOL integer ID: 71072

MIBI: MIBI staining of fresh-frozen/OCT-embedded samples

Forked from MIBI: MIBI staining of FFPE samples

Sven Felix J

Truxa^{1,2}, Hartmann^{1,2}

¹Systems Immunology & Single Cell Biology group, DKFZ Heidelberg; ²German Cancer Research Center (DKFZ)



Sven Truxa

ABSTRACT

This protocol entails the recommended staining procedure for Multiplex Ion Beam Imaging Time of Flight instrument (MIBI_TOF) as developed in the Sean C. Bendall and Michael R. Angelo labs, and has been adapted in the lab of Felix Hartmann specifically for the staining of fresh-frozen samples.

CITATION

Marc Bosse, Sean Bendall, Mike Angelo. MIBI staining. protocols.io.

LINK

https://protocols.io/view/mibi-staining-b9b3r2qn

GUIDELINES

Staining tissue sections is fairly straightforward but there are few things to be cognizant of, when preparing samples:

- Always try to limit mechanical damage to the sample surface. This can occur when moving the samples with forceps, particularly when the mounting substrates are small.
- Once the samples have been rehydrated, they cannot dry out until the end of the protocol.
- Be careful at all times to not touch the tissue, in order to not leave any residue.
- Once the samples have been stained, fixed, and dehydrated, they have an indefinite shelf life and can be imaged at any time but need to be stored properly such as in a vacuum chamber or in a sealed vacuum bag
- MIBI_TOF observes the basic principles of Mass spectrometry. Any contaminant ions present in water or in the air can potentially compromise the integrity of the sample.
- Therefore to prevent potential contamination, it is important to always use single use lab ware containers to make the solutions. The protocol has been validated using the level of precision of graduated Nalgene bottles and 50 mL tubes.
- The use of washed beakers or graduated cylinders is not considered as good a practice, due possible introduction of contaminants (exemples of sources: barium from lab ware soap or calcium from air dried lab ware)

A	В	С	
Products	Provider	Catalogue No.	
Alcohol ethyl ETHANOL 200 PROOF	Gold Shield	412811	
Alcohol ethyl ETHANOL 190 PROOF	Gold Shield	412602	
Target Retrieval Solution, pH 9, (3:1)	Agilent (Dako)	S2375	
UltraPure water	Invitrogen	10977-015	
Gelatin (cold water fish skin)	Sigma-Aldrich	G7765-250	
Glutaraldehyde 8% Aqueous Solution EM Grade	EMS	16020	
Bovine Albumin (BSA), heat shock treated	Fisher	BP1600-100	
Centrifugal filters (0.1µm)	Millipore	UFC30VV00	
MIBI slides	IonPath	567001	
Horse serum	Vector Labs	S-2000	
Equipments	Provider	Cat No.	
Thermo Scientific™ Lab Vision™ PT Module	Thermo Fisher Scientific	A80400012	
Leica ST4020 Small Linear Stainer	Leica	14050946425	
Bel-Art™ SP Scienceware™ Lab Companion Cabinet Style Vacuum Desiccators, Clear	Fisher Scientific	08-648-109	
Seqenza staining rack + cover plates	Fisher Scientific	73-310-017/72-110- 017	

SAFETY WARNINGS

•

All organic solvents should be manipulated under a chemical hood.

BEFORE START INSTRUCTIONS

Verify the stocks of all reagents and place an order or prepare solutions, if some reagents are running low.

Initial comments

1

If using frozen and vacuumed slides (e.g. from collaborators), let slides come to room temperature **before destroying the vacuum seal!** (prevent condensation!) \sim 5-10min



2 In the morning: heat up **PT Module** and prepare fresh antigen retrieval solution (step 6) to place in the device for preheating

Buffer preparation

20m

- 3 Prepare 1x PBS by diluting 20xPBS 1:20 in Ultrapure type 1 water (needed for blocking buffer)
- 4 Prepare Blocking buffer (also used as antibody diluent in this protocol!)

This buffer does NOT contain Tween!

A	В
Reagents	Qty for 5mL
PBS 1x	4750µL
Horse Serum	250μL

Constituents of blocking buffer

Filter with .45µm syringe

5 Verify

Verify stock of 1x PBS wash buffer and prepare accordingly if running low

This buffer does NOT contain Tween!



A	В
Reagents	Quantity of 250mL
PBS 10x (ml)	25mL

A	В	
Bovine Albumin (BSA), heat shock treated (g)	0.25g	
Ultrapure (type 1) water (mL)	225mL	

Constituents of PBS washing buffer

To prepare **fresh antigen retrieval solution**, dilute 10x DAKO (3-in-1) pH9 antigen retrieval solution 1:10 in ultrapure (type 1) water (e.g. for 25mL: 2.5mL + 22.5mL)

note: if retrieving in gold slide delivery chamber (5 slots), 25mL are sufficient

A	В	С	
Total volume (mL) Volume target retrieval (mL) Volume		Volume (mL) ddH20	
25	2.5	22.5	
50	5	45	
100	10	90	

Dilution table for Dako Antigen retrieval solution

Thaw and fix, wash

1h

- 7 If embedding medium is still on slide, carefully dip slide into 1x PBS before fixation
- 8 Fix Slides after thawing in 10% Neutral Buffered Formaline (NBF) for 1h at room temperature

4.1

- **9** Transfer the slides in the **first** MIBI 1x PBS wash buffer and dip shortly to remove PFA
- Transfer the slides to the **second** 1x PBS wash buffer and dip shortly to remove PFA

Antigen retrieval after fixation

40m

11 After washing, transfer slide into antigen retrieval buffer jar within the preheated PT module

30m





press run on the digital screen as soon as the device is preheated to 75°C. The display will show **"WARMUP" and heat up to 80°C for retrieval**, stay at this temperature for 20minutes, directly put tissue back to RT.


This process takes ~30min.

12 Take slides out of the PT module and let them cool to room temperature (~10 min) before proceeding.


10m

Sequenza assembly

- Fill a disposable Pipetting Reservoir with 4 20 mL of 1x PBS wash buffer
- 14 Place sample slide on a Sequenza cover plate aligning the bottom slide with the notches on the cover plate (see picture below panel A)

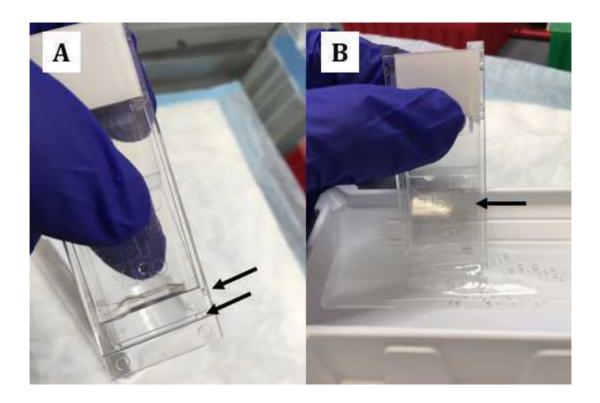

- Fill by capillarity the space between the slide and cover plate by holding the parts tight and dipping the bottom part of the assembly in the wash buffer reservoir (see picture above panel B).
 - If capillary force is not sufficient to fill the staining reservoir, a careful pumping motion on the triangular protrusion can help.
- Transfer the slide and coverplate assembly into the Sequenza rack. Slip in the assembly (see below picture panel C)

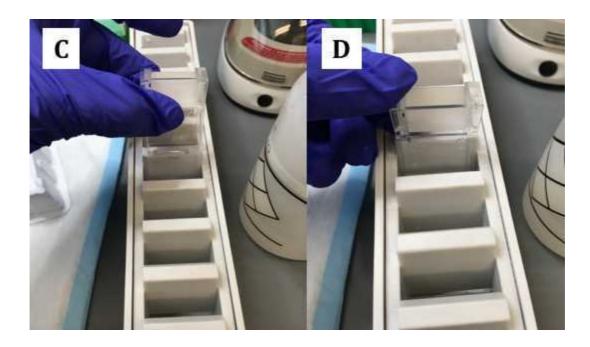

- Secure the assembly and make sure that the assembly placed down in the rack (see above picture panel D)
- Add A 1 mL of wash buffer. The buffer should flow thru within 1 min 30 s. Repeat by adding 1 mL of wash buffer

Blocking

1h

5m

- Add 200µL of blocking buffer to the sequenza assembly, make sure the buffer is retained in the assembly (the waterline should stop at the upper end of the capillary space)
- 20 Incubate at 8 Room temperature for 5 01:00:00

1h

Multiplex Antibody mix

Prepare antibody mix based on the putative multiplex antibody panel

Make sure that all the antibodies are ready to use **BEFORE** starting to build the panel

It is highly recommended to prepare all the antibodies, ready to use, a day before the panel is built

21.1 The total volume needed for staining each Sequenza slide assembly is A 120 µL



Note

The manufacturer recommend to use 100 µL per Sequenza slide assembly. 120 µL is therefore a 20% excess.

21.2 Build an antibody mix table information to make the antibody panel as follow:

Conjugation ID, Target name, Channel, Antibody concentration, Titer, Volume

Exemple:

The total volume needed for staining each Sequenza slide assembly is



A	В	С	D	E	F
ID	Target	Channel	Concentration µg/mL	Titer (μg/mL)	Volume (μL)
1565	CD45	169	50	0.25	0.75
1516	CD8	158	50	0.5	1.5
				Total	150
				Antibody mix	2.25
				Blocking buffer	147.75

For **Blocking Buffer** solution preparation refer to **step 4**

21.3 Prepare the antibody mix according to the calculation. Make sure to spin down antibody vials before pipetting to prevent pipetting of aggregates. Use filter tips when pipetting from communal stocks and keep the tubes on ice.

22 Pre-wet spin column

Add \pm 400 μ L of clean blocking buffer to a Centrifugal 0.1 μ m filter unit (Millipore, UFC30VV00)

- 22.1 10000 rcf, Room temperature, o0:01:00 , discard flowthrough
- 23 Add antibody mix to the filter unit
- 23.1 10000 rcf, Room temperature, 00:01:00

Stain 1 (Overnight)

- 24 Add filtered antibody master mix (120µL) onto the sequenza assembly
- Place the moist chamber at 4°C Overnight, preferably in a place with low disturbance

Post staining washing step

- Following overnight incubation, wash twice with 1 mL of wash buffer
- After the 1h incubation, wash twice with PBS wash buffer within the sequenza assembly by pipetting 2x 1mL.

Prepare solutions

28 Prepare fresh 2% glutaraldehyde fixing solution

Glutaraldehyde fixing solution

- 1. Add A 30 mL of 1x PBS low barium in a 50 mL tube
- 2. Break the glass glutaraldehyde 8% (amber vial)
- 3. Add the glutaraldehyde (10 mL) to the diluent by inverting it and tapping the bottom of the vial
- 4. Transfer the content in a linear stainer container

29 Set the linear stainer containers

Fill containers with the following solution and order

Glutaraldehyde x 1, PBS low barium x 1, TRIS 100 mm pH 8.5×3 , ddH2O x 2, 70% Ethanol x1, 80% Ethanol x 2, 100% Ethanol x 2, exit stainless steel tank = empty

Glutaraldehyde fixation

- Disassemble the sequenza setup. Make sure at this point that the slide doesn't dry out and directly proceed to the next steps.
- 31 Mount the slides on the linear slide holder

Fix in 2% glutaraldehyde for 00:05:00

32 Rinse briefly with 1x PBS low barium

Dehydration and Storage

2h 10m

33 Press on Menu

10m

Check for Processing time = 30 sec, Lift bar = 976, Number of dips = 3

Continue to press Menu until the screen displays Start at: ___

Set Start position corresponding to the first slide carrier position

Exemple: If the first slide carrier is at position 3, use Plus (+) or Minus (-) button to increase or decrease to get **Start at: 03**

- 33.1 Then press Enter
- 33.2 Press Run on the Linear Stainer
- 33.3 Allow the dehydration process and wait until the slides reached the **empty stainless steel tank** and stop
- 33.4 Store the slides immediately under vacuum until MIBI acquisition

2h

Alternatively, the stained slides can be stored in a vacuum sealed bag for longterm storage pre and post MIBI acquisition