



Sep 24, 2021

# S Human CD34+ cell isolation from fetal liver, and fetal thymus preparation

Austin Chen<sup>1</sup>, Mohsen Khosravi-Maharlooei<sup>1</sup>, Markus Holzl<sup>1</sup>, Nichole Danzl<sup>1</sup>, Chris Parks<sup>1</sup>, Elizabeth Waffarn<sup>1</sup>, Megan Sykes<sup>1</sup>

<sup>1</sup>Columbia Center for Translational Immunology, Columbia University, New York

1 Works for me	Share
----------------	-------

dx.doi.org/10.17504/protocols.io.bvvsn66e

Human Islet Research Network



ABSTRACT

This protocol details the steps for isolating human CD34+ cells from human fetal liver. It also explains how to prepare human fetal thymus for immediate use or for freezing, as well as the process for thawing. The CD34+ cells are hematopoietic progenitor cells and can be used to generate humanized mice through reconstitution of immune cells via IV injection after bone marrow ablation. These cells can also be used for mixed lymphocyte reaction experiments.

## **Corresponding Authors**

## Mohsen Khosravi-Maharlooei

Email: mkm2182@cumc.columbia.edu

## **Austin Chen**

Email: ac4274@cumc.columbia.edu Tel: 425-283-6900

DOI

dx.doi.org/10.17504/protocols.io.bvvsn66e

PROTOCOL CITATION

Austin Chen, Mohsen Khosravi-Maharlooei, Markus Holzl, Nichole Danzl, Chris Parks, Elizabeth Waffarn, Megan Sykes 2021. Human CD34+ cell isolation from fetal liver, and fetal thymus preparation.

protocols.io

https://dx.doi.org/10.17504/protocols.io.bvvsn66e

LICENSE

This is an open access protocol distributed under the terms of the Creative Commons Attribution License, which permits unrestricted use, distribution, and reproduction in any medium, provided the original author and source are credited

CREATED

Jun 16, 2021

**protocols.io** 1 09/24/2021

LAST MODIFIED

Sep 24, 2021

PROTOCOL INTEGER ID

50834

MATERIALS TEXT

#### Human tissue:

Order human fetal thymus tissue from Advanced Bioscience Resources (Perrin Larton perrin@garlic.com)

#### Media:

- BM media:
  - o **500 mL** 199 Media (Corning 10060CV)
  - o **5 mL** 1M Hepes to buffer pH
  - o 5 mL 1mg/ml (2714 units/mg) DNAse to prevent cell clumping
    - Use 70 um filter with syringe to filter DNAse directly into 199 Media
  - o **340 μl** 50mg/ml Gentamycin
- MACS buffer:
  - o 3500 mL PBS
  - o 🔲 5 g BSA
  - o **2 mL** EDTA 0.5M
  - o De-gas overnight with parafilm around the caps
- AIM-V medium (serum free):
  - o Human serum (for use with AIM-V)
  - o Add DNAse ( 125 µl ) if using AIM-V rather than BM media
- Liberase<sup>™</sup> TM (Roche) 1 WU/mL in BM Medium

## Material:

- Sterile forceps, scissors
- 10 mL and 25 mL pipette tips for pipette aid
- 70 um nylon cell strainer
- Styrofoam box for ice− for CD34 isolation kit
- Histopaque or Percoll (contains small plastic beads that separate materials by density centrifugation)
- →|-10 cm petri-dish
- Sterile **□6 mL** syringe
- **50 mL** Falcon tubes
- DMS0
- Human AB serum
- CD34+ MACS kit (Miltenyi)

BEFORE STARTING

All procedures have to be performed under sterile conditions!

Digestion method for CD34+ isolation

protocols.io
2
09/24/2021

Citation: Austin Chen, Mohsen Khosravi-Maharlooei, Markus Holzl, Nichole Danzl, Chris Parks, Elizabeth Waffarn, Megan Sykes (09/24/2021). Human CD34+ cell isolation from fetal liver, and fetal thymus preparation. <a href="https://dx.doi.org/10.17504/protocols.io.bvvsn66e">https://dx.doi.org/10.17504/protocols.io.bvvsn66e</a>

- 1 Start water bath and heat to § 37 °C if not already on.
- 2 Spray the fetal organ test tube before putting it into the hood
- 3 Fill beaker w/ 70% EtOH. Soak your tools in this.
- 4 Lay out tools onto petri dish to evaporate the EtOH off of them (EtOH will fix the tissue). Open fetal liver test tube and pour out all contents into a big petri dish.
- 5 Separate the white connective tissue from the rest of the tissue and place onto the lid of the original petri dish. Also remove the gall bladder if present (and discard this).
  - a. The white connective tissue should still be saved b/c it can be used for HLA typing (will place this by itself into a cryovial. Do not add media. Then place into A -20 °C freezer into box that says "fetal tissue for HLA typing")
  - **b.** Remove the gall bladder and as much connective tissue as possible (and the ligaments), as they cannot be digested and would clot the pipette
- 6 Prepare pre-diluted Liberase solution in BM media or AIM-V media) in a 15 mL Falcon tube:
  - a. Add 5 mL AIM-V medium (or BM media) to a 50 mL falcon tube will say BM media for rest of protocol, but seems like you can use AIM-V + 10% human serum too.
    - i. Add **125** μl DNAse **only** if using AlM-V.
  - b. Add ■200 µl Liberase ( ■0.5 mg ) found in § -20 °C freezer in ■200 µl aliquots.
- 7 Transfer the non-connective tissue liver pieces from the petri dish to a **50 mL** Falcon tube with **5 mL** Liberase + BM media.
  - a. Take big pieces and cut it into smaller pieces above the 50 mL Falcon tube so that the cut pieces drop directly back into the Falcon tube.
    - i. This way, you do not need to take more time later to transfer the smaller pieces from the petri dish.
  - **b.** Can then use a pipette to transfer the remaining pieces and media from the petri dish back into the **30 mL** Falcon tube
  - i. Don't add this directly to the Liberase. Put into a different falcon tube, centrifuge, aspirate supernatant, and then resuspend with Liberase (or solution already containing Liberase) to avoid diluting the Liberase.
    - ◆ Centrifuge settings: 4 C | 1650 RPM | 3 minutes ⟨⟨⟩ Discard supernatant by pipetting off the solution
- 8 Vortex this tube for 20 seconds.


Place in a rack and place in § 37 °C water bath. (The rack should already be in the bath) a. Let it sit for 6 minutes. b. Vortex for 20 seconds again and pipette up and down with 10 mL pipette. Then place back in § 37 °C water bath for another 6 minutes. i. Repeat this step a few times until you can pipette up and down easily with a 📜 5 mL pipette (1). Must spray down with EtOH each time before placing it back into the hood. Return to & 37 °C water bath each time. (2). usually completely digested within 10-15 minutes. ii. The liver should now be disrupted to a single cell solution. The pipette should not clot anymore (except for ligaments, etc). c. At some point, if not done already, also cut up the connective tissue that you reserved for HLA typing and place it into a yellow/blue top container (without media) while the tissue is digesting in the water bath. 10 Grab at least two 70 um filters and place 1 on top of 2 new **50 mL** Falcon tubes. Once solution is easily pipettable through 📮 5 mL pipette and "feels" like a single cell suspension, top off Falcon tube with BM media. 12 Transfer 25 mL of the solution to each new 50 mL Falcon tube through the 70 um filter. (should have 2 Falcon tubes with filtered 25 mL cells) 13 Centrifuge both of these **50 mL** Falcon tubes a. Centrifuge settings: 4 C | 1650 RPM | 3 minutes 14 While centrifuging, prepare four □50 mL Falcon tubes with □13 mL Histopaque (use a □10 mL pipette) 15 When centrifuge done, aspirate supernatant, then resuspend each pellet in \$\subseteq 50 mL\$ BM media. Add 25 mL of cells + BM media to each tube with 13 mL Histopaque (4 total) by slowly dripping the cells onto the top of the Histopaque. Can tilt the tube and support it on any structure for stabilization (e.g. Styrofoam holder for the **50** mL falcon tubes, a **50** mL falcon tube holder, etc.)


Citation: Austin Chen, Mohsen Khosravi-Maharlooei, Markus Holzl, Nichole Danzl, Chris Parks, Elizabeth Waffarn, Megan Sykes (09/24/2021). Human CD34+ cell isolation from fetal liver, and fetal thymus preparation. <a href="https://dx.doi.org/10.17504/protocols.io.bvvsn66e">https://dx.doi.org/10.17504/protocols.io.bvvsn66e</a>

a. Weigh the tubes in the centrifuge containers to make sure they are balanced. Add water into the container if it is not

balanced.

- b. Centrifuge all 4 tubes: if using histopaque: 25 °C | 0 prog | 2000 rpm | 25 minutes, accel: 1, brake: 0
- c. Grab some lunch!
- 17 Collect the buffy coat into two **50 mL** Falcon tube (each 2 tubes goes into 1 tube) then fill up the **50 mL** ube with BM media:
  - a. Use 10 mL or 25 mL pipette and suck up the "ring"/layer right above the Histopaque. Will inevitably suck up Histopaque as well, but try to suck up all of the layer right above it.
  - **b.** Collect all of the layer/Histopaque until you get close to the RBCs to make sure you have obtained all of the buffy coat (which contains PBMCs)

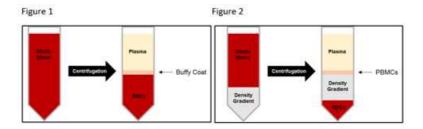

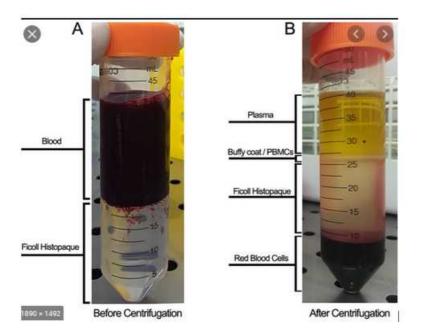

- 18 Centrifuge the tubes that you have just collected
  - a. 4 C | 1650 RPM | 4 minutes
  - b. Discard the supernatant by aspirating with pipette
  - c. Optional: RBC Lysis Add 5ml ACK Lysis buffer, incubate 5min RT.
    i. If RBC lysis, wash with BM media, then centrifuge and resuspend in MACS buffer (step 19)
- 19 Resuspend in **□15 mL** MACS buffer.

Citation: Austin Chen, Mohsen Khosravi-Maharlooei, Markus Holzl, Nichole Danzl, Chris Parks, Elizabeth Waffarn, Megan Sykes (09/24/2021). Human CD34+ cell isolation from fetal liver, and fetal thymus preparation. https://dx.doi.org/10.17504/protocols.io.bvvsn66e

20 Take ■100 µl and add to a 1.5 round bottom blank tube labeled "Pre" for flow cytometry Count the cells: do serial dilution to 1:25 dilution factor 21 a.  $\square$ 40 μl Trypan blue +  $\square$ 10 μl cells (1:5 dilution factor). Then  $\square$ 10 μl of this combination (1:5 dilution factor) into another 40 µl Trypan blue = 1:25 dilution factor MACS isolation: Centrifuge cells 4 C | 1650 RPM | 3-4 minutes 22 a. While centrifuging, grab CD34+ microbeads + FcR blocker (MACS Miltenyi Biotec CD34 Microbread kit) b. Calculate volumes needed for addition of FcR Block and Beads 1 volume FcR Block= \_\_\_\_ul (1x volume of beads) ■ 1 volume CD34 microbeads= \_\_\_\_ul (10ul per 10<sup>7</sup> cells) 8 volumes Macs Buffer= \_\_\_\_ul (8x volume of beads) Max volumes: 200 uL FcR blocker, 200 uL CD34 microbeads, 1.6 mL MACS buffer ♦ Example calculation: for 339.375E6 cells à 33.9E7 cells = □339 µl . But since max = □200 µl , we used □200 μl CD34+ microbeads, □200 μl FcR blocker, and □200 μl MACS buffer. ■ Usually we get around 500E6 cells. For this amount, we don't use 500 uL of beads (it's too much). Usually between 100 to 200 uL is enough. ♦ **150** μl CD34+ beads ♦ □150 μI FcR blocker ♦ **1.2 mL** MACs buffer 23 Resuspend cells with amount of MACS buffer first. a. Then add FcR blocker (must add FcR blocker before microbeads!!) b. Then add CD34 microbeads c. Pipette up and down 24 Incubate for 30 minutes at 8 4 °C Wash cells by adding 5-10ml MACS buffer. Centrifuge cells 1650 RPM, 3-4 min, 4C. Aspirate and discard supernatant.\* Important to stick to this centrifuge speed because at higher speeds beads that have NOT bound cells will also be spun down into pellet. a. Prepare MACS set up while centrifuging: b. LS filter placed into MACS set up "multi stand" with fin tips pointing toward you; place □15 mL falcon tube underneath LS filter; place 70 uM filter on top of the LS filter i.Label the falcon tube "CD34-" protocols.io 09/24/2021 Citation: Austin Chen, Mohsen Khosravi-Maharlooei, Markus Holzl, Nichole Danzl, Chris Parks, Elizabeth Waffarn, Megan Sykes (09/24/2021). Human CD34+ cell

Citation: Austin Chen, Mohsen Khosravi-Maharlooei, Markus Holzl, Nichole Danzl, Chris Parks, Elizabeth Waffarn, Megan Sykes (09/24/2021). Human CD34+ cell isolation from fetal liver, and fetal thymus preparation. <a href="https://dx.doi.org/10.17504/protocols.io.bvvsn66e">https://dx.doi.org/10.17504/protocols.io.bvvsn66e</a>

c. a.Add 3 mL MACS to the 70 uM filter + LS filter after you put it together to wet the filter 26 Resuspend the sample in 1 mL MACS and add this to the MACS filter tube through the 70 uM filter 27 Once liquid has flowed through the filter, wash 3 times with **3 mL** MACS each a. For the first wash, put the 3 mL into the original 15 mL tube that held the tissue. Pipette up and down and add to the LS filter  ${f b}$ . Can then toss the original tissue tube and the 70 uM filter on top of the LS filter c. For the next 2 washes, add 3 mL MACS straight to the LS filter 28 Remove the CD34- tube, and switch it with a tube labeled CD34+. Remove the LS filter from the magnet, place it over the CD34+ tube, add 5 mL MACS buffer, take the plunger, and 29 force out the CD34+ cells. 30 Add □100 µl of CD34+ and □100 µl CD34- to separate round bottom, blank tubes for flow cytometry later Count the CD34- and CD34+ cells 31 a. For CD34-: use 1:125 dilution (12-13 mL) **b.** For CD34+: use 1:25 dilution (5 mL) 32 Determine how many vials to freeze a. For CD34+: freeze 2 million per vial. Use AIM-V + 10% HS in 10% DMSO **b.** For CD34-: freeze ~50 million per vial. Use AIM-V + 10% HS in 10% DMSO 33 Stain the small aliquots taken before for purity check by flow cytometry: a. hCD3 BV650 b. hCD19 APC c. hCD45 PE-CF594 d. hCD34 PE e. DAPI

## Alternative: CD34+ isolation by smashing the fetal liver

- 34 1. Put fetal liver in a petri dish and smash it gently with a sterile plunger of a 3 or 6ml syringe. Transfer cell suspension into **□50 mL** conicals through a 40 um cell strainer
  - 2. Place cell suspension on **14 mL** of Histopaque 1.077 of a **50 mL** tube.
  - 3. Centrifuge 600 g, 25 min, 25 C, acc 3, break 0
  - 4. Collect buffy coats and filter through 40 um cell strainer. Fill up with MACS buffer
  - 5. Count cells
  - 6. Spin 6 min 400 g, 4 C,
  - 7. Resuspend in MaCs buffer according to protocol
  - 8. Perform MACS

# Fetal thymus isolation and freezing

- 35 1. Cut thymus in → 2 mm 3 big pieces in a petri dish
  - 2. Transfer counted pieces (e.g. 10) into a cryotube. Remove medium
  - 3. Fill up with **1 mL** of cryomedium
  - 4. Let the cells incubate for 5 minutes (DMSO has to diffuse into the tissue in order to mediate cryoprotection)
  - 5. Alternatively, thymus can immediately be transplanted

## Thymus thaw

- 36 1. Take vials and transfer them to a § 37 °C water bath. Let them sit there for 10 minutes
  - 2. Pour the thymic pieces into 15 mL BM medium (warm) and let them sit for 10 minutes
  - 3. Before transfer to a new Falcon, vigorously pipette the thymic pieces up and down to remove excess of thymocytes. Transfer the cells to new **15 mL** BM
  - 4. Let the cells sit for 10 minutes. Before transfer into a new falcon, pipette vigorously up and down to remove excess of thymocytes. Transfer the cells to new 15 mL BM
  - 5. The cells are now ready for transplantation