





MIBI staining V.2

Marc MB Bosse¹, Sean Bendall¹, Mike Angelo¹

¹Department of Pathology, Stanford University


1

Works for me

dx.doi.org/10.17504/protocols.io.bt9tnr6n

Apr 15, 2021

Human BioMolecular Atlas Program (HuBMAP) Method Development Community Tech. support email: Jeff.spraggins@vanderbilt.edu



ABSTRACT

This protocol is the standard FFPE tissue staining procedure recommended for Multiplex Ion Beam Imaging Time of Flight instrument (MIBI_TOF) developed in the Sean C. Bendall and Michael R. Angelo labs. The protocol has been successfully used for MIBI and is the result of extensive optimization experiments. It is inspired from state-of-the art of immunohistochemistry staining procedures but differs in some very important steps, namely, glutaraldehyde fixation and final washes prior tissue dehydration. Failure to follow exactly all steps described in this procedure may result in inconsistencies in output data after MIBI_TOF acquisition.

DOI

dx.doi.org/10.17504/protocols.io.bt9tnr6n

PROTOCOL CITATION

Marc MB Bosse, Sean Bendall, Mike Angelo 2021. MIBI staining. **protocols.io** https://dx.doi.org/10.17504/protocols.io.bt9tnr6n

Version created by Marc Bosse

LICENSE

This is an open access protocol distributed under the terms of the Creative Commons Attribution License, which permits unrestricted use, distribution, and reproduction in any medium, provided the original author and source are credited

CREATED

Apr 15, 2021

LAST MODIFIED

Apr 15, 2021

PROTOCOL INTEGER ID

49171

protocols.io

04/15/2021

A

Citation: Marc MB Bosse, Sean Bendall, Mike Angelo (04/15/2021). MIBI staining. https://dx.doi.org/10.17504/protocols.io.bt9tnr6n

GUIDELINES

Staining tissue sections is fairly straightforward but there are few things to be cognizant of, when preparing samples:

- Always try to limit mechanical damage to the sample surface. This can occur when moving the samples with forceps, particularly when the mounting substrates are small.
- Once the samples have been rehydrated, they cannot dry out until the end of the protocol.
- Be careful at all times to not touch the tissue, in order to not leave any residue.
- Once the samples have been stained, fixed, and dehydrated, they have an indefinite shelf life and can be imaged
 at any time but need to be stored properly such as in a vacuum chamber or in a sealed vacuum bag
- MIBI_TOF observes the basic principles of Mass spectrometry. Any contaminant ions present in water or in the air can potentially compromise the integrity of the sample.
- Therefore to prevent potential contamination, it is important to always use single use lab ware
 containers to make the solutions. The protocol has been validated using the level of precision of graduated
 Nalgene bottles and 50 mL tubes.
- The use of washed beakers or graduated cylinders is not considered as good a practice, due possible introduction of contaminants (exemples of sources: barium from lab ware soap or calcium from air dried lab ware)

MATERIALS TEXT

A	В	С
Products	Provider	Catalogue No.
Alcohol ethyl ETHANOL 200 PROOF	Gold Shield	412811
Alcohol ethyl ETHANOL 190 PROOF	Gold Shield	412602
TBS IHC Wash Buffer with Tween 20	Cell Marque	935B-09
PBS IHC Wash Buffer with Tween 20	Cell Marque	934B-09
Target Retrieval Solution, pH 9, (3:1)	Agilent (Dako)	S2375
UltraPure water	Invitrogen	10977-015
Avidin/Biotin Blocking Kit	Biolegend	927301
Hydrogen peroxide	Sigma	216763-100ML
Gelatin (cold water fish skin)	Sigma-Aldrich	G7765-250
Xylene HISTOLOGICAL GRADE	Sigma-Aldrich	534056-500
Glutaraldehyde 8% Aqueous Solution EM Grade	EMS	16020
Bovine Albumin (BSA), heat shock treated	Fisher	BP1600-100
Centrifugal filters (0.1µm)	Millipore	UFC30VV00
ImmEdge hybrophobic barrier pen	Vector lab	H-4000
MIBI slides	IonPath	567001
Levamisole	Vector Labs	SP-5000
Horse serum	Vector Labs	S-2000
VectaMount Permanent Mounting Medium	Vector Labs	H-5000
Equipments	Provider	Cat No.
Thermo Scientific™ Lab Vision™ PT Module	Thermo Fisher Scientific	A80400012
Leica ST4020 Small Linear Stainer	Leica	14050946425
Digital incubators, INCU-Line®, IL 10 and IL 23	VWR	390-0384
Bel-Art™ SP Scienceware™ Lab Companion Cabinet	Fisher Scientific	08-648-109
Style Vacuum Desiccators, Clear		
Oribital shaker	Boekel	270200
Moist chamber	Ted Pella	21051

SAFFTY WARNINGS

All organic solvents should be manipulated under a chemical hood.

BEFORE STARTING

Verify the stocks of all reagents and place an order or prepare solutions, if some reagents are running low.

Slide for MIBI

1 FFPE or frozen sections should be deposited on special conductive slides for MIBI It is recommended to use freshly cut tissue sections. Otherwise tissue section slides should be stored properly using different state of the art methods (vacuum chamber, nitrogen chamber or vacuum sealed bags)

⊗MIBI

slides IonPath Catalog #567001

Slide baking and PT module preparation

2

Optional: © 01:00:00; © Overnight

Note: Some tissues or section size may need longer baking time.

Recommended to bake at least 1 hour for brain tissue or TMA. This can be extended to 16 h (overnight).

2.1 Last 10 min place the slide (s) vertically with the label side up to allow drip down the paraffin

3 Prepare Target retrieval solution


■2.5 mL of target retrieval solution 10x (3-in-1), DAKO

in 22.5 mL of ultrapure (type 1, >18 MOhms) water

Total volume (mL)	Volume (mL) Target retrieval	Volume (mL) H2O
25	2.5	22.5
50	5	45
100	10	90


4 Put in the containers with the diluted target retrieval solution in the PT Module



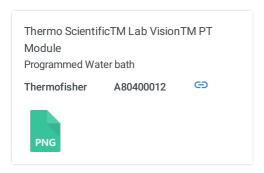

5 PT Module Preheat

Press RUN on digital screen and check for PREHEAT 75 on display

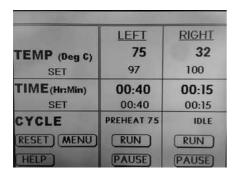

Slide deparafination





Linear Stainer

Pour out reagent containers and fill with fresh reagents:

Xylene x 3, 100% Ethanol x 2, 95% Ethanol x 2, 80% Ethanol, 70% Ethanol, ddH20 x 2, exit stainless steel tank = ultrapure (type 1, >18 MOhms) water

 $\textbf{Citation:} \ \ \text{Marc MB Bosse, Sean Bendall, Mike Angelo (04/15/2021).} \ \ \text{MIBI staining.} \ \ \underline{\text{https://dx.doi.org/10.17504/protocols.io.bt9tnr6n}}$

IMPORTANT: Use fresh xylene for every deparafination.



7 Insert slides into slide carriers

Place the slide carrier into first xylene container

8 Press on Menu

Check for Processing time = 30 sec, Lift bar = 976, Number of dips = 3

Continue to press Menu until the screen displays Start at: ___

Set Start position corresponding to the first slide carrier position

Exemple: If the first slide carrier is at position 4, use Plus (+) or Minus (-) button to increase or decrease to get **Start at:** 04

- 8.1 Then press Enter
- 8.2 Synchronize when the PT module temperature has reached 75°C

then Press Run on the Linear Stainer

- 8.3 Allow the rehydration process and wait until the slides have reached the stainless steel tank and stop
- 9 Bring the stainless steel tank with the slides in close to the PT module

⋈ protocols.io 5 04/15/2021

Antigen Retrieval

10 Open the PT Module and insert the slides in the warm Target retrieval solution container

Discard water immediately from the stainless steel tank

11 Press RUN again and check for first WARMUP then HEAT on display, once the temperature has reached 97°C

	100000	1000
	LEFT	RIGHT
TEMP (Deg C)	75	40
SET	97	100
TIME(Hr:Min)	00:40	00:15
SET	00:40	00:15
CYCLE	WARMUP	IDLE
RESET MENU	RUN	RUN
HELP)	(PAUSE)	PAUSE

	LEFT	RIGHT
TEMP (Deg C)	97	39
SET	97	100
TIME(Hr:Min)	00:09	00:15
SET	00:40	00:15
CYCLE	HEAT	IDLE
RESET MENU	RUN	RUN
HELP	PAUSE	PAUSE

12 Verify stock of 1x PBS wash buffer and prepare accordingly if running low

Reagents	Qty for 1000 mL
PBS IHC Wash Buffer with Tween 20 (mL)	50
Bovine Albumin (BSA), heat shock treated (g)	1
Ultrapure (type 1) water (mL)	949

- Allow to run for 40 min at § 97 °C and then cool down for approximately 50 min and reach § 65 °C
- 14 When the alarm sounds Stop the PT module
- 15 Take out the slides and let cool down at room temperature for at least **© 00:05:00**
- 16 Prepare two coplin jars filled with MIBI 1x PBS wash buffer
- 17 Transfer the slides in the first MIBI 1x PBS wash buffer and use orbital shaker set for 5 min, 70 rpm

፩ protocols.io 6 04/15/2021

18 Transfer the slides to the second 1x PBS wash buffer and use orbital shaker set for 5 min, 70 rpm

Hydrophobic barrier pen

19



Make sure to dry with a folded-tissue paper the slide, leaving a square of wet surface surrounding of the tissue section



Note: Do not let AIR DRY the tissue section, this will result high background and false positive staining

20 Draw a square following the outside edges of the wet square with an hydrophobic barrier pen (ImmEdge pen)



Optionnal: blocking endegenous biotin

21 If a biotinylated antibody or a probe is used, it is recommended to block endogenous biotin

Place the slides in the moist chamber

Add drops of Avidin solution (Avidin/Biotin blocking kit, Biolegend) sufficient to cover the sample and incubate for © 00:10:00 at 8 Room temperature

- 21.1 Wash in coplin jar with MIBI 1x PBS wash buffer and use orbital shaker set for 5 min, 70 rpm
- 21.2 Add drops of Biotin solution sufficient to cover the sample and incubate for **© 00:10:00** at **8 Room temperature**

Citation: Marc MB Bosse, Sean Bendall, Mike Angelo (04/15/2021). MIBI staining. https://dx.doi.org/10.17504/protocols.io.bt9tnr6n

- 21.3 Wash in coplin jar with MIBI 1x PBS wash buffer and use orbital shaker set for 5 min, 70 rpm
- 21.4 Next day, use anti-biotin metal-labeled antibody (clone 1D4-C5) in *Stain 2* panel

Blocking

22 Add 100 µL of Blocking Buffer for 18 mm²

For blocking solution preparation refer to MIBI and IHC solutions protocols



Estimated Surface area	10x10	15x15	18x18	20x20	20x45
(mm)					
Volume (µL)	50	70	100	150	350

Place the slides in a moist chamber at & Room temperature and incubate © 00:20:00 to © 01:00:00

Multiplex Antibody mix

24 Prepare antibody mix based on the putative multiplex antibody panel

Make sure that all the antibodies are ready to use BEFORE starting to build the panel

It is highly recommended to prepare all the antibodies, ready to use, a day before the panel is built

24.1 Evaluate the total volume of multiplex antibody mix by counting the number of slides and the surface area per slide

Refer to the chart for the volume of antibody to apply according to the estimated surface area

Estimated Surface area (mm)	10x10	15x15	18x18	20x20	20x45
Volume (μL)	50	70	100	150	350

24.2 Build an antibody mix table information to make the antibody panel as follow:

Conjugation ID, Target name, Channel, Antibody concentration, Titer, Volume

Exemple:

Α	В	С	D	E	F
ID	Target	Channel	Concentration	Titer (µg/mL)	Volume
			μg/mL		(µL)
1565	CD45	169	50	0.25	2.5
1516	CD8	158	50	0.5	5
				Total	500
				Antibody mix	7.5
				Antibody diluent (NHS	492.5
				3%)	

For **Antibody Diluent (NHS 3%)** solution preparation refer to **MIBI and IHC solutions protocols**

25	Δdd □ 400 u l	of antihody diluent	(NHS 3%) to a (Centrifugal 0.1	um filter unit (M	illipore, UFC30VV00)
Z J	Auu 400 III	or arrepody diluent	11110 2 2 %) 10 a C	Jenunudai U. I	ummulei umil (IVI	IIIIDOLE. UFC3UVVUU1

25.1 **(3)** 10000 rcf, Room temperature , 00:01:00

1m

- 25.2 Discard flow through
- 26 Add antibody mix to the filter unit
 - 26.1 **310000 rcf, Room temperature**, 00:01:00

1m

Stain 1 (Overnight)

- 27 Remove the blocking solution by tapping the slide on a side

 Immediately add the filtered multiplex antibody mix
- Place the moist chamber at 4°C **Overnight**, preferably in a place with low disturbance (e.g. a designated area in a cold room)

⋈ protocols.io 9 04/15/2021

 $\textbf{Citation:} \ \ \text{Marc MB Bosse, Sean Bendall, Mike Angelo (04/15/2021).} \ \ \text{MIBI staining.} \ \ \underline{\text{https://dx.doi.org/10.17504/protocols.io.bt9tnr6n}}$

Wash buffer

- 29 Prepare two Coplin jars filled with 1x PBS wash buffer
 - 29.1 Transfer the slides into the **first** Coplin jar and use orbital shaker set for 5 min, 70 rpm
 - 29.2 Transfer the slides into the second Coplin jar and use orbital shaker set for 5 min, 70 rpm

Stain 2 (1h)

30

Add adequate volume of the selected sub-panel of antibody mix

Refer to the chart for the volume of antibody to apply

Estimated Surface area (mm)	10x10	15x15	18x18	20x20	20x45
Volume (μL)	50	70	100	150	350
Estimated # of drops	1	2	3	4	8-9

31 Place sample in a sealed humidity chamber, transfer to 4°C refrigerator, and incubate **© 01:00:00**

Wash buffer

- 32 After 1h incubation
 - than go to step 32

Prepare solutions

33 Prepare fresh glutaraldehyde fixing solution

Glutaraldehyde fixing solution

- 1. Add 30 mL of 1x PBS low barium in a 50 mL tube
- 2. Break the glass glutaraldehyde 16% (amber vial)
- 3. Add the content of the glutaraldehyde (10 mL) by inverting it and tapping the bottom of the vial in the 50 mL tube
- 4. Transfer the content in a linear stainer container

34 Set the linear stainer containers

Fill containers with the following solution and order

Glutaraldehyde x 1, PBS low barium x 1, TRIS 100 mm pH 8.5×3 , ddH2O x 2, 70% Ethanol x1, 80% Ethanol x1, 95% Ethanol x 2, 100% Ethanol x 2, exit stainless steel tank = empty

Citation: Marc MB Bosse, Sean Bendall, Mike Angelo (04/15/2021). MIBI staining. https://dx.doi.org/10.17504/protocols.io.bt9tnr6n

Glutaraldehyde fixation

35 Mount the slides on the linear slide holder

Fix for **© 00:05:00**

36 Rinse briefly with 1x PBS low barium

Dehydration and Storage

37 Press on Menu

Check for Processing time = 30 sec, Lift bar = 976, Number of dips = 3

Continue to press Menu until the screen displays Start at: __

Set Start position corresponding to the first slide carrier position

Exemple: If the first slide carrier is at position 3, use Plus (+) or Minus (-) button to increase or decrease to get **Start at:** 03

- 37.1 Then press Enter
- 37.2 Press Run on the Linear Stainer
- 37.3 Allow the dehydration process and wait until the slides reached the **empty stainless steel tank** and stop
- $37.4 \hspace{0.5cm} \textbf{Store the slides immediately under vacuum until MIBI acquisition}$

Alternatively, the stained slides can be stored in a vacuum sealed bag for long term storage pre and post MIBI acquisition