

Soil Moisture Sensor

The soil moisture sensor two probes pass current

To measure the resistance value and the moisture value

1. more water – less resistance- more electricity

- moisture level higher

2. dry soil – more resistance- less electricity

- moisture level lower

Two modes (A0 / D0)

Specification

Input Volt – 3.3 – 5 V

Output Volt – 0- 4.2V



Input Current - 35 mA

Output Signal - Both analog and digital

Pin Out – Soil Moisture Sensor

The soil Moisture sensor FC-28 has four pins

- VCC: For power
- A0: Analog output
- D0: Digital output
- GND: Ground

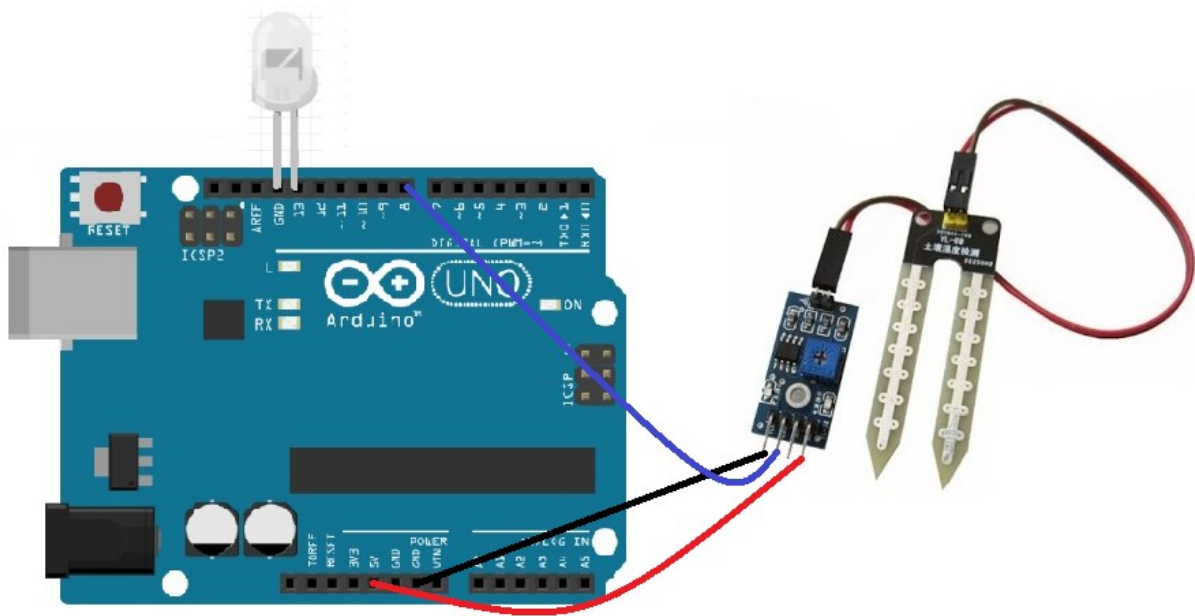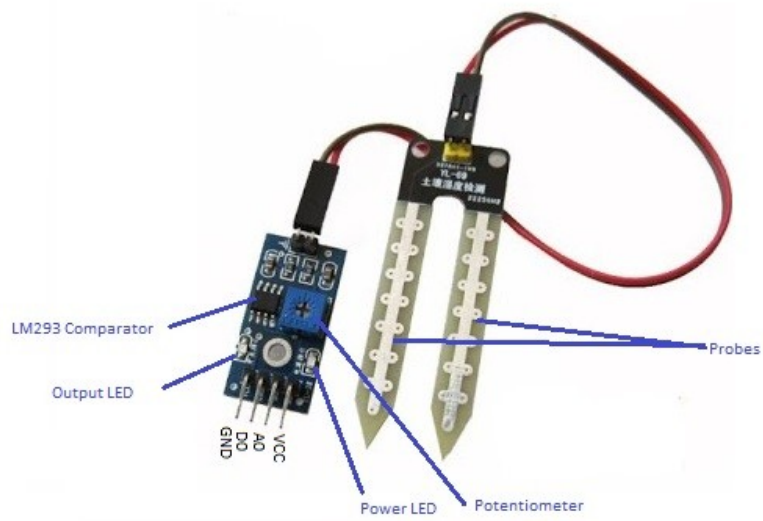

```
int sen=8;

int val=0;

int led=13;

void setup() {

    pinMode(sen,INPUT);

    pinMode(led,OUTPUT);// put your setup code here, to run once:

    Serial.begin(9600);

}

void loop() {

    val=digitalRead(sen);

    Serial.println(val);

    if(val==1)

    {

        Serial.println("Dry,need to supply water");

        digitalWrite(led,HIGH);

    }

    else

    {Serial.println("Wet,no need water");

        digitalWrite(led,LOW);

    }

    // put your main code here, to run repeatedly:

}

}
```