Somfit® PRO

DUAL BAND

Start Here

COMPUMEDICS®

Contents

x1 Somfit®
Device

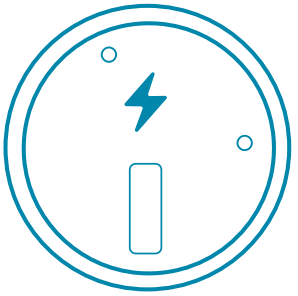

x1 Somfit®
Charging Cradle
in case

x1 Respifit
Module

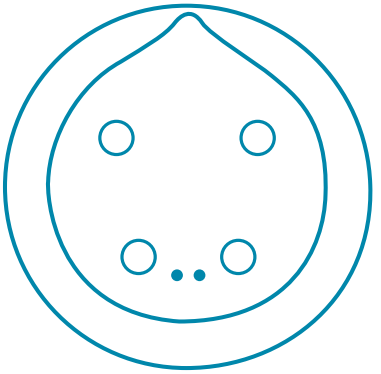

x1 Respifit
Charging Cradle
in case

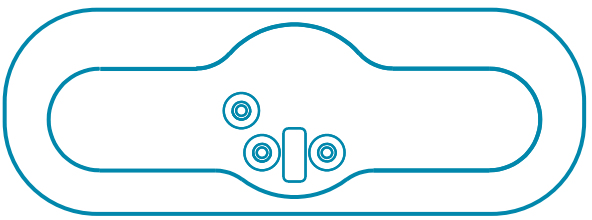

x 1
Electrode

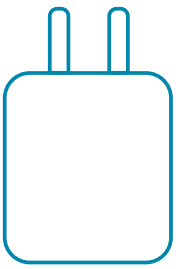

x1
Power Adaptor

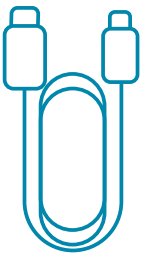

x1
USB Cable

x 1

x1 Chest Respiratory Band

x1 Waist Respiratory Band

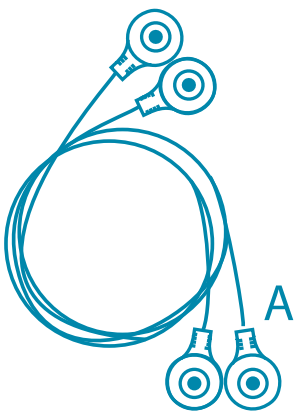

x1
Abdo Lead

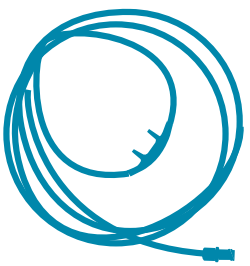

x1
Nasal
Cannula

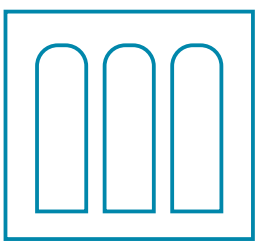

x3
Tape
Strips

Download Somfit® APP

Download on the App Store

GET IT ON Google Play

Install App and follow your Somfit® Providers instructions to login.

View the Somfit® Pro Setup Videos

https://www.compumedics.com.au/en/landing-page/somfitpro-setup-videos-dual-band-mode/

Quick Start Guide

BEFORE USE

Charge the modules – The Somfit and the Respifit module sit on charging cradles inside the case. To charge them insert the **charging cable provided** into the USB port on the side of the case.

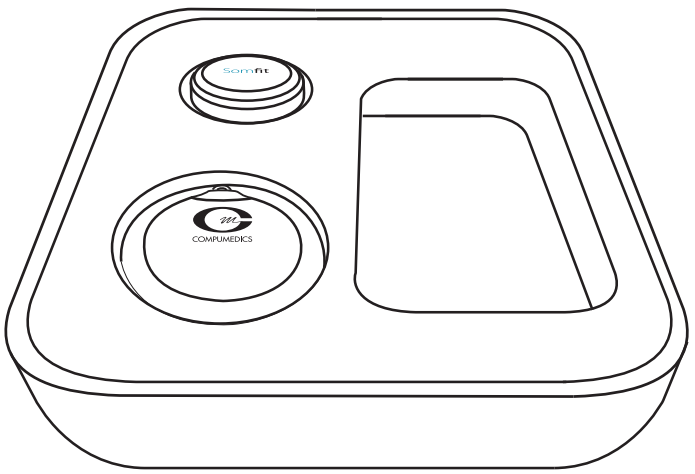

Modules sit on charging cradles inside case. Do not remove the charging cradles.

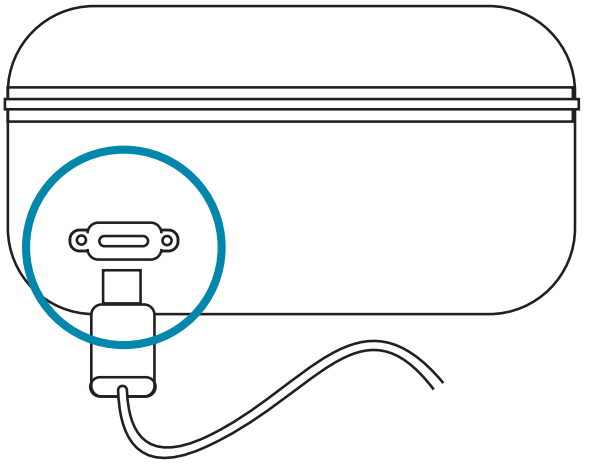

Charge modules using USB port on side of case.

Only use the provided cable to charge the modules.

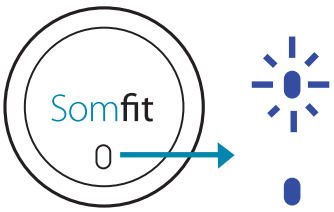

Flashing blue light **Charging**

Constant Blue light **Fully Charged**

Indicator Light

Flashing light on logo **Charging**

Constant light on logo **Fully Charged**

Indicator Light

PREPARE FOREHEAD

Important Step

Step 1.

Wash forehead using **water only** without soap or cleansing products. Dry with towel.

Clean your forehead area with the Skin Prep Pad for at least **15 seconds** to give the best signal quality.

Dry the forehead with a clean towel, to ensure the forehead is fully dry before applying the electrode.

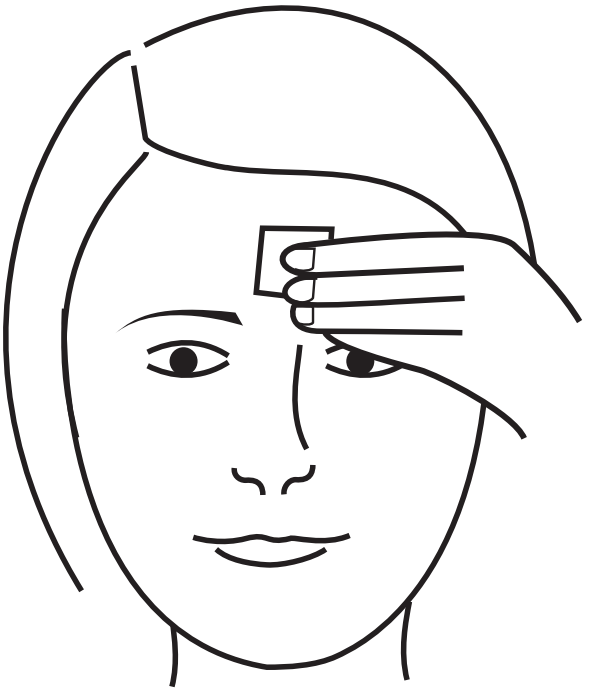

15 secs with prep pad

Step 2.

APPLY SOMFIT®

Attach the **Somfit®** device to the electrode ensuring all 3 snap-ins are in place.

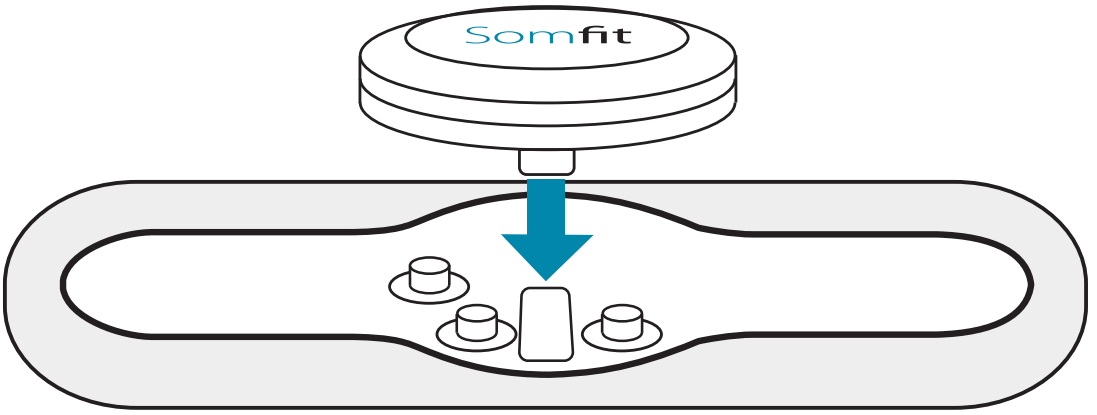

FRONT

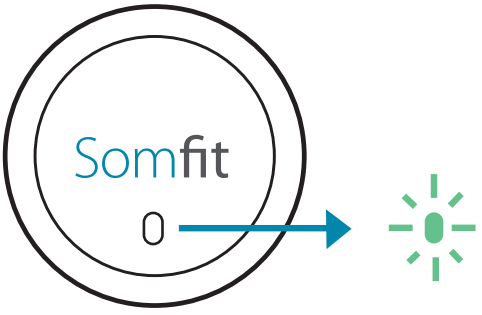

Indicator Light

Single green light
blinking every 10 seconds
Ready to record

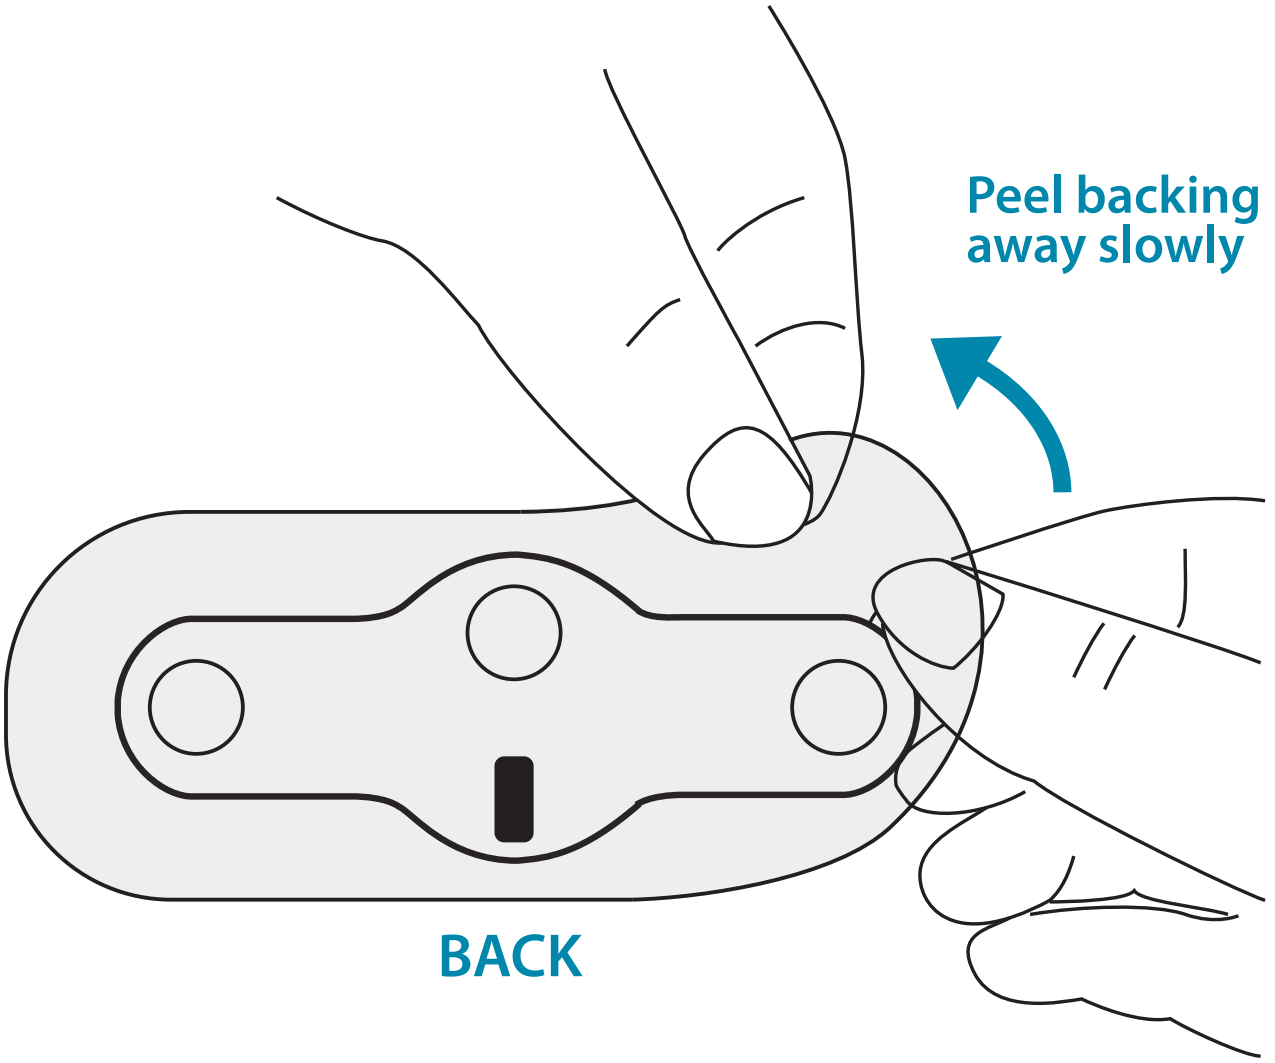

Slowly remove the clear backing from the electrode to reveal the adhesive area. Minimise touching the adhesive area and avoid any finger contact with the three circular gel areas of the electrode.

While looking at a mirror, apply the electrode to the **centre of the forehead** approximately one finger's width above the eyebrows.

Press down once firmly on the Somfit with two fingers.

Place two fingers on each side of the electrode close to the Somfit. Press firmly as you run your fingers along the electrode towards the ends. This will ensure a firm placement.

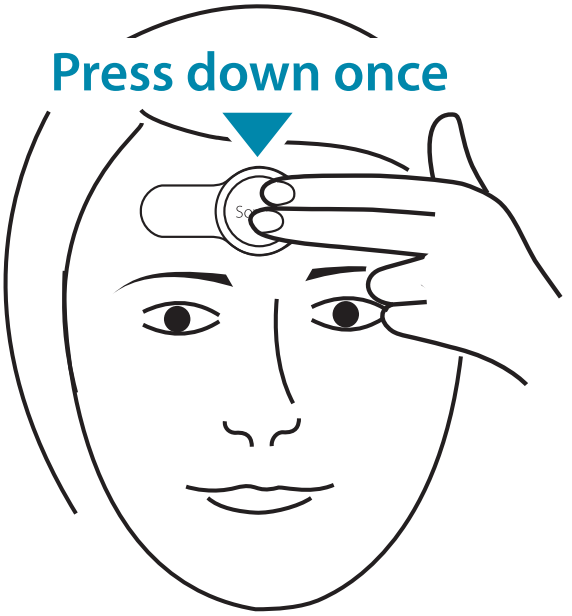

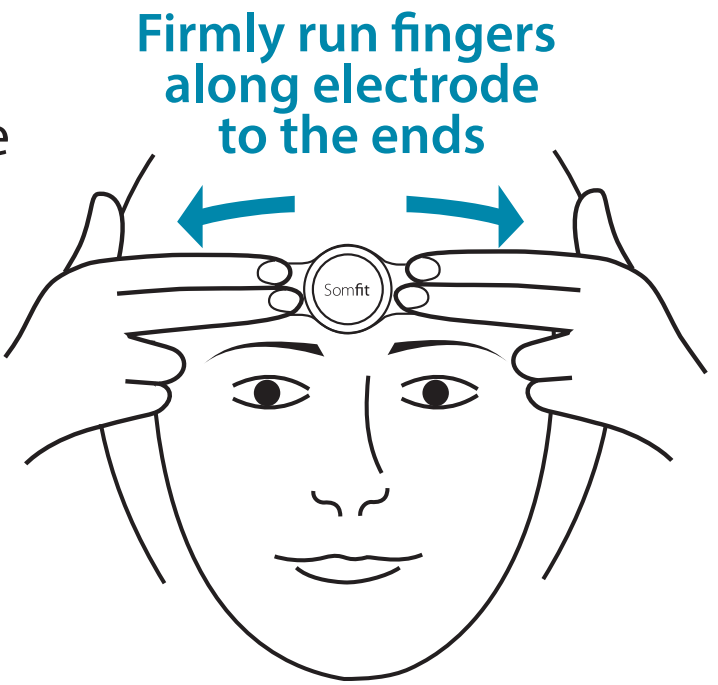

Step 3.

APPLY CHEST RESPIRATORY BAND

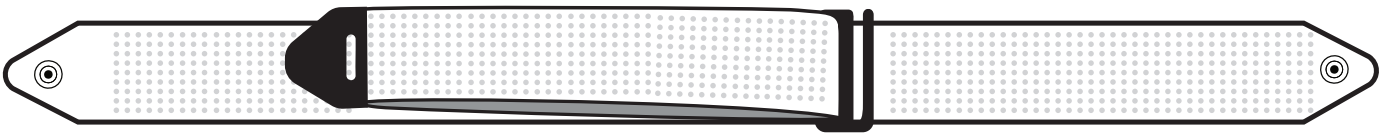

The chest Respiratory band has no extension strap.
Apply the band with rough texture side out.

Pass the band around your waist till it meets the other side of the band in front. Don't let the band get twisted.

The extra loop should be facing out on your right-hand side.

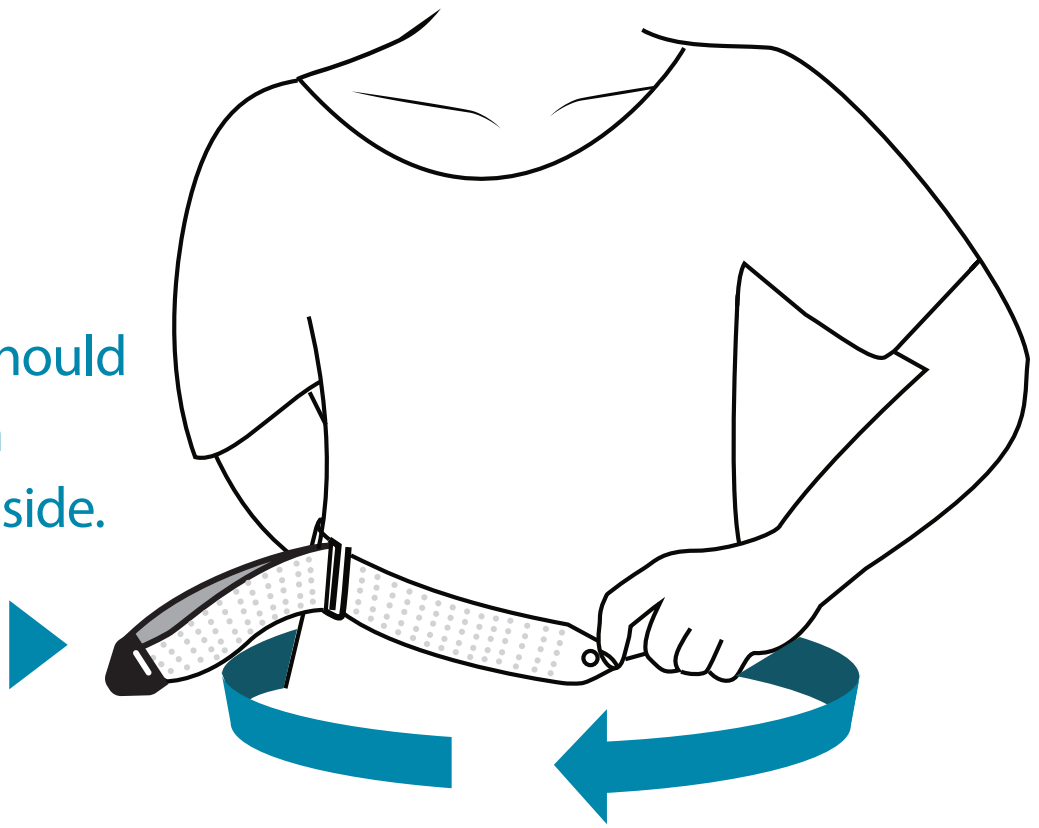

Step 4.

ATTACH THE RESPIFIT MODULE

Attach the two top press studs on the back of the Respifit module to the press studs on the ends of the chest band.

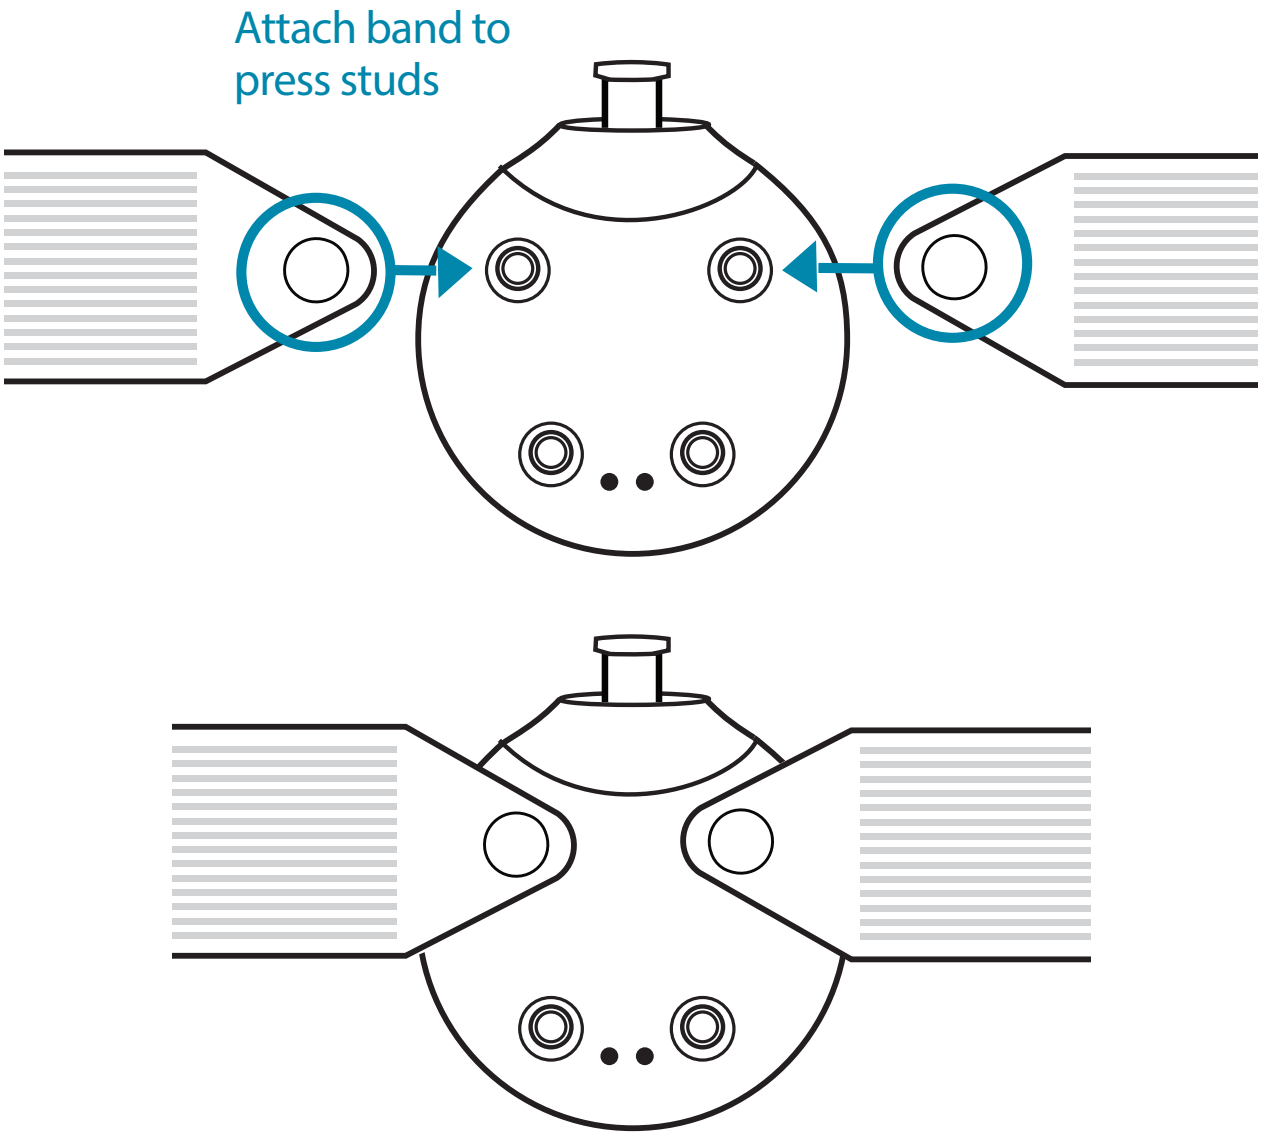

Lift the chest band from your waist up to sit under your armpits.

Hold the band clip, (top and bottom), with the left hand. Use the right hand to pull the extra loop through the band clip to tighten until the band fits snugly and won't fall.

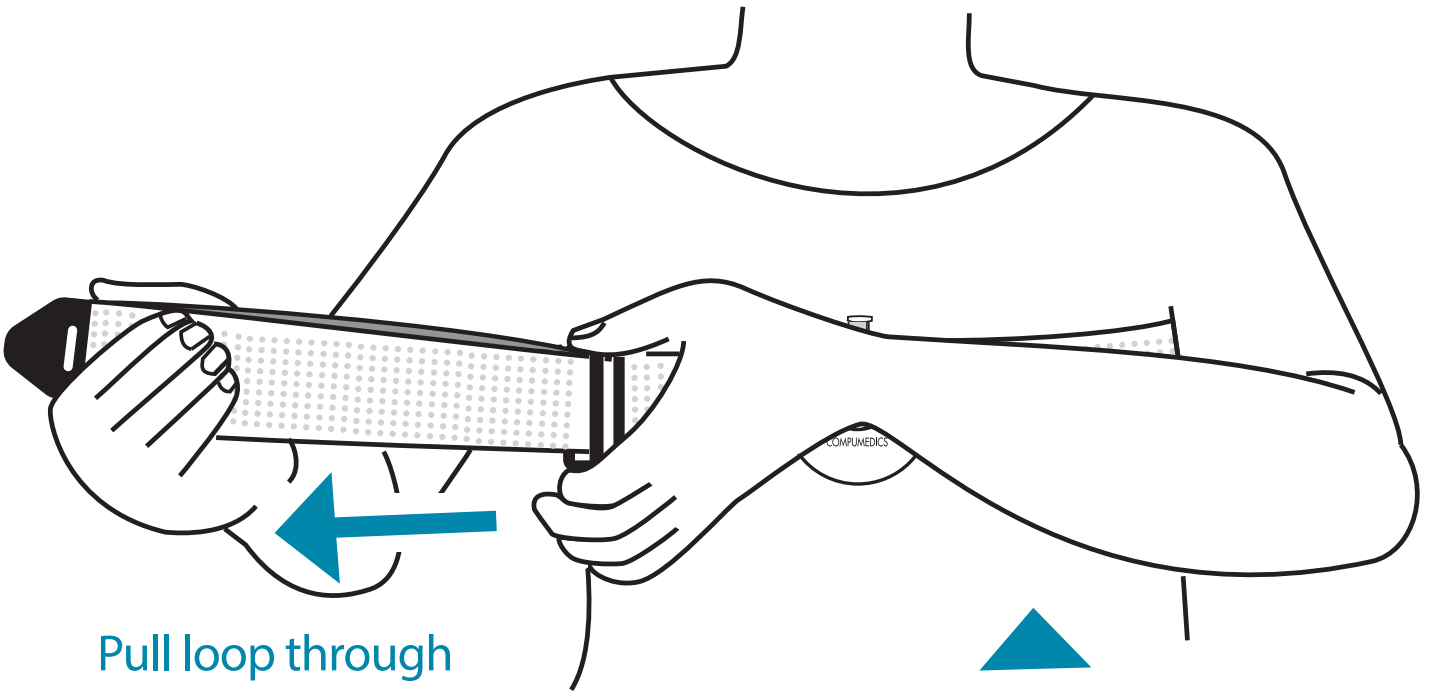

Pull loop through clip till band is snug.

The band should be positioned across the chest and under the armpits.

Whilst holding the band tight, bring the loop to your left toward the Respifit module and secure it by sliding it under the prong on the adjustment clip.

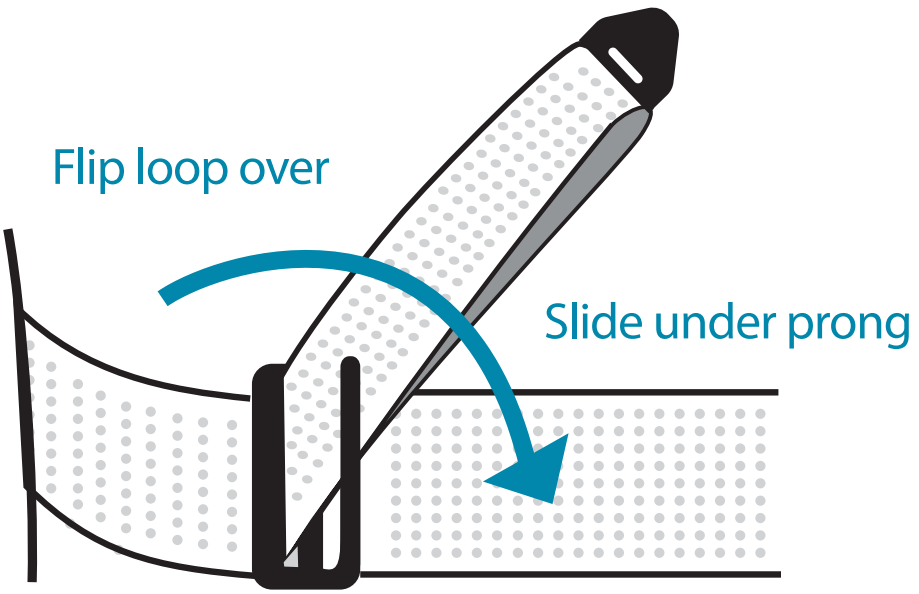

Let the excess band loop hang.

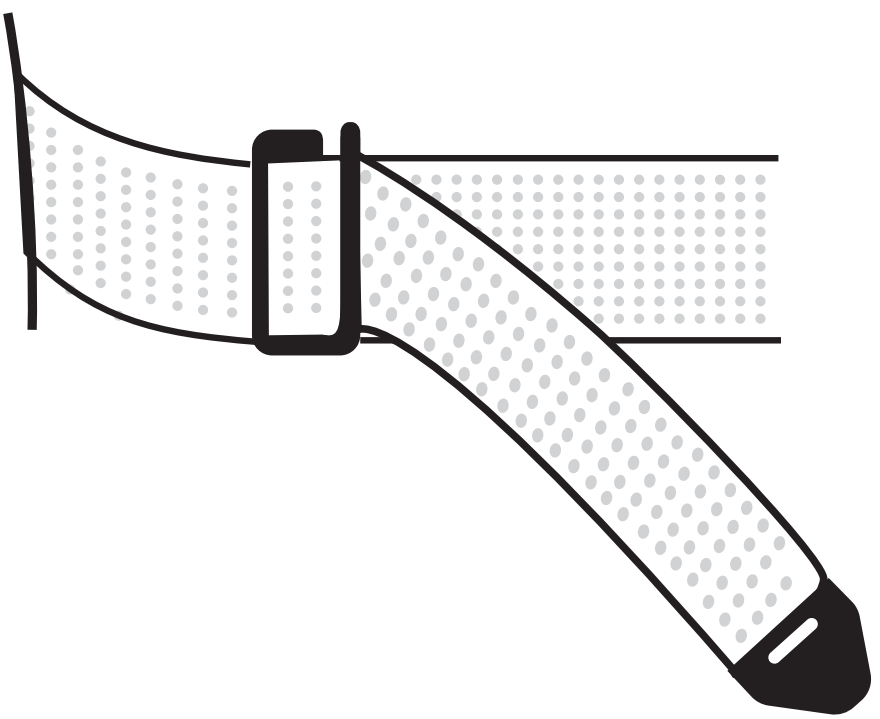

Step 5.

ATTACH THE ABDO LEAD TO THE RESPIFIT MODULE

Locate the white Abdo Lead.

Take one end of the Abdo lead and attached the press studs to the bottom press studs on the back of the Respifit module. Gently lift the bottom of the module to do this so it stays attached to the band.

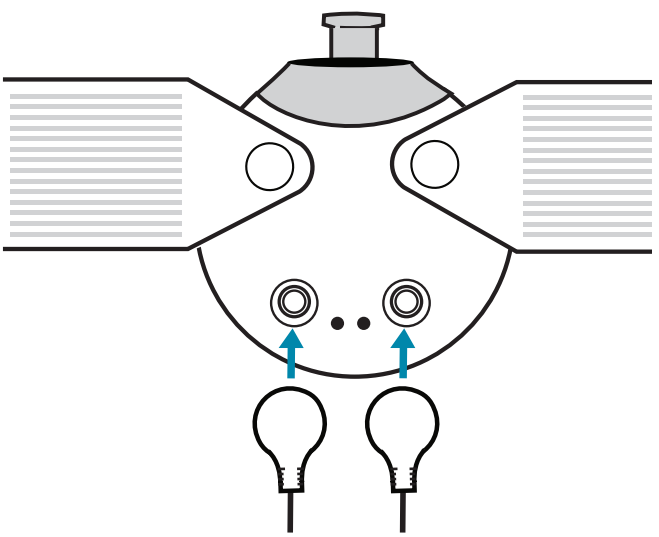

Attach the Abdo cable press studs to back of the Respifit module.

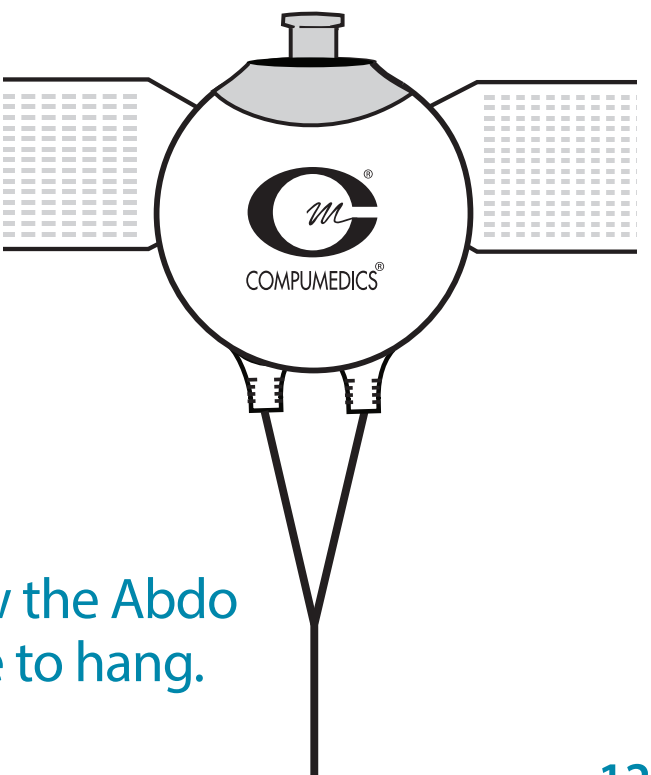

Allow the Abdo cable to hang.

Step 6.

APPLY WAIST RESPIRATORY BAND

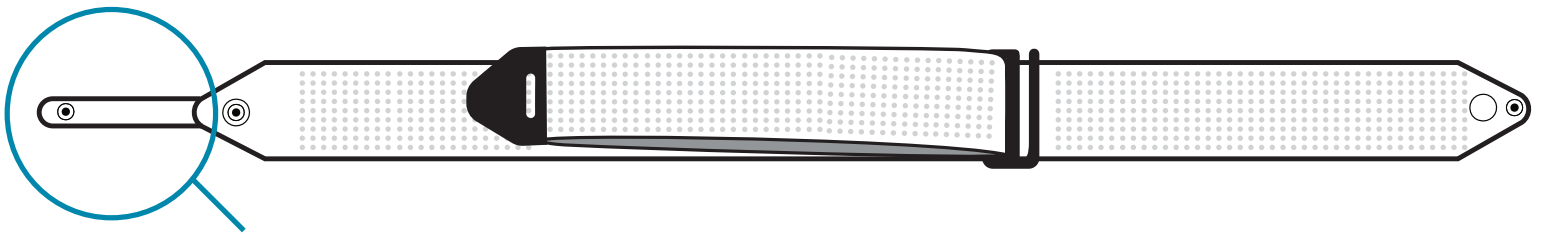

The Waist Respiratory band has the extension strap.
Apply the band with rough texture side out.

Pass the band around your waist till it meets the other side of the band in front. Don't let the band get twisted.

The extra loop should be facing out on your right-hand side.

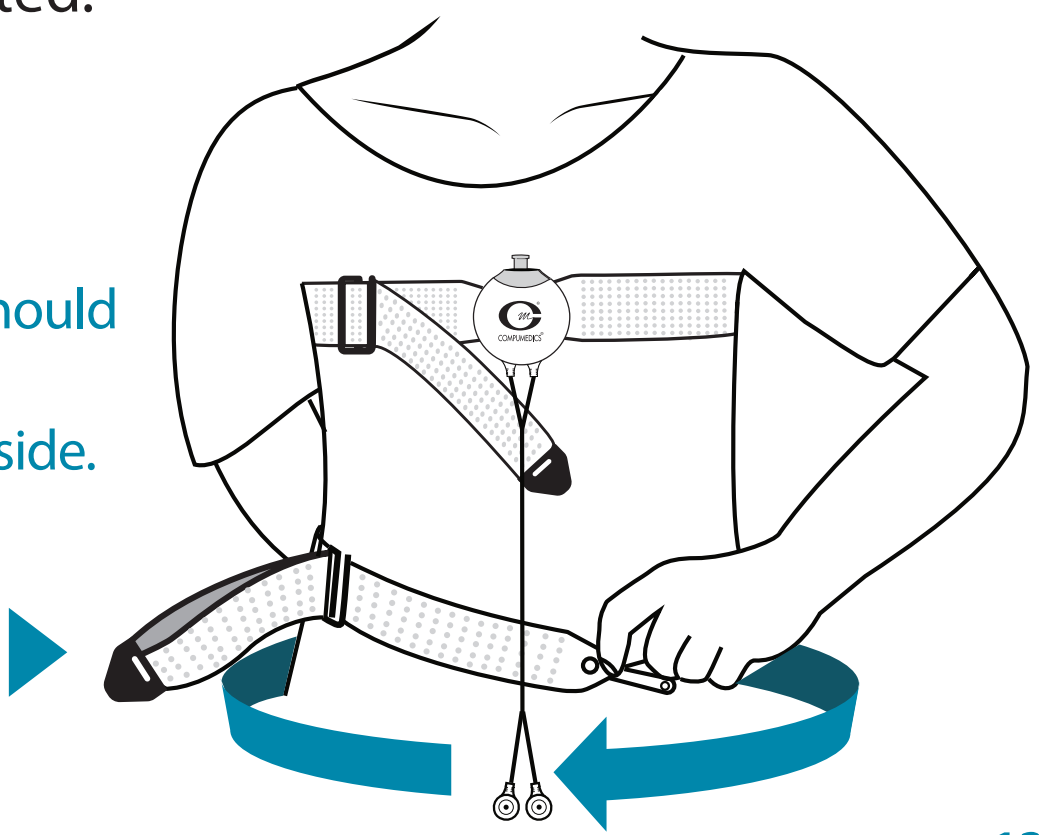

Position the Waist Respiratory band around the middle of your waist.

Attach the black press studs together so that the belt is fastened around you.

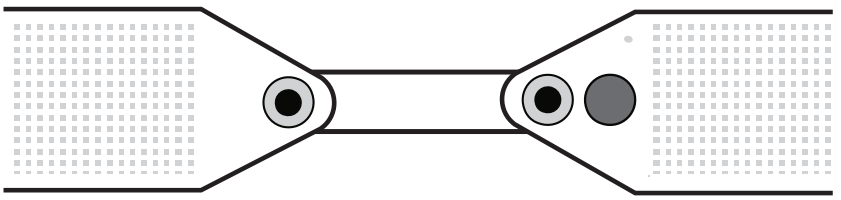

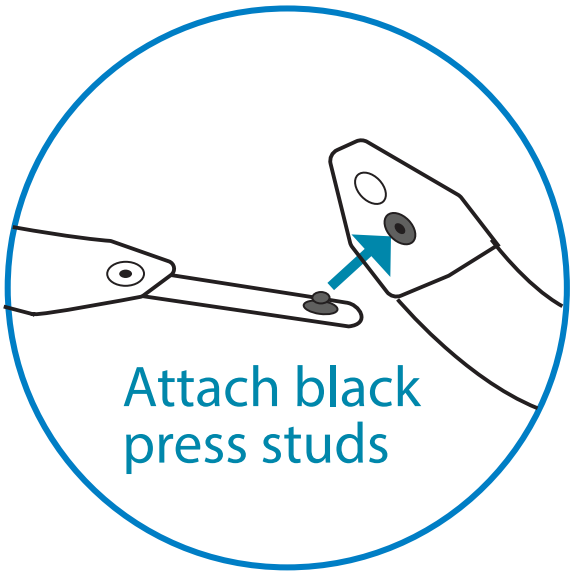

Hold the band clip, (top and bottom), with the left hand. Use the right hand to pull the extra loop through the band clip to tighten until the band fits snugly and won't fall.

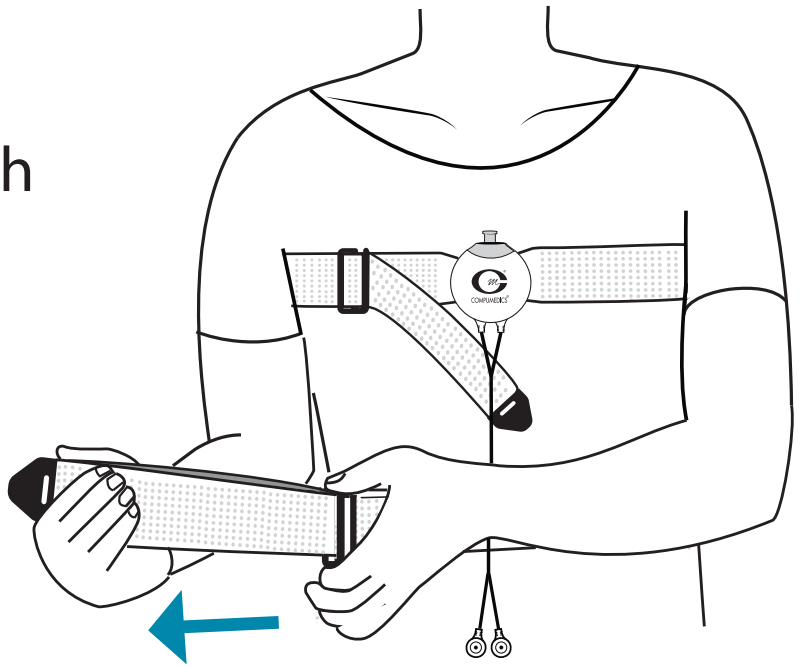

Pull loop through clip till band is snug.

Whilst holding the band tight, bring the loop to your left and secure it by sliding it under the prong on the adjustment clip.

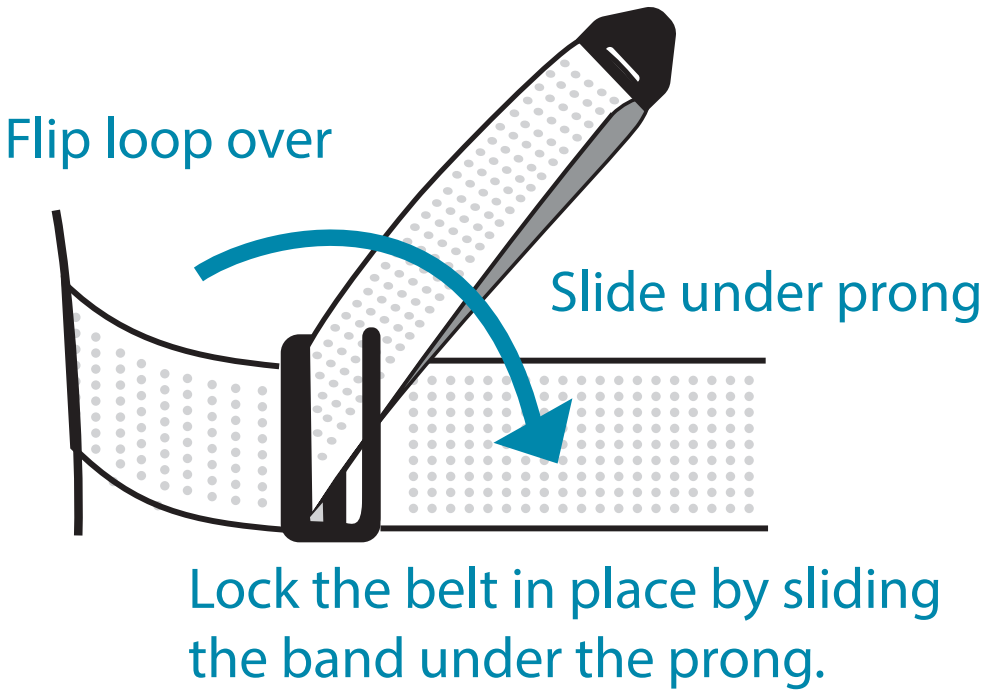

Once secure, let the loop hang.

The Abdo Lead should be hanging on the outside of the waist Respiratory band.

Take the hanging Abdo lead and locate the two bottom press studs.

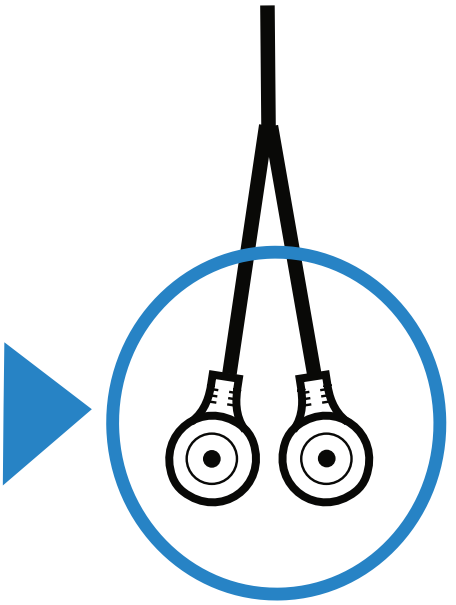

Attached the press studs to the press studs on the waist Respiratory band.

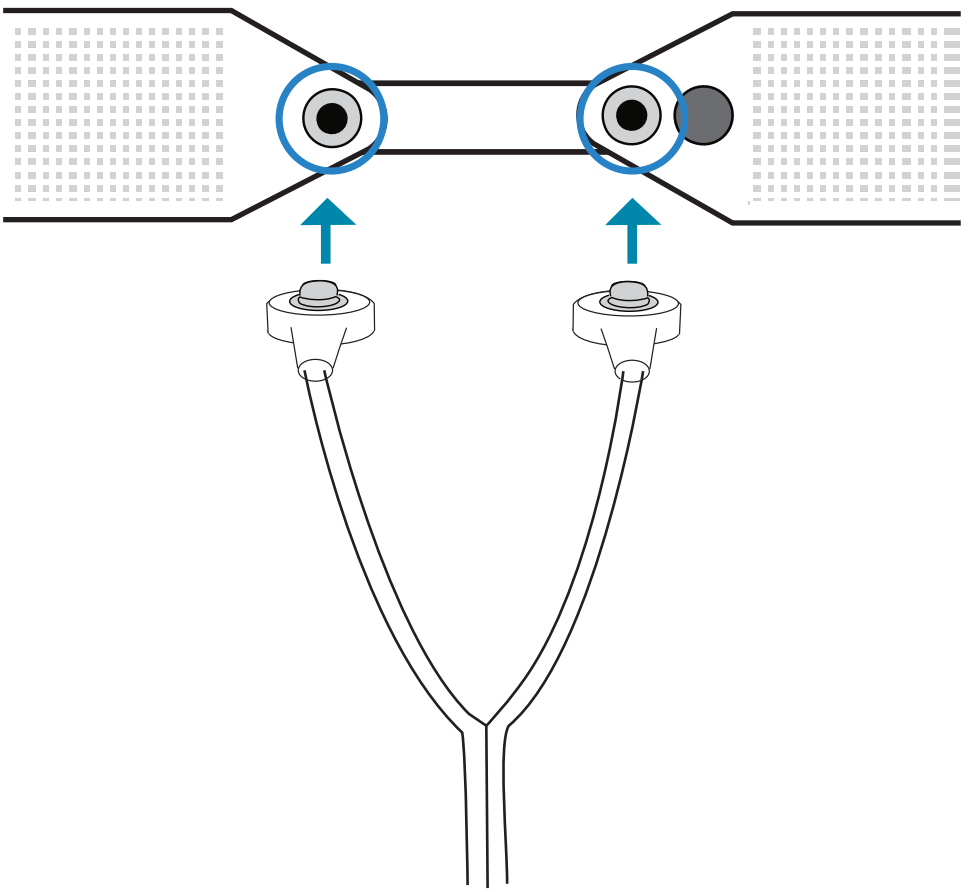

Take the hanging loop on the chest band, pass it across the Respifit module and secure with the velcro fastener onto the band.

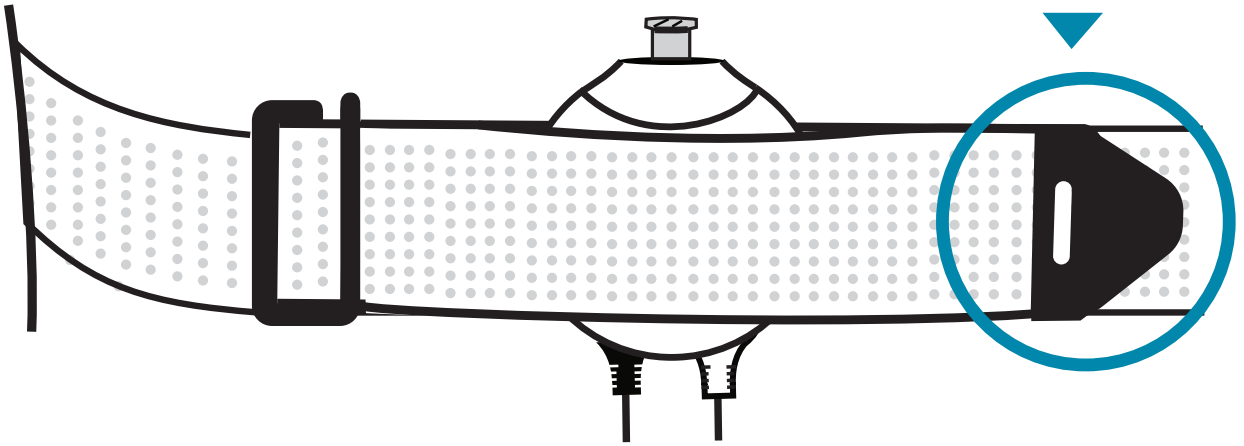

Do the same for the waist band.

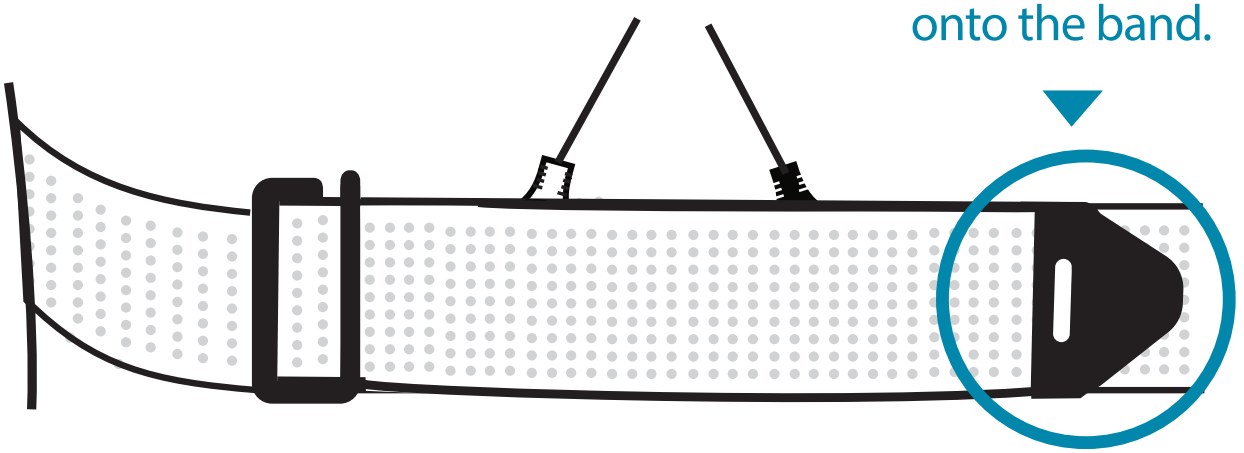

Step 7.

APPLY NASAL CANNULA

Take the Nasal Cannula out of the plastic and unravel.

Locate the nasal prongs.

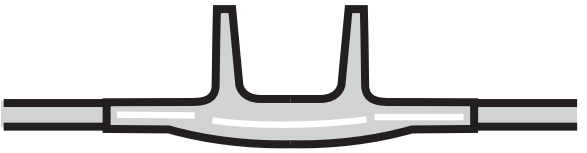

Hold the nasal prongs under your nose. The prongs are curved and should be curving toward you, not away.

Place the two prongs so they enter your nostrils by about 1 to 2mm only.

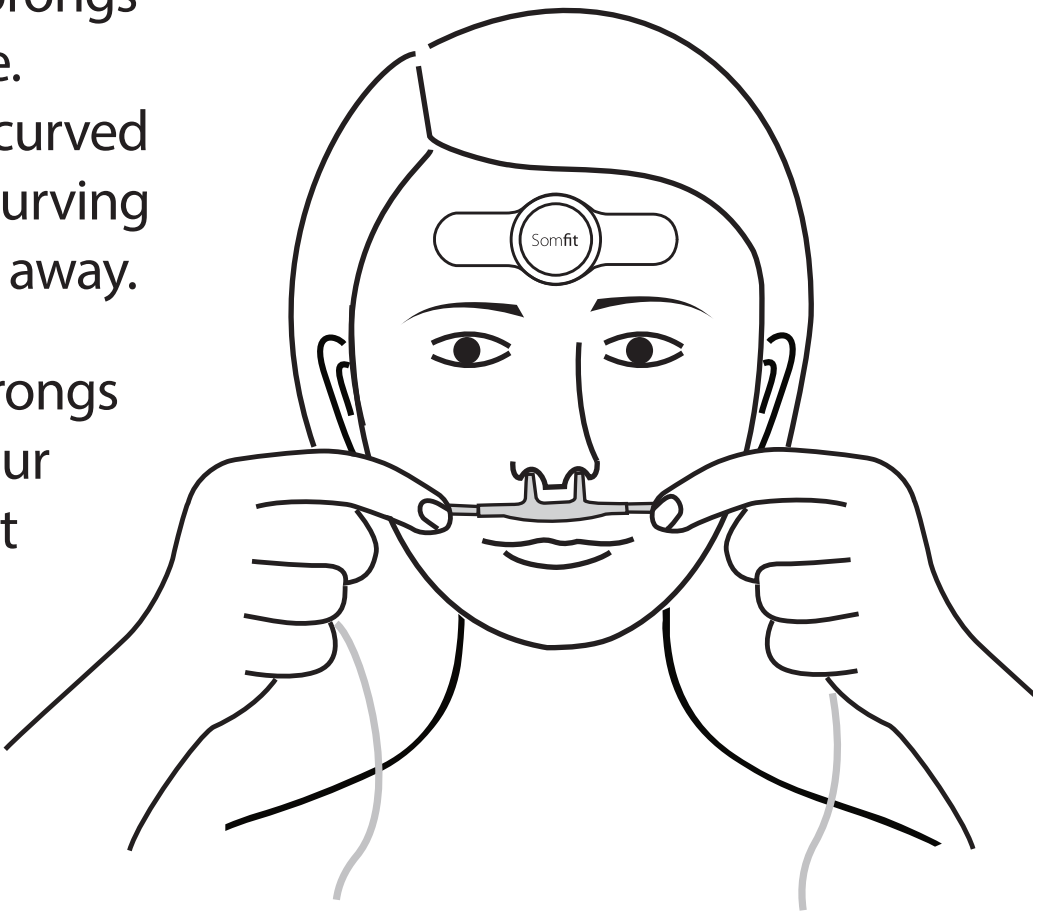

Whilst holding the prongs in place, loop the tubing over the back of your ears.

Secure it under your chin by sliding the toggle up under your chin.

Apply a strip of the tape supplied to each cheek to secure the Cannula in place.

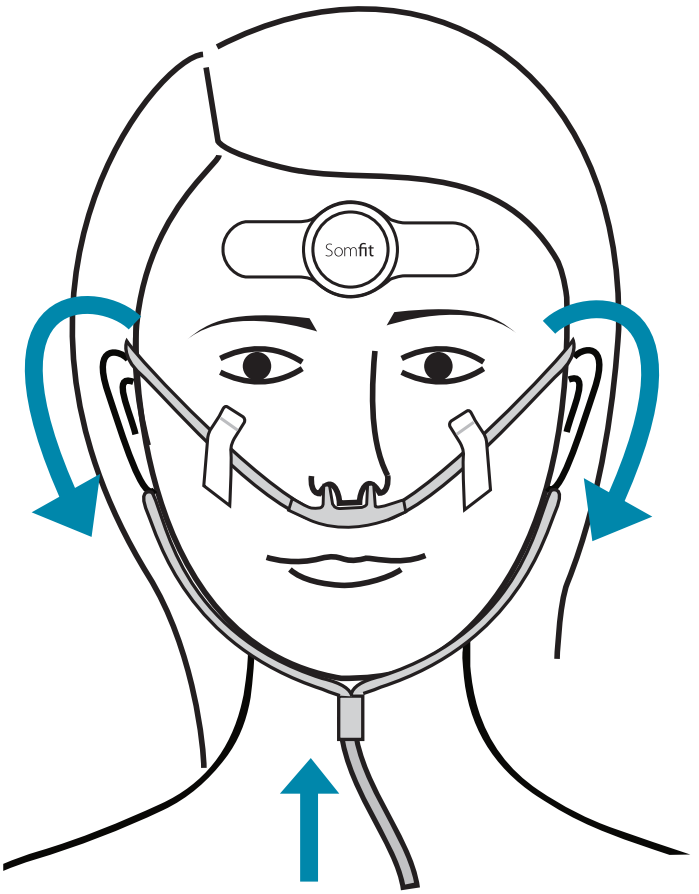

When applying the tape, fold the top over on itself to make it easy to remove. Approximately 4mm overlap.

Screw the plastic fastener at the bottom of the Nasal Cannula tubing into the top tube coming out of the Respifit module.

Secure firmly, but don't overtighten.

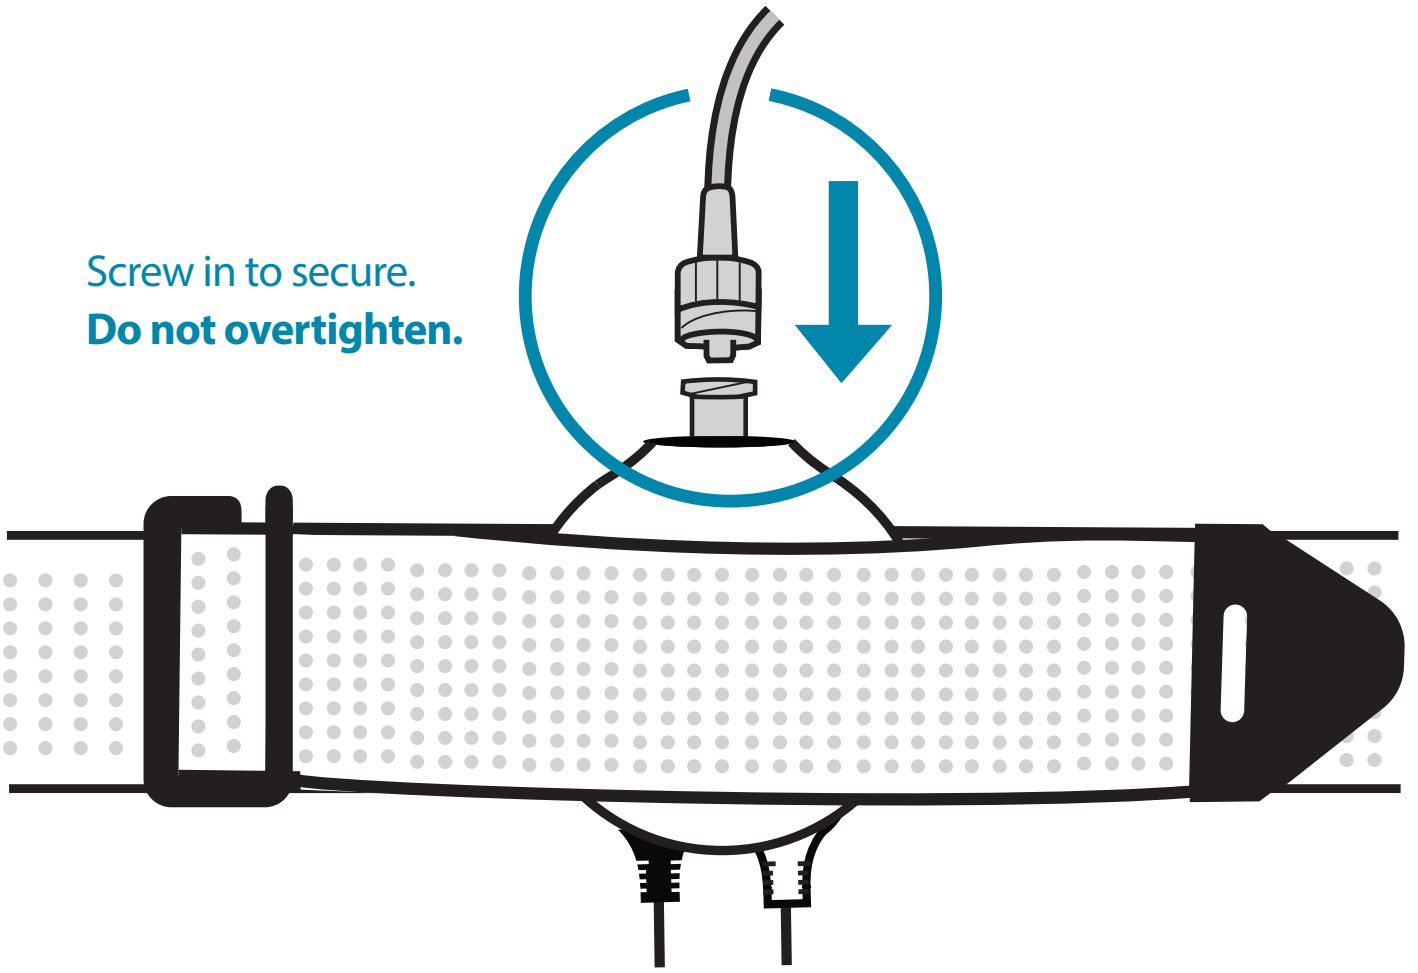

Step 8.

OPEN APP

Run the **Somfit® App.**

After opening the App scan the QR code on the letter provided, enter your date of birth (DOB) and press the **'Start Study'** button to progress through the **step-by-step application process and signal check**.

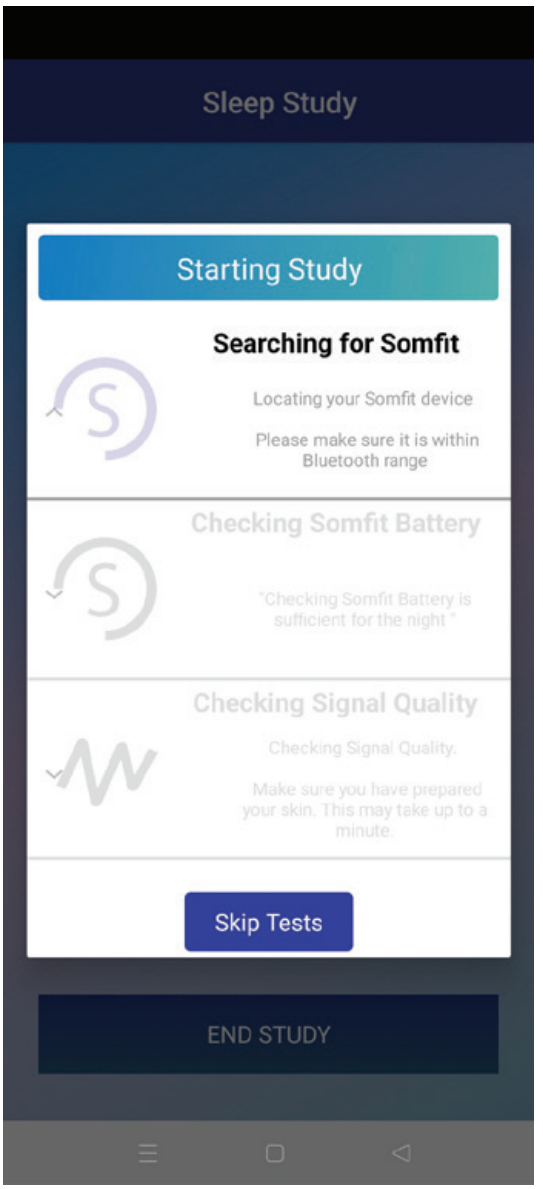

Signal check screen

START RECORDING

Important Step

After Somfit completes pre-checks, the recording screen will appear.

Please do not close the Somfit App and refrain from using other apps or your phone once the study begins.

You can lock the phone screen, but do not put the phone in aeroplane mode.

Ensure phone is charging on your bedside table.

It is suggested to turn on silent or do not disturb mode on your phone to avoid sleep disturbances.

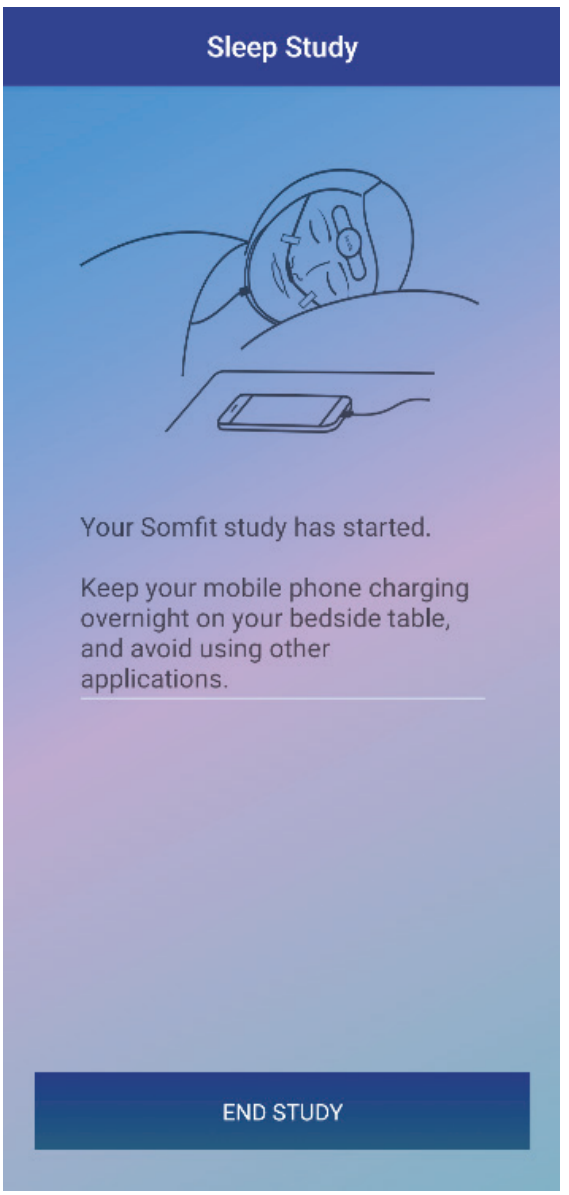

Recording screen

Step 9.

GO TO SLEEP

You are all set to go.
Go to sleep in your
normal sleep position.

Important Step

Ensure phone is on and charging on your bedside table.

It is normal for the indicator light on both the Somfit® and Respifit module to be turned off during recording.

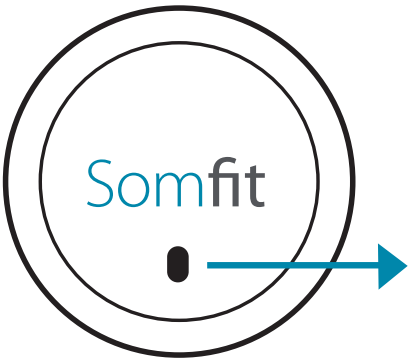

Light off
Recording

Indicator Light

Indicator Light

Step 10.

WAKE

When you wake simply, press the **'END STUDY'** button. Confirm you wish to the end study by clicking **'Yes'**.

Complete post-sleep survey if prompted.

Data upload will automatically occur.

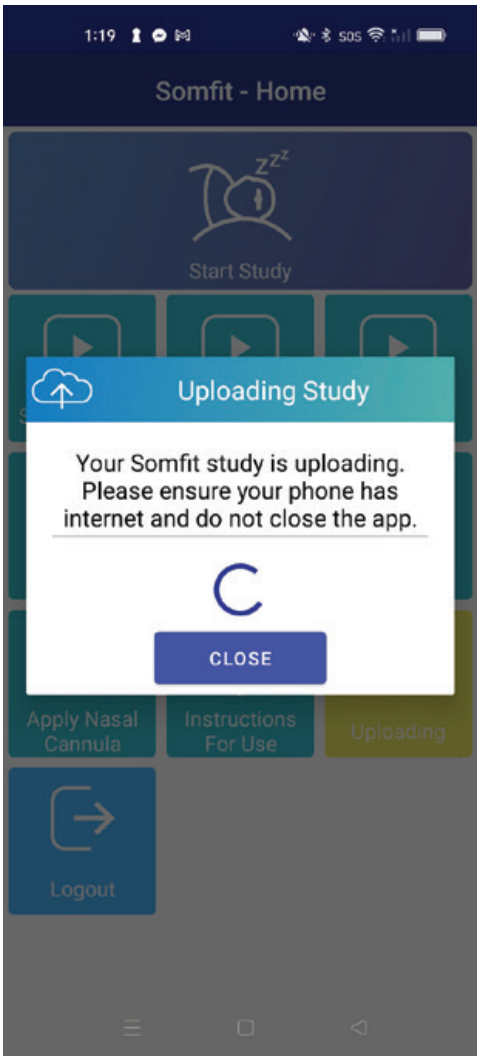

Upload Screen

Important Step

Do not close the App or switch off your phone while the study is uploading.

Upload can take between 10 to 15 minutes.

Carefully remove the Somfit® device from your forehead by gently peeling off the electrode.

Remove the electrode from the Somfit® and discard the electrode.

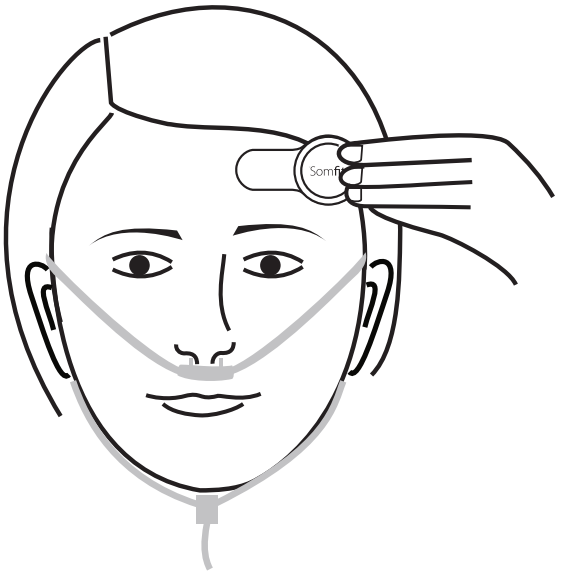

Return the Somfit® to the charging cradle in the case. Charge if needed.

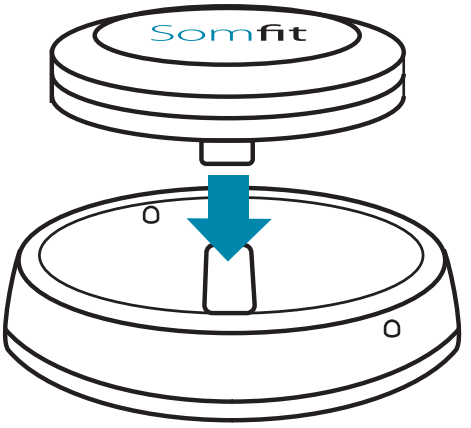

Undo the velcro fasteners on both respiratory bands.

Unclip the Abdo lead press studs from the waist band and the back of the Respifit module and remove the Abdo lead. Keep the Abdo lead and return it with your kit.

Carefully unscrew the nasal cannula fastener from the top of the Respifit module .

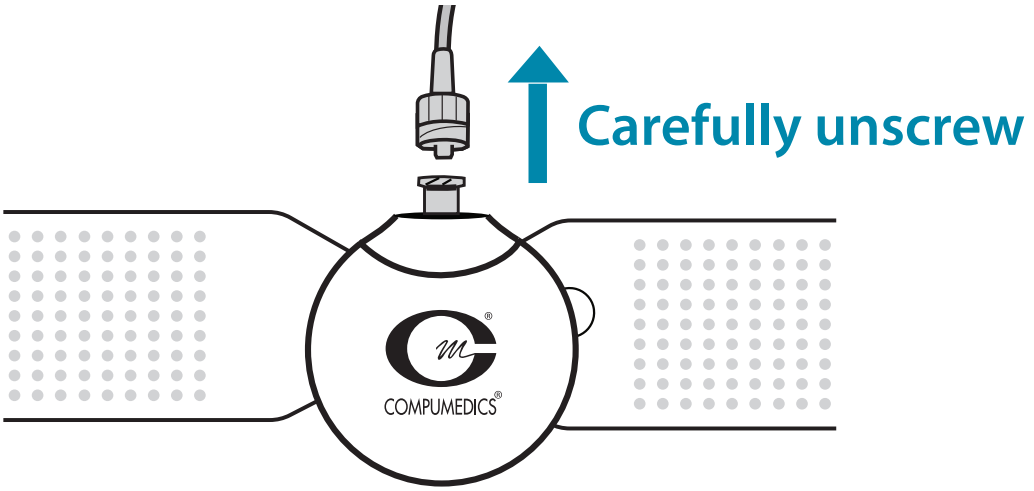

Remove the nasal cannula from your face and discard.

There is a new nasal cannula and Somfit electrode supplied for following nights if needed.

Carefully unclip the Respifit module from the band and return it to the charging cradle in the case. Charge if needed.

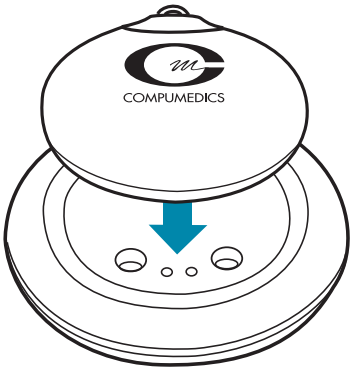

Remove both of the respiratory bands. Keep them for the next night if needed. Discard them after the last night.

Step 11.

REPEAT

Continue using Somfit® pro each night until sufficient nights have been completed. At the end of this period of nights, you will be instructed by the app to return the kit to your provider. The provider will instruct you on how to obtain your results.

www.somfit.com

AK501-0 English