

## **Supplies**


Scissors Cellophane tape

## **Assembly Instructions**

## **Step 1: Cut out the frontal guide**Using scissors, carefully cut along the dotted line. Do not cut any solid lines.

## Step 2: Tape the notches

For each notch, align the A side edge with the B side line and place a piece of tape over the seam to secure it.

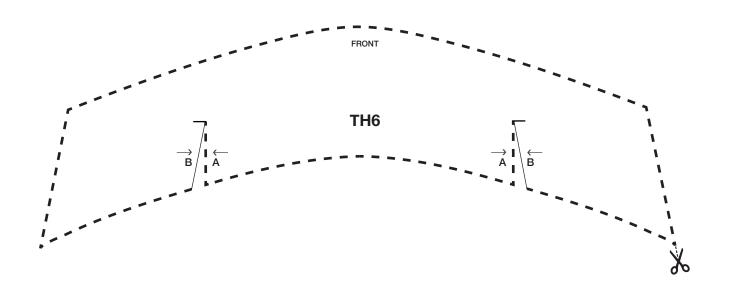

1866 Colonial Village Ln #106 Lancaster, PA 17601 800-424-7436 (U.S. & Canada) 1-717-553-6633 (local & international) talk@hairdirect.com www.hairdirect.com

©2017 HairDirect. All rights reserved.