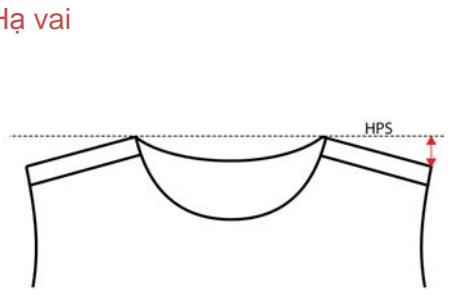
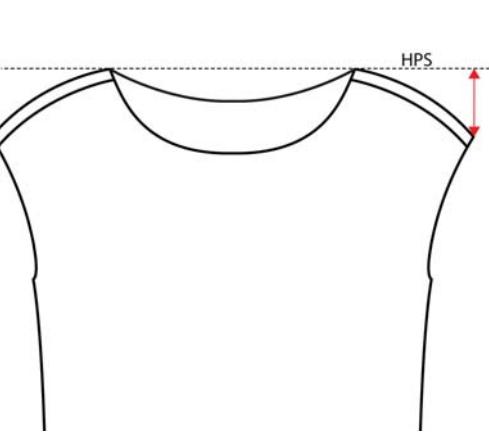
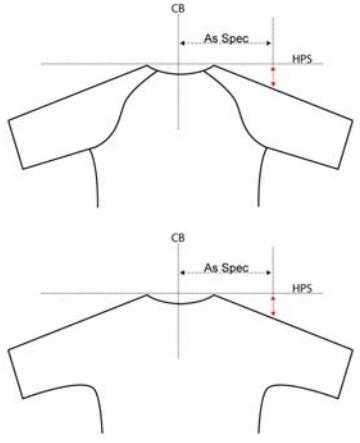
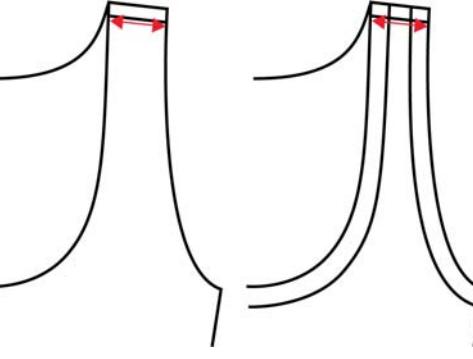
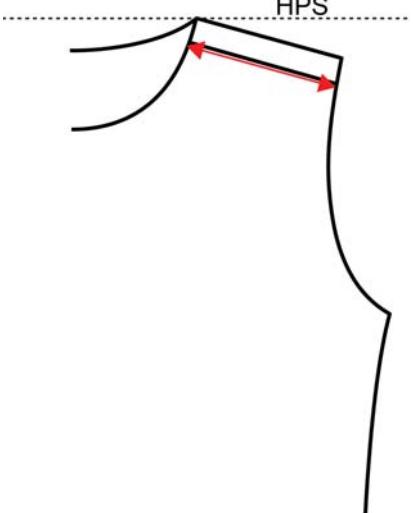
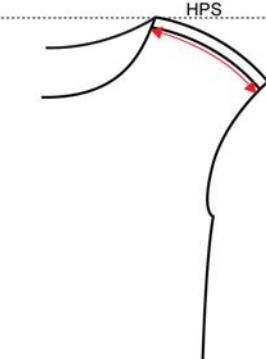


WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style	EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season:	Templates/Admin 0000	Mat. One Desc:	Date Created	Date Modified
Wght/Width:		Mat. One Content:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
Wash/Fin:		Gauge:		JKUBALAK
		End/Yrn Ct:		JKUBALAK
A001	Shoulder Slope (Standard)		A001.1	Shoulder Slope (Dropped Shoulder)
Establish an extended imaginary line from HPS through HPS. Measure perpendicular from imaginary line to top of armhole.	Hạ vai 	Establish an extended imaginary line from HPS through HPS. Measure perpendicular from imaginary line to top of armhole.	Hạ vai 	
A002	Shoulder Slope (Raglan/Dolman Sleeve)		A003	Strap Width - Edge to Edge (Tank)
Establish an extended imaginary line from HPS through HPS. At specified point from center back on imaginary line, measure perpendicular to sleeve fold.	xuôi vai 	Measure seam length from neck edge to armhole edge along seam.		
A003.1	Shoulder Seam Length (Standard)		A003.2	Shoulder Seam Length (Dropped Shoulder)
Measure seam length from neck edge to armhole edge along seam.		Measure seam length from neck edge to armhole edge along seam.		

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
A003.3	Strap Width @ 5" down from HPS (Tank)	A004	Shoulder Seam Forward
Establish an imaginary line from HPS through HPS. At 5" down from imaginary line, measure strap width from edge to edge.		Measure from natural fold of shoulder to seam at neck and armhole.	
A004.1	Shoulder Seam Forward at Neck	A004.2	Shoulder Seam Forward at Armhole
Measure from natural fold of shoulder to seam at neck.		Measure from natural fold of shoulder to seam at armhole.	
A004.3	Shoulder Seam Backward at Neck	A004.4	Shoulder Seam Backward at Armhole
Measure from natural fold of shoulder to seam at neck.		Measure from natural fold of shoulder to seam at armhole.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style: EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season: Templates/Admin 0000	Mat. One Desc:	Date Created	Date Modified
Wght/Width:	Mat. One Content:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
Wash/Fin:	Gauge:	JKUBALAK	JKUBALAK
A006 Across Shoulder - Back (Standard)		A007 Shoulder Slope Placement from CBN (Raglan/Dolman)	
On back of garment, measure from top of armhole seam/edge to top of armhole seam/edge.		On back of garment, establish an extended imaginary line from HPS through HPS. At specified measurement given to identify the shoulder placement from CB imaginary line to take shoulder slope measurement.	
Ngang vai sau: đo từ cạnh trên của đường may nách đến đường may nách			
A008 Across Shoulder - Back (Dropped Shoulder)		A009 Across Front (Standard)	
On back of garment, measure from top of armhole seam/edge to top of armhole seam/edge.		At specified point down from front HPS, measure straight from seam/edge to seam/edge.	
Ngang vai sau		Ngang thân trước	
A011 Across Front (Raglan)		A012 Distance between Front Raglan Seams @ Neck Seam	
At specified point down from front HPS, measure straight from raglan seam to raglan seam.		At front neck seam, measure straight from raglan seam to raglan seam.	
Ngang thân trước		K/C giữa đường raglan trước tại đường may cổ	

Design Stage

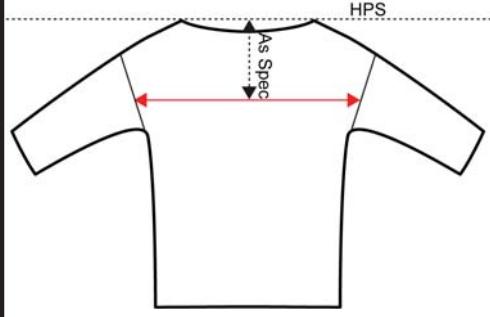
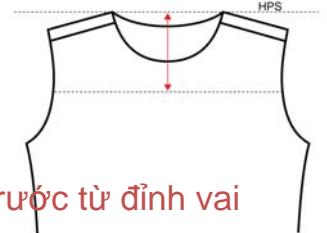
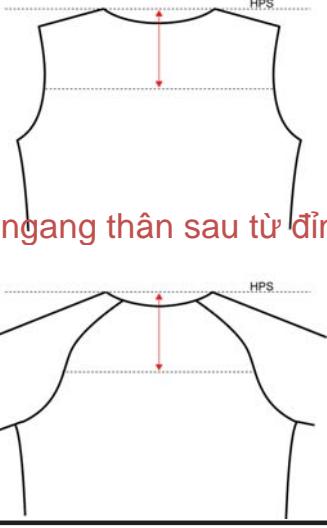
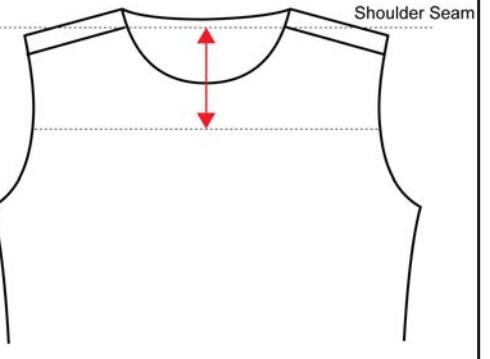
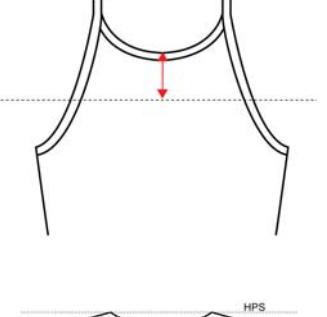
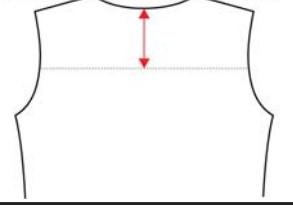
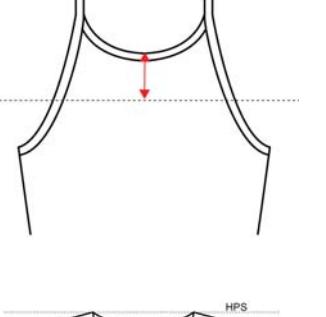
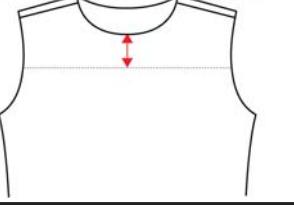
EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style: EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season: Templates/Admin 0000	Mat. One Desc:	Date Created	Date Modified
Wght/Width:	Mat. One Content:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
Wash/Fin:	Gauge:	JKUBALAK	JKUBALAK
End/Yrn Ct:			
A012.1	Distance between Front Raglan Seams @ Neck Edge	A013	Across Front (Dropped Shoulder)
At front neck edge, measure straight from raglan seam to raglan seam.		At specified point down from front HPS, measure straight from seam/edge to seam/edge.	
A014	Across Back (Standard)	A016	Across Back (Raglan)
At specified point down from back HPS, measure straight from seam/edge to seam/edge.		At specified point down from back HPS, measure straight from raglan seam to raglan seam.	
A017	Distance between Back Raglan Seams @ Neck Seam	A017.1	Distance between Back Raglan Seams @ Neck Edge
At back neck seam, measure straight from raglan seam to raglan seam.		At back neck edge, measure straight from raglan seam to raglan seam.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
A018	Across Back (Dropped Shoulder)	A019	Across Front Placement from HPS
At specified point down from back HPS, measure straight from seam/edge to seam/edge.		Establish an imaginary line from HPS through HPS. Measurement given from imaginary line at center front to identify across front placement.	 Vị trí đo ngang thân trước từ đỉnh vai
A019.1	Across Back Placement from HPS	A019.2	Across Front Placement from Shoulder Seam
Establish an imaginary line from HPS through HPS. Measurement given from imaginary line at center back to identify across back placement.	 Vị trí đo ngang thân sau từ đỉnh vai	Establish an imaginary line from shoulder seam at neck point through shoulder seam at neck point. Measurement given from imaginary line at center front to identify across front placement.	
A019.3	Across Back Placement from Neck Seam/Edge	A019.4	Across Front Placement from Neck Seam/Edge
Measurement given from neck seam at center back to identify across back placement.	 	Measurement given from neck seam at center front to identify across back placement.	 

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
A020	Across Back (Racerback)	A021	Front Raglan Placement from HPS - along Neck Seam
At specified point down from HPS, measure straight from seam/edge to seam/edge.		Measure raglan length from HPS to front raglan seam along neck seam.	
A021.1	Front Raglan Placement from HPS - along Neck Edge	A022	Back Raglan Placement from HPS - along Neck Seam
Measure raglan length from HPS to front raglan seam along neck edge.		Measure raglan length from HPS to back raglan seam along neck seam.	
A022.1	Back Raglan Placement from HPS - along Neck Edge	A023	Front Raglan Placement from HPS to Seam (Vertical)
Measure raglan length from HPS to back raglan seam along neck edge.		Measure straight from HPS to front raglan seam at neck seam.	

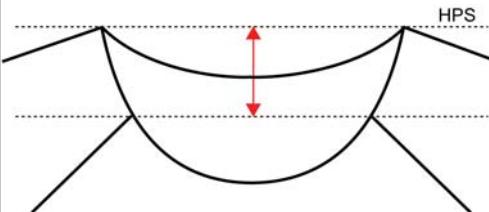
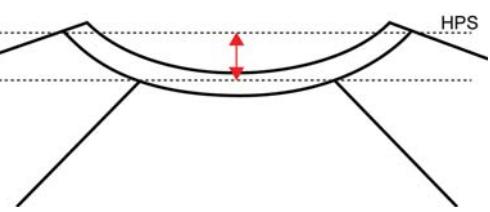
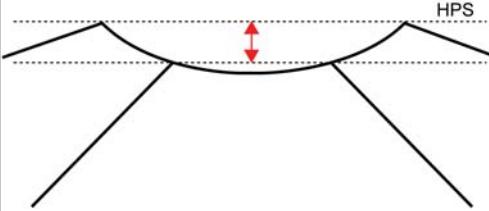
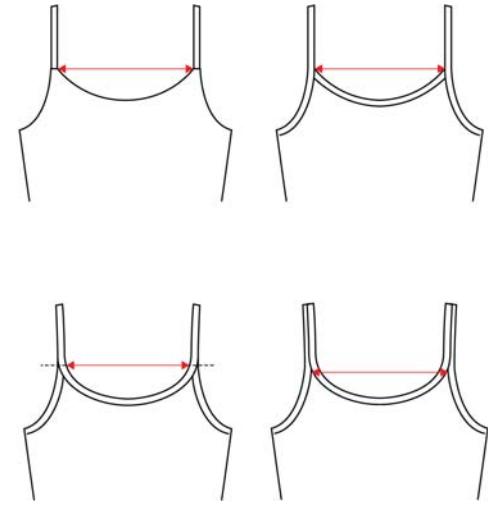
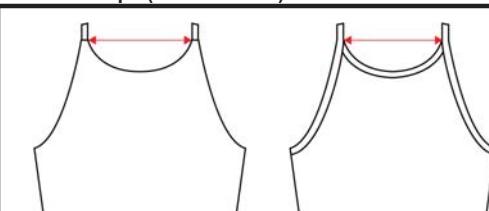
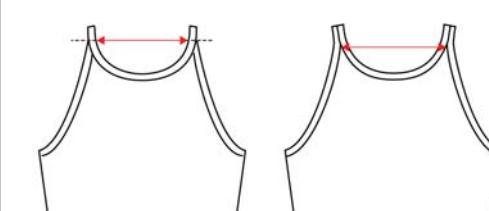
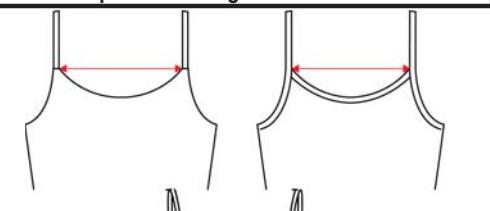
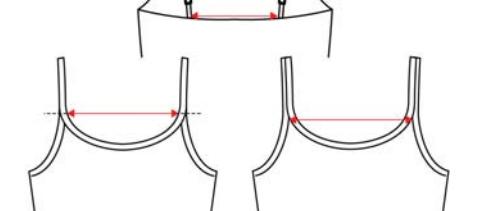
Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

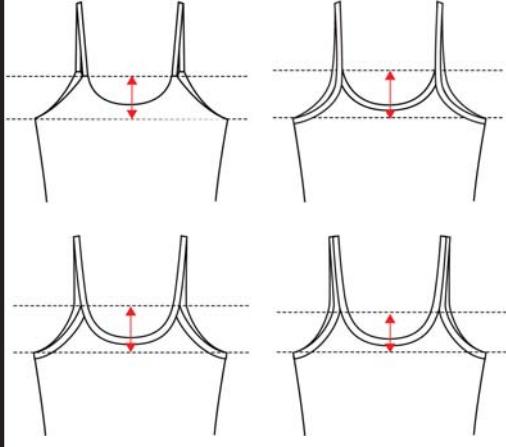
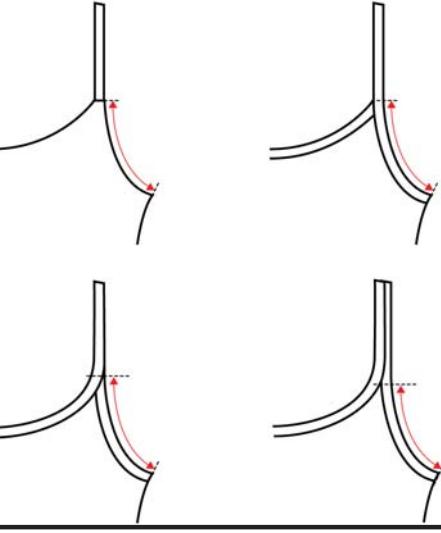
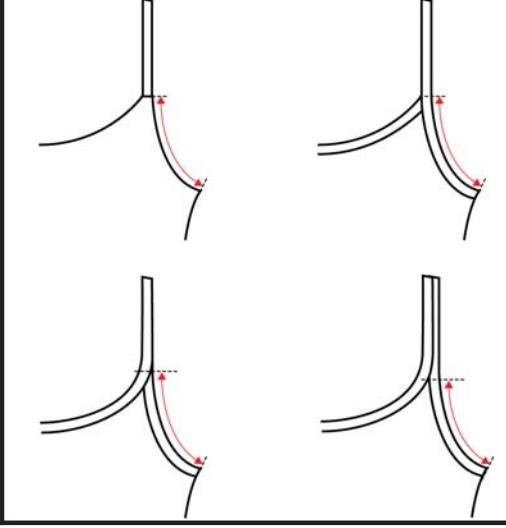
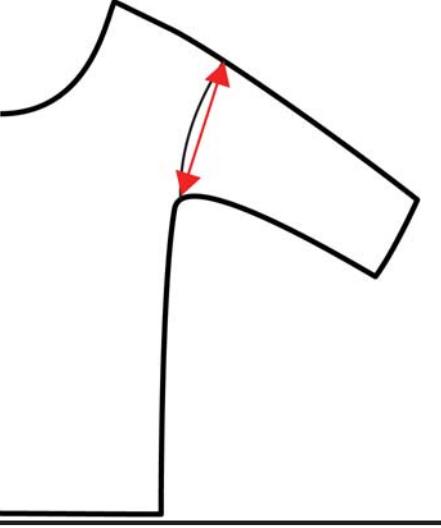
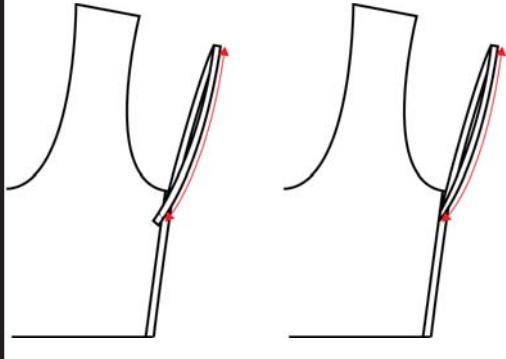
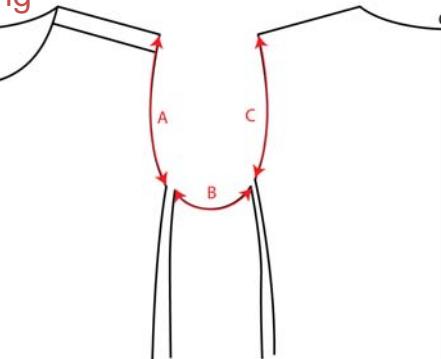
Style	EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season:	Templates/Admin 0000	Mat. One Desc:	Date Created	Date Modified
Wght/Width:		Mat. One Content:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
Wash/Fin:		Gauge:	JKUBALAK	JKUBALAK
		End/Yrn Ct:		

A023.1	Front Raglan Placement from HPS to Edge (Vertical)	A024	Back Raglan Placement from HPS to Seam (Vertical)
Measure straight from HPS to front raglan seam at neck edge.		Measure straight from HPS to back raglan seam at neck seam.	
			
A024.1	Back Raglan Placement from HPS to Edge (Vertical)	A025	Distance Between Front Straps - Inside Edge
Measure straight from HPS to back raglan seam at neck edge.		Measure straight across front from inside edge to inside edge of strap at HPB or strap join.	
			
A025.1	Distance Between Front Straps (Hi Neck Cami)	A026	Distance Between Back Straps - Inside Edge
Measure straight across front from inside edge to inside edge of strap at HPB or strap join.		Measure straight across back from inside edge to inside edge of strap at HPB or strap join.	
 			 

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One Content: Gauge: End/Yrn Ct:	Mat. One ID#: Mat. One Desc: Date Created 09 SEP 2015 03:54 PM JKUBALAK	Description: NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
A026.1	Distance Between Back Straps (Hi Neck Cami)	A027	Across Front – No Closure (AH Seam to Frt Edge)
Measure straight across front from inside edge to inside edge of strap at HPB or strap join.		At specific point, measure across garment from armhole seam to front panel edge.	
Ngang TT từ Dm nách đến cạnh thân trước			
AH001	Armhole - Circumference	AH002	Armhole - Straight (Standard)
Measure front and back armhole along seam/edge.		Measure straight from top of armhole seam/edge to underarm seam/edge. Do not allow sleeve to distort pattern armhole shape. If sleeve fabric is think, slide measuring tool behind the sleeve.	
Vòng nách đo cong			
AH003	Armhole Depth from HPS (Vertical)	AH004	Front Armhole Depth from HPB (Vertical)
Establish an imaginary line from underarm to underarm. Measure from HPS to imaginary line.		Establish an imaginary line from underarm to underarm. Measure from HPB to the imaginary line.	
Hạ nách từ đỉnh vai			

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

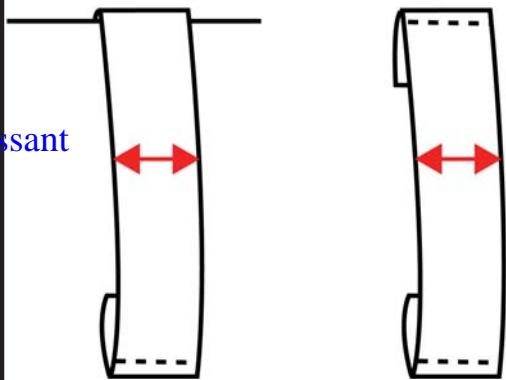
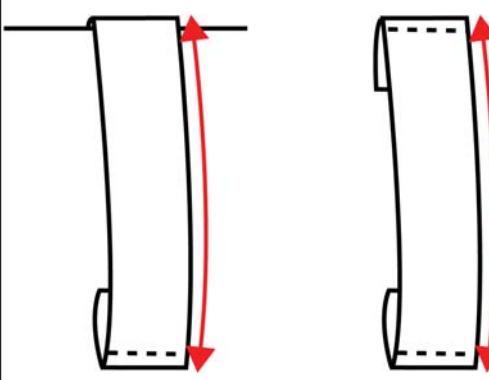
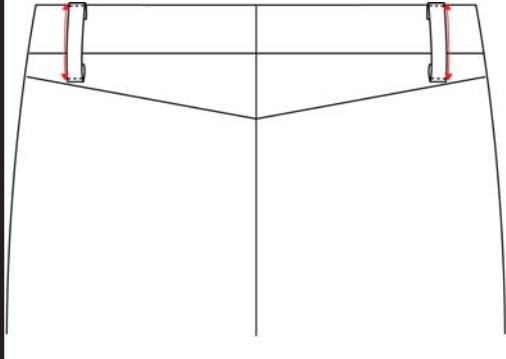
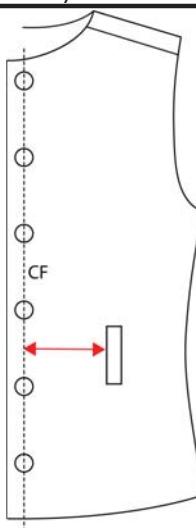
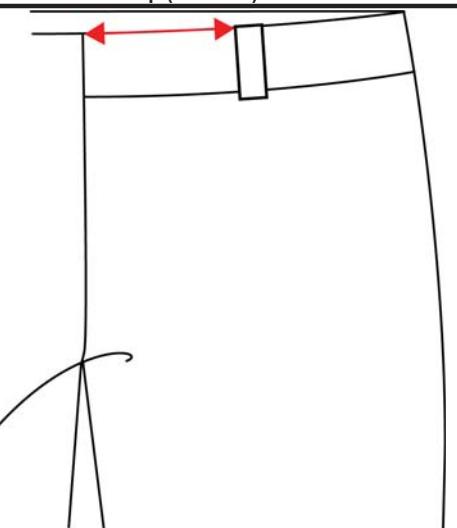
Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
AH005	Back Armhole Depth from HPB (Vertical)	AH006	Ft Armhole Length from SS to HPB - Along Curve
Establish an imaginary line from underarm to underarm. Measure from HPB to the imaginary line.		Measure from high point body to sideseam along curve.	
AH007	Bk Armhole Length from SS to HPB - Along Curve	AH011	Armhole - Straight (Dropped Shoulder)
Measure from high point body to sideseam along curve.		Measure straight from top of armhole seam/edge to underarm seam/edge.	 Nách đo thẳng
AH012	AH Hanger Loop Length (Stitchline/Join to Fold)	AH013	Armhole - Circumference (Jacket w/ Side Panel)
Measure from stitchline/join seam to loop fold.		Measure front and back armhole along seam/edge.	 Vòng nách đo cong $A + B + C = AH001.1$

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	Womens-None
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Modified 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
B001 Belt Loop Width		B002 Belt Loop Length	
Measure edge to edge.		Measure top edge to bottom edge.	
 <p>To bản Passant</p>			 <p>Dài pasant</p>
B002.1 Belt Loop Length (Pant with Yoke)		B003 Belt Loop Placement from HPS @ Front	
Measure top edge to bottom edge.		Measure vertically from HPS to top edge of belt loop.	 <p>Vị trí dây pasant từ đỉnh vai tại trước</p>
B004 Belt Loop Placement from CF (Jackets)		B005 Belt Loop Placement from CF @ Top (Bottoms)	
Measure from center front of garment to edge of belt loop.		Measure from center front of garment to top edge of belt loop.	
			

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
B005.1	Belt Loop Placement from CF @ Bttm (Bottoms)	B006	Belt Loop Placement from Outseam @ Front (Bottoms)
Measure from center front of garment to bottom edge of belt loop.		Measure from outseam to edge of belt loop.	
B006.1	Belt Loop Placement from Outseam @ Back (Bottoms)	B007	Belt Loop from CB (Bottoms)
Measure from outseam to edge of belt loop.		Measure from center back of garment to edge of belt loop.	
B008	Belt Width	B009	Belt Length (Total) - Cntr Buckle to Cntr Grommet
Measure Edge to Edge	 To bản dây belt	Measure from center of belt buckle to center grommet hole.	 dài giữa Khoen đến lỗ giữa khoen

Design Stage

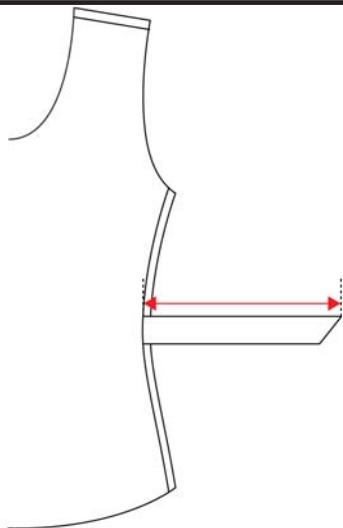
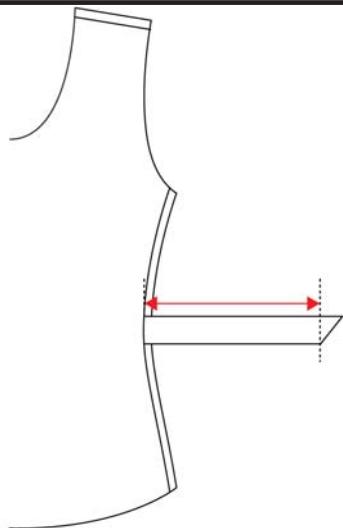
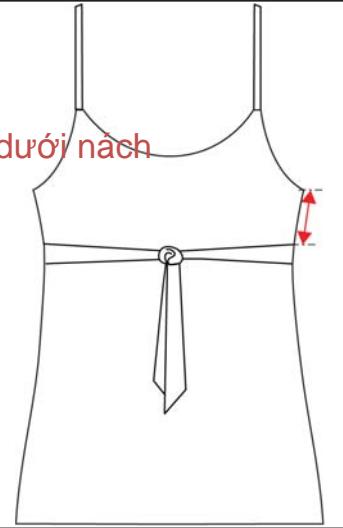
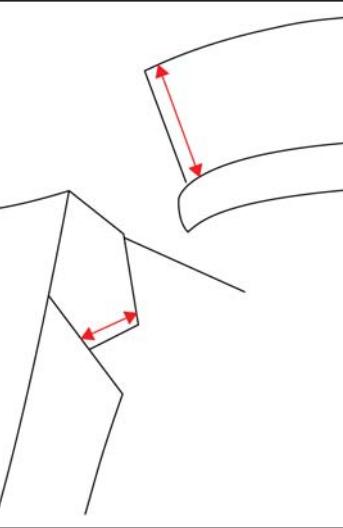
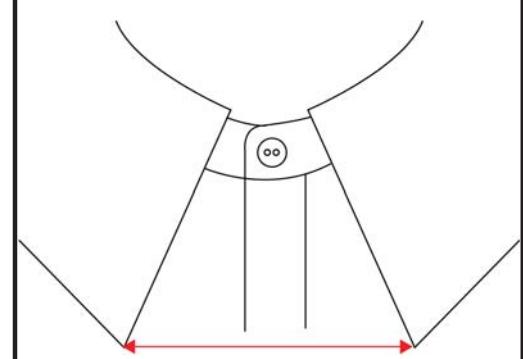
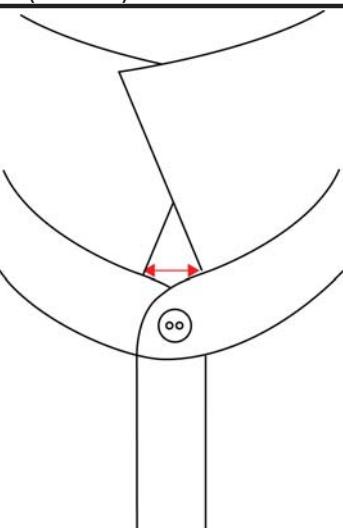
EXPRESS How to Measure guide (TOTAL CO)

Womens-None

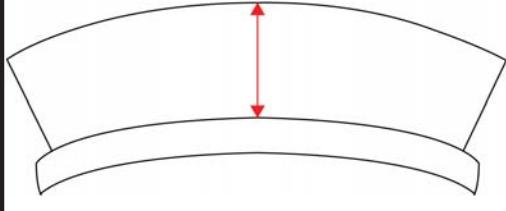
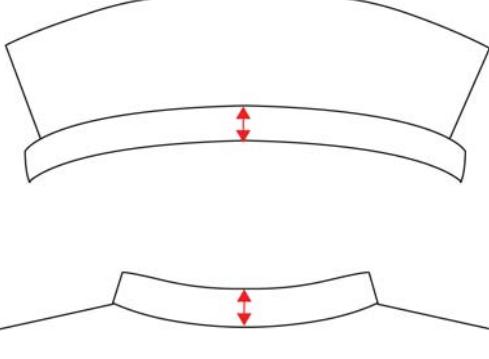
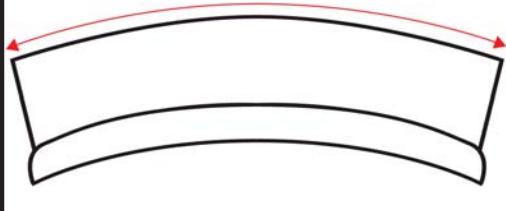
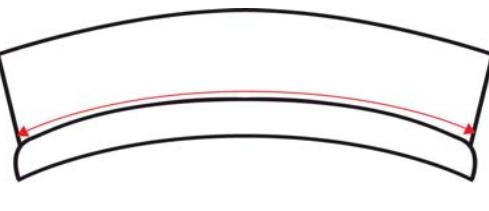
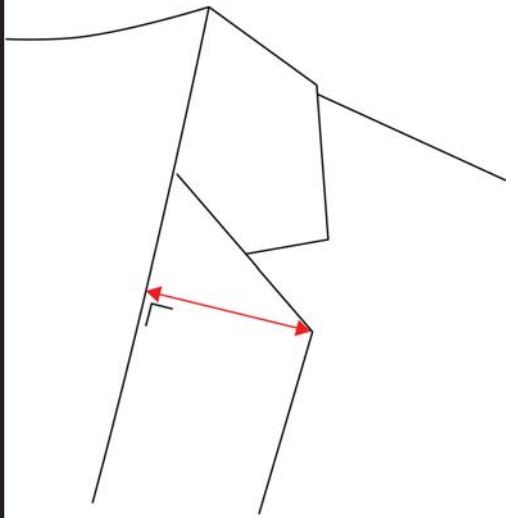
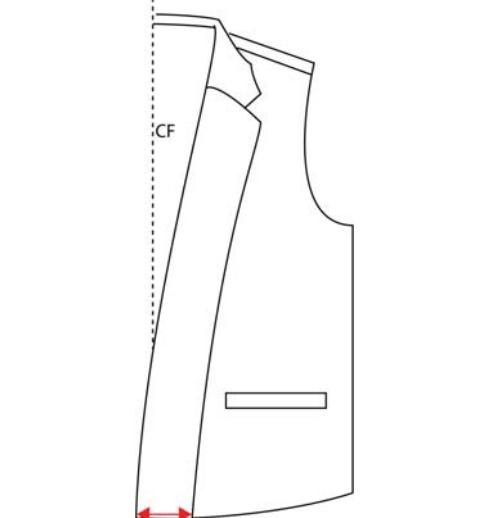
WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style: EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season: Templates/Admin 0000	Mat. One Desc:	Date Created	Date Modified
Wght/Width:	Mat. One Content:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
Wash/Fin:	Gauge:	JKUBALAK	JKUBALAK
End/Yrn Ct:			
B010	Belt Length - Cntr Grommet to End (Longest Point)	B010.1	Belt Length - Cntr Grommet to End (Shortest Point)
Measure from center grommet hole to belt end at longest point.		Measure from center grommet hole to belt end at shortest point.	
	dài dây từ lỗ khuy giữa đến đầu dây		
B011	Grommet Hole Spacing - Cntr to Cntr	B012	Tie Belt Width
Measure center grommet hole to center grommet hole.		Measure edge to edge.	
		To bản dây Eo	
B013	Tie Belt Length (Total) @ Longest Point	B013.1	Tie Belt Length (Total) @ Shortest Point
Measure from end to end at longest point.		Measure from end to end at shortest point.	
	Dài dây belt		

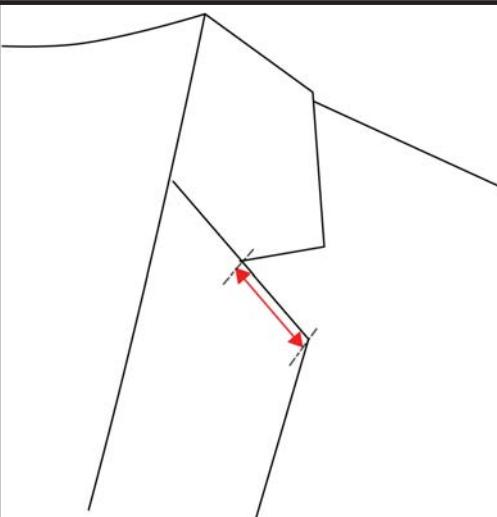
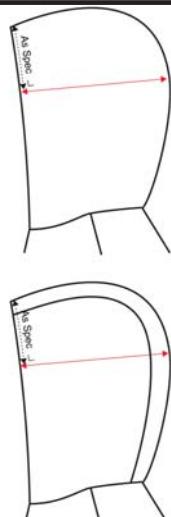
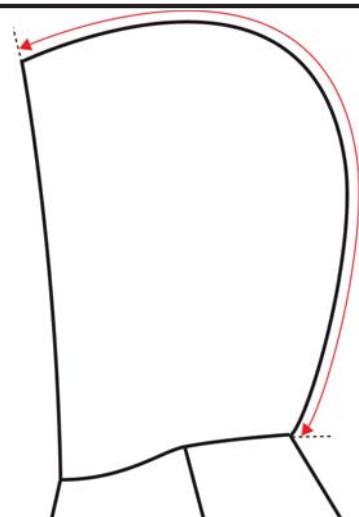
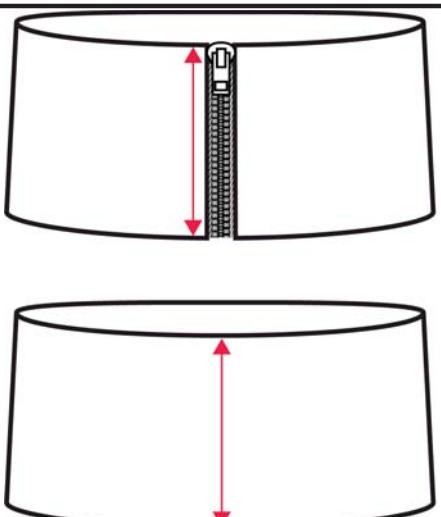
WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
B014	Tie Belt Length from SS to End @ Longest Point	B014.1	Tie Belt Length from SS to End @ Shortest Point
Measure from side seam to end of belt at longest point.		Measure from side seam to end of belt at shortest point.	
B015	Waist Tie/Belt Placement from Armhole Seam/Edge	C001	Collar Point
Measure from underarm to top of tie at sideseam. Vị trí gắn dây eo dưới nách		Measure from base of collar to edge. Cạnh cổ	
C002	Collar Point Spread - On Form (base size)	C003	Collar Tie Space - On Form (base size)
With garment on body/form and collar closed, measure straight from collar point to collar point.		With garment on body form, neckband buttoned and collar turned up, measure straight from base of collar to base of collar.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
C004	Collar Height at CB Measure from top edge to seam at center back.	C005 To bản lá cổ tại giữa sau Measure seam to seam at center back.	Collar Stand Height at CB To bản chân cổ tại giữa sau
			
C006	Collar Length at Outer Edge - Curve Measure along outside curve from edge to edge.	C007 Collar Length at Seam Measure along seam from collar edge to collar edge.	
	Dài lá cổ tại cạnh ngoài - đo cong 		
C008	Lapel Width At widest point, measure from lapel edge to lapel fold, perpendicular to fold line.	C008.1 Lapel Width @ Bottom Opening At front bottom hem edge, measure from lapel edge to lapel fold, perpendicular to fold line.	
	Rộng ve 		

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

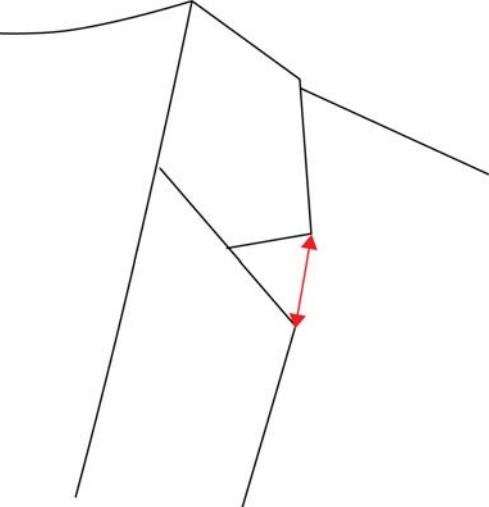
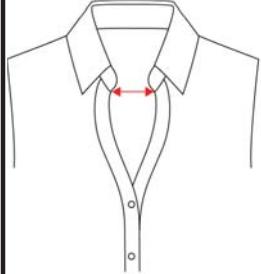
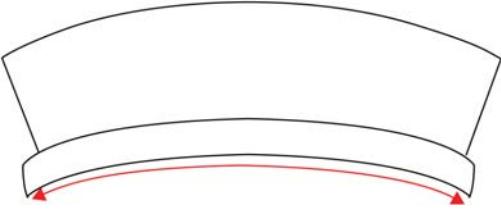
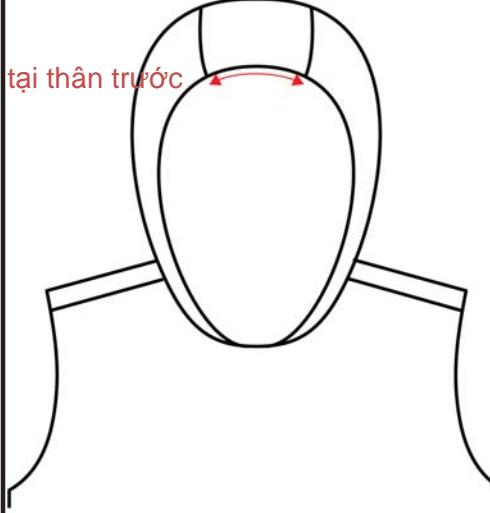
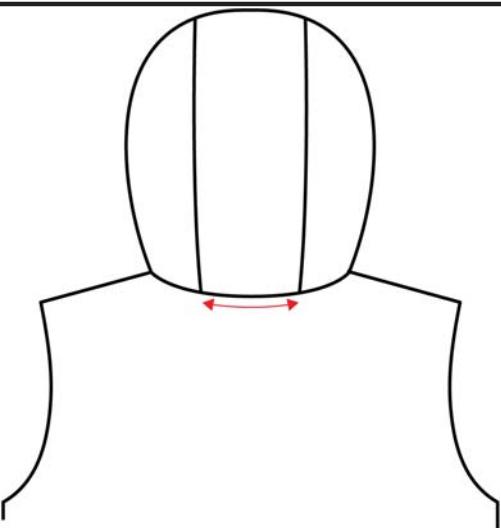
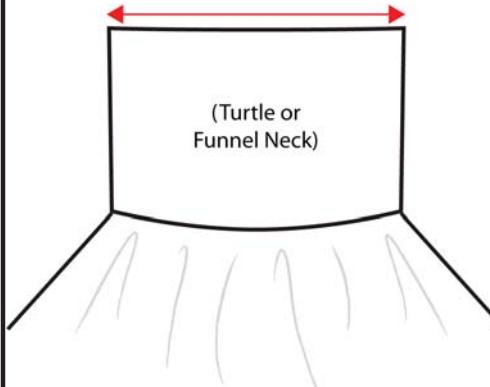
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
C009	Lapel Point	C010	Hood Width _ " from CF Top Edge
Measure from collar join seam to edge of lapel.	 Cạnh ve	Measure across hood width at point specified, with edges aligned.	 Rộng nón
C011	Hood Height at CF	C011.1	Hood Height at HPS
Measure from neck seam to top of hood along opening with front edges aligned.		Measure from neck seam to top of hood at HPS with front edges aligned.	
C012	Hood Length from CB Neck	C013	Collar Height at CF
Measure from center back neck seam to front edge following contour of hood, with front edges aligned.		Measure from top edge to seam at center front.	 to bản lá cổ tại giữa trước

Design Stage

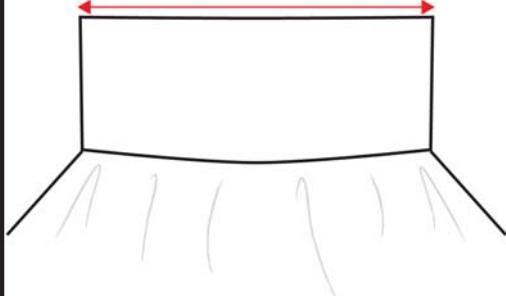
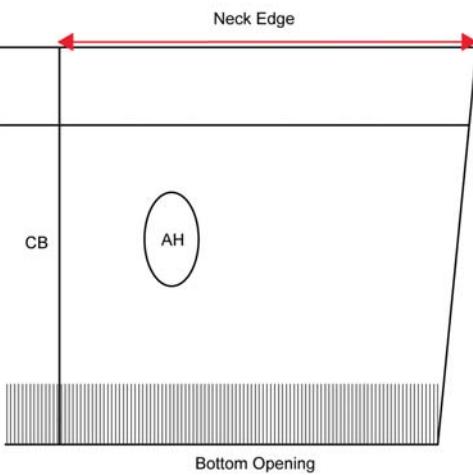
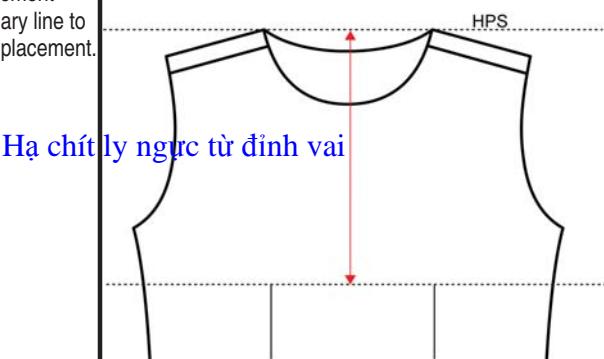
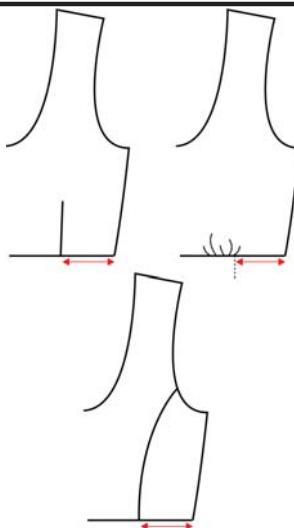
EXPRESS How to Measure guide (TOTAL CO)

Womens-None

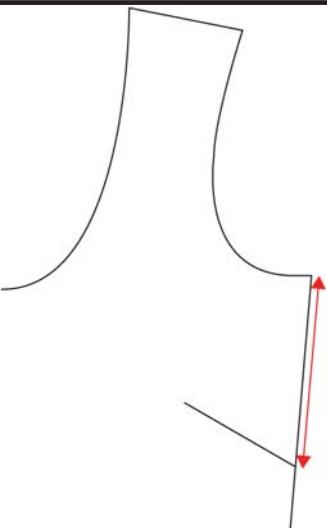
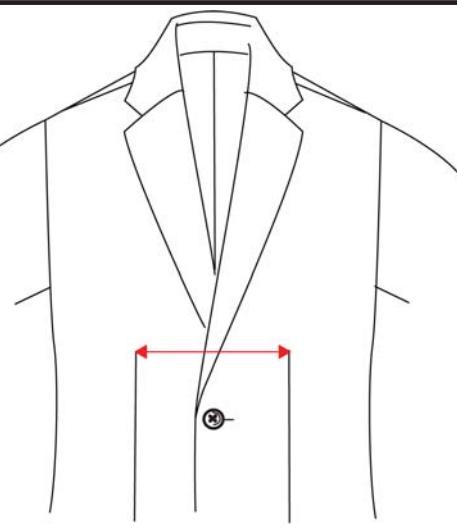
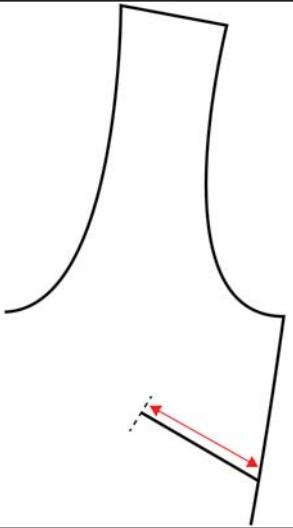
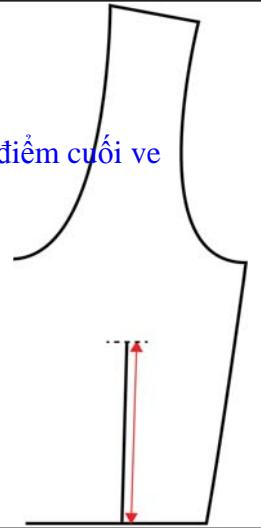
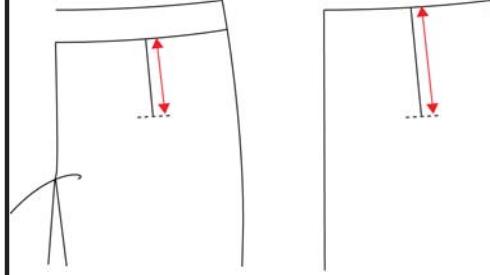
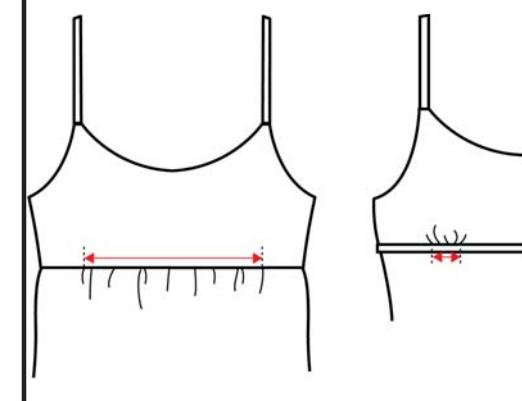
WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
C014	Lapel Notch Spread	C016	Placket Spacing Y Placket - On Form (base size)
Measure from edge of lapel to collar edge.	 <i>độ hở ve</i>	With garment on body/form, measure from edge to edge at base of collarband.	
C017	Collar Stand Length at Neck Seam	C018	Hood Panel Width @ Front Opening
Measure along neck seam from edge to edge.		Measure from seam to seam along front opening. <i>Rộng sóng nón tại thân trước</i>	
C019	Hood Panel Width @ Back Neck Seam	C020	Collar Opening @ Top-Edge to Edge (Narrow)
Measure from seam to seam along back neckline.		Measure across top from edge to edge with top edges aligned.	 (Turtle or Funnel Neck)

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style: EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season: Templates/Admin 0000	Mat. One Desc:	Date Created	Date Modified
Wght/Width:	Mat. One Content:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
Wash/Fin:	Gauge:	JKUBALAK	JKUBALAK
End/Yrn Ct:			
C020.1	Collar Opening @ Top-Edge to Edge (Wide)	C021	Collar Length from CBN - Boxy No Closure
Measure across top from edge to edge with top edges aligned.		Measure along collar/front panel edge from center back neck seam to front edge.	
D001	Bust Dart Plcmnt from HPS	D002	Dart/Shirring/Pleat/Princess Sm Plcmnt from CF
Establish an imaginary line from HPS to HPS on front of garment. Measurement given from imaginary line to identify dart point placement.		Measurement given from center front to identify dart/shirring/pleat/princess seam placement.	
D003	Dart/Shirring/Pleat/Princess Sm Plcmnt from CB	D004	Dart/Shirring/Pleat/Princess Sm Plcmnt from SS
Measurement given from center back to identify dart/shirring/pleat/princess seam placement.		Measurement given from sideseam to identify dart/shirring/pleat/princess seam placement.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

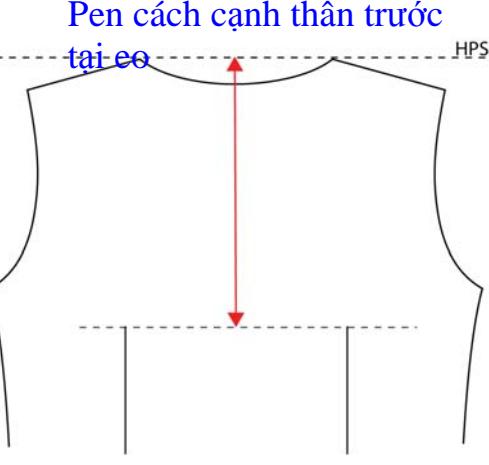
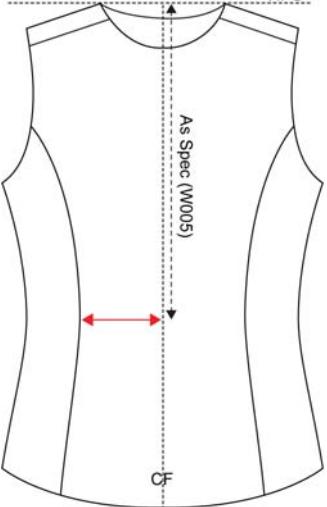
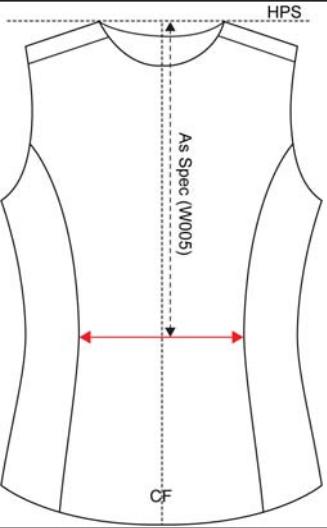
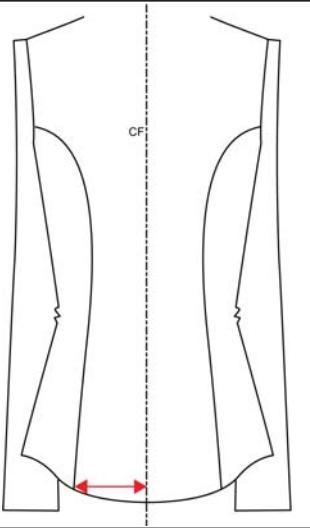
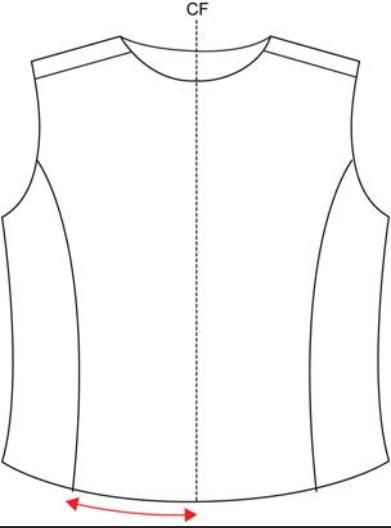
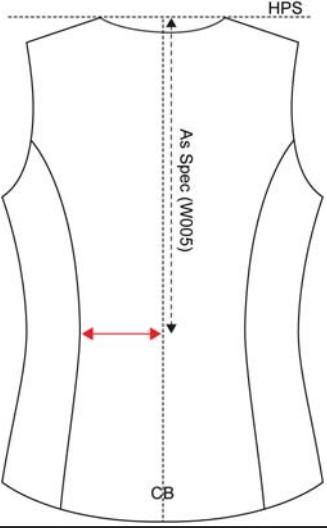
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
D005	Bust Dart Plcmnt from Underarm	D006	Dart Spacing from Point to Point at Top of Dart
Measurement given from underarm to identify dart placement at sideseam.		Measure straight from point to point at top of dart.	
D007	Bust Dart Length - SS to Dart Point	D007.1	Bust Dart Length - Waist Sm to Dart Point
Measure from point of dart to seam.		Measure from point of dart to seam. Dài ly ngực từ DM eo đến điểm cuối ve	
D008	Dart Length (Bottoms)	D009	Shirring Width @
Measure from point of dart to seam/edge.		Measure from edge to edge of shirring with garment relaxed.	

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

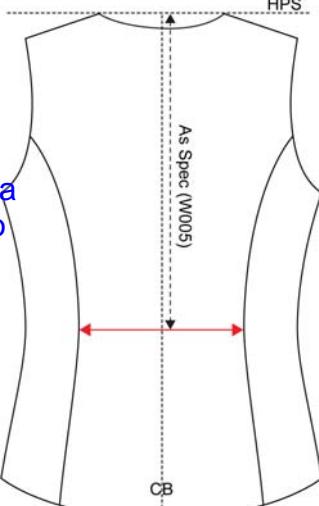
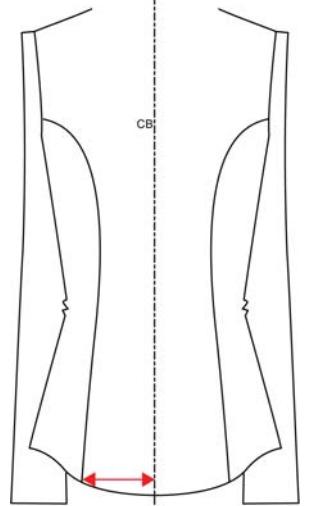
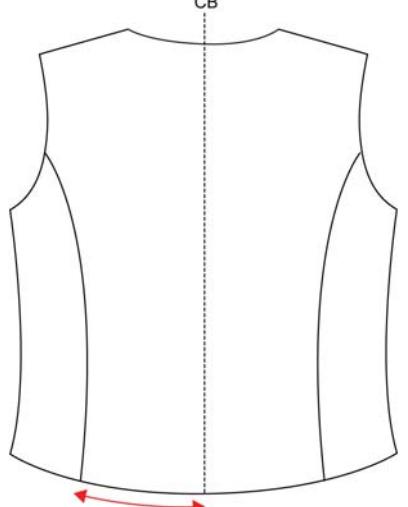
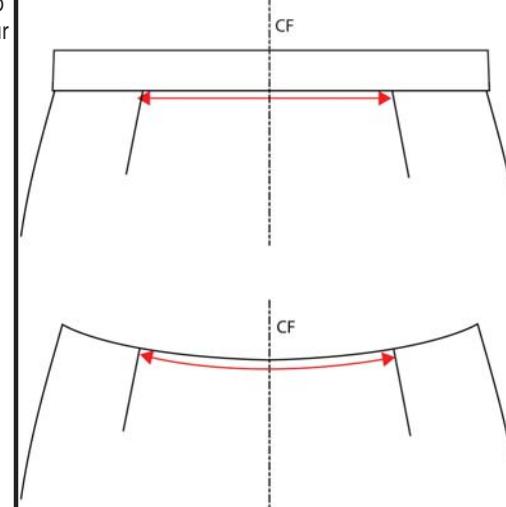
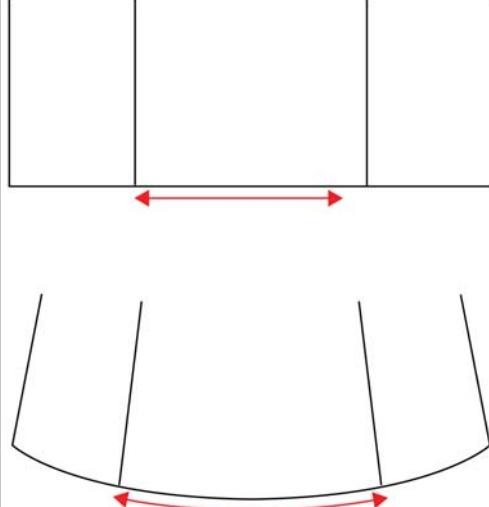
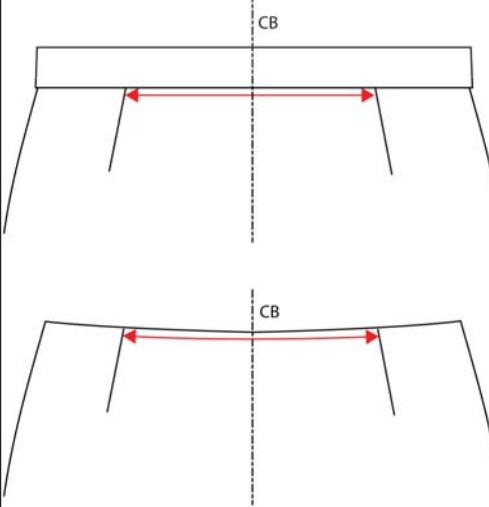
Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	Womens-None
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
D010	Back Dart Plcmnt from HPS	D011	Dart/Seam from CF @ Specified Waist Placement
Establish an imaginary line from HPS to HPS on back of garment. Measurement given from imaginary line to identify dart point placement.		Measure straight from CF to Dart/Seam at specified waist placement.	
D011.1	Frt Dart/Seam Spacing @ Specified Waist Placement	D012	Dart/Seam from CF @ Hem - Straight
Measure straight at front body from seam to seam at specified waist placement.		Measure straight from CF to Dart/Seam.	
D012.1	Dart/Seam from CF @ Hem - Along Edge	D013	Dart/Seam from CB @ Specified Waist Placement
Measure along edge from CF to Dart/Seam.		Measure straight from CB to Dart/Seam at specified waist placement.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style	EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season:	Templates/Admin 0000	Mat. One Desc:	Date Created	Date Modified
Wght/Width:		Mat. One Content:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
Wash/Fin:		Gauge:	JKUBALAK	JKUBALAK

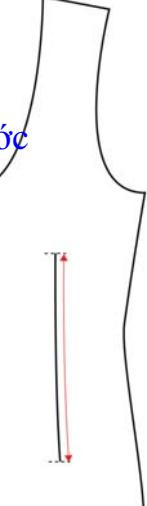
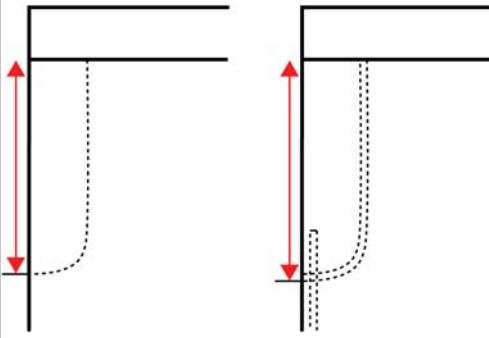
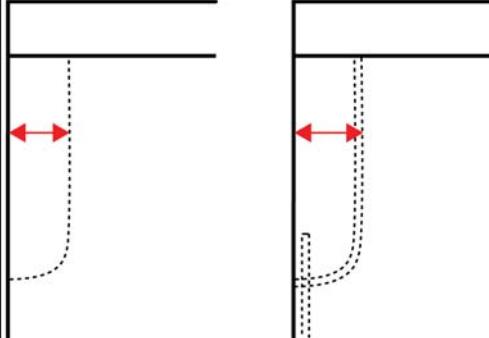
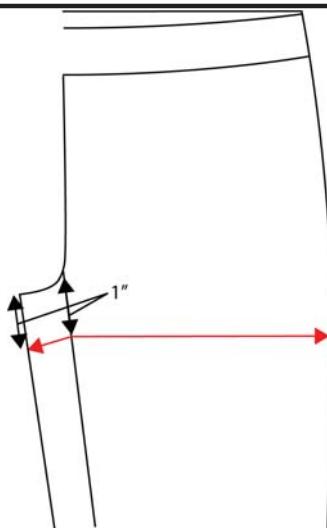
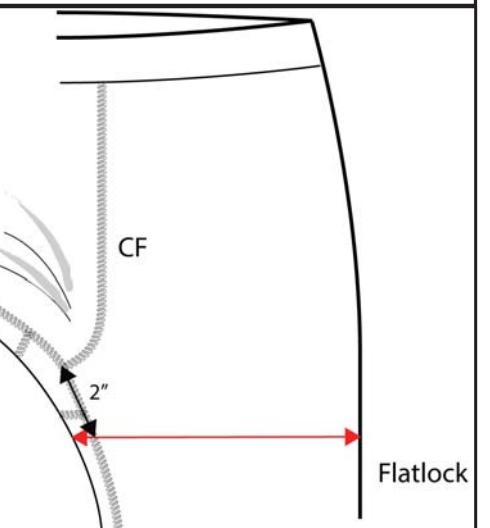
D013.1	Bk Dart/Seam Spacing @ Specified Waist Placement	D014	Dart/Seam from CB @ Hem - Straight
Measure straight at front body from seam to seam at specified waist placement.	 khoảng cách giữa 2 chèn sau tại eo	Measure straight from CB to Dart/Seam.	
D014.1	Dart/Seam from CB @ Hem - Along Edge	D016	Distance Between Dart/Seam @ Top-on Front (Bttms)
Measure along edge from CB to Dart/Seam.	 Khoảng cách từ decoup đến giữa TS	Measure from Dart/Seam to Dart/Seam following contour of waist seam.	
D017	Distance Between Dart/Seam @ Hem - on Front	D018	Distance Between Dart/Seam @ Top - on Back (Bttms)
Measure from Dart/Seam to Dart/Seam following contour of hem edge.		Measure from Dart/Seam to Dart/Seam following contour of waist seam.	

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

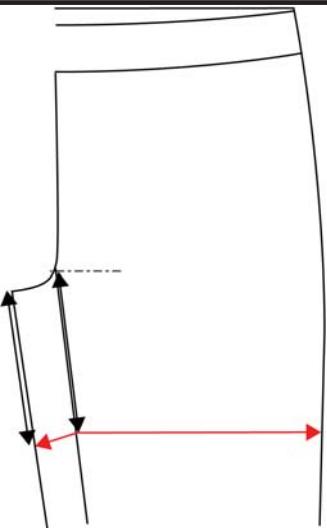
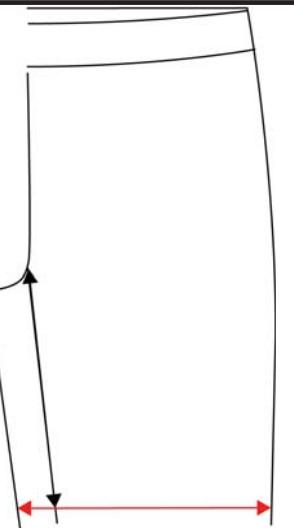
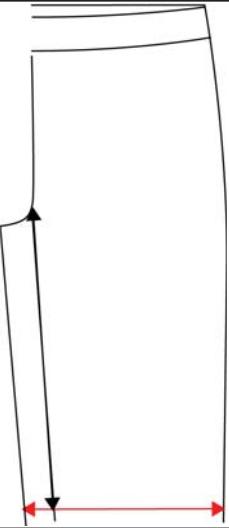
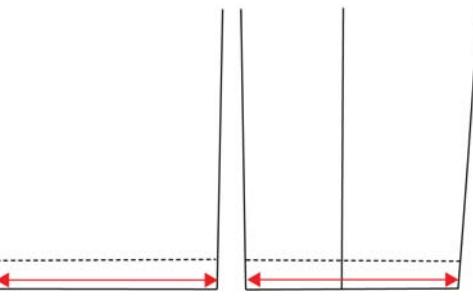
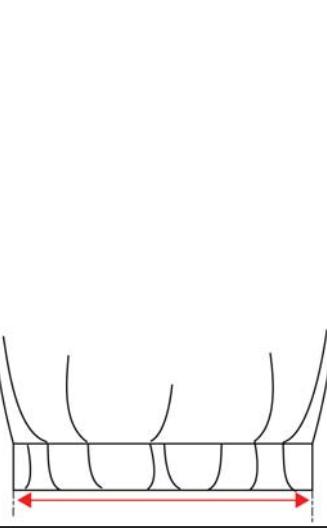
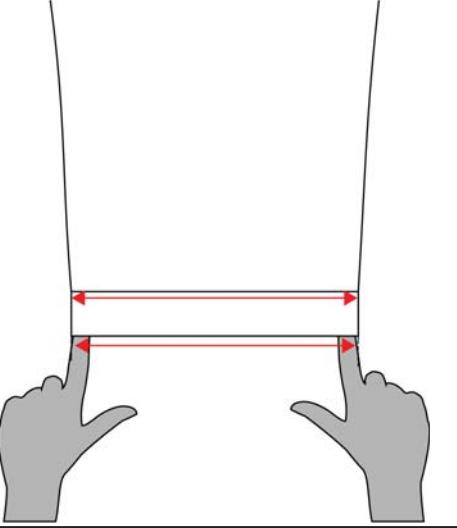
Style: EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season: Templates/Admin 0000	Mat. One Desc:	Date Created:	Date Modified
Wght/Width:	Mat. One Content:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
Wash/Fin:	Gauge:	JKUBALAK	JKUBALAK
D019	Distance Between Dart/Seam @ Hem - on Back		
Measure from Dart/Seam to Dart/Seam following contour of hem edge.		Measure from dart point to dart point along seam.	
	Khoảng cách giữa 2 decuop thân sau		Dài chít pen thân trước
F001	Fly/J-Stitch Length		
Measure from bottom of waistband seam along front edge to lowest stitchline.		Measure from front edge to outer stitchline of fly.	
	Dài Paget		
G001	Thigh 1" from Crotch		
At specified point below crotch, measure across leg edge to edge, parallel to bottom opening. For creased garments, measure from fold to fold.		At specified point below crotch, measure across leg edge to edge, parallel to bottom opening.	
	Đùi cách đáy 1"		

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

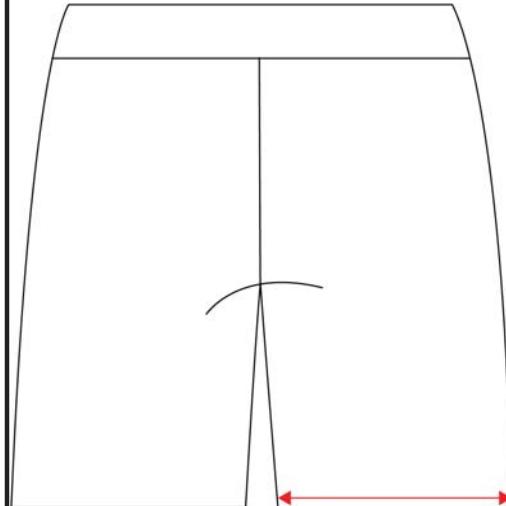
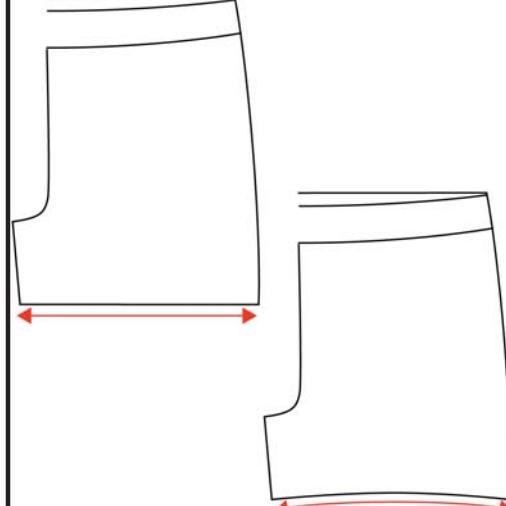
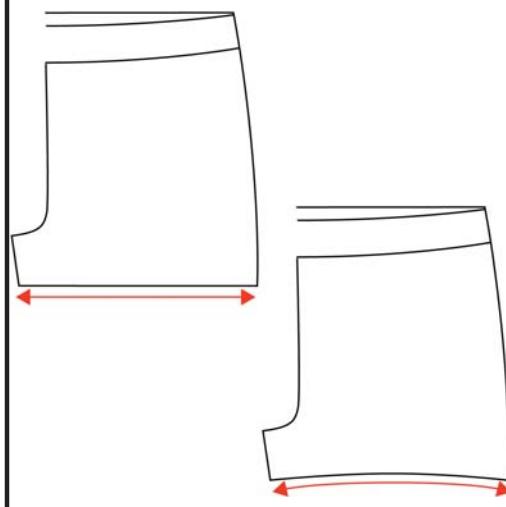
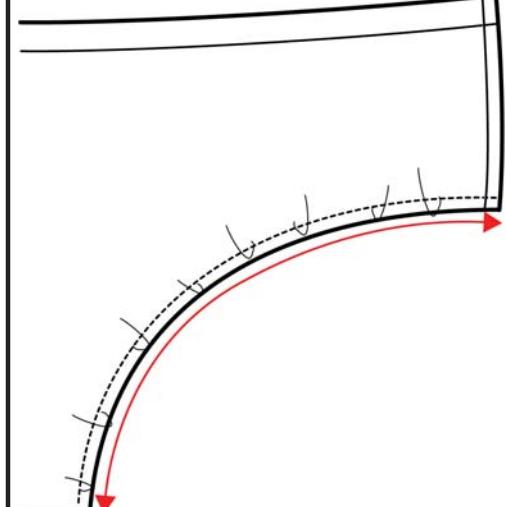
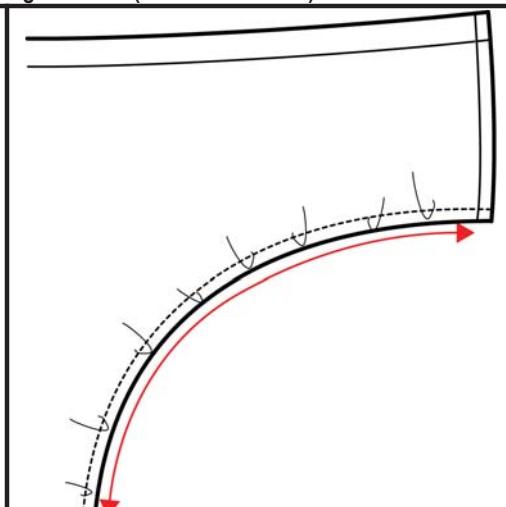
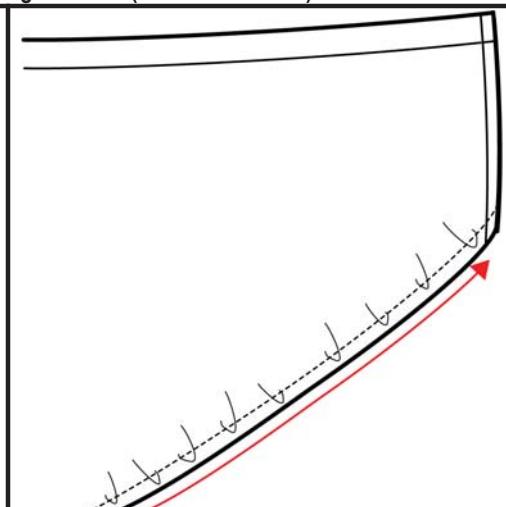
Design Stage	EXPRESS How to Measure guide (TOTAL CO)		Womens-None
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
G003	Mid-thigh _" from Crotch	G004	Knee _" from Crotch
At specified point below crotch, measure across leg edge to edge, parallel to bottom opening. For creased garments, measure from fold to fold.		Measure knee ___ " from crotch. Ngang gối	
G004.1	Calf _" from Crotch	G005	Leg Opening (Below Knee)
Measure calf ___ " from crotch.		With inseam and outseam aligned, measure leg opening edge to edge. For creased garments, measure from fold to fold.	
G005.1	Leg Opening - Relaxed (Below Knee)	G005.2	Leg Opening - Extended (Below Knee)
Measure opening edge to edge with garment relaxed.		Measure opening edge to edge with garment extended until fabric is flat.	

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
G006	Leg Opening - Short (10" to 14" Inseam)	G007	Leg Opening - Short (6" to 10" Inseam)
Measure opening edge to edge.		Measure opening edge to edge.	
G008	Leg Opening - Short (0" to 6" Inseam)	G017	Leg Opening - Relaxed (Panties)
Measure opening edge to edge.		Measure along leg on edge of elastic keeping front and back edges aligned with garment relaxed.	
G017.1	Front Leg Opening - Relaxed (Panties w/ Gusset)	G017.2	Back Leg Opening - Relaxed (Panties w/ Gusset)
Measure from crotch seam to sideseam following front leg curve with garment relaxed.		Measure from crotch seam to sideseam following back leg curve with garment relaxed.	

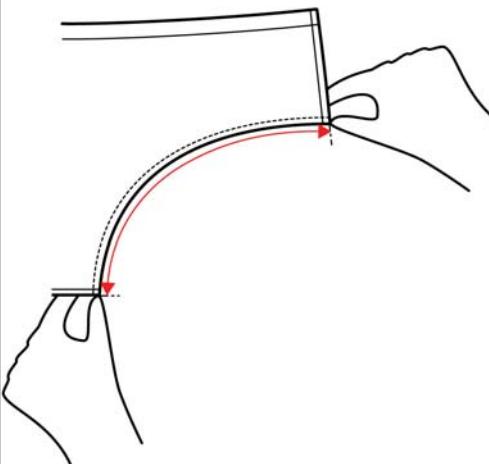
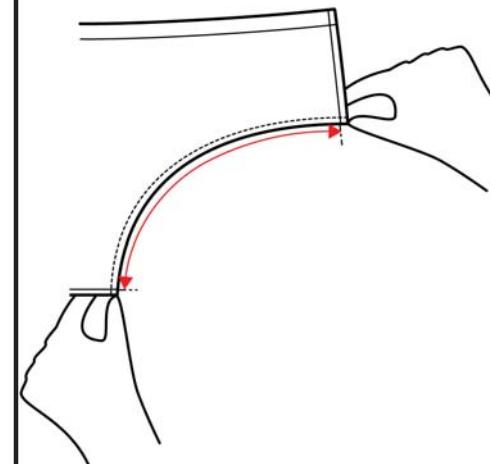
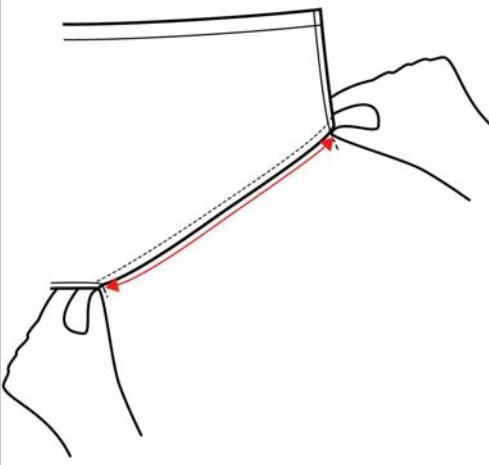
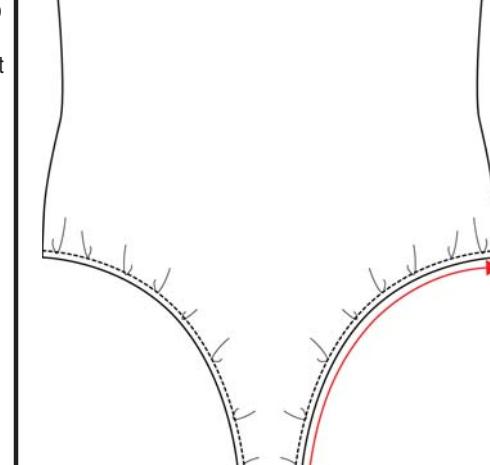
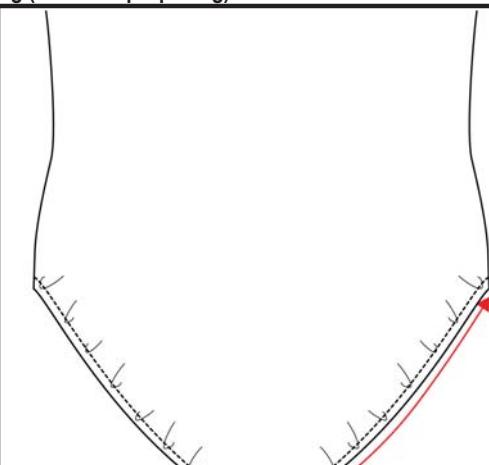
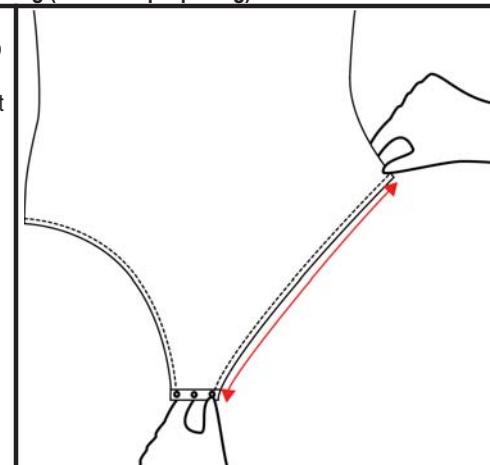
Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style	EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season:	Templates/Admin 0000	Mat. One Desc:		
Wght/Width:		Mat. One Content:	Date Created	Date Modified
Wash/Fin:		Gauge:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
		End/Yrn Ct:	JKUBALAK	JKUBALAK

G018	Leg Opening - Extended (Panties)	G018.1	Front Leg Opening - Extended (Panties w/ Gusset)
Measure along leg on edge of elastic keeping front and back edges aligned with garment extended until fabric is flat.		Measure from crotch seam to sideseam following front leg curve with garment extended until fabric is flat.	
			
G018.2	Back Leg Opening - Extended (Panties w/ Gusset)	G019	Front Leg Opening (SS to Snap Opening) - Relaxed
Measure from crotch seam to sideseam following back leg curve with garment extended until fabric is flat.			With snap tape open, measure from edge of snap tape to sideseam following front leg curve with garment relaxed.
			
G019.1	Back Leg Opening (SS to Snap Opening) - Relaxed	G020	Front Leg Opening (SS to Snap Opening) - Extended
With snap tape open, measure from edge of snap tape to sideseam following back leg curve with garment relaxed.			With snap tape open, measure from edge of snap tape to side seam following front leg curve with garment extended until fabric is flat.
			

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

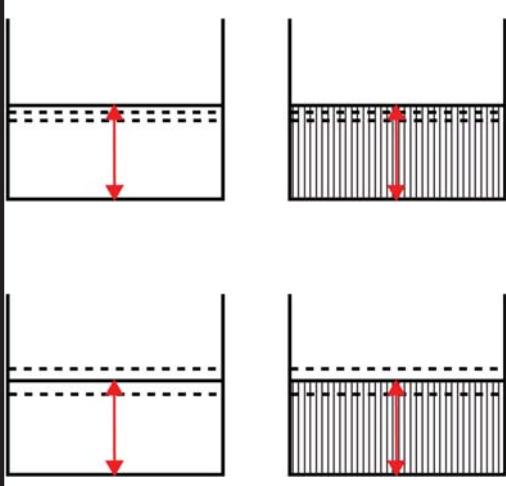
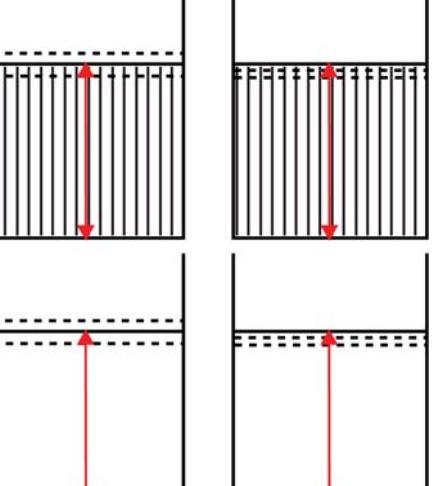
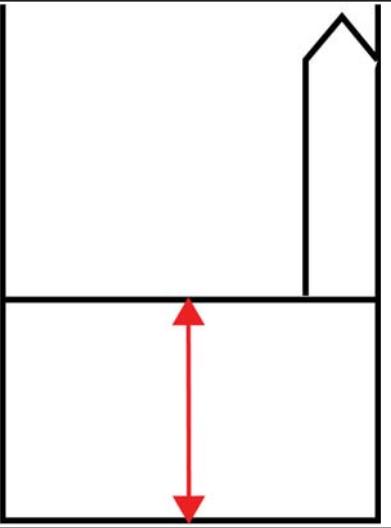
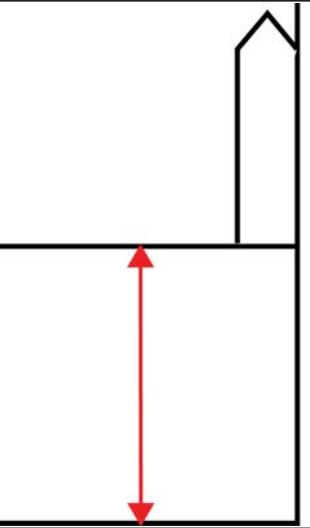
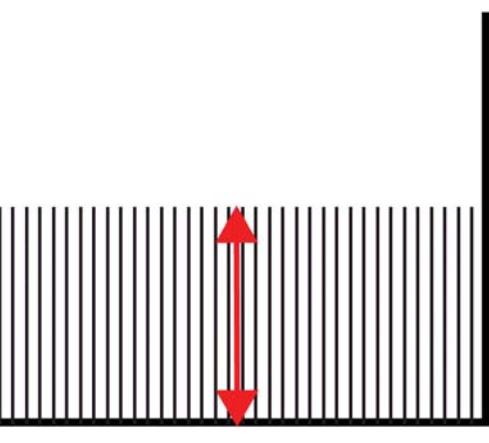
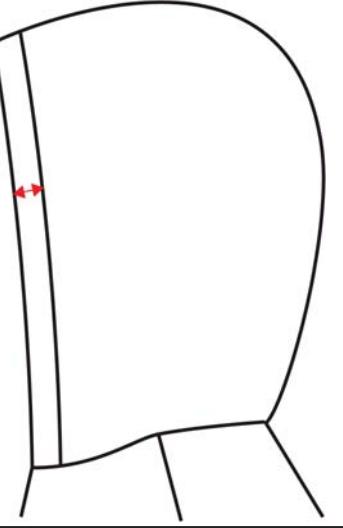
Style: EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season: Templates/Admin 0000	Mat. One Desc:	Date Created:	Date Modified
Wght/Width:	Mat. One Content:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
Wash/Fin:	Gauge:	JKUBALAK	JKUBALAK
End/Yrn Ct:			
G020.1	Back Leg Opening (SS to Snap Opening) - Extended	H001	Hem Height @ Bottom Opening
With snap tape open, measure from edge of snap tape to side seam following back leg curve with garment extended until fabric is flat.		Measure from edge of garment to top stitchline. to bản lai	
H002	Band Height @ Bottom Opening - Less than 3"	H002.1	Band Height @ Bottom Opening - More than 3"
Measure from edge of garment to seam.		Measure from edge of garment to seam.	
H003	Sweater Hem Height @ Bottom Opening	H004	Hem Height @ Sleeve Opening
Measure from edge of garment to transition point.		Measure from edge of garment to top stitchline.	

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

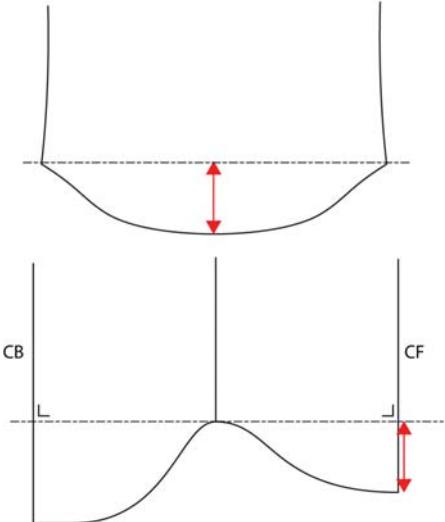
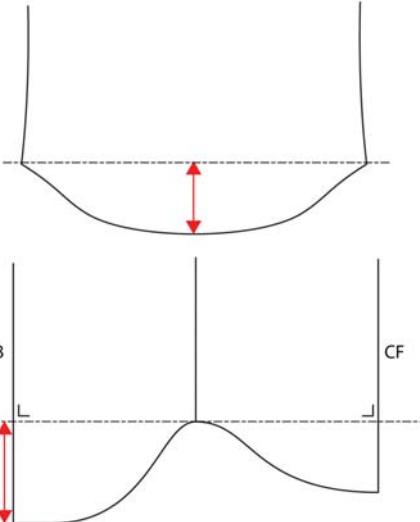
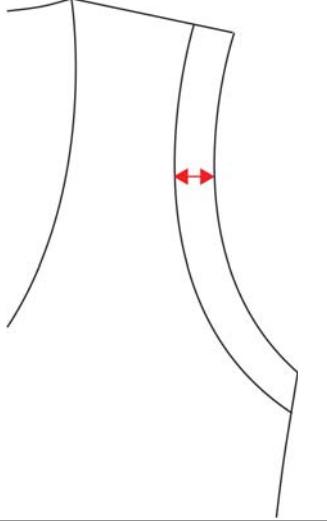
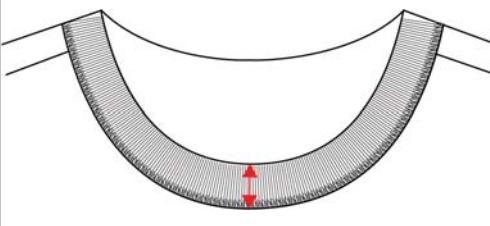
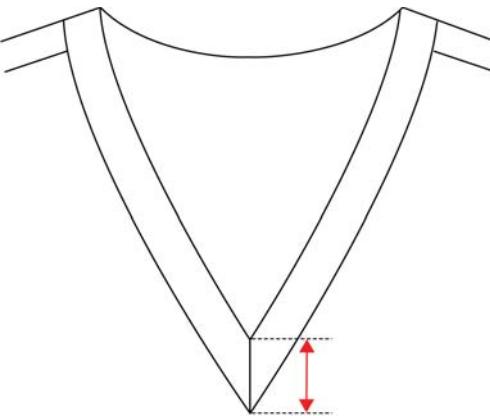
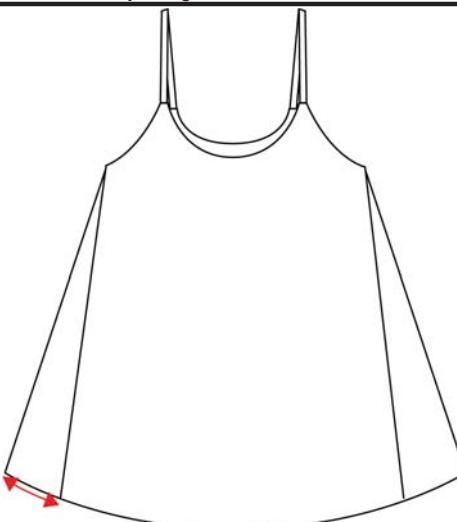
Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
H006	Band Height @ Sleeve Opening - Less than 3"	H006.1	Band Height @ Sleeve Opening - More than 3"
Measure from edge of garment to seam.		Measure from edge of garment to seam.	
H007	Cuff Height @ Sleeve Opening - Less than 3"	H007.1	Cuff Height @ Sleeve Opening - More than 3"
Measure seam to edge. <i>To bản cửa tay</i>		Measure from edge of garment to seam.	
H008	Sweater Hem Height @ Sleeve Opening	H009	Hood Trim Height
Measure from edge of garment to transition point.		Measure from edge of garment to seam.	

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

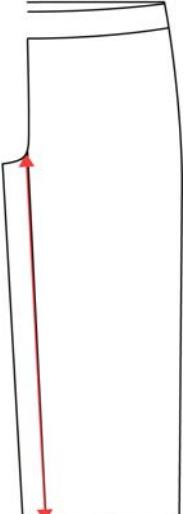
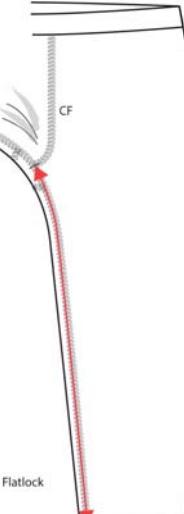
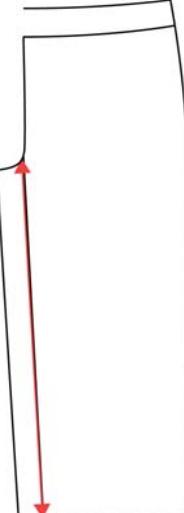
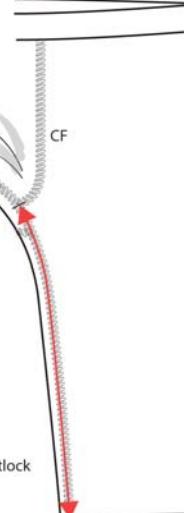
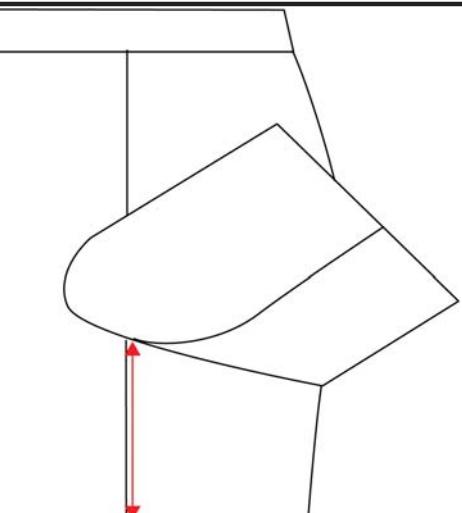
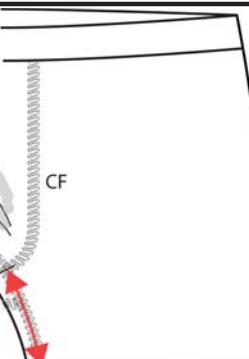
Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
H010	Shirt Tail Height @ CF	H011	Shirt Tail Height @ CB
Establish an imaginary line at base of sideseam to sideseam. Measure from imaginary line to bottom edge at center front.		Establish an imaginary line at base of sideseam to sideseam. Measure from imaginary line to bottom edge at center back.	
H012	Armhole Trim Height	H013	Neck Trim Height
Measure from edge to edge.		Measure from top edge to bottom seam.	
H013.1	CF Miter Height	H014	Sideseam Forward @ Bottom Opening
Measure from top edge to bottom seam at center front miter.		Measure from fold to sideseam along bottom opening.	

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	Womens-None
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
I001	Inseam (Over 25")	I001.1	Inseam (Over 25") - Gusset Styles
Measure from crotch seam along seam to bottom edge. For felled seam, measure from center of fell at crotch.		Measure from crotch seam along inseam to bottom edge. For felled seam, measure from center of fell at crotch.	
Đường dâng			Flatlock
I002	Inseam (6" to 25")	I002.1	Inseam (6" to 25") - Gusset Styles
Measure from crotch seam along seam to bottom edge. For felled seam, measure from center of fell at crotch.		Measure from crotch seam along inseam to bottom edge. For felled seam, measure from center of fell at crotch.	
			Flatlock
I003	Inseam (0" to 6")	I003.1	Inseam (0" to 6") - Gusset Styles
Measure from crotch seam along seam to bottom edge. For felled seam, measure from center of fell at crotch.		Measure from crotch seam along inseam to bottom edge. For felled seam, measure from center of fell at crotch.	
			Flatlock

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

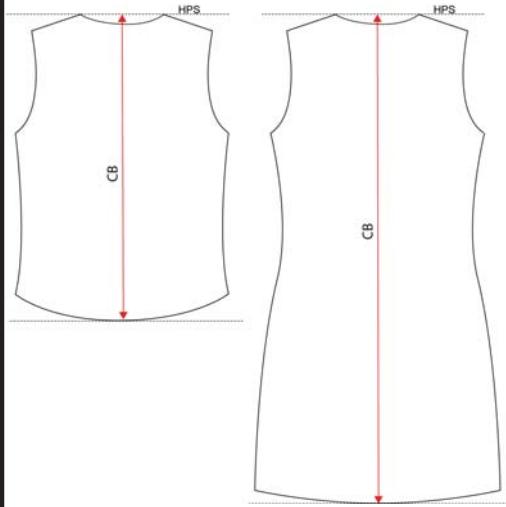
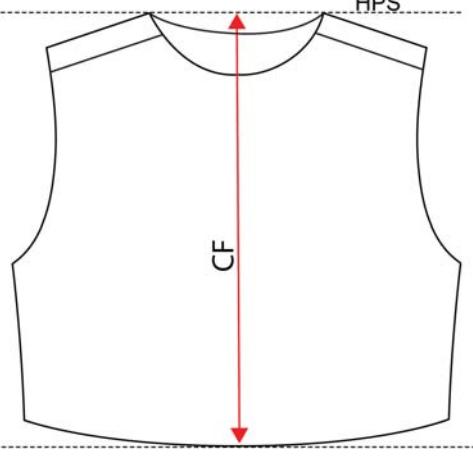
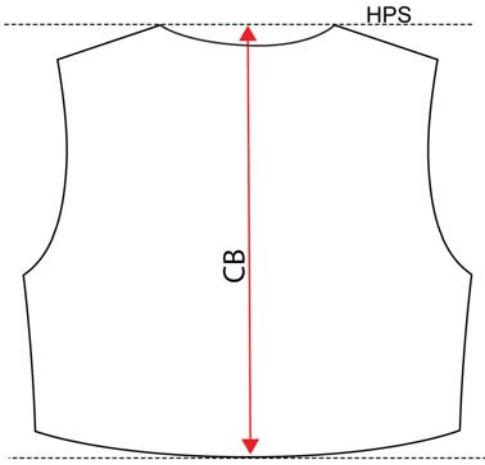
Style: EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season: Templates/Admin 0000	Mat. One Desc:	Date Created:	Date Modified
Wght/Width:	Mat. One Content:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
Wash/Fin:	Gauge:	JKUBALAK	JKUBALAK
K001 CF Position fm Natural Waist - On Form (base size)		K002 CB Position fm Natural Waist - On Form (base size)	
With garment on body/form, measure from center of tape at waist to top edge of garment.	Vị trí giữa thân trước từ eo tự nhiên - trên thân mặc áo lên thân, đo từ giữa của dây tape đến cạnh trên của sản phẩm	With garment on body/form, measure from center of tape at waist to top edge of garment.	Vị trí giữa thân sau từ eo tự nhiên - trên thân mặc áo lên thân, đo từ giữa của dây tape đến cạnh trên của sản phẩm
K003 SS Position fm Natural Waist - On Form (base size)		K004 Crossover fm Natural Waist - On Form (base size)	
With garment on body/form, measure from center of tape at waist to top edge of garment.		With garment on body/form, measure from center of tape at waist to crossover point.	
		K005 Slit fm Natural Waist - On Form (base size)	
With garment on body/form, measure from center of tape at waist to top edge of slit.		Establish an imaginary line from HPS to HPS on front of garment. Measure from imaginary line to bottom edge at center front.	
		L001 CF Length from HPS - On Flat	
		Dài áo TT từ đỉnh vai	

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
L001.1	CB Length from HPS - On Flat	L001.2	CF Length from HPS (Crops) - On Flat
Establish an imaginary line from HPS to HPS on back of garment. Measure from imaginary line to bottom edge at center back.		Establish an imaginary line from HPS to HPS on front of garment. Measure from imaginary line to bottom edge at center front.	
L001.3	CB Length from HPS (Crops) - On Flat	L001.4	CF Length from HPS (Maxi-GRADED) - On Flat
Establish an imaginary line from HPS to HPS on back of garment. Measure from imaginary line to bottom edge at center back.		Establish an imaginary line from HPS to HPS on front of garment. Measure from imaginary line to bottom edge at center front.	
L001.5	CB Length from HPS (Maxi-GRADED) - On Flat	L001.6	CF Length from HPS (Maxi-REDUCE-GRADE) - On Flat
Establish an imaginary line from HPS to HPS on back of garment. Measure from imaginary line to bottom edge at center back.		Establish an imaginary line from HPS to HPS on front of garment. Measure from imaginary line to bottom edge at center front.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

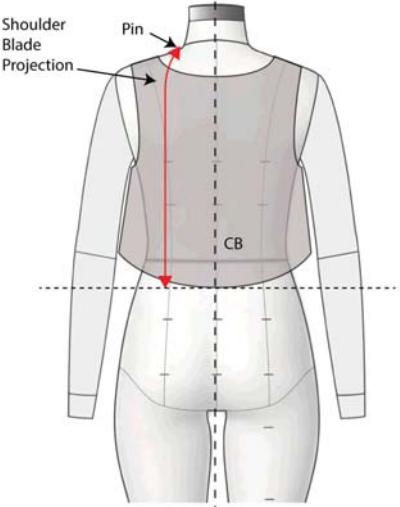
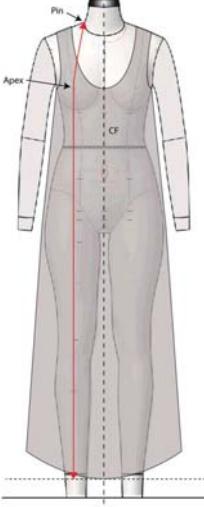
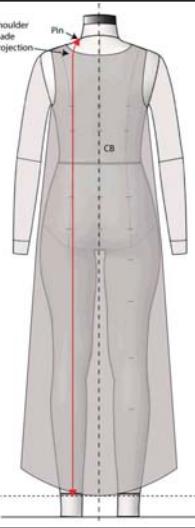
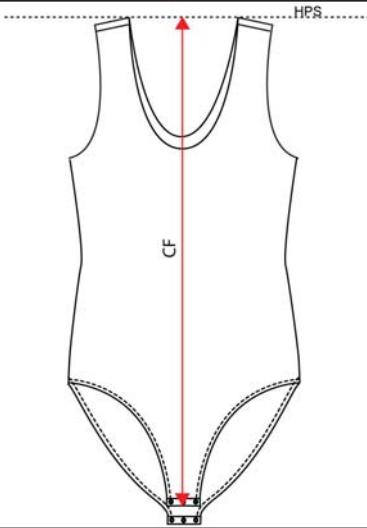
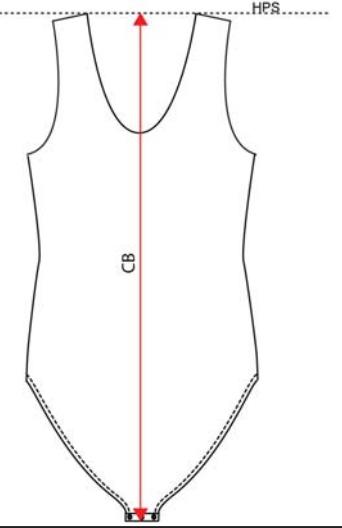
Style	EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season:	Templates/Admin 0000	Mat. One Desc:	Date Created	Date Modified
Wght/Width:		Mat. One Content:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
Wash/Fin:		Gauge:	JKUBALAK	JKUBALAK
End/Yrn Ct:				
L001.7	CB Length from HPS (Maxi-REDUCE-GRADE) - On Flat	L002	CB Length from Neck Seam	
Establish an imaginary line from HPS to HPS on back of garment. Measure from imaginary line to bottom edge at center back.		Measure from center back neck seam to bottom edge.		Dài thân sau từ đường may cổ
L002.1	CB Length from Neck Edge	L003	CF Length from HPS - On Form (base size)	
Measure from center back neck edge to bottom edge.		With garment on body/form, measure from highest point of form at HPS Pin to bottom edge.		Dài thân trước từ đỉnh vai (mặc lên thân)
L003.1	CB Length from HPS - On Form (base size)	L003.2	CF Length from HPS - On Form (base size) (Crops)	
With garment on body/form, measure from highest point of form at HPS Pin to bottom edge.		With garment on body/form, measure from highest point of form at HPS PIN to bottom edge.		

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

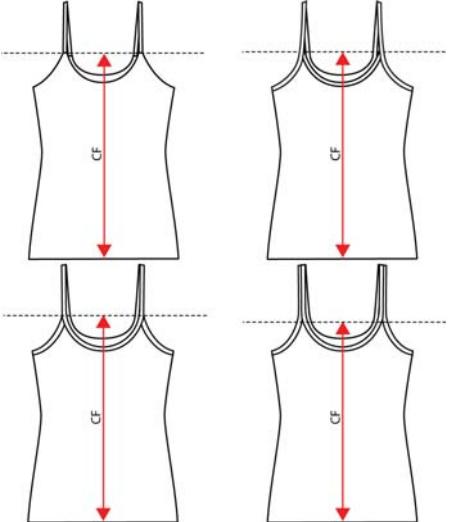
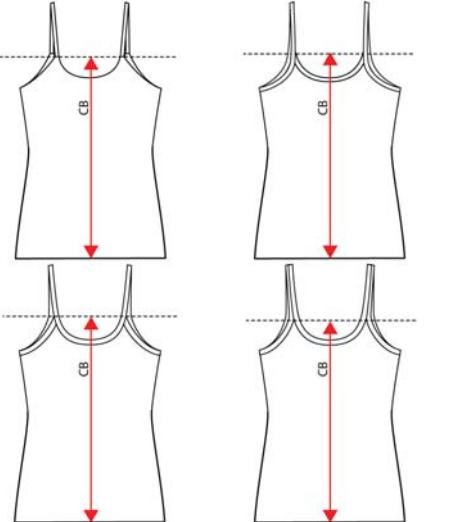
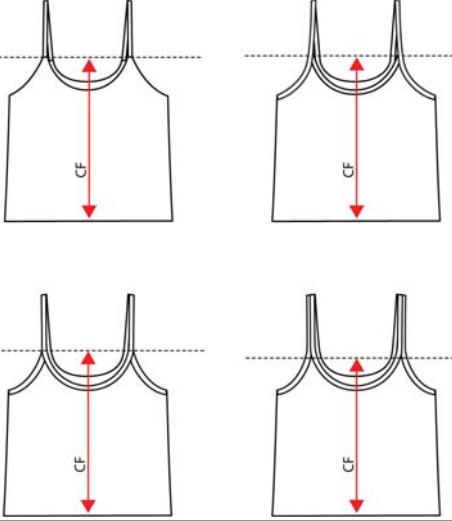
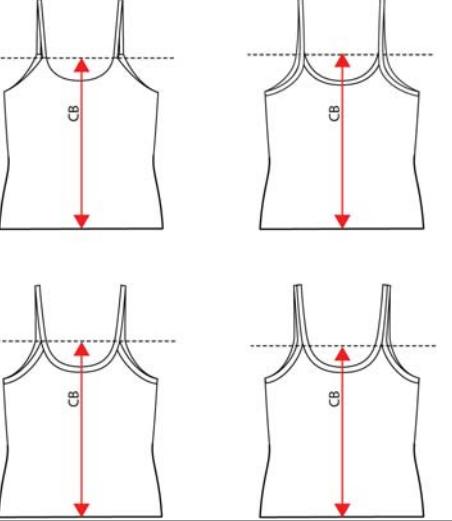
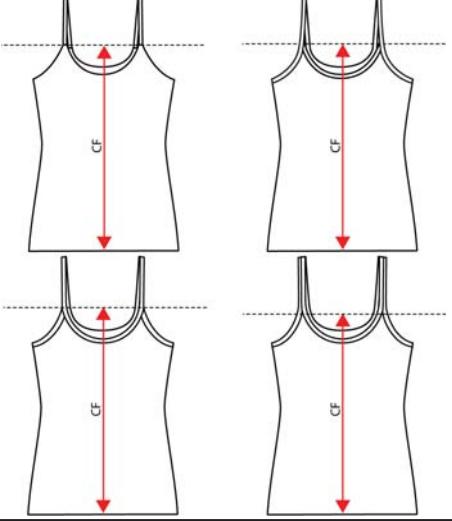
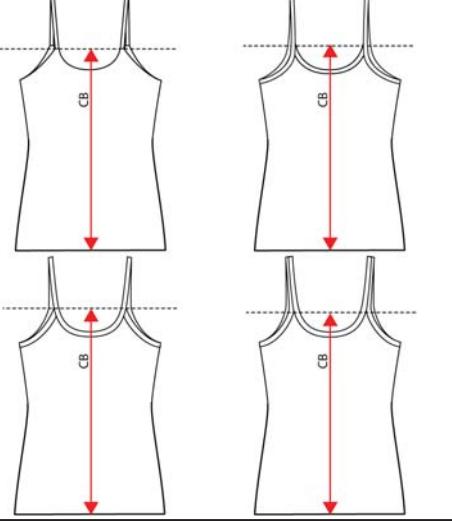
Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
L003.3 CB Length from HPS - On Form (base size) (Crops)	L003.4 CF Length from HPS - On Form (base size) (Maxi)		
With garment on body/form, measure from highest point of form at HPS PIN to bottom edge.		With garment on body/form, measure from highest point of form at HPS PIN to bottom edge.	
L003.5 CB Length from HPS - On Form (base size) (Maxi)	L004 CF Length from HPS to Crotch (Unsnapped)		
With garment on body/form, measure from highest point of form at HPS PIN to bottom edge.		Establish an imaginary line from HPS to HPS. With garment unsnapped, measure from center of imaginary line at center front to crotch edge.	
L004.1 CB Length from HPS to Crotch (Unsnapped)	L005 CF Length from Shoulder Seam at Neck		
Establish an imaginary line from HPS to HPS. With garment unsnapped, measure from center of imaginary line at center back to crotch edge.		Establish an imaginary line from shoulder seam to shoulder seam at neck point on front of garment. Measure from imaginary line to bottom edge at center front. <i>dài Thân trước từ đường may vai</i>	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style	EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season:	Templates/Admin 0000	Mat. One Desc:	Date Created	Date Modified
Wght/Width:		Mat. One Content:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
Wash/Fin:		Gauge:	JKUBALAK	JKUBALAK

L006	CF Length from HPB - On Flat (Cami)	L006.1	CB Length from HPB - On Flat (Cami)	
Establish an imaginary line from HPB to HPB. Measure from imaginary line at center front to bottom edge.		Establish an imaginary line from HPB to HPB. Measure from imaginary line at center back to bottom edge.		
				
L006.2 CF Length from HPB (Cami) (Crops)		L006.3 CB Length from HPB (Cami) (Crops)		
Establish an imaginary line from HPB to HPB. Measure from imaginary line at center front to bottom edge.			Establish an imaginary line from HPB to HPB. Measure from imaginary line at center back to bottom edge.	
				
L006.4 CF Length from HPB (Cami) (Maxi-GRADED)		L006.5 CB Length from HPB (Cami) (Maxi-GRADED)		
Establish an imaginary line from HPB to HPB. Measure from imaginary line at center front to bottom edge.			Establish an imaginary line from HPB to HPB. Measure from imaginary line at center back to bottom edge.	
				

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
L006.6	CF Length from HPB (Cami) (Maxi-REDUCE-GRADE)	L006.7	CB Length from HPB (Cami) (Maxi-REDUCE-GRADE)
Establish an imaginary line from HPB to HPB. Measure from imaginary line at center front to bottom edge.		Establish an imaginary line from HPB to HPB. Measure from imaginary line at center back to bottom edge.	
L007	CF Length from HPB to Crotch (Unsnapped)	L008	CB Length from Top Edge (Cami)
Establish an imaginary line from HPB to HPB. Measure from center of imaginary line at center front to crotch edge.		Measure from top edge to bottom edge at center back of garment.	
L008.1	CB Length from Top Edge (Cami) (Crop)	L008.2	CB Length from Top Edge (Cami) (Maxi-GRADED)
Measure from top edge to bottom edge at center back of garment.		Measure from top edge to bottom edge at center back of garment.	

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

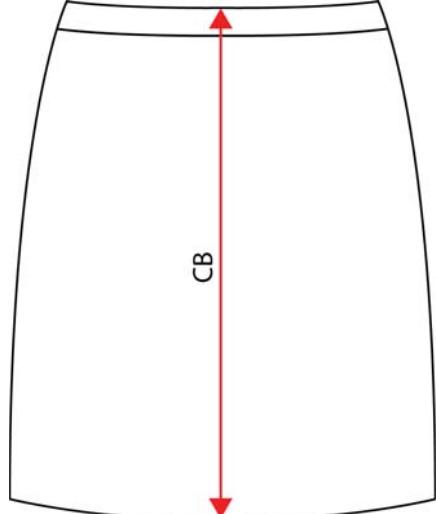
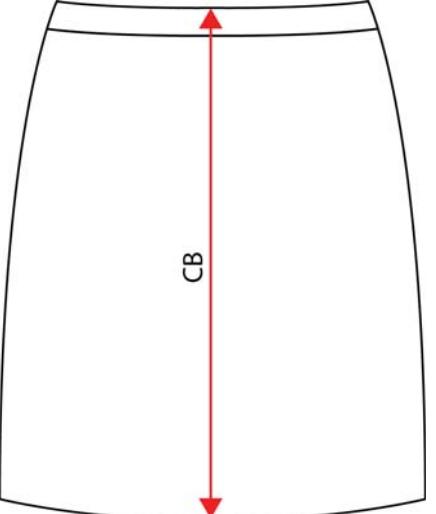
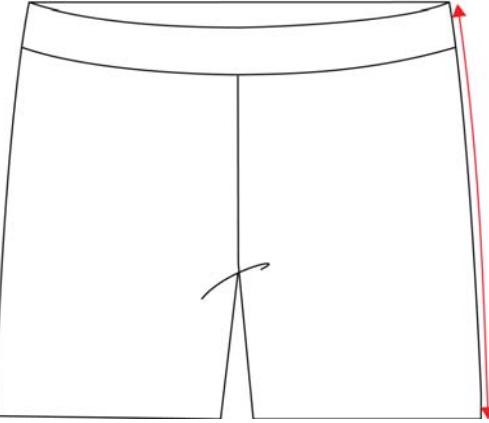
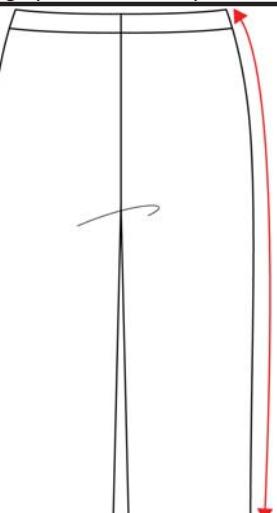
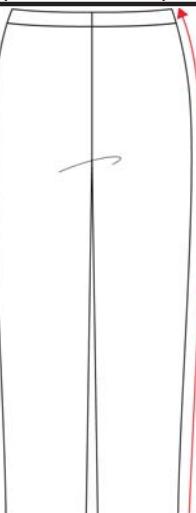
Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
L008.3	CB Length from Top Edge (Cami) (Maxi-REDUCE-GRADE)	L009	CB Length from Top Edge to Crotch (Unsnapped)
Measure from top edge to bottom edge at center back of garment.		With garment unsnapped, measure from center back neck edge to crotch edge.	
L013	Sideseam Length (Panties)	L015	CF Length from Top Edge (Skirts) - Graded
Measure from top waist edge to bottom edge at leg opening following seam.		Measure from center front top edge of garment to bottom edge.	
L015.1	CF Length from Top Edge (Skirts) - Non-Graded	L015.2	CF Length from Top Edge (Maxi Skirts)
Measure from center front top edge of garment to bottom edge.		Measure from center front top edge of garment to bottom edge.	

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

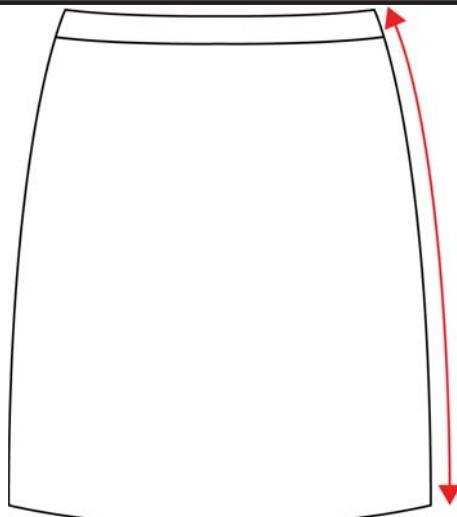
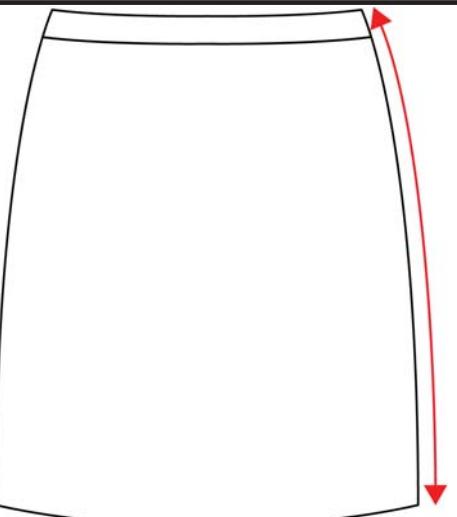
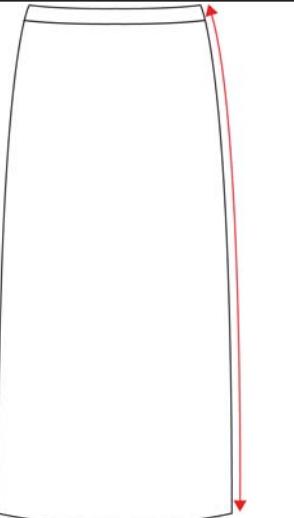
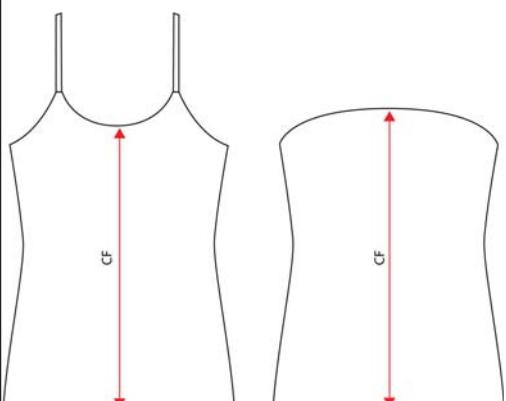
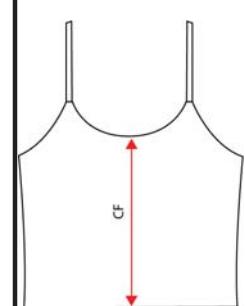
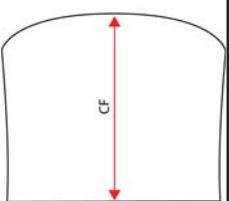
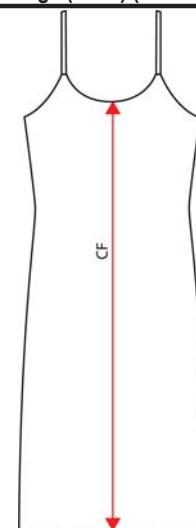
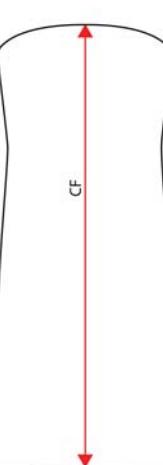
Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
L018	CB Length from Top Edge (Skirts) - Graded	L018.1	CB Length from Top Edge (Skirts) - Non-Graded
Measure from center back top edge of garment to bottom edge.		Measure from center back top edge of garment to bottom edge.	
L018.2	CB Length from Top Edge (Maxi Skirts)	L023	Outseam Length from Top Edge (0" - 6" Inseam)
Measure from center back top edge of garment to bottom edge.		Measure from top edge to bottom edge of garment along curve.	
L023.1	Outseam Length from Top Edge (6" to 25" Inseam)	L023.2	Outseam Length from Top Edge (Over 25" Inseam)
Measure from top edge to bottom edge of garment following seam.		Measure from top edge to bottom edge of garment along seam.	

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

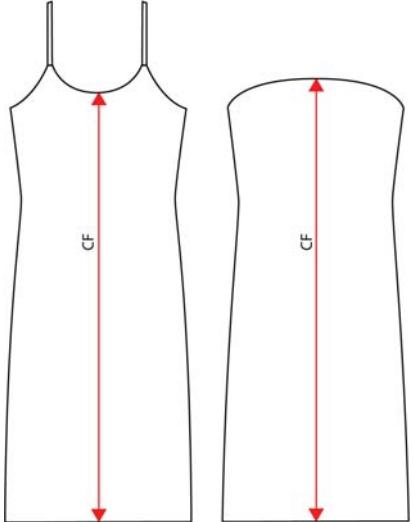
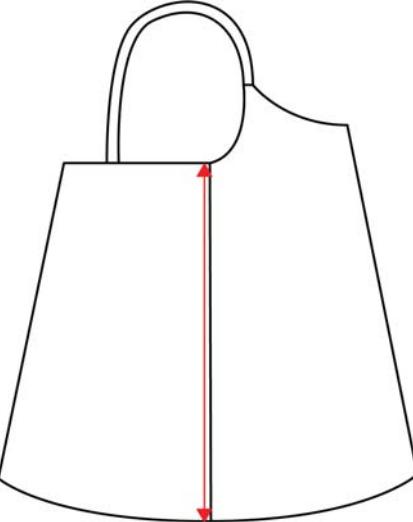
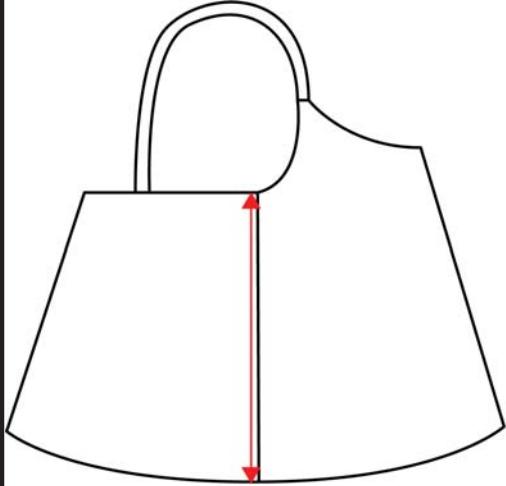
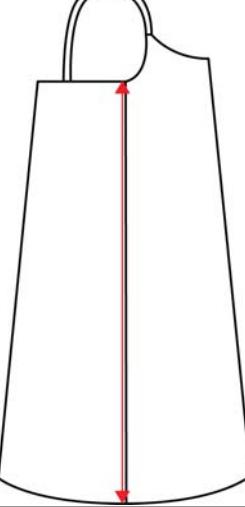
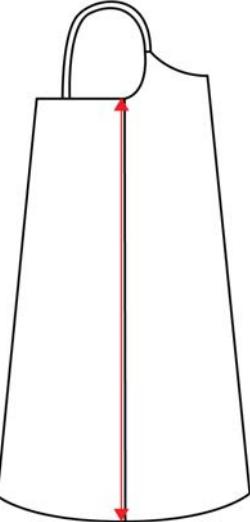
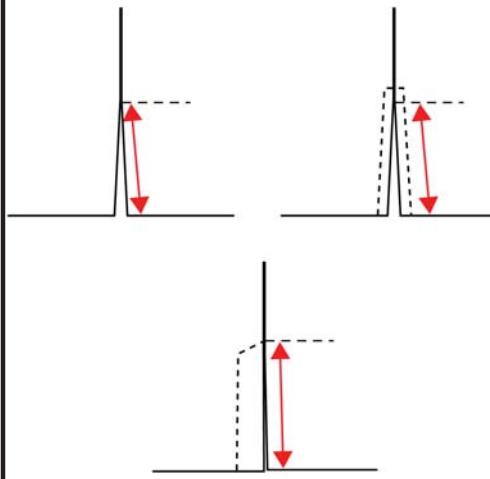
Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
L025	Sideseam Length fm Top Edge (Skirts) - Graded	L025.1	Sideseam Length fm Top Edge (Skirts) - Non-Graded
Measure from top edge to bottom edge of garment along seam.		Measure from top edge to bottom edge of garment along seam.	
L025.2	Sideseam Length fm Top Edge (Maxi Skirts)	L026	CF Length from Top Edge (Cami)
Measure from top edge to bottom edge of garment along seam.		Measure from top edge to bottom edge at center front of garment.	
L026.1	CF Length from Top Edge (Cami) (Crop)	L026.2	CF Length from Top Edge (Cami) (Maxi-GRADED)
Measure from top edge to bottom edge at center front of garment.	 	Measure from top edge to bottom edge at center front of garment.	 

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

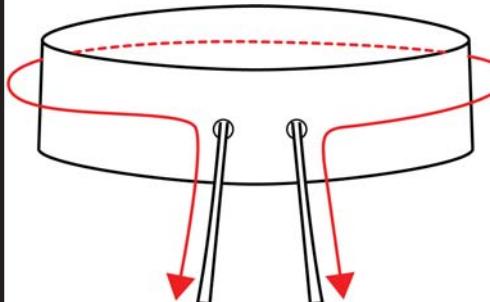
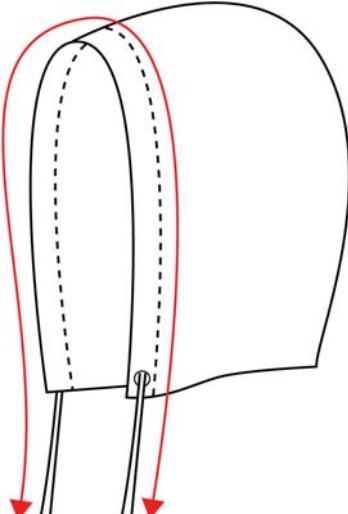
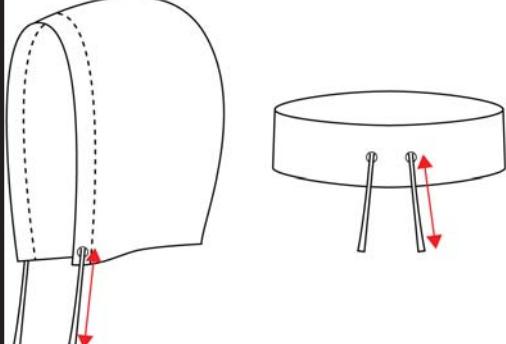
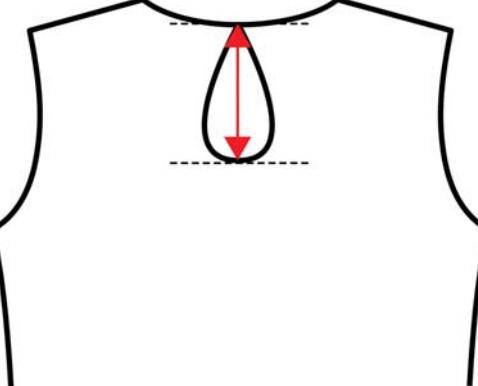
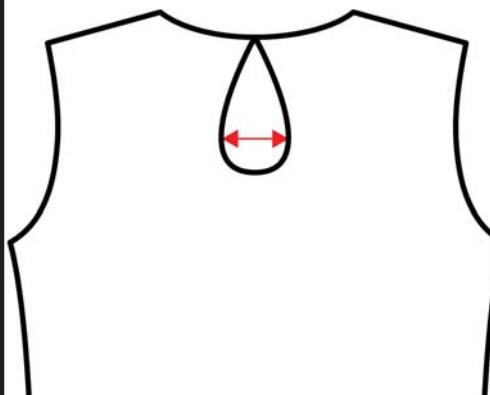
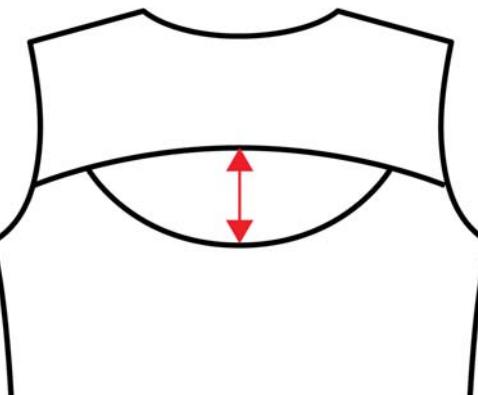
Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
L026.3	CF Length from Top Edge (Cami) (Maxi-REDUCE-GRADE)	L027	Sideseam Length from Armhole
Measure from top edge to bottom edge at center front of garment.		Measure from armhole edge/seam to bottom edge of garment along sideseam.	
L027.1	Sideseam Length from Armhole (Crop)	L027.2	Sideseam Length from Armhole (Maxi-GRADED)
Measure from armhole edge/seam to bottom edge of garment along sideseam.		Measure from armhole edge/seam to bottom edge of garment along sideseam.	
L027.3	Sideseam Length from Armhole (Maxi-REDUCE-GRADE)	M002	Slit/Vent Length - Non-Graded
Measure from armhole edge/seam to bottom edge of garment along sideseam.		Measure from top of slit/vent to bottom opening.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style	EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season:	Templates/Admin 0000	Mat. One Desc:	Date Created	Date Modified
Wght/Width:		Mat. One Content:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
Wash/Fin:		Gauge:	JKUBALAK	JKUBALAK
		End/Yrn Ct:		

M002.1	Slit/Vent Length - Graded	M003	Epaulette/Tab Length @ Center - Graded
Measure from top of slit/vent to bottom opening.		<p>Measure from seam/fold to end of epaulette/tab at center.</p>	
<p style="text-align: right;">Dài xé tà sau</p>			<p style="text-align: right;">Fold</p> <p style="text-align: right;">Dài cá</p> <p style="text-align: right;">Seam</p>
M003.1	Epaulette/Tab Length @ Center - Non-Graded	M003.2	Epaulette/Tab Length @ Sides - Graded
Measure from seam/fold to end of epaulette/tab at center.		<p>Measure from seam/fold to end of epaulette/tab at sides.</p> <p style="text-align: right;">Fold</p> <p style="text-align: right;">Seam</p> <p style="text-align: right;">Dài cá tại cạnh ngoài</p>	
<p style="text-align: right;">Fold</p> <p style="text-align: right;">Seam</p>			<p style="text-align: right;">Fold</p> <p style="text-align: right;">Seam</p>
M003.3	Epaulette/Tab Length @ Sides - Non-Graded	M004	Epaulette/Tab Width
Measure from seam/fold to end of epaulette/tab at sides.		<p>Measure across epaulette edge to edge.</p> <p style="text-align: right;">Fold</p> <p style="text-align: right;">Seam</p> <p style="text-align: right;">Rộng cá</p>	
<p style="text-align: right;">Fold</p> <p style="text-align: right;">Seam</p>			<p style="text-align: right;">Fold</p> <p style="text-align: right;">Seam</p>

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
M007	Drawstring Length - Total (Waist)	M007.1	Drawstring Length - Total (Hood)
Measure end to end including hardware. tổng chiều dài dây luồn eo		Measure end to end including hardware. Tổng chiều dài dây luồn nón bao gồm cả đầu dù	
M007.2	Drawstring Length (Exposed)	M008	Keyhole Length - Non-Graded
Measure from insert point to end including hardware.		Measure straight from top to bottom edge through the center.	
M009	Keyhole Width - Non-Graded	M010	Cut Out Detail Height @ Center
Measure straight from side edge to edge at widest point.		Measure straight from top to bottom edge through the center.	

Design Stage

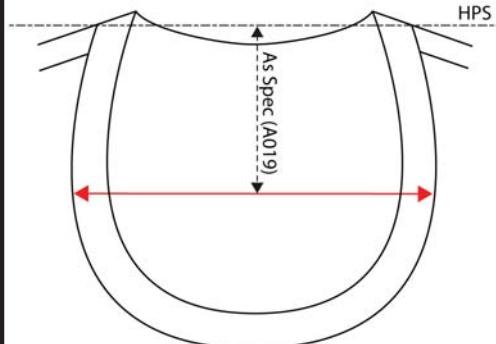
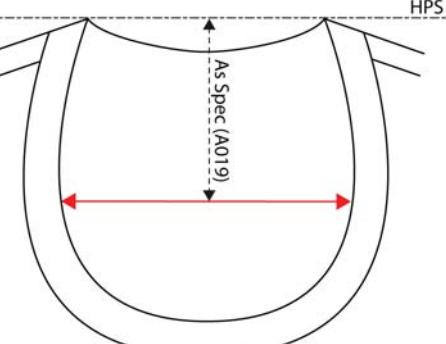
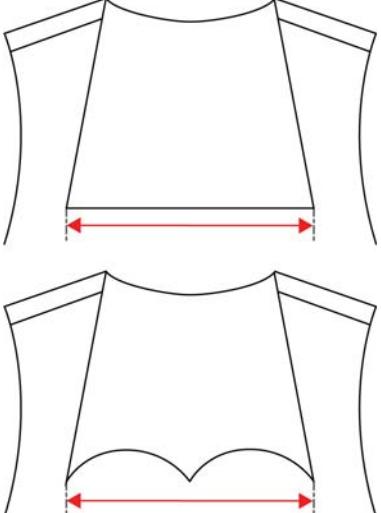
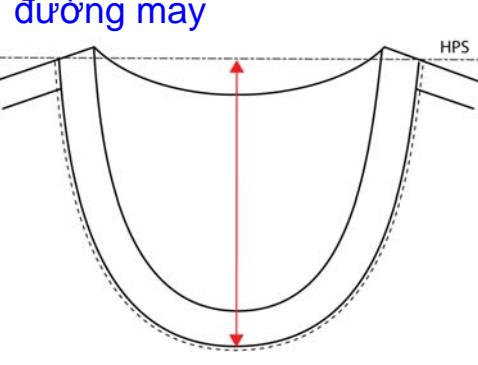
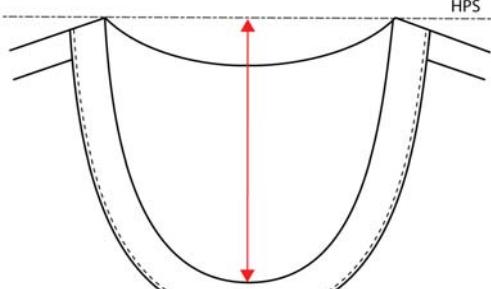
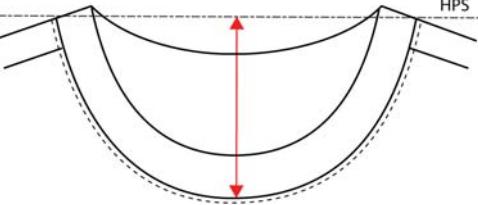
EXPRESS How to Measure guide (TOTAL CO)

Womens-None

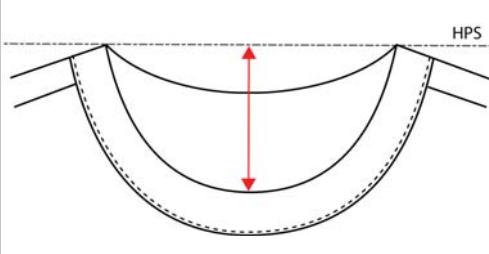
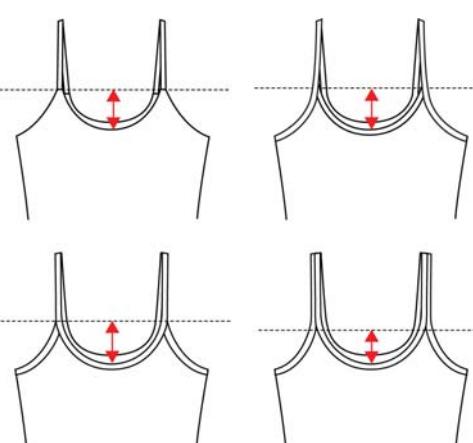
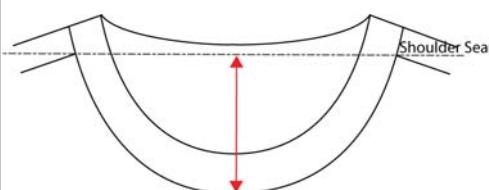
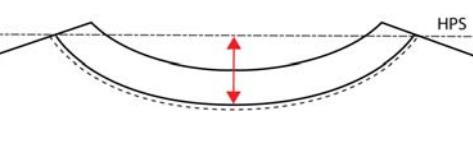
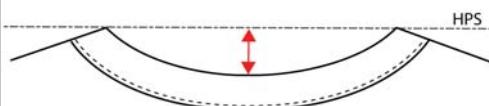
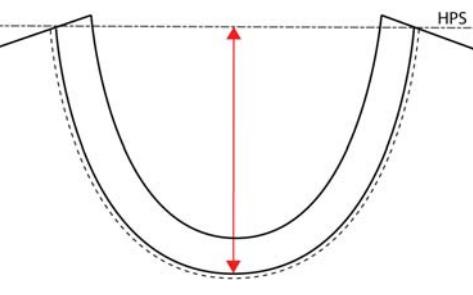
WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
M011	Cut Out Detail Width @ Widest Point	N001	Neck Width - Seam to Seam @ HPS (Standard)
Measure straight from edge to edge at widest point.		Measure straight from HPS to HPS at seam.	
N001.1	Neck Width - Seam to Seam @ HPS (Tanks)	N002	Neck Width - Edge to Edge @ HPS (Standard)
Measure straight from HPS to HPS at seam.		Measure straight inside edge to inside edge.	
N002.1	Neck Width - Edge to Edge @ HPS (Tanks)	N003	Front Neck Width - Shoulder Sm to Sm (Non-Cowl)
Measure straight inside edge to inside edge.		Measure straight from shoulder seam at neck point to shoulder seam at neck point.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style: EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season: Templates/Admin 0000	Mat. One Desc:	Date Created	Date Modified
Wght/Width:	Mat. One Content:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
Wash/Fin:	Gauge:	JKUBALAK	JKUBALAK
End/Yrn Ct:			
N003.1	Front Neck Width @ Across Front - Seam to Seam	N003.2	Front Neck Width @ Across Front - Edge to Edge
Measure straight from seam to seam at specified placement from HPS.		Measure straight from edge to edge at specified placement from HPS.	
N003.3	Front Neck Width @ Base - Corner to Corner	N004	CF Neck Drop from HPS to Seam (Low Necklines)
Measure straight from corner to corner at base of front neckline.		Establish an imaginary line from HPS to HPS. At center of imaginary line, measure down to neck seam.	
N004.1	CF Neck Drop from HPS to Edge (Low Neckline)	N004.2	CF Neck Drop from HPS to Seam (High Necklines)
Establish an imaginary line from HPS to HPS. At center of imaginary line, measure down to neck edge.		Establish an imaginary line from HPS to HPS. At center of imaginary line, measure down to neck seam.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
N004.3	CF Neck Drop from HPS to Edge (High Necklines)	N005	CF Neck Drop from HPB to Edge (Cami)
Establish an imaginary line from HPS to HPS. At center of imaginary line, measure down to neck edge.	Hạ cổ trước từ đỉnh vai đến cạnh cổ 	Establish an imaginary line from HPB to HPB. At center of imaginary line, measure down to neck edge.	
N006	CF Neck Drop from Shoulder Seam @ Nk to Seam	N008	CB Neck Drop from HPS to Seam (High Necklines)
Establish an imaginary line from shoulder seam at neck to shoulder seam at neck. At center of imaginary line, measure down to neck seam.		Establish an imaginary line from HPS to HPS. At center of imaginary line, measure down to neck seam.	Hạ cổ sau từ đỉnh vai 
N008.1	CB Neck Drop from HPS to Edge (High Necklines)	N008.2	CB Neck Drop from HPS to Seam (Low Necklines)
Establish an imaginary line from HPS to HPS. At center of imaginary line, measure down to neck edge.	Hạ cổ sau từ đỉnh vai đến cạnh 	Establish an imaginary line from HPS to HPS. At center of imaginary line, measure down to neck seam.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style	EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season:	Templates/Admin 0000	Mat. One Desc:	Date Created	Date Modified
Wght/Width:		Mat. One Content:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
Wash/Fin:		Gauge:	JKUBALAK	JKUBALAK

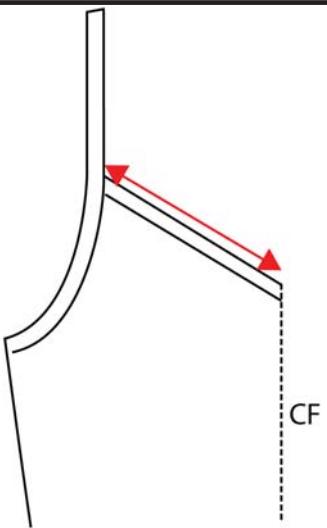
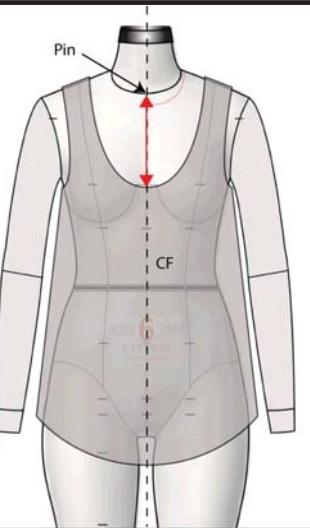
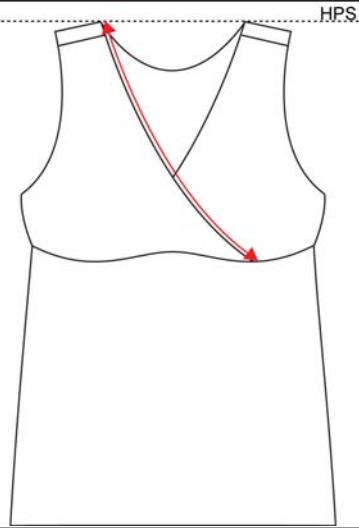
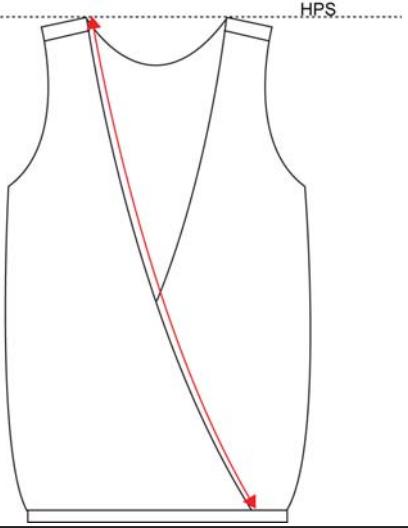
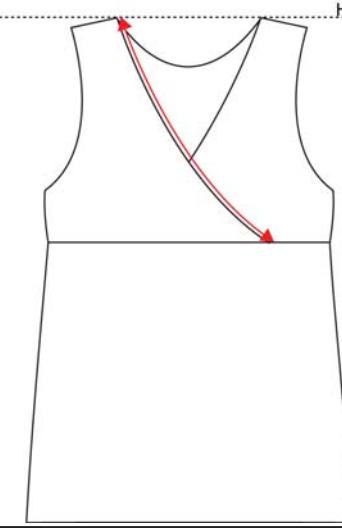
N008.3	CB Neck Drop from HPS to Edge (Low Necklines)	N009	CB Neck Drop from HPB to Edge (Cami)
Establish an imaginary line from HPS to HPS. At center of imaginary line, measure down to neck edge.		Establish an imaginary line from HPB to HPB. At center of imaginary line, measure down to neck edge.	
N012	Neckband Length	N014	MINIMUM STRETCH @ Neck
Measure flat at center stand from center of button to front end of buttonhole.		Stretch neckline until target spec is achieve. Measure edge to edge and multiply by 2.	
N016	Front Neck Edge (Cowl) - CF to Shoulder Seam	N017	Back Neck Edge (Cowl) - CB to Shoulder Seam
With front neck edges aligned, measure front neck edge from seam to center front fold.		With back neck edges aligned, measure back neck edge from seam to center back fold.	

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

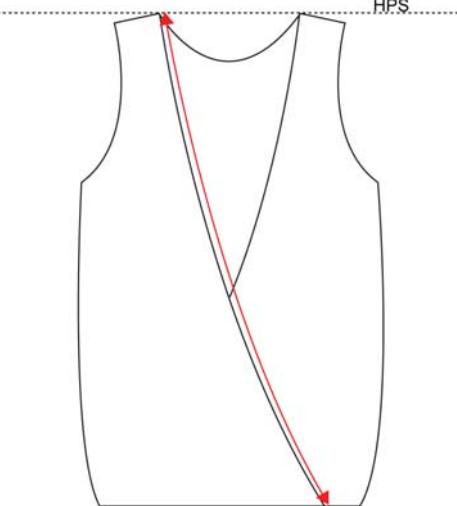
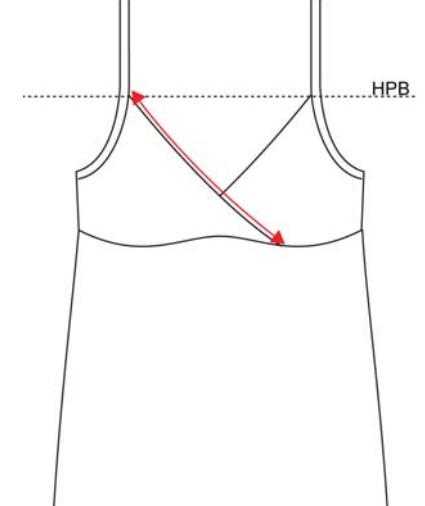
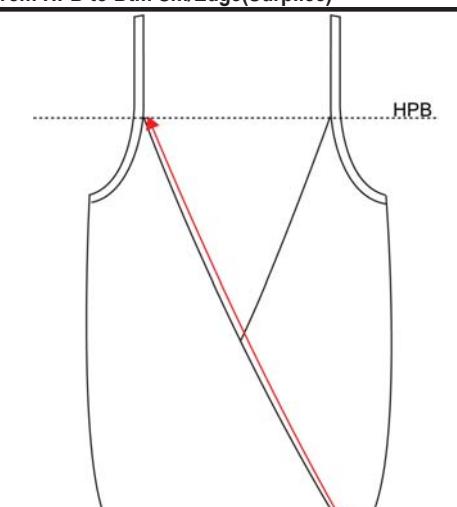
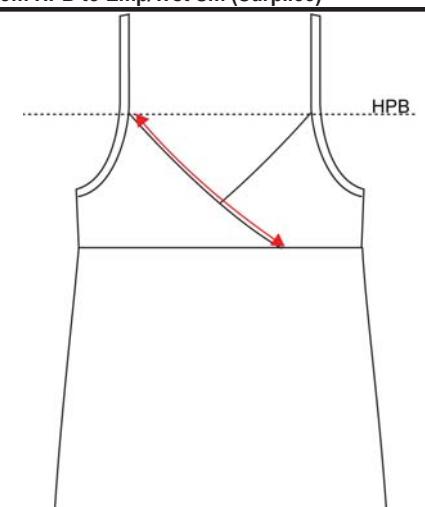
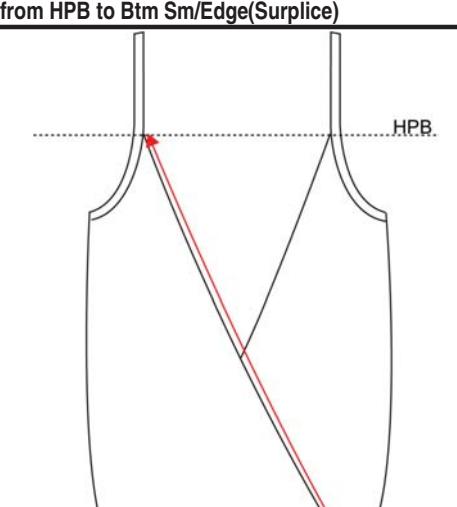
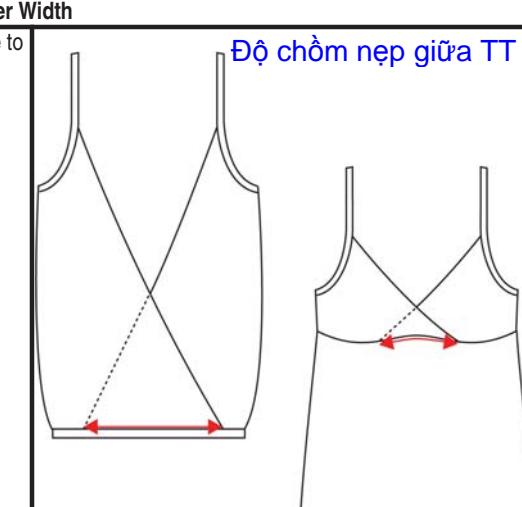
Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
N019	Front Neckline Length fm CF to HPB (Cami)	N020	CF Neck Drop from CF Pin - On Form (base size)
Measure along neck edge from HPB to center front.		With garment on body/form, measure from Pin at CF Neck of form to edge of neckline.	
N020.1	CB Neck Drop from CB Pin - On Form (base size)	N021	Ft Nkline Length from HPS to Emp/Wst Sm (Surplice)
With garment on body/form, measure from Pin at CB Neck of form to edge of neckline.		Measure from HPS to seam along neckline edge. *Vendor to advise grade.	
N021.1	Ft Nkline Length from HPS to Btm Sm/Edge(Surplice)	N021.2	Bk Nkline Length from HPS to Emp/Wst Sm (Surplice)
Measure from HPS to Bottom Seam/Edge along neckline. *Vendor to advise grade.		Measure from HPS to seam along neckline edge. *Vendor to advise grade.	

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One Content: Gauge: End/Yrn Ct:	Mat. One ID#: Mat. One Desc: Date Created 09 SEP 2015 03:54 PM JKUBALAK	Description: NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
N021.3	Bk Nkline Length from HPS to Btm Sm/Edge(Surplice)	N022	Ft Nkline Length from HPB to Emp/Wst Sm (Surplice)
Measure from HPS to Bottom Seam/Edge along neckline. *Vendor to advise grade.		Measure from HPB to Empire/Waist seam along neckline. *Vendor to advise grade.	
N022.1	Ft Nkline Length from HPB to Btm Sm/Edge(Surplice)	N022.2	Bk Nkline Length from HPB to Emp/Wst Sm (Surplice)
Measure from HPB to Bottom Seam/Edge along neckline. *Vendor to advise grade.		Measure from HPB to Empire/Waist seam along neckline. *Vendor to advise grade.	
N022.3	Bk Nkline Length from HPB to Btm Sm/Edge(Surplice)	N023	CF Crossover Width
Measure from HPB to Bottom Seam/Edge along neckline. *Vendor to advise grade.		Measure from panel edge to panel edge at crossover.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
N023.1	CB Crossover Width	N024	Neck Circumference - Relaxed (Off the Shoulder)
Measure from panel edge to panel edge at crossover.		Measure total neckline along neck edge with garment relaxed.	
N025	Neck Circumference - Extended (Off the Shoulder)	0001	Bib Length
Measure total neckline along neck edge with garment extended until fabric is flat.		Measure from top edge to waist seam at center.	
0002	Bib Width at Top	0003	Bib Width at Bottom
Measure straight from edge to edge at top.		Measure edge to edge along waistband seam.	

Design Stage

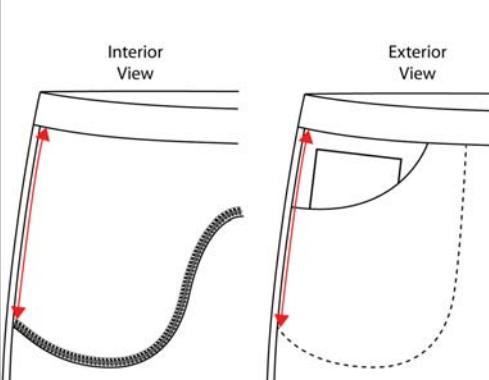
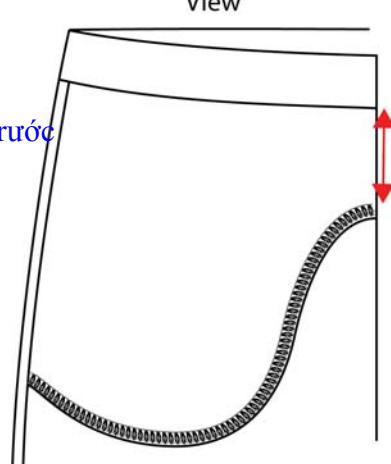
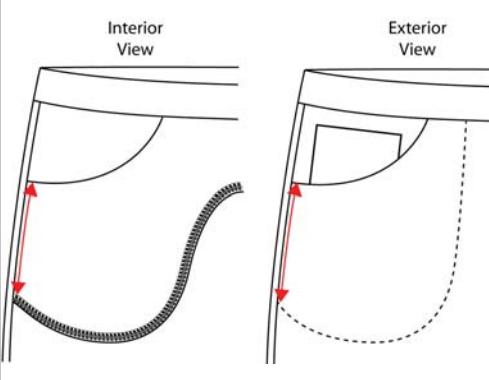
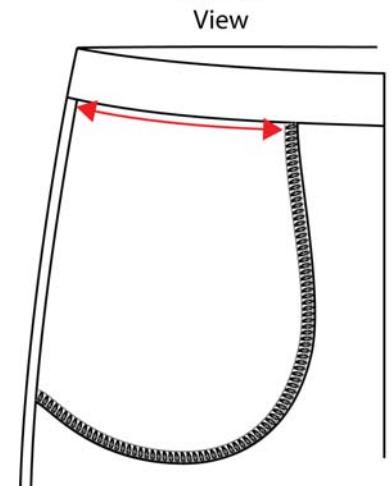
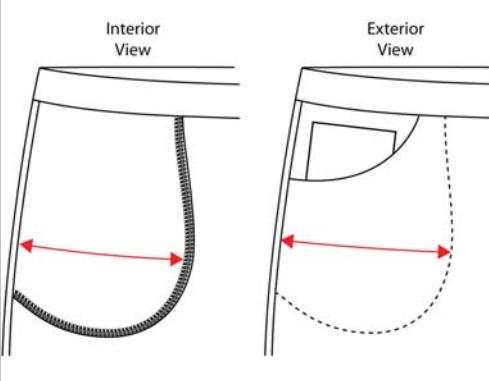
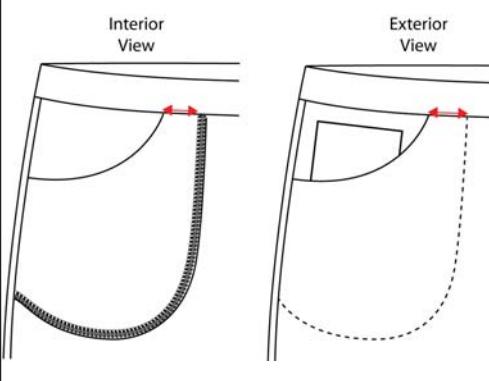
EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
O004	Back Bib Width at Center of Diamond	O005	Back Bib Length at Center of Diamond
Measure across point to point at center of diamond.		Measure length point to point at center of diamond.	
P0100	Front and Side Seam Pockets (Bottoms)	P0101	Pocket Opening fm Outseam along WB Seam
		Measure from outseam to edge of pocket along waistband seam.	 Rộng miệng túi cạnh lưng
P0102	Pocket Opening fm WB Seam along Outseam	P0103	Pocket Bag Depth fm WB Seam at Longest Point
Measure from waistband seam to edge of pocket along outseam.	 Rộng miệng túi cạnh sườn	On inside of garment, measure finished length of pocket from waistband seam to stitchline at longest point. *Measure on outside of garment if stitch-through pocket bag.	 Interior View Exterior View

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

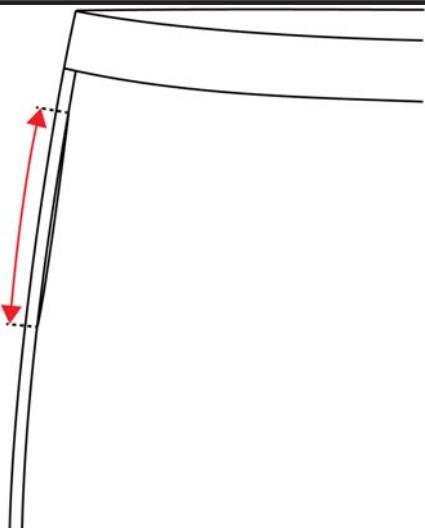
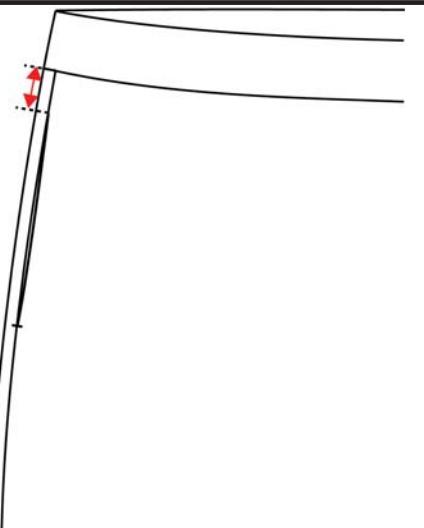
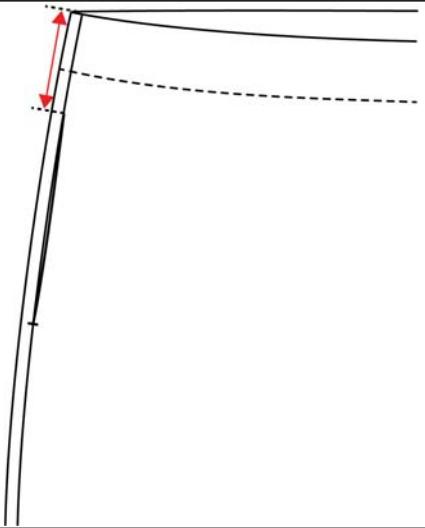
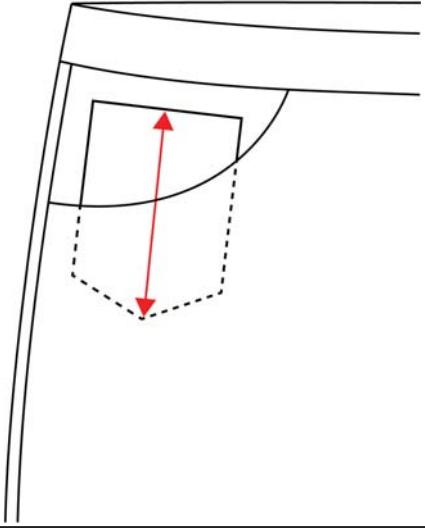
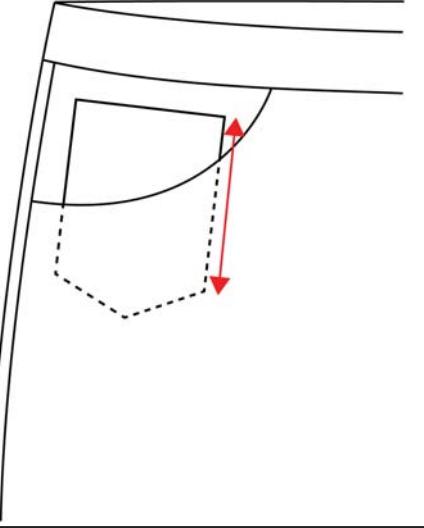
Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
P0104	Pocket Bag Depth fm WB Seam along Outseam	P0105	Pocket Bag Depth fm WB Seam @ CF
On inside of garment, measure finished length of pocket from waistband seam to stitchline along outseam. *Measure on outside of garment if stitch-through pocket bag.		On inside of garment, measure finished length of pocket from waistband seam to stitchline at CF.	 Sâu bao túi tại Giữa trước
P0106	Pocket Bag Depth fm Pocket Opening along Outseam	P0107	Pocket Bag Width fm Outseam along WB Seam
On inside of garment, measure finished length of pocket from pocket opening edge to stitchline along outseam. *Measure on outside of garment if stitch-through pocket bag.		On inside of garment, measure finished width of pocket from outseam to stitchline along waistband seam.	 Sau bao túi cạnh sườn
P0108	Pocket Bag Width fm Outseam @ Widest Point	P0109	Pocket Bag Width fm Pocket Opening along WB Seam
On inside of garment, measure finished width of pocket from outseam to stitchline at the widest point. *Measure on outside of garment if stitch-through pocket bag.		On inside of garment, measure finished width of pocket from pocket opening to stitchline along waistband seam. *Measure on outside of garment if stitch-through pocket bag.	

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)		Womens-None
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
P0110	On Seam Pocket Opening	P0111	On Seam Pocket fm WB Seam
Measure from opening edge to edge along seam.		Measure from waistband seam to top of pocket opening along outseam.	
Dài miệng túi			
P0112	On Seam Pocket fm Top Edge	P0200	Coin Pockets (Bottoms)
Measure from top edge of garment to top of pocket opening along outseam.			
P0201	Coin Pocket Height @ Center	P0202	Coin Pocket Height @ Sides
Measure straight from top edge to bottom edge at center.		Measure from top edge to bottom edge at sides.	

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
P0203	Coin Pocket Width @ Top	P0204	Coin Pocket Width @ Top (Exposed)
Measure straight from edge to edge across top.		Measure straight along top edge from coin pocket edge to the intersection of the coin pocket and front pocket.	
P0205	Coin Pocket Width @ Bottom	P0206	Coin Pocket fm Outseam @ Top
Measure straight from edge to edge across bottom.		Measure straight from outseam to edge of pocket at top.	
P0207	Coin Pocket fm WB Seam @ CF Side	P0208	Coin Pocket fm WB Seam @ CF Side (Exposed)
Measure from waistband seam to top edge of pocket at the CF edge.		Measure from waistband seam to top edge of pocket at the intersection of the coin pocket top edge and the front pocket edge.	

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

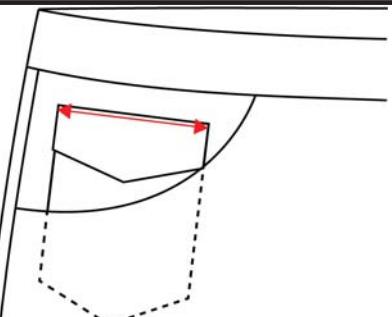
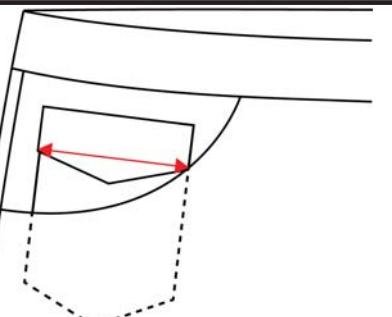
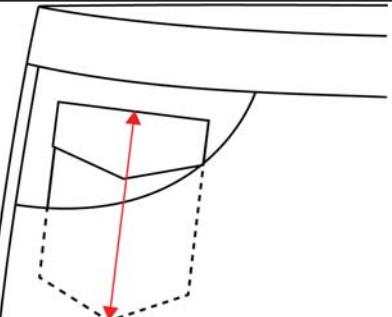
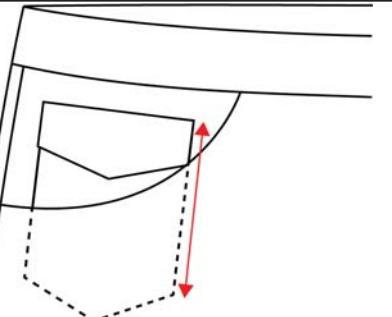
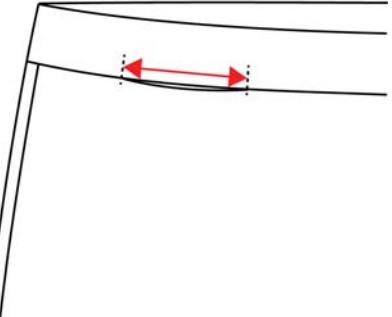
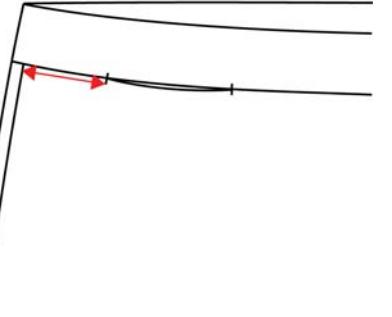
Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
P0209	Coin Pocket fm Top Edge @ CF Side	P0210	Coin Pocket fm Top Edge @ CF Side (Exposed)
Measure from top edge of garment to top edge of pocket at the CF edge.		Measure from top edge of garment to top edge of pocket at the intersection of the coin pocket top edge and the front pocket edge.	
P0211	Coin Pocket fm WB Seam @ Outseam Side	P0212	Coin Pocket fm Top Edge @ Outseam Side
Measure from top edge of garment to top edge of pocket at the outseam edge.		Measure from top edge of garment to top edge of pocket at the outseam edge.	
P0213	Coin Pocket Flap Height @ Center	P0214	Coin Pocket Flap Height @ Sides
Measure straight from top edge to bottom edge at center.		Measure straight from top edge to bottom edge at sides.	

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
P0215	Coin Pocket Flap Width @ Top	P0216	Coin Pocket Flap Width @ Bottom
Measure straight from edge to edge across top.		Measure straight from edge to edge across bottom.	
P0217	Coin Pocket Height @ Center (Including Flap)	P0218	Coin Pocket Height @ Sides (Including Flap)
Measure straight from top edge of flap to bottom edge of pocket at center.		Measure straight from top edge of flap to bottom edge of pocket at center.	
P0219	On Seam Coin Pocket Opening	P0220	On Seam Coin Pocket from Outseam
Measure from opening edge to edge along seam.		Measure from outseam to pocket opening along waistband or yoke seam.	

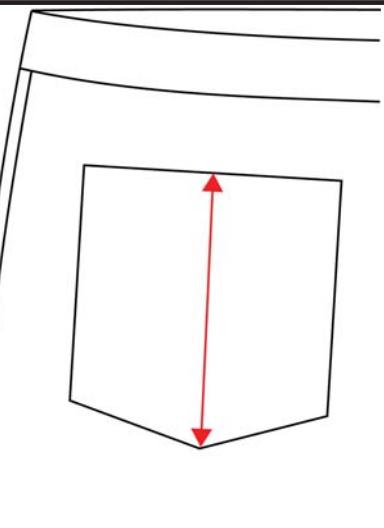
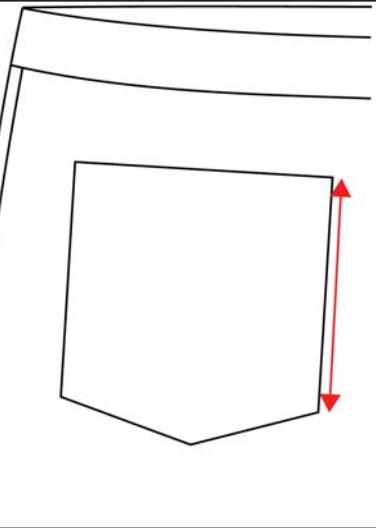
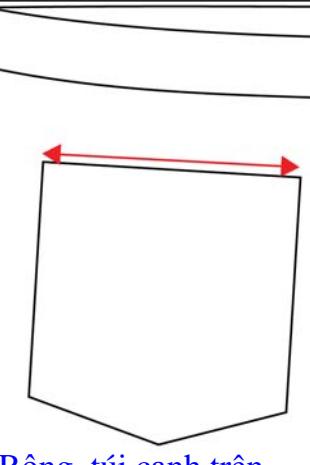
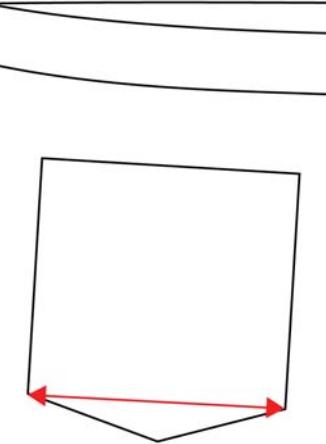
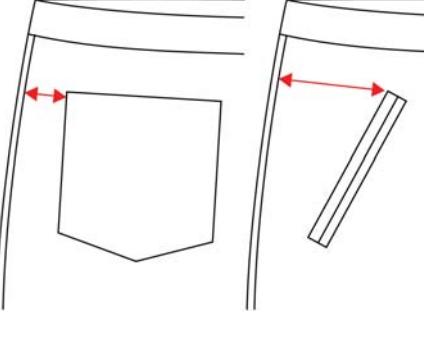
Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

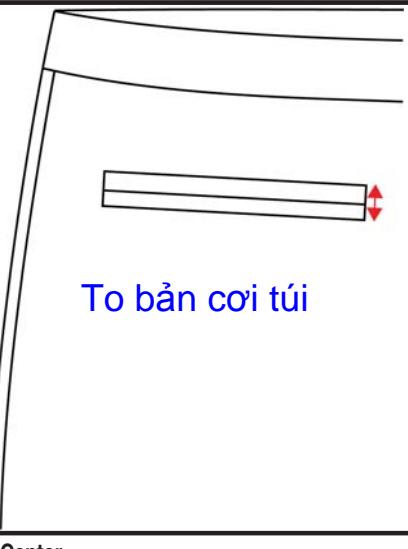
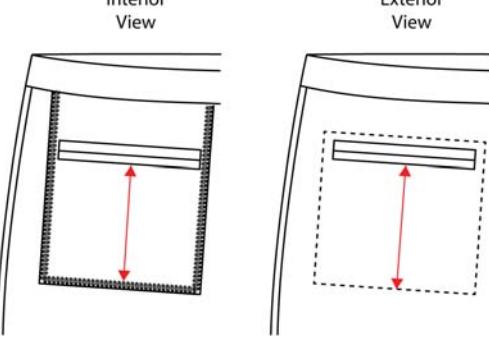
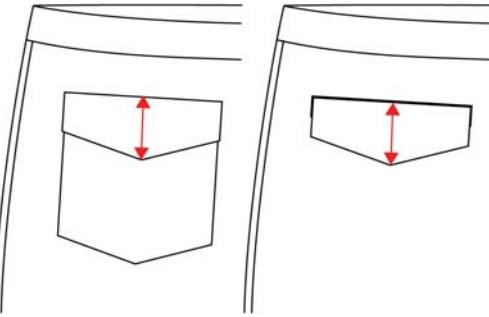
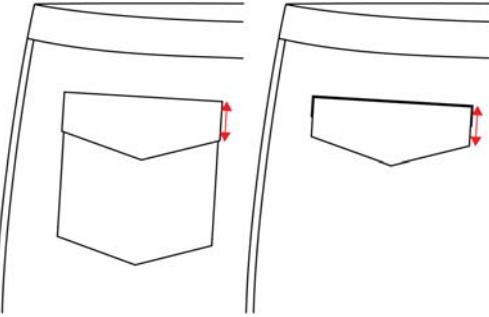
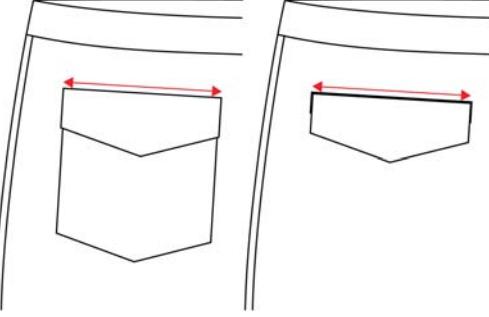
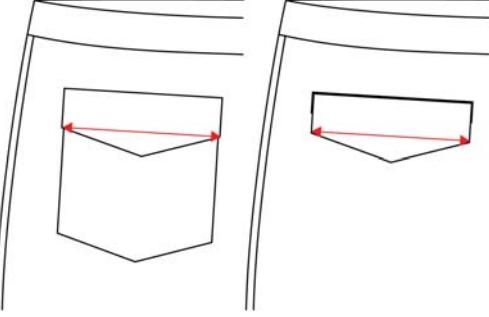
Style	EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season:	Templates/Admin 0000	Mat. One Desc:	Date Created	Date Modified
Wght/Width:		Mat. One Content:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
Wash/Fin:		Gauge:	JKUBALAK	JKUBALAK
End/Yrn Ct:				

P0300	Front Patch and Welt Pockets (Bottoms)	P0301	Pocket Height @ Center
			Measure straight from top edge to bottom edge at center.
			
P0302	Pocket Height @ Sides	P0303	Pocket Width @ Top
Measure from top edge to bottom edge at sides.		Measure straight from edge to edge across top.	 Rộng túi cạnh trên
P0304	Pocket Width @ Bottom	P0305	Pocket fm Outseam @ Top
Measure straight from edge to edge across bottom.		Measure from outseam to edge of pocket at top.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
P0306	Pocket fm Outseam @ Bottom	P0307	Pocket fm WB Seam @ CF Side
Measure from outseam to edge of pocket at bottom.		Measure from waistband seam to top of pocket at corner near CF.	
P0308	Pocket fm Top Edge @ CF Side	P0309	Pocket fm WB Seam @ Outseam Side
Measure from top edge of garment to top of pocket at corner near CF.		Measure from waistband seam to top of pocket at corner near outseam.	 Túi cách đường may lai - cạnh ngoài
P0310	Pocket fm Top Edge @ Outseam Side	P0311	Welt Pocket Opening - Seam to Seam
Measure from top edge of garment to top of pocket at corner near outseam.		Measure straight from inside edge to inside edge. dài miệng túi	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

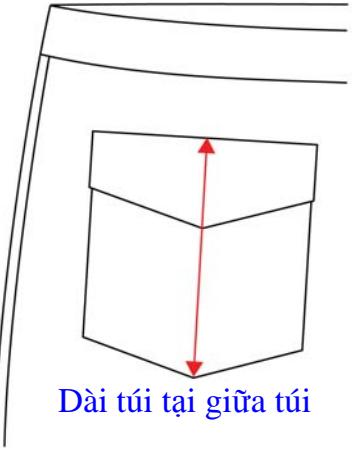
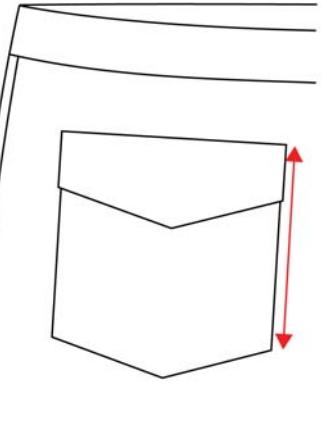
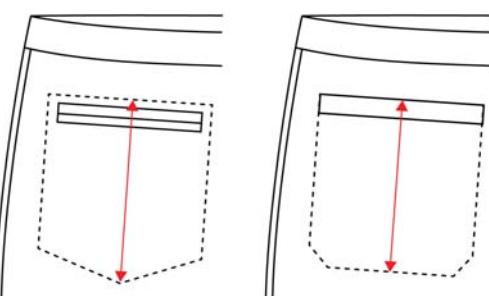
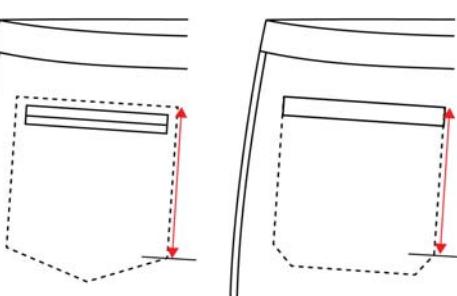
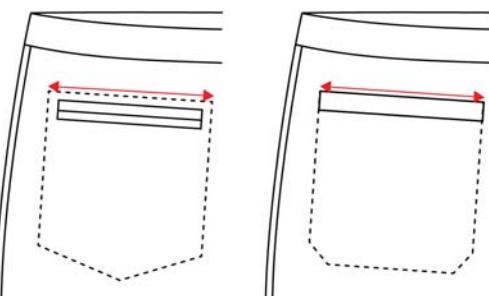
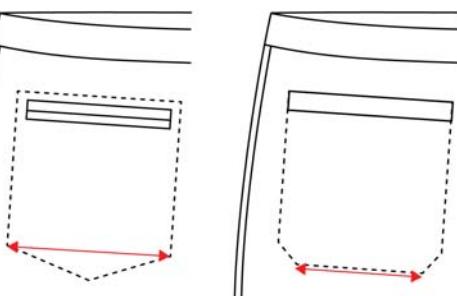
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
P0312	Welt Pocket Height (Total)	P0313	Welt Pocket Bag Depth from Bottom Seam
Measure edge to edge.		On inside of garment, measure finished length of pocket from bottom seam of welt to seam/stitch. If styling is stitch-through pocket, measure on exterior of garment.	
P0314	Pocket Flap Height @ Center	P0315	Pocket Flap Height @ Sides
Measure straight from top to bottom edge at center.		Measure straight from top to bottom edge at sides.	
P0316	Pocket Flap Width @ Top	P0317	Pocket Flap Width @ Bottom
Measure straight from edge to edge across top.		Measure straight from edge to edge across bottom.	

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

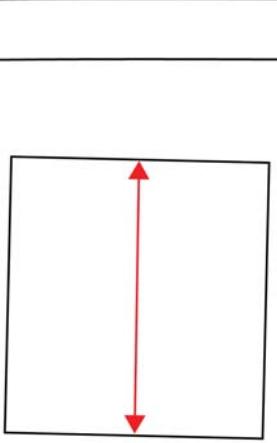
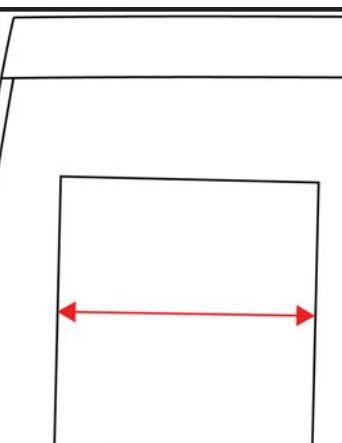
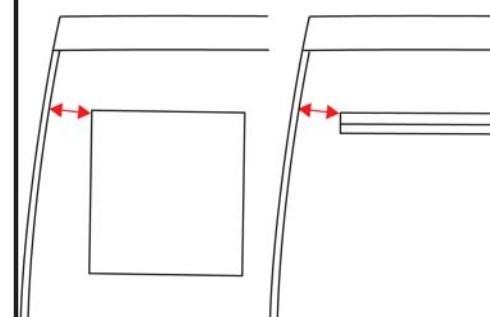
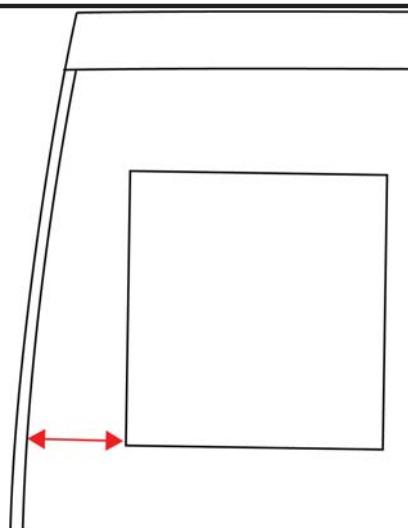
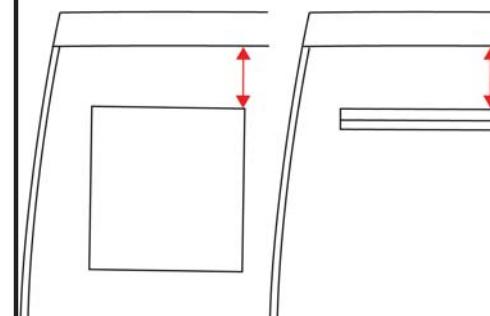
Style: EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season: Templates/Admin 0000	Mat. One Desc:	Date Created	Date Modified
Wght/Width:	Mat. One Content:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
Wash/Fin:	Gauge:	JKUBALAK	JKUBALAK
End/Yrn Ct:			
P0318	Pocket Height @ Center (Including Flap)	P0319	Pocket Height @ Sides (Including Flap)
Measure straight from top edge of flap to bottom edge of pocket at center.		Measure straight from top edge of flap to bottom edge of pocket at sides.	
P0320	Stitch Thru Pocket Height @ Center (Total)	P0321	Stitch Thru Pocket Height @ Sides (Total)
Measure from top stitchline or top edge of pocket opening to bottom stitchline at center of pocket.		Measure from top stitchline or top edge of pocket opening to bottom stitchline at sides of pocket.	
P0322	Stitch Thru Pocket Width @ Top	P0323	Stitch Thru Pocket Width @ Bottom
Measure from stitchline to stitchline or edge to edge at top edge of pocket. *Measurement taken at widest point.		Measure from stitchline to stitchline at bottom edge of pocket	

Design Stage

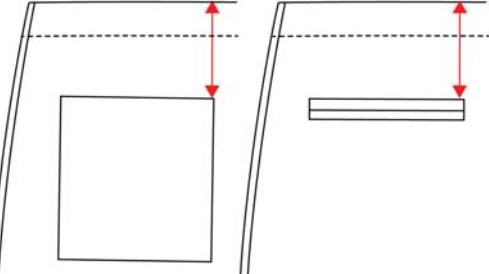
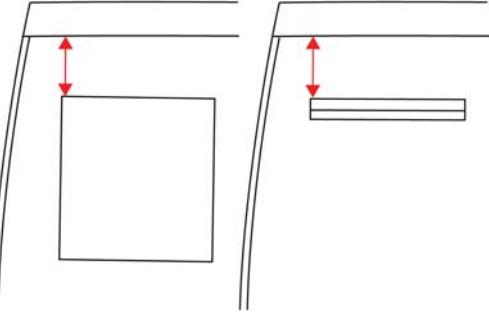
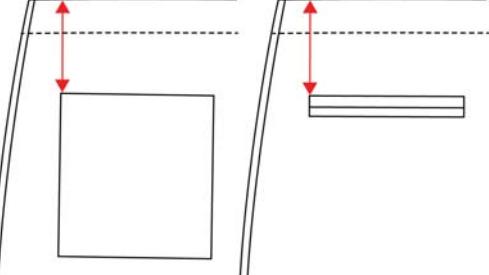
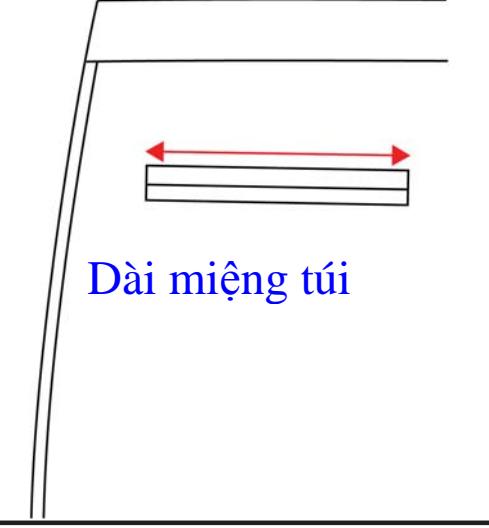
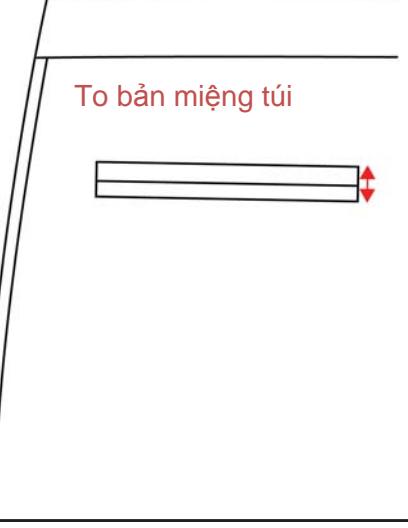
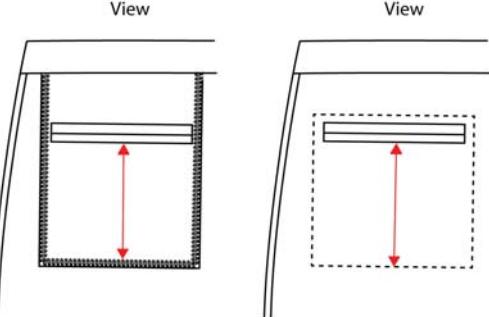
EXPRESS How to Measure guide (TOTAL CO)

Womens-None

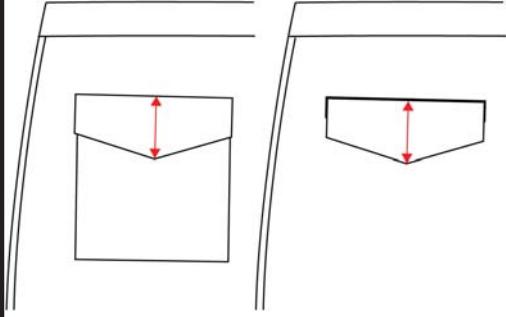
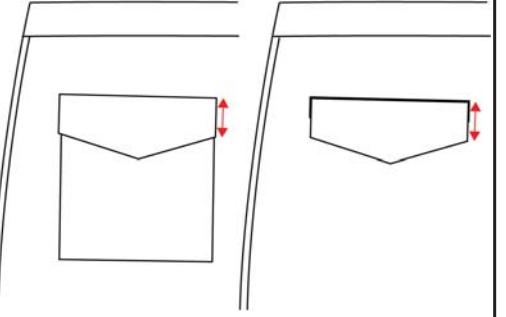
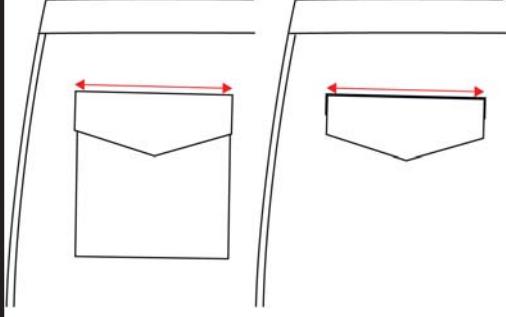
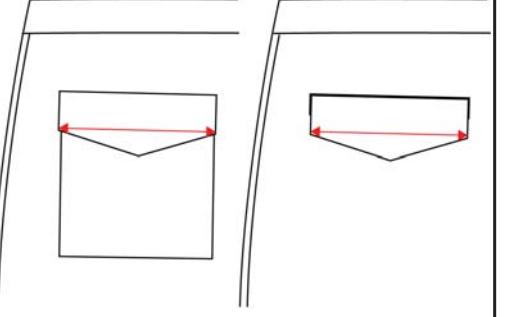
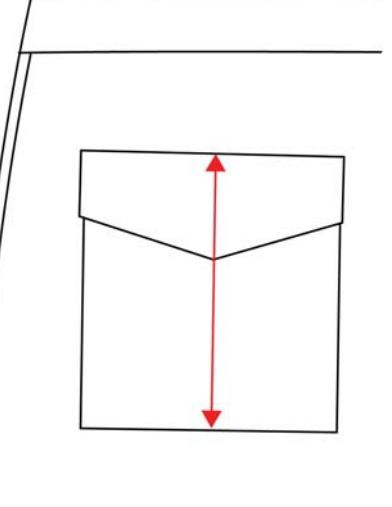
WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)		Womens-None
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One Content: Gauge: End/Yrn Ct:	Mat. One ID#: Mat. One Desc: Date Created 09 SEP 2015 03:54 PM JKUBALAK	Description: NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
P0400	Back Patch and Welt Pockets (Bottoms)	P0401	Pocket Height @ Center
		Measure straight from top edge to bottom edge at center.	
P0402	Pocket Width @ Center	P0403	Pocket fm Outseam @ Top
Measure straight from edge to edge across center.		Measure from outseam to edge of pocket at top.	
P0404	Pocket fm Outseam @ Bottom	P0405	Pocket fm WB Seam @ CB Side
Measure from outseam to edge of pocket at bottom.		Measure from waistband seam to top of pocket at corner near CB.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
P0406	Pocket fm Top Edge @ CB Side	P0407	Pocket fm WB Seam @ Outseam Side
Measure from top edge of garment to top of pocket at corner near CF.		Measure from waistband seam to top of pocket at corner near outseam.	
K/c từ Túi sau đến cạnh trên lưng tại giữa sau			
P0408	Pocket fm Top Edge @ Outseam Side	P0409	Welt Pocket Opening - Seam to Seam
Measure from top edge of garment to top of pocket at corner near outseam.		Measure straight from inside edge to inside edge.	
K/c từ Túi sau đến cạnh trên lưng tại cạnh sườn			
P0410	Welt Pocket Height (Total)	P0411	Welt Pocket Bag Depth from Bottom Seam
Measure edge to edge.		On inside of garment, measure finished length of pocket from bottom seam of welt to seam/stitch. If styling is stitch-through pocket, measure on exterior of garment.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

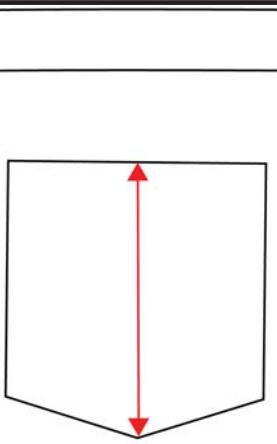
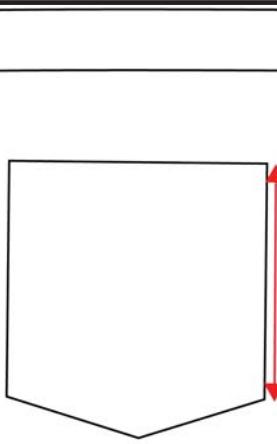
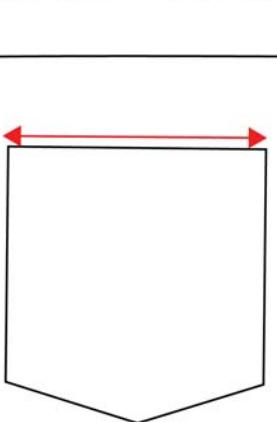
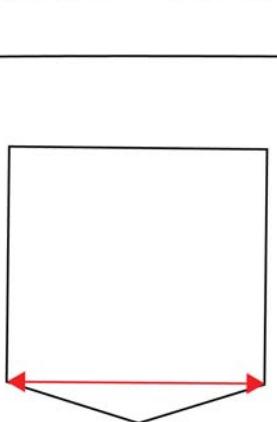
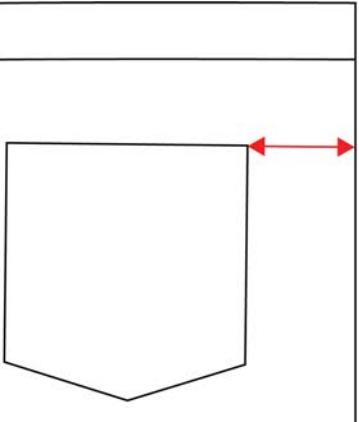
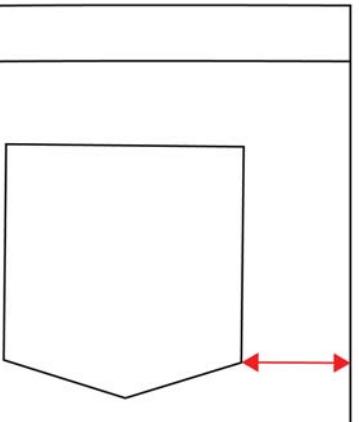
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
P0412	Pocket Flap Height @ Center	P0413	Pocket Flap Height @ Sides
Measure straight from top to bottom edge at center.		Measure straight from top to bottom edge at sides.	
P0414	Pocket Flap Width @ Top <i>Rộng miệng túi</i>	P0415	Pocket Flap Width @ Bottom
Measure straight from edge to edge across top.		Measure straight from edge to edge across bottom.	
P0416	Pocket Height @ Center (Including Flap)	P0500	Back Spade Patch Pockets (Bottoms)
Measure straight from top edge of flap to bottom edge of pocket at center.			

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
P0501	Pocket Height @ Center	P0502	Pocket Height @ Sides
Measure straight from top edge to bottom edge at center.		Measure straight from top edge to bottom edge at sides.	
P0503	Pocket Width @ Top	P0504	Pocket Width @ Bottom
Measure straight from edge to edge across top.		Measure straight from edge to edge across bottom.	
P0505	Pocket fm CB @ Top	P0506	Pocket fm CB @ Bottom
Measure from center back to edge of pocket at top.		Measure from center back to edge of pocket at bottom.	

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
P0507	Pocket fm WB Seam @ CB Side	P0508	Pocket fm Top Edge @ CB Side
Measure from waistband seam to top of pocket at corner near CB.		Measure from top edge of garment to top of pocket at corner near CB.	
P0509	Pocket fm WB Seam @ Outseam Side	P0510	Pocket fm Top Edge @ Outseam Side
Measure from waistband seam to top of pocket at corner near outseam.		Measure from top edge of garment to top of pocket at corner near outseam.	
P0511	Pocket Flap Height @ Center	P0512	Pocket Flap Height @ Sides
Measure straight from top edge to bottom edge at center.		Measure straight from top edge to bottom edge at sides.	

Design Stage

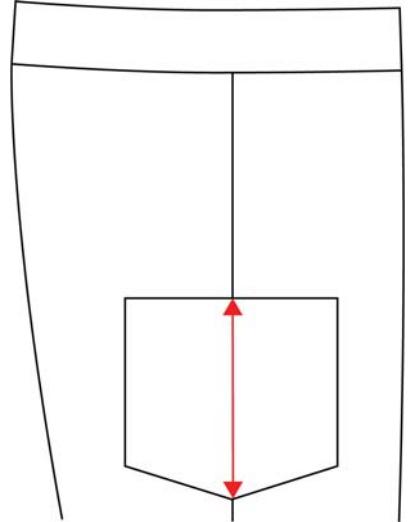
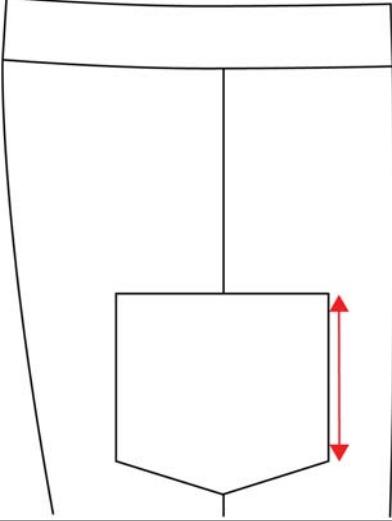
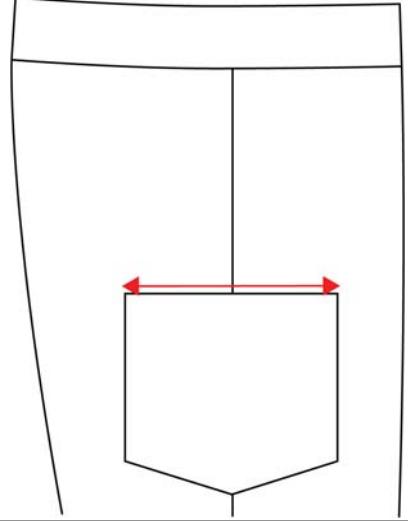
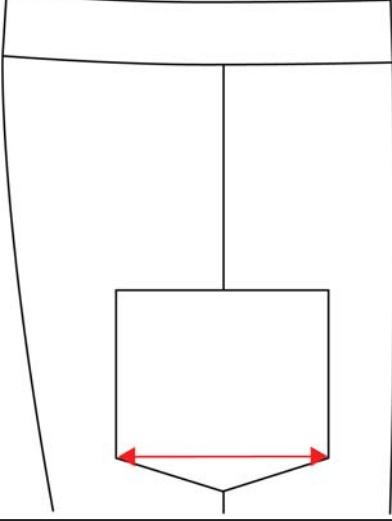
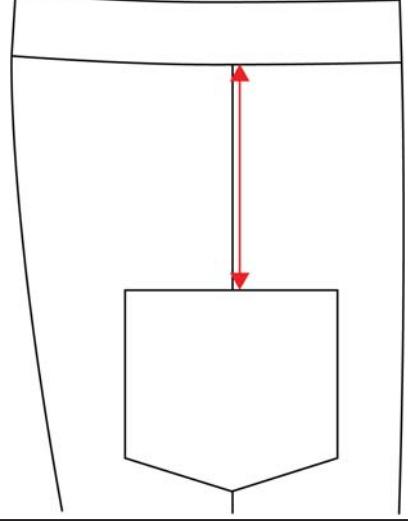
EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
P0513	Pocket Flap Width @ Top	P0514	Pocket Flap Width @ Bottom
Measure straight from edge to edge across top.		Measure straight from edge to edge across bottom.	
P0515	Pocket Height @ Center (Including Flap)	P0516	Pocket Height @ Sides (Including Flap)
Measure straight from top edge of flap to bottom edge of pocket at center.		Measure straight from top edge of flap to bottom edge of pocket at sides.	
P0517	Pocket fm Yoke Seam @ Outseam Side	P0518	Pocket fm Yoke Seam @ CB Side
Measure from yoke seam to top of pocket at corner near outseam.		Measure from yoke seam to top of pocket at corner near CB.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
P0600	Lower Leg/Cargo Pockets (Bottoms)	P0601	Pocket Height @ Center
			Measure straight from top edge to bottom edge at center. 
P0602	Pocket Height @ Sides	P0603	Pocket Width @ Top
Measure straight from top edge to bottom edge at sides.		Measure straight from edge to edge across top.	
P0604	Pocket Width @ Bottom	P0605	Pocket fm WB Seam along Outseam
Measure straight from edge to edge across bottom.		Measure from waistband seam to top of pocket along outseam.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
P0606	Pocket fm Top Edge along Outseam	P0607	Pocket fm Bottom Edge along Outseam
Measure from top edge of garment to top of pocket along outseam.		Measure from bottom edge of garment to bottom edge of pocket along outseam.	
P0608	Front Pocket Edge fm Outseam @ Top	P0609	Pocket Flap Height @ Center
Measure from outseam to corner of pocket near CF along top edge.		Measure straight from top edge to bottom edge at center.	
P0610	Pocket Flap Height @ Sides	P0611	Pocket Flap Width @ Top
Measure straight from top edge to bottom edge at sides.		Measure straight from edge to edge across top.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

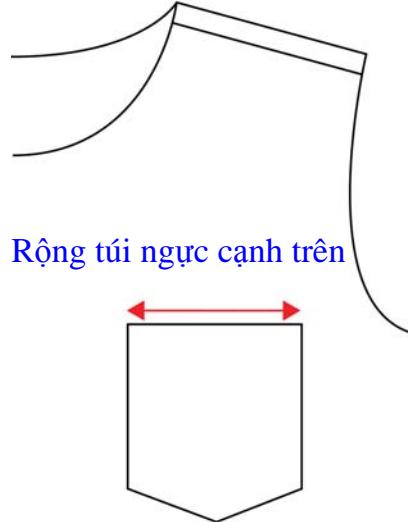
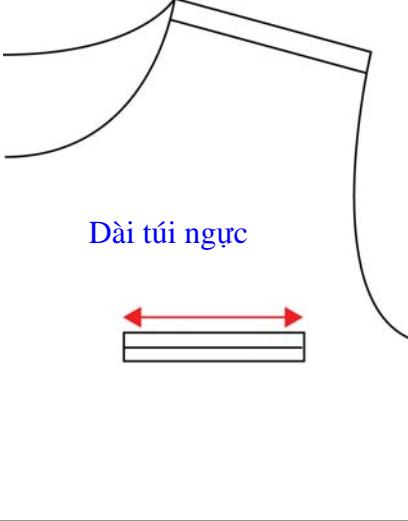
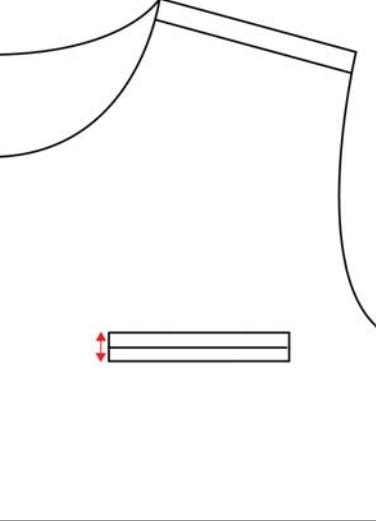
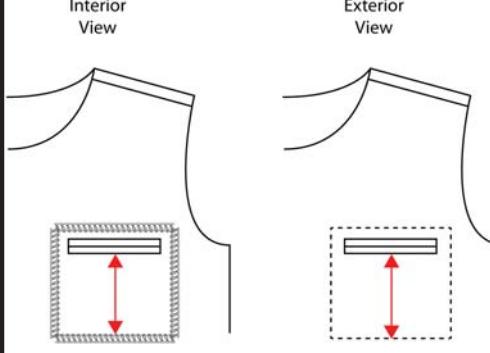
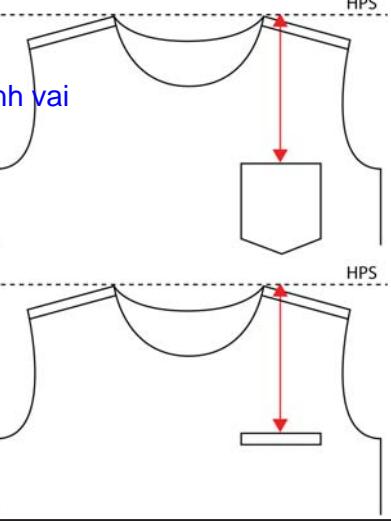
Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
P0612	Pocket Flap Width @ Bottom	P0613	Pocket Height @ Center (Including Flap)
Measure straight from edge to edge across bottom.		Measure straight from top edge of flap to bottom edge of pocket at center.	
P0614	Pocket Height @ Sides (Including Flap)	P0700	Chest Patch and Welt Pockets (Tops)
Measure straight from top edge of flap to bottom edge of pocket at sides.			
P0701	Chest Pocket Height @ Center	P0702	Chest Pocket Height @ Sides
Measure straight from top edge to bottom edge at center.	 dài túi ngực (giữa)-trong	Measure straight from top edge to bottom edge at sides.	 Dài túi ngực tại cạnh bên

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	Womens-None
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
P0703	Chest Pocket Width @ Top	P0704	Chest Pocket Width @ Bottom
Measure straight from edge to edge across top.	 Rộng túi ngực cạnh trên	Measure straight from edge to edge across bottom.	 Rộng túi ngực cạnh dưới
P0705	Chest Welt Pocket Opening (Seam to Seam)	P0706	Chest Welt Pocket Height (Total)
Measure straight from inside edge to inside edge.	 Dài túi ngực	Measure edge to edge.	 coi túi ngực
P0707	Chest Welt Pocket Bag Depth fm Bottom Seam	P0708	Chest Pocket fm HPS
On inside of garment, measure finished length of pocket from bottom seam of welt to seam/stitch. If styling is stitch-through pocket, measure on exterior of garment.	 Interior View Exterior View	Measure from HPS to top edge of pocket.	 Túi ngực cách đỉnh vai HPS HPS

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

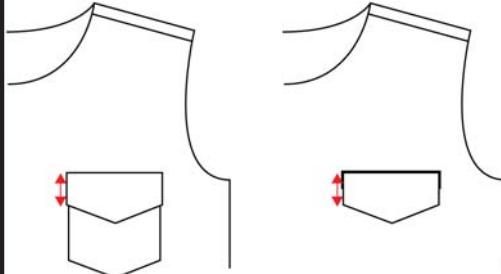
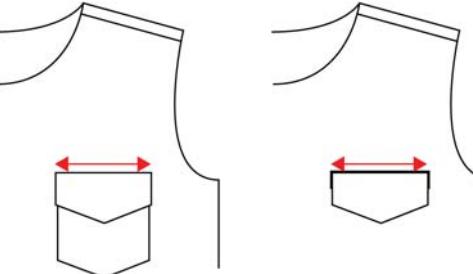
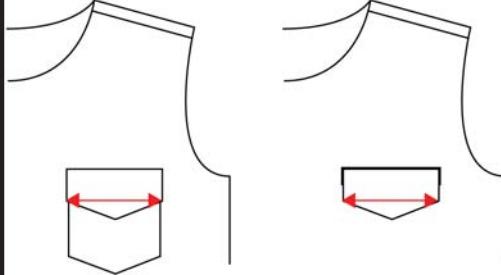
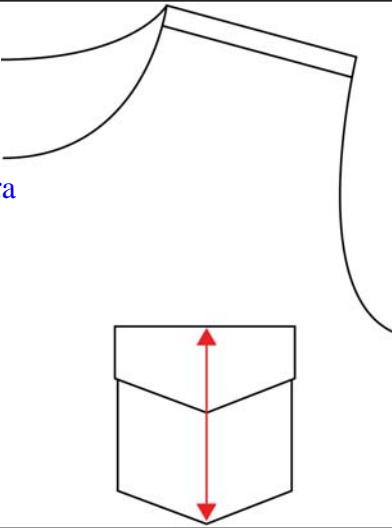
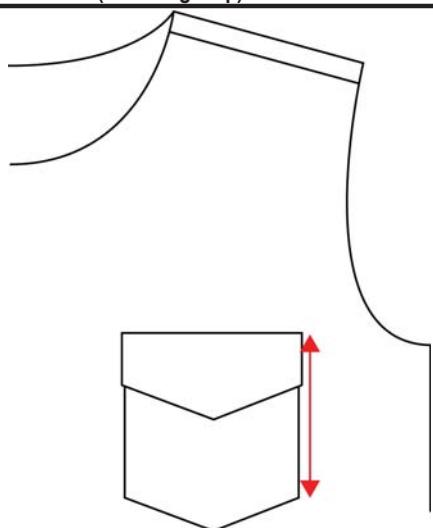
Style: EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season: Templates/Admin 0000	Mat. One Desc:	Date Created:	Date Modified
Wght/Width:	Mat. One Content:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
Wash/Fin:	Gauge:	JKUBALAK	JKUBALAK
End/Yrn Ct:			
P0709 Chest Pocket fm Shoulder Seam	P0710 Chest Pocket fm Shoulder Seam @ CF Side		
Measure from shoulder seam at neck to top edge of pocket.	Measure from shoulder seam at neck to top edge of pocket at center front side.		
P0711 Chest Pocket fm Shoulder Seam @ AH Side	P0712 Chest Pocket fm CF		
Measure from shoulder seam at neck to top edge of pocket at armhole side.	Measure from center front of garment to edge of pocket.		
P0713 Chest Pocket fm Armhole	P0714 Chest Pocket Flap Height @ Center		
Measure from armhole seam/edge to edge of pocket.	Measure straight from top to bottom edge at center.		

Design Stage

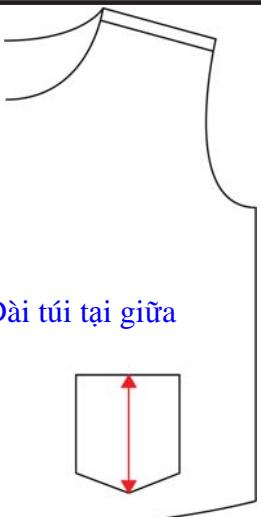
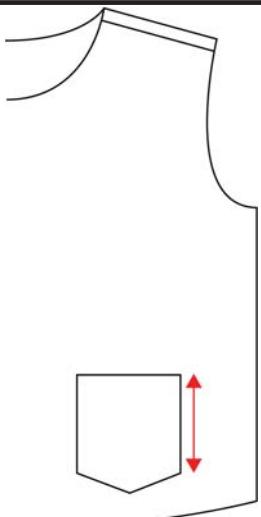
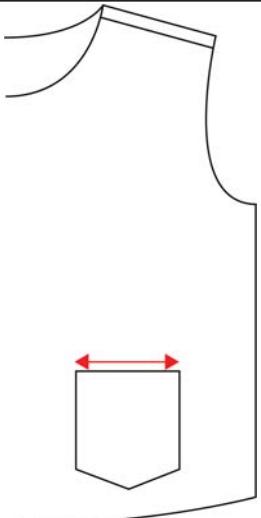
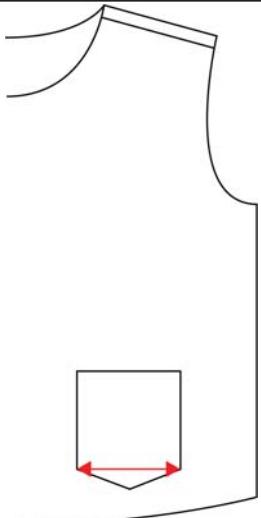
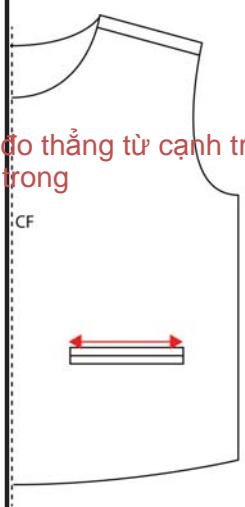
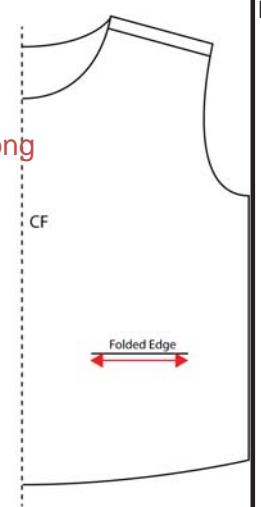
EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	Womens-None
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
P0715	Chest Pocket Flap Height @ Sides	P0716	Chest Pocket Flap Width @ Top
Measure straight from top to bottom edge at sides.	To bản nắp túi tại cạnh bên 	Measure straight from edge to edge across top.	
P0717	Chest Pocket Flap Width @ Bottom	P0718	Chest Pocket Height @ Center (Including Flap)
Measure straight from edge to edge across bottom.		Measure straight from top edge of flap to bottom edge of pocket at center. Dài túi ngực tại giữa	
P0719	Chest Pocket Height @ Sides (Including Flap)	P0800	Lower Patch and Welt Pockets (Tops)
Measure straight from top edge of flap to bottom edge of pocket at sides. Dài túi ngực cạnh bên			

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style: EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season: Templates/Admin 0000	Mat. One Desc:	Date Created	Date Modified
Wght/Width:	Mat. One Content:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
Wash/Fin:	Gauge:	JKUBALAK	JKUBALAK
End/Yrn Ct:			
P0801	Pocket Height @ Center	P0802	Pocket Height @ Sides
Measure straight from top edge to bottom edge at center.		Measure straight from top edge to bottom edge at sides.	
P0803	Pocket Width @ Top	P0804	Pocket Width @ Bottom
Measure straight from edge to edge across top.		Measure straight from edge to edge across bottom.	
P0805	Welt Pocket Opening	P0806	Welt Pocket Height (Total)
Measure straight from inside edge to inside edge.		Measure edge to edge.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style	EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season:	Templates/Admin 0000	Mat. One Desc:	Date Created	Date Modified
Wght/Width:		Mat. One Content:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
Wash/Fin:		Gauge:	JKUBALAK	JKUBALAK

P0807	Welt Pocket Bag Depth fm Bottom Seam	P0808	Pocket fm CF @ Top
<p>On inside of garment, measure finished length of pocket from bottom seam of welt to seam/stitch. If styling is stitch-through pocket, measure on exterior of garment.</p>			<p>Measure from center front of garment to edge of pocket at top corner.</p> <p>Túi cách giữa TT - cạnh trên</p>
P0809	Pocket fm CF @ Bottom	P0810	Pocket fm Sideseam @ Top
<p>Measure from center front of garment to edge of pocket at bottom corner.</p> <p>Túi cách giữa trước - cạnh dưới</p>			<p>Measure from seam to edge of pocket at top corner.</p> <p>Túi cách sườn - trên</p>
P0811	Pocket fm Sideseam @ Bottom	P0812	Pocket fm Bottom Edge @ CF Side
<p>Measure from seam to edge of pocket at bottom corner.</p>			<p>Measure from bottom edge of garment to edge of pocket at center front corner.</p> <p>Túi cách lai - cạnh giữ trước</p>

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style: EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season: Templates/Admin 0000	Mat. One Desc:	Date Created:	Date Modified
Wght/Width:	Mat. One Content:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
Wash/Fin:	Gauge:	JKUBALAK	JKUBALAK
End/Yrn Ct:			
P0813	Pocket fm Bottom Edge @ Sideseam Side	P0814	Pocket Flap Height @ Center
Measure from bottom edge of garment to edge of pocket at corner closest to side seam.		Measure straight from top to bottom edge at center.	
P0815	Pocket Flap Height @ Sides	P0816	Pocket Flap Width @ Top
Measure straight from top to bottom edge at sides.		Measure straight from edge to edge across top.	
P0817	Pocket Flap Width @ Bottom	P0818	Pocket Height @ Center (Including Flap)
Measure straight from edge to edge across bottom.		Measure straight from top edge of flap to bottom edge of pocket at center.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
P0819	Pocket Height @ Sides (Including Flap)	P0820	On Seam Pocket Opening
Measure straight from top edge of flap to bottom edge of pocket at sides.		Measure from opening edge to edge along seam.	
P0821	On Seam Pocket fm Bottom Edge	P0822	Pocket fm CF @ Top (Tailored)
Measure from bottom edge of garment to bottom of pocket opening along seam.		Measure from the center of the keyhole to edge of pocket at top corner.	 Túi túi đến giữa trước
P0823	Pocket Bag Depth from Pocket Opening Edge	P0824	Sweater Patch Pocket Trim Height
On inside of garment, measure finished length of pocket from folded opening edge to bottom edge of bag.		Measure from pocket edge to transition point.	

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

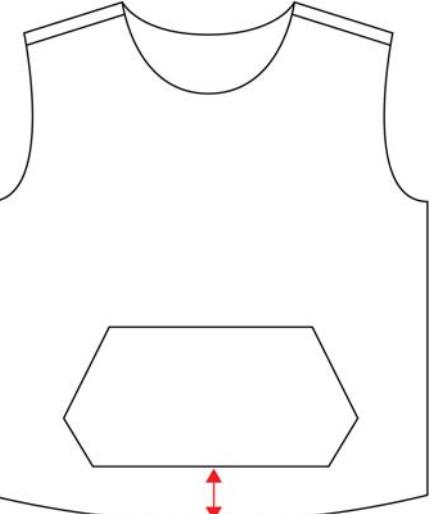
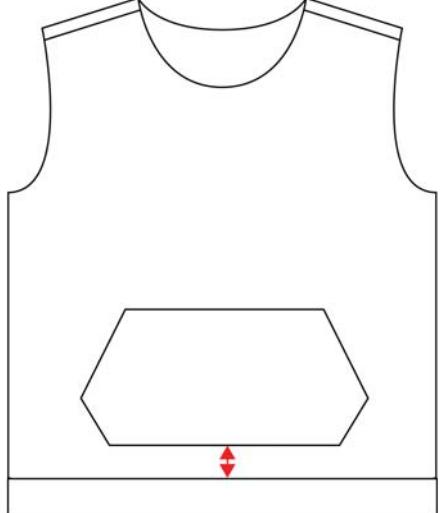
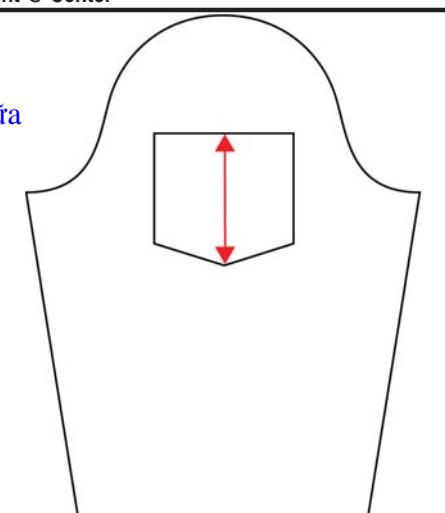
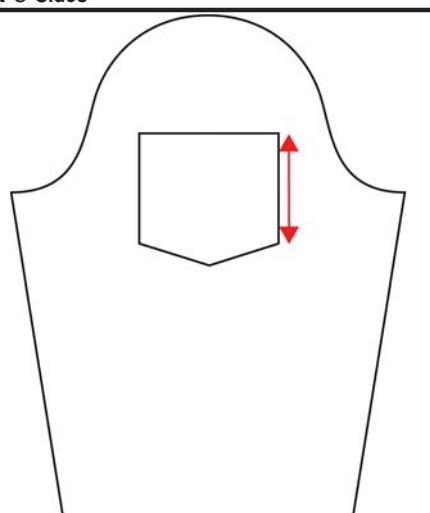
WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style	EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season:	Templates/Admin 0000	Mat. One Desc:		
Wght/Width:		Mat. One Content:	Date Created	Date Modified
Wash/Fin:		Gauge:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
		End/Yrn Ct:	JKUBALAK	JKUBALAK

P0825	Pocket fm Front Edge @ Top	P0900	Kangaroo Pockets (Tops)
	Measure from front edge of garment to edge of pocket at top corner. Túi cách cạnh thân trước		
P0901	Kanga Pocket Height @ Center	P0902	Kanga Pocket Width @ Top
	Measure straight from top edge to bottom edge at center. To bản túi đắp đo ở giữa		Measure straight from edge to edge across top. Rộng túi đắp đo ở cạnh trên
P0903	Kanga Pocket Width @ Bottom	P0904	Kanga Pocket Width @ Widest Point
	Measure straight from edge to edge across bottom. Rộng túi đắp đo ở cạnh dưới		Measure straight from edge to edge at widest point of pocket. Rộng túi đắp đo ở điểm rộng nhất

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style	EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season:	Templates/Admin 0000	Mat. One Desc:		
Wght/Width:		Mat. One Content:	Date Created	Date Modified
Wash/Fin:		Gauge:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
		End/Yrn Ct:	JKUBALAK	JKUBALAK

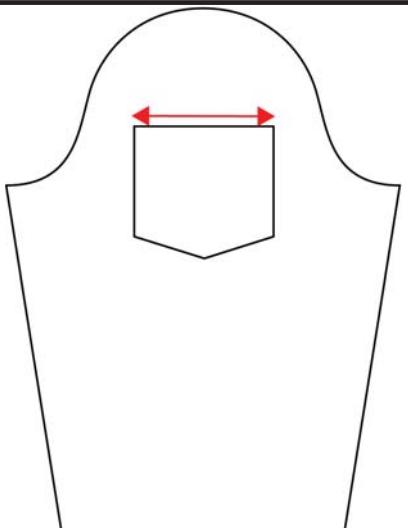
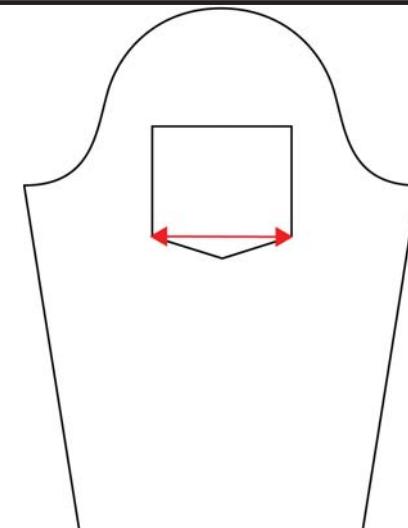
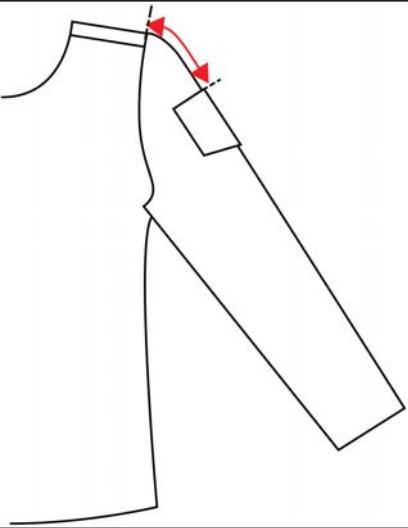
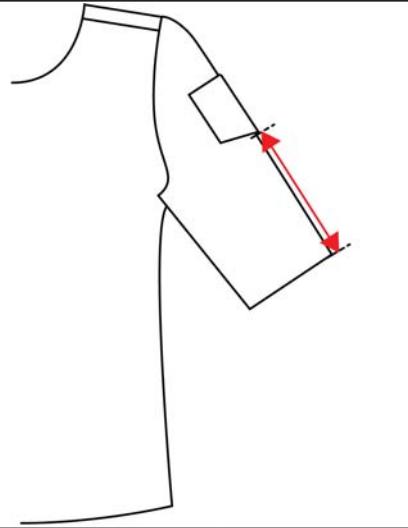
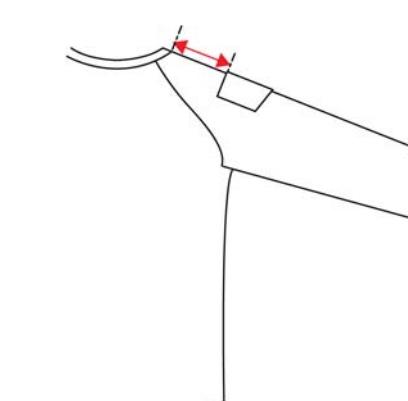
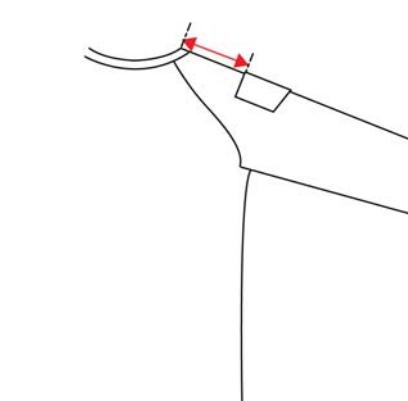
P0905	Kanga Pocket Opening	P0906	Kanga Pocket fm Bottom Edge	
Measure from edge to edge along opening.		Measure from bottom edge of garment to edge of pocket at center front.		
				
P0907	Kanga Pocket fm Bottom Seam	P1000	Sleeve Pockets (Tops)	
Measure from bottom seam to edge of pocket at center front.				
P1001	Sleeve Pocket Height @ Center	P1002	Sleeve Pocket Height @ Sides	
Measure straight from top to bottom edge at center.		Measure straight from top to bottom edge at sides.		

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

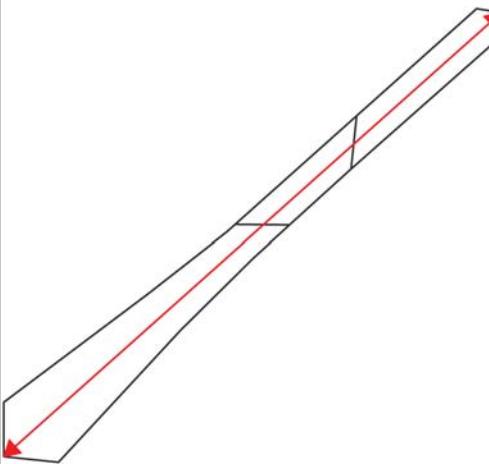
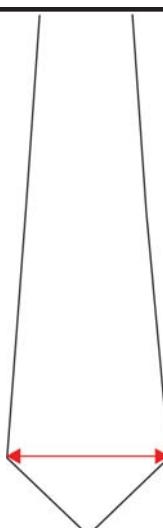
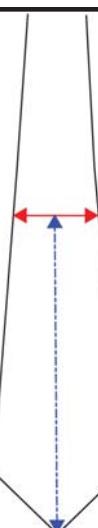
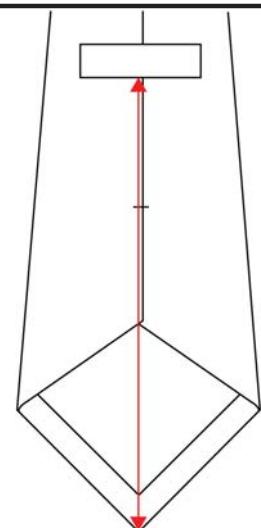
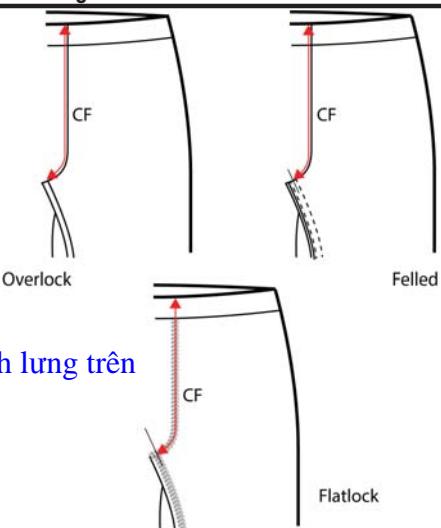
Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	Womens-None
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
P1003	Sleeve Pocket Width @ Top	P1004	Sleeve Pocket Width @ Bottom
Measure straight from edge to edge across top.		Measure straight from edge to edge across bottom.	
Rộng túi tay cạnh trên			
P1005	Sleeve Pocket fm Armhole Seam	P1006	Sleeve Pocket fm Bottom Edge
Measure straight from armhole seam at HPS to top edge of pocket.		Measure from sleeve opening edge at overarm to edge of pocket at center.	
P1007	Sleeve Pocket fm Neck Seam	P1008	Sleeve Pocket fm Neck Edge
Measure from neck seam at HPS to top edge of pocket.		Measure from neck edge at HPS to top edge of pocket.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style	EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season:	Templates/Admin 0000	Mat. One Desc:	Date Created	Date Modified
Wght/Width:		Mat. One Content:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
Wash/Fin:		Gauge:	JKUBALAK	JKUBALAK
		End/Yrn Ct:		

Q001	Neck Tie Length	Q002	Neck Tie Width at Tail
Measure center of tie from end to end.			
Measure straight, edge to edge at tail.			
Q003	Neck Tie Width at Tip	Q004	Neck Tie Width _ " from Tip
Measure straight, corner to corner at tip.			
Measure from tip to specified point, then measure across edge to edge.			
Q005	Neck Tie Self Loop from Tip	R001	Front Rise from Top WB Edge
Measure from tip to bottom edge of loop.			
Lay rise flat so that garment naturally curves. Measure from center front top edge to crotch seam along curve. For felled and flatlock seams, measure to center of fell/flatlock at crotch.			 <p>Đây trước từ cạnh lưng trên</p>

Design Stage

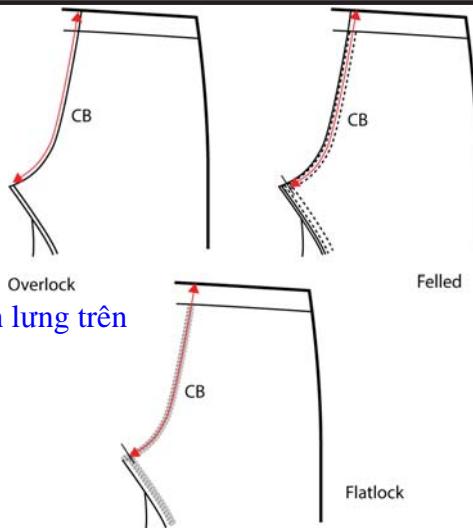
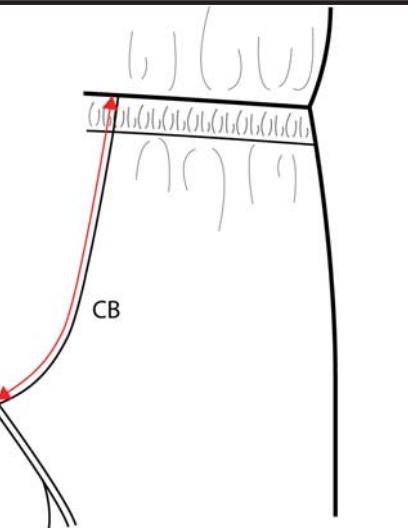
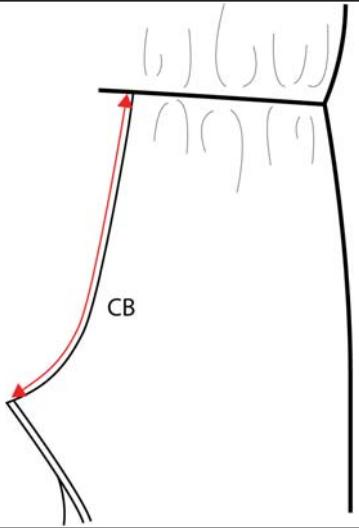
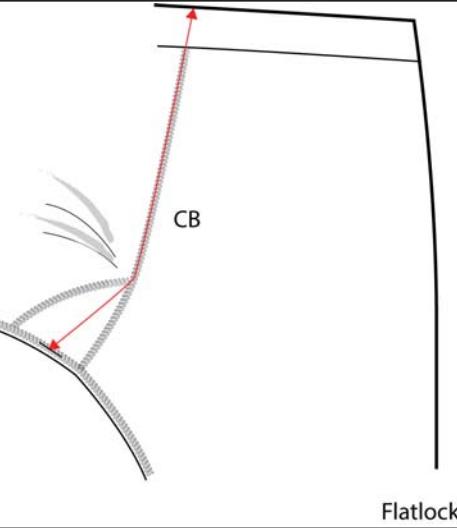
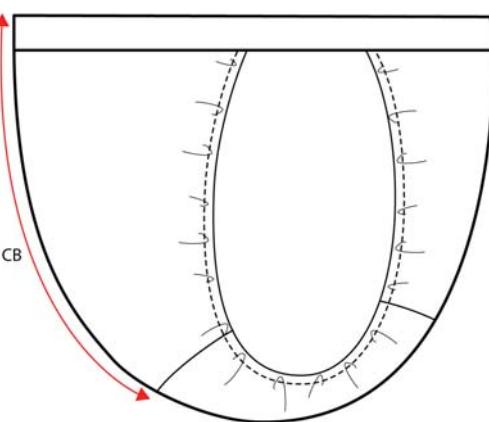
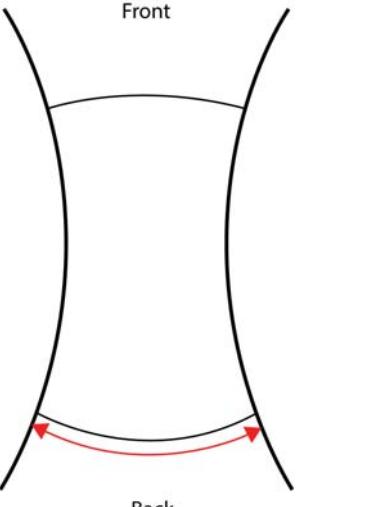
EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
R001.1	Front Rise from Top WB Seam (Rompers)	R001.2	Front Rise from Waist Seam (Rompers)
Lay rise flat so that garment naturally curves. Measure from center front top edge of waistband seam to crotch seam along curve.		Lay rise flat so that garment naturally curves. Measure from center front waist seam to crotch seam along curve.	
R001.3	Front Rise from Top WB Edge (excluding Gusset)	R003	Front Rise to Gusset Seam (Panties)
Lay rise flat so that garment naturally curves. Measure from center front top edge to crotch seam along curve (excluding gusset). For felled seams, measure to center of fell at crotch.		Fold garment at center front, measure from center front waist at top edge to crotch seam along curve.	
R003.1	Front Rise to Liner Stitching (Panties)	R007	Crotch Gusset/Liner Width @ Front (Panties)
Fold garment at center front, measure from center front waist at top edge to front liner stitching along curve.		Measure along seam/edge from edge to edge including trim.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style: EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season: Templates/Admin 0000	Mat. One Desc:	Date Created:	Date Modified
Wght/Width:	Mat. One Content:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
Wash/Fin:	Gauge:	JKUBALAK	JKUBALAK
End/Yrn Ct:			
R012	Back Rise from Top WB Edge	R012.1	Back Rise from Top WB Seam (Rompers)
Lay rise flat so that garment naturally curves. Measure from center front top edge to crotch seam along curve. For felled and flatlock seams, measure to center of fell/flatlock at crotch.		Lay rise flat so that garment naturally curves. Measure from center front top edge of waistband seam to crotch seam along curve.	
Đây sau cạnh lưng trên			
R012.2	Back Rise from Waist Seam (Rompers)	R012.3	Back Rise from Top WB Edge (including Gusset)
Lay rise flat so that garment naturally curves. Measure from center front waist seam to crotch seam along curve.		Lay rise flat so that garment naturally curves. Measure from center back top edge along rise seam and through the center of the gusset to crotch seam along curve. For felled seams, measure to center of fell at crotch.	
R014	Back Rise to Gusset Seam (Panties)	R020	Crotch Gusset/Liner Width @ Back (Panties)
Fold garment at center back, measure from top edge to crotch seam along curve.		Measure along seam from edge to edge. For garments without a separate crotch panel, measure the width at back part of floating crotch panel.	

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
R022	Crotch Gusset/Liner Length (Panties)	R023	Crotch Width on Fold (Panties)
Fold crotch lengthwise with leg edges even. Measure along curve end to end.		Align top edges. Measure along fold from edge to edge.	
R031	Waist Pitch	R032	Gusset Length (Bottoms)
Measure from top edge of CB top edge to CF top edge.		Measure through center of gusset from seam to seam. For felled seams, measure to center of fell.	
R033	Gusset Width (Bottoms)	S001	Sleeve Length from Armhole - Long
Measure from seam to seam along inseam. For felled seams, measure to center of fell.		Measure from armhole seam along top of sleeve to sleeve opening.	

Design Stage

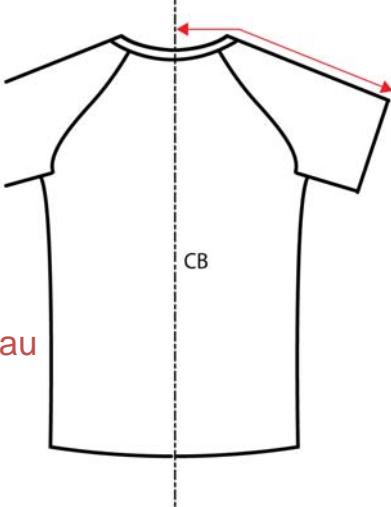
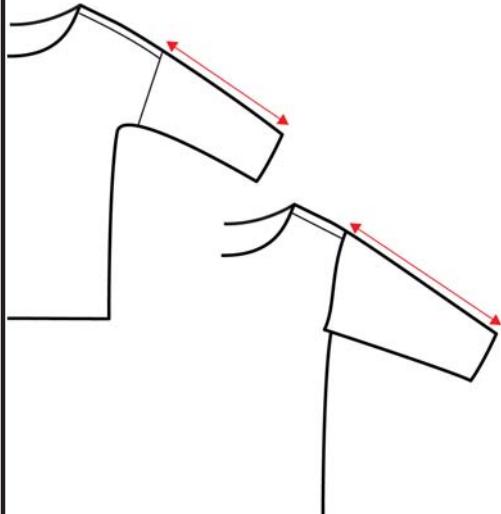
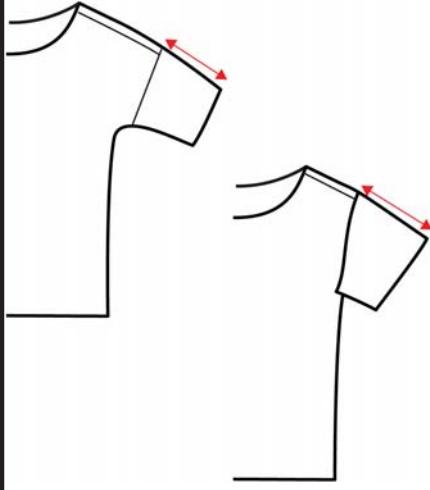
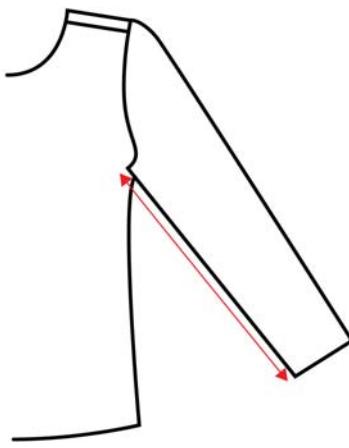
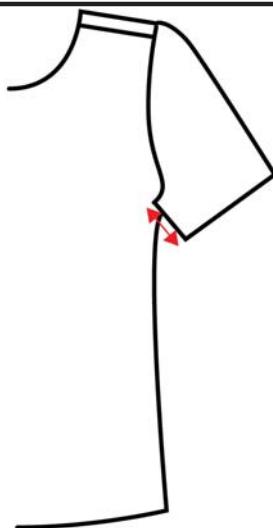
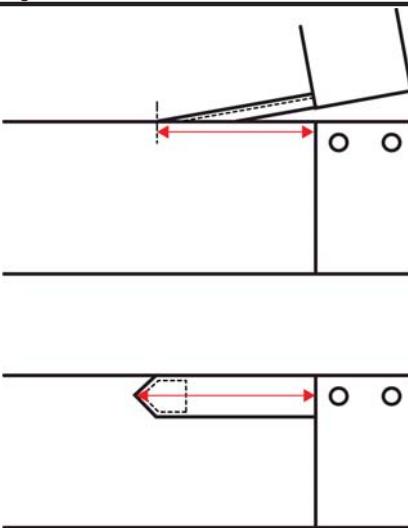
EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
S003	Sleeve Length from Armhole - Short	S004	Sleeve Length fm Neck Seam - Long (Raglan/Dolman)
Measure from armhole seam along top of sleeve to sleeve opening.		Measure from neck seam along top of sleeve to sleeve opening.	
S004.1	Sleeve Length fm Neck Edge - Long (Raglan/Dolman)	S004.2	Sleeve Length fm CBN - Long (Raglan/Dolman)
Measure from neck edge along top of sleeve to sleeve opening.		3-Point Measurement: Establish an imaginary line at center back. Measure straight from center back to neck point, then continue down overarm to sleeve opening edge.	 Dài tay từ giữa cổ sau - đo 3 điểm
S006	Sleeve Length fm Neck Seam - Short (Raglan/Dolman)	S006.1	Sleeve Length fm Neck Edge - Short (Raglan/Dolman)
Measure from neck seam along top of sleeve to sleeve opening.		Measure from neck edge along top of sleeve to sleeve opening.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style: EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season: Templates/Admin 0000	Mat. One Desc:	Date Created:	Date Modified
Wght/Width:	Mat. One Content:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
Wash/Fin:	Gauge:	JKUBALAK	JKUBALAK
End/Yrn Ct:			
S006.2	Sleeve Length fm CBN - Short (Raglan/Dolman)	S007	Sleeve Length from Armhole - Long (Dropped Shldr)
3-Point Measurement: Establish an imaginary line at center back. Measure straight from center back to neck point, then continue down overarm to sleeve opening edge.		Measure from armhole seam along top of sleeve to sleeve opening.	
<i>dài tay từ giữa sau</i>			
S008	Sleeve Length from Armhole - Short (Dropped Shldr)	S009	Underarm Sleeve Length - Long
Measure from armhole seam along top of sleeve to sleeve opening.		Measure from bottom of armhole to sleeve opening.	
S011	Underarm Sleeve Length - Short	S012	Sleeve Placket/Slit Length @ Center
Measure from bottom of armhole to sleeve opening.		Measure from top seam/edge of cuff to top of placket at center.	

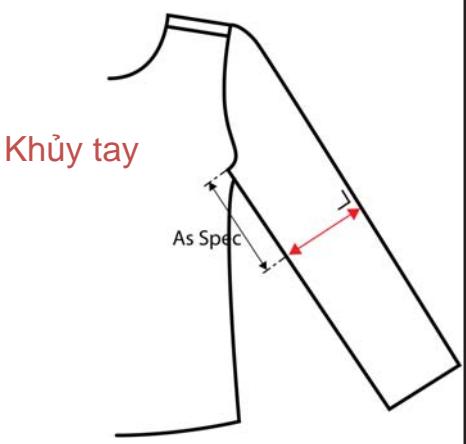
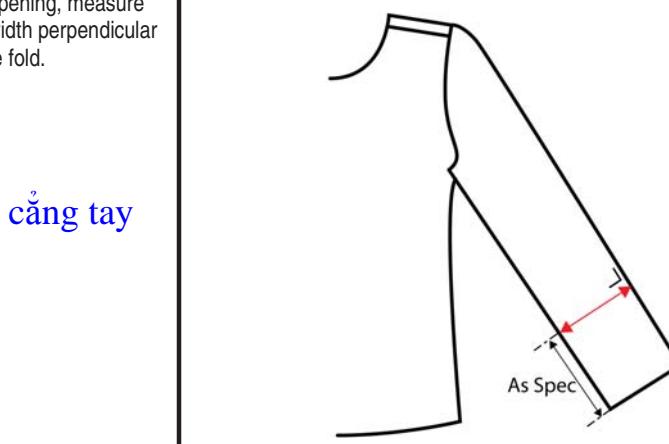
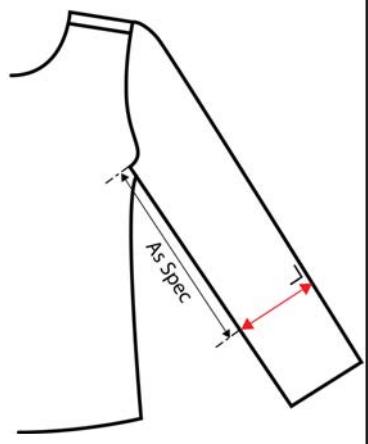
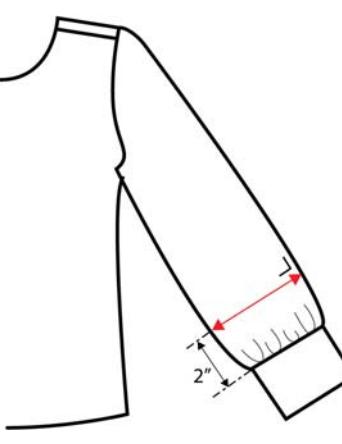
WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
S012.1	Sleeve Placket Length @ Sides	S013	Sleeve Placket Width
Measure from top seam/edge of cuff to edge of placket at shortest side.		Measure across placket edge to edge.	
S014	Sleeve Cap Height	S014.1	Sleeve Cap Width Placement fm Armhole
Establish an imaginary line from underarm perpendicular to sleeve fold. Measure from top of armhole to imaginary line. cao đầu tay		Measurement given from armhole at overarm to identify cap width placement.	
S014.2	Sleeve Cap Width Placement fm CBN (Raglan)	S014.3	Sleeve Cap Width Placement fm Neck Edge (Raglan)
3-Point Measurement: Establish an imaginary line at center back. Measurement given from center back to neck point and along overarm to identify cap width placement.		Measure given from neck edge along overarm to identify cap width placement.	

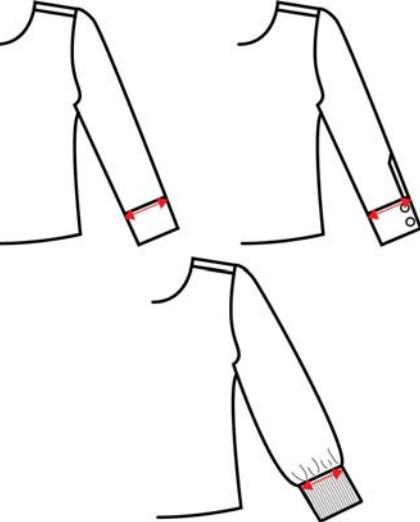
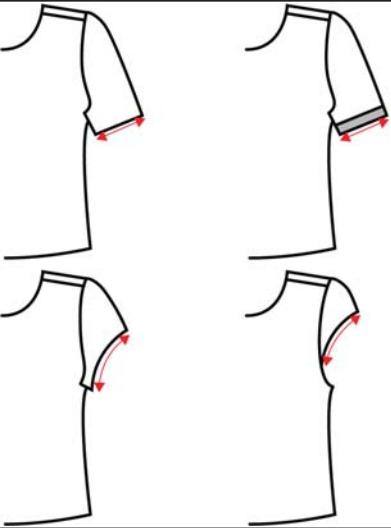
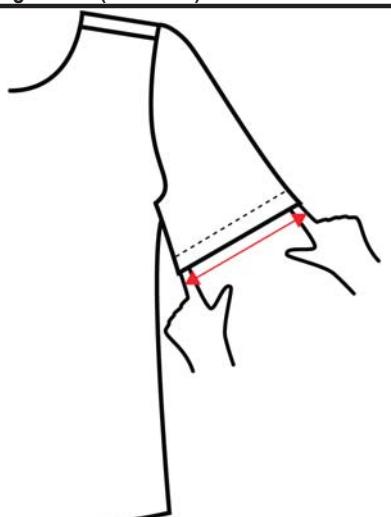
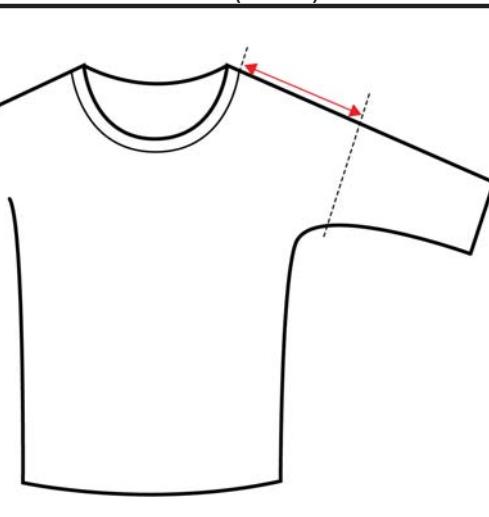
WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
S014.4	Sleeve Cap Width (Total)	S014.5	Slv Width @ Neck Edge - Relaxed (Off the Shoulder)
At specified point, measure across front of sleeve cap, then measure across back of sleeve cap. Add measurements together for total cap width. Rộng đầu tay		Measure from front raglan seam to back raglan seam along neck edge with garment relaxed.	
S014.6	Slv Width @ Neck Seam - Relaxed (Off the Shoulder)	S014.7	Slv Width @ Neck Edge - Extended(Off the Shoulder)
Measure from front raglan seam to back raglan seam along neck seam with garment relaxed.		Measure from front raglan seam to back raglan seam along neck edge with garment extended until fabric is flat.	
S014.8	Slv Width @ Neck Seam - Extended(Off the Shoulder)	S015	Muscle/Bicep 1" below Armhole
Measure from front raglan seam to back raglan seam along neck edge with garment extended until fabric is flat.		At 1" below armhole/underarm measure sleeve width perpendicular to sleeve fold.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
S016	Elbow _" from Armhole	S017	Forearm _" from Sleeve Opening
At specified point below armhole/underarm measure sleeve width perpendicular to sleeve fold.		At specified point from sleeve opening, measure sleeve width perpendicular to sleeve fold.	
S017.1	Forearm _" from Armhole	S017.2	Forearm 2" above Cuff Seam
At specified point from armhole, measure sleeve width perpendicular to sleeve fold.		Pull fabric above cuff flat. At 2" from sleeve cuff seam, measure sleeve width perpendicular to sleeve fold.	
S018	Sleeve Width @ Opening - Long	S018.1	Sleeve Width @ Opening - Long (Relaxed)
Measure opening edge to edge.		Measure opening edge to edge with garment relaxed.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

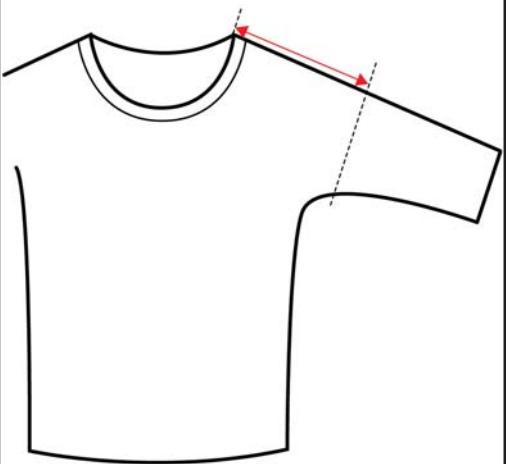
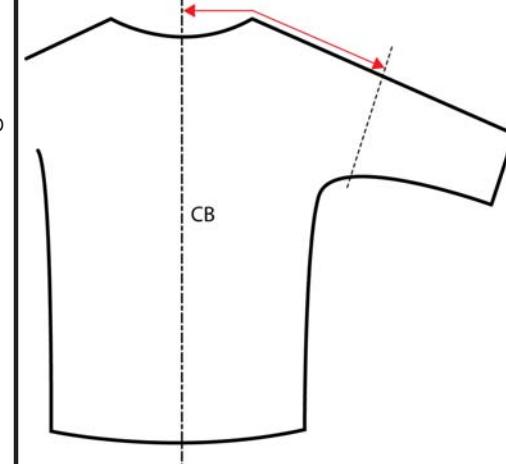
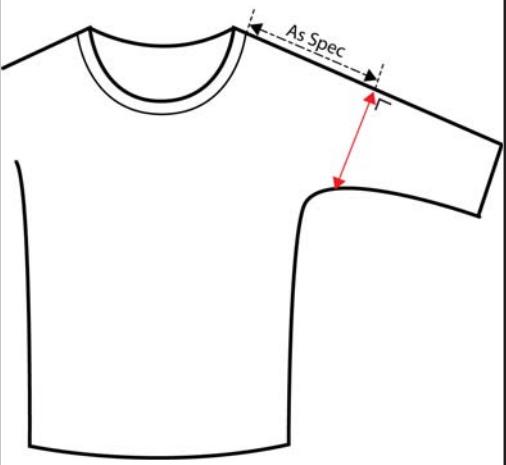
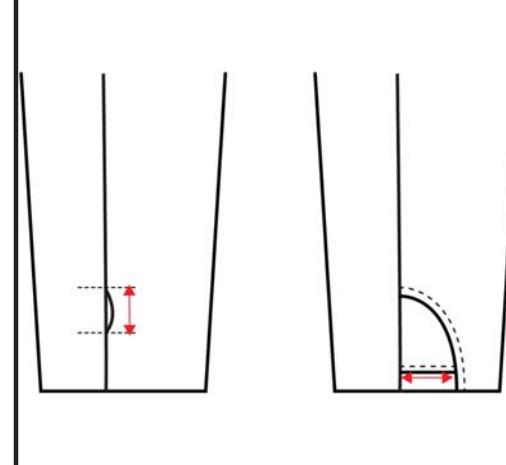
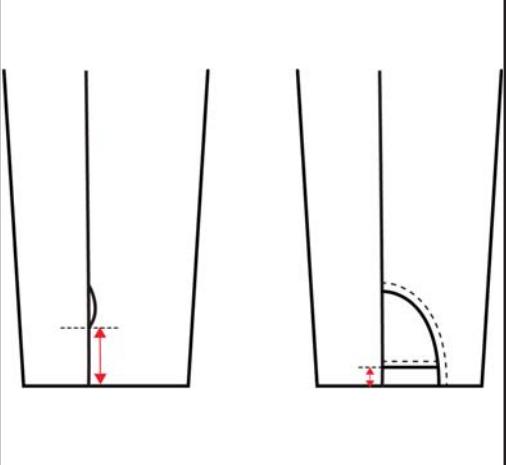
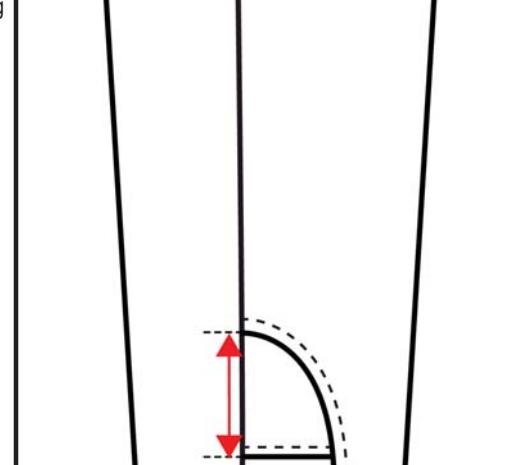
Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
S018.2	Sleeve Width @ Opening - Long (Extended)	S019	Sleeve Width @ Cuff Seam - Long
Measure opening edge to edge with sleeve/cuff extended until fabric is flat.	 Cửa tay đo kéo căng	Measure from edge to edge along seam.	 Cửa tay đo từ cạnh đến cạnh dọc theo đường may
S020	Sleeve Width @ Opening - Short	S020.1	Sleeve Width @ Opening - Short (Relaxed)
Measure opening edge to edge.		Measure opening edge to edge with garment relaxed.	
S020.2	Sleeve Width @ Opening - Short (Extended)	S026	Sleeve Width Placement from Neck Seam (Dolman)
Measure opening edge to edge with sleeve/cuff extended until fabric is flat.		Measure given from neck seam along shoulder seam to identify sleeve width placement.	

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

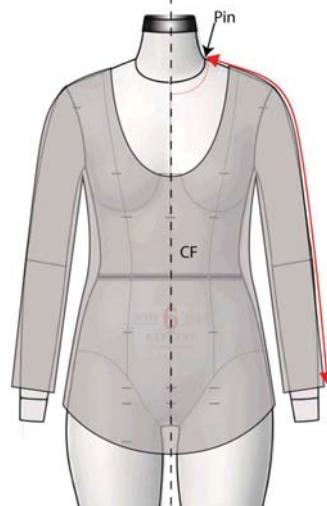
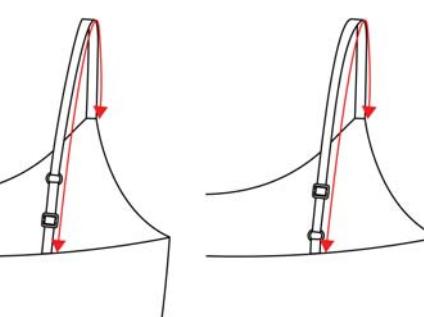
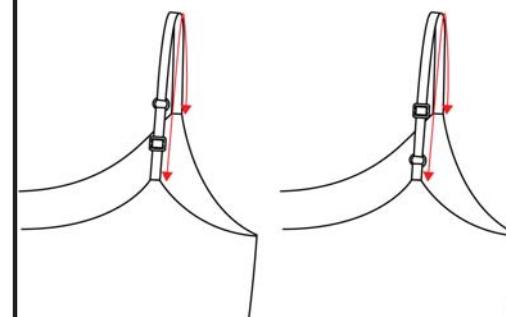
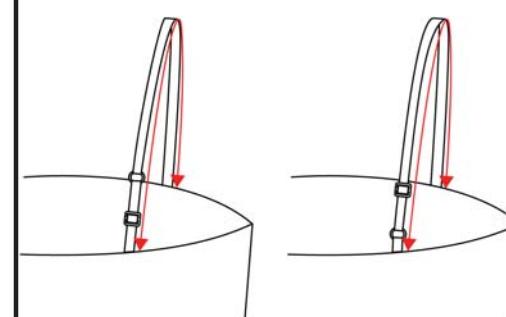
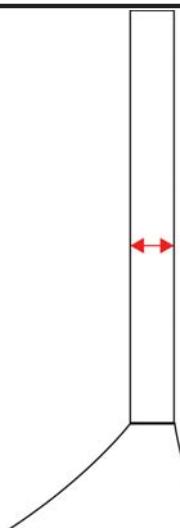
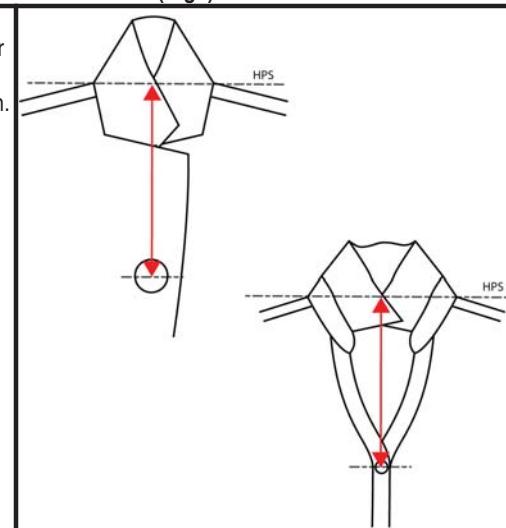
Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
S026.1	Sleeve Width Placement from Neck Edge (Dolman)	S026.2	Sleeve Width Placement from CBN (Dolman)
Measure given from neck edge along shoulder seam to identify sleeve width placement.		3-Point Measurement: Establish an imaginary line at center back. Measurement given from center back to neck point and along shoulder seam to identify sleeve width placement.	
S027	Sleeve Width (Dolman)	S028	Thumbhole Opening Length
At specified measurement, measure sleeve width perpendicular to sleeve fold.		Measure from inside edge to edge of opening.	
S029	Thumbhole Opening Placement from Sleeve Edge	S030	Thumbhole Inset Height
Measure from sleeve edge to thumbhole opening edge.		Measure from top inset seam to thumbhole opening along sleeve seam.	

Design Stage

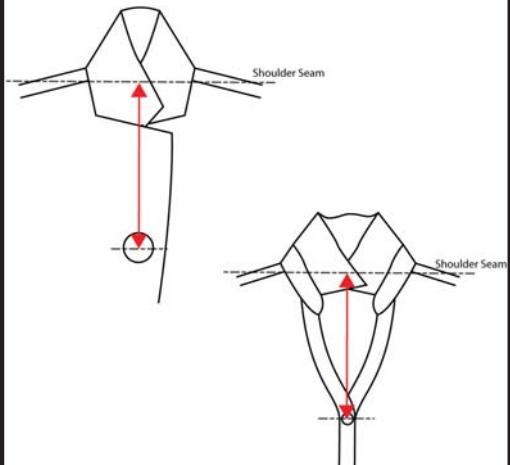
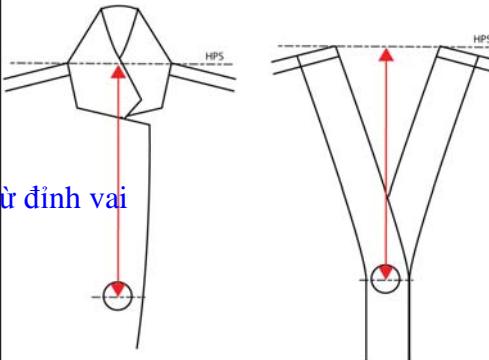
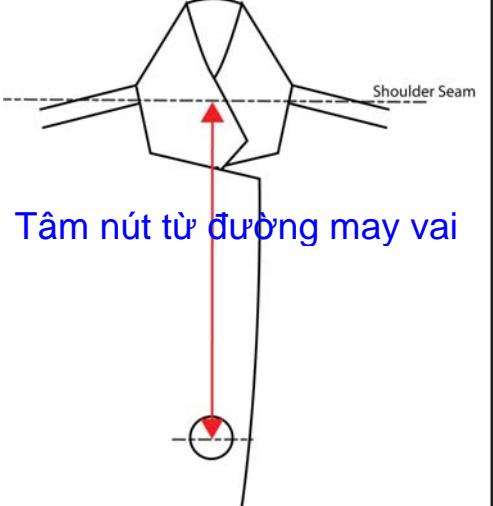
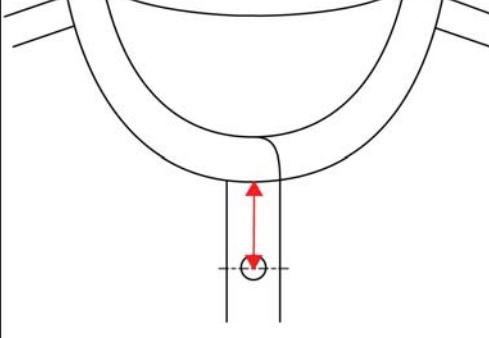
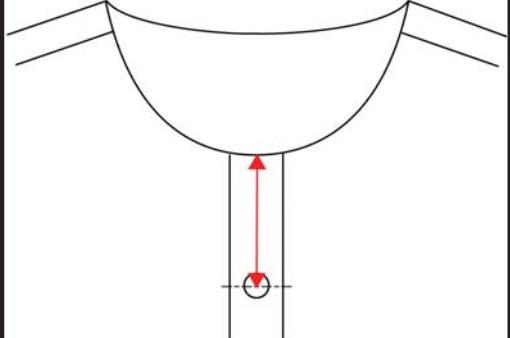
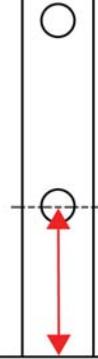
EXPRESS How to Measure guide (TOTAL CO)

Womens-None

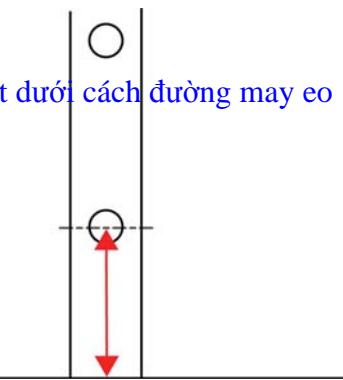
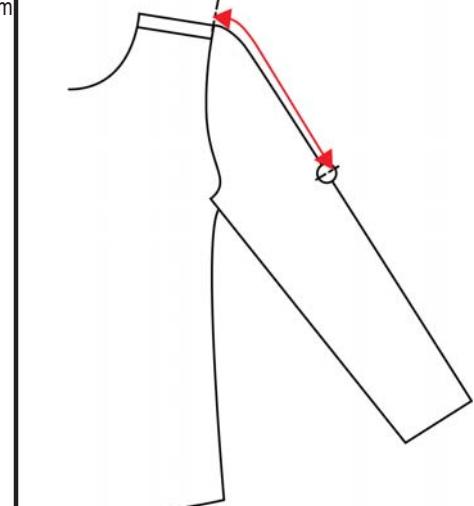
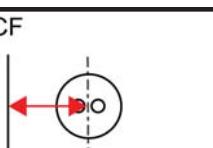
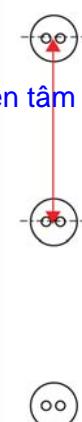
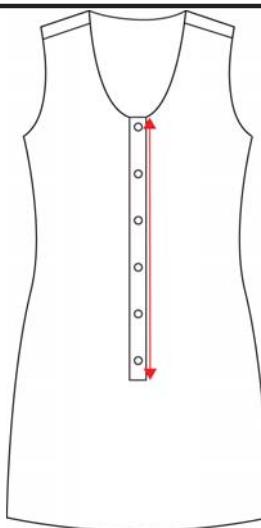
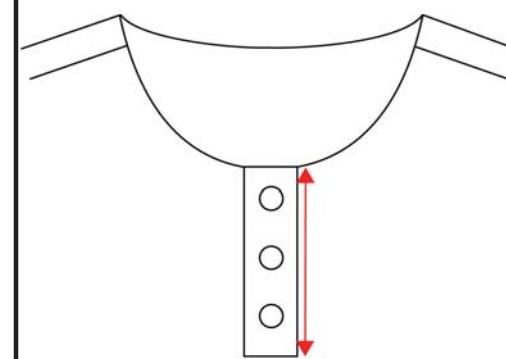
WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
S031	Sleeve Length from Neck Pin - On Form (base size)	T001	Total Strap Length incl 2" Adjust (Straight Back)
With garment on body/form, measure from Pin at side Neck of form to sleeve opening edge along the overarm.		Measure from HPB at front neckline to strap join at back neckline including specified adjustment.	
T001.1	Total Strap Length incl 2" Adjust (Peak Back)	T001.2	Total Strap Length incl 2" Adjust (Tube)
Measure from HPB at front neckline to HPB at back neckline including specified adjustment.		Measure from strap join at front neckline to strap join at back neckline including specified adjustment.	
T002	Strap Width - Cami	T003	Center of 1st Button from HPS (High)
Measure from edge to edge.		Establish an imaginary line from HPS to HPS. At center of imaginary line, measure down to center of 1st button.	

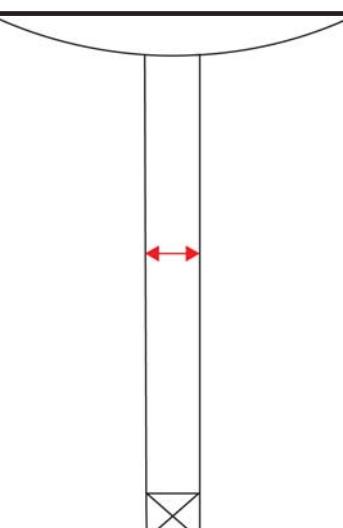
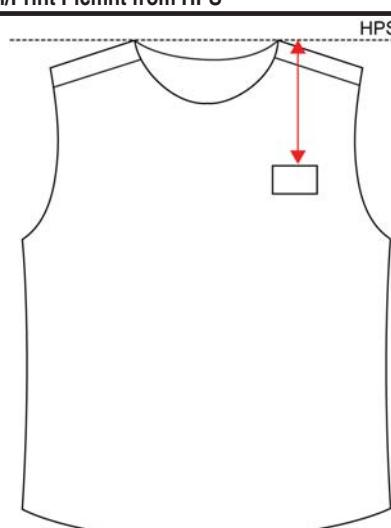
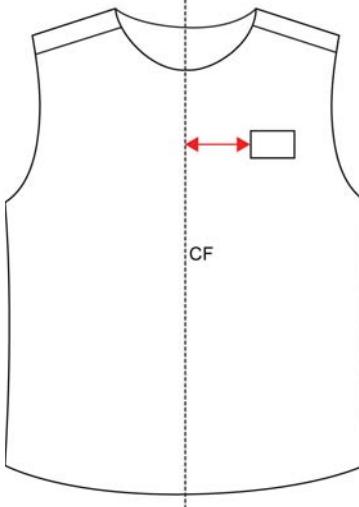
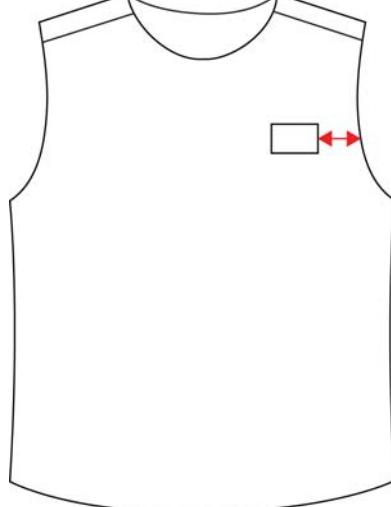
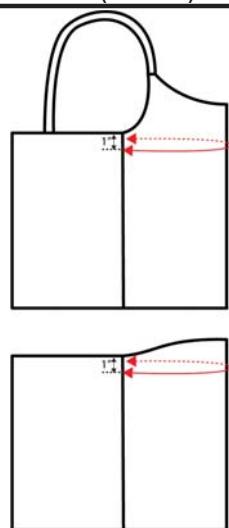
WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
T003.1	Center of 1st Button fm Shoulder Seam @ Nk (High)	T004	Center of 1st Button from HPS (Low)
Establish an imaginary line from shoulder seam to seam at neck point on front of garment. Measurement given from imaginary line to center of 1st button.		Establish an imaginary line from HPS to HPS. At center of imaginary line, measure down to center of 1st button.	 Tâm nút thứ nhất từ đỉnh vai
T004.1	Center of 1st Button fm Shoulder Seam @ Nk (Low)	T007	Center of 1st Button from Neck Seam
Establish an imaginary line from shoulder seam to seam at neck point on front of garment. Measurement given from imaginary line to center of 1st button.	 Tâm nút từ đường may vai	Measure from center front neck seam to center of first button.	 Tâm của nút thứ nhất cách đường may cổ
T007.1	Center of 1st Button from Neck Edge	T008	Center of Bottom Button from Hem Seam
Measure from center front neck edge to center of first button.	 Nút thứ nhất từ đường may cổ	Measure from center of button to bottom seam.	

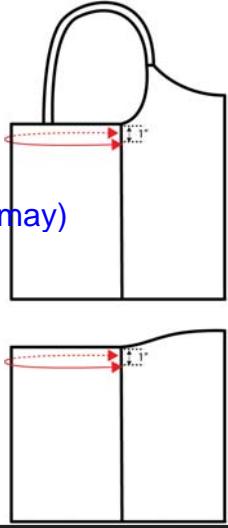
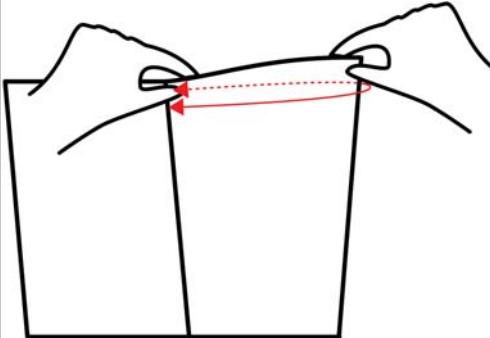
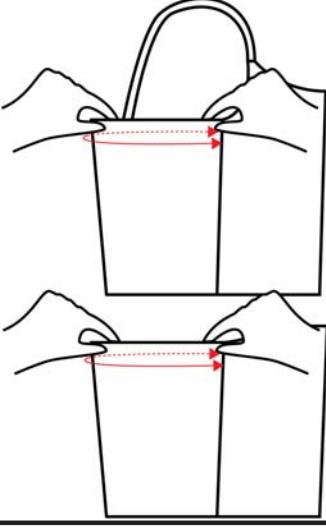
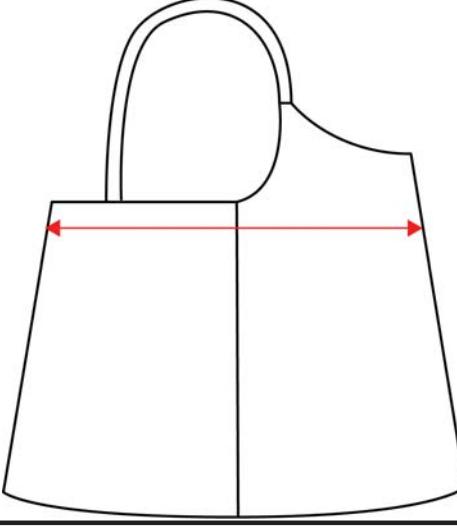
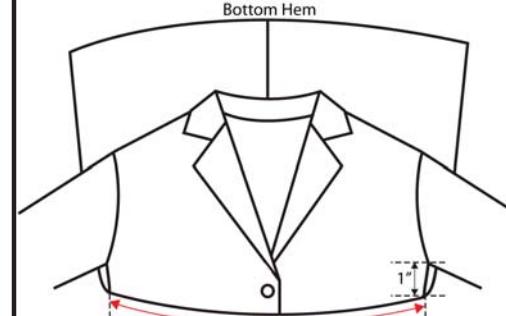
WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One Content: Gauge: End/Yrn Ct:	Mat. One ID#: Mat. One Desc: Date Created 09 SEP 2015 03:54 PM JKUBALAK	Description: NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
T008.1	Center of Bottom Button from Hem Edge	T009	Center of Button from Armhole Seam
Measure from center of button to bottom edge.	 Tâm của nút dưới cách đường may eo	Measure from armhole seam to center of button along overarm.	
T010	Center of Button to Front Edge	T011	Button Spacing - Center to Center
Measure horizontally from center of button to front edge.	CF  Tâm nút đến cạnh thân trước	Measure from center of button/snap to center of button/snap.	 Khoảng cách nút - từ tâm đến tâm
T017	Placket Length - Graded	T017.1	Placket Length - Non-Graded
Measure from top seam/edge to end of placket at center.		Measure from top seam/edge to end of placket at center.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
T018	Placket Width	U001	App/Emb/Logo/Graph/Print Plcmnt from HPS
Measure across placket edge to edge/seam.		Measure from HPS to highest point of applique/emb/logo/graphic/print.	
U003	App/Emb/Logo/Graph/Print Plcmnt from CF	U009	App/Emb/Logo/Graph/Print Plcmnt from AH
Measure from center front of garment to nearest point of applique/emb/logo/graphic/print.		Measure from armhole seam/edge to nearest point of applique/emb/logo/graphic/print.	
W001	Bust/Chest 1" below Armhole	W001.1	Front Bust/Chest 1" below AH - Relaxed (SS to SS)
Measure across garment 1" below armhole. (Fold to Fold)		Measure from side seam to side seam across the front of the garment 1" below armhole with garment relaxed.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

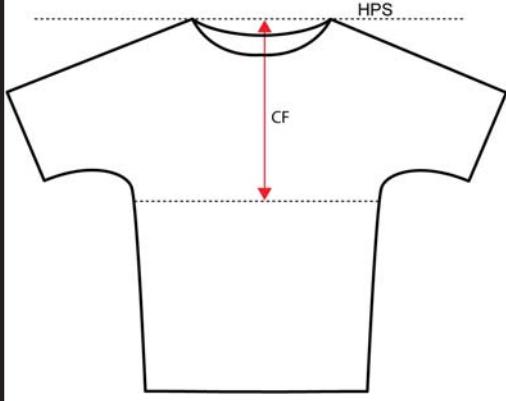
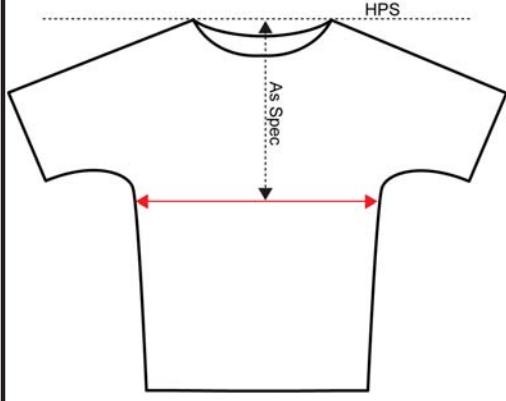
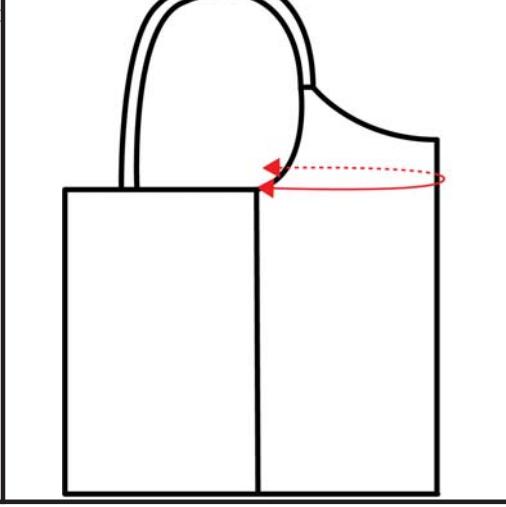
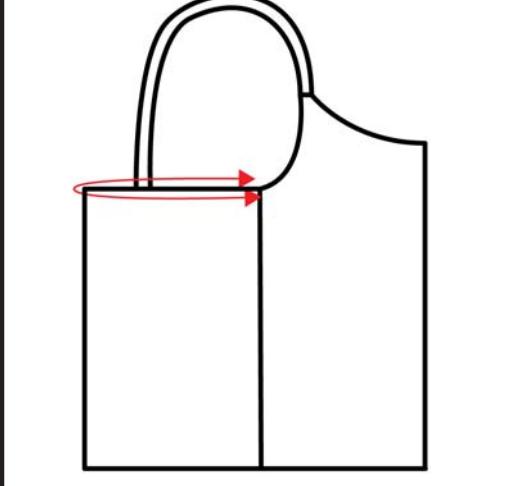
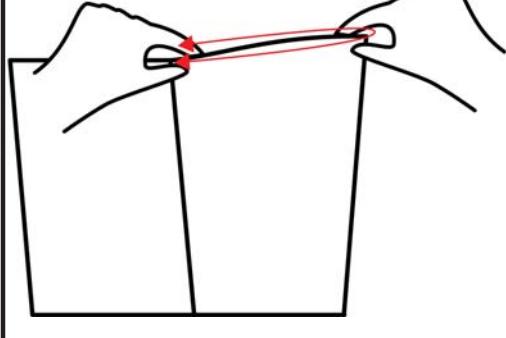
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One Content: Gauge: End/Yrn Ct:	Mat. One ID#: Mat. One Desc: Date Created 09 SEP 2015 03:54 PM JKUBALAK	Description: NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
W001.2	Back Bust/Chest 1" below AH - Relaxed (SS to SS)	W001.3	Front Bust/Chest 1" below AH - Extended (SS to SS)
Measure from side seam to side seam across the back 1" below armhole with garment relaxed.		With fabric extended until flat, measure from side seam to side seam across the front of the garment 1" below armhole.	
W001.4	Back Bust/Chest 1" below AH - Extended (SS to SS)	W002	Bust/Chest 1" below Armhole with Sideseams Aligned
With fabric extended until flat, measure from side seam to side seam across the back of the garment 1" below armhole.		Align side seams. Measure across garment 1" below armhole from CF fold to CB fold.	
W003	Bust/Chest 1" below Armhole (Contour Bodice)	W004	Bust/Chest 1" below Armhole - Folded
		With lapel overlap pinned as specified, horizontally fold garment in half 1" below armhole. Measure across garment from edge to edge following curve with tape measure standing.	Vòng ngực - dưới nách 1" (gấp đôi áo) 

Design Stage

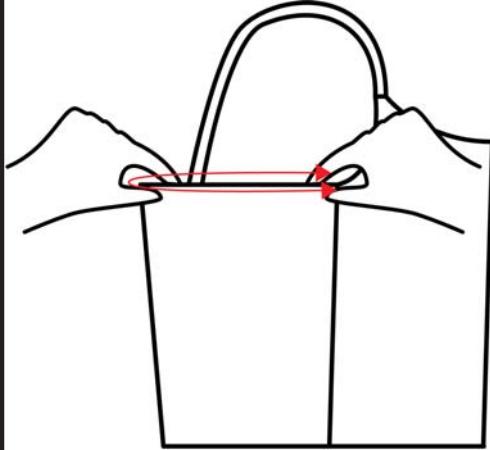
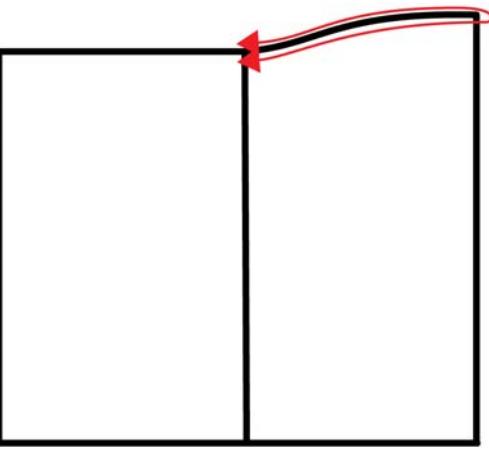
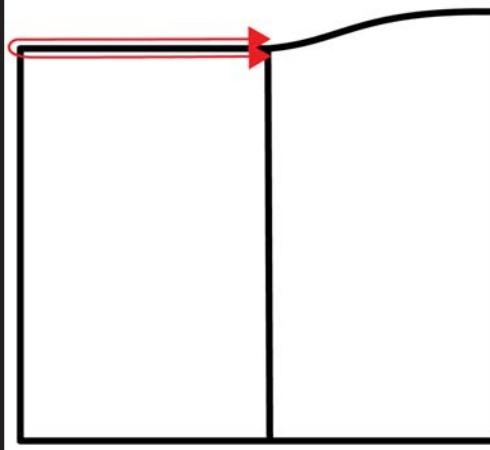
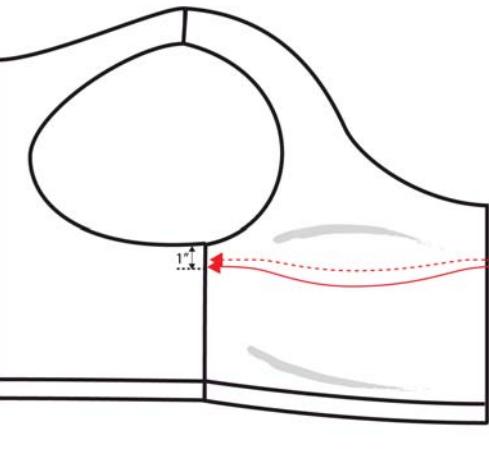
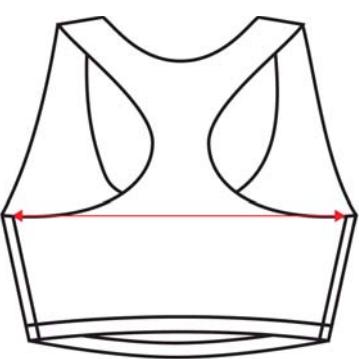
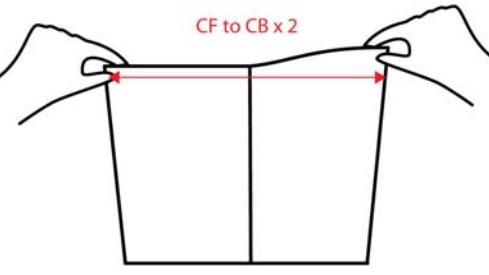
EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style: EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season: Templates/Admin 0000	Mat. One Desc:	Date Created	Date Modified
Wght/Width:	Mat. One Content:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
Wash/Fin:	Gauge:	JKUBALAK	JKUBALAK
End/Yrn Ct:			
W005	Bust/Chest Plcmnt from HPS (Dolman)	W006	Bust/Chest (Dolman)
Establish an imaginary line from HPS to HPS on front of garment. Measurement given from imaginary line at center front to identify bust placement.		Measure across garment at specified point from HPS.	
W007	Bust/Chest @ Armhole	W007.1	Front Bust/Chest @ Armhole - Relaxed (SS to SS)
Measure across garment at armhole edge (Fold to Fold).		Measure from side seam to side seam across the front at armhole with garment relaxed.	
W007.2	Back Bust/Chest @ Armhole - Relaxed (SS to SS)	W007.3	Front Bust/Chest @ Armhole - Extended (SS to SS)
Measure from side seam to side seam across the back at armhole with garment relaxed.		With fabric extended until flat, measure from side seam to side seam across the front of the garment at armhole.	

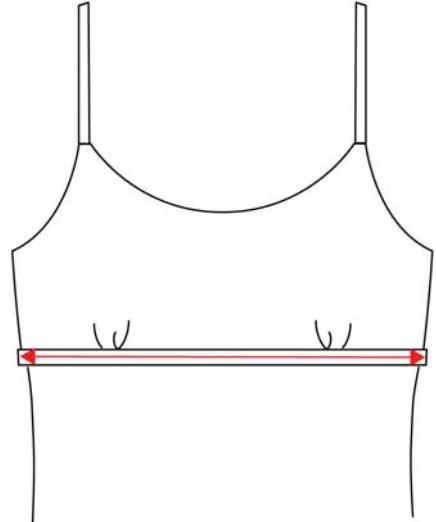
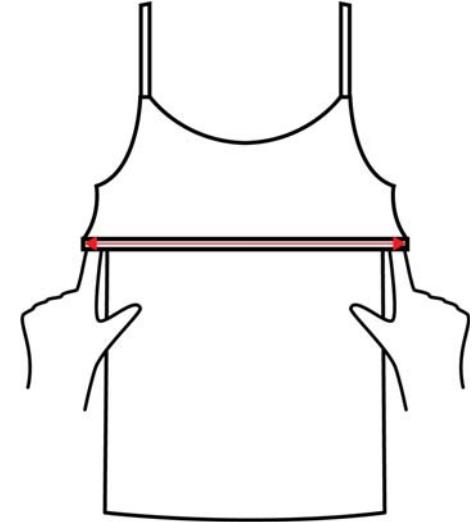
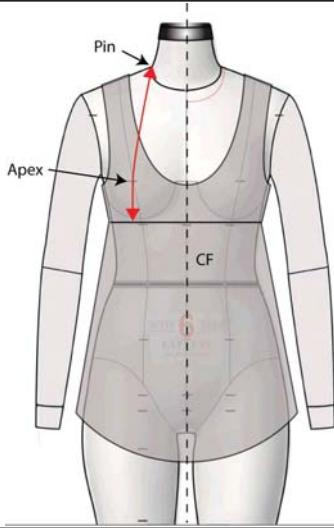
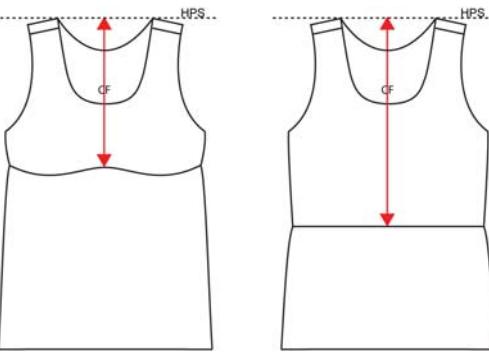
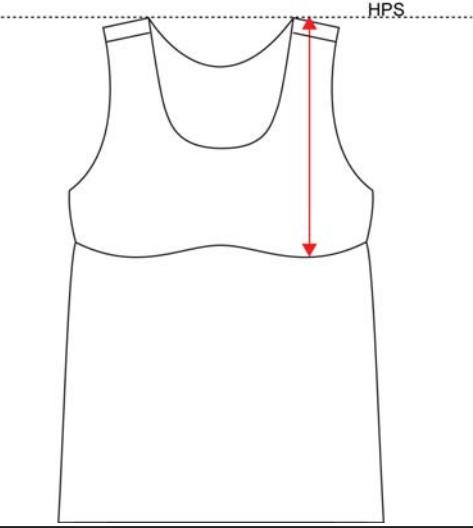
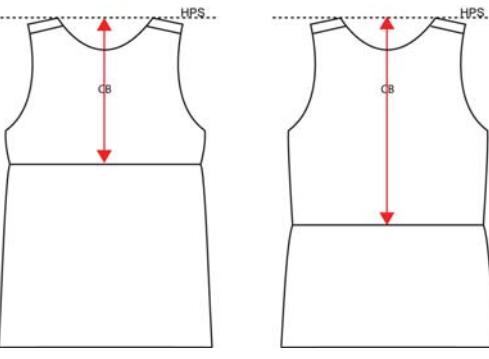
WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
W007.4	Back Bust/Chest @ Armhole - Extended (SS to SS)	W007.5	Front Bust/Chest along Neck Edge (Tube) (SS to SS)
With fabric extended until flat, measure from side seam to side seam across the back of the garment at armhole.		Measure along top opening edge of garment from side seam to side seam.	
W007.6	Back Bust/Chest along Neck Edge (Tube) (SS to SS)	W008	Front Bust/Chest 1" below AH - Around Cup (Bras)
Measure along top opening edge of garment from side seam to side seam.		Measure from side seam to side seam at front of garment following the shape of the cups at 1" below armhole.	
W009	Back Bust/Chest @ Armhole Edge (Bras)	W011	MINIMUM STRETCH @ Bust/Chest
Measure from side seam to side seam across the back of the garment at armhole edge.		Stretch top edge of garment until target spec is achieved. Measure edge to edge and multiple by 2.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
W012	Bust/Chest 1" below Armhole - Pleat Open	W013	Frt Bust 1" below AH – No Closure (SS to Frt Edge)
Measure across garment 1" below armhole (Fold to Fold) with pleat spread open until garment is completely flat.		Measure across garment 1" below armhole from side seam to front panel edge.	
W013.1	Frt Bust (Dolman) - No Closure (SS to Frt Edge)	W019	Shelf Bra Length @ SS from AH Seam (incl. elastic)
Measure from sideseam to front panel edge at specified point from HPS.		On inside, measure from underarm seam to bottom edge of elastic.	
W019.1	Shelf Bra Length @ SS from AH Edge (incl. elastic)	W020	Shelf Bra Bust/Chest 1" below Armhole
On inside, measure from underarm at edge to bottom edge of elastic.		On inside, measure across garment 1" below armhole.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
W021	Shelf Bra Bottom/Sweep - Relaxed	W022	Shelf Bra Bottom/Sweep - Extended
On inside, measure across bottom shelf opening from side to side with garment relaxed.		On inside, measure across bottom shelf opening with fabric extended until flat, from side to side.	
W023	Empire Sm Placement fm HPS - On Form (base size)	W024	Empire/Waist Bodice Seam fm HPS @ CF
With garment on body/form, measure from highest point of form at HPS PIN to empire seam.		Establish an imaginary line from HPS to HPS. Measure from the imaginary line to bodice seam at center front.	
W025	Empire Bodice Seam fm HPS @ Lowest Pt	W026	Empire/Waist Bodice Seam fm HPS @ CB
Establish an imaginary line from HPS to HPS. Measure from the imaginary line to bodice seam at lowest point of the bodice.		Establish an imaginary line from HPS to HPS. Measure from the imaginary line to bodice seam at center back.	

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

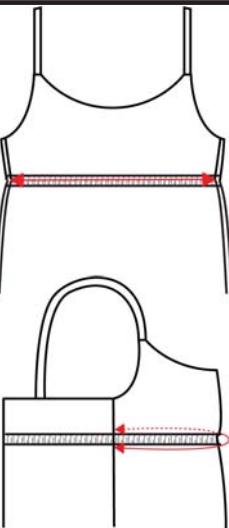
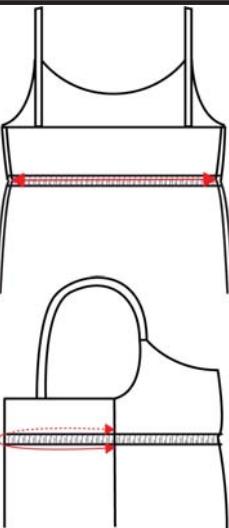
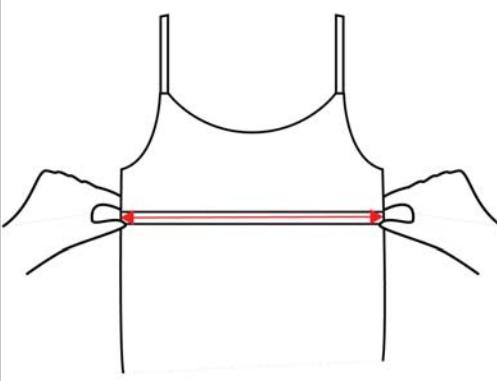
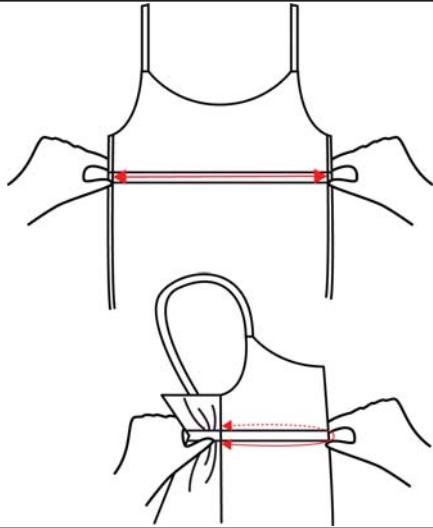
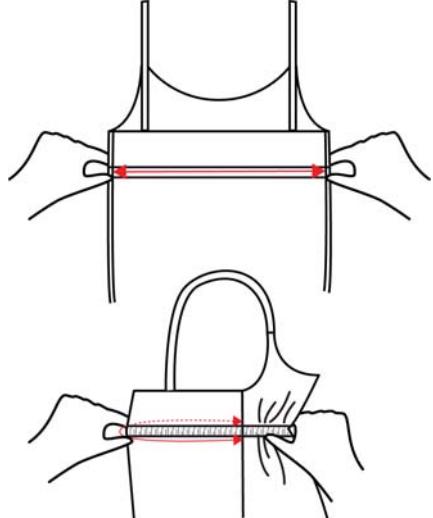
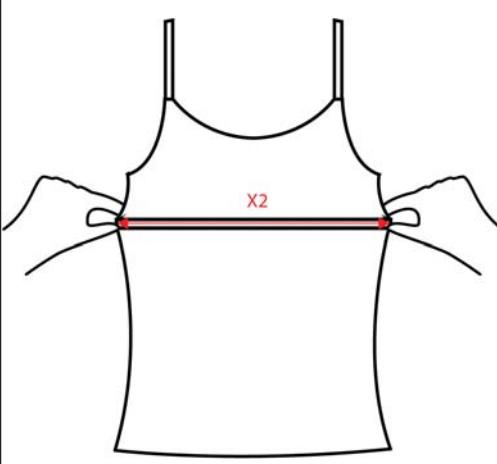
Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One Content: Gauge: End/Yrn Ct:	Mat. One ID#: Mat. One Desc: Date Created 09 SEP 2015 03:54 PM JKUBALAK	Description: NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
W026.1 Empire/Waist Bodice Seam fm CB Neck Seam/Edge	W027 Empire/Waist Bodice Seam fm HPB @ Lowest Pt (Cami)		
Measure from neck seam/edge to bodice seam at center back.		Measure from HPB to Bodice seam through fullest part of bodice.	
W028 Empire/Waist Bodice Seam fm Neck Edge @ CF	W029 Empire/Waist Bodice Seam fm AH @ Sideseam		
Measure from center front neck edge to bodice seam.		Measure from armhole to bodice seam along side seam.	
W030 Empire/Waist Bodice Seam fm Neck Edge @ CB (Cami)	W031 Empire Waist - Relaxed		
		Measure across garment at empire waist placement with garment relaxed.	

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
W031.1	Front Empire Waist - Relaxed (SS to SS)	W031.2	Back Empire Waist - Relaxed (SS to SS)
Measure from side seam to side seam at front empire waist with garment relaxed.		Measure from side seam to side seam at back empire waist with garment relaxed.	
W032	Empire Waist - Extended	W032.1	Front Empire Waist - Extended (SS to SS)
Measure across garment at empire waist placement with garment extended until fabric is flat.		Measure from side seam to side seam at front empire waist with garment extended until fabric is flat.	
W032.2	Back Empire Waist - Extended (SS to SS)	W033	MINIMUM STRETCH @ Empire Waist/Bodice Seam
Measure from side seam to side seam at back empire waist with garment extended until fabric is flat.		Stretch empire seam until target spec is achieve. Measure edge to edge and multiply by 2.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

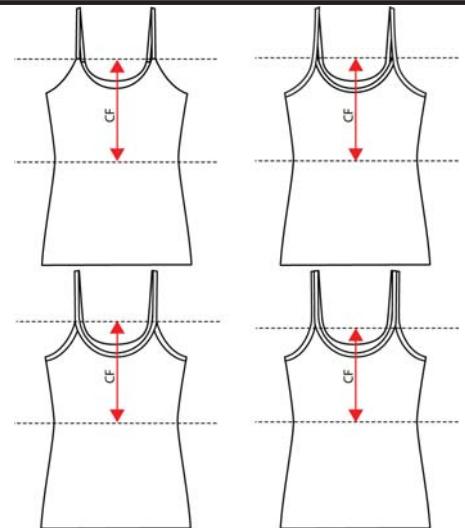
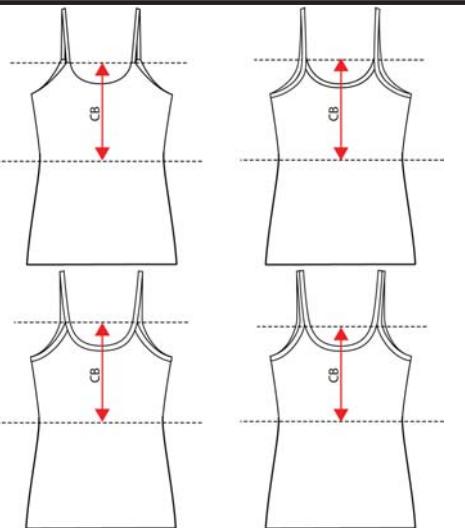
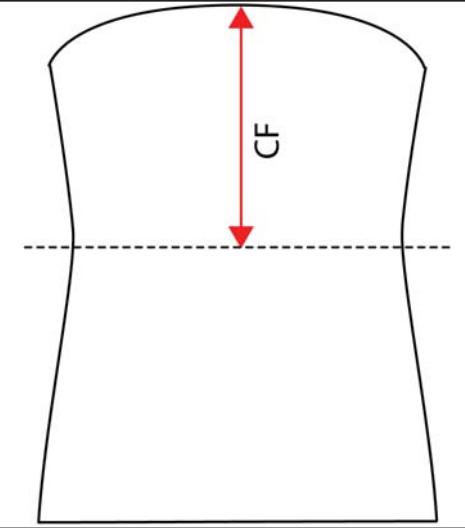
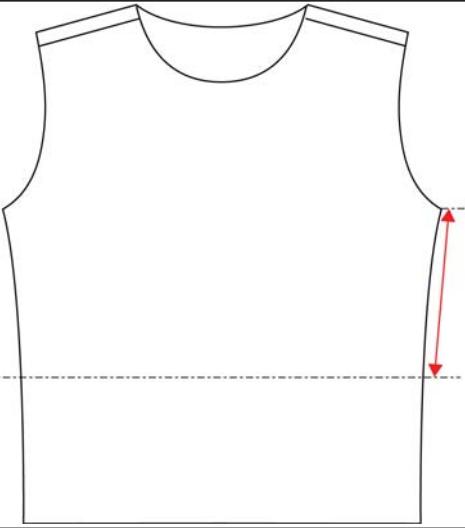
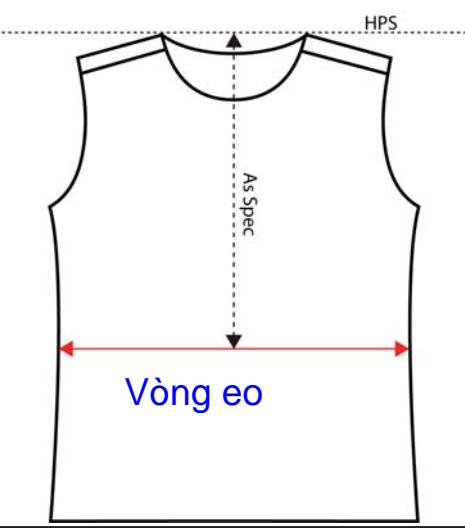
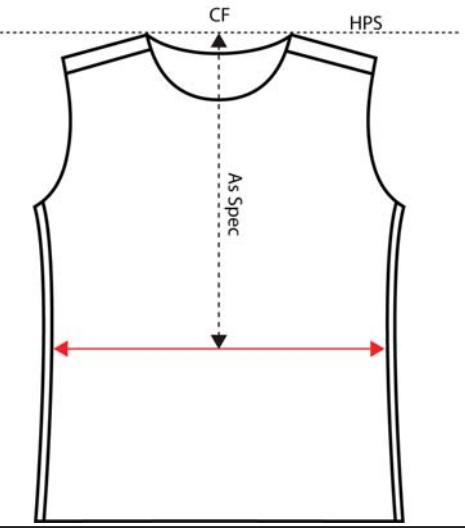
Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
W034	CF Waist Placement from HPS - On Form (base size)	W034.1	CB Waist Placement from HPS - On Form (base size)
With garment on body/form, measure from highest point of form at HPS PIN to waist seam.		With garment on body/form, measure from highest point of form at HPS PIN to waist seam.	
W034.2	CB Waist Placement fm CB Pin - On Form (base size)	W035	Waist Placement from HPS @ CF
With garment on body/form, measure from pin at center back neck of to waist seam.		Establish an imaginary line from HPS to HPS on front of garment. Measurement given from imaginary line at center front to identify waist placement. Hạ eo từ đỉnh vai	
W035.1	Waist Placement from HPS @ CB	W035.2	Waist Placement from CB Neck Seam/Edge
Establish an imaginary line from HPS to HPS on back of garment. Measurement given from imaginary line at center back to identify waist placement. Hạ eo từ giữa cổ sau		Measurement given from neck seam/edge at center back to identify waist placement. Hạ eo từ giữa cổ sau	

Design Stage

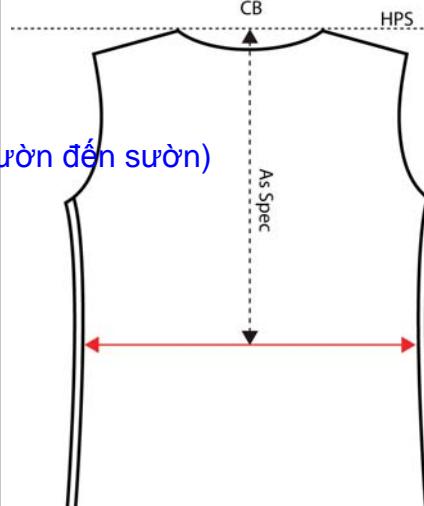
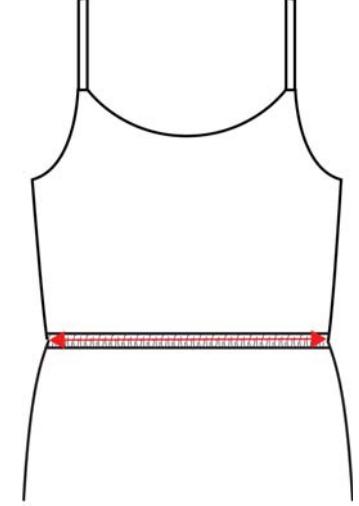
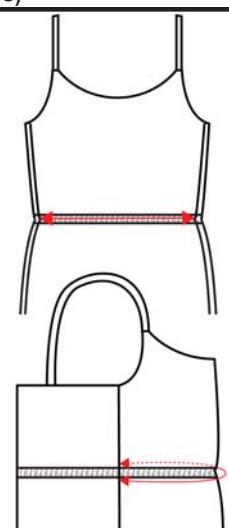
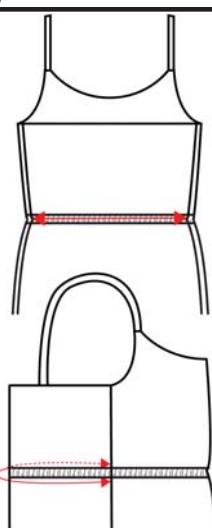
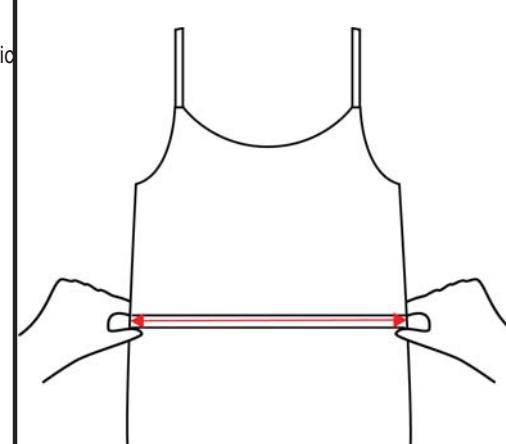
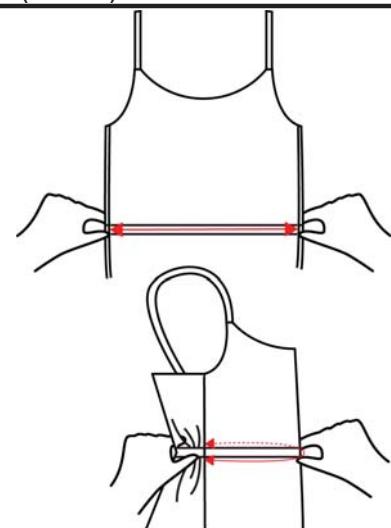
EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
W036	Waist Placement from HPB @ CF (Cami)	W036.1	Waist Placement from HPB @ CB (Cami)
Establish an imaginary line from HPB to HPB on front of garment. Measurement given from imaginary line at center front to identify waist placement.		Establish an imaginary line from HPB to HPB on back of garment. Measurement given from imaginary line at center front to identify waist placement.	
W037	Waist Placement from Neck Edge @ CF (Tube)	W038	Waist Placement from AH @ Sideseam
Measurement given from center front neck edge to identify waist placement.		Measurement given from top of sideseam to identify waist placement.	
W039	Waist (Tops)	W039.1	Front Waist (SS to SS)
At specified point, measure across garment.		At specified point, measure across front of garment from side seam to side seam.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

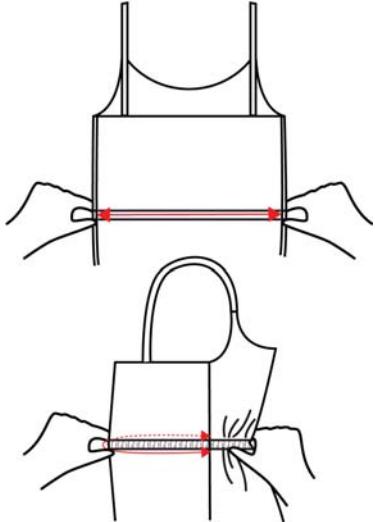
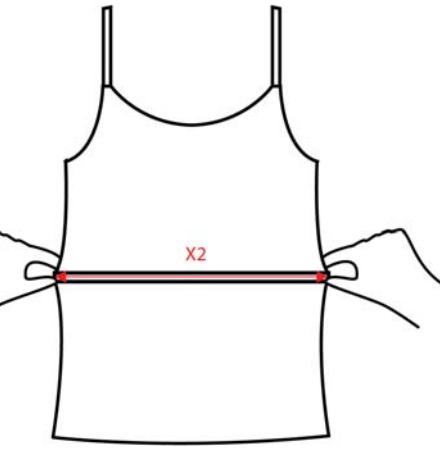
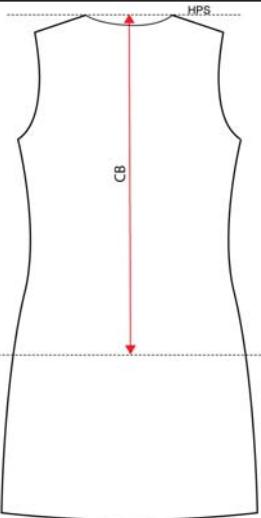
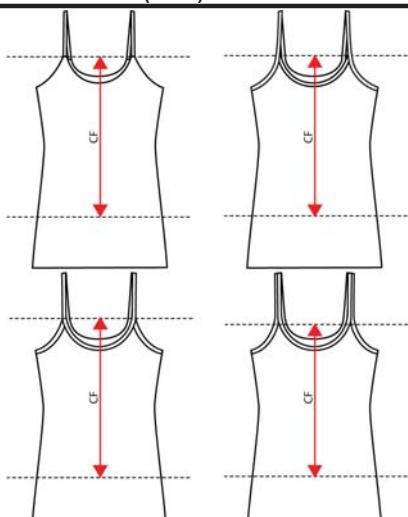
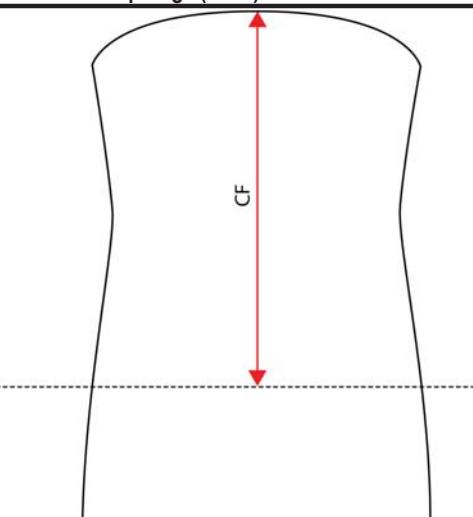
Style: EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season: Templates/Admin 0000	Mat. One Desc:	Date Created	Date Modified
Wght/Width:	Mat. One Content:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
Wash/Fin:	Gauge:	JKUBALAK	JKUBALAK
End/Yrn Ct:			
W039.2	Back Waist (SS to SS)	W040	Waist Relaxed (Tops)
At specified point, measure across back of garment from side seam to side seam.		Measure across garment at waist with garment relaxed.	
Eo sau (từ sườn đến sườn)			
W040.1	Front Waist - Relaxed (SS to SS)	W040.2	Back Waist - Relaxed (SS to SS)
Measure across front of garment from side seam to side seam with garment relaxed.		Measure across back of garment from side seam to side seam with garment relaxed.	
W041	Waist Extended (Tops)	W041.1	Front Waist - Extended (SS to SS)
Measure across garment at waist placement with garment extended until fabric is flat.		Measure across front of garment from side seam to side seam with garment extended until fabric is flat.	

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

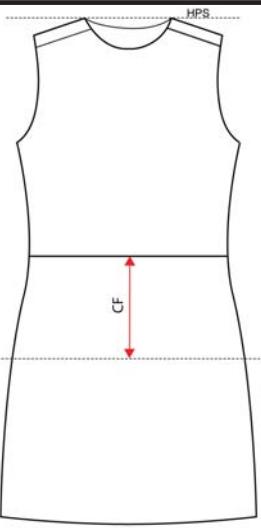
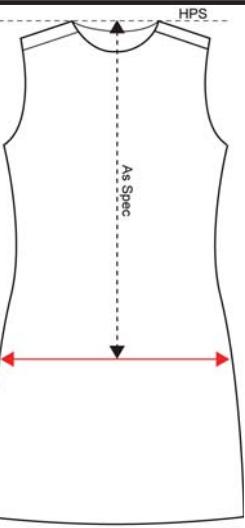
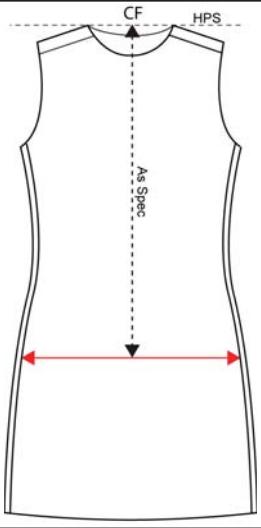
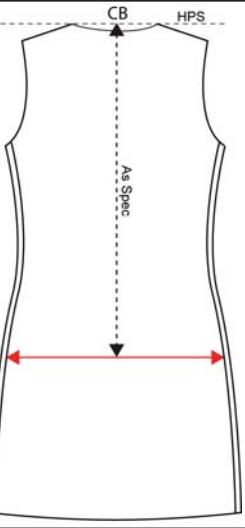
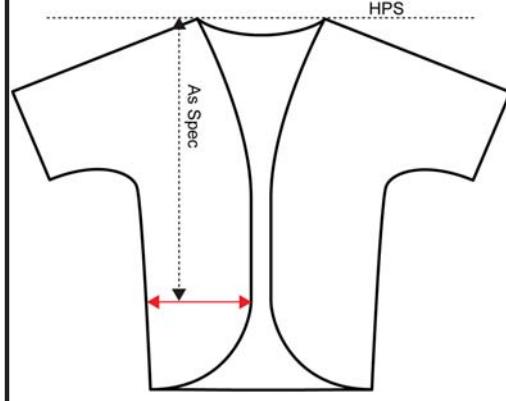
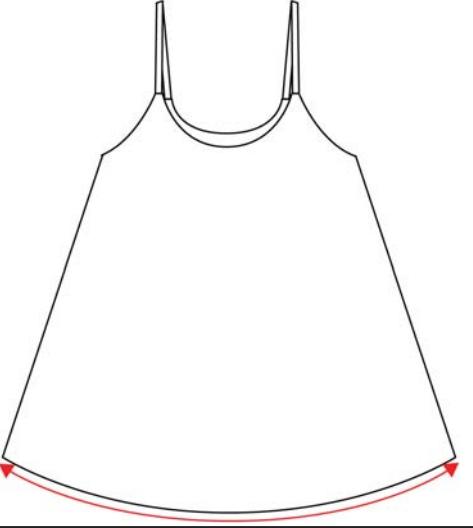
Design Stage	EXPRESS How to Measure guide (TOTAL CO)		Womens-None
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
W041.2	Back Waist - Extended (SS to SS)	W042	MINIMUM STRETCH @ Waist Seam
Measure across back of garment from side seam to side seam with garment extended until fabric is flat.		Stretch waist seam until target spec is achieved. Measure edge to edge and multiply by 2.	
W056	Low Hip Placement from HPS @ CF	W056.1	Low Hip Placement from HPS @ CB
Establish an imaginary line from HPS to HPS on front of garment. Measurement given from imaginary line at center front to identify low hip placement. <i>hạ mông dưới từ đỉnh vai tại giữa trước</i>		Establish an imaginary line from HPS to HPS on back of garment. Measurement given from imaginary line at center back to identify low hip placement. <i>hạ Mông từ đỉnh vai</i>	
W057	Low Hip Placement from HPB @ CF (Cami)	W058	Low Hip Placement from CF Top Edge (Tube)
Establish an imaginary line from HPB to HPB on front of garment. Measurement given from imaginary line at center front to identify low hip placement.		Measurement given from center front top edge to identify low hip placement.	

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)		Womens-None
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
W059	Low Hip Placement from Waist Seam @ CF	W060	Low Hip (Tops)
Measurement given from waist seam at center front to identify low hip placement.		At specified point, measure across garment.	
W060.1	Front Low Hip (SS to SS)	W060.2	Back Low Hip (SS to SS)
At specified point, measure across front of garment from side seam to side seam.		At specified point, measure across back of garment from side seam to side seam.	
W061	Frt Low Hip- Straight -No Closure (SS to Frt Edge)	W065	Bottom Opening/Sweep along Curve
At specified point, measure straight from side seam to front edge of garment.		Measure across bottom opening of garment, along curve.	

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style: EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season: Templates/Admin 0000	Mat. One Desc:	Date Created	Date Modified
Wght/Width:	Mat. One Content:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
Wash/Fin:	Gauge:	JKUBALAK	JKUBALAK
W065.1 Front Bottom Opening/Sweep along Curve (SS to SS)		W065.2 Back Bottom Opening/Sweep along Curve (SS to SS)	
Measure across front of garment along bottom opening curve from side seam to side seam.		Measure across back of garment along bottom opening curve from side seam to side seam.	
W066 Bottom Opening/Sweep - Straight		W066.1 Front Bottom Opening/Sweep - Straight (SS to SS)	
Measure across bottom opening of garment, straight.		Measure straight across front bottom opening of garment from side seam to side seam.	
W066.2 Back Bottom Opening/Sweep - Straight (SS to SS)		W067 Bottom Opening at Top Edge of Side Slit - Straight	
Measure straight across back bottom opening of garment from side seam to side seam.		Measure straight across bottom opening of garment at top edge of side slit.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
W068	Bottom Opening/Sweep - Relaxed	W068.1	Front Bottom Opening/Sweep - Relaxed (SS to SS)
Measure straight across bottom opening with garment relaxed.		Measure straight across front bottom opening from side seam to side seam with garment relaxed.	
W068.2	Back Bottom Opening/Sweep - Relaxed (SS to SS)	W069	Bottom Opening/Sweep - Extended
Measure straight across back bottom opening from side seam to side seam with garment relaxed.		Measure straight across bottom opening with garment extended until fabric is flat.	
W069.1	Front Bottom Opening/Sweep - Extended (SS to SS)	W069.2	Back Bottom Opening/Sweep - Extended (SS to SS)
Measure straight across front bottom opening from side seam to side seam with garment extended until fabric is flat.		Measure straight across back bottom opening from side seam to side seam with garment extended until fabric is flat.	

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

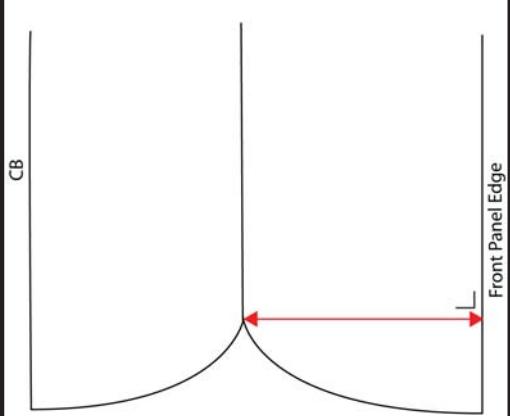
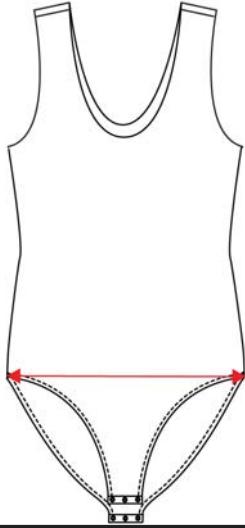
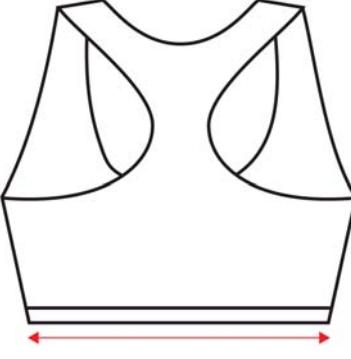
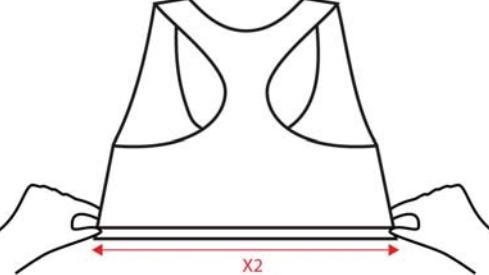
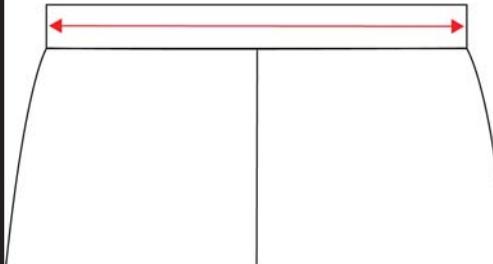
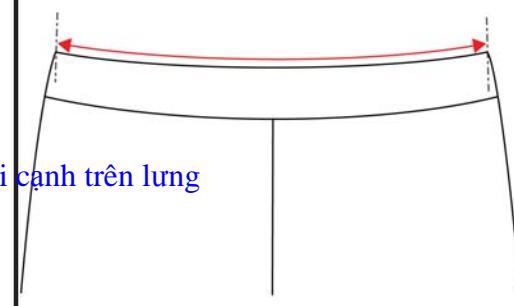
Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	Womens-None
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
W070	Bottom Opening @ Band Edge	W070.1	Bottom Opening @ Band Seam
Measure from edge to edge along bottom edge of band.		Measure from edge to edge along band seam.	
W071	Bottom Opening @ 2" above Band Seam	W075	MINIMUM STRETCH @ Bottom Opening/Sweep
Pull garment flat and measure from edge to edge at specified position above band seam.		Stretch bottom opening until target spec is achieved. Measure edge to edge and multiply by 2.	
W076	Sweep along Curve -No Closure (CB to Frt Edge)	W077	Frt Sweep along Curve -No Closure (SS to Frt Edge)
With hem edges aligned, measure across bottom opening of garment, along curve from CB to front edge.	vòng lai đồ cong từ giữa sau đến cạnh thân trước 	Measure from side seam to front edge along bottom opening curve.	

Design Stage

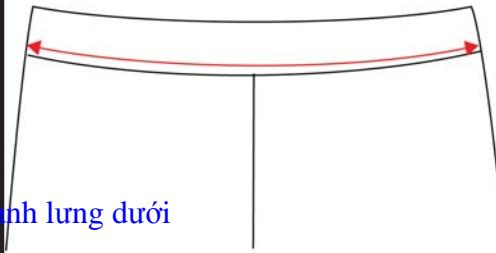
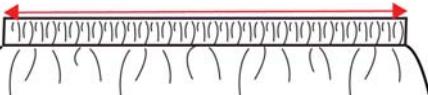
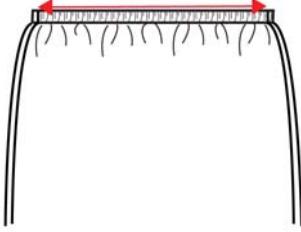
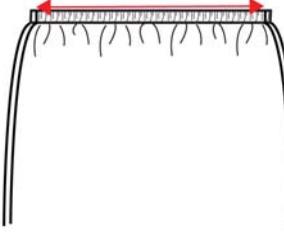
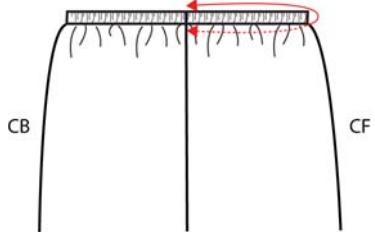
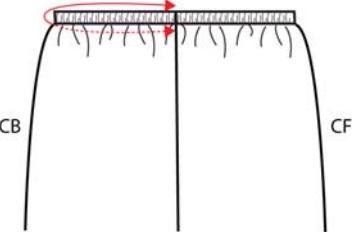
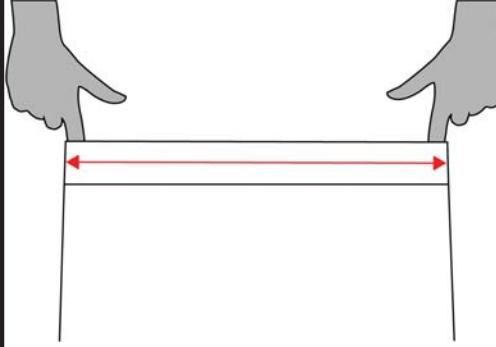
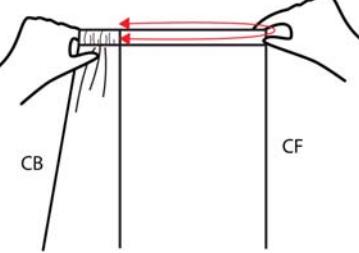
EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	Womens-None
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
W077.1	Frt Sweep - Straight -No Closure (SS to Frt Edge)	W078	Hip @ Top of Leg Opening
Measure straight from sideseam to front panel edge.		Measure straight at highest point of leg opening from folded edge to folded edge.	
W079	Bottom Opening with Edges Aligned (Bras)	W080	MINIMUM STRETCH @ Bottom Opening (Bras)
With bottom edges of bra aligned, measure from edge to edge.		Stretch bottom edge of garment until target spec is achieved. Measure edge to edge and multiple by 2.	
W083	Waist @ Center of Band (Bottoms)	W084	Waist @ Top along Edge - Contour (Bottoms)
Measure across garment from edge to edge at center of band.		Align top edges of front and back. Measure across garment from edge to edge along curve.	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style: EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season: Templates/Admin 0000	Mat. One Desc:	Date Created:	Date Modified
Wght/Width:	Mat. One Content:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
Wash/Fin:	Gauge:	JKUBALAK	JKUBALAK
End/Yrn Ct:			
W084.1	Waist @ Bottom along Seam - Contour (Bottoms)	W085	Waist @ Top Edge - Relaxed (Bottoms)
Align top edges of front and back. Measure across garment from edge to edge along waistband seam.		Align top edge of front and back. Measure across top edge with garment relaxed.	
Vòng eo tại cạnh lưng dưới			
W085.1	Front Waist @ Top Edge - Relaxed (SS to SS)	W085.2	Back Waist @ Top Edge - Relaxed (SS to SS)
Align top edge of front and back. Measure across front at top edge from side seam to side seam with garment relaxed.		Align top edge of front and back. Measure across back at top edge from side seam to side seam with garment relaxed.	
			
W086	Waist @ Top Edge - Extended (Bottoms)	W086.1	Front Waist @ Top Edge - Extended (SS to SS)
Measure across garment at top edge with garment extended until fabric is flat.		Align top edge of front and back. Measure straight across front top edge from side seam to side seam with garment extended until fabric is flat.	 

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

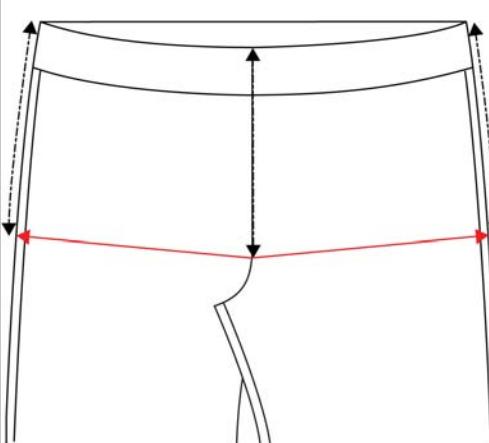
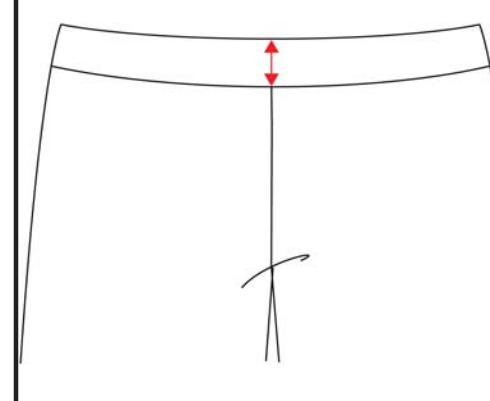
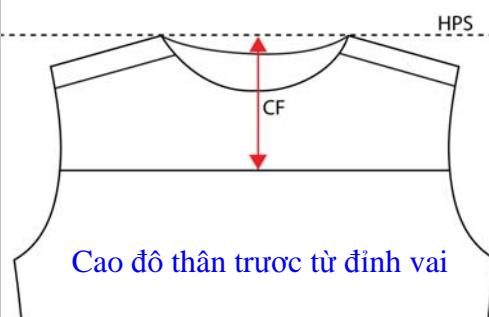
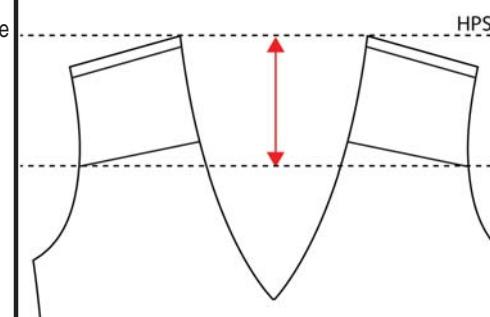
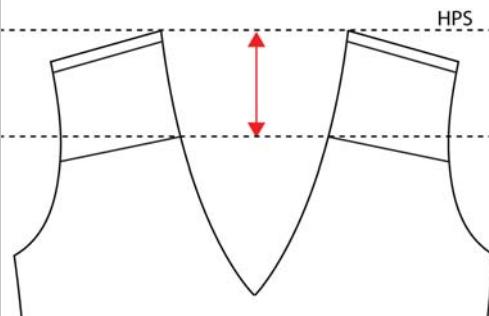
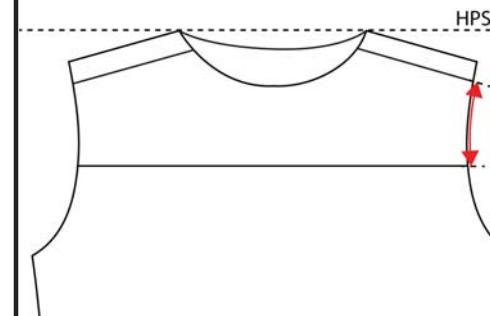
Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
W086.2	Back Waist @ Top Edge - Extended (SS to SS)	W087	High Hip Placement from Top Edge (Pants)
Align top edge of front and back. Measure straight across back top edge from side seam to side seam with garment extended until fabric is flat.		Measurement given from top edge of garment to identify high hip placement.	
W087.1	High Hip Placement from Top Edge (Skirts)	W088	High Hip - 3pt
Measurement given from top edge of garment to identify high hip placement.		From specified point at outseams and center front, measure high hip in 3 points from outseam, pivoting at center front, to outseam.	
W089	Low Hip/Seat Placement from Top Edge (Pants)	W089.1	Low Hip Placement from Top Edge (Skirts)
Measurement given from top edge of garment to identify low hip/seat placement.		Measurement given from top edge of garment to identify low hip/seat placement.	

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	Womens-None
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
W090	Low Hip/Seat - 3pt	W093	WB Height
From specified point at outseams and center front, measure hip/seat in 3 points from outseam, pivoting at center front, to outseam.		Measure from top edge to waistband seam.	
Vòng mông		To bänderung	
Y001	Front Yoke Height from HPS @ CF	Y001.1	Front Yoke Height from HPS @ Armhole
Establish an imaginary line from HPS to HPS on front of garment. Measure from imaginary line at center front to seam.		Establish an imaginary line through the HPS and through the armhole/yoke seam on front of garment. Measure from imaginary line to imaginary line at center front.	
Cao độ thân trước từ đỉnh vai			
Y001.2	Front Yoke Height from HPS @ Neck Seam/Edge	Y004	Front Yoke Height from Shoulder Seam along AH
Establish an imaginary line through the HPS and through the neckline/yoke seam on front of garment. Measure from imaginary line to imaginary line at center front.		Measure from shoulder seam to yoke seam along armhole seam/edge.	
Cao độ trước tính từ đỉnh vai		dài độ trước tại nách	

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One ID#: Mat. One Desc: Mat. One Content: Gauge: End/Yrn Ct:	Description: Date Created 09 SEP 2015 03:54 PM JKUBALAK	NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
Y005	Back Yoke Height from HPS @ CB	Y005.1	Back Yoke Height from HPS @ Armhole
Establish an imaginary line from HPS to HPS on back of garment. Measure from imaginary line at center back to seam.		Establish an imaginary line through the HPS and through the armhole/yoke seam on back of garment. Measure from imaginary line to imaginary line at center back.	
Y005.2	Back Yoke Height from HPS @ Neck Seam/Edge	Y005.3	Back Yoke Height from CB Neck Seam/Edge
Establish an imaginary line through the HPS and through the neckline/yoke seam on back of garment. Measure from imaginary line to imaginary line at center back.		Measure from center back neck seam/edge to yoke seam.	
Y007	Back Yoke Height from Shoulder Seam along AH	Y008	Front Yoke Height fm WB Seam @ CF (Bottoms)
Measure from shoulder seam to yoke seam along back armhole.		Measure from waist seam to yoke seam.	

Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Design Stage	EXPRESS How to Measure guide (TOTAL CO)	Womens-None	
Style Season: Wght/Width: Wash/Fin:	EXPRESS How to Templates/Admin 0000 Mat. One Content: Gauge: End/Yrn Ct:	Mat. One ID#: Mat. One Desc: Date Created 09 SEP 2015 03:54 PM JKUBALAK	Description: NEW how to measure guic Date Modified 09 SEP 2015 03:54 PM JKUBALAK
Y009	Front Yoke Height fm WB Seam @ Outseam (Bottoms)	Y010	Back Yoke Height fm WB Seam @ CB (Bottoms)
Measure from waist seam to yoke seam.		Measure from waist seam to yoke seam.	
Y011	Back Yoke Height fm WB Seam @ Outseam (Bottoms)	Y012	Yoke Height @ Sideseam
Measure from waist seam to yoke seam.		Measure from armhole seam/edge to yoke seam along sideseam.	
Z001	Zipper Length (Tops/Dresses) - Over 10"	Z002	Zipper Length (Skirts)
With zipper closed, measure from top edge of slider to bottom stop. <i>Dài dây kéo - đo từ cạnh trên của đầu trượt đến cạnh dưới của cục chặn</i>		With zipper closed, measure from top edge of slider to bottom stop.	

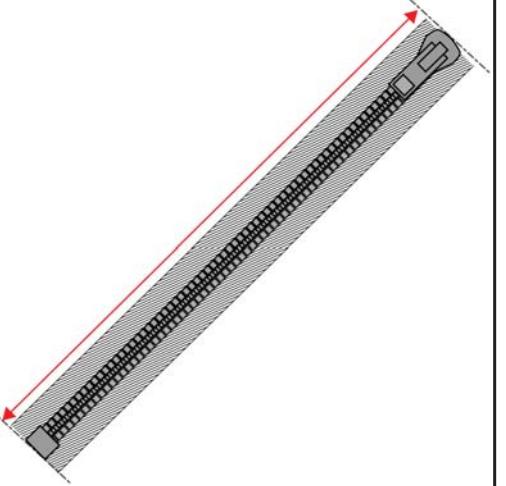
Design Stage

EXPRESS How to Measure guide (TOTAL CO)

Womens-None

WOMENS HTM guide - updated Sept. 2015-How To Measure Guide

Style	EXPRESS How to	Mat. One ID#:	Description:	NEW how to measure guic
Season:	Templates/Admin 0000	Mat. One Desc:		
Wght/Width:		Mat. One Content:	Date Created	Date Modified
Wash/Fin:		Gauge:	09 SEP 2015 03:54 PM	09 SEP 2015 03:54 PM
		End/Yrn Ct:	JKUBALAK	JKUBALAK

Z003	Zipper Length (Non-Graded)	Z004	Zipper Length (Fly Zipper)
With zipper closed, measure from top edge of slider to bottom stop.		With zipper closed, measure from top edge of slider to bottom stop.	

--	--	--	--

--	--	--	--