

FS-2

Shoulder Work

Freeway

Mobile Operations

Intermittent

Very Short Duration

Short Duration


Long Duration

NOTES

i) Work on the left shoulder mirror image.

For stationary Long Duration operations (longer than five days), Temporary Concrete Barriers must be used to separate the Work Area from traffic.

For further detail on Work Zone components, see [Table C \(Freeways, pg. 242\)](#).

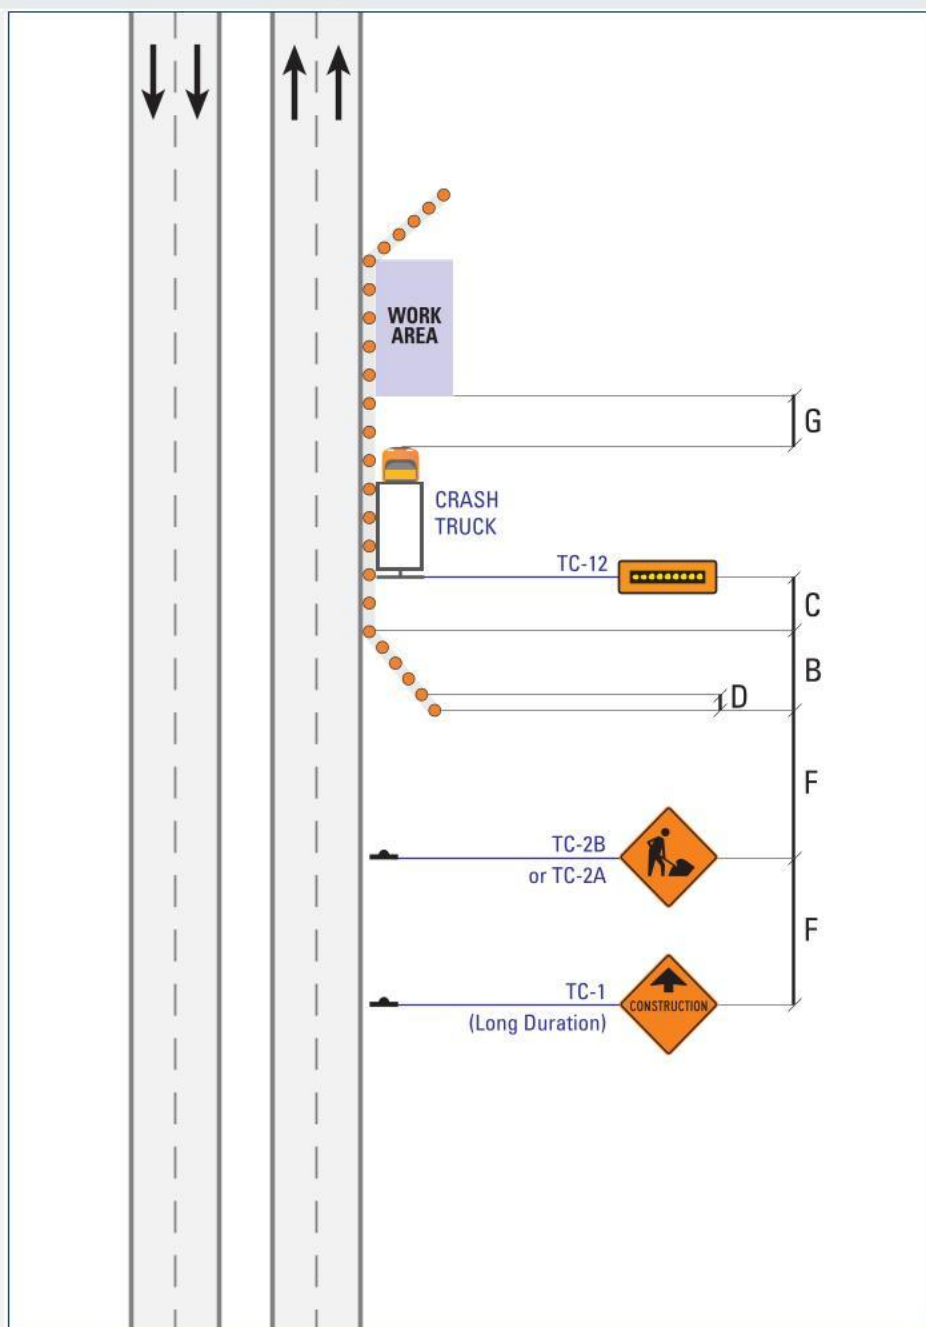

Label	Description	Normal Posted Regulatory Speed (km/h)			
		80	90	100	110
B	Shoulder Taper (m)	75	85	100	100
C	Longitudinal Buffer Area (LBA) (m)	60	75	95	110
D	Maximum Distance between Markers (m)	12	24	24	24
F	Distance between Construction Signs (m)	160	180	200	200
G	Stationary Work (Lateral Intrusion Deterrence Gap (LIDG) (m)	60	65	70	75