

AUTOVB.WRX

AURACORE LIGHTING SYSTEMS

Side Reflector Set — 2022+ WRX (VB)

7/5/26

AVB-RFL-FEN-WL

White LED

Thank you for purchasing this AUTOVB.WRX product for your car! This kit is a direct replacement for the OEM rear side reflectors on all 2022+ Subaru WRX (VB) models and installs in about 20 minutes per side with basic hand tools. This guide includes the wiring section for your LED set — complete the wiring steps BEFORE reinstalling the flare. Please read through all instructions before performing any portion of the installation. If you have any questions, contact us before starting — we are happy to help.

[Instagram DM @autovb.WRX](#) • [autovb.shop](#)

**** OFF-ROAD & SHOW USE ONLY ****

This product replaces the DOT-required OEM side reflex reflectors and is NOT street legal in most states. It is intended solely for off-road, track, and show use. It is the buyer's responsibility to know and comply with all applicable local, state, and federal laws before installing or operating the vehicle on public roads.

Special Notes:


- The clip counts and diagram below cover one side of the vehicle. The passenger side mirrors the driver side.
- Pull the flare directly at clip locations rather than between them — clips release with a firm, even tug.
- If installing in cold weather, let the car warm up in the sun or a garage first. Warm plastic flexes; cold plastic snaps.
- **Do not force the reflector into the trim. It should slide in and seat with light pressure once the retaining clips are aligned.**
- **Disconnect the negative battery terminal before making any electrical connections.**
- **AUTOVB.WRX is not responsible for any damages or injuries resulting from the installation or use of this product. Install at your own risk.**

Parts Included with the Side Reflector Set (AVB-RFL-FEN-WL):

- (2) AuraCore side reflectors — left & right (clear, frosted, or tinted per your order)
- (4) Black reflector retaining clips
- (1) Reverse-light harness adapter

Installation — Removing the Fender Flare:

- 1) Locate the two R07 push rivets on the rear quarter fender flare. Press the center pin of each rivet inward with a flathead screwdriver, then pull the rivet free.
- 2) Remove the push clip near the C17 location at the bottom rear of the flare.
NOTE: Both fasteners must be out BEFORE pulling on the flare itself.
- 3) Starting from the C16 area, pull the flare away from the body and work your way around the entire wheel well until the flare is off the car.

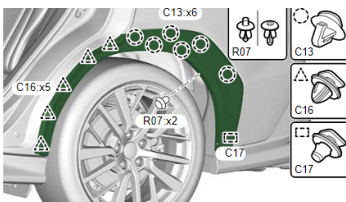


Clip locations — R07 x2, C13 x6, C16 x5, C17 x1 (per side)

Swapping the Reflector:

- 1) With the flare off the car, flip it over to access the back of the OEM reflector.
- 2) Remove the red push clip. It is on the side WITHOUT the angled ramp.
- 3) Push the two green retaining ends toward each other. While holding pressure, slide the OEM reflector out of the trim.
- 4) Slide the new AuraCore reflector into place using the supplied black clips, or reuse the OEM clips if you prefer.

NOTE: LED sets: feed the reflector wires through the flare BEFORE seating the reflector — see the Wiring section.

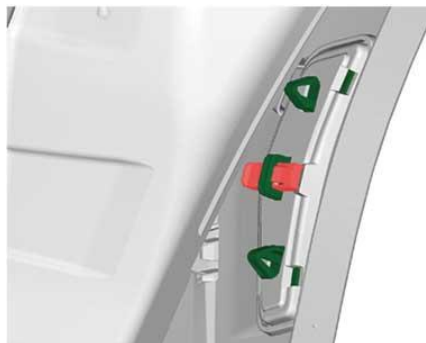

Red push clip + green retainers

****IMPORTANT — C17 CLIP****

Before reinstalling the flare, check the C17 location on the vehicle. If the clip is still on the car, remove it and slide it into the fender flare FIRST. Reinstalling with the clip left on the body will prevent the flare from seating properly.



NEXT: WIRING

Do NOT reinstall the flare yet — continue to page 3 to wire the reflectors first.

AUTOVB.WRX

AURACORE LIGHTING SYSTEMS

Wiring — White LED: Feeding & Routing the Wires:

- 1) Feed the reflector wires through the opening in the fender flare from the outside.
 - 2) Seat the reflector into the flare, making sure the wires are not caught or pinched between the reflector and the trim.
- NOTE: AUTOVB.WRX is not responsible for cut or pinched wires caused by improper installation.**



STEP 1




STEP 2

- 3) Route the wires through the opening at the rear of the wheel well, toward the bumper.
- 4) Remove the push clip securing the lower fairing beneath the rear bumper.



STEP 3

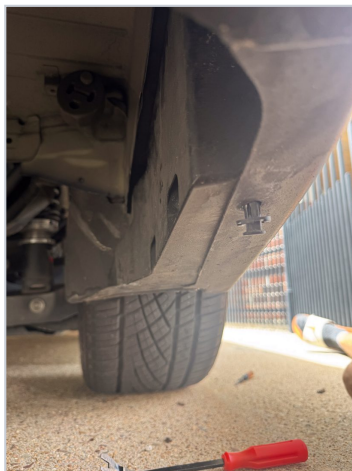

STEP 4

Wiring — Pulling Through & Connecting (cont.):

- 5) Pull the fairing back to open access behind the bumper.
- 6) Reach inside and pull the reflector wires through the opening.
- 7) Reinstall the push clip and seat the fairing back in place, keeping the wires clear.
- 8) Route the wires up into the tail light opening.
- 9) Remove the tail light to access the reverse light connector, plug the supplied reverse harness adapter in line, and connect the reflector leads.
- 10) With your foot on the brake and the engine off, switch the ignition on and shift into reverse to confirm both reflectors illuminate. Secure the wiring and reinstall the tail light.




STEP 5



STEP 6



STEP 7

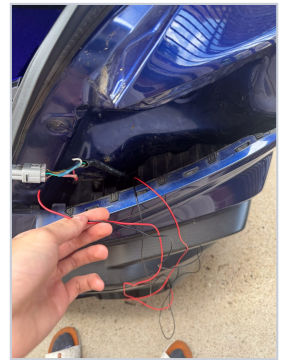

STEP 8

Reinstalling the Flare:

- 1) Set the flare against the body and align every clip with its hole before applying pressure.
- 2) Work around the wheel well, pressing firmly at each clip location until it seats with a click.
- 3) Reinsert the two R07 push rivets and press the center pins flush to lock them.
- 4) Repeat the entire process on the other side of the vehicle — the clip layout is mirrored.

For questions & comments please contact:

Instagram DM @autovb.WRX

Full catalog & order support at autovb.shop

Tag @autovb.WRX with your install pictures!