


MCU Connections

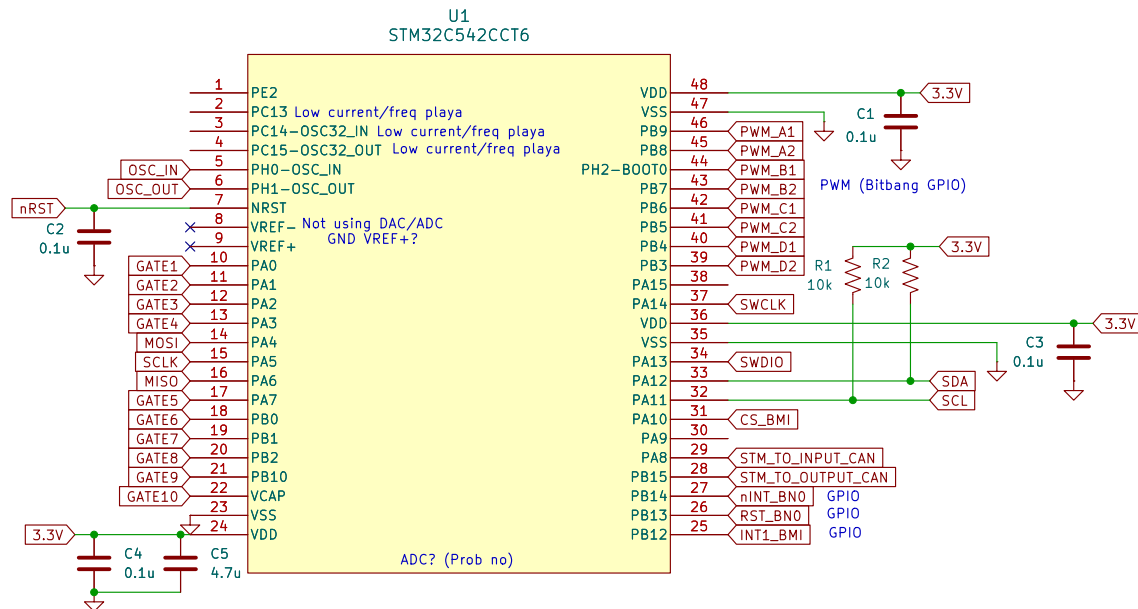

Categorized Designs

MOSFET_driver

File: untitled.kicad_sch

Sensors_Telemetry

File: Sensors_Telemetry.kicad_sch


Connector_Signals

File: connector_signals.kicad_sch

Voltage_Conv-Protec-Monitoring

File: Voltage_conv_prot.kicad_sch

Crystal Oscillator

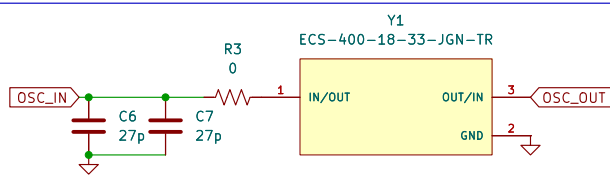


MCU:

- add debug LED to STM GPIO
- break out a few GPIO STM pins to a pin header
- why do gpio bitbang for PWM? Cant we just use the STM's timer channels?
- add no connect (NC) to the unused STM pins

General:


- testpoints and debugging:
 - break out CAN signals to a header for debugging
 - break out SPI

CAN Transceiver

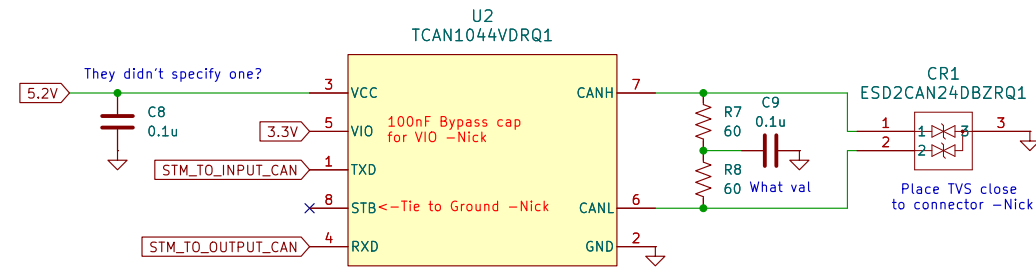

Test Points, LEDs

Resistor Values? - Nick

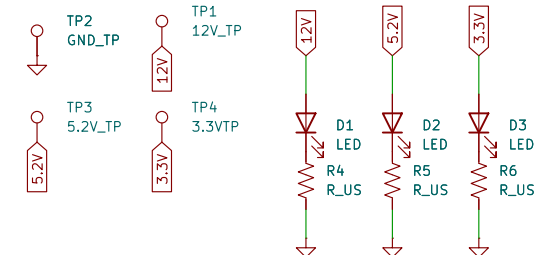

Purdue ROV

Sheet: /
File: X19-Control-Board.kicad_sch


Title: Purdue ROV Subsystem Board

Size: A4
KiCad E.D.A. 10.0.5-unknown


Date:

Rev:


Id: 1/5

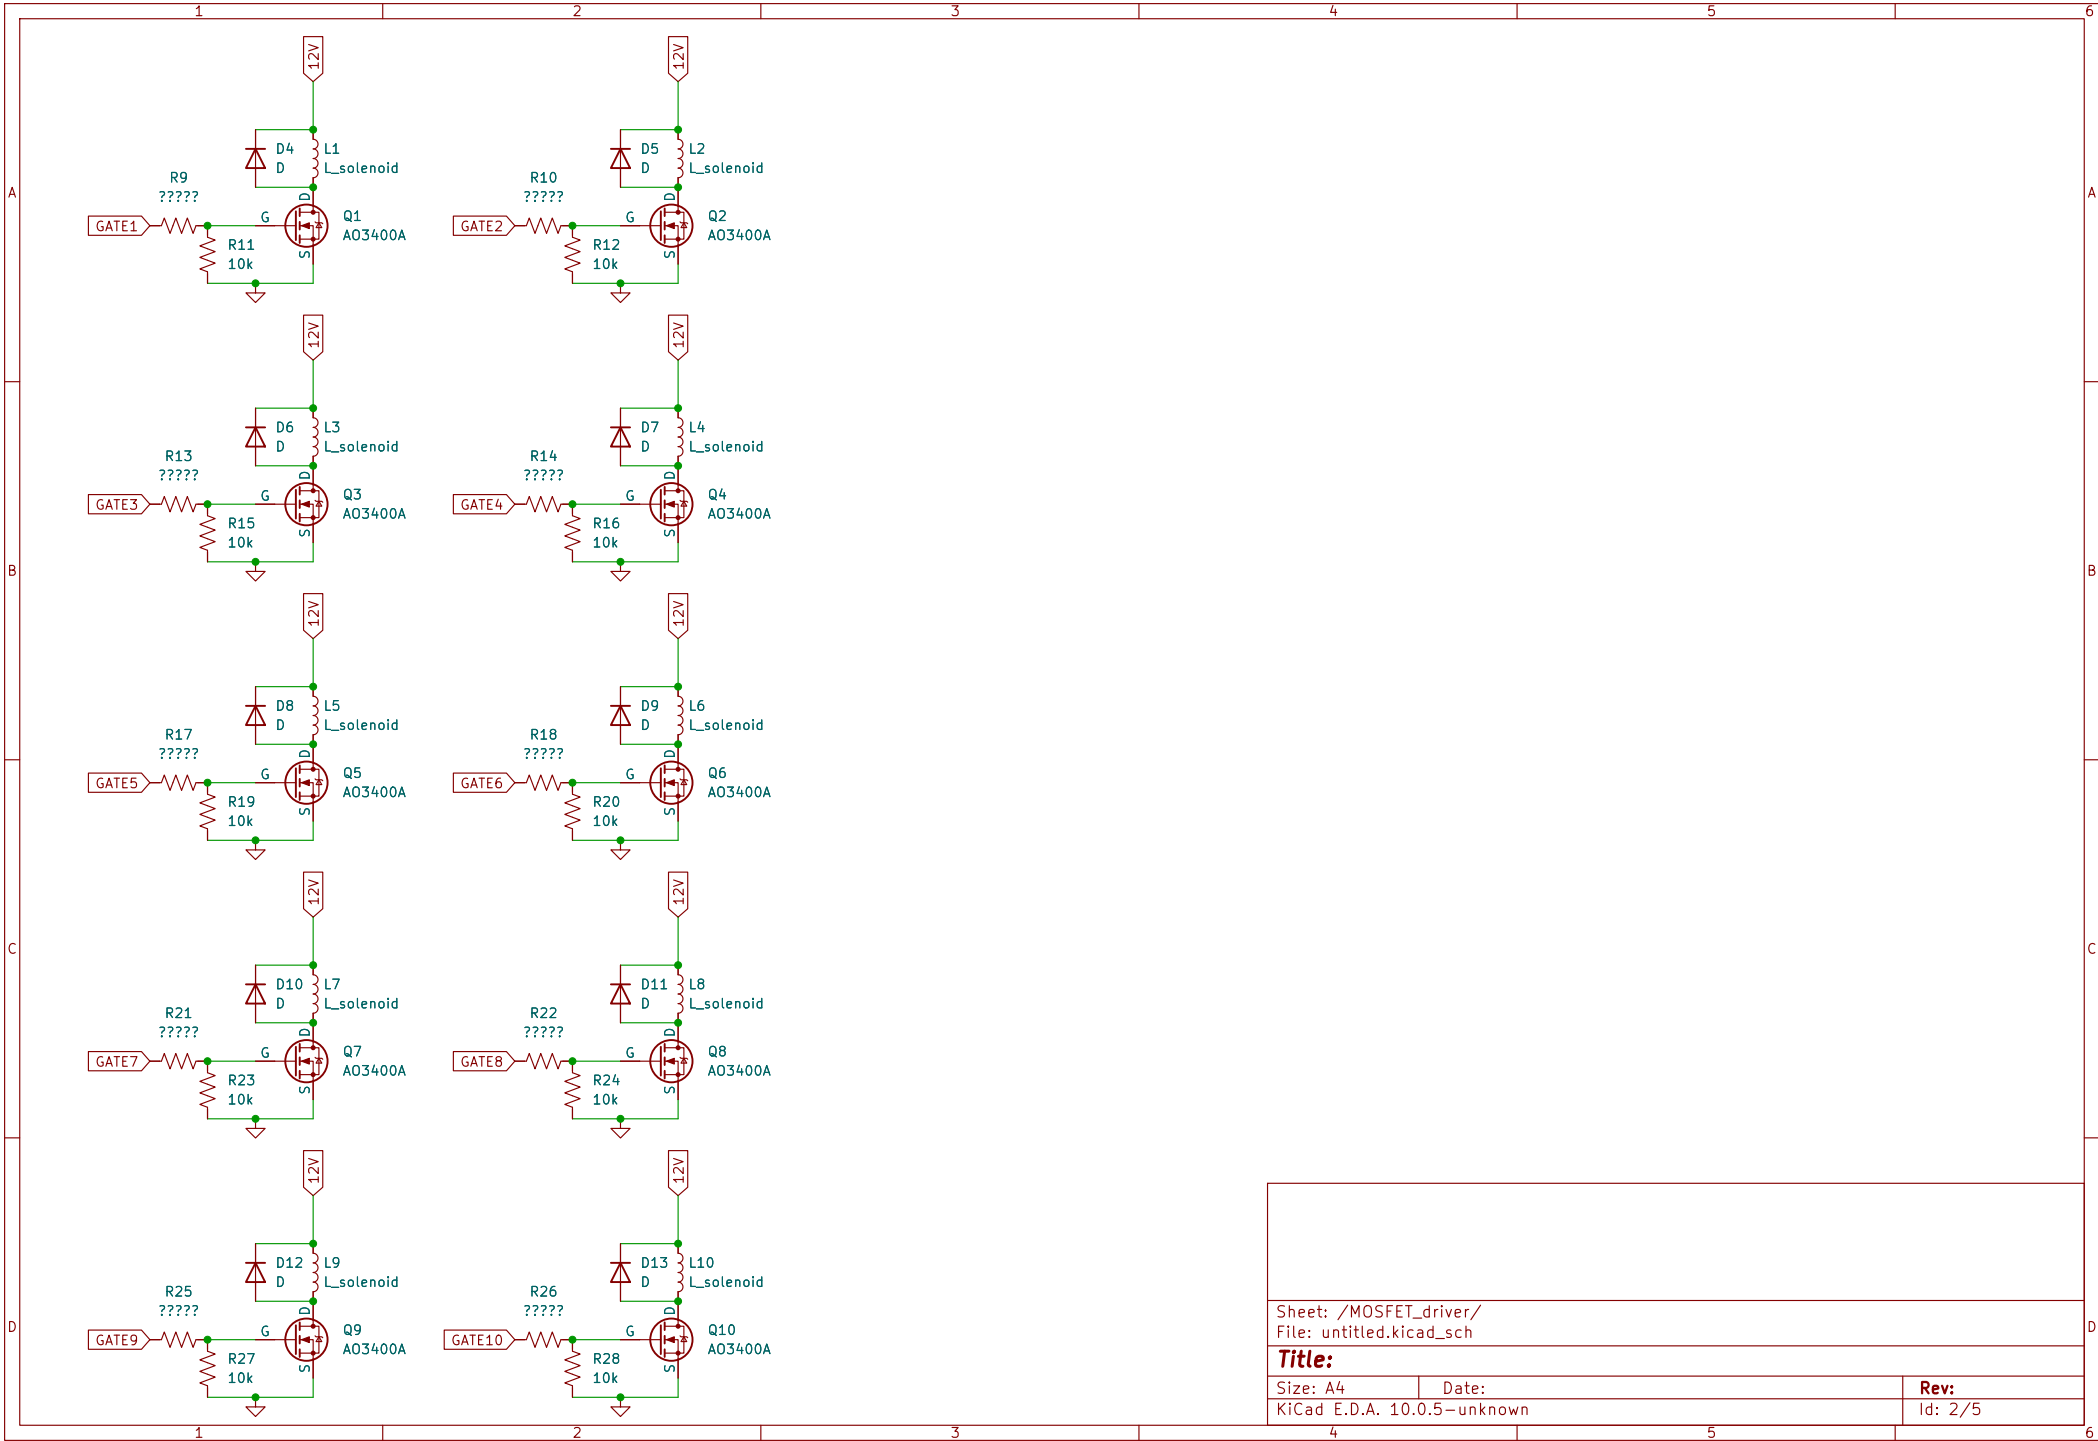


Sheet: /MOSFET_driver/ File: untitled.kicad_sch		
Title:		
Size: A4	Date:	Rev:
KiCad E.D.A. 10.0.5-unknown	Id: 2/5	

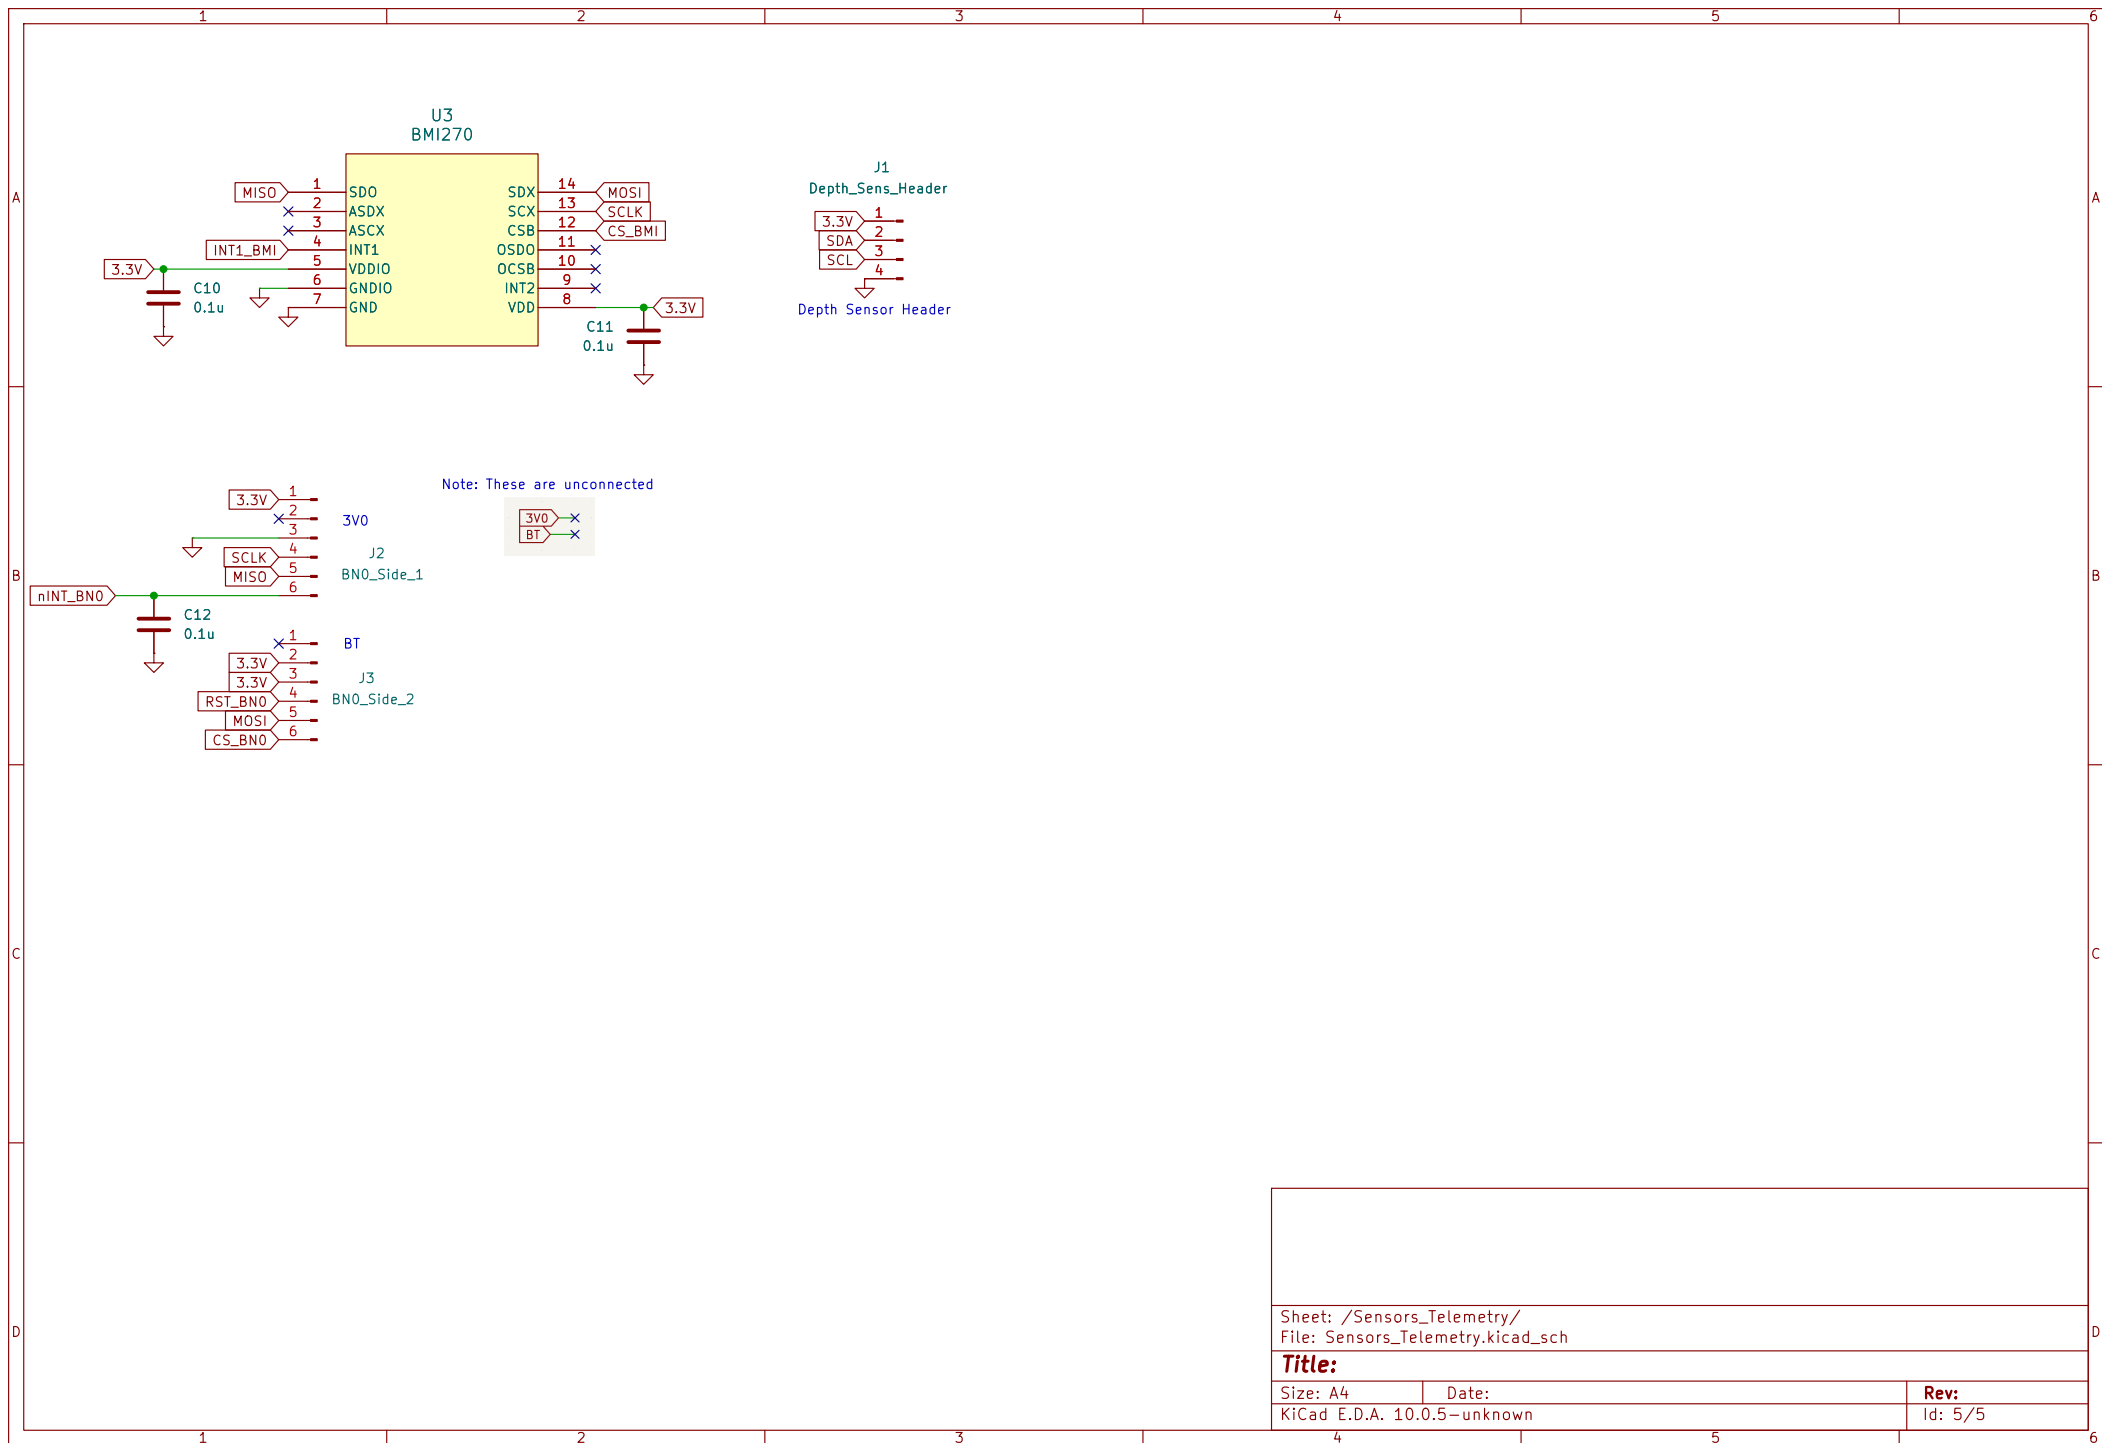


LDO – Voltage Conversion

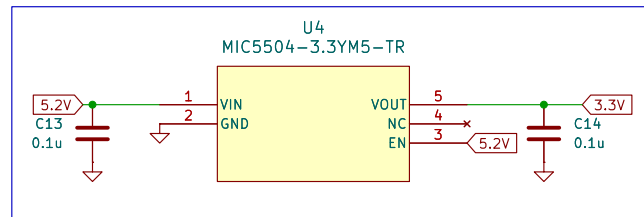

Reverse Polarity Protection

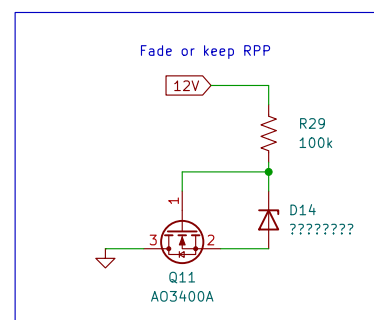

Power Monitoring 5.2V, 12V rails

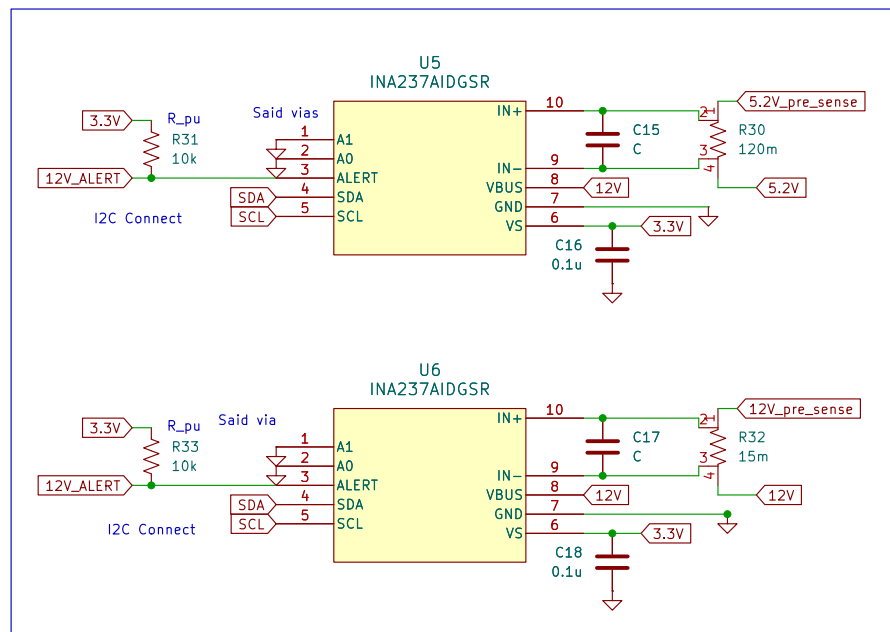

Sheet: /Voltage Conv-Protec-Monitoring/
File: Voltage_conv_prot.kicad_sch

Title:

Size: A4

Date:

KiCad E.D.A. 10.0.5-unknown

Rev:

Id: 6/5

