


MCU Connections

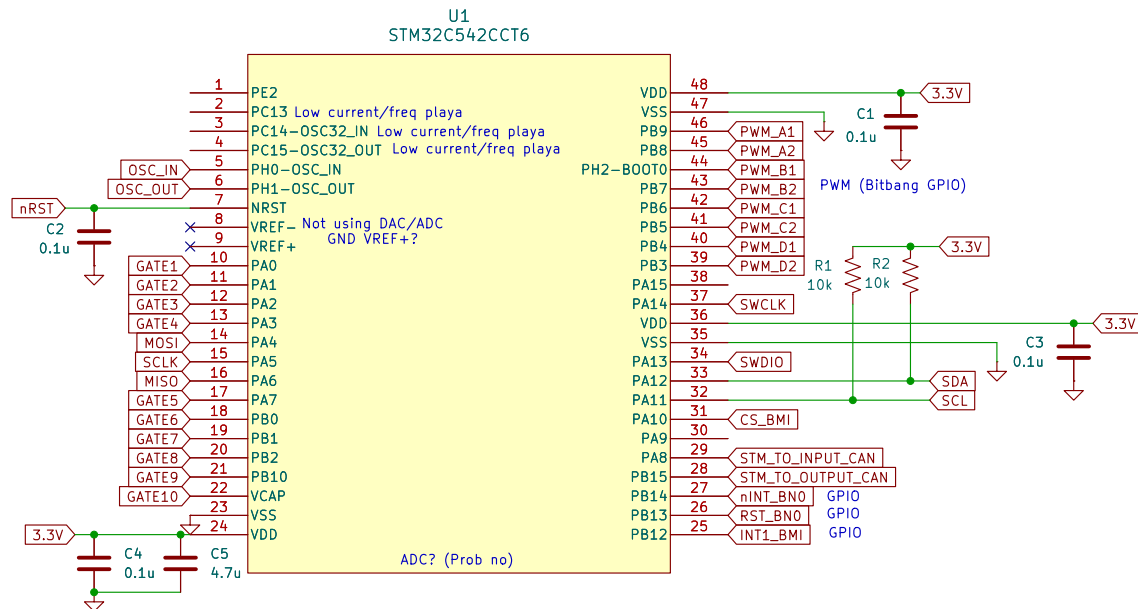

Categorized Designs

MOSFET_driver



File: untitled.kicad_sch

Sensors_Telemetry



File: Sensors_Telemetry.kicad_sch

Connector_Signals




File: connector_signals.kicad_sch

Voltage_Conv-Protec-Monitoring



File: Voltage_conv_prot.kicad_sch

Crystal Oscillator

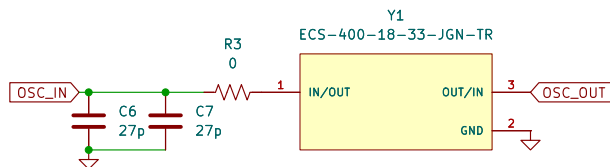


MCU:

- add debug LED to STM GPIO
- break out a few GPIO STM pins to a pin header
- why do gpio bitbang for PWM? Cant we just use the STM's timer channels?
- add no connect (NC) to the unused STM pins


General:

- testpoints and debugging:
 - break out CAN signals to a header for debugging
 - break out SPI

CAN Transceiver

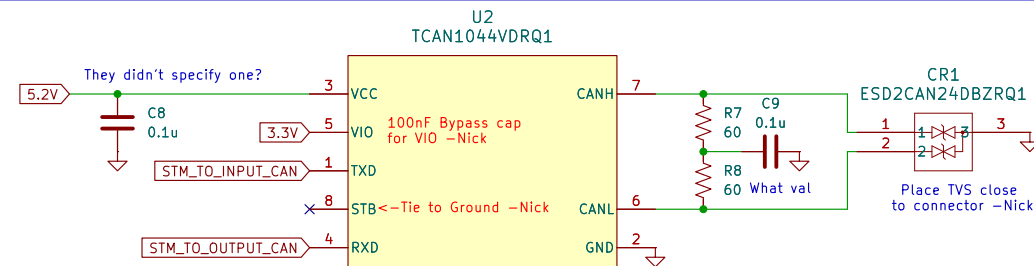

Test Points, LEDs

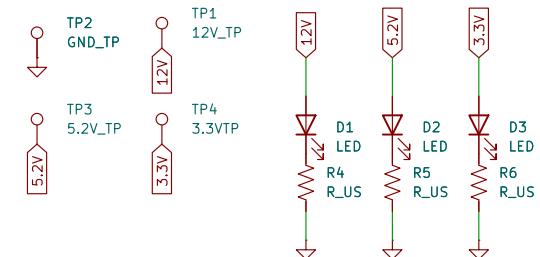

Resistor Values? - Nick

Purdue ROV


Sheet: /
File: X19-Control-Board.kicad_sch


Title: Purdue ROV Subsystem Board

Size: A4
KiCad E.D.A. 10.0.5-unknown

Date:

Rev:
Id: 1/5

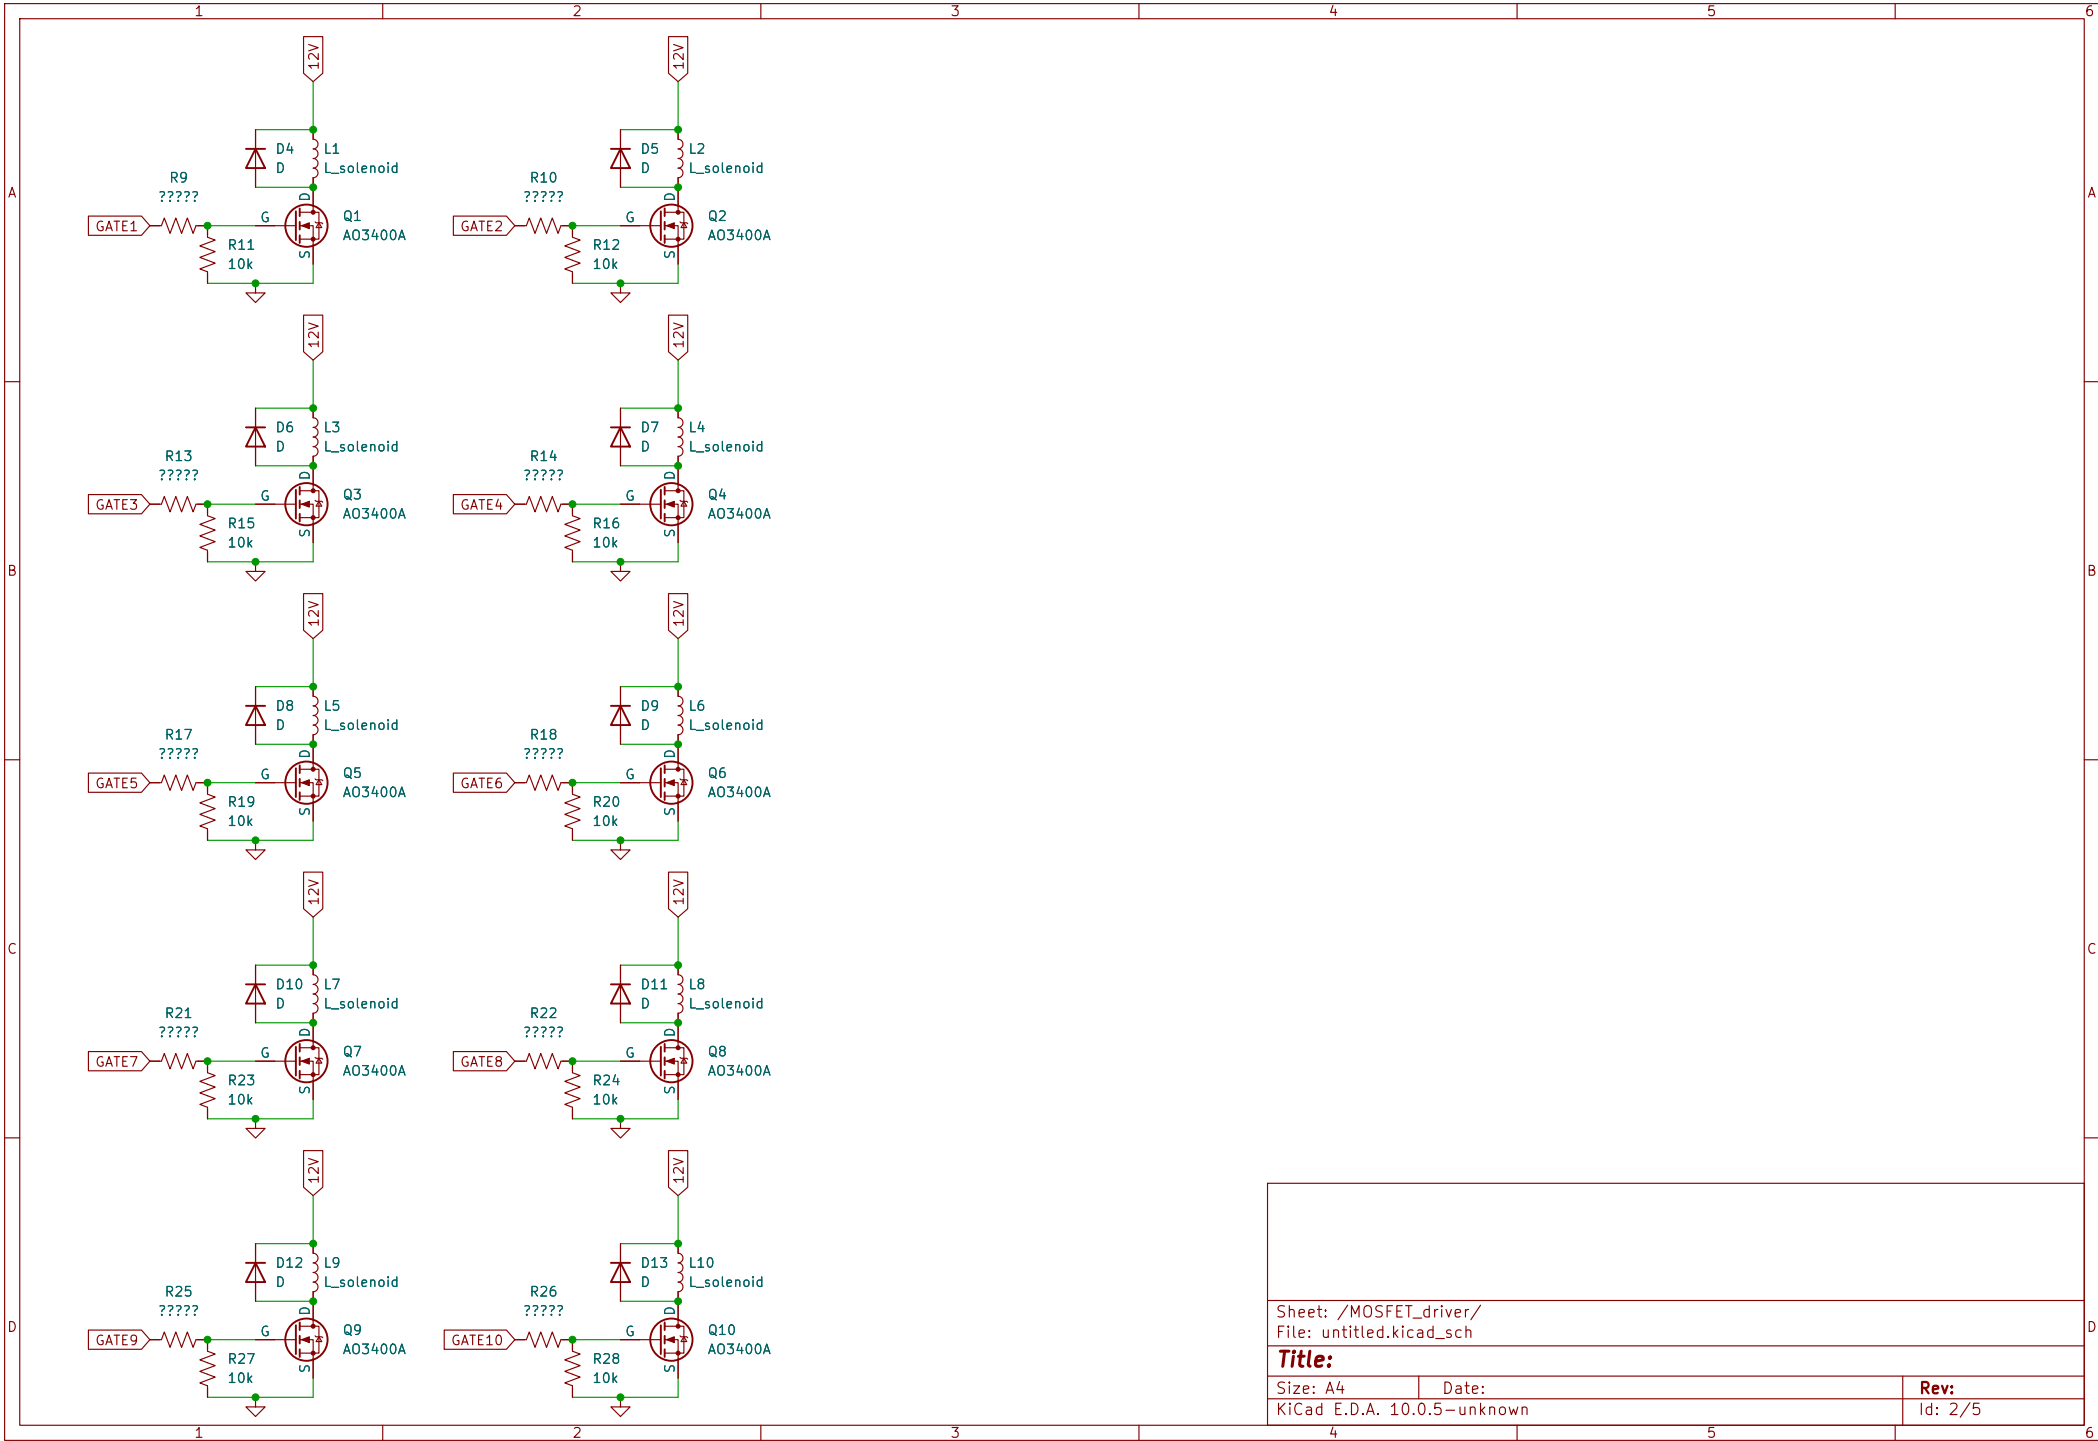

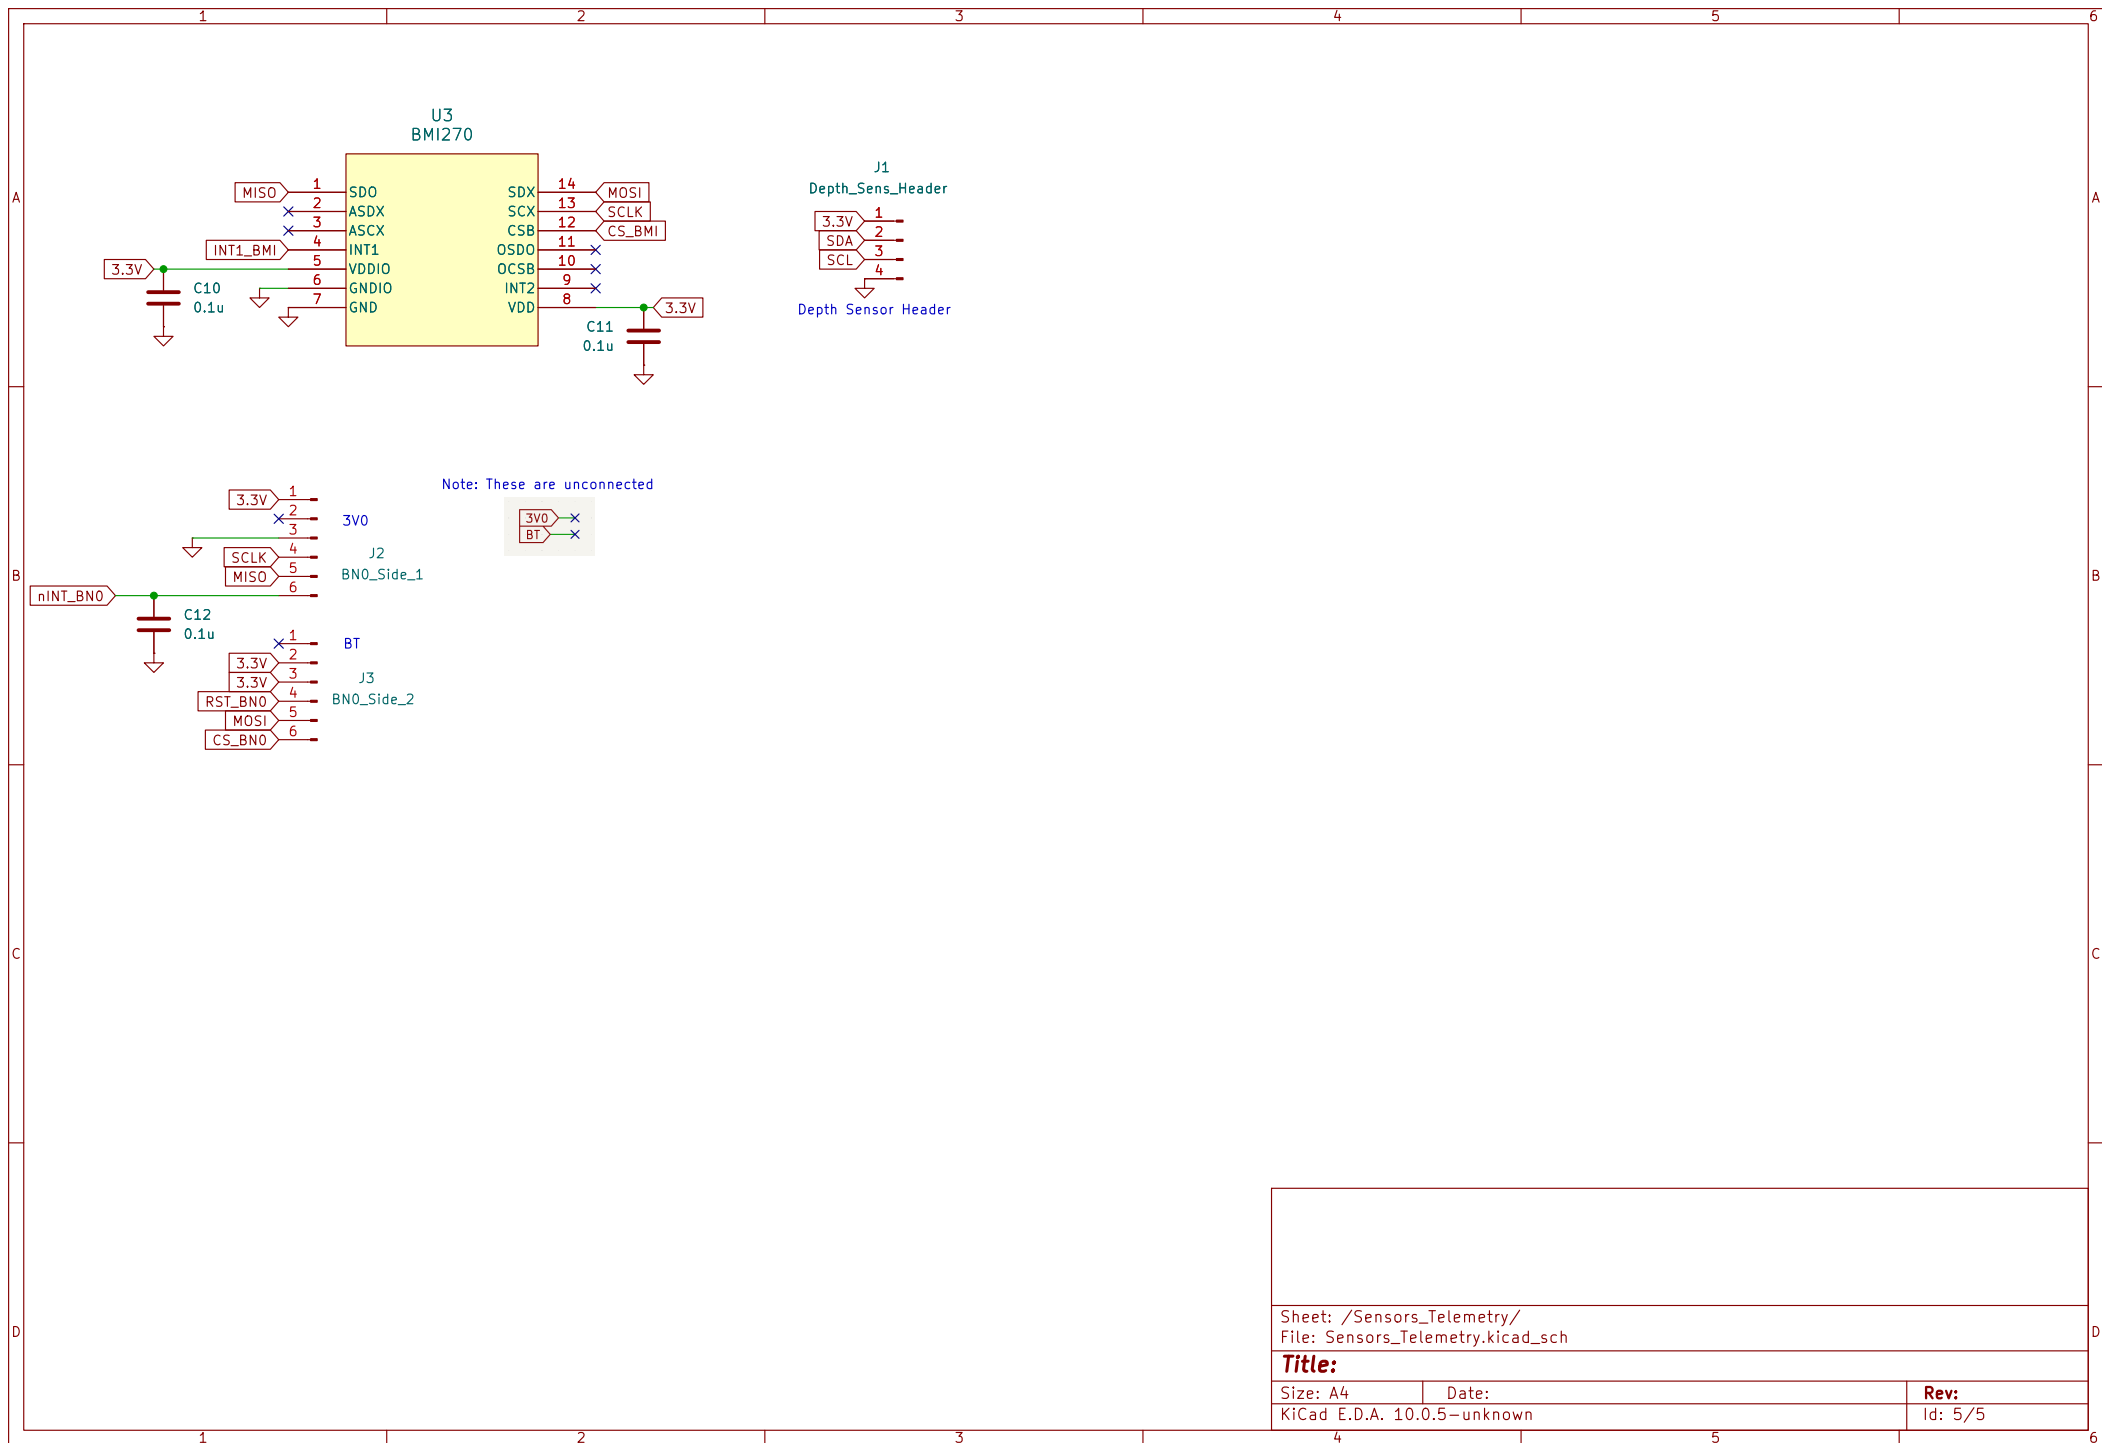

Fade or keep RPP

12V

R29
100k

D14
?????????

Q11
AO3400A

Title:		
Size: A4	Date:	Rev:
KiCad E.D.A. 10.0.5—unknown		Id: 6/5

