


MCU Connections

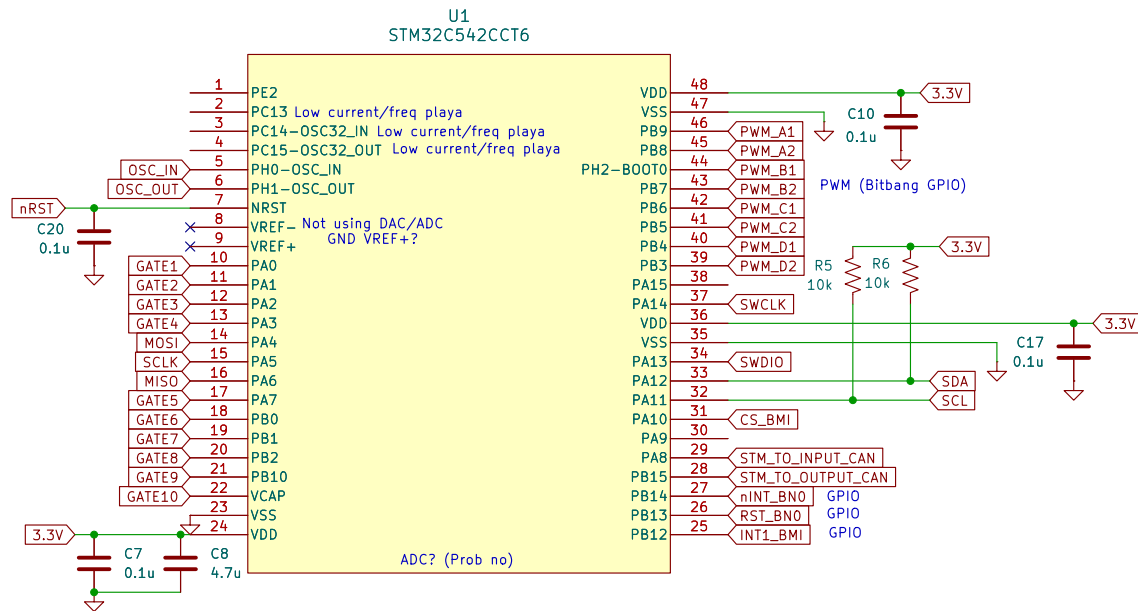

Categorized Designs

MOSFET_driver




File: untitled.kicad_sch

Sensors_Telemetry




File: Sensors_Telemetry.kicad_sch

Connector_Signals




File: connector_signals.kicad_sch

Voltage_Conv-Protoc-Monitoring




File: Voltage_conv_prot.kicad_sch


Crystal Oscillator

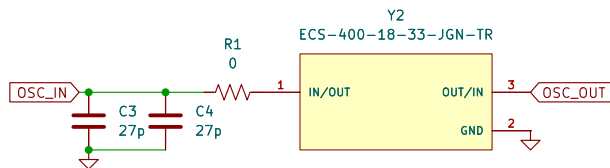

CAN Transceiver

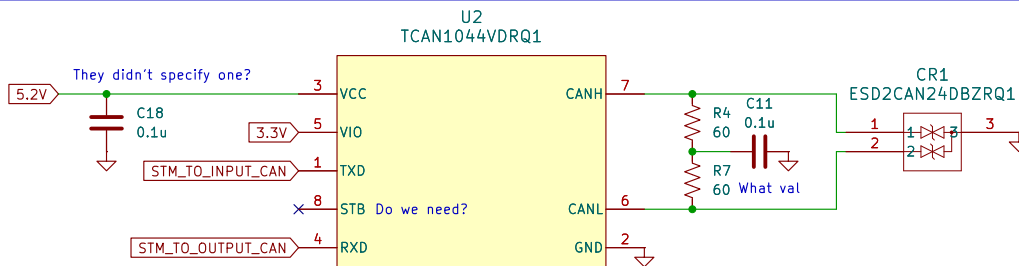

Test Points, LEDs

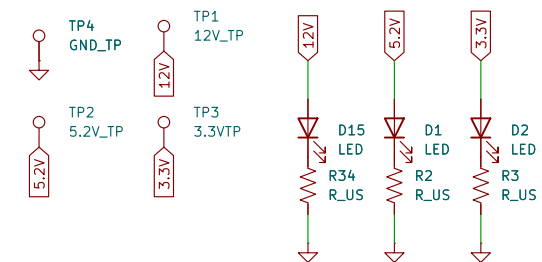

Purdue ROV


Sheet: /
File: X19-Control-Board.kicad_sch

Title: Purdue ROV Subsystem Board

Size: A4
KiCad E.D.A. 10.0.5-unknown

Date:

Rev:
Id: 1/5

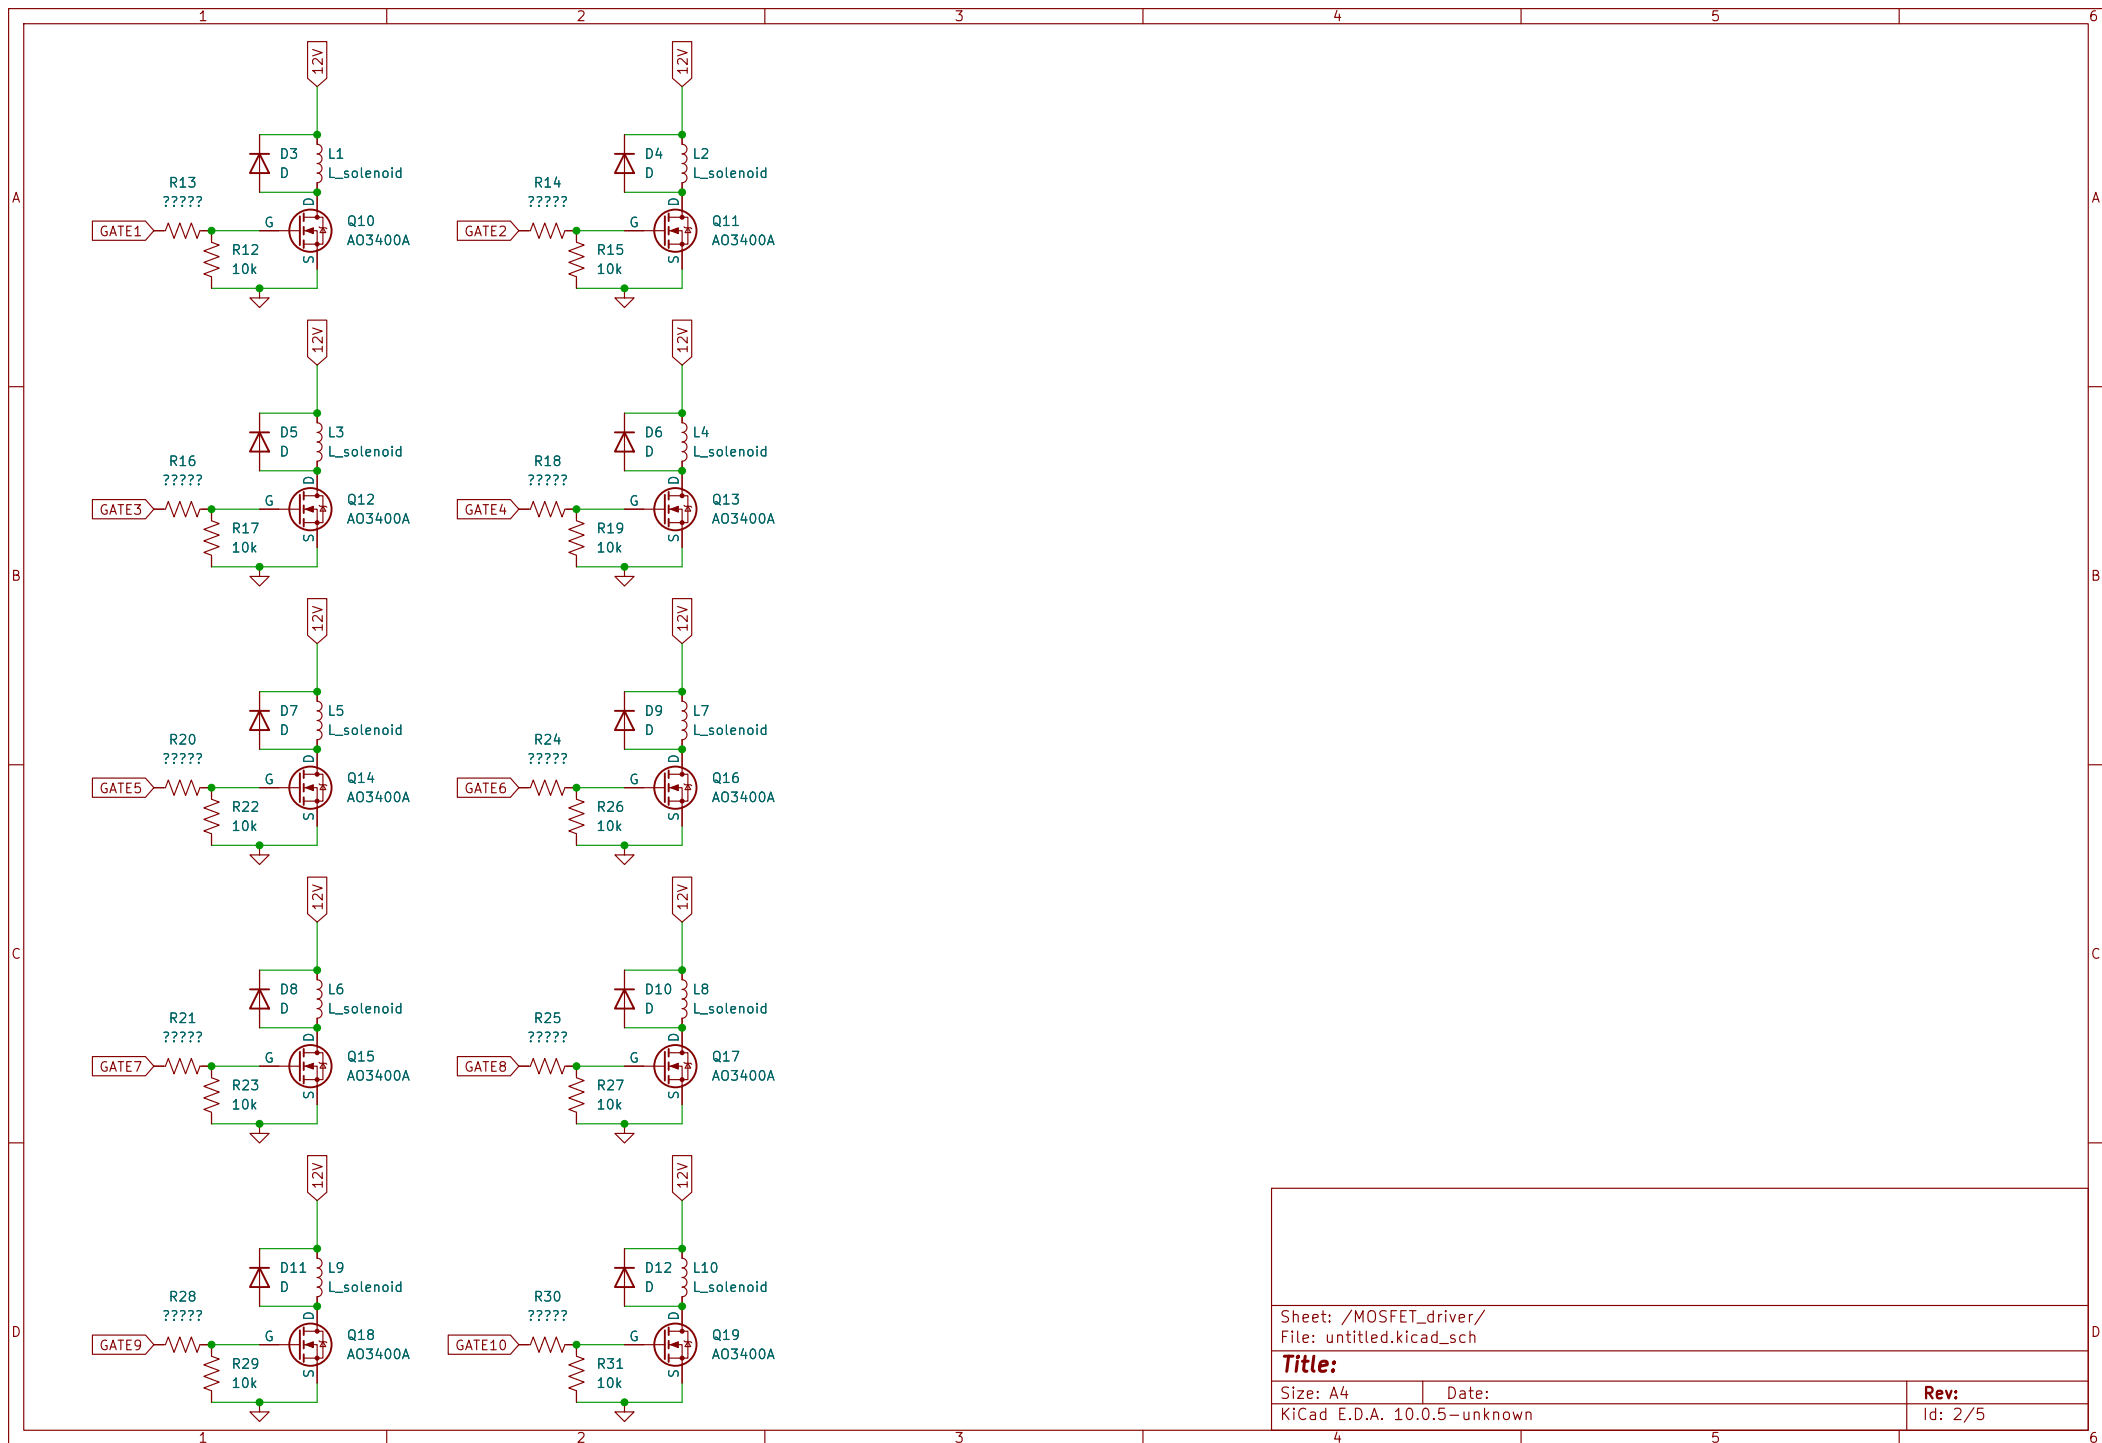

Sheet: /MOSFET_driver/
File: untitled.kicad_sch

Title:


Size: A4

Date:


KiCad E.D.A. 10.0.5-unknown

Rev:


Id: 2/5

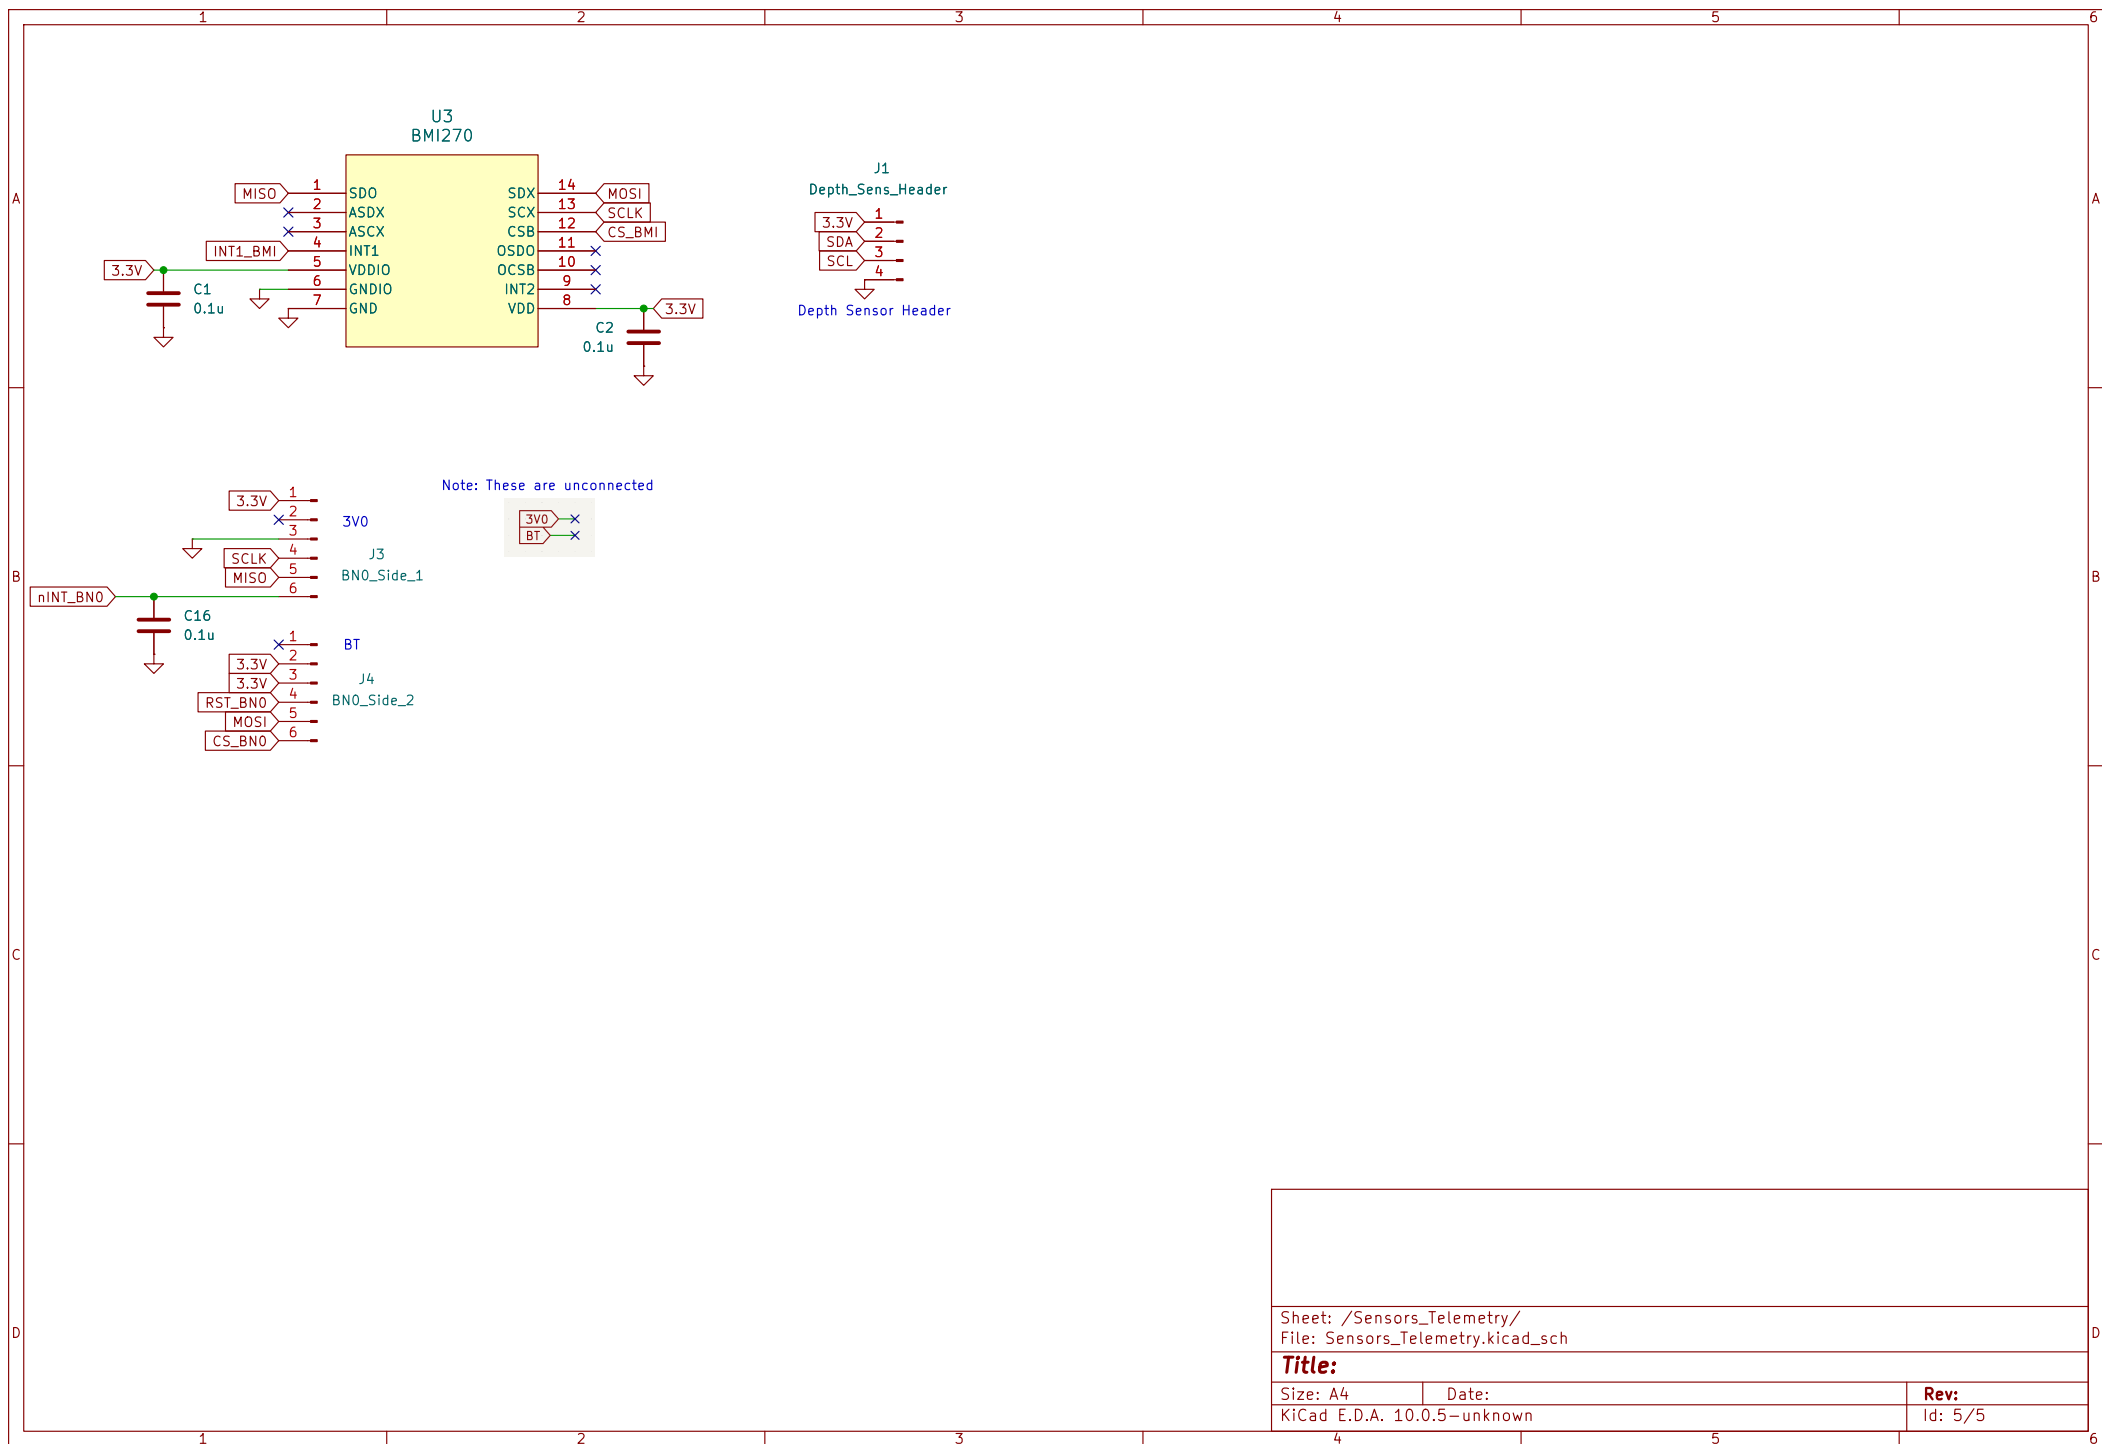


LDO – Voltage Conversion

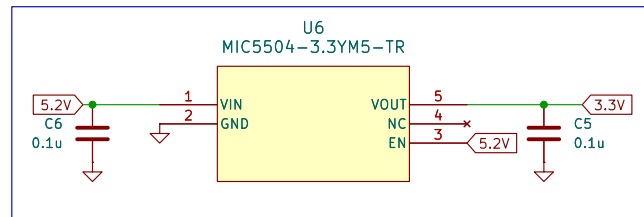

Reverse Polarity Protection

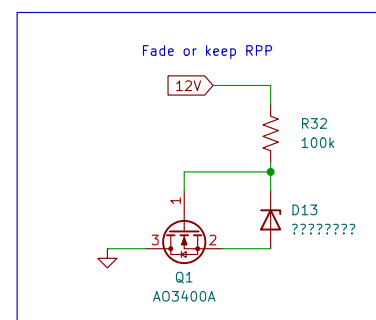

Power Monitoring 5.2V, 12V rails

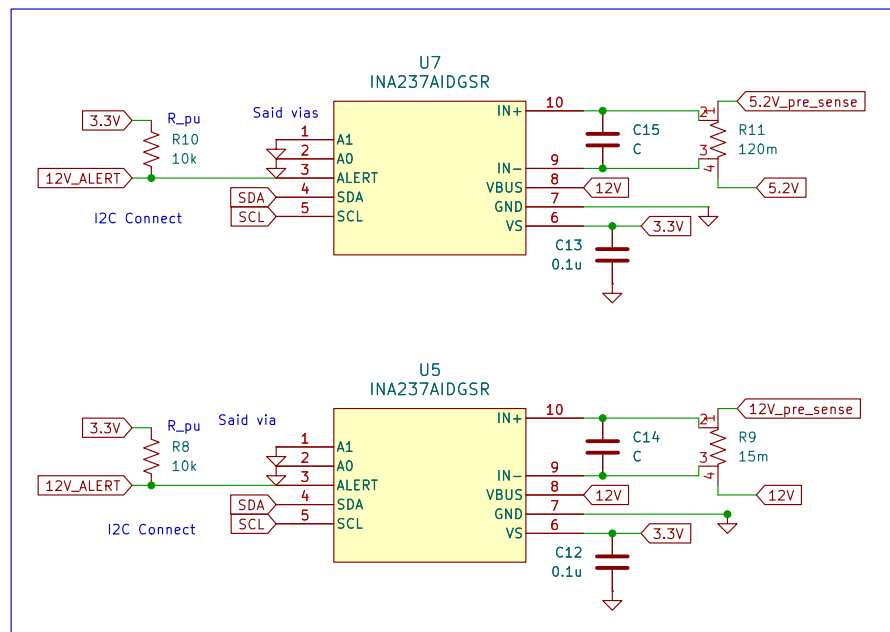

Sheet: /Voltage Conv-Protec-Monitoring/
File: Voltage_conv_prot.kicad_sch

Title:


Size: A4

Date:

KiCad E.D.A. 10.0.5-unknown

Rev:

Id: 6/5

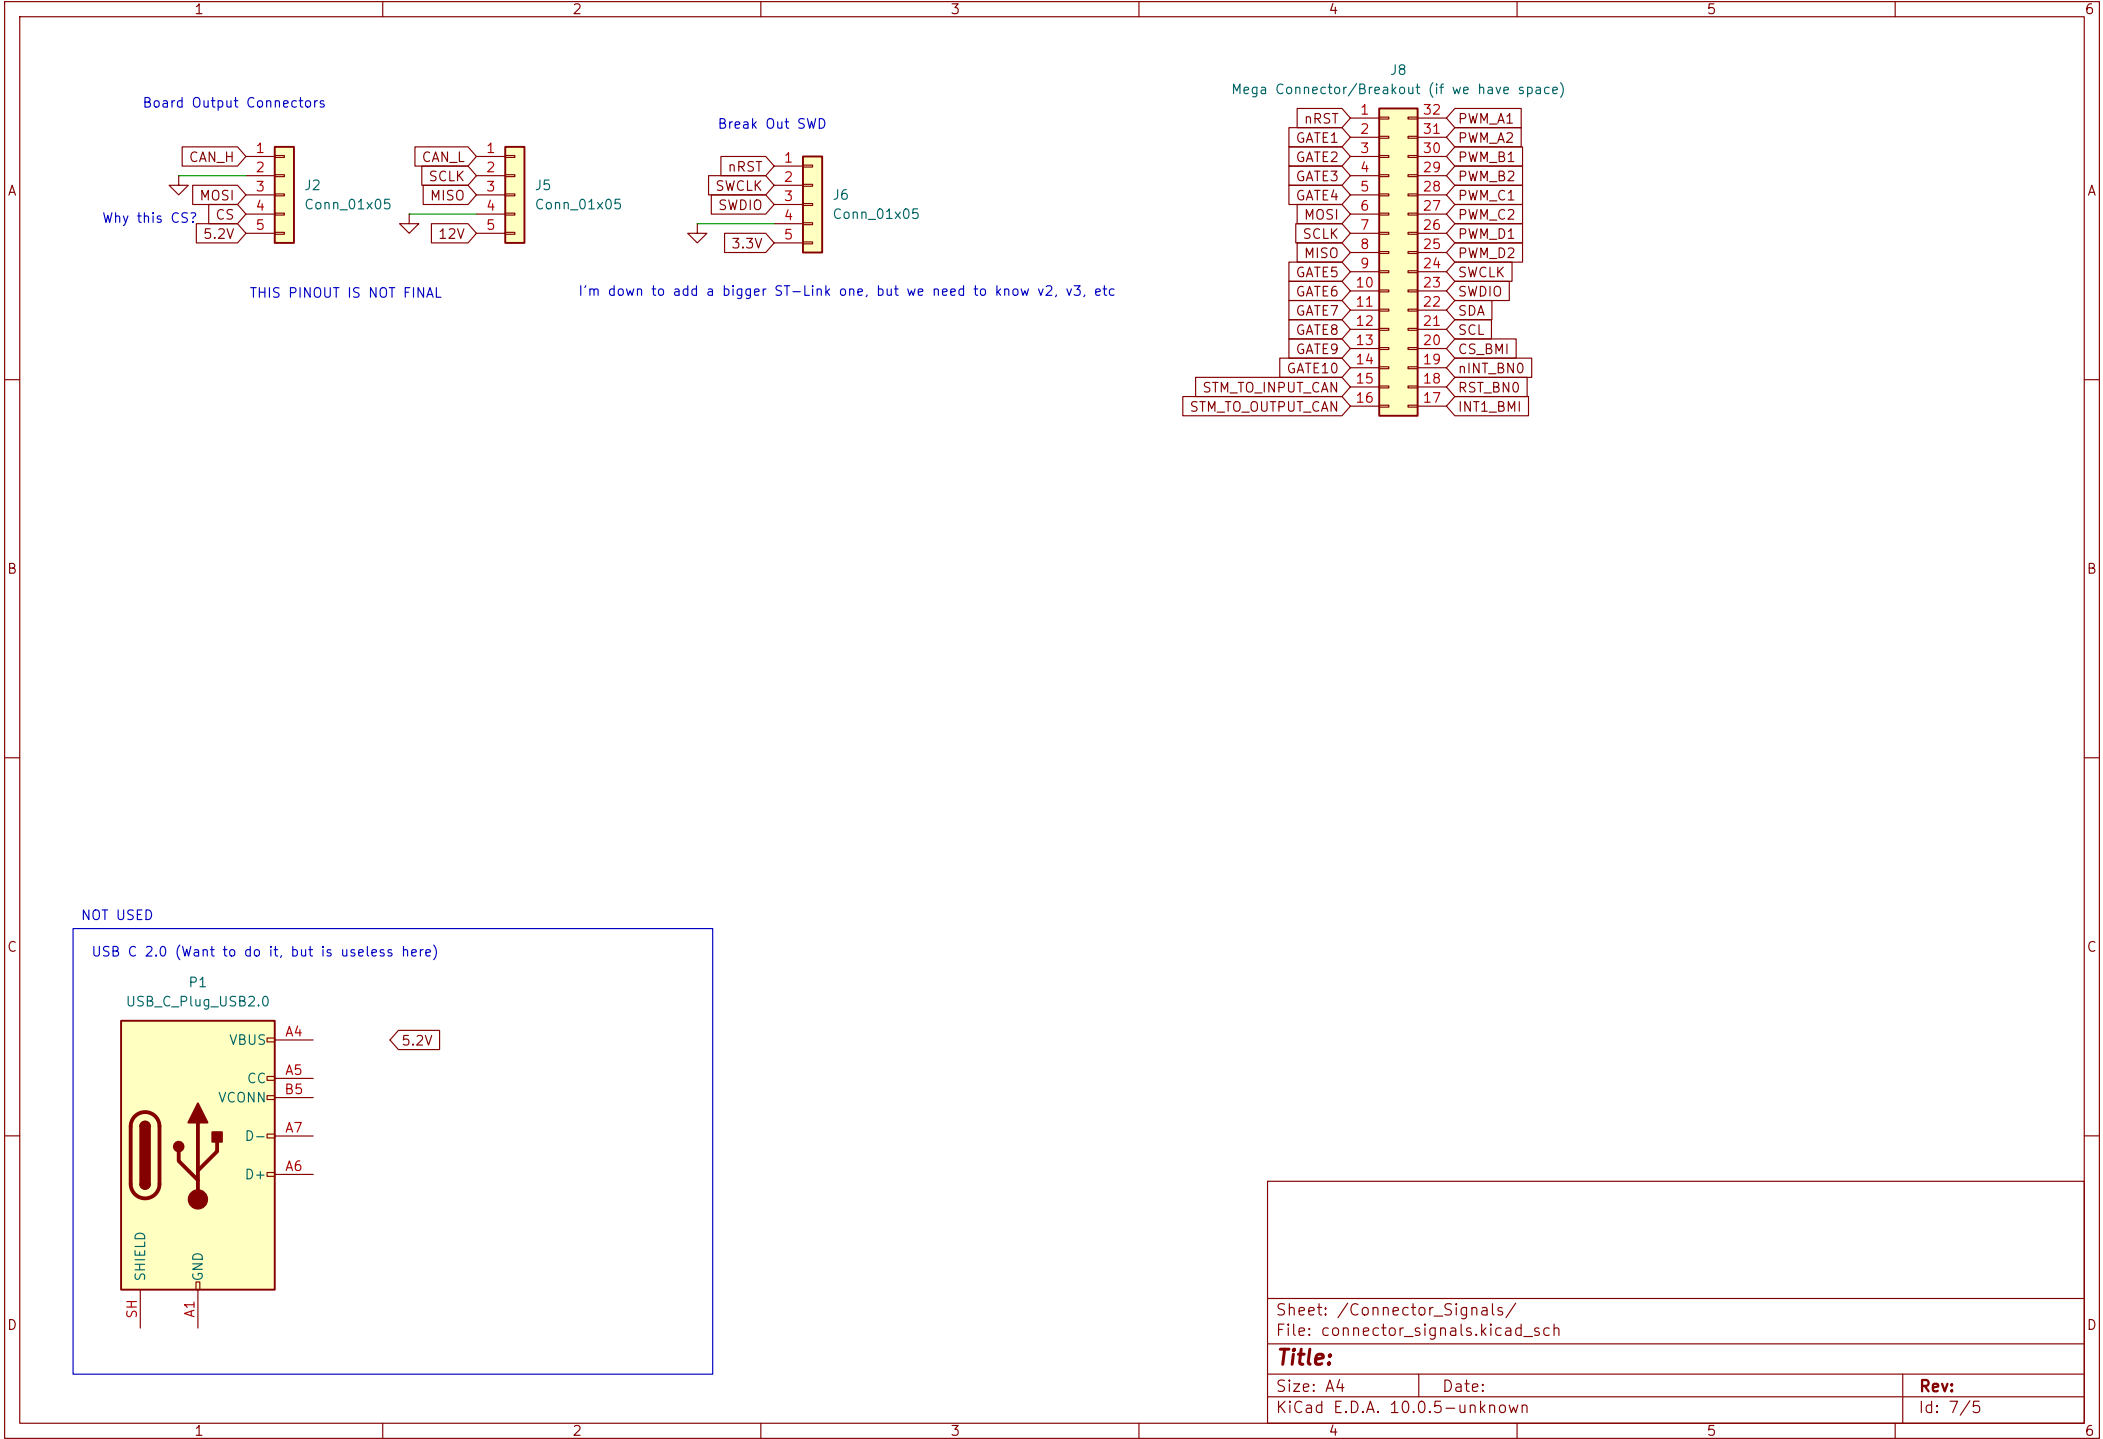

Break Out SWD

nRST

1

2

SWCLK

3

SWDIO

4

3.3V

5

J6

Conn_01x05

I'm down to add a bigger ST-Link one, but we need to know v2, v3, etc

Mega Connector/Breakout (if we have space)

J8

nRST	1	32	PWM_A1
GATE1	2	31	PWM_A2
GATE2	3	30	PWM_B1
GATE3	4	29	PWM_B2
GATE4	5	28	PWM_C1
MOSI	6	27	PWM_C2
SCLK	7	26	PWM_D1
MISO	8	25	PWM_D2
GATE5	9	24	SWCLK
GATE6	10	23	SWDIO
GATE7	11	22	SDA
GATE8	12	21	SCL
GATE9	13	20	CS_BMI
GATE10	14	19	nINT_BN0
STM_TO_INPUT_CAN	15	18	RST_BN0
STM_TO_OUTPUT_CAN	16	17	INT1_BMI

NOT USED

USB C 2.0 (Want to do it, but is useless here)

P1

USB_C_Plug_USB2.0

VBUS

A4

5.2V

CC

A5

VCONN

B5

D-

A7

D+

A6

SHIELD

SH

A1

GND

Sheet: /Connector_Signals/

File: connector_signals.kicad_sch

Title:

Size: A4

Date:

KiCad E.D.A. 10.0.5-unknown

Rev:

Id: 7/5