


Steps to create symbol and footprint for the device


1. Create frame add component chose A4L-LOC make sure to use centre at the original centre location with grid and save it.
2. Interface connectors to the input and output parts. Component to be add to the input part such as DC JACK as below and the output part using two connection connectors.




Below are steps to create or import symbol and device.

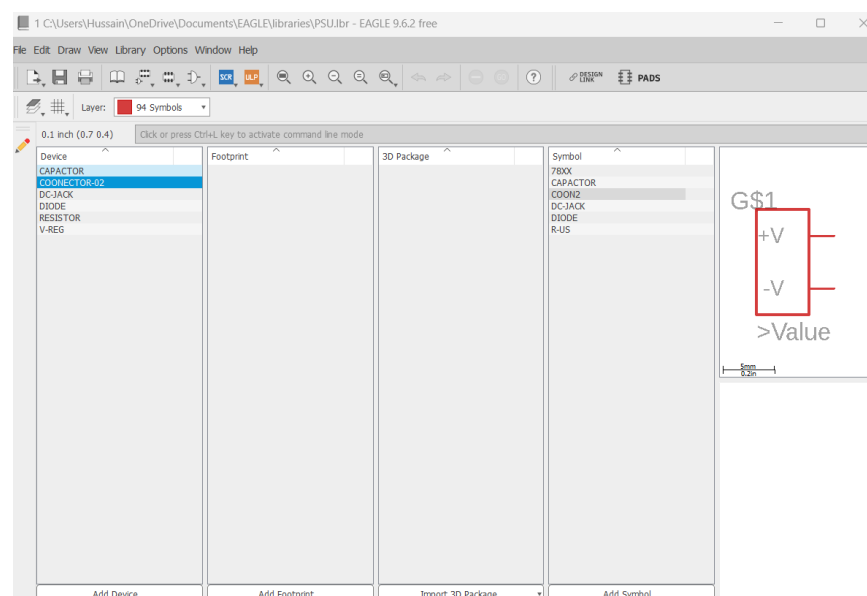

1. Creating required symbols with pins, name, value and add to the device make sure the device in the middle of the cross, then save it and close the library. In library open it and in PSU click on use.
2. Close it and go to schematic then add part from PSU(DC-JACK)

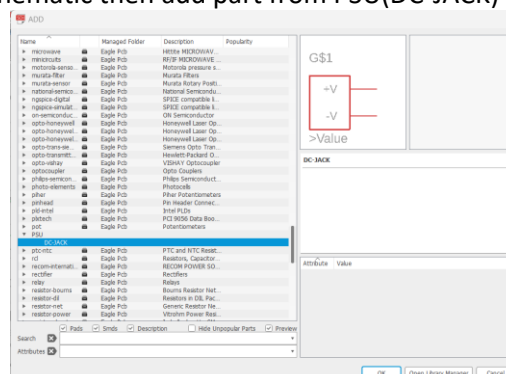


3. Import a symbol by using the same library and import the diode.

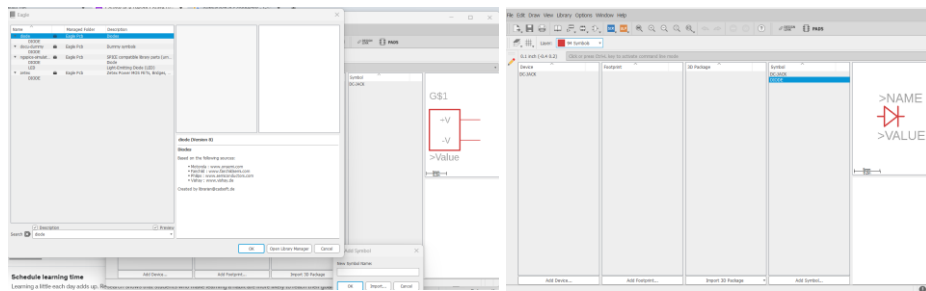


Then add the diode symbol to the device as below.

4. Creating the capacitor

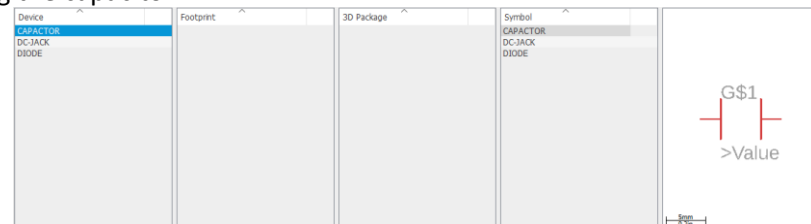


5. Import resistor to be use in the schematic.

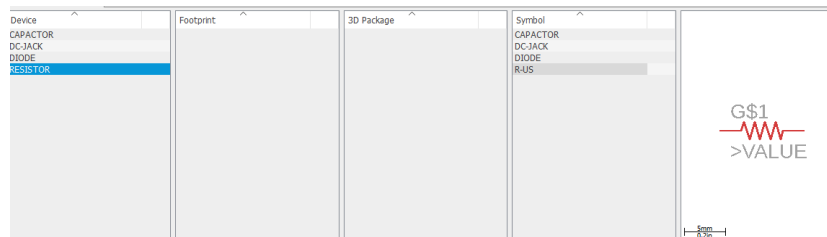

6. Import voltage regulator device and creating the output connector CONN_02

7.

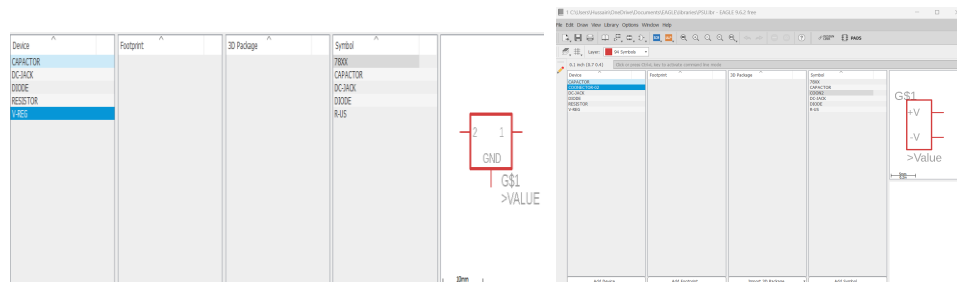


Steps to import footprints into symbols.

There are two options to add footprints the first option is to create footprint and the second option is to import the footprint.

For each device need a footprint to be connect to be use in the schematic.

The after the connection the output is going to be as below.

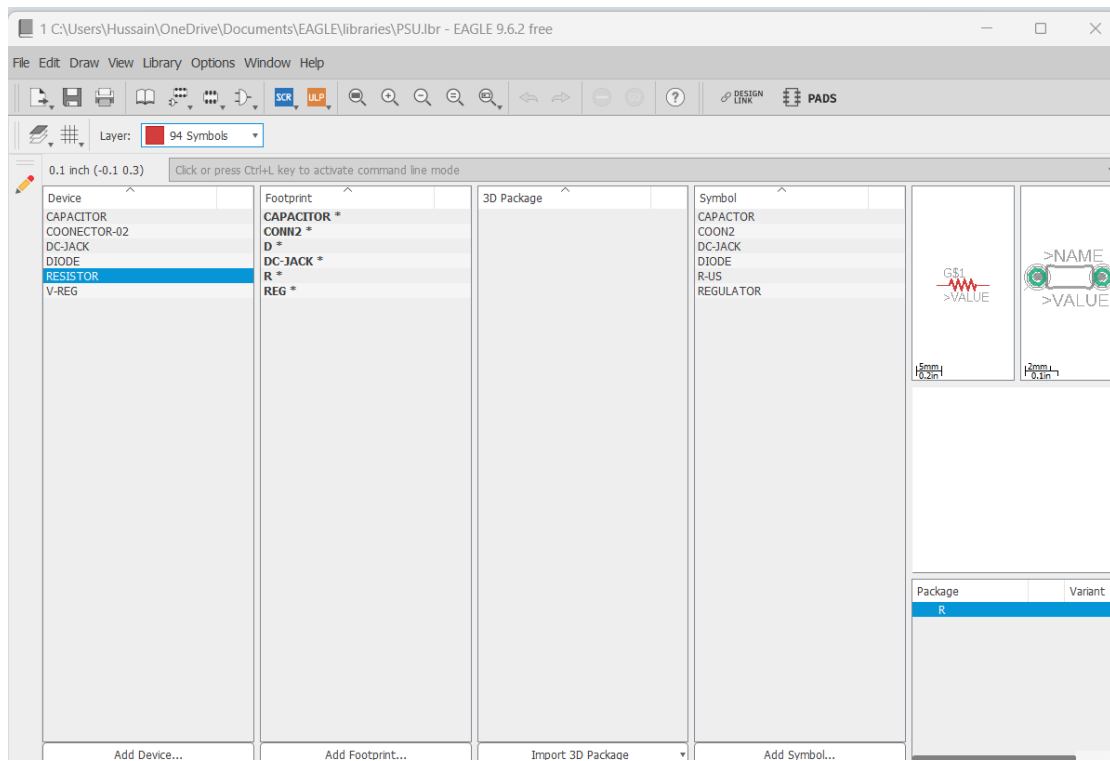

Steps to import footprint

