


## Problem

Determine the Fourier coefficients for the waveform in Fig. 17.48 using *PSpice* or *MultiSim*.

**Figure 17.48:**

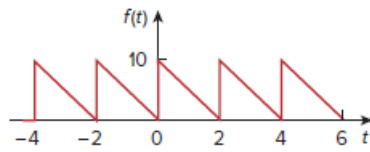


## Step-by-step solution

## Step 1 of 4

The schematic is shown below, wave form is inputted using. The attributed of V pulse, in the transient dialog box, we enter print step = 0.05 final time = 12, centre frequency = 0.5, Out put Vars = V (1) will enable Fourier. After simulation,

## Step 2 of 4

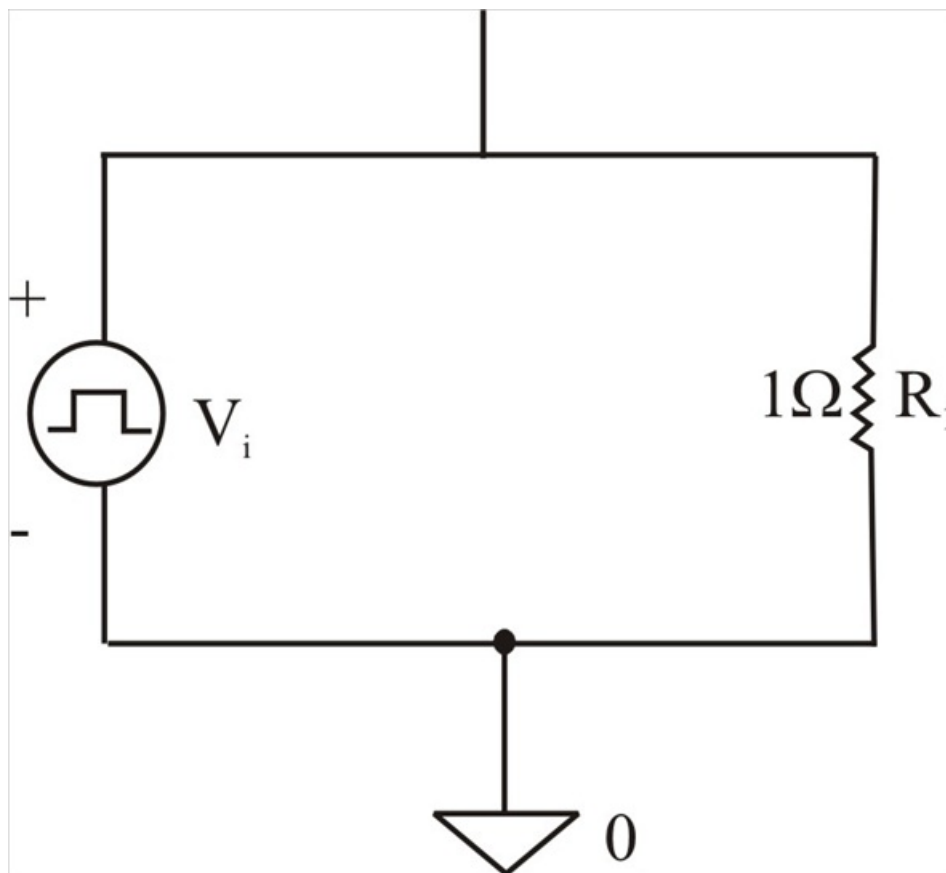

## Step 3 of 4

$V_1 = 0$   
 $V_2 = 10$   
 $TD = 0$   
 $TR = 1U$   
 $TF = L$   
 $PW = 0.01$   
 $PER = 2$

DC component plot is given below,

**Step 4** of 4

