


Problem

Use *PSpice* or *MultiSim* to obtain the Fourier coefficients of the waveform in Fig. 17.55(a).


Figure 17.55(a):

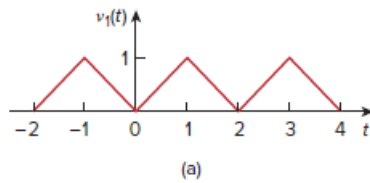

Step-by-step solution

Step 1 of 2

The schematic is shown below transient box see print step = 0.583. final time = 120 centre freq = 0.5, Out put VARS = V(1), click enable Fourier components

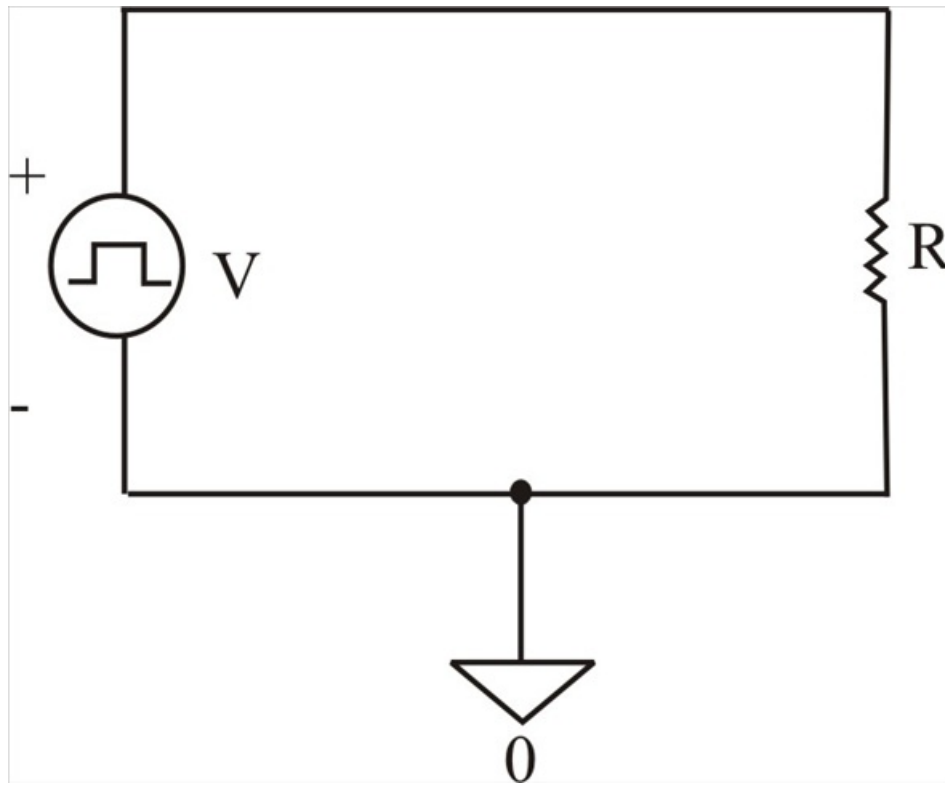

Step 2 of 2

Fourier component of transient response V(1) DC component = 5.048510 E-01
Harmonics Freq. comp Fourier normalize phase form allies comp on comp deg

1	5.000E-01	4.056E-01	1.00E-00	0.00E+00
2	1.000E+00	2.977E-04	7.341E-00	3.833E+00
3	1.500E+00	4.531E-02	1.117E-01	-1.761E+00
4	2.000E+00	2.969E-04	7.320E-04	6.757E+00
5	2.500E+00	1.648E-02	4.064E-04	-3.417E+00
6	3.00E+00	2.955E-04	4.064E-02	9.659E+00
7	3.500E+00	8.535E-03	7.285E-04	-4.311E+00
8	-4.000E+00	2.935E-04	2.104E-02	1.254E+01
9	4.500E+00	5.258E-03	7.856E-01	-6.197E+00

Total harmonics distortion =1.214850+01 %