Transferring Roms

0. If your computer system is the latest version of windows10, please see step4 and step5 only.


1. Insert the tf card into the computer with a card reader and open the "BOOTICE" software.

⊗ BOOTICEx64	2015/2/15 16:00	应用程序	450 KB
⊗ BOOTICEx86	2015/2/15 16:00	应用程序	416 KB


2. Choose the tf card disk and select the "Parts Manage" options.



3. Then you can see three partitions. Choose the fat32 partition and select "Set Accessible"

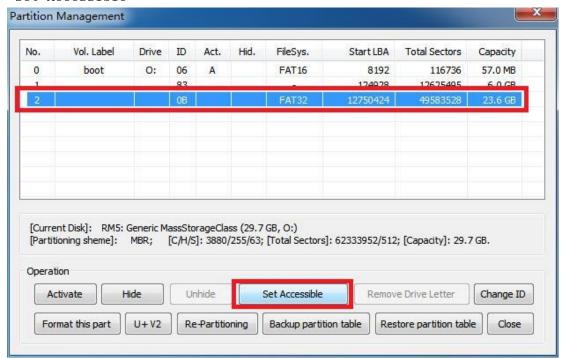

4. Then we can see this fat32 partition in windows file manager.

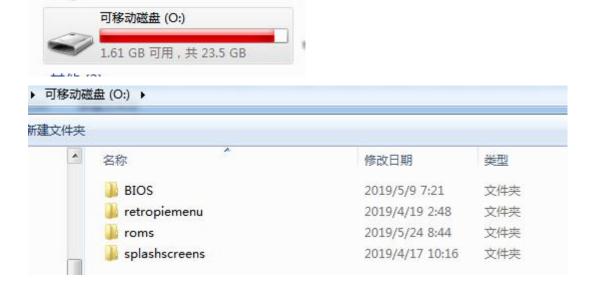


5. Then add the roms to their respective folders.

or men add the remain to their respective reference.				
Arcade-Fba	roms\arcade\fba			
Arcade-Mame	roms\arcade\mame2003			
Super Nintendo Entertainment System	roms\snes			
PlayStation Portable	roms\psp			
Playstation 1	roms\psx			
Nintendo Entertainment System	roms\nes			
Nintendo DS	roms\nds			
Nintendo 64	roms\n64			
Genesis/Megadrive	roms\megadrive			
Game Boy Advance	roms\gba			
Game Boy Color	roms\gbc			
Game Boy	roms\gb			
Dreamcast	roms\dreamcast			
PC/DOS	roms\pc			
KODI	roms\kodi			

Ps: More information please see this <u>page</u> (https://retropie.org.uk/docs/)

5. At last transfer roms completed, please set the fat16 partition accessible, otherwise you can not boot up the retropie system.

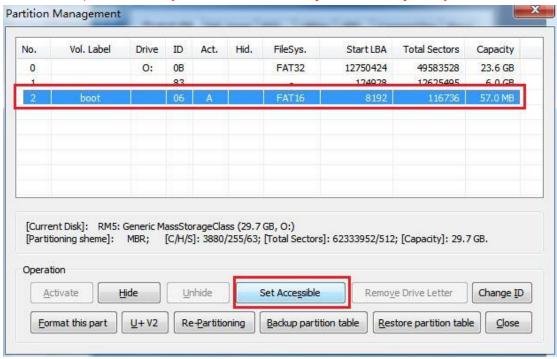

6.0ther methods Please refer to this page(https://retropie.org.uk/docs/Transferring-Roms/).