PREPARATION & HOOD MOUNTS / STEPS 1-3

Prepare the kit & install hood ball studs

1 Unpack and verify contents

(2) Gas springs
(2) Hood blind-nut assemblies
(1) RH fender bracket (passenger)
(1) LH fender bracket (driver)



HOOD / 2 ASSEMBLIES



RH / PASSENGER



LH / DRIVER

HOOD MOUNTING LOCATIONS / VIEW FROM FRONT



RH / PASSENGER LH / DRIVER

2 Gather tools

Socket wrench with **13 mm sockets**: standard and deep-well.

Fitment: 2021+ Ford Bronco with the original factory (OEM) hood only.


3 Insert, slide upward and tighten

A. Thread the ball stud into the silver blind nut, leaving **4-5 visible threads** between the nut and conical washer. Insert the nut into the **second opening above the hood hinge**, midway up the LH hood frame (driver side in North America). Keep the retainer **vertical** and slide it **upward**.

B. Hand-tighten clockwise. Lightly pull the conical washer to keep the silver nut from spinning.

C. Tighten with a **13 mm socket wrench**. Repeat A-C on the RH side.

1 / INSERT VERTICALLY

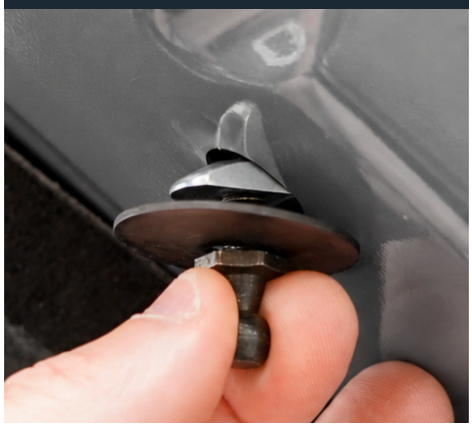

2 / SLIDE UPWARD



3 / TIGHTEN: 13 mm



FENDER MOUNTS & CONNECTIONS / STEPS 4-6

Fit brackets & connect the gas springs


4 Fit the LH and RH fender brackets

A. Remove the LH bolt beneath the fender lip with a **13 mm socket** (front lower hinge-assembly bolt). **B.** Reinstall it with the LH bracket; the ball stud faces **inward toward the engine**. **C.** Repeat on the RH side using the RH bracket.


BOLT LOCATION



REMOVE ORIGINAL BOLT

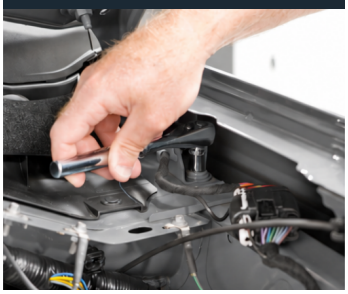

REUSE BOLT / BRACKET

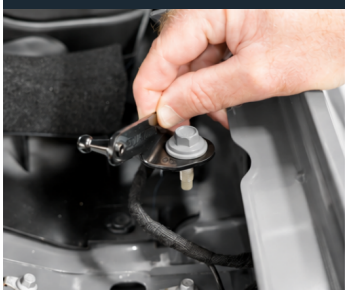

HARNESS BELOW STUD



Wire harness: Its attachment may need to be pulled free during assembly. After fitting the bracket, snap it back into place with the wire routed **under the ball stud**.

5 Connect the lower rod ends

Fit each gas spring with the **large cylinder/body end at the hood** and the **rod end at the fender**. Attach the rod-end socket to the lower fender ball stud.

Seat gently: Rock the socket over the ball stud with light pressure from behind so the internal C-clip spreads around it. Do not force it on; forcing can bend the clip inward. Replace a damaged fitting before use.

6 Attach the body ends to the hood

Firmly snap the body end onto the hood ball stud. Confirm that both rod-end sockets are attached to the fender-bracket ball studs.

LOWER / FENDER / ROD END



UPPER / HOOD / BODY END



Electronic instructions only. Printed instructions are not included.