
FORD MAVERICK TAILGATE ASSIST

2022-2026 | QUICK INSTALLATION GUIDE | 8 EASY STEPS




IMPORTANT Park on level ground. Turn off the ignition. Fully open the tailgate.

01 Preassemble the lower bracket

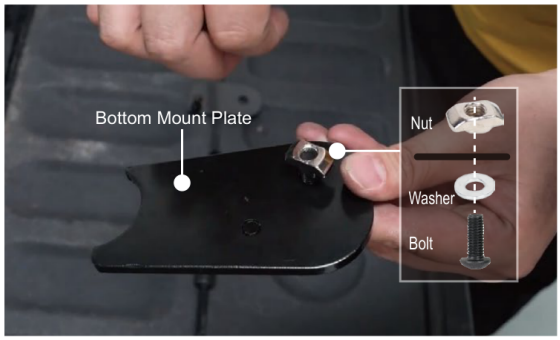


Fit the supplied bolt, washer and nut to the lower bracket. Leave the nut loose.

02 Attach both sockets

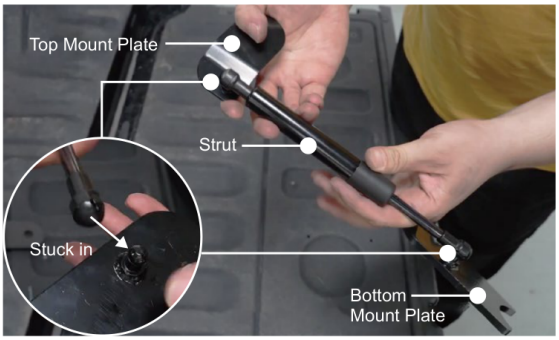

Press the damper sockets onto the upper and lower ball studs until fully seated.

03 Remove the bottle opener

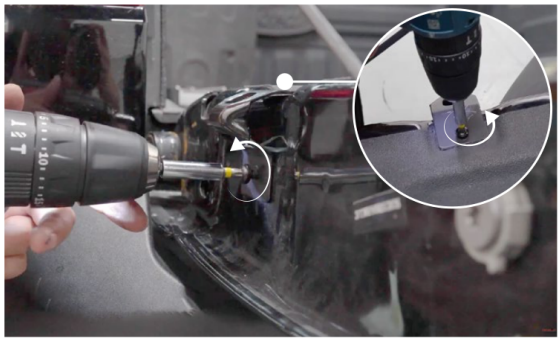

Remove the driver-side factory bottle opener / tie-down cleat.

04 Remove the upper bolt



Remove and keep the factory upper bolt for the next step.

05 Install the upper bracket




Position the upper bracket. Reinstall and securely tighten the factory bolt.

06 Align the lower bracket



Pull the damper rod down firmly and align the lower bracket with the factory hole.

07 Secure the lower bracket

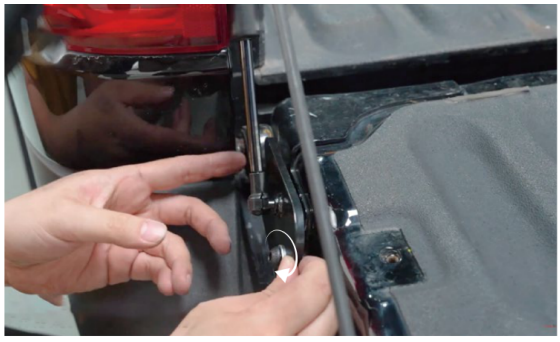

Insert the nut into the factory hole. Seat the bracket flat and tighten the bolt.

08 Check the completed installation



Slowly open and close the tailgate. Confirm smooth movement and secure mounting.

FINAL CHECK Both sockets seated. Fasteners tight. No rubbing or binding.

Periodically check all hardware for tightness.