KIT CONTENTS & TOOLS / STEPS 1-2

Before you begin


1 Verify the supplied components

2 gas springs

2 hood ball-stud assemblies

2 fender brackets



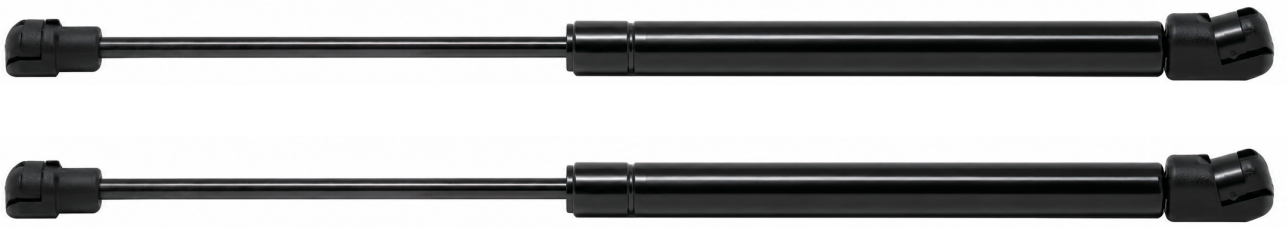

2 Gather the required tools

Socket wrench with **10 mm** and **1/2 in.** sockets.

Torque wrench for the hood ball studs.

Small flat-blade screwdriver for gas-spring removal.

Before installation: Park on level ground and securely support the hood. Keep the hood supported until both gas springs are fully attached.

Electronic instructions only. Printed instructions are not included.

HOOD MOUNTS / STEP 3A-3B

Insert the hood ball studs

3 Prepare and insert each retainer

Locate the hood-frame hole midway up each side of the hood. Thread the ball stud approximately halfway into its retainer, leaving **4-5 visible threads** between the retainer and conical washer. Feed the retainer into the hole.

1 / INSERT THE RETAINER



2 / BEGIN HAND-TIGHTENING




Keep the retainer vertical.
Turn the ball stud clockwise by hand while pulling outward lightly on the ball stud. This helps prevent the insert from spinning. Do not fully tighten yet; slide it outward as shown on the next page.

HOOD MOUNTS / STEP 3B-3C

Slide outward, then tighten

Before final tightening, slide each retainer assembly toward the **outside edge of the hood**. Keep the retainer vertical in the hole and tighten in this position.

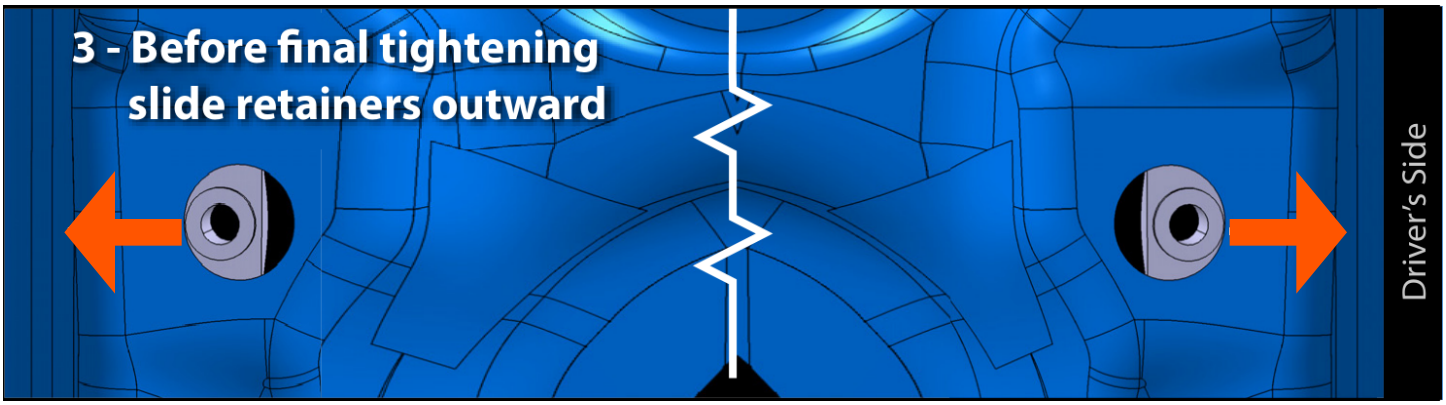

This outward position moves the gas spring away from the shock tower when the hood is closed.

3 / FINAL TIGHTENING



Torque: 15 ft·lb
(approximately 20 N·m)

Use the **1/2 in. socket** and a torque wrench to tighten each hood ball stud.

Repeat on both sides of the hood.

FENDER MOUNTS / STEP 4

Install the fender brackets

4 Remove the bolt and position the bracket

Remove the fender bolt shown using a **10 mm socket**. Fit the bracket tightly against the fender lip, as shown, then reinstall the factory bolt. Install the matching bracket on both the driver and passenger sides.

1 / REMOVE THE FENDER BOLT



2 / FIT THE FENDER BRACKET




Check the driver side: If a sound-tube bracket is mounted beneath this fender bracket, relocate it using the instructions on the next page.

CONDITIONAL STEP / MODELS WITH A SOUND TUBE

Relocate the sound-tube bracket

If your Mustang has a sound-tube bracket directly beneath the driver-side fender bracket, relocate it to the **lower side of the fender lip**.

SOUND-TUBE BRACKET / LOWER POSITION

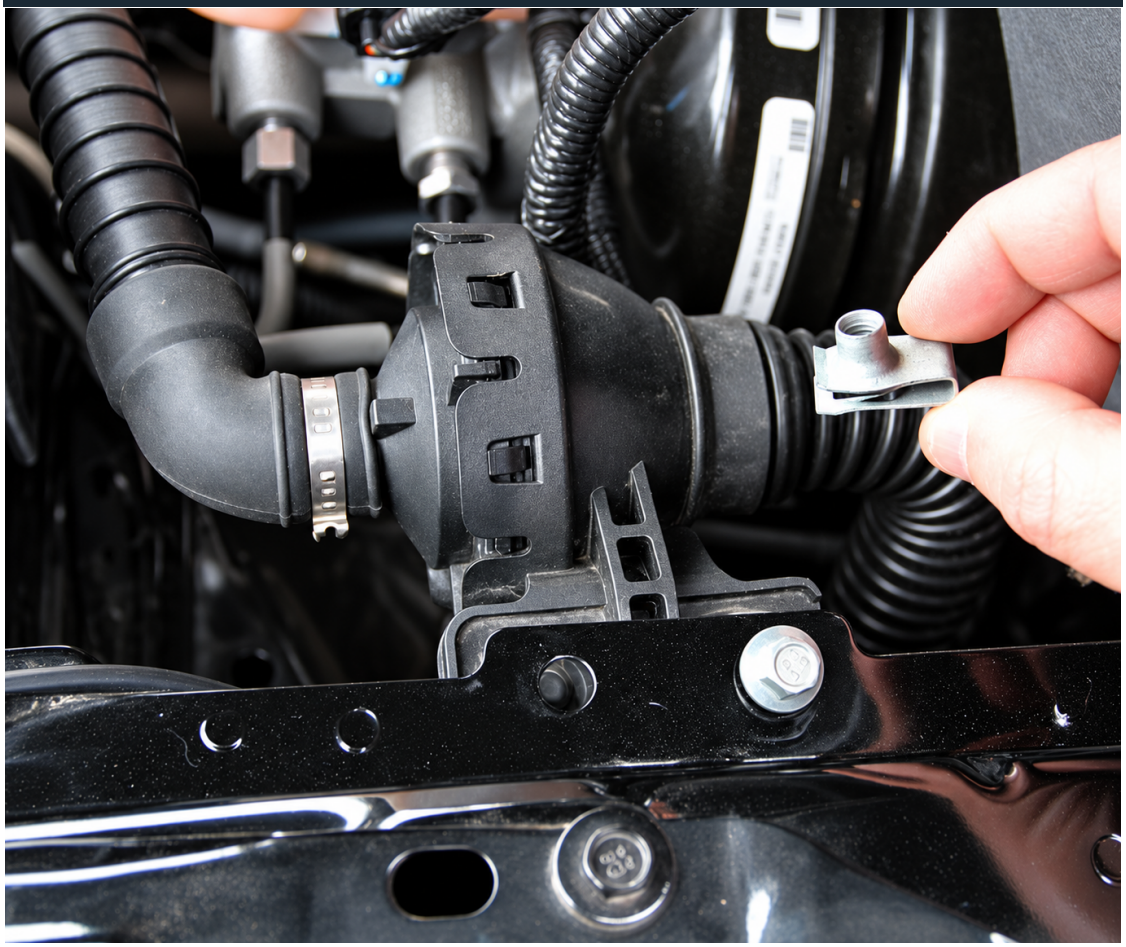

1. Remove the sound-tube bracket bolt and its clip-nut.
2. Move the bracket to the lower side of the fender lip, as shown.
3. Reuse the original clip-nut, with its nut facing upward, and refit the bolt. The photo shows the relocated bracket before the nut is attached.

GAS-SPRING CONNECTIONS / STEP 5

Connect both gas springs

5 Attach the body at the hood, rod at the fender

Firmly snap the **large cylinder/body end** onto the hood ball stud. Then snap the **extended rod end** onto the fender ball stud. Rotate the end socket as needed to align it before snapping it into place. Repeat on both sides.

BODY END / HOOD BALL STUD



ROD END / FENDER BALL STUD



Confirm both connections: Make sure each end socket is fully seated on its ball stud before removing temporary hood support.

COMPLETED INSTALLATION / SERVICE

Final check & removal

INSTALLED GAS SPRING



Final installation check

Confirm that both hood ball studs and both fender brackets are secure.

Check that each gas spring is fully attached at both ends.

Slowly open and close the hood. Check clearance around the shock towers and verify that the gas springs move freely.

To remove a gas spring

Securely support the hood first. Slide a small flat-blade screwdriver under the metal C-clip on the back of the end fitting. Gently lift the clip while slowly twisting and pulling the socket off the ball stud. **Do not remove the C-clip.** Press it back into position before reinstalling.