
KIT CONTENTS & TOOLS

Before you begin

1 Check the supplied components

Kit contents

2 gas springs
2 fender brackets
(left/right mirror pair)
2 hood brackets
Hardware pack:
bolts, nuts and washers

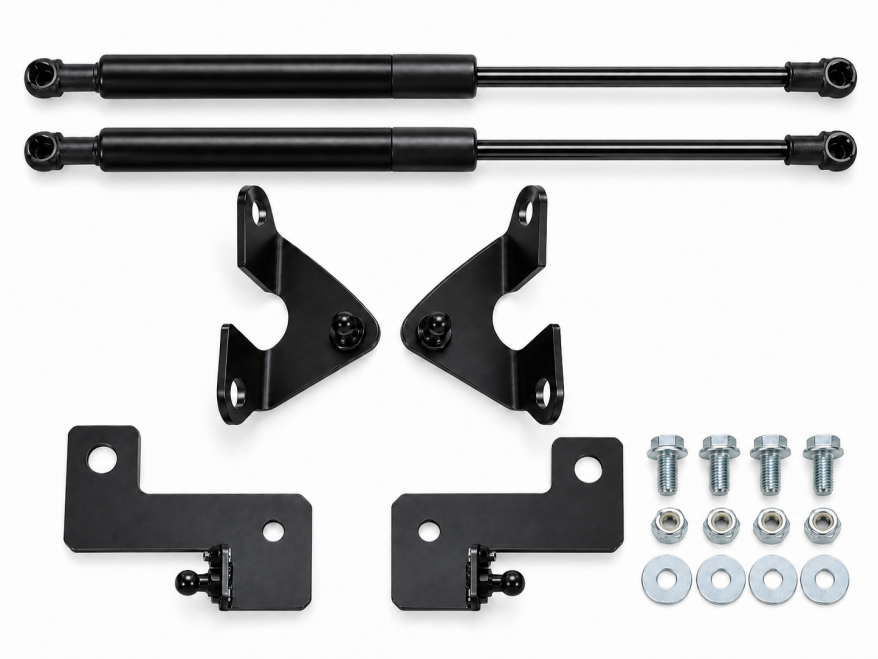

2 Prepare the tools

- 13 mm, 10 mm and 8 mm sockets
- 11 mm wrench
- Flathead screwdriver for the washer-tube clip
- Masking tape to mark hood-hinge alignment

Extra hardware is included. The kit contains spare bolts/screws and nuts. Not every supplied fastener is used during installation. Use only the hardware specified in each step; unused spares may remain.

Electronic instructions only. Printed instructions are not included.

PASSENGER-SIDE FENDER / STEP 1

Locate the passenger mount

1 Remove the washer-reservoir bolt

Start on the passenger side. Locate the windshield-washer reservoir and the bolt securing its plastic housing to the fender. Remove this bolt.

FIGURE 1 / WASHER-RESERVOIR BOLT LOCATION



Unmarked brackets: The supplied brackets do not have left/right letters. Identify the passenger-side bracket by its shape and the mounting position shown on the next page.

PASSENGER-SIDE FENDER / STEPS 2-3

Fit the passenger bracket

2 Hook the bracket onto the factory bolt

Slide the bracket opening over the bottom of the existing factory bolt beneath the fender (**point 1**). This factory bolt does not need adjustment. Pivot the bracket until its second mounting point aligns with the washer-reservoir attachment where the bolt was removed (**point 2**).

FIGURE 2 / PASSENGER-SIDE FENDER BRACKET



3 Install the washer spacers and bolt

Stack **3 supplied washers** right above the plastic reservoir mounting ear. Gently push the reservoir down slightly for clearance. Install **1 supplied bolt**; **no nut is needed here**. See the washer position on the next page.

PASSENGER-SIDE SPACERS / STEP 3 DETAIL

Position the three washers

They move the washer-fluid reservoir down slightly to prevent interference with the air spring cylinder body.

THREE WASHERS / RIGHT ABOVE RESERVOIR MOUNTING EAR



Correct position: 3 flat washers stacked right above the plastic reservoir mounting ear.

Gently push the reservoir down slightly and keep all three washers together at this position. Secure with the supplied bolt. **Do not install a nut at this location.**

HOOD / STEPS 4-5

Fit the passenger hood bracket

4 Reroute the washer tube

Locate the washer-fluid tube near the passenger-side hood hinge. Reroute it around the **outside of the bracket**, as shown.

Release and reposition its plastic clip. A flathead screwdriver can be used to gently unlatch the clip.

FIGURE 3 / TUBE & HOOD BOLTS



5 Install the hood bracket

Keep the hood securely supported; a helper can hold it in position. Mark the outline of the factory hood hinge with masking tape to preserve alignment.

Remove the hood-to-hinge bolts. Slide the matching supplied hood bracket into position, then reinstall and tighten both factory bolts while maintaining the hood alignment.

No letter markings: Select the hood bracket by its shape and fit at this mounting position. Do not look for a stamped or printed left/right letter.

DRIVER SIDE / STEPS 6-7

Install the driver-side brackets

6 Fit and secure the fender bracket

FIGURE 4 / DRIVER-SIDE MOUNTING POINTS



Locate the two fender mounting points shown in Figure 4.

Hook the matching driver-side bracket over the factory bolt from underneath. Pivot it until its other hole aligns with the fender mounting point.

Insert **1 supplied bolt** through the bracket and fender mounting point. Secure it with **1 supplied nut** and tighten the bolt and nut.

FIGURE 5 / DRIVER BRACKET INSTALLED



7 Install the driver-side hood bracket

Repeat Step 5 on the driver side. Fit the matching hood bracket and secure the hood and bracket with the factory bolts.

CONNECTIONS / STEP 8

Connect both gas springs

8 Install with the cylinder bodies at the hood

Install both gas springs with the **large cylinder/body end at the top, connected to the hood bracket**. Connect the **slim rod end to the fender bracket** ball stud.

Attach both ends on each side and check the hood alignment after both gas springs are installed.

GAS SPRINGS



INSTALLED CONNECTIONS



FINAL CHECK & HARDWARE NOTE

Check the completed installation



Final check

Confirm that all mounting bolts and both ends of each gas spring are secure. Slowly open and close the hood and check alignment and clearance.

Unused spare bolts/screws and nuts may remain. Their presence does not mean an installation step was missed.