KIT CONTENTS & TOOLS / STEPS 1-2

Before you begin

1 Check the supplied components

2 gas springs
2 hood brackets
2 fender bracket assemblies
Drill guide and step drill bit
2 threaded retaining blocks
Bolts and washers



2 Gather the required tools

Socket wrench; **10 mm and 13 mm deep-well sockets**; electric drill; center punch; small flat-blade screwdriver.

Before installation: Securely support the hood. Identify the brackets by shape and fit; side names refer to the vehicle.
2016-2020 Shelby GT350: Confirm that you have the model-specific kit before proceeding.

Electronic instructions only. Printed instructions are not included.


HOOD MOUNTS / STEP 3

Install the hood brackets


3 Fit the brackets at the upper hinge fasteners

A. On the vehicle right side, remove the uppermost hood-hinge nut with a 10 mm or 13 mm socket.
B. Fit the matching bracket over the upper hinge stud. Its long section extends vertically along the inner hood for support.
C. Reinstall and tighten the factory nut(s). Repeat on the left side.


1 / POSITION BRACKET

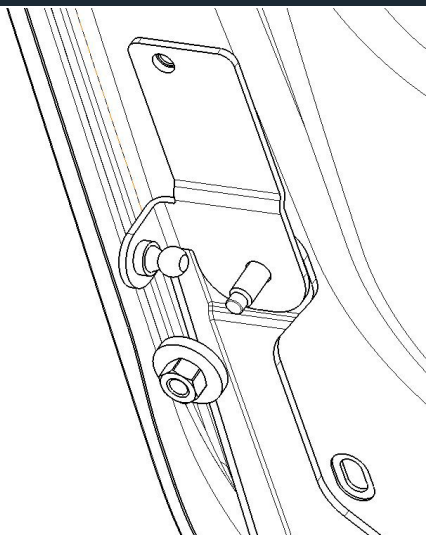

2 / ROUTE WASHER HOSE

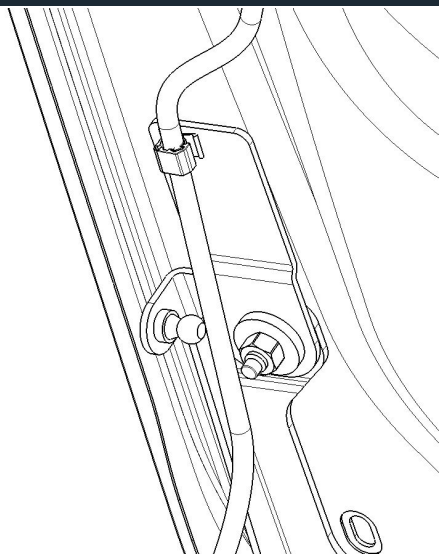

3 / TIGHTEN NUT

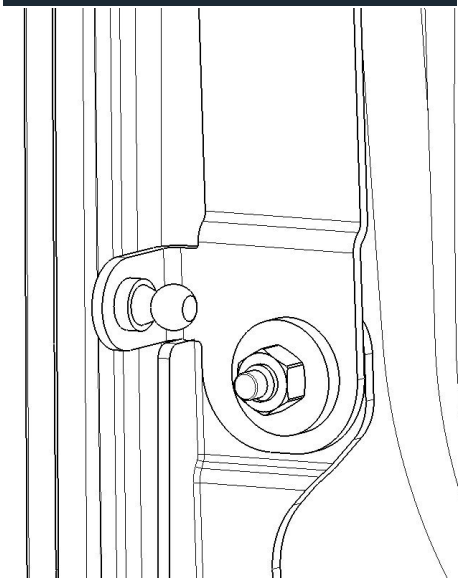


2015-2017: Reattach the washer-hose clip through the bracket hole. Route the hose beneath the ball stud.
2018-2023: Leave the hose clip in its original position; see page 8.
If needed for vertical bracket alignment, slightly loosen the lower hinge nut, align the bracket, then retighten the fasteners.


BATTERY-COVER OVERVIEW / STEP 4A

Locate the battery-cover clips


Remove front push pin **1**: lift and unthread its center until it stops, then pull out the complete push-pin assembly with your fingers.

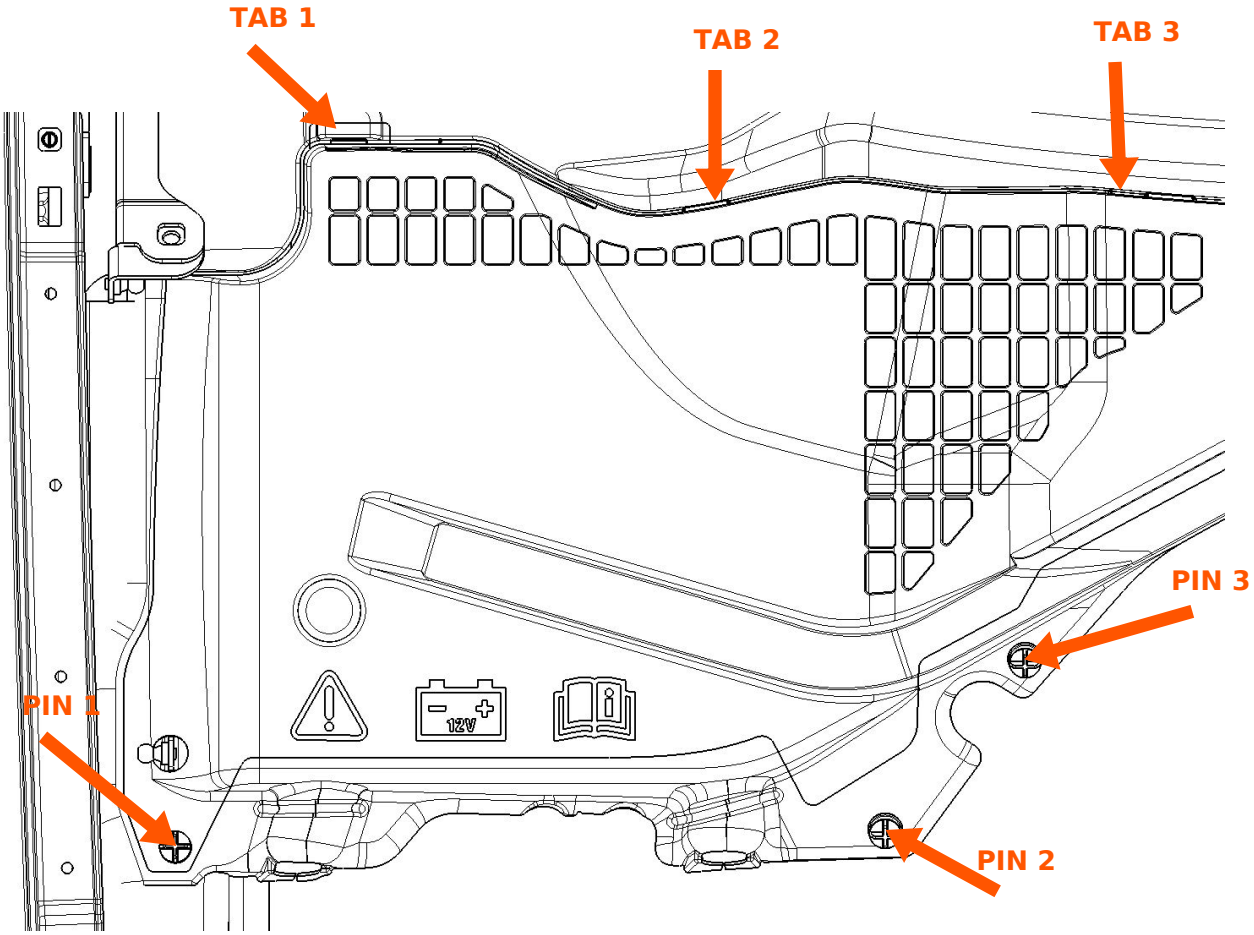

1 / LIFT & UNTHREAD CENTER

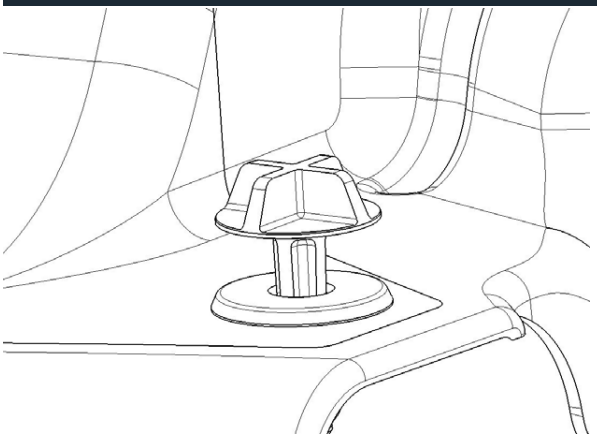

2 / PULL OUT THE ASSEMBLY

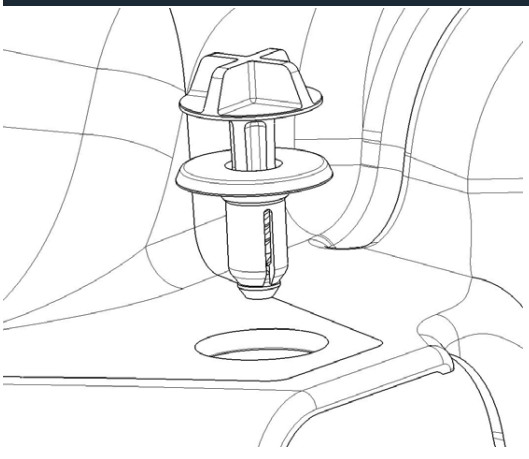

BATTERY COVER / STEP 4B-4C


Position the drill guide

4 Align the guide and mark the hole center

Insert the removed push pin through the **larger hole in the drill guide** and back into its original battery-cover hole. Rotate the guide until it aligns with the plastic cover edge at the rubber-seal border.

Keep the guide aligned and mark the center of its small hole with a center punch.

3A / ALIGN WITH THE COVER EDGE

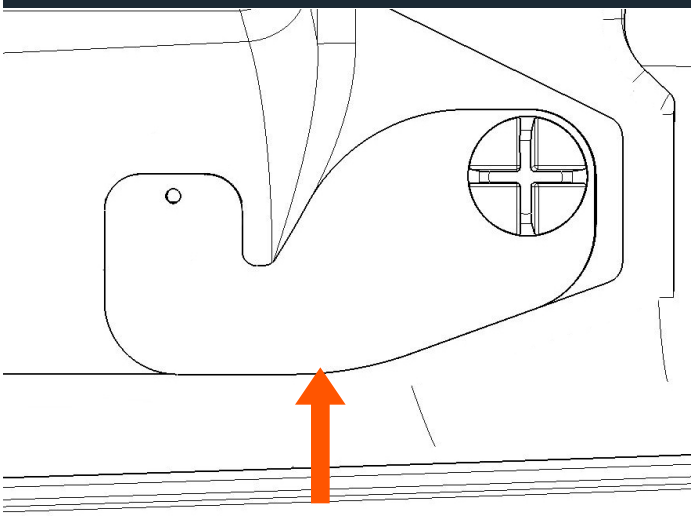

3B / MARK THE SMALL-HOLE CENTER



Right-hand-drive vehicles: Flip the guide over so that it aligns with the mirrored battery cover.

BATTERY COVER / STEP 5

Drill the battery-cover opening

5 Remove the cover before drilling

Remove all **3 front push pins**. Lift the cover slightly and pull it forward to release the **three 22 mm upper tabs**.

Use the supplied **drill guide** to mark the hole center (Step 4). Drill a small pilot hole, then use the supplied **step drill bit** to enlarge it to **3/4 in. (19 mm)**, completely through the plastic.

USE THE SUPPLIED TOOLS




Drill guide



Step drill bit

DRILL A 3/4 IN. CLEARANCE HOLE

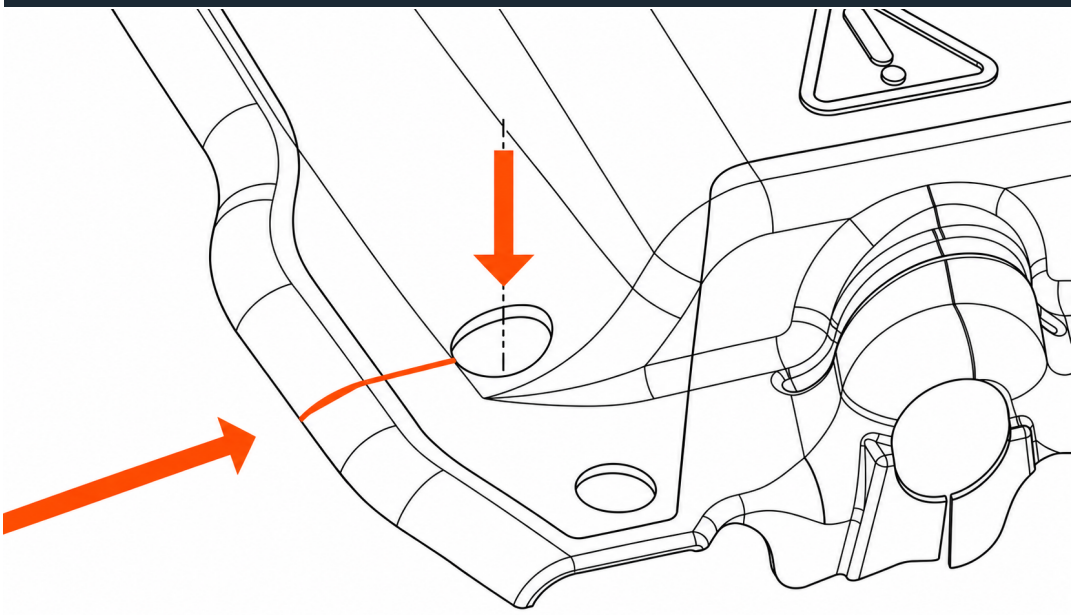

Optional: Cut a narrow slot from the drilled hole straight to the nearest cover edge. This allows easier cover removal with the gas spring installed.

FENDER MOUNTS / STEP 6


Install the fender assemblies

6 Insert and align the retaining blocks


Thread each bolt most of the way through its **silver retaining block**, leaving **1-2 threads visible at the bottom of the retaining block**, as shown. Tilt and insert the block through the fender hole with the **ball stud facing outward**.

Seat the bracket in the recess. Pull up on the bolt while turning it clockwise. The block clamps the fender from below. Align it with the fender slot before final tightening.


6 / TILT & INSERT THE BLOCK

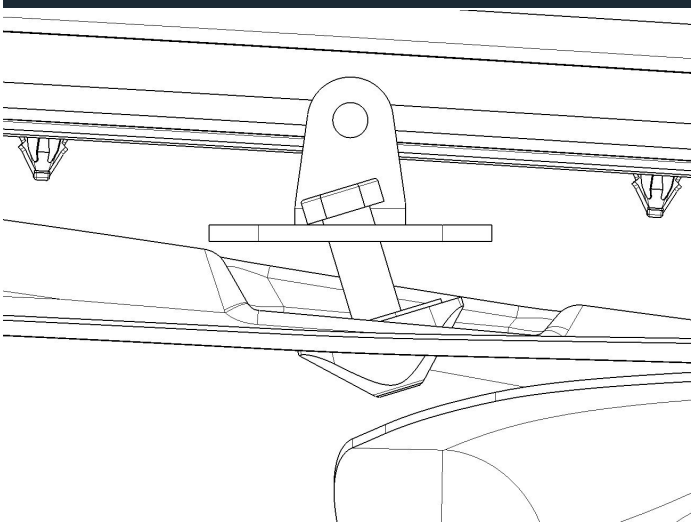


7 / TIGHTEN WITH BLOCK ALIGNED

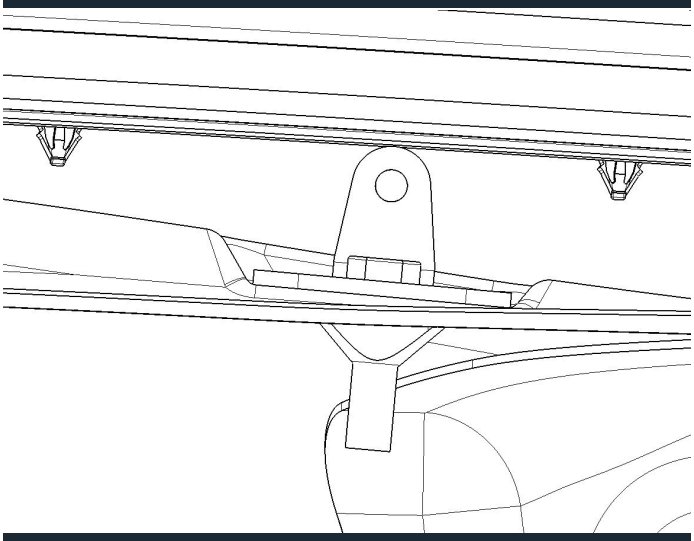

8 / BRACKET SEATED IN RECESS

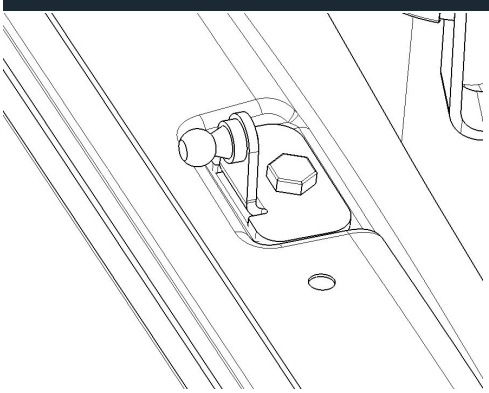

9 / BLOCK ALIGNED WITH SLOT

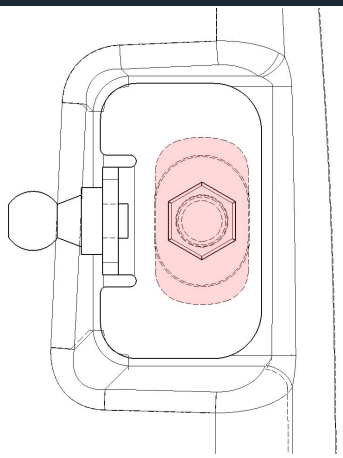

Repeat on both sides. Ball studs face outward. Use the supplied retaining blocks.

BATTERY COVER & CONNECTIONS / STEPS 7-8

Refit the cover & connect struts

7 Reinstall the battery cover


Pass the fender bracket and ball stud through the drilled opening. Align the three upper cover tabs with the cowl slots and slide the cover into place. Reinstall the three front push pins. Tuck the cover around the battery cables and make sure it is fully seated.

8 Attach the rod end first, then the body end

Lightly press the extended **rod-end socket onto the fender ball stud**, rocking it gently so the inner C-clip spreads around the ball. Do not force it straight on; this can bend the clip.

Attach the **large cylinder/body end to the hood ball stud** the same way. Rotate the socket to align it. A helper may raise the hood slightly to center the ball and socket. Repeat on both sides.

BODY TO HOOD / ROD TO FENDER

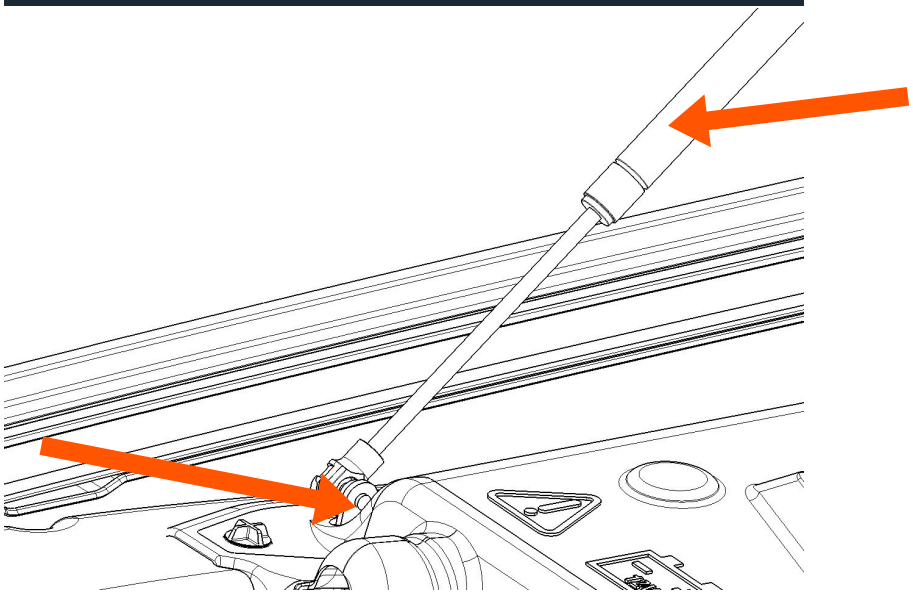


WASHER HOSE / ALL MODEL YEARS

Check the washer-hose routing

Route the washer line **over the bracket and under the ball stud**. Reattach its hood clip through the bracket where applicable.

2018-2023: Pull the hose through its upper retainer to create slack, drawing the excess outward as shown. The gas spring needs the space below this clip when the hood closes. Incorrect routing may pinch the hose and reduce washer-fluid flow.

ALL YEARS / ROUTE UNDER BALL STUD

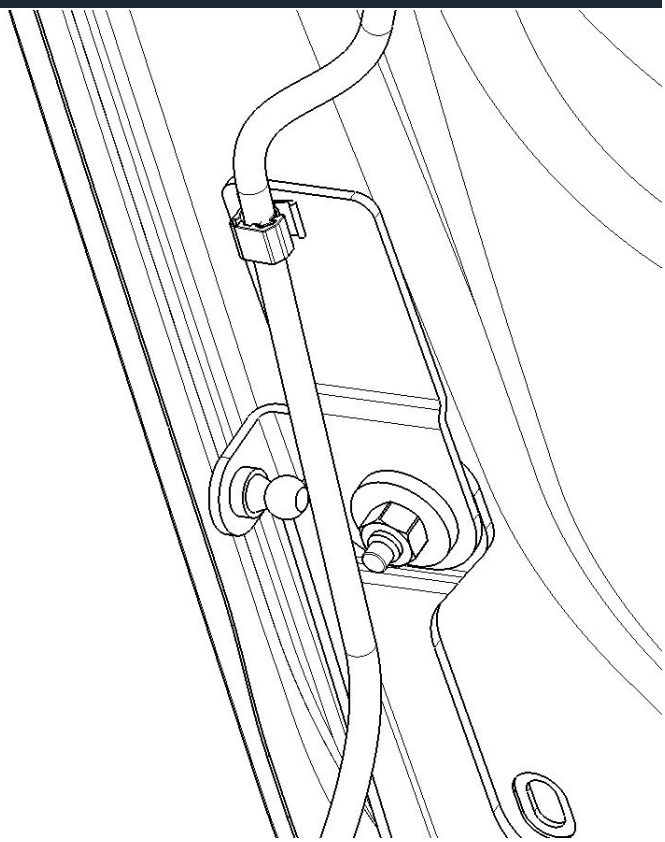

2018-2023 / PROVIDE HOSE SLACK



Slowly lower the hood and verify clearance before fully closing it.

FINISHING & SERVICE

Final check & gas-spring removal

Confirm that all brackets and fasteners are secure and each end socket is fully seated. Slowly cycle the hood to check movement, hose clearance and battery-cover seating.

To remove a gas spring

Securely support the hood. Slide a small flat-blade screwdriver beneath the metal C-clip. Gently lift and rotate the clip, then release the socket from the ball stud. **Do not remove the C-clip.** Press it back into position before reinstalling.

1 / LIFT THE CLIP



2 / RELEASE SOCKET



3 / CLIP REMAINS FITTED



Reinstallation: Keep the clip correctly seated in the end fitting. Gently rock the socket onto its ball stud and confirm it is fully attached before removing the temporary hood support.