KIT CONTENTS & TOOLS

Before you begin

1 Check the package contents



Gas springs
2 pieces



Rivets
12 pieces



Hood & fender brackets
4 pieces total

2 Prepare the tools

- Power drill and 3/16-inch drill bit
- Marker pen
- Masking tape
- Tape measure
- Rivet gun

Drilling and riveting are required.
Read the safety warnings and connection checks on page 6 before installation.

Electronic instructions only. Printed instructions are not included.


HOOD BRACKETS / STEPS 1-2

Locate & drill the hood mount


1 Measure and mark the hood

Open the hood and start on the driver's side. Place one end of the tape measure against the upper edge of the hood hinge (Figure 1). Measure **17-1/2 inches** and mark the point (Figure 2). Align the bracket's lower edge with this mark, with its ball stud facing inward. The bracket's outer edge should be **2-3/8 inches** from the edge of the engine cover (Figure 3). Mark the lowest hole.


1 / HOOD HINGE REFERENCE

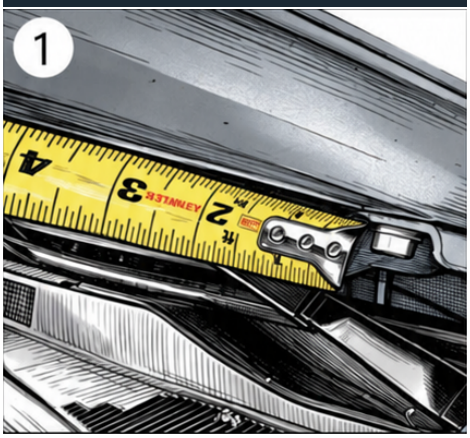

2 / MARK: 17-1/2 IN.

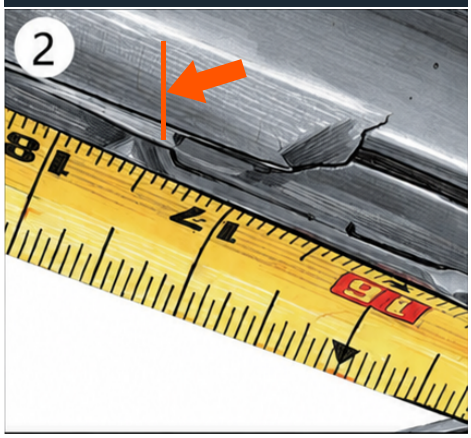


3 / OFFSET: 2-3/8 IN.

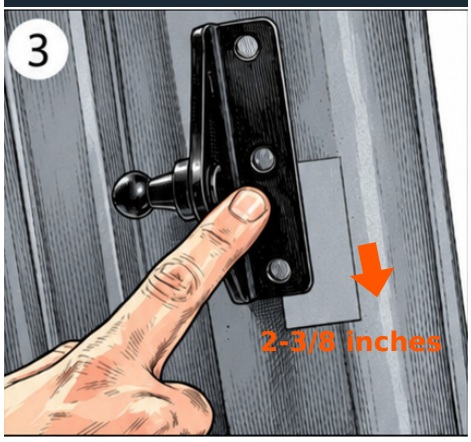

2 Drill the first mounting hole

Use a **3/16-inch drill bit** to drill precisely through the lowest marked hole (Figure 4).


Be careful not to damage the hood surface when the bit passes through.

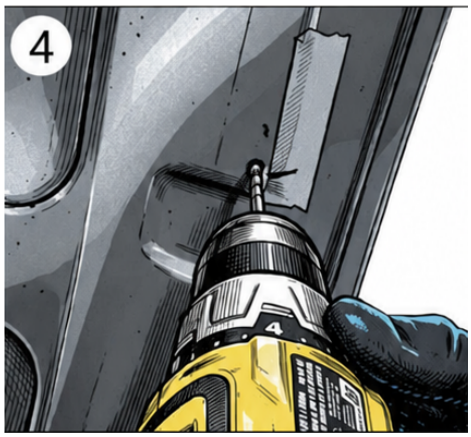

HOOD BRACKETS / STEPS 3-4

Rivet the hood brackets

3 Install the first rivet

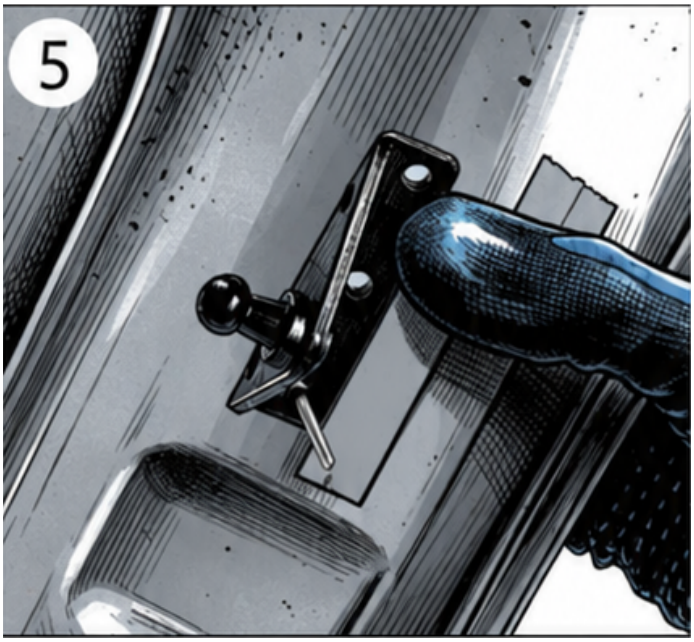


Test the rivet to ensure it passes through the hole and fits tightly (Figure 5).

Confirm the **3/16-inch rivet head** is installed in the rivet gun. Insert the rivet into the gun and repeatedly press its handle firmly until the stem separates and pops out.


4 Drill and rivet the remaining holes

Keep the bracket parallel to the hood edge. After securing the first rivet, carefully drill the remaining two holes and fasten them with rivets (Figures 6-7). The passenger-side hood bracket is symmetrical: repeat **Steps 1-4** on that side.

6 / SECURE THE FIRST RIVET

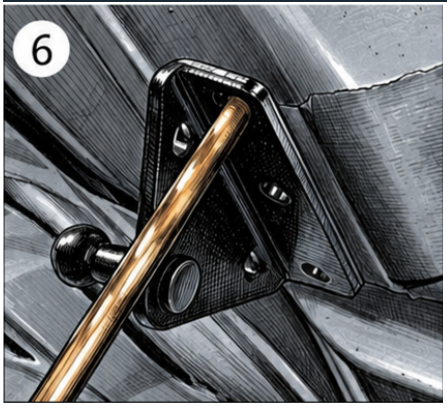

7 / DRILL THE OTHER HOLES

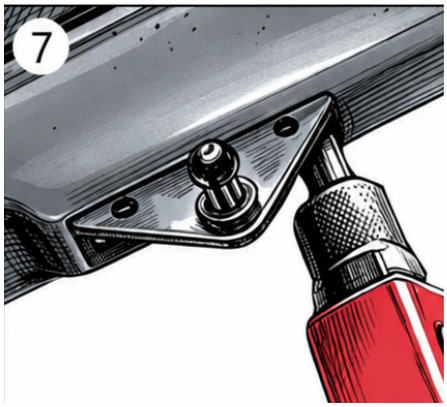

Repeat on the passenger side.

Keep both hood brackets symmetrical.


FENDER BRACKETS / STEPS 5-7

Install the fender brackets


5 Measure and mark the fender mount

The bracket mounts below the fender. Measure **7 inches to the right from the center of the fender bolt** and mark the point (Figure 8). Align the bracket edge with the mark, with its ball stud facing the engine interior. Position the bracket beyond the 7-inch mark as shown (Figure 9), then mark the hole (Figure 10).

8 / MEASURE FROM BOLT

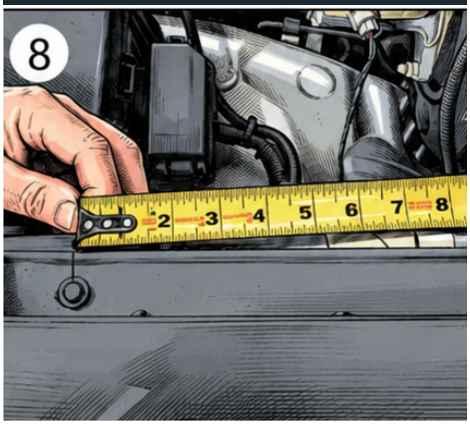

9 / MARK: 7 IN.

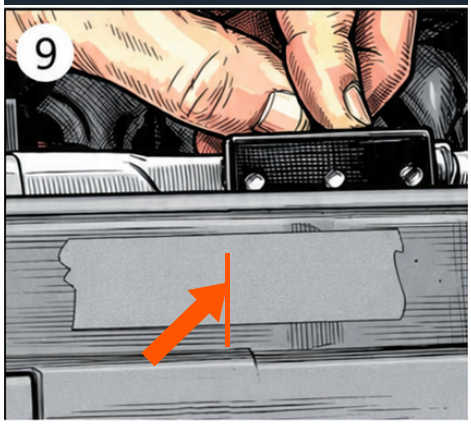



10 / MARK THE HOLE



6 Drill and rivet the bracket

Drill the marked point (Figure 11). Position the bracket, insert a rivet and operate the rivet gun with its **3/16-inch head** until the stem pops out (Figure 12). Keep the bracket parallel to the steel wall, then drill the other two holes and secure them with rivets.

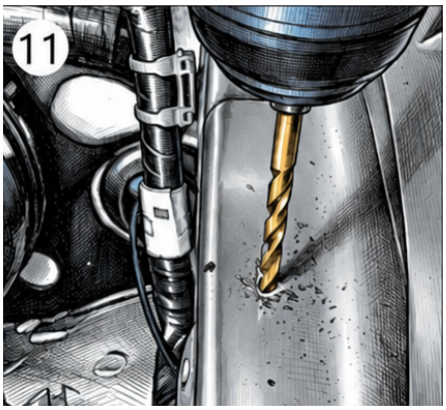

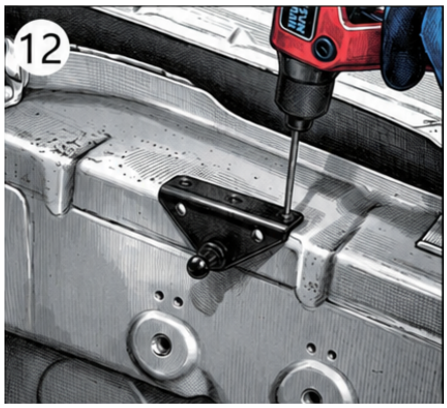

7 Repeat on the passenger side

Repeat Steps 5-6 on the opposite side. Ensure the brackets on both sides are symmetrical.

CONNECTIONS / STEP 8

Connect the gas springs


8 Attach both ends and check the lock

Install the **cylinder/body end on the hood bracket** and the **support rod end on the fender bracket** (Figures 13-14). After installation, firmly pull back on each connection to check it is securely attached.


13 / HOOD: BODY END



14 / FENDER: ROD END

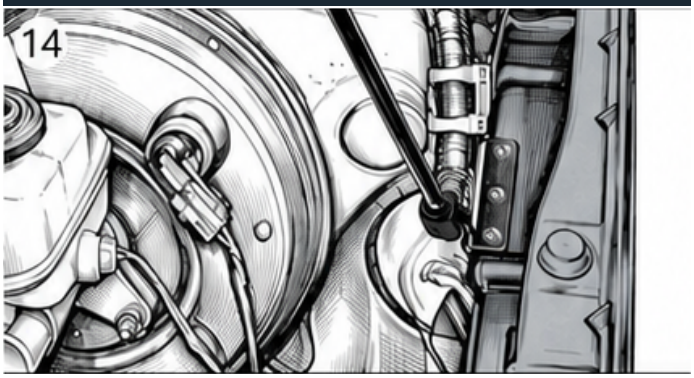

15 / COMPLETED INSTALLATION

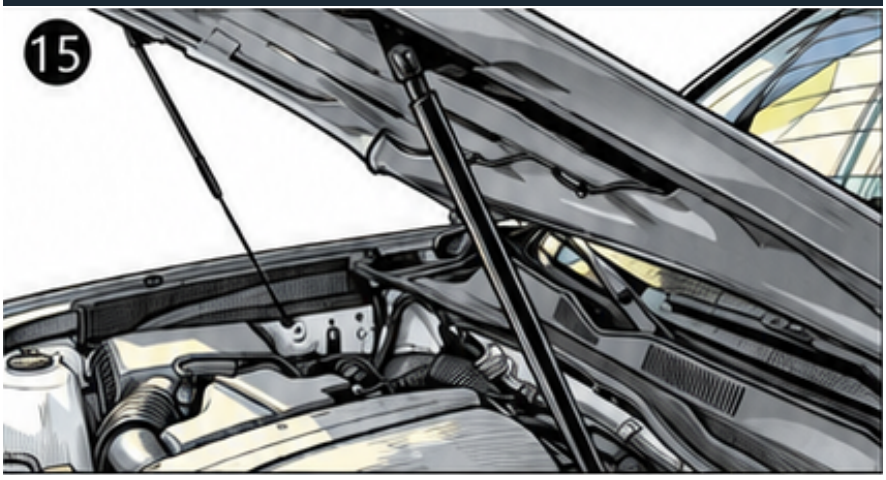

Mandatory pull-back test

A click alone does not guarantee that the socket has locked.

Firmly pull back after connection. If it comes loose, reinstall it until it cannot be pulled off.

See page 6 for the full connection check and safety warnings.

READ BEFORE INSTALLATION

Safety & connection checks


1 Mandatory pull-back test

When installing a gas-spring end connector, hearing a **click does not guarantee a secure lock**.

ACTION: After connecting, firmly pull back on the part.

CHECK: If it comes loose, it was not locked. Reinstall until it cannot be pulled off.

RISK: Failure to verify the lock may cause separation, leading to **injury or property damage**.

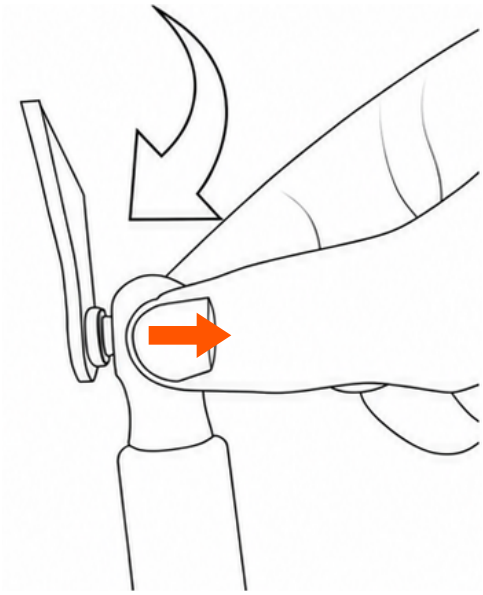

2 Liability disclaimer

Professional installation recommended: Ideally, this product should be installed by a certified professional.

User responsibility: The buyer/installer assumes full responsibility for risks, personal injury or property damage resulting from improper installation, modification or misuse. The seller/manufacturer shall not be held liable.

3 Regulatory notice

WARNING: Cancer and Reproductive Harm
www.P65Warnings.ca.gov