KIT CONTENTS, TOOLS & SAFETY

Before you begin

1 Check the package contents

Gas springs
2 pieces

Rivets
12 pieces

Hood & fender brackets
4 pieces total

2 Prepare the tools

Power drill with 3/16-inch drill bit; marker pen; masking tape; tape measure; rivet gun.

Drilling and riveting are required. Read all warnings below before installation.

3 Safety and connection checks

Mandatory pull-back test
A click does not guarantee a secure lock. After connecting each gas-spring end, firmly pull back. If it comes loose, reinstall until it cannot be pulled off. Failure to verify the lock may cause separation, injury or property damage.

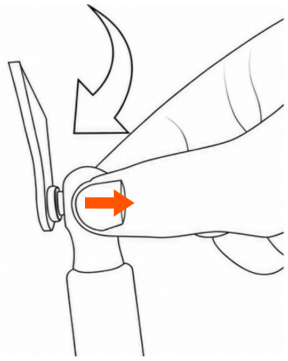

Professional installation recommended. Ideally, installation should be performed by a certified professional.

User responsibility: The buyer/installer assumes full responsibility for risks, personal injury or property damage resulting from improper installation, modification or misuse. The seller/manufacturer shall not be held liable.

WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

Electronic instructions only. Printed instructions are not included.

HOOD BRACKETS / STEPS 1-2

Locate & drill the hood mount

1 Measure and mark the hood

Open the hood and start on the driver's side. Place one end of the tape measure against the upper edge of the hood hinge (Figure 1). Measure **17-1/2 inches** and mark the point (Figure 2). Align the bracket's lower edge with this mark, with its ball stud facing inward. The bracket's outer edge should be **2-3/8 inches** from the edge of the engine cover (Figure 3). Mark the lowest hole.

1 / HOOD HINGE REFERENCE

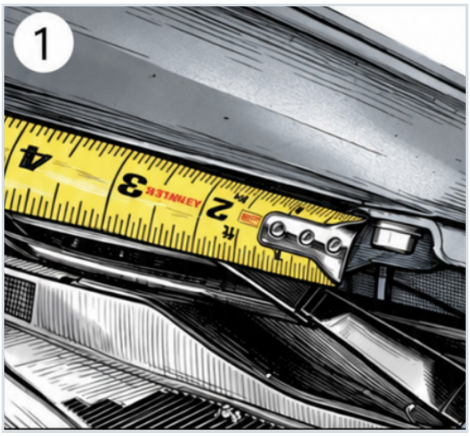

2 / MARK: 17-1/2 IN.

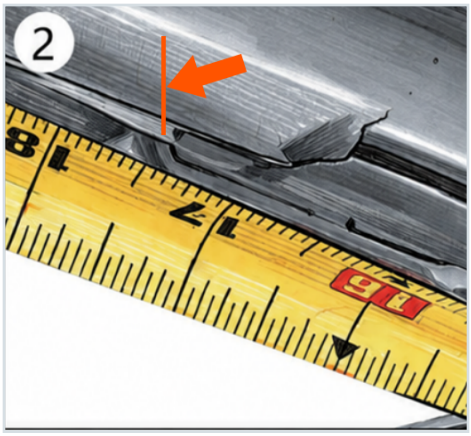

3 / OFFSET: 2-3/8 IN.

2 Drill the first mounting hole

Use a **3/16-inch drill bit** to drill precisely through the lowest marked hole (Figure 4).

Be careful not to damage the hood surface when the bit passes through.

4 / DRILL THE FIRST HOLE

Rivet the hood brackets

3 Install the first rivet

5 / FIT THE FIRST RIVET

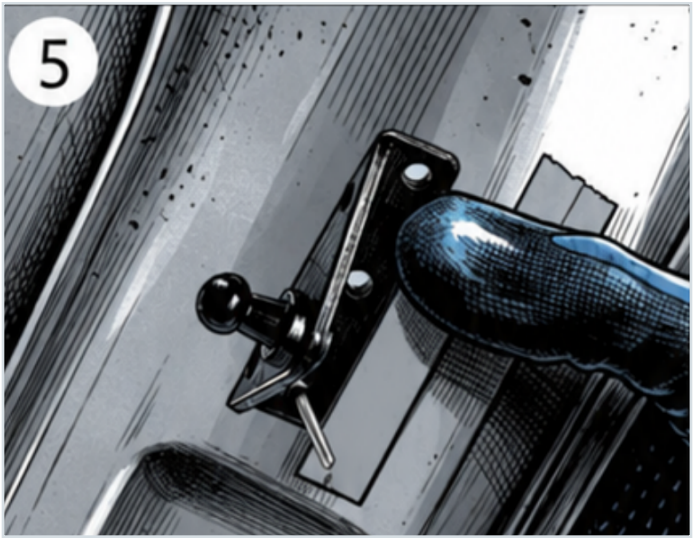

Test the rivet to ensure it passes through the hole and fits tightly (Figure 5).

Confirm the **3/16-inch rivet head** is installed in the rivet gun. Insert the rivet into the gun and repeatedly press its handle firmly until the stem separates and pops out.

4 Drill and rivet the remaining holes

Keep the bracket parallel to the hood edge. After securing the first rivet, carefully drill the remaining two holes and fasten them with rivets (Figures 6-7). Repeat **Steps 1-4** on the passenger side. Keep both hood brackets symmetrical.

6 / SECURE THE FIRST RIVET

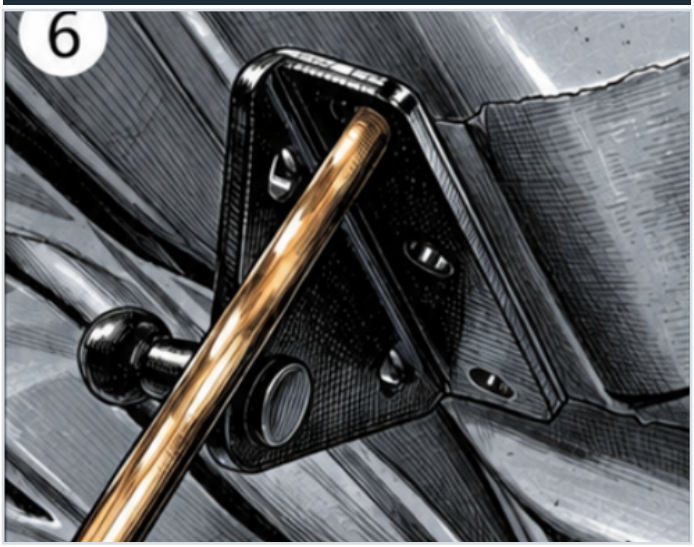

7 / DRILL THE OTHER HOLES

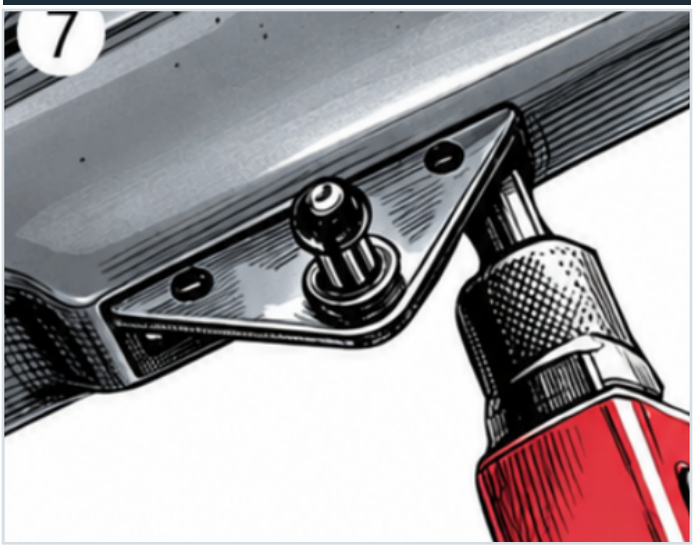

FENDER BRACKETS / STEPS 5-7

Install the fender brackets

5 Measure and mark the fender mount

The bracket mounts below the fender. Measure **7 inches to the right from the center of the fender bolt** and mark the point (Figure 8). Align the bracket edge with the mark, with its ball stud facing the engine interior. Position the bracket beyond the 7-inch mark as shown (Figure 9), then mark the hole (Figure 10).

8 / MEASURE FROM BOLT

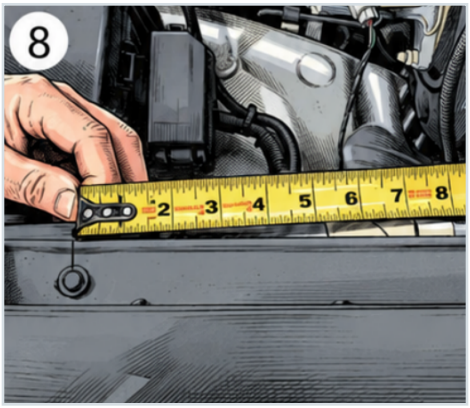

9 / MARK: 7 IN.

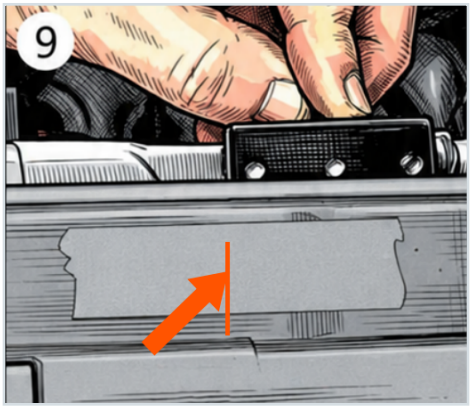

10 / MARK THE HOLE

6 Drill and rivet the bracket

Drill the marked point (Figure 11). Position the bracket, insert a rivet and operate the rivet gun with its **3/16-inch head** until the stem pops out (Figure 12). Keep the bracket parallel to the steel wall, then drill the other two holes and secure them with rivets.

11 / DRILL THE HOLE

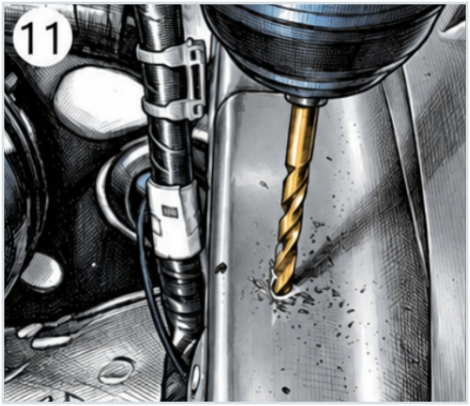

12 / RIVET THE BRACKET

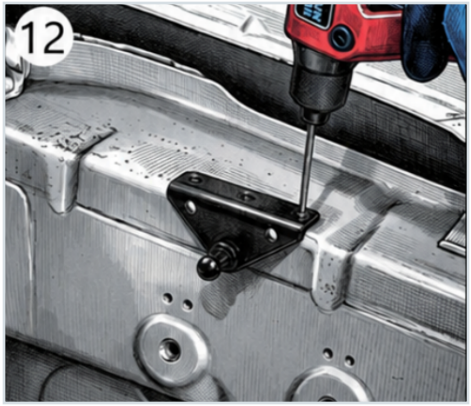

7 / Repeat on the passenger side

Repeat Steps 5-6 on the opposite side. Ensure the brackets on both sides are symmetrical.

CONNECTIONS / STEP 8

Connect the gas springs

8 Attach both ends and check the lock

Install the **cylinder/body end on the hood bracket** and the **support rod end on the fender bracket** (Figures 13-14). After installation, firmly pull back on each connection to check it is securely attached.

13 / HOOD: BODY END

14 / FENDER: ROD END

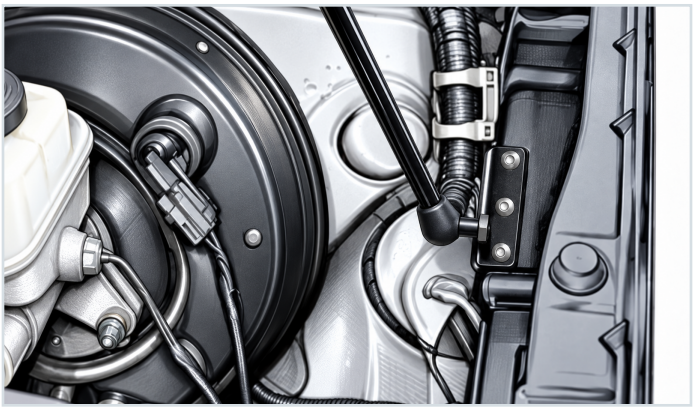

15 / COMPLETED INSTALLATION

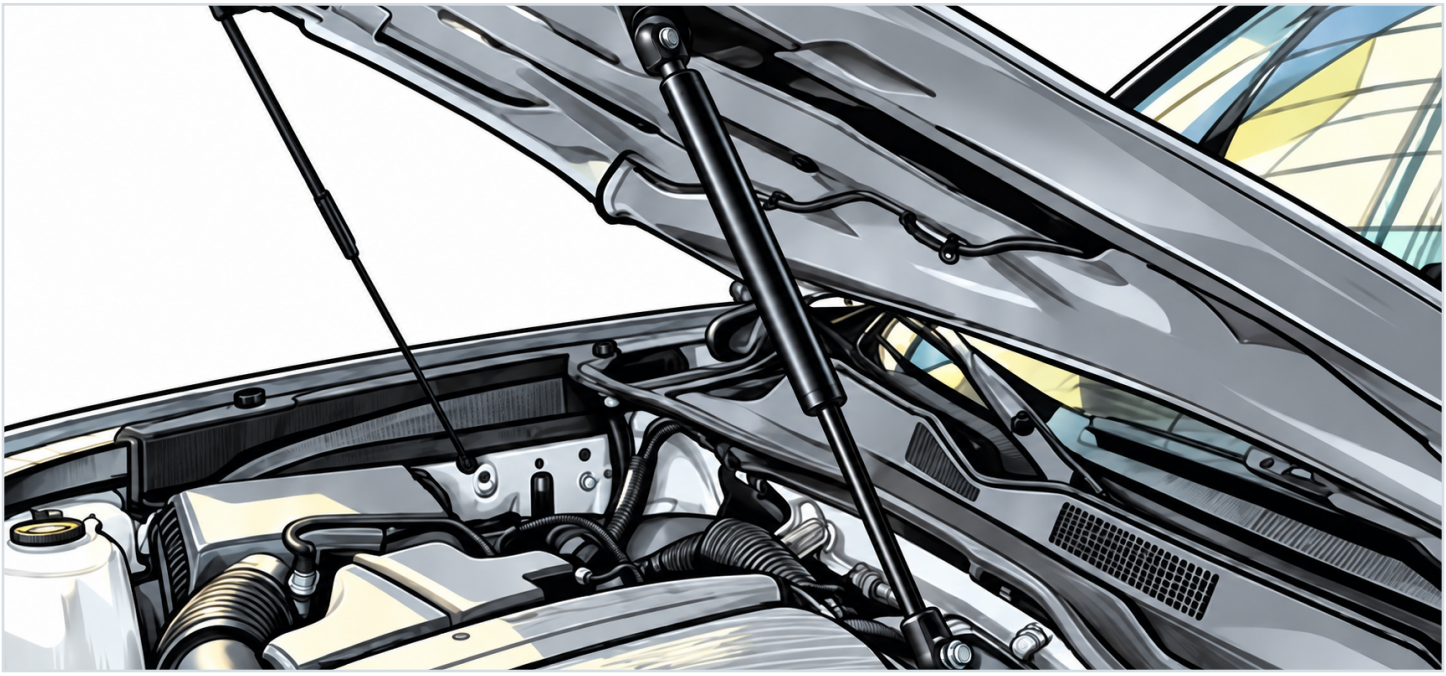

Mandatory pull-back test: A click alone does not confirm a lock. Pull back firmly on every connection; reinstall any loose end until it cannot be pulled off. Safety warnings: page 1.