PREPARATION / STEPS 1-2

Before you begin

1 Unpack and verify contents

(2) Gas springs
(2) Ball-stud assemblies
(1) RH bracket
(1) LH bracket



Hood ball studs
2 assemblies



RH
Fender bracket



LH
Fender bracket

2 Gather the required tools

- Socket wrench
- 13 mm deep-well socket
- Short extension

(Step 4 specifies 3 inches)



Rod end

Body end

HOOD MOUNTING LOCATIONS / VIEW FROM FRONT



RH / PASSENGER SIDE

LH / DRIVER SIDE

HOOD / STEP 3

Install the hood ball studs

3 Fit the ball-stud assemblies on both sides

A. Thread the ball stud into the silver blind nut, leaving **4-5 visible threads** between the nut and the conical washer. Feed the nut through the rectangular hole in the hood frame above the hinge. Insert the retainer **vertically** into the opening.

B. Tighten the ball stud by hand, turning clockwise. Lightly pull on the conical washer to keep the silver nut from spinning.

C. Tighten the ball stud with a 13 mm socket wrench. Repeat Step 3 (A-C) on the left-hand (LH) side.

1 / INSERT VERTICALLY



2 / CENTER THE NUT



3 / TIGHTEN: 13 mm




Keep the nut from spinning: Maintain light outward pressure on the conical washer while tightening by hand.

FENDER / STEP 4

Install the fender brackets

4 Fit the RH and LH brackets

A. Using a **3-inch extension** and 13 mm deep-well socket, remove the bolt from the front lower hood hinge assembly.

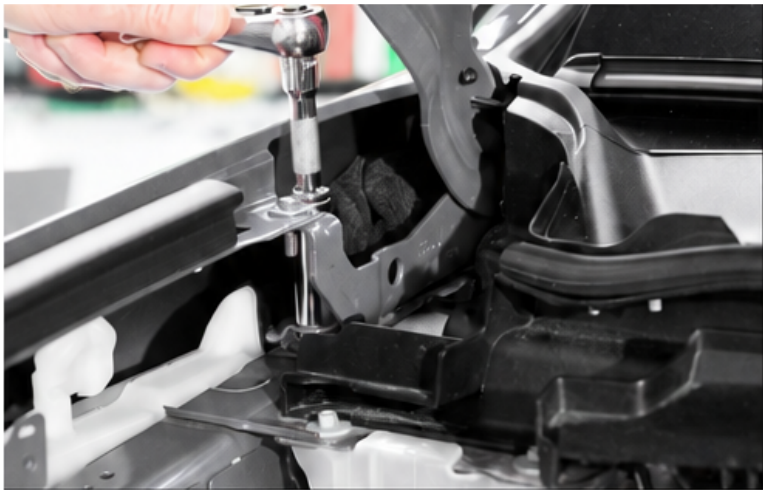

NOTE: Stuff a towel between the fender and hinge assembly to prevent the bolt or bracket from falling inside the fender.

B. Place the bolt through the RH bracket and install it on the right-hand side. Tighten the bolt. The bracket extension runs parallel to the fender, with the ball stud pointing **inward**.

RH / BRACKET IDENTIFICATION



INSTALLED / BALL STUD FACES INWARD



C. Repeat on the LH side with the mirror-image LH bracket. Both ball studs must point inward.

CONNECTIONS / STEP 5

Install the gas springs


5 Attach the rod end and body end

A. Snap the rod end onto the fender (lower) ball stud.
B. Snap the body end onto the hood (upper) ball stud.

HOOD / UPPER BODY END



LH FENDER / LOWER ROD END

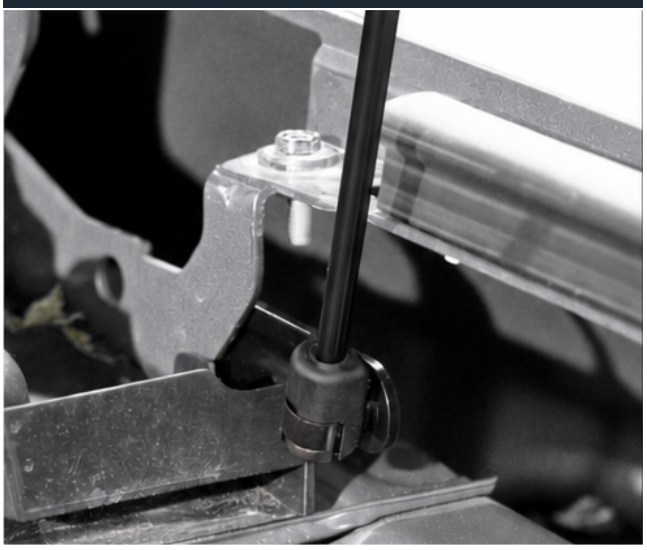

INSTALLED GAS SPRING



NOTE: Carefully rock each gas-spring end fitting over the ball stud so the internal C-clip spreads and wraps around it.

Do not force the socket on. A forced socket may bend the C-clip inward and let the end fitting pop off.