KIT CONTENTS & TOOLS

Before you begin

1 Unpack and verify contents

(2) Gas springs
(2) Hood blind-nut assemblies
(1) RH fender bracket
(1) LH fender bracket



Hood
2 assemblies



RH
Passenger



LH
Driver

2 Gather the required tools

Socket wrench with **13 mm sockets**: standard and deep-well.

Fitment: 2021+ Ford Bronco with the original factory (OEM) hood only.

HOOD MOUNTING LOCATIONS / VIEW FROM FRONT



RH / PASSENGER SIDE

LH / DRIVER SIDE

HOOD / STEP 3

Install the hood ball studs

3 Insert, slide upward and tighten

A. Thread the ball stud into the silver blind nut, leaving **4-5 visible threads** between the nut and conical washer. Insert the nut into the **second opening above the hood hinge**, midway up the LH hood frame. LH is the driver's side in North America. Insert the retainer **vertically** and slide it upward in the opening.

B. Tighten the ball stud by hand, turning clockwise. Lightly pull on the conical washer to stop the silver nut from spinning.

C. Tighten with a **13 mm socket wrench**. Repeat Step 3 (A-C) on the RH side.

1 / INSERT VERTICALLY



2 / SLIDE UPWARD



3 / TIGHTEN: 13 mm



Retainer position: Keep it vertical and slide it upward before final tightening.

FENDER / STEP 4


Install the fender brackets

4 Fit the LH and RH brackets

A. On the LH side, remove the bolt beneath the fender lip using a **13 mm socket**. This is the front lower hinge-assembly bolt.

B. Reinstall the bolt with the LH bracket. The ball stud faces **inward toward the engine**.

C. Repeat on the RH side using the RH bracket.

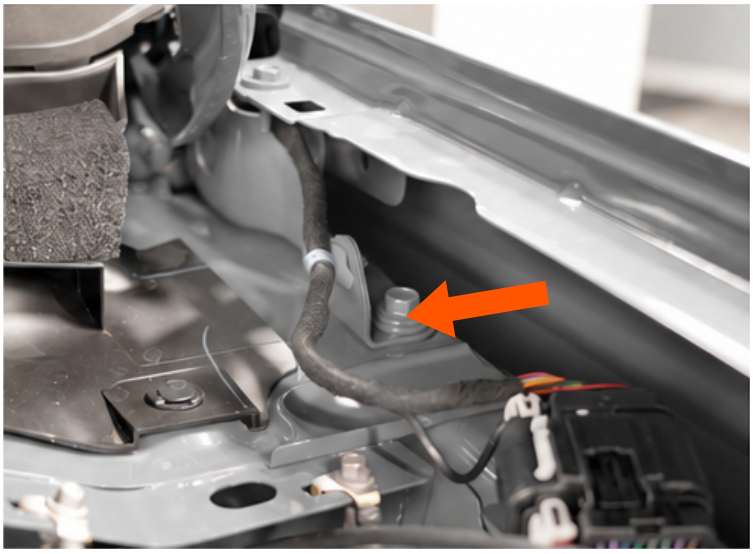

Wire harness: Its attachment may need to be pulled free during assembly. After fitting the bracket, snap the attachment back into place with the wire routed **under the ball stud**.

REMOVE THE ORIGINAL BOLT



REUSE BOLT WITH BRACKET



INSTALLED / HARNESS BELOW



CONNECTIONS / STEPS 5-6

Connect the gas springs

5 Connect the lower rod ends

Install each gas spring with the **large cylinder/body end at the hood** and the **rod end at the fender**. Attach the rod-end socket to the lower fender ball stud.

Seat the socket gently. Rock it over the ball stud using light pressure from behind, allowing the internal C-clip to spread and wrap around the stud. Do not force it on: forcing can bend the clip inward. Replace a damaged fitting before use.

6 Attach the body ends to the hood

Firmly snap the large end onto the hood ball stud. Confirm that the rod-end socket is attached to the fender bracket's ball stud on each side.

LOWER / FENDER / ROD END



UPPER / HOOD / BODY END



Digital guide
Electronic instructions only.
Printed instructions are not included.