
KIT CONTENTS & TOOLS

Before you begin

Kit contents: 2 frame brackets, 2 gas springs and the hardware listed below.

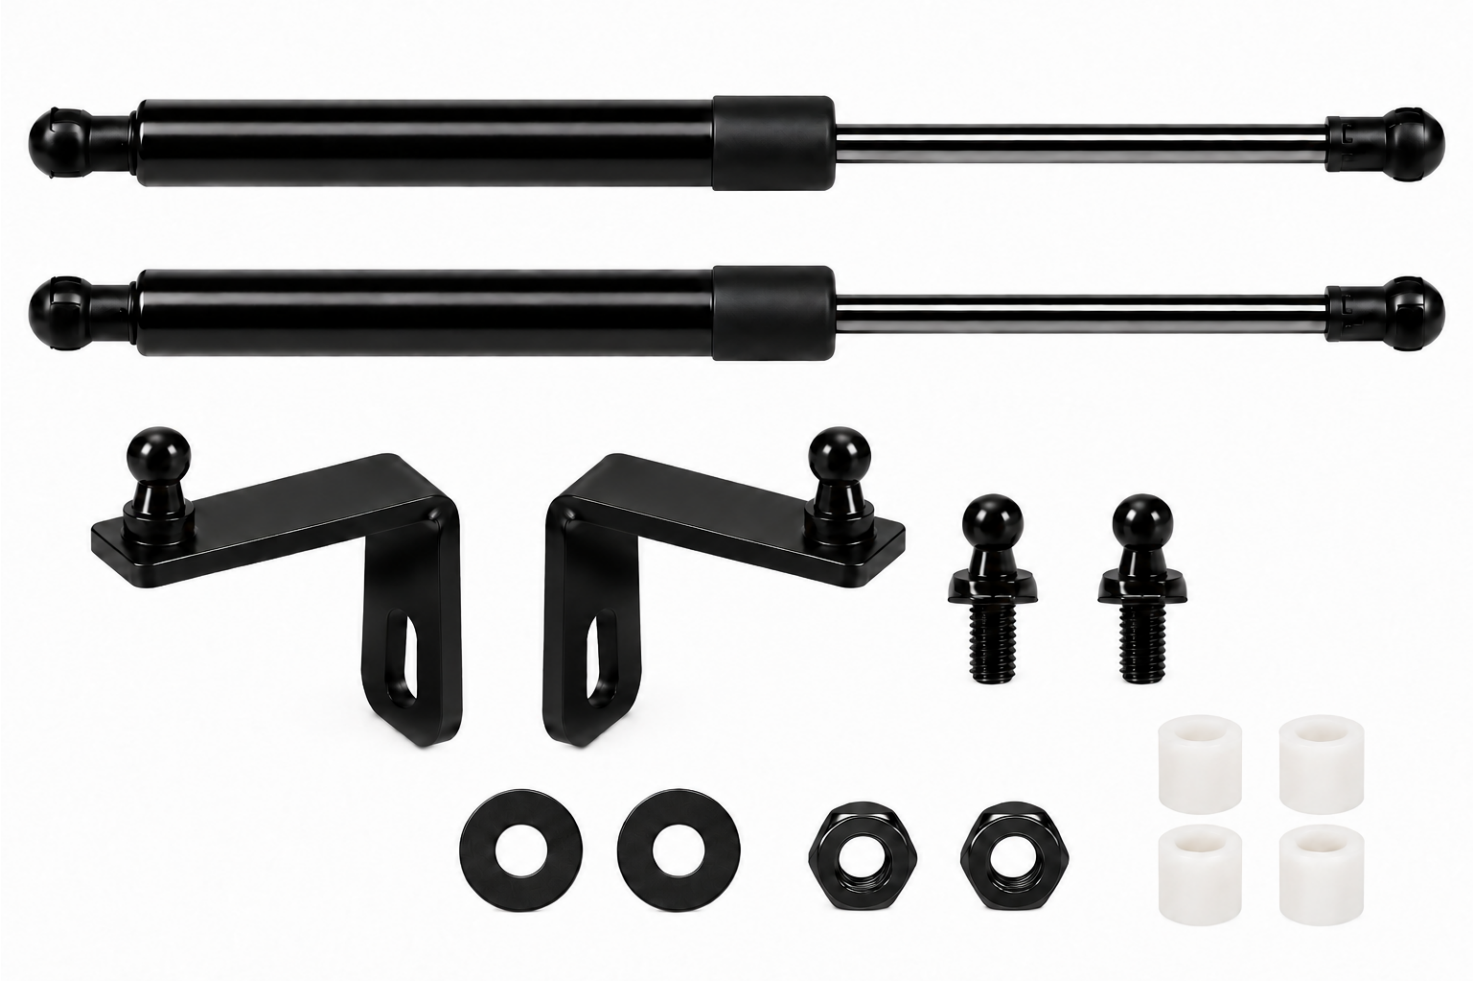

Hardware: 2 ball studs; 2 round washers; 2 hex nuts;
4 pieces of white silicone tube (trim to suit the mounting depth).

Tools: 10 mm and 13 mm wrench or socket; pliers;
scissors or a suitable cutter for the silicone tube.

Electronic instructions only. Printed instructions are not included.

DRIVER SIDE / STEPS 1-2

Install the driver-side frame mount

Support the hood securely before starting. Keep temporary support in place until both gas springs are fully installed.

1 Remove and retain the factory bolt

Begin on the driver side. Use a **10 mm socket** to remove the factory frame bolt shown in Photo 1. Keep the bolt for reuse.

PHOTO 1 / REMOVE FACTORY BOLT



PHOTO 2 / FRAME BRACKET INSTALLED



2 Fit the frame bracket


Position the frame-mount bracket as shown. Secure it with the retained **factory bolt and washer**. Check that the bracket is seated correctly before tightening.

HOOD MOUNTS / STEP 3

Prepare the white silicone tube

3 Trim the tube and sleeve the ball stud

Because the factory hole is slightly oversized, **cut a suitable length of the white silicone tube and slide it over the threads of the ball stud before installation**. Repeat for the other side.

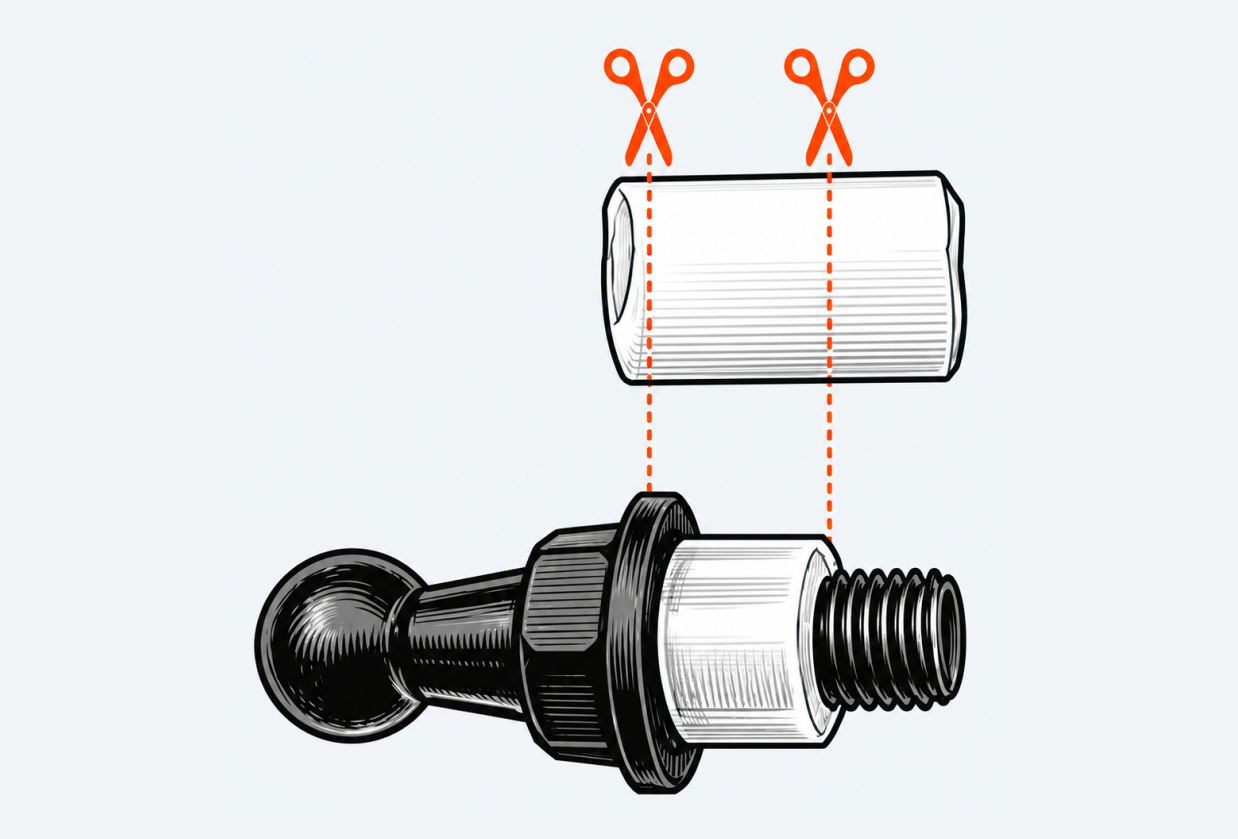

Fit to the actual hole and mounting depth. Four silicone-tube pieces are supplied. Trim only as needed; no fixed cutting length is specified.

Keep enough thread exposed to install the washer and nut securely. The white sleeve goes on the threaded section before the ball stud is fitted into the hood opening.

HOOD MOUNTS / STEP 4

Install the sleeved hood ball stud

4 Insert the sleeved stud and secure it

With the **white silicone sleeve already on the ball-stud threads**, insert the assembly into the factory hood-bracket opening. Fit the supplied **round washer and hex nut** on the other side and tighten. Repeat on the opposite side.

PHOTO 3 / HOOD MOUNTING POSITION



PHOTO 4 / SECURE THE BALL STUD



Your kit uses white silicone tube. The photos show the mounting location and fastening method. Use the supplied white sleeve in place of the rigid black bushing shown in the reference installation.

Check that the sleeved ball stud, washer and nut are seated and secure before attaching the gas spring.

DRIVER SIDE / STEP 5

Connect the driver-side gas spring

5 Press the end sockets onto the ball pins

Press the gas spring onto the **upper hood ball pin**, then onto the **lower frame ball pin**, as shown in Photos 5 and 6. Confirm that both sockets are fully seated.

PHOTO 5 / CONNECT AT THE HOOD



PHOTO 6 / CONNECT AT THE FRAME



Orientation shown in this kit: The slim rod end connects to the hood. The large cylinder/body end connects to the frame bracket.
Keep the hood securely supported while completing the passenger side.

PASSENGER SIDE / STEPS 6-7

Remove the passenger-side prop bushing

6 Release the original hood prop

Keep the hood securely supported. Use pliers to pop the original hood prop out of its factory bushing, as shown in Photo 7.

PHOTO 7 / RELEASE THE PROP ROD



PHOTO 8 / SQUEEZE THE BUSHING



7 Remove the factory bushing

Use pliers to squeeze the original bushing and remove it from the hood bracket. The white silicone sleeve will be fitted over the new ball-stud threads before installation.

PASSENGER SIDE & FINAL CHECK / STEPS 8-10

Complete the passenger side

8 Repeat the bracket installation

With the factory bushing removed, fit the passenger-side frame bracket as in Steps 1-2. Trim and fit a white silicone sleeve onto the ball-stud threads as in Step 3.

9 Fit the ball pin and gas spring

Install the sleeved ball stud, round washer and hex nut as in Step 4. Attach the gas spring as in Step 5. The completed installation is shown below.

PHOTO 9 / COMPLETED INSTALLATION



10 Check clearance before closing

Slowly lower the hood and check all component clearances.

GENERAL FASTENER REFERENCE

Torque reference & maintenance

The original guide provides the general chart below. Values are in **ft·lb**. Select a value only after confirming the actual fastener size and grade. Use the vehicle manufacturer's specification for factory hardware.

SAE FASTENERS

Size	Grade 5	Grade 8
5/16 in.	15	20
3/8 in.	30	35
7/16 in.	45	60
1/2 in.	65	90
9/16 in.	95	130
5/8 in.	135	175
3/4 in.	185	280

METRIC FASTENERS

Size	Class 8.8	Class 10.9
M6	5	9
M8	18	23
M10	32	45
M12	55	75
M14	85	120
M16	130	165
M18	170	240

Final and periodic checks

Check all fasteners for correct tightness and confirm clearance between all components. Periodically inspect the brackets, ball pins and gas-spring connections, and recheck hardware tightness.