


FORD MAVERICK TAILGATE ASSIST

QUICK INSTALLATION GUIDE | 10 EASY STEPS



IMPORTANT Park on level ground. Turn off the ignition. Fully open the tailgate.

01 Remove the tie-down cleat

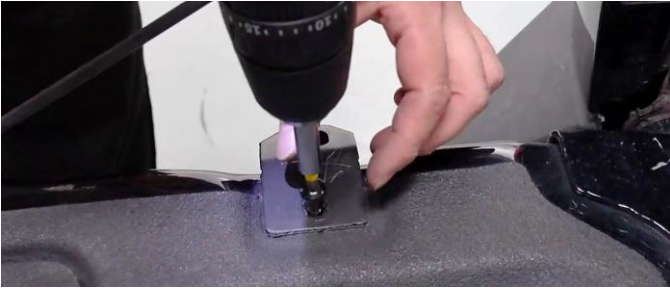

Remove the driver-side factory bottle opener/tie-down cleat.

02 Preassemble the lower bracket



Insert the supplied M8 bolt and washer through the lower bracket.

03 Start the M8 nut



Thread the M8 nut onto the bolt a few turns. Do not tighten yet.

04 Attach the lower socket



Press the rod-end socket onto the lower ball stud until it clicks.

05 Attach the upper socket



Press the body-end socket onto the upper ball stud until it clicks.

06 Remove the upper bolt



Remove and keep the factory upper bolt.

07 Install the upper bracket



Position the upper bracket. Reinstall and fully tighten the factory bolt.

08 Align the lower bracket



Pull the damper down firmly and align the bracket with the factory hole.

09 Seat the lower bracket



Insert the M8 nut into the factory hole. Seat the bracket flat.

10 Tighten the lower bracket



Hold the bracket in place and tighten the M8 bolt securely.

FINAL CHECK Slowly cycle the tailgate. Confirm both sockets are fully seated, all fasteners are tight, and nothing rubs or binds.