

FORD RANGER TAILGATE ASSIST

QUICK INSTALLATION GUIDE | 2011-2018



IMPORTANT Park on level ground. Turn off the ignition. Fully open the tailgate. Never remove both lower bolts at the same time.


01 Disconnect support cable

Lift the eyelet, align the slot, then slide it off the post.



02 Remove upper mounting bolt

Use the supplied Torx key. Keep the factory bolt.

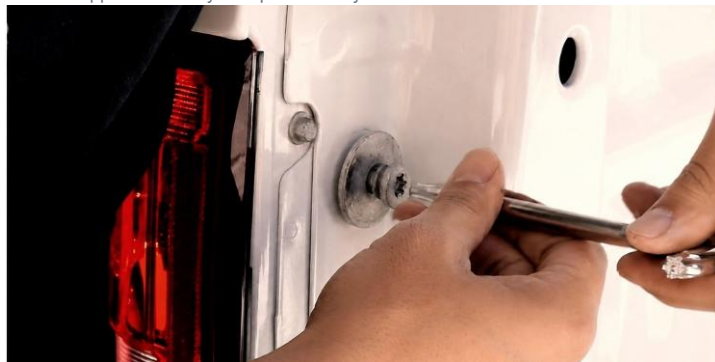

03 Install upper bracket

Position the black bracket. Reinstall and tighten the factory bolt.



04 Remove first lower bolt

Remove one lower bolt only. Leave the other bolt installed.



05 Install lower bracket

Fit the bracket and install one supplied bolt.



06 Secure lower bracket

Remove the second bolt. Align the bracket, install the supplied bolt, and tighten both.



07 Attach damper

Snap the lower socket onto the lower ball stud, then attach the upper socket.



08 Reconnect and test

Reconnect the cable. Close and reopen slowly; check clearance and fasteners.



FINAL CHECK Smooth operation | Secure fasteners | No contact or interference

OTOVYN | OTO-TA-RANGER-01