

TOYOTA TACOMA TAILGATE ASSIST



QUICK INSTALLATION GUIDE |

FITMENT NOTE Verify year, trim, and cab configuration before installation.

IMPORTANT Park on level ground. Turn off the ignition. Fully open the tailgate.

01 DISCONNECT SUPPORT CABLE



Disconnect the driver-side support cable.

02 REMOVE UPPER FACTORY BOLT



Remove the upper factory mounting bolt.

03 INSTALL UPPER BALL STUD




Thread in the supplied ball stud and tighten securely. Attach support Cable.

04 INSTALL FLAT-HEAD BOLT



Replace the bolt beneath the cable with the supplied flat-head bolt.

05 CONNECT DAMPER AT TOP

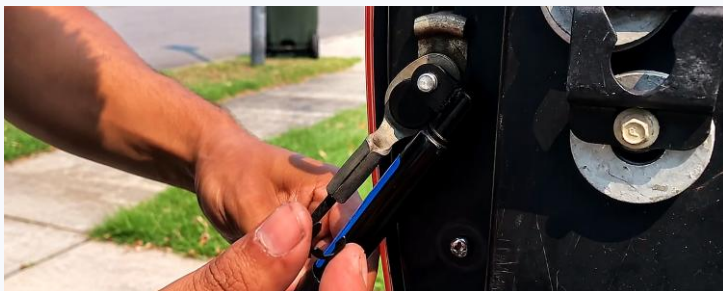

Press the upper socket onto the installed ball stud.

06 INSTALL UPPER RETAINING CLIP



Lock the upper socket with the supplied clip.

07 REMOVE LOWER FACTORY BOLT



Remove the lower bolt and keep it for reuse.

08 INSTALL LOWER BRACKET



Align the bracket; reinstall and tighten the factory bolt.

09 CONNECT DAMPER AT BOTTOM



Press the lower socket onto the bracket ball stud.

10 INSTALL LOWER RETAINING CLIP



Lock the lower socket with the supplied clip.