

FORD F150 2015-2026 TAILGATE ASSIST

QUICK INSTALLATION GUIDE

IMPORTANT Park on level ground, switch off the ignition, fully open the tailgate, and never remove both lower bolts at the same time.

1 Disconnect driver-side support cable

Lift the cable eyelet, align its slot with the post, and slide it off.



2 Remove upper mounting bolt

Remove the factory bolt with the supplied Torx key. Set it aside.




3 Install upper bracket

Place the black bracket on the mount; reinstall and tighten the factory bolt.



4 Loosen lower hinge bolts

Remove the upper-left bolt. Loosen, but do not remove, the lower-right bolt.

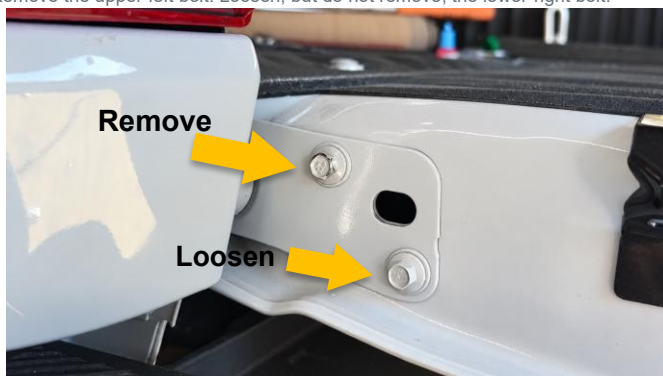

5 Position lower bracket

Align the black bracket; install the supplied upper-left bolt loosely.



6 Secure lower bracket

Seat the bracket flush, then tighten both mounting bolts securely.



7 Attach damper

Snap the lower socket onto the lower ball stud, then attach the upper socket.



8 Reconnect cable and test

Reconnect the cable; close and reopen slowly. Check clearance and bolts.



If the tailgate has a bottle opener, remove it before installing the tailgate assist.