
PREPARATION / STEPS 1-2

Before you begin

1 Unpack the kit & verify contents

Remove all items from the packing tube. You should have the following before beginning:


(2) Gas springs
(1) Hood bracket, right hand (RH-H)
(1) Hood bracket, left hand (LH-H)
(1) Fender bracket, right hand (RH-F)
(1) Fender bracket, left hand (LH-F)
(1) Hex flange bolt (HFB)

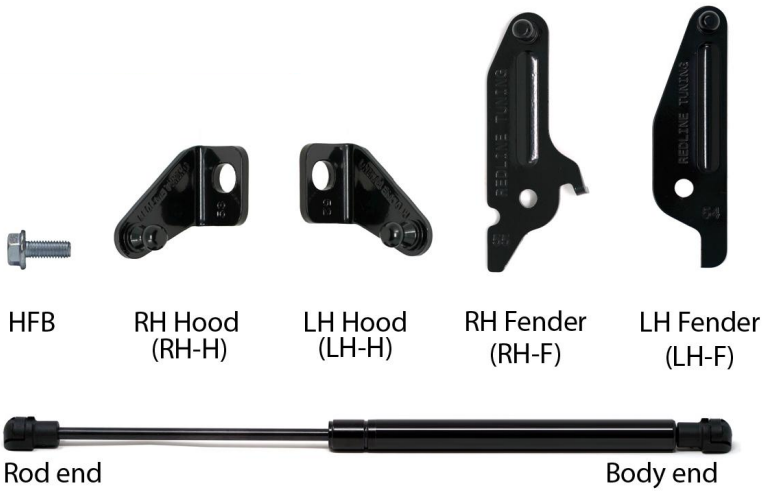

2 Gather the required tools

Please gather the following tools before you begin:
- Socket wrench with 13 mm socket
- 12 mm and 13 mm open-ended wrenches

Step 3 also calls for a 12 mm socket.

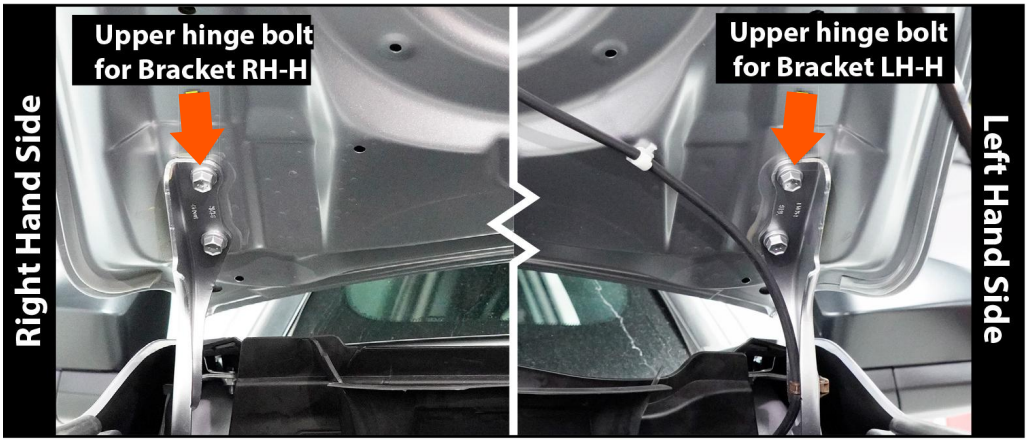

Locate both **upper hood hinge bolts**, as shown.

Side reference
Sides are determined from the driver's seat looking forward. LH is the driver's side in the U.S.

Before installation: Securely support the open hood while removing bolts and fitting the brackets.

HOOD / STEP 3

Install the hood brackets

3 Install LH-H and RH-H brackets

A. With the hood open, remove the upper hood hinge bolt on the left-hand side using a 12 mm socket wrench.

B. Place the LH hood bracket (LH-H) in this location with the ball stud facing **inward**. Keep the bracket pressed tightly against the hood frame while tightening.

C. Tighten the hood hinge bolt back in place.






Repeat Step 3 on the passenger side for RH-H. Both ball studs must face inward.

FENDER / STEP 4

Install the RH fender bracket



RH Fender
(RH-F)

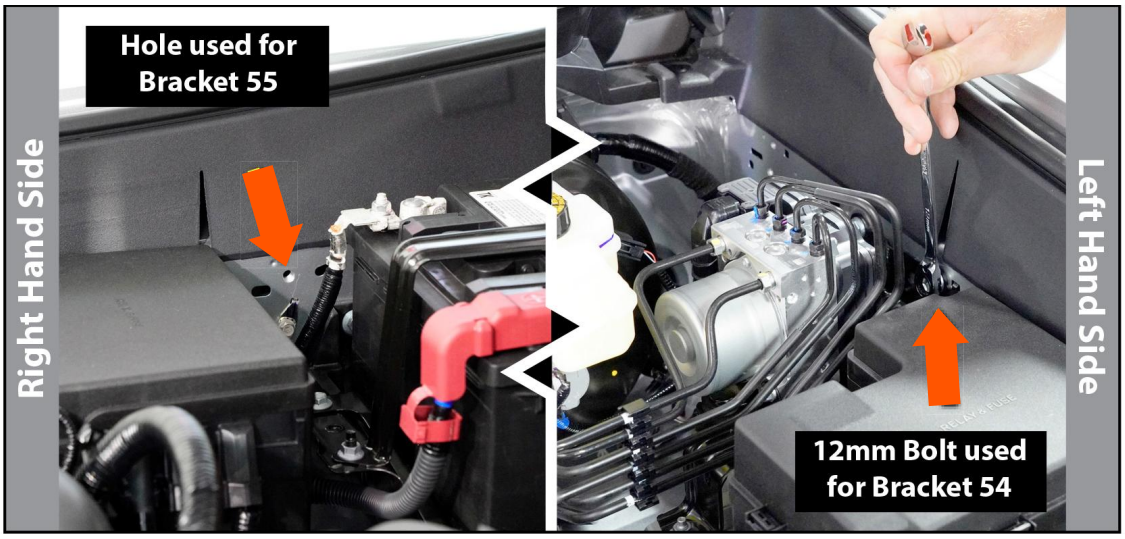




LH Fender
(LH-F)

4 RH inner fender / models with an open hole

A. Locate the hole used for the right-hand fender bracket, shown above.

B. Install bracket RH-F in this location with the anti-rotation tab fitted into the slot.

C. Tighten the included HFB bolt with a 13 mm open-ended wrench.

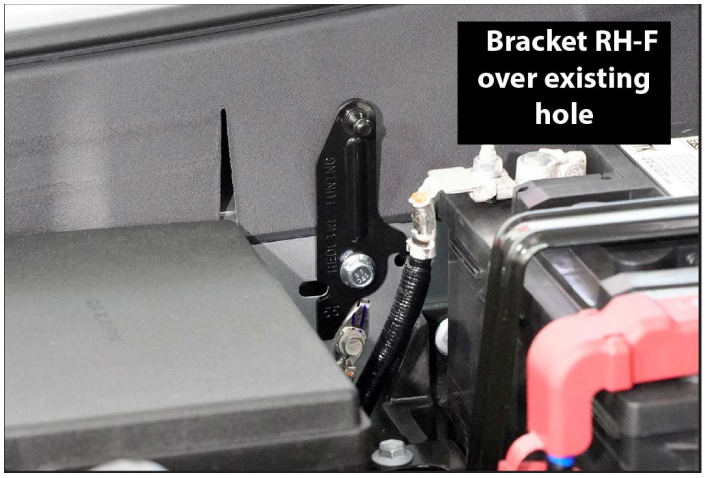


Hybrid models with a coolant bottle at this location
Use the hybrid installation on the next page. Use this procedure when a coolant bottle is fitted at the RH mounting location.


FENDER / STEPS 4-5

Hybrid RH & LH installation

4 RH inner fender / hybrid models

A. On hybrid models with a coolant bottle mounted in this location, remove the existing bolt.
B. Place the coolant bottle over bracket RH-F, with the tab fitted into the slot.
C. Tighten the original bolt back in place.

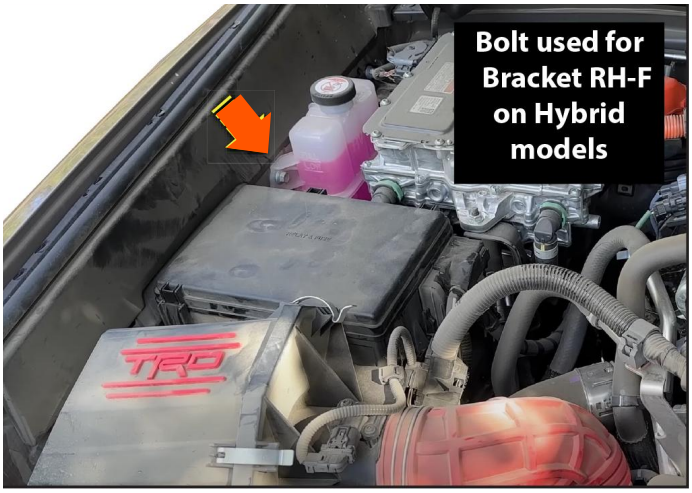

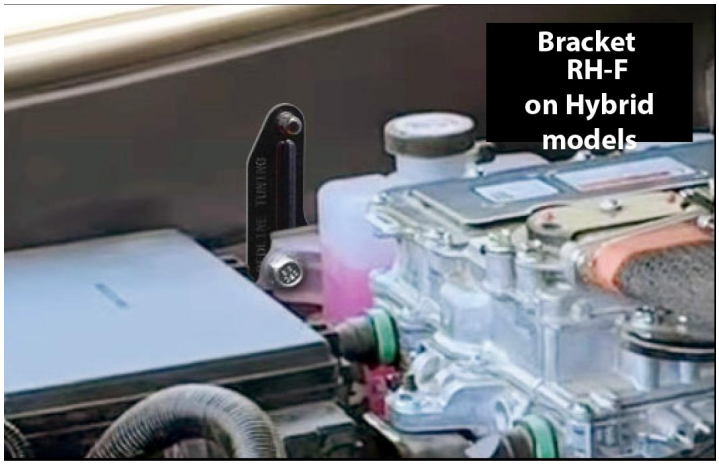


5 Install the LH inner fender bracket

A. Locate and remove the 12 mm bolt shown on the previous page using a 12 mm open-ended wrench. This is the front bolt holding the ABS module on the inner fender, just behind the fuse and relay panel.

B. Install LH-F on top of the vehicle's ABS bracket.

C. Reinstall and tighten the original bolt with the same 12 mm wrench. The bracket sits on top of the ABS bracket; its lower extension must contact the horizontal ABS-bracket mount for anti-rotation.

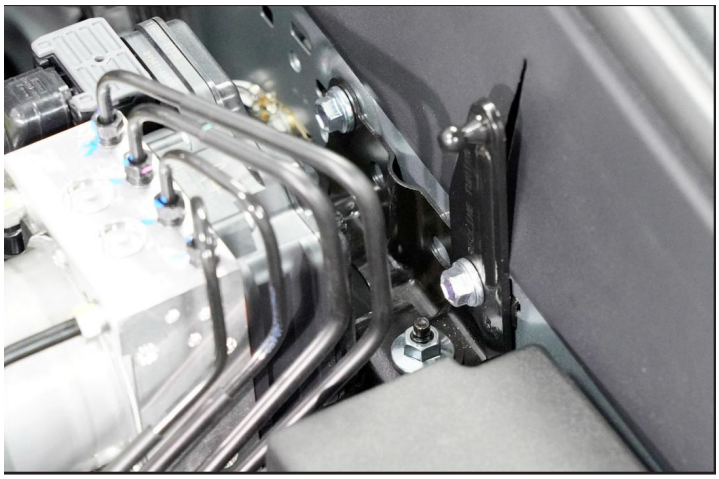

CONNECTIONS / STEP 6

Install the gas springs

6 Connect the rod end and body end

A. Snap the rod end of the gas spring onto the fender (lower) ball stud.
B. Snap the body end onto the hood (upper) ball stud.

NOTE: Carefully rock each gas-spring end fitting over its ball stud. This lets the internal C-clip spread and wrap around the ball stud. If the socket is forced on, the C-clip can bend inward and the end fitting may pop off.





