KIT CONTENTS & TOOLS

Before you begin

1 Check the kit

Included components

2 gas springs
2 fender brackets
2 hood brackets with
backing plates and bolts



2 Prepare the tools

- Socket wrench with a 10 mm socket
- Phillips screwdriver for the hood-bracket screws shown

Side reference: LH = driver's side; RH = passenger side.
Determine sides from the driver's seat, facing forward.

Electronic instructions only. Printed instructions are not included.

INSTALLATION / STEP 1

Install the fender brackets

1 Start on the LH / driver side

Open the hood and support it securely with the support bar.
A. Locate the LH mounting position.
B. Remove the rear fender bolt with a **10 mm socket**.

LH / MOUNTING LOCATION



LH / BRACKET POSITIONING



C. Position the bracket as shown and align it in the direction of the arrows before tightening.

Before final tightening: Push the bracket firmly against the metal behind the ball stud. Pull it back into position in the area below the bolt, then tighten the bolt to secure it.

D. Repeat the same procedure on the RH / passenger side.

INSTALLATION / STEP 2

Install the hood brackets

2 Fit the LH hood-bracket assembly

A. On one hood-bracket assembly, remove the lower bolt.
B. Loosen the upper bolt until its threads are flush with the back of the metal backing plate. Position the assembly at the hood opening as shown.

HOOD OPENING



BRACKET & BACKING PLATE



C. Align the lower threaded hole with the bracket hole and reinstall the lower bolt.
D. Slide the assembly upward, keeping it firmly pressed against the hood. Tighten both bolts to secure the bracket.

ALIGN THE LOWER BOLT



SLIDE UP & TIGHTEN BOTH BOLTS



E. Repeat on the RH side. Both ball studs must face toward the engine interior.

INSTALLATION / STEP 3

Connect the gas springs

3 Attach the body end and rod end

Snap the **thin rod end onto the fender bracket** ball stud. Connect the **thicker body end to the hood bracket** ball stud. Repeat on the other side.


UPPER / HOOD / BODY END



LOWER / FENDER / ROD END



COMPLETED INSTALLATION

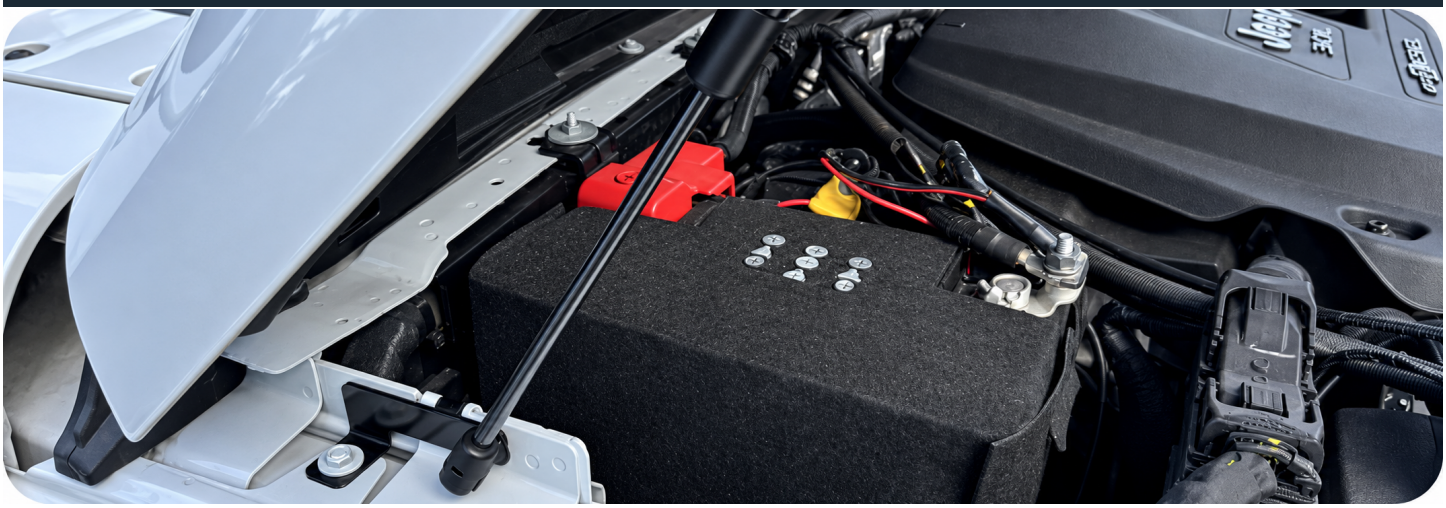

Final check: Confirm that both ends are securely attached. Slowly open and close the hood while checking for clearance and secure connections.