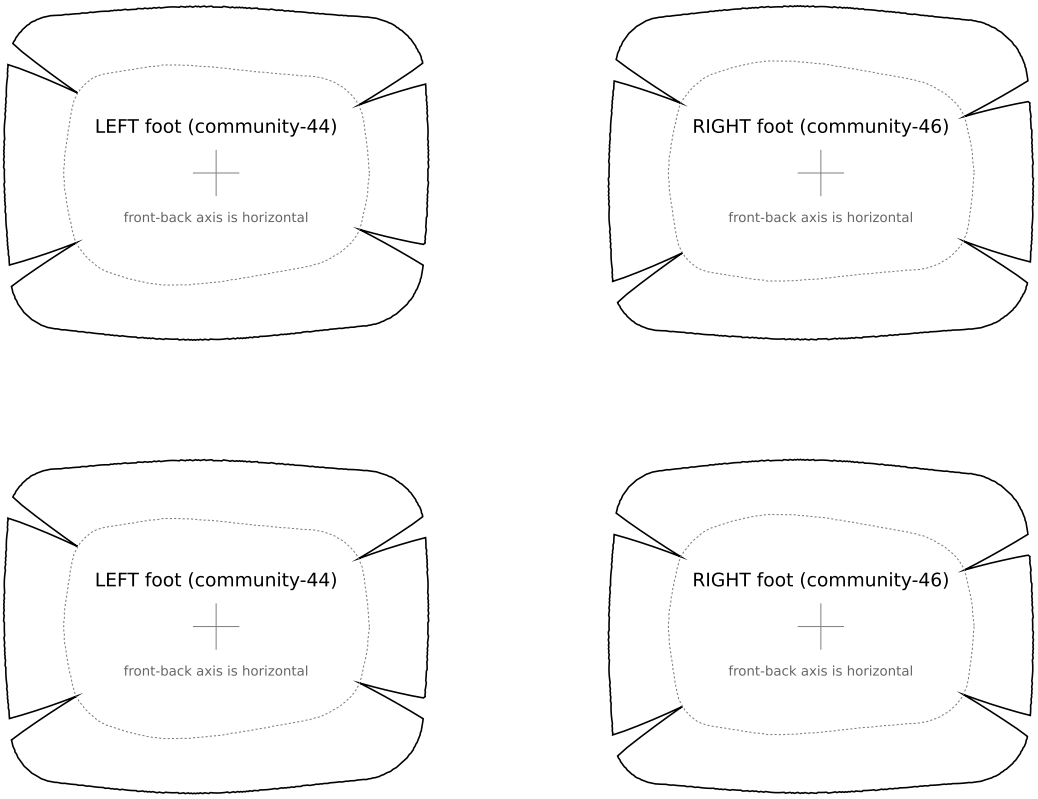


50 mm (check with a ruler; print at 100 % / actual size, no fit-to-page)

MicroDuck foot sole template, wrapped sheet (inner tube 1 mm or sheet rubber up to 1 mm)

Source: community-44.stl bottom height map; outer line = surface developed to 4.5 mm above the flat;

dashed line = flat region (40 x 29 mm). Cut on the outer line. Corner darts are 3 mm wide.

1. Print at 100 % and check the 50 mm bar. CampusPrinting shrinks to 96 % (48 mm): Chrome Scale > Custom 104 there.
2. Cut a template, tape it to the rubber (butyl inner tube: slit open, lay flat, wash the talc off, dry).
3. Cut the rubber on the outer line and the four darts. Rough the PLA bottom with the sandpaper, wipe with alcohol.
4. Stick thin double-sided tape (<= 0.2 mm, PET carrier or transfer tape, not foam) on the rubber first, trim to the rubber.
5. Peel, centre on the flat (dashed line matches the flat), press the middle down, then press the edges over the
   curve from the centre outward so the dart edges meet. Press hard for a minute; let it sit before walking.

Stack thickness tape + rubber: see README (sim sweep) for the limit.