

Arm® Cortex®-A76AE Core


Revision: r1p1

Technical Reference Manual

Non-Confidential

Copyright © 2018, 2020, 2022 Arm Limited (or its affiliates).
All rights reserved.

Issue 00 101392_0101_00_en

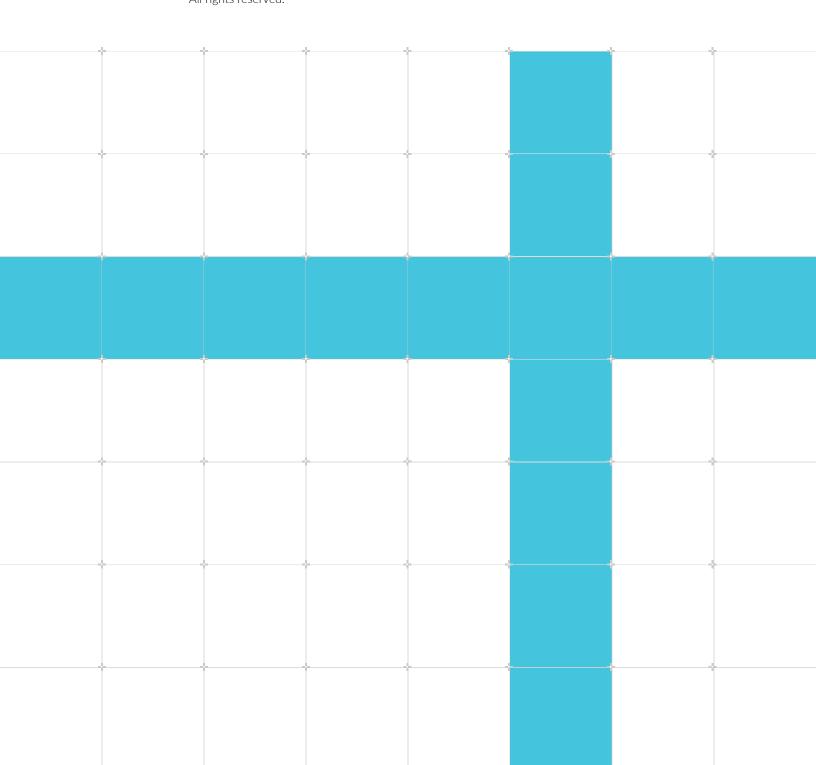

Arm® Cortex®-A76AF Core

Technical Reference Manual

Copyright © 2018, 2020, 2022 Arm Limited (or its affiliates). All rights reserved.

Release Information

Document history

| Issue | Date | Confidentiality | Change |
|---------|------------------|------------------|------------------------------------|
| 0000-00 | 29 October 2018 | Confidential | First development release for r0p0 |
| 0000-01 | 7 December 2018 | Non-Confidential | First release for r0p0 |
| 0100-00 | 28 February 2020 | Confidential | First release for r1p0 |
| 0101-00 | 31 March 2022 | Non-Confidential | First release for r1p1 |

Proprietary Notice

This document is protected by copyright and other related rights and the practice or implementation of the information contained in this document may be protected by one or more patents or pending patent applications. No part of this document may be reproduced in any form by any means without the express prior written permission of Arm. No license, express or implied, by estoppel or otherwise to any intellectual property rights is granted by this document unless specifically stated.

Your access to the information in this document is conditional upon your acceptance that you will not use or permit others to use the information for the purposes of determining whether implementations infringe any third party patents.

THIS DOCUMENT IS PROVIDED "AS IS". ARM PROVIDES NO REPRESENTATIONS AND NO WARRANTIES, EXPRESS, IMPLIED OR STATUTORY, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY, SATISFACTORY QUALITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE WITH RESPECT TO THE DOCUMENT. For the avoidance of doubt, Arm makes no representation with respect to, has undertaken no analysis to identify or understand the scope and content of, third party patents, copyrights, trade secrets, or other rights.

This document may include technical inaccuracies or typographical errors.

TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT WILL ARM BE LIABLE FOR ANY DAMAGES, INCLUDING WITHOUT LIMITATION ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES, HOWEVER CAUSED AND

REGARDLESS OF THE THEORY OF LIABILITY, ARISING OUT OF ANY USE OF THIS DOCUMENT, EVEN IF ARM HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

This document consists solely of commercial items. You shall be responsible for ensuring that any use, duplication or disclosure of this document complies fully with any relevant export laws and regulations to assure that this document or any portion thereof is not exported, directly or indirectly, in violation of such export laws. Use of the word "partner" in reference to Arm's customers is not intended to create or refer to any partnership relationship with any other company. Arm may make changes to this document at any time and without notice.

This document may be translated into other languages for convenience, and you agree that if there is any conflict between the English version of this document and any translation, the terms of the English version of the Agreement shall prevail.

The Arm corporate logo and words marked with ® or ™ are registered trademarks or trademarks of Arm Limited (or its subsidiaries) in the US and/or elsewhere. All rights reserved. Other brands and names mentioned in this document may be the trademarks of their respective owners. Please follow Arm's trademark usage guidelines at https://www.arm.com/company/policies/trademarks.

Copyright © 2018, 2020, 2022 Arm Limited (or its affiliates). All rights reserved.

Arm Limited. Company 02557590 registered in England.

110 Fulbourn Road, Cambridge, England CB1 9NJ.

(LES-PRE-20349)

Confidentiality Status

This document is Non-Confidential. The right to use, copy and disclose this document may be subject to license restrictions in accordance with the terms of the agreement entered into by Arm and the party that Arm delivered this document to.

Unrestricted Access is an Arm internal classification.

Product Status

The information in this document is Final, that is for a developed product.

Feedback

Arm welcomes feedback on this product and its documentation. To provide feedback on the product, create a ticket on https://support.developer.arm.com.

To provide feedback on the document, fill the following survey: https://developer.arm.com/documentation-feedback-survey.

Inclusive language commitment

Arm values inclusive communities. Arm recognizes that we and our industry have used language that can be offensive. Arm strives to lead the industry and create change.

This document includes language that can be offensive. We will replace this language in a future issue of this document.

To report offensive language in this document, email terms@arm.com.

Contents

| 1 Introduction | 17 |
|-------------------------------------------------------|----|
| 1.1 Product revision status | 17 |
| 1.2 Intended audience | 17 |
| 1.3 Conventions | 17 |
| 1.4 Additional reading | 19 |
| 2 Functional description | 21 |
| 2.1 Introduction | 21 |
| 2.1.1 About the core | 21 |
| 2.1.2 Features | 23 |
| 2.1.3 Split-Lock | 24 |
| 2.1.4 Implementation options | 25 |
| 2.1.5 Supported standards and specifications | 26 |
| 2.1.6 Test features | 26 |
| 2.1.7 Design tasks | 27 |
| 2.1.8 Product revisions | 27 |
| 2.2 Technical overview | 28 |
| 2.2.1 Components | 28 |
| 2.2.2 Interfaces | 31 |
| 2.2.3 About system control | 31 |
| 2.2.4 About the Generic Timer | 31 |
| 2.3 Clocks, resets, and input synchronization | 32 |
| 2.3.1 About clocks, resets, and input synchronization | 32 |
| 2.3.2 Asynchronous interface | 32 |
| 2.4 Power management | 32 |
| 2.4.1 About power management | 33 |
| 2.4.2 Voltage domains | 33 |
| 2.4.3 Power domains | 34 |
| 2.4.4 Architectural clock gating modes | 36 |
| 2.4.5 Power control | 38 |
| 2.4.6 Core power modes | 39 |
| 2.4.7 Encoding for power modes | 42 |

| 2.4.8 Power domain states for power modes | 42 |
|------------------------------------------------------------|----|
| 2.4.9 Core powerup and powerdown sequences | 43 |
| 2.4.10 Debug over powerdown | 44 |
| 2.5 Memory Management Unit | 44 |
| 2.5.1 About the MMU | 45 |
| 2.5.2 TLB organization | 46 |
| 2.5.3 TLB match process | 47 |
| 2.5.4 Translation table walks | 48 |
| 2.5.5 MMU memory accesses | 49 |
| 2.5.6 Specific behaviors on aborts and memory attributes | 50 |
| 2.5.7 Page-based hardware attributes | 52 |
| 2.6 L1 memory system | 52 |
| 2.6.1 About the L1 memory system | 53 |
| 2.6.2 Cache behavior | 53 |
| 2.6.3 L1 instruction memory system | 56 |
| 2.6.4 L1 data memory system | 58 |
| 2.6.5 Data prefetching | 60 |
| 2.6.6 Direct access to internal memory | 61 |
| 2.7 L2 memory system | 73 |
| 2.7.1 About the L2 memory system | 74 |
| 2.7.2 About the L2 cache | 74 |
| 2.7.3 Support for memory types | 74 |
| 2.8 Reliability, Availability, and Serviceability (RAS) | 75 |
| 2.8.1 Cache ECC and parity | 75 |
| 2.8.2 Cache protection behavior | 76 |
| 2.8.3 Uncorrected errors and data poisoning | 78 |
| 2.8.4 RAS error types | 78 |
| 2.8.5 Error Synchronization Barrier | 78 |
| 2.8.6 Error recording | 80 |
| 2.8.7 Error injection | 80 |
| 2.9 Generic Interrupt Controller CPU interface | 82 |
| 2.9.1 About the Generic Interrupt Controller CPU interface | 82 |
| 2.9.2 Bypassing the CPU interface | 83 |
| 2.10 Advanced SIMD and floating-point support | |
| 2.10.1 About the Advanced SIMD and floating-point support | 83 |
| 2.10.2 Accessing the feature identification registers | 84 |

| 2.11 Split-Lock feature | 84 |
|---------------------------------------------------------------------------|-----|
| 2.11.1 Implementing Split-Lock | 84 |
| 3 Register descriptions | 91 |
| 3.1 AArch32 System registers | |
| 3.1.1 AArch32 architectural System register summary | |
| 3.2 AArch64 System registers | |
| 3.2.1 AArch64 registers | 92 |
| 3.2.2 AArch64 architectural System register summary | 92 |
| 3.2.3 AArch64 implementation defined register summary | 98 |
| 3.2.4 AArch64 registers by functional group | 99 |
| 3.2.5 ACTLR_EL1, Auxiliary Control Register, EL1 | |
| 3.2.6 ACTLR_EL2, Auxiliary Control Register, EL2 | 106 |
| 3.2.7 ACTLR_EL3, Auxiliary Control Register, EL3 | 109 |
| 3.2.8 AFSRO_EL1, Auxiliary Fault Status Register O, EL1 | 111 |
| 3.2.9 AFSRO_EL2, Auxiliary Fault Status Register O, EL2 | 112 |
| 3.2.10 AFSRO_EL3, Auxiliary Fault Status Register O, EL3 | 113 |
| 3.2.11 AFSR1_EL1, Auxiliary Fault Status Register 1, EL1 | 113 |
| 3.2.12 AFSR1_EL2, Auxiliary Fault Status Register 1, EL2 | 114 |
| 3.2.13 AFSR1_EL3, Auxiliary Fault Status Register 1, EL3 | 115 |
| 3.2.14 AIDR_EL1, Auxiliary ID Register, EL1 | 116 |
| 3.2.15 AMAIR_EL1, Auxiliary Memory Attribute Indirection Register, EL1 | 116 |
| 3.2.16 AMAIR_EL2, Auxiliary Memory Attribute Indirection Register, EL2 | 117 |
| 3.2.17 AMAIR_EL3, Auxiliary Memory Attribute Indirection Register, EL3 | 118 |
| 3.2.18 ATCR_EL1, Auxiliary Translation Control Register, EL1 | 118 |
| 3.2.19 ATCR_EL2, Auxiliary Translation Control Register, EL2 | 121 |
| 3.2.20 ATCR_EL12, Alias to Auxiliary Translation Control Register EL1 | 123 |
| 3.2.21 ATCR_EL3, Auxiliary Translation Control Register, EL3 | 124 |
| 3.2.22 AVTCR_EL2, Auxiliary Virtualized Translation Control Register, EL2 | 126 |
| 3.2.23 CCSIDR_EL1, Cache Size ID Register, EL1 | 127 |
| 3.2.24 CLIDR_EL1, Cache Level ID Register, EL1 | 129 |
| 3.2.25 CPACR_EL1, Architectural Feature Access Control Register, EL1 | 131 |
| 3.2.26 CPTR_EL2, Architectural Feature Trap Register, EL2 | 132 |
| 3.2.27 CPTR_EL3, Architectural Feature Trap Register, EL3 | |
| 3.2.28 CPUACTLR_EL1, CPU Auxiliary Control Register, EL1 | 133 |
| 3.2.29 CPUACTI R2 FL1, CPU Auxiliary Control Register 2, FL1 | 135 |

| 3.2.30 CPUACTLR3_EL1, CPU Auxiliary Control Register 3, EL1 | 136 |
|------------------------------------------------------------------------------------|--------|
| 3.2.31 CPUCFR_EL1, CPU Configuration Register, EL1 | 138 |
| 3.2.32 CPUECTLR_EL1, CPU Extended Control Register, EL1 | 139 |
| 3.2.33 CPUPCR_EL3, CPU Private Control Register, EL3 | 149 |
| 3.2.34 CPUPMR_EL3, CPU Private Mask Register, EL3 | 150 |
| 3.2.35 CPUPOR_EL3, CPU Private Operation Register, EL3 | 151 |
| 3.2.36 CPUPSELR_EL3, CPU Private Selection Register, EL3 | 153 |
| 3.2.37 CPUPWRCTLR_EL1, Power Control Register, EL1 | 154 |
| 3.2.38 CSSELR_EL1, Cache Size Selection Register, EL1 | 157 |
| 3.2.39 CTR_ELO, Cache Type Register, ELO | 158 |
| 3.2.40 DCZID_ELO, Data Cache Zero ID Register, ELO | 160 |
| 3.2.41 DISR_EL1, Deferred Interrupt Status Register, EL1 | 160 |
| 3.2.42 ERRIDR_EL1, Error ID Register, EL1 | 162 |
| 3.2.43 ERRSELR_EL1, Error Record Select Register, EL1 | 163 |
| 3.2.44 ERXADDR_EL1, Selected Error Record Address Register, EL1 | 164 |
| 3.2.45 ERXCTLR_EL1, Selected Error Record Control Register, EL1 | 164 |
| 3.2.46 ERXFR_EL1, Selected Error Record Feature Register, EL1 | 164 |
| 3.2.47 ERXMISCO_EL1, Selected Error Record Miscellaneous Register 0, EL1 | 164 |
| 3.2.48 ERXMISC1_EL1, Selected Error Record Miscellaneous Register 1, EL1 | 165 |
| 3.2.49 ERXPFGCDN_EL1, Selected Error Pseudo Fault Generation Count Down Register, | EL1165 |
| 3.2.50 ERXPFGCTL_EL1, Selected Error Pseudo Fault Generation Control Register, EL1 | 166 |
| 3.2.51 ERXPFGF_EL1, Selected Pseudo Fault Generation Feature Register, EL1 | 168 |
| 3.2.52 ERXSTATUS_EL1, Selected Error Record Primary Status Register, EL1 | 169 |
| 3.2.53 ESR_EL1, Exception Syndrome Register, EL1 | 169 |
| 3.2.54 ESR_EL2, Exception Syndrome Register, EL2 | 170 |
| 3.2.55 ESR_EL3, Exception Syndrome Register, EL3 | 171 |
| 3.2.56 HACR_EL2, Hyp Auxiliary Configuration Register, EL2 | 172 |
| 3.2.57 HCR_EL2, Hypervisor Configuration Register, EL2 | 173 |
| 3.2.58 ID_AA64AFR0_EL1, AArch64 Auxiliary Feature Register 0 | 175 |
| 3.2.59 ID_AA64AFR1_EL1, AArch64 Auxiliary Feature Register 1 | 175 |
| 3.2.60 ID_AA64DFR0_EL1, AArch64 Debug Feature Register 0, EL1 | 175 |
| 3.2.61 ID_AA64DFR1_EL1, AArch64 Debug Feature Register 1, EL1 | 177 |
| 3.2.62 ID_AA64ISARO_EL1, AArch64 Instruction Set Attribute Register 0, EL1 | 177 |
| 3.2.63 ID_AA64ISAR1_EL1, AArch64 Instruction Set Attribute Register 1, EL1 | 179 |
| 3.2.64 ID_AA64MMFRO_EL1, AArch64 Memory Model Feature Register 0, EL1 | 180 |
| 3.2.65 ID AA64MMFR1 FL1. AArch64 Memory Model Feature Register 1. FL1 | 182 |

| 3.2.66 ID_AA64MMFR2_EL1, AArch64 Memory Model Feature Register 2, EL1 | 183 |
|------------------------------------------------------------------------|-----|
| 3.2.67 ID_AA64PFRO_EL1, AArch64 Processor Feature Register 0, EL1 | 185 |
| 3.2.68 ID_AA64PFR1_EL1, AArch64 Processor Feature Register 1, EL1 | 187 |
| 3.2.69 ID_AFRO_EL1, AArch32 Auxiliary Feature Register 0, EL1 | 188 |
| 3.2.70 ID_DFRO_EL1, AArch32 Debug Feature Register 0, EL1 | 189 |
| 3.2.71 ID_ISARO_EL1, AArch32 Instruction Set Attribute Register 0, EL1 | 190 |
| 3.2.72 ID_ISAR1_EL1, AArch32 Instruction Set Attribute Register 1, EL1 | 192 |
| 3.2.73 ID_ISAR2_EL1, AArch32 Instruction Set Attribute Register 2, EL1 | 194 |
| 3.2.74 ID_ISAR3_EL1, AArch32 Instruction Set Attribute Register 3, EL1 | 196 |
| 3.2.75 ID_ISAR4_EL1, AArch32 Instruction Set Attribute Register 4, EL1 | 197 |
| 3.2.76 ID_ISAR5_EL1, AArch32 Instruction Set Attribute Register 5, EL1 | 199 |
| 3.2.77 ID_ISAR6_EL1, AArch32 Instruction Set Attribute Register 6, EL1 | 201 |
| 3.2.78 ID_MMFR0_EL1, AArch32 Memory Model Feature Register 0, EL1 | 202 |
| 3.2.79 ID_MMFR1_EL1, AArch32 Memory Model Feature Register 1, EL1 | 204 |
| 3.2.80 ID_MMFR2_EL1, AArch32 Memory Model Feature Register 2, EL1 | 205 |
| 3.2.81 ID_MMFR3_EL1, AArch32 Memory Model Feature Register 3, EL1 | 207 |
| 3.2.82 ID_MMFR4_EL1, AArch32 Memory Model Feature Register 4, EL1 | 210 |
| 3.2.83 ID_PFRO_EL1, AArch32 Processor Feature Register 0, EL1 | 211 |
| 3.2.84 ID_PFR1_EL1, AArch32 Processor Feature Register 1, EL1 | 213 |
| 3.2.85 ID_PFR2_EL1, AArch32 Processor Feature Register 2, EL1 | 214 |
| 3.2.86 LORC_EL1, LORegion Control Register, EL1 | 215 |
| 3.2.87 LORID_EL1, LORegion ID Register, EL1 | 216 |
| 3.2.88 LORN_EL1, LORegion Number Register, EL1 | 217 |
| 3.2.89 MDCR_EL3, Monitor Debug Configuration Register, EL3 | 217 |
| 3.2.90 MIDR_EL1, Main ID Register, EL1 | 219 |
| 3.2.91 MPIDR_EL1, Multiprocessor Affinity Register, EL1 | 220 |
| 3.2.92 PAR_EL1, Physical Address Register, EL1 | 222 |
| 3.2.93 REVIDR_EL1, Revision ID Register, EL1 | 223 |
| 3.2.94 RMR_EL3, Reset Management Register | 223 |
| 3.2.95 RVBAR_EL3, Reset Vector Base Address Register, EL3 | 224 |
| 3.2.96 SCTLR_EL1, System Control Register, EL1 | 225 |
| 3.2.97 SCTLR_EL2, System Control Register, EL2 | 226 |
| 3.2.98 SCTLR_EL3, System Control Register, EL3 | 227 |
| 3.2.99 TCR_EL1, Translation Control Register, EL1 | 229 |
| 3.2.100 TCR_EL2, Translation Control Register, EL2 | |
| 3.2.101 TCR_EL3, Translation Control Register, EL3 | 232 |

| 3.2.102 TTBR0_EL1, Translation Table Base Register 0, EL1 | 233 |
|----------------------------------------------------------------------------------------------|------|
| 3.2.103 TTBRO_EL2, Translation Table Base Register 0, EL2 | 234 |
| 3.2.104 TTBRO_EL3, Translation Table Base Register 0, EL3 | 235 |
| 3.2.105 TTBR1_EL1, Translation Table Base Register 1, EL1 | 236 |
| 3.2.106 TTBR1_EL2, Translation Table Base Register 1, EL2 | 237 |
| 3.2.107 VDISR_EL2, Virtual Deferred Interrupt Status Register, EL2 | .237 |
| 3.2.108 VSESR_EL2, Virtual SError Exception Syndrome Register | 238 |
| 3.2.109 VTCR_EL2, Virtualization Translation Control Register, EL2 | .239 |
| 3.2.110 VTTBR_EL2, Virtualization Translation Table Base Register, EL2 | .240 |
| 3.3 Error System registers | .241 |
| 3.3.1 Error System register summary | 241 |
| 3.3.2 ERROADDR, Error Record Address Register | 242 |
| 3.3.3 ERROCTLR, Error Record Control Register | .243 |
| 3.3.4 ERROFR, Error Record Feature Register | .245 |
| 3.3.5 ERROMISCO, Error Record Miscellaneous Register O | .247 |
| 3.3.6 ERROMISC1, Error Record Miscellaneous Register 1 | .250 |
| 3.3.7 ERROPFGCDN, Error Pseudo Fault Generation Count Down Register | 250 |
| 3.3.8 ERROPFGCTL, Error Pseudo Fault Generation Control Register | 251 |
| 3.3.9 ERROPFGF, Error Pseudo Fault Generation Feature Register | 252 |
| 3.3.10 ERROSTATUS, Error Record Primary Status Register | .254 |
| 3.4 GIC registers | .257 |
| 3.4.1 CPU interface registers | 257 |
| 3.4.2 AArch64 physical GIC CPU interface System register summary | .258 |
| 3.4.3 ICC_APORO_EL1, Interrupt Controller Active Priorities Group 0 Register 0, EL1 | 258 |
| 3.4.4 ICC_AP1R0_EL1, Interrupt Controller Active Priorities Group 1 Register 0 EL1 | 259 |
| 3.4.5 ICC_BPR0_EL1, Interrupt Controller Binary Point Register 0, EL1 | 259 |
| 3.4.6 ICC_BPR1_EL1, Interrupt Controller Binary Point Register 1, EL1 | 260 |
| 3.4.7 ICC_CTLR_EL1, Interrupt Controller Control Register, EL1 | .261 |
| 3.4.8 ICC_CTLR_EL3, Interrupt Controller Control Register, EL3 | .263 |
| 3.4.9 ICC_SRE_EL1, Interrupt Controller System Register Enable Register, EL1 | .266 |
| 3.4.10 ICC_SRE_EL2, Interrupt Controller System Register Enable register, EL2 | 267 |
| 3.4.11 ICC_SRE_EL3, Interrupt Controller System Register Enable register, EL3 | 268 |
| 3.4.12 AArch64 virtual GIC CPU interface register summary | .270 |
| 3.4.13 ICV_APORO_EL1, Interrupt Controller Virtual Active Priorities Group 0 Register 0, EL1 | 270 |
| 3.4.14 ICV_AP1R0_EL1, Interrupt Controller Virtual Active Priorities Group 1 Register 0, EL1 | 271 |
| 3.4.15 ICV BPRO FL1. Interrupt Controller Virtual Binary Point Register 0. FL1 | .271 |

| 3.4.16 ICV_BPR1_EL1, Interrupt Controller Virtual Binary Point Register 1, EL1 | 272 |
|------------------------------------------------------------------------------------------|-----|
| 3.4.17 ICV_CTLR_EL1, Interrupt Controller Virtual Control Register, EL1 | 273 |
| 3.4.18 AArch64 virtual interface control System register summary | 274 |
| 3.4.19 ICH_APORO_EL2, Interrupt Controller Hyp Active Priorities Group 0 Register 0, EL2 | 275 |
| 3.4.20 ICH_AP1R0_EL2, Interrupt Controller Hyp Active Priorities Group 1 Register 0, EL2 | 275 |
| 3.4.21 ICH_HCR_EL2, Interrupt Controller Hyp Control Register, EL2 | 276 |
| 3.4.22 ICH_VMCR_EL2, Interrupt Controller Virtual Machine Control Register, EL2 | 279 |
| 3.4.23 ICH_VTR_EL2, Interrupt Controller VGIC Type Register, EL2 | 281 |
| 3.5 Advanced SIMD and floating-point registers | 282 |
| 3.5.1 AArch64 register summary | 282 |
| 3.5.2 FPCR, Floating-point Control Register | 283 |
| 3.5.3 FPSR, Floating-point Status Register | 285 |
| 3.5.4 MVFRO_EL1, Media, and VFP Feature Register 0, EL1 | 287 |
| 3.5.5 MVFR1_EL1, Media, and VFP Feature Register 1, EL1 | 289 |
| 3.5.6 MVFR2_EL1, Media, and VFP Feature Register 2, EL1 | 291 |
| 3.5.7 AArch32 register summary | 292 |
| 3.5.8 FPSCR, Floating-Point Status and Control Register | 293 |
| 4 Debug descriptions | 298 |
| 4.1 Debug | 298 |
| 4.1.1 About debug methods | 298 |
| 4.1.2 Debug register interfaces | |
| 4.1.3 Debug events | 301 |
| 4.1.4 External debug interface | 302 |
| 4.2 Performance Monitoring Unit | 302 |
| 4.2.1 About the PMU | 302 |
| 4.2.2 PMU functional description | 302 |
| 4.2.3 PMU events | 303 |
| 4.2.4 PMU interrupts | 310 |
| 4.2.5 Exporting PMU events | 310 |
| 4.3 Activity Monitor Unit | 310 |
| 4.3.1 About the AMU | 311 |
| 4.3.2 Accessing the activity monitors | 311 |
| 4.3.3 AMU counters | |
| 4.3.4 AMU events | 312 |
| 4.4 Embedded Trace Macrocell | 312 |

| 4.4.1 About the ETM | 313 |
|----------------------------------------------------------------------------|------|
| 4.4.2 ETM trace unit generation options and resources | 313 |
| 4.4.3 ETM trace unit functional description | 314 |
| 4.4.4 Resetting the ETM | 315 |
| 4.4.5 Programming and reading ETM trace unit registers | 315 |
| 4.4.6 ETM trace unit register interfaces | 316 |
| 4.4.7 Interaction with the PMU and Debug | 316 |
| 5 Debug registers | 317 |
| 5.1 AArch32 debug registers | 317 |
| 5.1.1 AArch32 Debug register summary | 317 |
| 5.2 AArch64 Debug registers | 317 |
| 5.2.1 AArch64 Debug register summary | 317 |
| 5.2.2 DBGBCRn_EL1, Debug Breakpoint Control Registers, EL1 | 319 |
| 5.2.3 DBGCLAIMSET_EL1, Debug Claim Tag Set Register, EL1 | 322 |
| 5.2.4 DBGWCRn_EL1, Debug Watchpoint Control Registers, EL1 | 323 |
| 5.3 Memory-mapped Debug registers | 325 |
| 5.3.1 Memory-mapped Debug register summary | 325 |
| 5.3.2 EDCIDRO, External Debug Component Identification Register 0 | 328 |
| 5.3.3 EDCIDR1, External Debug Component Identification Register 1 | 329 |
| 5.3.4 EDCIDR2, External Debug Component Identification Register 2 | 330 |
| 5.3.5 EDCIDR3, External Debug Component Identification Register 3 | 330 |
| 5.3.6 EDDEVID, External Debug Device ID Register 0 | 331 |
| 5.3.7 EDDEVID1, External Debug Device ID Register 1 | 332 |
| 5.3.8 EDPIDRO, External Debug Peripheral Identification Register O | 332 |
| 5.3.9 EDPIDR1, External Debug Peripheral Identification Register 1 | 333 |
| 5.3.10 EDPIDR2, External Debug Peripheral Identification Register 2 | 334 |
| 5.3.11 EDPIDR3, External Debug Peripheral Identification Register 3 | 335 |
| 5.3.12 EDPIDR4, External Debug Peripheral Identification Register 4 | 335 |
| 5.3.13 EDPIDRn, External Debug Peripheral Identification Registers 5-7 | 336 |
| 5.3.14 EDRCR, External Debug Reserve Control Register | 337 |
| 5.4 AArch32 PMU registers | 338 |
| 5.4.1 AArch32 PMU register summary | 338 |
| 5.4.2 PMCEIDO, Performance Monitors Common Event Identification Register 0 | 339 |
| 5.4.3 PMCEID1, Performance Monitors Common Event Identification Register 1 | 342 |
| 5.4.4 PMCR Performance Monitors Control Register | 3/1/ |

| 5.5 AArch64 PMU registers | 347 |
|-------------------------------------------------------------------------------------|-----|
| 5.5.1 AArch64 PMU register summary | 347 |
| 5.5.2 PMCEIDO_ELO, Performance Monitors Common Event Identification Register O, ELO | 349 |
| 5.5.3 PMCEID1_EL0, Performance Monitors Common Event Identification Register 1, EL0 | 352 |
| 5.5.4 PMCR_ELO, Performance Monitors Control Register, ELO | 353 |
| 5.6 Memory-mapped PMU registers | 356 |
| 5.6.1 Memory-mapped PMU register summary | 356 |
| 5.6.2 PMCFGR, Performance Monitors Configuration Register | 359 |
| 5.6.3 PMCIDRO, Performance Monitors Component Identification Register O | 360 |
| 5.6.4 PMCIDR1, Performance Monitors Component Identification Register 1 | 361 |
| 5.6.5 PMCIDR2, Performance Monitors Component Identification Register 2 | 362 |
| 5.6.6 PMCIDR3, Performance Monitors Component Identification Register 3 | 363 |
| 5.6.7 PMPIDRO, Performance Monitors Peripheral Identification Register O | 363 |
| 5.6.8 PMPIDR1, Performance Monitors Peripheral Identification Register 1 | 364 |
| 5.6.9 PMPIDR2, Performance Monitors Peripheral Identification Register 2 | 365 |
| 5.6.10 PMPIDR3, Performance Monitors Peripheral Identification Register 3 | 366 |
| 5.6.11 PMPIDR4, Performance Monitors Peripheral Identification Register 4 | 366 |
| 5.6.12 PMPIDRn, Performance Monitors Peripheral Identification Register 5-7 | 367 |
| 5.7 PMU snapshot registers | 367 |
| 5.7.1 PMU snapshot register summary | 368 |
| 5.7.2 PMPCSSR, PMU Snapshot Program Counter Sample Register | 368 |
| 5.7.3 PMCIDSSR, PMU Snapshot CONTEXTIDR_EL1 Sample Register | 369 |
| 5.7.4 PMCID2SSR, PMU Snapshot CONTEXTIDR_EL2 Sample Register | 369 |
| 5.7.5 PMSSSR, PMU Snapshot Status Register | 370 |
| 5.7.6 PMOVSSR, PMU Snapshot Overflow Status Register | 371 |
| 5.7.7 PMCCNTSR, PMU Snapshot Cycle Counter Register | 371 |
| 5.7.8 PMEVCNTSRn, PMU Snapshot Cycle Counter Registers 0-5 | 371 |
| 5.7.9 PMSSCR, PMU Snapshot Capture Register | 372 |
| 5.8 AArch64 AMU registers | 372 |
| 5.8.1 AArch64 AMU register summary | 373 |
| 5.8.2 AMCNTENCLR_ELO, Activity Monitors Count Enable Clear Register, ELO | 373 |
| 5.8.3 AMCNTENSET_ELO, Activity Monitors Count Enable Set Register, ELO | 375 |
| 5.8.4 AMCFGR_ELO, Activity Monitors Configuration Register, ELO | 376 |
| 5.8.5 AMUSERENR_ELO, Activity Monitor ELO Enable access, ELO | 377 |
| 5.8.6 AMEVCNTRn_ELO, Activity Monitor Event Counter Register, ELO | 379 |
| 5.8.7 AMEVTYPERn_ELO, Activity Monitor Event Type Register, ELO | 380 |

| 5.9 Memory-mapped AMU registers | 381 |
|----------------------------------------------------------------|-----|
| 5.9.1 Memory-mapped AMU register summary | 382 |
| 5.10 ETM registers | 382 |
| 5.10.1 ETM register summary | 382 |
| 5.10.2 TRCACATRn, Address Comparator Access Type Registers 0-7 | 385 |
| 5.10.3 TRCACVRn, Address Comparator Value Registers 0-7 | 387 |
| 5.10.4 TRCAUTHSTATUS, Authentication Status Register | 387 |
| 5.10.5 TRCAUXCTLR, Auxiliary Control Register | 388 |
| 5.10.6 TRCBBCTLR, Branch Broadcast Control Register | 390 |
| 5.10.7 TRCCCCTLR, Cycle Count Control Register | 391 |
| 5.10.8 TRCCIDCCTLRO, Context ID Comparator Control Register 0 | 392 |
| 5.10.9 TRCCIDCVR0, Context ID Comparator Value Register 0 | 393 |
| 5.10.10 TRCCIDRO, ETM Component Identification Register 0 | 393 |
| 5.10.11 TRCCIDR1, ETM Component Identification Register 1 | 394 |
| 5.10.12 TRCCIDR2, ETM Component Identification Register 2 | 395 |
| 5.10.13 TRCCIDR3, ETM Component Identification Register 3 | 395 |
| 5.10.14 TRCCLAIMCLR, Claim Tag Clear Register | 396 |
| 5.10.15 TRCCLAIMSET, Claim Tag Set Register | 397 |
| 5.10.16 TRCCNTCTLRO, Counter Control Register 0 | 398 |
| 5.10.17 TRCCNTCTLR1, Counter Control Register 1 | 399 |
| 5.10.18 TRCCNTRLDVRn, Counter Reload Value Registers 0-1 | 401 |
| 5.10.19 TRCCNTVRn, Counter Value Registers 0-1 | 401 |
| 5.10.20 TRCCONFIGR, Trace Configuration Register | 402 |
| 5.10.21 TRCDEVAFFO, Device Affinity Register O | 405 |
| 5.10.22 TRCDEVAFF1, Device Affinity Register 1 | 405 |
| 5.10.23 TRCDEVARCH, Device Architecture Register | 405 |
| 5.10.24 TRCDEVID, Device ID Register | 406 |
| 5.10.25 TRCDEVTYPE, Device Type Register | 407 |
| 5.10.26 TRCEVENTCTLOR, Event Control O Register | 407 |
| 5.10.27 TRCEVENTCTL1R, Event Control 1 Register | 409 |
| 5.10.28 TRCEXTINSELR, External Input Select Register | 411 |
| 5.10.29 TRCIDRO, ID Register 0 | 412 |
| 5.10.30 TRCIDR1, ID Register 1 | 414 |
| 5.10.31 TRCIDR2, ID Register 2 | |
| 5.10.32 TRCIDR3, ID Register 3 | |
| 5.10.33 TRCIDR4, ID Register 4 | 418 |

| 5.10.34 TRCIDR5, ID Register 5 | | 420 |
|-------------------------------------------|--------------------------------|-----|
| 5.10.35 TRCIDR8, ID Register 8 | | 421 |
| 5.10.36 TRCIDR9, ID Register 9 | | 422 |
| 5.10.37 TRCIDR10, ID Register 10 | | 422 |
| 5.10.38 TRCIDR11, ID Register 11 | | 423 |
| 5.10.39 TRCIDR12, ID Register 12 | | 423 |
| 5.10.40 TRCIDR13, ID Register 13 | | 424 |
| 5.10.41 TRCIMSPECO, Implementation Spe | ecific Register O | 424 |
| 5.10.42 TRCITATBIDR, Integration ATB Ide | ntification Register | 425 |
| 5.10.43 TRCITCTRL, Integration Mode Cor | itrol Register | 426 |
| 5.10.44 TRCITIATBINR, Integration Instruc | tion ATB In Register | 426 |
| 5.10.45 TRCITIATBOUTR, Integration Instr | uction ATB Out Register | 427 |
| 5.10.46 TRCITIDATAR, Integration Instruct | ion ATB Data Register | 428 |
| 5.10.47 TRCLAR, Software Lock Access Re | gister | 429 |
| 5.10.48 TRCLSR, Software Lock Status Reg | gister | 430 |
| 5.10.49 TRCOSLAR, OS Lock Access Regis | ter | 430 |
| 5.10.50 TRCOSLSR, OS Lock Status Regist | er | 431 |
| 5.10.51 TRCPDCR, Power Down Control F | Register | 432 |
| 5.10.52 TRCPDSR, Power Down Status Re | gister | 433 |
| 5.10.53 TRCPIDRO, ETM Peripheral Identif | ication Register O | 434 |
| 5.10.54 TRCPIDR1, ETM Peripheral Identif | ication Register 1 | 434 |
| 5.10.55 TRCPIDR2, ETM Peripheral Identif | ication Register 2 | 435 |
| 5.10.56 TRCPIDR3, ETM Peripheral Identif | ication Register 3 | 436 |
| 5.10.57 TRCPIDR4, ETM Peripheral Identif | ication Register 4 | 437 |
| 5.10.58 TRCPIDRn, ETM Peripheral Identifi | cation Registers 5-7 | 437 |
| 5.10.59 TRCPRGCTLR, Programming Contr | ol Register | 438 |
| 5.10.60 TRCRSCTLRn, Resource Selection | Control Registers 2-15 | 438 |
| 5.10.61 TRCSEQEVRn, Sequencer State Tra | ansition Control Registers 0-2 | 440 |
| 5.10.62 TRCSEQRSTEVR, Sequencer Reset | Control Register | 441 |
| 5.10.63 TRCSEQSTR, Sequencer State Reg | ister | 442 |
| 5.10.64 TRCSSCCRO, Single-Shot Compara | tor Control Register O | 443 |
| 5.10.65 TRCSSCSRO, Single-Shot Compara | tor Status Register O | 444 |
| 5.10.66 TRCSTATR, Status Register | | 445 |
| 5.10.67 TRCSYNCPR, Synchronization Peri | od Register | 446 |
| 5.10.68 TRCTRACEIDR, Trace ID Register | | 446 |
| 5.10.69 TRCTSCTLR, Global Timestamp Co | ontrol Register | 447 |

| 5.10.70 TRCVICTLR, ViewInst Main Control Register | 448 |
|---------------------------------------------------------------------------------|-----|
| 5.10.71 TRCVIIECTLR, ViewInst Include-Exclude Control Register | 450 |
| 5.10.72 TRCVISSCTLR, ViewInst Start-Stop Control Register | 451 |
| 5.10.73 TRCVMIDCVR0, VMID Comparator Value Register 0 | 452 |
| 5.10.74 TRCVMIDCCTLR0, Virtual context identifier Comparator Control Register 0 | 452 |
| A Cortex®-A76AE Core AArch32 UNPREDICTABLE behaviors | 454 |
| A.1 Use of R15 by Instruction | 454 |
| A.2 Load/Store accesses crossing page boundaries | 454 |
| A.3 Armv8 Debug unpredictable behaviors | |
| A.4 Other UNPREDICTABLE behaviors | 457 |
| B Revisions | 459 |
| B.1 Revisions | 459 |

1 Introduction

1.1 Product revision status

The $r_x p_y$ identifier indicates the revision status of the product described in this manual, for example, $r_1 p_2$, where:

 r_x Identifies the major revision of the product, for example, r1.

py Identifies the minor revision or modification status of the product, for example, p2.

1.2 Intended audience

This manual is for system designers, system integrators, and programmers who are designing or programming a *System on Chip* (SoC) that uses an Arm core.

1.3 Conventions

The following subsections describe conventions used in Arm documents.

Glossary

The Arm® Glossary is a list of terms used in Arm documentation, together with definitions for those terms. The Arm Glossary does not contain terms that are industry standard unless the Arm meaning differs from the generally accepted meaning.

See the Arm Glossary for more information: developer.arm.com/glossary.

Typographic conventions

| Convention | Use |
|----------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| italic | Citations. |
| bold | Interface elements, such as menu names. |
| | Signal names. |
| | Terms in descriptive lists, where appropriate. |
| monospace | Text that you can enter at the keyboard, such as commands, file and program names, and source code. |
| monospace bold | Language keywords when used outside example code. |
| monospace <u>underline</u> | A permitted abbreviation for a command or option. You can enter the underlined text instead of the full command or option name. |


| Convention | Use |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <and></and> | Encloses replaceable terms for assembler syntax where they appear in code or code fragments. |
| | For example: |
| | MRC p15, 0, <rd>, <crn>, <opcode_2></opcode_2></crn></rd> |
| SMALL CAPITALS | Terms that have specific technical meanings as defined in the Arm® Glossary. For example, IMPLEMENTATION DEFINED, IMPLEMENTATION SPECIFIC, UNKNOWN, and UNPREDICTABLE. |
| Caution | Recommendations. Not following these recommendations might lead to system failure or damage. |
| Warning | Requirements for the system. Not following these requirements might result in system failure or damage. |
| Danger | Requirements for the system. Not following these requirements will result in system failure or damage. |
| Note | An important piece of information that needs your attention. |
| - Control of the cont | A useful tip that might make it easier, better or faster to perform a task. |
| Remember | A reminder of something important that relates to the information you are reading. |

Timing diagrams

The following figure explains the components used in timing diagrams. Variations, when they occur, have clear labels. You must not assume any timing information that is not explicit in the diagrams.

Shaded bus and signal areas are undefined, so the bus or signal can assume any value within the shaded area at that time. The actual level is unimportant and does not affect normal operation.

Figure 1-1: Key to timing diagram conventions

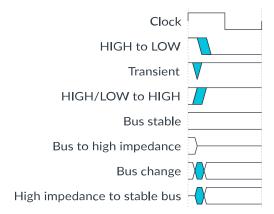

Signals

The signal conventions are:

Signal level

The level of an asserted signal depends on whether the signal is active-HIGH or active-LOW. Asserted means:

- HIGH for active-HIGH signals.
- LOW for active-LOW signals.

Lowercase n

At the start or end of a signal name, n denotes an active-LOW signal.

1.4 Additional reading

This document contains information that is specific to this product. See the following documents for other relevant information:

Table 1-2: Arm publications

| Document name | Document ID | Licensee only |
|---------------------------------------------------------------------------------------------------------------------|-------------|---------------|
| Arm® Architecture Reference Manual Armv8, for A-profile architecture | DDI 0487 | No |
| Arm® Cortex®-A76AE Core Cryptographic Extension Technical Reference Manual | 101395 | No |
| Arm® Cortex®-A76AE Core Configuration and Sign-off Guide | 101393 | Yes |
| Arm® Cortex®-A76AE Core Integration Manual | 101394 | Yes |
| Arm® DynamIQ [™] Shared Unit AE Integration Manual | 101324 | Yes |
| Arm® DynamIQ [™] Shared Unit AE Technical Reference Manual | 101322 | No |
| Arm® DynamIQ [™] Shared Unit AE Configuration and Sign-off Guide | 101323 | Yes |
| Arm® CoreSight™ ELA-500 Embedded Logic Analyzer Technical Reference Manual | 100127 | No |
| AMBA® AXI and ACE Protocol Specification | IHI 0022 | No |
| AMBA® APB Protocol Version 2.0 Specification | IHI 0024 | No |
| AMBA® 5 CHI Architecture Specification | IHI 0050 | No |
| Arm® CoreSight™ Architecture Specification v3.0 | IHI 0029 | No |
| Arm® Debug Interface Architecture Specification, ADIv5.0 to ADIv5.2 | IHI 0031 | No |
| AMBA® ATB Protocol Specification | IHI 0032 | No |
| Arm® Generic Interrupt Controller Architecture Specification, GIC architecture version 3 and version 4 | IHI 0069 | No |
| Arm® Embedded Trace Macrocell Architecture Specification ETMv4 | IHI 0064 | No |
| Arm® Embedded Trace Macrocell Architecture Specification ETMv4 | IHI 0064 | No |
| Arm® Reliability, Availability, and Serviceability (RAS) Specification, Armv8, for the Armv8-A architecture profile | DDI 0587 | No |

Table 1-3: Other publications

| Document ID | Organization | Document name |
|-------------|--------------|----------------------------------------------------------------------------|
| - | - | ANSI/IEEE Std 754-2008, IEEE Standard for Binary Floating-Point Arithmetic |



Arm® floating-point terminology is largely based on the earlier ANSI/IEEE Std 754-1985 issue of the standard. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture for more information.



Arm tests its PDFs only in Adobe Acrobat and Acrobat Reader. Arm cannot guarantee the quality of its documents when used with any other PDF reader.

Adobe PDF reader products can be downloaded at http://www.adobe.com

2 Functional description

This part describes the main functionality of the Cortex®-A76AE core.

2.1 Introduction

This chapter provides an overview of the Cortex®-A76AE core and its features.

2.1.1 About the core

The Cortex®-A76AE core is a high-performance and low-power Arm product that implements the Arm®v8-A architecture inside the *DynamIQ Shared Unit AE* (DSU-AE) cluster.

The Cortex®-A76AE core supports three DSU-AE execution modes:

- Split-mode, where the cores in each core pair execute independently of each other.
- Lock-mode, where one of the cores in a core pair functions as a redundant copy of the primary function core.
- Hybrid-mode, where the cores execute independently, as in Split-mode, while the DSU-AE executes in lock-step, as in Lock-mode.



When running in Lock-mode, a core pair is defined as a pair of cores that are viewed architecturally by the DSU-AE as a single core. For more information on the DSU-AE and running in Split-mode, Lock-mode, or Hybrid-mode, see Functional description in the $Arm^{\text{(B)}}$ DynamlQ^M Shared Unit AE Technical Reference Manual.

The Cortex®-A76AE core supports:


- The Arm®v8.2-A extension.
- The Reliability, Availability, and Serviceability (RAS) extension.
- The Load acquire (LDAPR) instructions introduced in the Arm®v8.3-A extension
- The Dot Product support instructions introduced in the Arm®v8.4-A extension.
- The traps for ELO and EL1 cache controls, PSTATE Speculative Store Bypass Safe (SSBS) bit and the speculation barriers (CSDB, SSBB, PSSBB) instructions introduced in the Arm®v8.5-A extension.

The Cortex®-A76AE core has a L1 memory system and a private, integrated L2 cache. It also includes a superscalar, variable-length, out-of-order pipeline.

The Cortex®-A76AE core cannot be instantiated as a single core. The Cortex®-A76AE core must be used in a core pair configuration with a maximum of two core pairs in each cluster, for a total of four cores.


The following figure shows an example of two Cortex®-A76AE core pairs in Lock-mode.

Figure 2-1: Example Cortex®-A76AE Lock-mode configuration

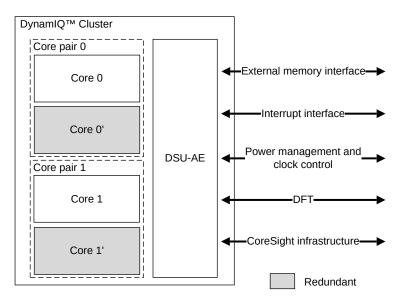

The following figure shows an example of four Cortex®-A76AE cores in Split-mode.

Figure 2-2: Example Cortex®-A76AE Split-mode configuration

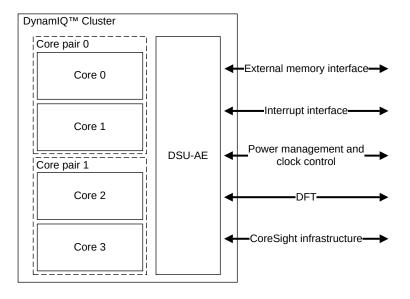

2.1.2 Features

The Cortex®-A76AE core includes the following features:

Core features

- 40-bit Physical Address (PA).
- A Memory Management Unit (MMU).
- Optional Cryptographic Extension.
- Armv8.4 Dot Product support instruction.
- Superscalar, variable-length, out-of-order pipeline.
- Support for Arm TrustZone[®] technology.
- Support for Page-Based Hardware Attributes (PBHA).
- Reliability, Availability, and Serviceability (RAS) Extension.
- Full implementation of the Armv8.2-A A64, A32, and T32 instruction sets.
- Generic Interrupt Controller (GICv3 or GICv4) CPU interface to connect to an external distributor.
- Generic Timers interface supporting 64-bit count input from an external system counter.
- An integrated execution unit that implements the Advanced SIMD and floating-point architecture support.
- AArch32 Execution state at Exception level ELO only. AArch64 Execution state at all Exception levels (ELO to EL3).
- Implementation of the Split-mode, Lock-mode, or Hybrid-mode with the ability to choose a mode based on the *DynamlQ Shared Unit AE* (DSU-AE) CEMODE input signal during cluster Cold reset.

Cache features

- Separate L1 data and instruction caches.
- Private, unified data and instruction L2 cache.
- L1 and L2 memory protection in the form of *Error Correcting Code* (ECC) or parity on RAM instances which affect functionality.

Debug features

- Armv8.2 debug logic.
- Performance Monitoring Unit (PMU).
- Optional CoreSight Embedded Logic Analyzer (ELA).
- Embedded Trace Macrocell (ETM) that supports instruction trace only.

See the Arm® Architecture Reference Manual Armv8, for A-profile architecture for more information.

2.1.3 Split-Lock

The *DynamlQ Shared Unit AE* (DSU-AE) provides a boot-time option for the cluster to execute in either Split-mode, Lock-mode, or Hybrid-mode.

The Split-mode, Lock-mode, and Hybrid-mode extend the functionality of a typical *Dual-Core Lock-Step* (DCLS) system by changing its execution mode at reset. For instance, while some modes enable more logical cores, others provide core redundancy. The potential of core redundancy requires an even number of cores in the DSU-AE cluster.



The DSU-AE **CEMODE** input signal determines whether the cluster enters the Lock-mode, Split-mode, or Hybrid-mode at reset.

In Split-mode, cores execute independently. The DCLS-related comparators, timeout detectors, and redundant DSU-AE logic are clock gated and idle. Each core has its own independent clock. As a result, each core can be powered down independently.

In Lock-mode, one of the cores in a core pair functions as a redundant copy of the primary function core. A core pair is defined as a pair of cores that are viewed architecturally as a single core when executing in Lock-mode. The same inputs drive both the primary logic and the redundant logic, and the redundant core executes in lock-step with the primary function core. Therefore, both cores in a core pair must be of identical configuration with the same microarchitecture and configuration parameters.

Furthermore, in Lock-mode, the DSU-AE cluster utilizes redundant logic to execute in lock-step with the primary logic. For this reason, the entire cluster is executing as a DCLS system. The primary logic drives the outputs to the system, although these outputs are compared with the redundant logic. Any divergence is reported to the system. If a fault is detected, both of the cores are permitted to continue execution but the results are **UNPREDICTABLE**.

Hybrid-mode is a mixed execution mode where the cores execute independently, as in Split-mode, while the DSU-AE executes in lock-step, as in Lock-mode. Therefore, in Hybrid-mode, the DSU-AE cluster provides a partial DCLS solution with the following benefits:

- Compared to Lock-mode, Hybrid-mode offers better cluster performance, since the cores execute independently of each other.
- Compared to Split-mode, Hybrid-mode offers better cluster fault tolerance, since the DSU-AE executes in lock-step.



From a system or software perspective, there is no difference between the Splitmode and Hybrid-mode.

For more information on Split-mode, Lock-mode, and Hybrid-mode, see Functional description in the $Arm^{\mathbb{R}}$ Dynaml $Q^{\mathbb{M}}$ Shared Unit AE Technical Reference Manual.

2.1.4 Implementation options

All Cortex®-A76AE cores in the cluster must have the same build-time configuration options, except for the L2 cache size.

The following table lists the implementation options for a core.

Table 2-1: Core implementation options

| Feature | Range of options | Notes |
|----------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| L2 cache size | 128KB256KB512KB | - |
| L2 transaction queue size Cryptographic Extension | 24 entries36 entries48 entriesCan be included or not included. | There are two identical L2 banks in the Cortex®-A76AE core that can be configured with 12, 18, or 24 L2 transaction queue entries per L2 bank. The Cryptographic Extension is a separately licensable product. |
| Core bus width | 128-bit, 256-bit | This specifies the bus width between the core and the DSU-AE CPU bridge. The legal core bus width and master bus width combinations are: • If the core bus width is 128 bits, the master bus interface can be any of the following options. • Single 128-bit wide ACE interface. • Dual 128-bit wide ACE interfaces. • Single 128-bit wide CHI interface. • Single 256-bit wide CHI interface. • If the core bus width is 256 bits, the master bus interface is a single 256-bit wide CHI interface. |
| CoreSight Embedded Logic Analyzer (ELA) | Optional support | Support for integrating CoreSight ELA-500. CoreSight ELA-500 is a separately licensable product. |
| ELA RAM Address size | See the Arm [®] CoreSight [™] ELA-500 Embedded Logic Analyzer Technical Reference Manual for the full supported range. | - |
| Page-Based Hardware Attributes (PBHA) | Can be included or not included. | Support for PBHA. For more information, see 2.5.7 Page-based hardware attributes on page 52. |

2.1.5 Supported standards and specifications

The Cortex®-A76AE core implements the Arm®v8-A architecture and some architecture extensions. It also supports interconnect, interrupt, timer, debug, and trace architectures.

Table 2-2: Compliance with standards and specifications

| Architecture specification or standard | Version | Notes |
|----------------------------------------|---------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|
| Arm architecture | Arm®v8-A | AArch32 Execution state at Exception level ELO only. AArch64 Execution state at all Exception levels (ELO-EL3). |
| | | A64, A32, and T32 instruction sets. |
| Arm architecture extensions | Arm®v8.1-A extensions | The Cortex®-A76AE core implements the LDAPR instructions that are introduced in the Arm®v8.3-A extensions. |
| | Arm®v8.2-A extensions | The Cortex®-A76AE core implements the SDOT and UDOT instructions that are introduced in the Arm®v8.4-A extensions. |
| | Cryptographic Extension | The Cortex®-A76AE core implements the PSTATE Speculative Store Bypass Safe (SSBS) bit that is introduced in the |
| | Reliability, Availability, and Serviceability (RAS) extension | Arm®v8.5-A extension. |
| | Arm®v8.3-A extensions | |
| | Arm®v8.4-A Dot Product support instructions | |
| | Arm®v8.5-A extensions | |
| Generic Interrupt Controller | • GICv3 | - |
| | • GICv4 | |
| Generic Timer | Arm®v8-A | 64-bit external system counter with timers within each core. |
| Performance Monitoring Unit | PMUv3 | - |
| Debug | Arm®v8-A | With support for the debug features that are added by the Arm®v8.2-A extensions. |
| CoreSight | CoreSightv3 | - |
| Embedded Trace Macrocell | ETMv4.2 | Instruction trace only. |

See 1.4 Additional reading on page 19 for a list of architectural references.

2.1.6 Test features

The Cortex®-A76AE core provides test signals that enable the use of both *Automatic Test Pattern Generation* (ATPG) and *Memory Built-In Self Test* (MBIST) to test the core processing logic and memory arrays.

For more information, see the Arm® Cortex®-A76AE Core Integration Manual.

2.1.7 Design tasks

The Cortex®-A76AE core is delivered as a synthesizable *Register Transfer Level* (RTL) description in Verilog HDL. Before you can use the Cortex®-A76AE core, you must implement it, integrate it, and program it.

A different party can perform each of the following tasks. Each task can include implementation and integration choices that affect the behavior and features of the core.

Implementation

The implementer configures and synthesizes the RTL to produce a hard macrocell. This task includes integrating RAMs into the design.

Integration

The integrator connects the macrocell into a SoC. This task includes connecting it to a memory system and peripherals.

Programming

In the final task, the system programmer develops the software to configure and initialize the core and tests the application software.

The operation of the final device depends on the following:

Build configuration

The implementer chooses the options that affect how the RTL source files are pre-processed. These options usually include or exclude logic that affects one or more of the area, maximum frequency, and features of the resulting macrocell.

Configuration inputs

The integrator configures some features of the core by tying inputs to specific values. These configuration settings affect the start-up behavior before any software configuration is made. They can also limit the options available to the software.

Software configuration

The programmer configures the core by programming particular values into registers. The configuration choices affect the behavior of the core.

2.1.8 Product revisions

This section indicates the first release and, in subsequent releases, describes the differences in functionality between product revisions.

rOpO First release.

r1p0 Added support for Page-Based Hardware Attributes (PBHA).

r1p1 No functional changes to core for this revision.

2.2 Technical overview

This chapter describes the structure of the Cortex®-A76AE core.

2.2.1 Components

In a standalone configuration, there can be up to four Cortex®-A76AE cores and a *DynamlQ Shared Unit AE* (DSU-AE) that connects the cores to an external memory system.


For more information about the DSU-AE, see the $Arm^{\mathbb{R}}$ Dynaml $Q^{\mathbb{M}}$ Shared Unit AE Technical Reference Manual.

The main components of the Cortex®-A76AE core are:

- Instruction fetch
- Instruction decode
- Register rename
- Instruction issue
- Execution pipelines
- L1 data memory system
- L2 memory system

The following figure includes a top-level functional diagram of a core pair in Split-mode. In Lock-mode, Core 1 is named Core 0'.

Figure 2-3: Cortex®-A76AE core overview

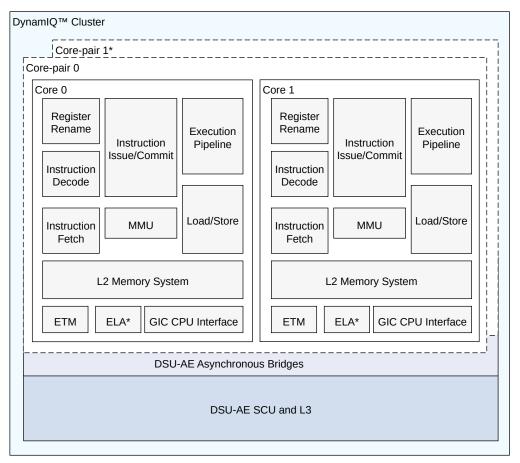

^{*} Optional



There are multiple asynchronous bridges between the Cortex®-A76AE core and the DSU-AE. Only the coherent interface between the Cortex®-A76AE core and the DSU-AE can be configured to run synchronously, however it does not affect the other interfaces such as debug, trace, and *Generic Interrupt Controller* (GIC) which are always asynchronous. For more information on how to set the coherent interface to run either synchronously or asynchronously, see *Configuration Guidelines* in the $Arm^{\text{\tiny ®}}$ $DynamIQ^{\text{\tiny TM}}$ *Shared Unit AE Configuration and Sign-off Guide*.

Related information

Memory Management Unit on page 44

L1 memory system on page 52

L2 memory system on page 73

Generic Interrupt Controller CPU interface on page 82

Debug on page 298

Performance Monitoring Unit on page 302

Embedded Trace Macrocell on page 312

2.2.1.1 Instruction fetch

The instruction fetch unit fetches instructions from the L1 instruction cache and delivers the instruction stream to the instruction decode unit.

The instruction fetch unit includes:

- A 64KB, 4-way, set associative L1 instruction cache with 64-byte cache lines and optional parity protection.
- A fully associative L1 instruction TLB with native support for 4KB, 16KB, 64KB, 2MB, and 32MB page sizes.
- A dynamic branch predictor.

2.2.1.2 Instruction decode

The instruction decode unit supports the A32, T32, and A64 instruction sets. It also supports Advanced SIMD and floating-point instructions in each instruction set.

2.2.1.3 Register rename

The register rename unit performs register renaming to facilitate out-of-order execution and dispatches decoded instructions to various issue queues.

2.2.1.4 Instruction issue

The instruction issue unit controls when the decoded instructions are dispatched to the execution pipelines. It includes issue queues for storing instruction pending dispatch to execution pipelines.

2.2.1.5 Execution pipeline

The execution pipeline includes:

- Integer execute unit that performs arithmetic and logical data processing operations.
- Vector execute unit that performs Advanced SIMD and floating-point operations. Optionally, it can execute the cryptographic instructions.

2.2.1.6 L1 data memory system

The L1 data memory system executes load and store instructions and encompasses the L1 data side memory system. It also services memory coherency requests.

The load/store unit includes:

Functional description

- A 64KB, 4-way, set associative L1 data cache with 64-byte cache lines and optional ECC protection per 32 bits.
- A fully associative L1 data TLB with native support for 4KB, 16KB, 64KB, 2MB, and 512MB page sizes.

2.2.1.7 L2 memory system

The L2 memory system services L1 instruction and data cache misses in the Cortex®-A76AE core.

The L2 memory system includes:

- An 8-way set associative L2 cache with data ECC protection per 64 bits. The L2 cache is configurable with sizes of 128KB, 256KB, or 512KB.
- An interface with the *DynamlQ Shared Unit AE* (DSU-AE) configurable at implementation time for synchronous or asynchronous operation.

2.2.2 Interfaces

The Cortex®-A76AE core has several interfaces to connect it to a SoC. The DynamlQ Shared Unit AE (DSU-AE) manages all interfaces.

For information on the interfaces, see the $Arm^{\mathbb{R}}$ Dynaml $Q^{\mathbb{M}}$ Shared Unit AE Technical Reference Manual.

2.2.3 About system control

The System registers control and provide status information for the functions that the core implements.

The main functions of the System registers are:

- Overall system control and configuration
- Memory Management Unit (MMU) configuration and management
- Cache configuration and management
- System performance monitoring
- Generic Interrupt Controller (GIC) configuration and management

The System registers are accessible in the AArch64 ELO-EL3 and AArch32 ELO Execution state. Some of the System registers are accessible through the external debug interface.

2.2.4 About the Generic Timer

The Generic Timer can schedule events and trigger interrupts that are based on an incrementing counter value. It generates timer events as active-LOW interrupt outputs and event streams.

The Cortex®-A76AE core provides a set of timer registers. The timers are:

- An EL1 Non-secure physical timer
- An EL2 Hypervisor physical timer
- An EL3 Secure physical timer
- A virtual timer
- A Hypervisor virtual timer

The Cortex®-A76AE core does not include the system counter. The system counter resides in the SoC, and its value is distributed to the core over a 64-bit bus.

For more information on the Generic Timer, see the $Arm^{\mathbb{R}}$ DynamlQ^{\mathbb{T}} Shared Unit AE Technical Reference Manual and the $Arm^{\mathbb{R}}$ Architecture Reference Manual Armv8, for A-profile architecture.

2.3 Clocks, resets, and input synchronization

This chapter describes the clocks, resets, and input synchronization of the Cortex®-A76AE core.

2.3.1 About clocks, resets, and input synchronization

The Cortex®-A76AE core supports hierarchical clock gating.

The Cortex®-A76AE core contains several interfaces that connect to other components in the system. These interfaces can be in the same clock domain or in other clock domains.

For information about clocks, resets, and input synchronization, see the $Arm^{\mathbb{R}}$ Dynaml $Q^{\mathbb{M}}$ Shared Unit AE Technical Reference Manual.

2.3.2 Asynchronous interface

Your implementation can include an optional asynchronous interface between the core and the DynamlQ Shared Unit AE (DSU-AE) top level.

See Implementation options in the Arm^{\otimes} DynamlQ^{$^{\text{M}}$} Shared Unit AE Technical Reference Manual for more information.

2.4 Power management

This chapter describes the power domains and the power modes in the Cortex®-A76AE core.

2.4.1 About power management

The Cortex®-A76AE core provides mechanisms to control both dynamic and static power dissipation.

The dynamic power management includes the following features:

- Architectural clock gating.
- Per-core Dynamic Voltage Frequency Scaling (DVFS).



DVFS temporarily gates the source clock to lock a new frequency. If the source clock is gated too long, it can lead to a false divergence being reported in Lockmode. In Lock-mode, DVFS is only safe and allowed when:

- The targeted clock domain is idle.
- The core pair is either in retention mode or Off mode.

The static power management includes the following features:

- Powerdown.
- Dynamic core retention schemes to lower the voltage of a core pair.

Related information


- 2.4.3 Power domains on page 34
- 2.4.5 Power control on page 38
- 2.4.8 Power domain states for power modes on page 42

2.4.2 Voltage domains

The Cortex®-A76AE core supports a VCPU voltage domain and a VSYS voltage domain.

The following figure shows the VCPU and VSYS voltage domains in each Cortex®-A76AE core pair and in the *DynamlQ Shared Unit AE* (DSU-AE). The example shows a configuration with two Cortex®-A76AE core pairs, where each core pair is driven by the same voltage domain.

Figure 2-4: Cortex®-A76AE voltage domains

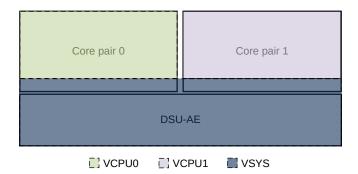

Asynchronous bridge logic exists between the voltage domains. The Cortex®-A76AE core processing logic and core clock domain of the asynchronous bridge are in the VCPU voltage domain. The DSU-AE clock domain of the asynchronous bridge is in the VSYS voltage domain.



You can tie VCPU and VSYS to the same supply if the core pair is not required to support Dynamic Voltage and Frequency Scaling (DVFS).

In Lock-mode, the core pair supports DVFS, and each core in a core pair has the same voltage domain and clock domain.

In Split-mode, each core in a core pair supports independent *Dynamic Frequency Scaling* (DFS), and each core in a core pair has a separate power domain. This separate power domain allows each core in a core pair to be powered down independently.

2.4.3 Power domains

The Cortex®-A76AE core contains a Core power domain, (PDCPU) and a core top-level SYS power domain, PDSYS where all the Cortex®-A76AE core I/O signals go through .

The PDCPU power domain contains all core processing logic excluding the cluster clock domain side of the bridge.


The PDSYS power domain contains the cluster clock domain side of the bridge.



There are additional system power domains in the DynamlQ Shared Unit AE (DSU-AE). See the Arm^{\otimes} DynamlQ $^{\top}$ Shared Unit AE Technical Reference Manual for information.

The following figure shows an example of how the voltage and power domains are organized.

Figure 2-5: Cortex®-A76AE core power domain diagram

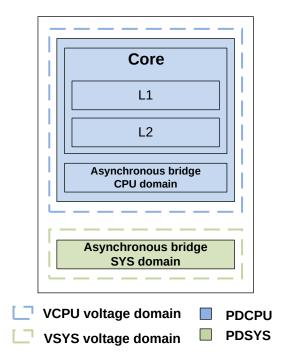

The following table describes the power domains that the Cortex®-A76AE core supports.


Table 2-3: Power domain description

| Power domain | Description |
|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PDCPU <n></n> | The domain includes all core processing logic, part of the core asynchronous bridge that belongs to the VCPU domain, and the L1 and L2 RAMs. <n> is the number in the range 0-3. The number represents core 0, core 1, core 2, and core 3. If a core is not present, then the corresponding power domain is not present.</n> |
| PDSYS | The domain is the interface between the Cortex®-A76AE and the DSU-AE. It contains the cluster clock domain logic of the CPU bridge. The CPU bridge contains all asynchronous bridges for crossing clock domains. The CPU bridge is split, with one half of each bridge in the core clock domain and the other half in the relevant cluster domain. All core I/O signals go through the CPU bridge and the SYS power domain. |

Clamping cells between power domains are inferred through power intent files rather than instantiated in the RTL.

The following figure shows the organization of the power domains for a single Cortex®-A76AE core pair. The colored boxes indicate the PDCPU and PDSYS power domains, with respective voltage domains shown in dotted lines.

Figure 2-6: Cortex®-A76AE core power domains

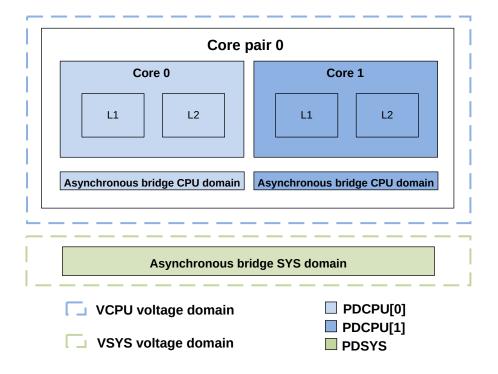



For Lock-mode, the cores in this figure would be named Core 0 and Core 0'.

See the Arm® Cortex®-A76AE Core Configuration and Sign-off Guide for more information on power domains.

2.4.4 Architectural clock gating modes

When the Cortex®-A76AE core is in standby mode, it is architecturally clock gated at the top of the clock tree.

Wait for Interrupt (WFI) and Wait for Event (WFE) are features of Arm®v8-A architecture that put the core in a low-power standby mode by architecturally disabling the clock at the top of the clock tree. The core is fully powered and retains all the state in standby mode.

There is a small dynamic power overhead from the logic that is required to wake up the core from WFI low-power state. Other than this, the power that is drawn is reduced to static leakage current only.

2.4.4.1 Core Wait for Interrupt

WFI uses a locking mechanism, based on events, to put the core in a low-power state by disabling most of the clocks in the core, while keeping the core powered up.

When the core executes the wfi instruction, the core waits for all instructions in the core, including explicit memory accesses, to retire before it enters a low-power state. The wfi instruction also ensures that store instructions have updated the cache or have been issued to the L3 memory system.

While the core is in WFI low-power state, the clocks in the core are temporarily enabled without causing the core to exit WFI low-power state when any of the following events are detected:

- An L3 snoop request that must be serviced by the core data caches.
- A cache or TLB maintenance operation that must be serviced by the core L1 instruction cache, data cache, TLB, or L2 cache.
- An APB access to the debug or trace registers residing in the core power domain.
- A GIC CPU access through the AXI4 stream channel.

Exit from WFI low-power state occurs when one of the following occurs:

- The core detects one of the WFI wake-up events.
- The core detects a reset.

For more information, see the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

2.4.4.2 Core Wait for Event

Wait For Event (WFE) uses a locking mechanism, based on events, to put the core in a low-power state by disabling most of the clocks in the core, while keeping the core powered up.

When the core executes the \mathtt{wff} instruction, the core waits for all instructions in the core, including explicit memory accesses, to retire before it enters a low-power state. The \mathtt{wfi} instruction also ensures that store instructions have updated the cache or have been issued to the L3 memory system.

If the event register is set, execution of WFE does not cause entry into standby state, but clears the event register.

While the core is in WFE low-power state, the clocks in the core are temporarily enabled without causing the core to exit WFE low-power state when any of the following events are detected:

- An L3 snoop request that must be serviced by the core data caches.
- A cache or TLB maintenance operation that must be serviced by the core L1 instruction cache, data cache, TLB, or L2 cache.
- An APB access to the debug or trace registers residing in the core power domain.
- A GIC CPU access through the AXI4 stream channel.

Exit from WFE low-power state occurs when one of the following occurs:

- The core detects one of the WFE wake-up events.
- The **EVENTI** input signal is asserted.
- The core detects a reset.

For more information, see the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

2.4.5 Power control

All power mode transitions are performed at the request of the power controller, using a P-Channel interface to communicate with the Cortex®-A76AE core.


There is one P-Channel per core, plus one P-Channel for the cluster. The Cortex®-A76AE core provides the current requirements on the **PACTIVE** signals, so that the power controller can make decisions and request any change with **PREQ** and **PSTATE**. The Cortex®-A76AE core then performs any actions necessary to reach the requested power mode, such as gating clocks, flushing caches, or disabling coherency, before accepting the request.

If the request is not valid, either because of an incorrect transition or because the status has changed so that state is no longer appropriate, then the request is denied. The power mode of each core can be independent of other cores in the cluster, however the cluster power mode is linked to the mode of the cores.

2.4.6 Core power modes

The following figure shows the supported modes for each core domain P-Channel, and the legal transitions between them.

Figure 2-7: Cortex®-A76AE core power domain mode transitions

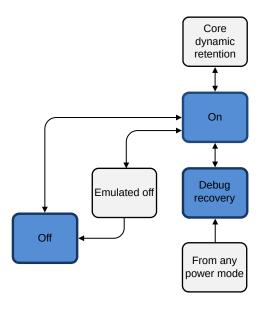

The blue modes indicate the modes that the channel can be initialized into.

2.4.6.1 On mode

In this mode, the core is on and fully operational.

The core can be initialized into the On mode. If the core does not use P-Channel, you can tie the core in the On mode by tying **PREQ** LOW.

When a transition to the On mode completes, all caches are accessible and coherent. Other than the normal architectural steps to enable caches, no additional software configuration is required.

When the core domain P-Channel is initialized into the On mode, either as a shortcut for entering that mode or as a tie-off for an unused P-Channel, it is an assumed transition from the Off mode. This includes an invalidation of any cache RAM within the core domain.

Functional description

2.4.6.2 Off mode

The Cortex®-A76AE core supports a full Shutdown mode where power can be removed completely and no state is retained.

The shutdown can be for either the whole cluster, for an individual core when in Split-mode, or for a core pair when in Lock-mode.

In this mode, all core processing logic and RAMs are off. The domain is inoperable and all core state is lost. The L1 and L2 caches are disabled, flushed and the core is removed from coherency automatically on transition to Off mode.

A Cold reset can reset the core in this mode.

The core P-Channel can be initialized into this mode.

An attempted debug access when the core domain is off returns an error response on the internal debug interface indicating the core is not available.

2.4.6.3 Fmulated off mode

In this mode, all Core domain logic and RAMs are kept on. However, core Warm reset can be asserted externally to emulate a powerdown scenario while keeping core debug state and allowing debug access.

All Debug registers must retain their mode and be accessible from the external debug interface. All other functional interfaces behave as if the core was in Off mode.

2.4.6.4 Core dynamic retention mode

In this mode, all core processing logic and RAMs are in retention and the core domain is inoperable. The core can be entered into this power mode when it is in *Wait For Interrupt* (WFI) or *Wait For Event* (WFE) mode.

For both Split-mode and Lock-mode, Core dynamic retention mode must be enabled at the core pair level granularity.

The Core dynamic retention mode can be enabled and disabled separately for WFI and WFE by software running on the core. Separate timeout values can be programmed for entry into this mode from WFI and WFE mode:

- Use the CPUPWRCTLR.WFI_RET_CTRL register bits to program timeout values for entry into Core dynamic retention mode from WFI mode.
- Use the CPUPWRCTLR.WFE_RET_CTRL register bits to program timeout values for entry into Core dynamic retention mode from WFE mode.

The clock to the core is automatically gated outside of the domain when the core is in Core dynamic retention mode and is running synchronously to the cluster. However, if the core is

running asynchronously to the cluster, the system integrator must gate the clock externally during Core dynamic retention mode. For more information, see the $Arm^{\textcircled{\tiny{B}}}$ DynamlQ $^{\textcircled{\tiny{M}}}$ Shared Unit AE Configuration and Sign-off Guide.

The outputs of the domain must be isolated to prevent buffers without power from propagating **UNKNOWN** values to any operational parts of the system.

When the core is in Core dynamic retention mode there is support for snoop, GIC, and debug access, so the core appears as if it were in WFI or WFE mode. When an incoming access occurs, it stalls, and the On **PACTIVE** bit is set HIGH. The incoming access proceeds when the domain is returned to the On mode using P-Channel.

When the incoming access completes, and if the core has not exited WFI or WFE mode, then the On **PACTIVE** bit is set LOW after the programmed retention timeout. The power controller can then request to reenter the Core dynamic retention mode.

2.4.6.5 Debug recovery mode

Debug recovery mode can be used to assist debug of external watchdog-triggered reset events.

It allows contents of the core L1 instruction, L1 data and L2 caches that were present before the reset to be observable after the reset. The contents of the caches are retained and are not altered on the transition back to the On mode.

By default, the core invalidates its caches when transitioning from Off to On mode. If P-Channel is initialized to Debug recovery mode, and the core is cycled through Cold or Warm reset along with system resets, then the cache invalidation is disabled. The cache contents are preserved when the core is transitioned to the On mode.

Debug recovery mode also supports preserving *Reliability, Availability, and Serviceability* (RAS) state, in addition to the cache contents. In this case, a transition to Debug recovery mode is made from any of the current states. Once in Debug recovery mode, a cluster-wide Warm reset must be applied externally. The RAS and cache state are preserved when the core is transitioned to the On mode.

Debug recovery mode is strictly for debug purposes. It must not be used for functional purposes, as correct operation of the caches is not guaranteed when entering this mode.



• This mode can occur at any time with no guarantee of the state of the core. A P-Channel request of this type is accepted immediately, therefore its effects on the core, cluster, or the wider system are unpredictable, and a wider system reset might be required. In particular, if there were outstanding memory system transactions at the time of the reset, then these might complete after the reset when the core is not expecting them and cause a system deadlock.

• If the system sends a snoop to the cluster during this mode, then depending on the cluster state, the snoop might get a response and disturb the contents of the caches, or it might not get a response and cause a system deadlock.

2.4.7 Encoding for power modes

The following table shows the encodings for the supported modes for each core domain P-Channel.

Table 2-4: Core power modes COREPSTATE encoding

| Power mode | Short name | PACTIVE bit number | PSTATE value | Power mode description |
|-----------------------------|-------------|---------------------------|--------------|------------------------------------------------------------------------------------------------------|
| Core debug recovery mode | DEBUG_RECOV | - | 0b001010 | Logic is off (or in reset), RAM state is retained and not invalidated when transitioning to On mode. |
| On mode | ON | 8 | 0b001000 | All powerup. |
| Core dynamic retention mode | FULL_RET | 5 | 0b000101 | Logic and RAM state are inoperable but retained. |
| Emulated off mode | OFF_EMU | 1 | 0b000001 | On with Warm reset asserted, debug state is retained and accessible. |
| Off mode | OFF | O (implicit) ¹ | 06000000 | All powerdown. |



You should disable and clear the interrupts of a core that is executing in lockstep in the *DynamicIQ Shared Unit* (DSU-AE) as part of the powerdown sequence; otherwise you can get false positive error reporting from the lock-step comparators.

2.4.8 Power domain states for power modes

The power domains can be controlled independently to give different combinations when powered up and powered down.

However, only some powered up and powered down domain combinations are valid and supported.

The PDCPU power domain supports the power states that are described in the following table.

Table 2-5: PDCPU power state description

| Power state | Description |
|-------------|-----------------------------------------------------|
| Off | Core off. Power to the block is gated. |
| Ret | Core retention. Logic and RAM retention power only. |
| On | Core on. Block is active. |

¹ It is tied off to 0 and should be inferred when all other PACTIVE bits are LOW. For more information, see the AMBA® Low Power Interface Specification Arm® Q-Channel and P-Channel Interfaces.



States that are not shown in the following tables are unsupported and must not occur.

The following table describes the power modes, and the corresponding power domain states for individual cores. The power mode of each core is independent of all other cores in the cluster.

Table 2-6: Supported core power domain states

| Power mode | Power domain state | Description |
|------------------------|--------------------|-------------------|
| Debug recovery | On | Core on |
| On | On | Core on |
| Core dynamic retention | Ret | Core in retention |
| Emulated off | On | Core on |
| Off | Off | Core off |

Deviating from the legal power modes can lead to **UNPREDICTABLE** results. You must comply with the dynamic power management and powerup and powerdown sequences described in the following sections.

2.4.9 Core powerup and powerdown sequences

There are specific steps that you must perform when taking the Cortex®-A76AE cores in the cluster in and out of coherence.

Core powerdown

To take a core out of coherence ready for core powerdown, complete the following steps:

- 1. Save all architectural states.
- 2. Disable all CPU interrupts, such as timer, and service any pending CPU interrupt.
- 3. Configure the GIC distributor to disable or reroute interrupts away from this core.
- 4. Set the CPUPWRCTLR.CORE_PWRDN_EN bit to 1 to indicate to the power controller that a powerdown is requested.
- 5. Execute an ISB instruction.
- 6. Execute a wfi instruction.

All L1 and L2 cache disabling, L1 and L2 cache flushing, and communication with the L3 memory system is performed in hardware after the WFI is executed, under the direction of the power controller.



- Emulated powerdown might generate a *Dual-Core Lock-Step* (DCLS) mismatch if debug activity is in progress during Warm reset, that is, during **nCORERESET** assertion.
- Executing any WFI instruction when the CPUPWRCTLR.CORE_PWRDN_EN bit is set automatically masks out all interrupts and wake-up events in the core. If executed when the CPUPWRCTLR.CORE_PWRDN_EN bit is set the WFI never wakes up and the core needs to be reset to restart.

For information about cluster powerdown, see the Arm® DynamlQ[™] Shared Unit AE Technical Reference Manual.

Core powerup

To bring a core into coherence after reset, no software steps are required.

Related information

CPUPWRCTLR_EL1, Power Control Register, EL1 on page 154

2.4.10 Debug over powerdown

The Cortex®-A76AE core supports debug over powerdown, which allows a debugger to retain its connection with the core even when powered down. This enables debug to continue through powerdown scenarios, rather than having to re-establish a connection each time the core is powered up.

The debug over powerdown logic is part of the DebugBlock, which is external to the cluster and can be implemented in a separate power domain. If the DebugBlock is in the same power domain as the core, then debug over powerdown is not supported.

For more information on the DebugBlock, see the Arm® DynamlQ[™] Shared Unit AE Technical Reference Manual.



In Lock-mode, debug over powerdown might generate a *Dual-Core Lock-Step* (DCLS) mismatch if debug activity is in progress during Warm reset, that is, during **nCORERESET** assertion.

2.5 Memory Management Unit

This chapter describes the Memory Management Unit (MMU) of the Cortex®-A76AE core.

2.5.1 About the MMU

The Memory Management Unit (MMU) is responsible for translating addresses of code and data Virtual Addresses (VAs) to Physical Addresses (PAs) in the real system. The MMU also controls memory access permissions, memory ordering, and cache policies for each region of memory.

2.5.1.1 Main functions

The three main functions of the MMU are to:

- Control the table walk hardware that accesses translation tables in main memory.
- Translate Virtual Addresses (VAs) to Physical Addresses (PAs).
- Provide fine-grained memory system control through a set of virtual-to-physical address mappings and memory attributes that are held in translation tables.

Each stage of address translation uses a set of address translations and associated memory properties that are held in memory mapped tables that are called translation tables. Translation table entries can be cached into a *Translation Lookaside Buffer* (TLB).

The following table describes the components that are included in the MMU.

Table 2-7: TLBs and TLB caches in the MMU

| Component | Description |
|------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| Instruction L1 TLB | 48 entries, fully associative. |
| Data L1 TLB | 48 entries, fully associative. |
| L2 TLB | 1280 entries, 5-way set associative. |
| Translation table prefetcher | Detects an access to contiguous translation tables and prefetches the next one. This prefetcher can be disabled in the ECTLR register. |

The TLB entries contain either one or both of a global indicator and an *Address Space Identifier* (ASID) to permit context switches without requiring the TLB to be invalidated.

The TLB entries contain a Virtual Machine Identifier (VMID) to permit virtual machine switches by the hypervisor without requiring the TLB to be invalidated.

2.5.1.2 AArch64 behavior

The Cortex®-A76AE core is an Armv8 compliant core that supports execution in AArch64 state.

The following table shows the AArch64 behavior.

Table 2-8: AArch64 behavior

| | AArch64 |
|--------|---------------------------------------------------------------------------------------------------------------|
| I . | The Armv8 address translation system resembles an extension to the Long descriptor format address translation |
| system | system to support the expanded virtual and physical address space. |

| | AArch64 | | |
|-------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|--|--|
| Translation granule | 4KB, 16KB, or 64KB for Armv8 AArch64 Virtual Memory System Architecture (VMSAv8-64) | | |
| | Using a larger granule size can reduce the maximum required number of levels of address lookup. | | |
| Address Space Identifier (ASID) size | 8 bits or 16 bits depending on the value of TCR_ELx.AS | | |
| Virtual Machine Identifier (VMID) size | 8 bits or 16 bits depending on the value of VTCR_EL2.VS | | |
| Physical Address (PA) size | Maximum 40 bits | | |
| | Any configuration of TCR_ELx.IPS over 40 bits is considered as 40 bits. You can enable or disable each stage of the address translation independently. | | |

The Cortex®-A76AE core also supports the *Virtualization Host Extension* (VHE), including ASID space for EL2. When VHE is implemented and enabled, EL2 has the same behavior as EL1.

See the Arm® Architecture Reference Manual Armv8, for A-profile architecture for more information on concatenated translation tables and for address translation formats.

2.5.2 TLB organization

The TLB is a cache of recently executed page translations within the *Memory Management Unit* (MMU). The Cortex®-A76AE core implements a two-level TLB structure. The TLB stores all page sizes and is responsible for breaking these down in to smaller pages when required for the data or instruction L1 TLB.

2.5.2.1 Instruction L1 TLB

The instruction L1 TLB is implemented as a 48-entry fully associative structure. This TLB caches entries at the 4KB, 16KB, 64KB, 2MB, and 32MB granularity of *Virtual Address* (VA) to *Physical Address* (PA) mapping only.

A hit in the instruction L1 TLB provides a single **CLK** cycle access to the translation, and returns the PA to the instruction cache for comparison. It also checks the access permissions to signal an Instruction Abort.

2.5.2.2 Data L1 TLB

The data L1 TLB is a 48-entry fully associative TLB that is used by load and store operations. The cache entries have 4KB, 16KB, 64KB, 2MB, and 512MB granularity of *Virtual Address* (VA) to *Physical Address* (PA) mappings only.

A hit in the data L1 TLB provides a single **CLK** cycle access to the translation, and returns the PA to the data cache for comparison. It also checks the access permissions to signal a Data Abort.

2.5.2.3 L2 TLB

The L2 TLB structure is shared by instruction and data. It handles misses from the instruction and data L1 TLBs.

The following table describes the L2 TLB characteristics.

Table 2-9: L2 TLB characteristics

| Characteristic | Note |
|------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 5-way, set associative, 1280-entry | Stores: |
| cache | • Virtual Address (VA) to Physical Address (PA) mappings for 4KB, 16KB, 64KB, 2MB, 32MB, 512MB, and 1GB block sizes. |
| | Intermediate physical address (IPA) to PA mappings for 2MB and 1GB (in a 4KB translation granule), 32MB (in a 16K translation granule), and 512MB (in a 64K granule) block sizes. Only Non-secure EL1 and EL0 stage 2 translations are cached. |
| | Intermediate PAs obtained during a translation table walk. |

Access to the L2 TLB usually takes three cycles. If a different page or block size mapping is used, then this access can take longer.

The L2 TLB supports four translation table walks in parallel (four TLB misses), and can service two TLB lookups while the translation table walks are in progress. If there are six successive misses, the L2 TLB stalls.



Caches in the core are invalidated automatically at reset deassertion unless the core power mode is initialized to Debug recovery mode. See the $Arm^{\text{@}}$ DynamlQ $^{\text{M}}$ Shared Unit AE Technical Reference Manual for more information.

2.5.3 TLB match process

The Armv8-A architecture provides support for multiple maps from the *Virtual Address* (VA) space that are translated differently.

TLB entries store the context information that is required to facilitate a match and avoid the need for a TLB flush on a context or virtual machine switch.

Each TLB entry contains a:

- VA
- Physical Address (PA)
- Set of memory properties that includes type and access permissions

Each entry is either a global entry, or it is associated with a particular *Address Space Identifier* (ASID). In addition, each TLB entry contains a field to store the *Virtual Machine Identifier* (VMID) in the entry applicable to accesses from Non-secure ELO and EL1 Exception levels.

Each entry is associated with a particular translation regime:

- EL3 in Secure state in AArch64 state only.
- EL2, EL1, or EL0 in Non-secure state.
- EL1 or EL0 in Secure state.

A TLB match entry occurs when the following conditions are met:

- Entry translation regime matches the current translation regime.
- The ASID matches the current ASID held in the CONTEXTIDR, TTBR0, or TTBR1 register, or the entry is marked global.
- The VMID matches the current VMID held in the VTTBR_EL2 register.
- The ASID and VMID matches are **IGNORED** when ASID and VMID are not relevant. ASID is relevant when the translation regime is:
 - EL2 in Non-secure state with HCR EL2.E2H and HCR EL2.TGE set to 1
 - EL1 or EL0 in Secure state
 - EL1 or EL0 in Non-secure state

VMID is relevant for EL1 or EL0 in Non-secure state.

2.5.4 Translation table walks

When an access is requested at an address, the *Memory Management Unit* (MMU) searches for the requested *Virtual Address* (VA) in the *Translation Lookaside Buffers* (TLBs). If it is not present, then it is a miss and the translation proceeds by looking up the translation table during a translation table walk.

When the Cortex®-A76AE core generates a memory access, the following process occurs:

- 1. The MMU performs a lookup for the requested VA, current Address Space Identifier (ASID), current Virtual Machine Identifier (VMID), and current translation regime in the relevant instruction or data L1 TLB.
- 2. If there is a miss in the relevant L1 TLB, the MMU performs a lookup for the requested VA, current ASID, current VMID, and translation regime in the L2 TLB.
- 3. If there is a miss in the L2 TLB, the MMU performs a hardware translation table walk.

If an L2 TLB miss, the hardware does a translation table walk as long as the MMU is enabled, and the translation using the base register has not been disabled.

If the translation table walk is disabled for a particular base register, the core returns a translation fault. If the TLB finds a matching entry, it uses the information in the entry as follows.

The access permission bits determine whether the access is permitted. If the matching entry does not pass the permission checks, the MMU signals a Permission fault. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture for details of Permission faults.

2.5.4.1 AArch64 behavior

When executing in AArch64 state at a particular Exception level, you can configure the hardware translation table walk to use either the 4KB, 16KB, or 64KB translation granule.

Program the Translation Granule bit, TGO, in the appropriate translation control register:

- TCR EL1
- TCR EL2
- TCR EL3
- VTCR EL2

For TCR_EL1, you can program the Translation Granule bits TGO and TG1 to configure the translation granule respectively for TTBRO_EL1 and TTBR1_EL1, or TCR_EL2 when *Virtualization Host Extension* (VHE) is enabled.

2.5.5 MMU memory accesses

During a translation table walk, the *Memory Management Unit* (MMU) generates memory accesses. The Cortex®-A76AE core has specific behaviors for MMU memory accesses.

2.5.5.1 Configuring MMU accesses

By programming the IRGN and ORGN bits, you can configure the MMU to perform translation table walks in Cacheable or Non-cacheable regions:

AArch64 Appropriate TCR_ELx register.

If the encoding of both the ORGN and IRGN bits is Write-Back, the data cache lookup is performed and data is read from the data cache. External memory is accessed, if the ORGN and IRGN bit contain different attributes, or if the encoding of the ORGN and IRGN bits is Write-Through or Non-cacheable.

2.5.5.2 Descriptor hardware update

The core supports hardware update in AArch64 state using hardware management of the Access flag and hardware management of dirty state.

These features are enabled in registers TCR_ELx and VTCR_EL2.

Hardware management of the Access flag is enabled by the following configuration fields:

- TCR ELx.HA for stage 1 translations.
- VTCR EL2.HA for stage 2 translations.

Functional description

Hardware management of dirty state is enabled by the following configuration fields:

- TCR ELx.HD for stage 1 translations.
- VTCR_EL2.HD for stage 2 translations.



Hardware management of dirty state can only be enabled if hardware management of the Access flag is enabled.

To support the hardware management of dirty state, the DBM field is added to the translation table descriptors as part of Armv8.1 architecture.

The core supports hardware update only in outer Write-Back and inner Write-Back memory regions.

If software requests a hardware update in a memory region that is not inner Write-Back or not outer Write-Back, then the core returns an abort with the following encoding:

- ESR.ELx.DFSC = 0b110001 for Data Aborts in AArch64.
- ESR.ELx.IFSC = 0b110001 for Instruction Aborts in AArch64.

2.5.6 Specific behaviors on aborts and memory attributes

This section describes specific behaviors that are caused by aborts and also describes memory attributes.

MMU responses

The MMU generates a response to the requester, when one of the following translations is completed:

- A L1 TLB hit.
- A L2 TLB hit.
- A translation table walk.

The response from the MMU contains the following information:

- The PA corresponding to the translation.
- A set of permissions.
- Secure or Non-secure.
- All the information that is required to report aborts. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture for more details.

2.5.6.1 External aborts

External aborts are defined as those that occur in the memory system rather than those that the *Memory Management Unit* (MMU) detects. Normally, external memory aborts are rare. External aborts are caused by errors that are flagged to the external interface.

When an external abort to the external interface occurs on an access for a translation table walk access, the MMU returns a synchronous external abort. For a load multiple or a store multiple operation, the address that is captured in the fault address register is that of the address that generated the synchronous external abort.

See the Arm® Architecture Reference Manual Armv8, for A-profile architecture for more information.

2.5.6.2 Mis-programming contiguous hints

In the case of a mis-programming contiguous hint, when there is a descriptor that contains a set CH bit, all contiguous virtual addresses that are contained in the block must be included in the input *Virtual Address* (VA) space that is defined for stage 1 by TxSZ for TTBx, or for stage 2 by {SLO, TOSZ}.

The Cortex®-A76AE core treats such a block as not causing a translation fault.

Conflict aborts

The Cortex®-A76AE core does not generate Conflict aborts.

2.5.6.3 Memory attributes

The memory region attributes specified in the TLB entry, or in the descriptor in case of translation table walk, determine if the access is:

- Normal Memory or Device type.
- One of the four different device memory types that are defined for Armv8:

| Device non-Gathering, non-Reordering, No Early Write Acknowledgement. |
|-----------------------------------------------------------------------|
| |
| Device non-Gathering, non-Reordering, Early Write Acknowledgement. |
| |
| Device non-Gathering, Reordering, Early Write Acknowledgement. |
| |
| Device Gathering, Reordering, Early Write Acknowledgment. |
| |
| |

In the Cortex®-A76AE core, a page is cacheable only if the Inner and Outer memory attributes are Write-Back. In all other cases, all pages are downgraded to Non-cacheable Normal memory.

When the *Memory Management Unit* (MMU) is disabled at stage 1 and stage 2, and SCTLR. I is set to 1, instruction prefetches are cached in the instruction cache but not in the unified cache. In all other cases, normal behavior on memory attribute applies.

See the Arm® Architecture Reference Manual Armv8, for A-profile architecture for more information on translation table formats.

2.5.7 Page-based hardware attributes

Page-Based Hardware Attributes (PBHA) is an optional, IMPLEMENTATION DEFINED feature.

It allows software to set up to two bits in the translation tables, which are then propagated though the memory system with transactions, and can be used in the system to control system components. The meaning of the bits is specific to the system design.

For information on how to set and enable the PBHA bits in the translation tables, see the Arm® Architecture Reference Manual Armv8, for A-profile architecture. When disabled, the PBHA value that is propagated on the bus is 0.

For memory accesses caused by a translation table walk, the AHTCR, ATTBCR, and AVTCR registers control the PBHA values.

PBHA combination between stage 1 and stage 2 on memory accesses

PBHA should always be considered as an attribute of the physical address.

When stage 1 and stage 2 are enabled:

- If both stage 1 PBHA and stage 2 PBHA are enabled, the final PBHA is stage 2 PBHA.
- If stage 1 PBHA is enabled and stage 2 PBHA is disabled, the final PBHA is stage 1 PBHA.
- If stage 1 PBHA is disabled and stage 2 PBHA is enabled, the final PBHA is stage 2 PBHA.
- If both stage 1 PBHA and stage 2 PBHA are disabled, the final PBHA is defined to 0.

Enable of PBHA has a granularity of 1 bit, so this property is applied independently on each PBHA bit.

Mismatched aliases

If the same physical address is accessed through more than one virtual address mapping, and the PBHA bits are different in the mappings, then the results are **UNPREDICTABLE**. The PBHA value sent on the bus could be for either mapping.

2.6 L1 memory system

This chapter describes the L1 instruction cache and data cache that make up the L1 memory system.

2.6.1 About the L1 memory system

The Cortex®-A76AE L1 memory system is designed to enhance core performance and save power.

The L1 memory system consists of separate instruction and data caches. Both have a fixed size of 64KB.

2.6.1.1 L1 instruction side memory system

The L1 instruction memory system has the following key features:

- Virtually Indexed, Physically Tagged (VIPT) 4-way set-associative L1 instruction cache, which behaves as a Physically Indexed, Physically Tagged (PIPT) cache.
- Fixed cache line length of 64 bytes.
- Pseudo-LRU cache replacement policy.
- 256-bit read interface from the L2 memory system.

2.6.1.2 L1 data side memory system

The L1 data memory system has the following features:

- Virtually Indexed, Physically Tagged (VIPT), which behaves as a Physically Indexed, Physically Tagged (PIPT) 4-way set-associative L1 data cache.
- Fixed cache line length of 64 bytes.
- Pseudo-LRU cache replacement policy.
- 256-bit write interface from the L2 memory system.
- 256-bit read interface from the L2 memory system.
- Two 128-bit read paths from the data L1 memory system to the datapath.
- 256-bit write path from the datapath to the L1 memory system.

2.6.2 Cache behavior

The IMPLEMENTATION SPECIFIC features of the instruction and data caches include:

 At reset the instruction and data caches are disabled and both caches are automatically invalidated.



Caches in the core are invalidated automatically at reset deassertion unless the core power mode is initialized to Debug recovery mode. See the $Arm^{\text{@}}$ DynamlQ $^{\text{M}}$ Shared Unit AE Technical Reference Manual for more information.

- You can enable or disable each cache independently.
- On a cache miss, data for the cache linefill is requested in critical word-first order.

2.6.2.1 Instruction cache disabled behavior

If the instruction cache is disabled, fetches cannot access any of the instruction cache arrays. An exception is the instruction cache maintenance operations. If the instruction cache is disabled, the instruction cache maintenance operations can still execute normally.

If the instruction cache is disabled, all instruction fetches to cacheable memory are treated as if they were Non-cacheable. This treatment means that instruction fetches might not be coherent with caches in other cores, and software must take account of this.

2.6.2.2 Instruction cache speculative memory accesses

Instruction fetches are speculative. Execution is not guaranteed, because there can be several unresolved branches in the pipeline.

A branch instruction or exception in the code stream can cause a pipeline flush, discarding the currently fetched instructions. On instruction fetch accesses, pages with Device memory type attributes are treated as Non-Cacheable Normal Memory.

Device memory pages must be marked with the translation table descriptor attribute bit *Execute Never* (XN). The device and code address spaces must be separated in the physical memory map. This separation prevents speculative fetches to read-sensitive devices when address translation is disabled.

If the instruction cache is enabled, and if the instruction fetches miss in the L1 instruction cache, they can still look up in the L1 data caches. However, a new line is not allocated in the data cache unless the data cache is enabled.

See the Arm® Architecture Reference Manual Armv8, for A-profile architecture for more information.

2.6.2.3 Data cache disabled behavior

If the data cache is disabled, load and store instructions do not access any of the L1 data, L2 cache, and, if present, the *DynamIQ Shared Unit AE* (DSU-AE) L3 cache arrays.

When the data cache is disabled, instructions and operations are affected as follows:

- An instruction fetch does not allocate a new line in the L2 or L3 caches.
- All load and store instructions to cacheable memory are treated as if they were Non-cacheable and are incoherent with the caches in both this core and other cores in the cluster. Software must take this into account.
- Data cache maintenance operations are an exception and will execute normally.



The L2 and L1 data caches cannot be disabled independently.

2.6.2.4 Data cache maintenance considerations

DC IVAC operations in AArch64 state are treated as DC CIVAC except for permission checking and watchpoint matching.

DC IMVAC operations in AArch32, and DC IVAC instructions in AArch64, perform an invalidate of the target address. If the data is dirty within the cluster, a clean is performed before the invalidate.

DC ISW operations in AArch32, and DC ISW instructions in AArch64, perform both a clean and invalidate of the target set/way. The values of HCR.SWIO and HCR_EL2.SWIO have no effect.

See the Arm® Architecture Reference Manual Armv8, for A-profile architecture for more information.

2.6.2.5 Data cache coherency

To maintain data coherency between multiple cores, the Cortex®-A76AE core uses the *Modified Exclusive Shared Invalid* (MESI) protocol.

2.6.2.6 Write streaming mode

A cache line is allocated to the L1 on either a read miss or a write miss.

However, there are some situations where allocating on writes is not required. For example, when executing the C standard library memset() function to clear a large block of memory to a known value. Writes of large blocks of data can pollute the cache with unnecessary data. It can also waste power and performance if a linefill must be performed only to discard the linefill data because the entire line was subsequently written by the memset().

To counter this, the L1 memory system includes logic to detect when the core has stores pending to a full cache line when it is waiting for a linefill to complete, or when it detects a DCZVA (full cache line write to zero). If this situation is detected, then it switches into write streaming mode.

When in write streaming mode, loads behave as normal, and can still cause linefills, and writes still lookup in the cache, but if they miss then they write out to L2 (or possibly L3, system cache, or DRAM) rather than starting a linefill.

The L1 memory system continues in write streaming mode until it can no longer create a full cacheline of store (for example because of a lack of resource in the L1 memory system) or has detected a high proportion of store hitting in the cache.



The L1 memory system is monitoring transaction traffic through L1 and, depending on different thresholds, can set a stream to go out to L2, L3, and system cache and DRAM.

The following register controls the different thresholds:

AArch64 state

CPUECTLR_EL1 configure the L2, L3, and system cache write streaming mode threshold. See 3.2.32 CPUECTLR EL1, CPU Extended Control Register, EL1 on page 139.

2.6.3 L1 instruction memory system

The L1 instruction side memory system provides an instruction stream to the decoder.

To increase overall performance and to reduce power consumption, it uses:

- Dynamic branch prediction.
- Instruction caching.

2.6.3.1 Program flow prediction

The Cortex®-A76AE core contains program flow prediction hardware, also known as branch prediction.

Branch prediction increases overall performance and reduces power consumption. With program flow prediction disabled, all taken branches incur a penalty that is associated with flushing the pipeline.

To avoid this penalty, the branch prediction hardware predicts if a conditional or unconditional branch is to be taken. For conditional branches, the hardware predicts if the branch is to be taken. It also predicts the address that the branch goes to, known as the branch target address. For unconditional branches, only the target is predicted.

The hardware contains the following functionality:

- A Branch Target Buffer (BTB) holding the branch target address of previously taken branches.
- Dynamic branch predictor history.
- The return stack, a stack of nested subroutine return addresses.
- A static branch predictor.
- An indirect branch predictor.

Predicted and non-predicted instructions

Unless otherwise specified, the following list applies to A64, A32, and T32 instructions. As a rule the flow prediction hardware predicts all branch instructions regardless of the addressing mode, and includes:

- Conditional branches.
- Unconditional branches.
- Indirect branches that are associated with procedure call and return instructions.
- Branches that switch between A32 and T32 states.

The following branch instructions are not predicted:

• Exception return instructions.

T32 state conditional branches

A T32 unconditional branch instruction can be made conditional by inclusion in an *If-Then* (IT) block. It is then treated as a conditional branch.

Return stack

The return stack stores the address and instruction set state.

This address is equal to the link register value stored in R14 in AArch32 state or X30 in AArch64 state.

The following instructions cause a return stack push if predicted:

- BL r14
- BLX (immediate) in AArch32 state
- BLX (register) in AArch32 state
- BLR in AArch64 state
- MOV pc, r14

In AArch32 state, the following instructions cause a return stack pop if predicted:

- BX
- LDR pc, [r13], #imm
- LDM r13, {...pc}
- LDM r13, {...pc}

In AArch64 state, the RET instruction causes a return stack pop.

As exception return instructions can change core privilege mode and Security state, they are not predicted. These include:

• ERET

2.6.4 L1 data memory system

The L1 data cache is organized as a Virtually Indexed, Physically Tagged (VIPT) cache featuring four ways.

Data cache invalidate on reset

The Armv8-A architecture does not support an operation to invalidate the entire data cache. If software requires this function, it must be constructed by iterating over the cache geometry and executing a series of individual invalidate by set/way instructions.

2.6.4.1 Memory system implementation

This section describes the implementation of the L1 memory system.

Limited Order Regions

The core offers support for four limited ordering region descriptors, as introduced by the Armv8.1 Limited Ordering Regions.

Atomic instructions

The Cortex®-A76AE core supports the atomic instructions that are added in Armv8.1 architecture.

Atomic instructions to cacheable memory can be performed as either near atomics or far atomics, depending on where the cache line containing the data resides.

When an instruction hits in the L1 data cache in a unique state, then it is performed as a near atomic in the L1 memory system. If the atomic operation misses in the L1 cache, or the line is shared with another core, then the atomic is sent as a far atomic on the core CHI interface.

If the operation misses everywhere within the cluster, and the interconnect supports far atomics, then the atomic is passed on to the interconnect to perform the operation.

When the operation hits anywhere inside the cluster, or when an interconnect does not support atomics, the L3 memory system performs the atomic operation. If the line it is not already there, it allocates the line into the L3 cache. This depends on whether the *DynamlQ Shared Unit AE* (DSU-AE) is configured with an L3 cache.

Therefore, if software prefers that the atomic is performed as a near atomic, precede the atomic instruction with a PLDW OF PREM PSTLIKEEP instruction.

Alternatively, the CPUECTLR can be programmed such that different types of atomic instructions attempt to execute as a near atomic. One cache fill is made on an atomic. If the cache line is lost before the atomic operation can be made, it is sent as a far atomic.

The Cortex®-A76AE core supports atomics to device or non-cacheable memory, however this relies on the interconnect also supporting atomics. If such an atomic instruction is executed when the interconnect does not support them, it results in an abort.

For more information on the CPUECTLR register, see 3.2.32 CPUECTLR_EL1, CPU Extended Control Register, EL1 on page 139.

LDAPR instructions

The core supports Load acquire instructions adhering to the RCpc consistency semantic introduced in the Armv8.3 extensions for A profile. This is reflected in register ID_AA64ISAR1_EL1 where bits[23:20] are set to 0b0001 to indicate that the core supports LDAPRB, LDAPRH, and LDAPR instructions implemented in AArch64.

Transient memory region

The core has a specific behavior for memory regions that are marked as write-back cacheable and transient, as defined in the Armv8.0 architecture.

For any load or store that is targeted at a memory region that is marked as transient, the following occurs:

- If the memory access misses in the L1 data cache, the returned cache line is allocated in the L1 data cache but is marked as transient.
- When the line is evicted from the L1 data cache, the transient hint is passed to the L2 cache so that the replacement policy will not attempt to retain the line. When the line is subsequently evicted from the L2 cache, it will bypass the next level cache entirely.

Non-temporal loads

Non-temporal loads indicate to the caches that the data is likely to be used for only short periods. For example, when streaming single-use read data that is then discarded. In addition to non-temporal loads, there are also prefetch-memory (PRFM) hint instructions with the STRM qualifier.

Non-temporal loads to memory which are designated as Write-Back are treated the same as loads to Transient memory.

2.6.4.2 Internal exclusive monitor

The Cortex®-A76AE core L1 memory system has an internal exclusive monitor.

This monitor is a 2-state, open and exclusive, state machine that manages Load-Exclusive or Store-Exclusive accesses and Clear-Exclusive (clrex) instructions. You can use these instructions to construct semaphores, ensuring synchronization between different processes running on the core, and also between different cores that are using the same coherent memory locations for the semaphore. A Load-Exclusive instruction tags a small block of memory for exclusive access. CTR.ERG defines the size of the tagged block as 16 words, one cache line.



A load/store exclusive instruction is any one of the following:

• In the A64 instruction set, any instruction that has a mnemonic starting with LDX, LDAX, STX, OF STLX.

• In the A32 and T32 instruction sets, any instruction that has a mnemonic starting with LDREX, STREX, LDAEX, OF STLEX.

See the Arm® Architecture Reference Manual Armv8, for A-profile architecture for more information about these instructions.

2.6.5 Data prefetching

This section describes the data prefetching behavior for the Cortex®-A76AE core.

Preload instructions

The Cortex®-A76AE core supports the AArch64 Prefetch Memory (PRFM) instructions and the AArch32 Prefetch Data (PLD) and Preload Data With Intent To Write (PLDW) instructions. These instructions signal to the memory system that memory accesses from a specified address are likely to occur soon. The memory system acts by taking actions that aim to reduce the latency of the memory access when they occur. PRFM instructions perform a lookup in the cache, and if they miss and are to a cacheable address, a linefill starts. However, the PRFM instruction retires when its linefill is started, rather than waiting for the linefill to complete. This enables other instructions to execute while the linefill continues in the background.

The *Preload Instruction* (PLI) memory system hint performs preloading in the L2 cache for cacheable accesses if they miss in both the L1 instruction cache and L2 cache. Instruction preloading is performed in the background.

For more information about prefetch memory and preloading caches, see the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

Data prefetching and monitoring

The load-store unit includes a hardware prefetcher that is responsible for generating prefetches targeting both the L1 and the L2 cache. The load side prefetcher uses the virtual address to prefetch to both the L1 and L2 Cache. The store side prefetcher uses the physical address, and only prefetches to the L2 Cache.

The CPUECTLR register allows you to have some control over the prefetcher. See 3.2.32 CPUECTLR_EL1, CPU Extended Control Register, EL1 on page 139 for more information on the control of the prefetcher.

Use the prefetch memory system instructions for data prefetching where short sequences or irregular pattern fetches are required.

Data cache zero

The Armv8-A architecture introduces a Data Cache Zero by Virtual Address (DC ZVA) instruction.

In the Cortex®-A76AE core, this enables a block of 64 bytes in memory, which is aligned to 64 bytes in size, to be set to zero.

For more information, see the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

2.6.6 Direct access to internal memory

The Cortex®-A76AE core provides a mechanism to read the internal memory that is used by the L1 caches, L2 cache, and TLB structures through **IMPLEMENTATION DEFINED** System registers. This functionality can be useful when debugging software or hardware issues.

When the core executes in AArch64 state, there are six read-only registers that are used to access the contents of the internal memory. The internal memory is selected by programming the **IMPLEMENTATION DEFINED** RAMINDEX register (using SYS #6, c15, c0, #0 instruction). These operations are available only in EL3. In all other modes, executing these instructions results in an Undefined Instruction exception. The data is read from read-only registers as shown in the following table.

Table 2-10: AArch64 registers used to access internal memory

| Register name | Function | Access | Operation | Rd Data |
|---------------|------------------------|-----------|---------------|---------|
| IDATA0_EL3 | Instruction Register 0 | Read-only | S3_6_c15_c0_0 | Data |
| IDATA1_EL3 | Instruction Register 1 | Read-only | S3_6_c15_c0_1 | Data |
| IDATA2_EL3 | Instruction Register 2 | Read-only | S3_6_c15_c0_2 | Data |
| DDATA0_EL3 | Data Register 0 | Read-only | S3_6_c15_c1_0 | Data |
| DDATA1_EL3 | Data Register 1 | Read-only | S3_6_c15_c1_1 | Data |
| DDATA2_EL3 | Data Register 2 | Read-only | S3_6_c15_c1_2 | Data |

2.6.6.1 Encoding for L1 instruction cache tag, L1 instruction cache data, L1 BTB, L1 GHB, L1 TLB instruction, and BPIQ

The following tables show the encoding that is required to select a given cache line.

Table 2-11: L1 instruction cache tag location encoding

| Bit fields of Rd | Description |
|------------------|--------------|
| [31:24] | RAMID = 0x00 |
| [23:20] | Reserved |
| [19:18] | Way |
| [17:14] | Reserved |
| [13:6] | Index [13:6] |
| [5:0] | Reserved |

Table 2-12: L1 instruction cache data location encoding

| Bit fields of Rd | Description |
|------------------|--------------|
| [31:24] | RAMID = 0x01 |
| [23:20] | Reserved |

| Bit fields of Rd | Description |
|------------------|--------------|
| [19:18] | Way |
| [17:14] | Reserved |
| [13:3] | Index [13:3] |
| [2:0] | Reserved |

Table 2-13: L1 BTB data location encoding

| Bit fields of Rd | Description |
|------------------|--------------|
| [31:24] | RAMID = 0x02 |
| [23:20] | Reserved |
| [19:18] | Way |
| [17:15] | Reserved |
| [14:5] | Index [14:5] |
| [4:0] | Reserved |

Table 2-14: L1 GHB data location encoding

| Bit fields of Rd | Description |
|------------------|--------------|
| [31:24] | RAMID = 0x03 |
| [23:14] | Reserved |
| [13:4] | Index [13:4] |
| [3:0] | Reserved |

Table 2-15: L1 instruction TLB data location encoding

| Bit fields of Rd | Description | |
|------------------|------------------|--|
| [31:24] | RAMID = 0x04 | |
| [23:8] | Reserved | |
| [7:0] | TLB Entry (<=47) | |

Table 2-16: BPIQ data location encoding

| Bit fields of Rd | Description |
|------------------|--------------|
| [31:24] | RAMID = 0x05 |
| [23:10] | Reserved |
| [9:4] | Index [5:0] |
| [3:0] | Reserved |

The following table shows the data that is returned from accessing the L1 instruction tag RAM.

Table 2-17: L1 instruction cache tag format

| Register | Bit field | Description |
|------------------------|-----------|------------------------------------------------|
| Instruction Register 0 | [31] | Non-secure identifier for the physical address |
| | [30:3] | Physical address [39:12] |

| Register | Bit field | Description | |
|------------------------|-----------|------------------------------------------|--|
| | [2:1] | Instruction state [1:0] | |
| | | 00 Invalid 01 T32 10 A32 11 A64 | |
| | [0] | Parity | |
| Instruction Register 1 | [63:0] | 0 | |
| Instruction Register 2 | [63:0] | 0 | |

The following table shows the data that is returned from accessing the L1 instruction data RAM.

Table 2-18: L1 instruction cache data format

| Register | Bit field | Description |
|------------------------|-----------|--------------|
| Instruction Register O | [63:0] | Data [63:0] |
| Instruction Register 1 | [63:9] | 0 |
| | [8] | Parity |
| | [7:0] | Data [71:64] |
| Instruction Register 2 | [63:0] | 0 |

The following table shows the data that is returned from accessing the L1 BTB RAM.

Table 2-19: L1 BTB cache format

| Register | Bit field | Description |
|------------------------|-----------|--------------|
| Instruction Register O | [63:0] | Data [63:0] |
| Instruction Register 1 | [63:18] | 0 |
| | [17:0] | Data [81:64] |
| Instruction Register 2 | [63:0] | 0 |

The following table shows the data that is returned from accessing the L1 GHB RAM.

Table 2-20: L1 GHB cache format

| Register | Bit field | Description |
|------------------------|-----------|--------------|
| Instruction Register O | [63:0] | Data [63:0] |
| Instruction Register 1 | [63:32] | 0 |
| | [31:0] | Data [95:64] |
| Instruction Register 2 | [63:0] | 0 |

The following table shows the data that is returned from accessing the L1 instruction TLB RAM.

Table 2-21: L1 instruction TLB cache format

| Register | Bit field | | Description |
|------------------------|-----------------|----------------|-------------------------|
| | CORE_PBHA=FALSE | CORE_PBHA=TRUE | |
| Instruction Register 0 | [63:59] | [63:59] | Virtual address [16:12] |

| Register | | Bit field | Description |
|------------------------|-----------------|----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| | CORE_PBHA=FALSE | CORE_PBHA=TRUE | |
| | [58:56] | - | TLB attribute |
| | - | [58:57] | PBHA[1:0] |
| | - | [56] | TLB attribute |
| | [55:53] | [55:53] | Memory attributes: |
| | | | 000 Device nGnRnE 001 Device nGnRE 010 Device nGRE 011 Device GRE 100 Non- cacheable 101 Write-Back No-Allocate 110 Write-Back Transient 111 Write-Back Read-Allocate and Write- |
| | [52:50] | [52:50] | Page size: 000 |
| | [49:46] | [49:46] | TLB attribute |
| | [45] | [45] | Outer-shared |
| | [44] | [44] | Inner-shared |
| | [43:39] | [43:39] | TLB attribute |
| | [38:23] | [38:23] | ASID |
| | [22:7] | [22:7] | VMID |
| | [6:5] | [6:5] | Translation regime: |
| | | | 00 Secure EL1/ EL0 01 Secure EL3 10 Non-secure EL1/EL0 11 Non-secure EL2 |
| | [4:1] | [4:1] | TLB attribute |
| | [0] | [0] | Valid |
| Instruction Register 1 | [63:61] | [63:61] | 0 |
| | [60] | [60] | Non-secure |
| | [59:32] | [59:32] | Physical address [39:12] |

| Register | Bit field | | Description |
|------------------------|-----------------|----------------|------------------------|
| | CORE_PBHA=FALSE | CORE_PBHA=TRUE | |
| | [31:0] | [31:0] | Virtual address[48:17] |
| Instruction Register 2 | [63:0] | [63:0] | 0 |

The following table shows the data that is returned from accessing the BPIQ RAM.

Table 2-22: BPIQ cache format

| Register | Bit field | Description |
|------------------------|-----------|--------------|
| Instruction Register O | [63:0] | Data [63:0] |
| Instruction Register 1 | [63:32] | 0 |
| | [31:0] | Data [95:64] |
| Instruction Register 2 | [63:0] | 0 |

2.6.6.2 Encoding for L1 data cache tag, L1 data cache data, and L1 TLB data

The core data cache consists of a 4-way set-associative structure.

The encoding, which is set in Rd in the appropriate MCR instruction, used to locate the required cache data entry for tag, data, and TLB memory is shown in the following tables. It is similar for both the tag RAM, data RAM, and TLB access. Data RAM access includes an extra field to locate the appropriate doubleword in the cache line.

Tag RAM encoding includes an extra field to select which one of the two cache channels must be used to perform any access.

Table 2-23: L1 data cache tag location encoding

| Bit fields of Rd | Description | | | |
|------------------|----------------|------------------------------------------------------------------------|--|--|
| [31:24] | RAMID = 0x | RAMID = 0x08 | | |
| [23:20] | Reserved | Reserved | | |
| [19:18] | Way | Way | | |
| [17] | Copy 0 1 | Tag RAM associated with Pipe 0 Tag RAM associated with Pipe 1 | | |
| [16:14] | Reserved | | | |
| [13:6] | Index [13:6] | Index [13:6] | | |
| [5:0] | Reserved | | | |

Table 2-24: L1 data cache data location encoding

| Bit fields of Rd | Description |
|------------------|--------------|
| [31:24] | RAMID = 0x09 |

| Bit fields of Rd | Description |
|------------------|--------------|
| [23:20] | Reserved |
| [19:18] | Way |
| [17:16] | BankSel |
| [15:14] | Unused |
| [13:6] | Index [13:6] |
| [5:0] | Reserved |

Table 2-25: L1 data TLB location encoding

| Bit fields of Rd | Description |
|------------------|-------------------|
| [31:24] | RAMID = 0x0A |
| [23:6] | Reserved |
| [5:0] | TLB Entry (0->47) |

Data cache reads return 64 bits of data in Data Register 0, Data Register 1, and Data Register 2. Data Register 2 is used to report ECC information using the format that is shown in the following tables.

The following table shows the data that is returned from accessing the L1 data cache tag RAM with ECC.

Table 2-26: L1 data cache tag format with ECC

| Register | Bit field | Description | |
|-----------------|-----------|----------------------------------------------------------------------------------------|--|
| Data Register O | [63:41] | 0 | |
| | [40:34] | ECC | |
| | [33] | Non-secure identifier for the physical address | |
| | [32:5] | Physical address [39:12] | |
| | [4:3] | Reserved | |
| | [2] | Transient/WBNA | |
| | [1:0] | MESI | |
| | | 00 Invalid 01 Shared 10 Exclusive 11 Modified with respect to the L2 cache | |
| Data Register 1 | [63:0] | 0 | |
| Data Register 2 | [63:0] | 0 | |

The following table shows the data that is returned from accessing the L1 data cache tag RAM without ECC.

Table 2-27: L1 data cache tag format without ECC

| Register | Bit field | Description | |
|-----------------|-----------|--------------------------------------------------------|--|
| Data Register O | [63:34] | 0 | |
| | [33] | Non-secure identifier for the physical address | |
| | [32:5] | Physical address [39:12] | |
| | [4:3] | Reserved | |
| | [2] | Transient/WBNA | |
| | [1:0] | MESI | |
| | | 00 Invalid 01 Shared 10 Exclusive 11 Modified | |
| Data Register 1 | [63:0] | 0 | |
| Data Register 2 | [63:0] | 0 | |

The following table shows the data that is returned from accessing the L1 data cache data RAM with ECC.

Table 2-28: L1 data cache data format with ECC

| Register | Bit field | Description |
|-----------------|-----------|-------------------------------------------------------------------------------------------------------------------------------------|
| Data Register 0 | [63:0] | Word1_data [31:0], Word0_data [31:0] |
| Data Register 1 | [63:0] | Word3_data [31:0], Word2_data [31:0] |
| Data Register 2 | [63:32] | 0 |
| | [31:0] | Word3_ecc [6:0], Word3_poison, Word2_ecc [6:0], Word2_poison, Word1_ecc [6:0], Word1_poison, Word0_ecc [6:0], Word0_poison |

The following table shows the data that is returned from accessing the L1 data cache data RAM without ECC.

Table 2-29: L1 data cache data format without ECC

| Register | Bit field | Description |
|-----------------|-----------|--------------------------------------|
| Data Register 0 | [63:0] | Word1_data [31:0], Word0_data [31:0] |
| Data Register 1 | [63:0] | Word3_data [31:0], Word2_data [31:0] |
| Data Register 2 | [63:0] | 0 |

The following table shows the data that is returned from accessing the L1 data TLB RAM.

Table 2-30: L1 data TLB cache format

| Register | | Bit field | Description |
|-----------------|-----------------|----------------|-------------------------|
| | CORE_PBHA=FALSE | CORE_PBHA=TRUE | |
| Data Register 0 | [63:62] | [63:62] | Virtual address [13:12] |
| | [61:59] | [61:59] | 0 |

| Register | | Bit field | Description |
|-----------------|-----------------|----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| | CORE_PBHA=FALSE | CORE_PBHA=TRUE | |
| | [58] | [58] | Outer-shared |
| | [57] | [57] | Inner-shared |
| | [56:53] | [56:53] | 0 |
| | [52:50] | [52:50] | Memory attributes: |
| | | | 000 Device nGnRnE 001 Device nGnRE 010 Device nGRE 011 Device GRE 100 Non- cacheable 101 Write-Back No-Allocate 110 Write-Back Transient 111 Write-Back Read-Allocate and Write- Allocate |
| | [49:39] | [49:39] | 0 |
| | [38:36] | [38:36] | Page size: |
| | | | 000 4KB 001 16KB 010 64KB 011 256KB 100 2MB 101 Reserved 110 512MB 111 Reserved |
| | [35] | [35] | Non-secure |
| | [34:33] | [34:33] | Translation regime: |
| | | | 00 Secure EL1/ EL0 01 Secure EL3 10 Non-secure EL1/EL0 11 Non-secure EL2 |
| | [32:17] | [32:17] | ASID |
| | [16:1] | [16:1] | VMID |
| | [0] | [0] | Valid |
| Data Register 1 | - | [63] | PBHA[0] |
| | [62:35] | [62:35] | Physical address [39:12] |
| | [34:0] | [34:0] | Virtual address[48:14] |
| Data Register 2 | - | [0] | PBHA[1] |

2.6.6.3 Encoding for the L2 unified cache

The following tables show the encoding that is required to select a given cache line.

Table 2-31: L2 tag location encoding

| Bit fields of Rd | Description |
|------------------|--------------|
| [31:24] | RAMID = 0x10 |
| [23:21] | Reserved |
| [20:18] | Way (0->7) |
| [17:16] | Reserved |
| [15:6] | Index[15:6] |
| [5:0] | Reserved |

Table 2-32: L2 data location encoding

| Bit fields of Rd | Description | |
|------------------|--------------|--|
| [31:24] | RAMID = 0x11 | |
| [23:21] | Reserved | |
| [20:18] | Way (0->7) | |
| [17:16] | Reserved | |
| [15:4] | Index[15:4] | |
| [3:0] | Reserved | |

Table 2-33: L2 victim location encoding

| Bit fields of Rd | Description | |
|------------------|--------------|--|
| [31:24] | RAMID = 0x12 | |
| [23:16] | Reserved | |
| [15:6] | Index[15:6] | |
| [5:0] | Reserved | |

The following table shows the data that is returned from accessing the L2 tag RAM when L2 is configured with a 128KB cache size.

Table 2-34: L2 tag format with a 128KB L2 cache size

| Register | Bit field | | Description |
|-----------------|-----------------|----------------|-------------------------------------------------------------------------|
| | CORE_PBHA=FALSE | CORE_PBHA=TRUE | |
| Data Register 0 | [63:45] | [63:47] | 0 |
| | [44:38] | [46:40] | ECC [6:0] if configured with ECC for a 128KB L2 cache size, otherwise 0 |
| | - | [39:38] | PBHA [1:0] |
| | [37:12] | [37:12] | Physical address [39:14] |
| | [11] | [11] | Non-secure identifier for the physical address |

| Register | Bit field | | Description |
|-----------------|-----------------|----------------|------------------------------------------------------------|
| | CORE_PBHA=FALSE | CORE_PBHA=TRUE | |
| | [10:9] | [10:9] | Virtual index [13:12] |
| | [8:6] | [8:6] | Reserved |
| | [5] | [5] | Shareable |
| | [4] | [4] | Outer allocation hint |
| | [3] | [3] | L1 data cache valid |
| | [2:0] | [2:0] | L2 State |
| | | | 101 Modified 001 Exclusive x11 Shared xx0 Invalid |
| Data Register 1 | [63:0] | [63:0] | 0 |
| Data Register 2 | [63:0] | [63:0] | 0 |

The following table shows the data that is returned from accessing the L2 tag RAM when L2 is configured with a 256KB cache size.

Table 2-35: L2 tag format with a 256KB L2 cache size

| Register | | Bit field | Description |
|-----------------|-----------------|----------------|-------------------------------------------------------------------------|
| | CORE_PBHA=FALSE | CORE_PBHA=TRUE | |
| Data Register 0 | [63:44] | [63:46] | 0 |
| | [43:37] | [45:39] | ECC [6:0] if configured with ECC for a 256KB L2 cache size, otherwise 0 |
| | - | [38:37] | PBHA [1:0] |
| | [36:12] | [36:12] | Physical address [39:15] |
| | [11] | [11] | Non-secure identifier for the physical address |
| | [10:9] | [10:9] | Virtual index [13:12] |
| | [8:6] | [8:6] | Reserved |
| | [5] | [5] | Shareable |
| | [4] | [4] | Outer allocation hint |
| | [3] | [3] | L1 data cache valid |
| | [2:0] | [2:0] | L2 State |
| | | | 101 Modified 001 Exclusive x11 Shared xx0 Invalid |
| Data Register 1 | [63:0] | [63:0] | 0 |
| Data Register 2 | [63:0] | [63:0] | 0 |

The following table shows the data that is returned from accessing the L2 tag RAM when L2 is configured with a 512KB cache size.

Table 2-36: L2 tag format with a 512KB L2 cache size

| Register | Bit field | | Description |
|-----------------|-----------------|----------------|-------------------------------------------------------------------------|
| | CORE_PBHA=FALSE | CORE_PBHA=TRUE | |
| Data Register 0 | [63:43] | [63:45] | 0 |
| | [42:36] | [44:38] | ECC [6:0] if configured with ECC for a 512KB L2 cache size, otherwise 0 |
| | - | [37:36] | PBHA [1:0] |
| | [35:12] | [35:12] | Physical address [39:16] |
| | [11] | [11] | Non-secure identifier for the physical address |
| | [10:9] | [10:9] | Virtual index [13:12] |
| | [8:6] | [8:6] | Reserved |
| | [5] | [5] | Shareable |
| | [4] | [4] | Outer allocation hint |
| | [3] | [3] | L1 data cache valid |
| | [2:0] | [2:0] | L2 State |
| | | | 101 Modified 001 Exclusive x11 Shared xx0 Invalid |
| Data Register 1 | [63:0] | [63:0] | 0 |
| Data Register 2 | [63:0] | [63:0] | 0 |

The following table shows the data that is returned from accessing the L2 data RAM.

Table 2-37: L2 data format

| Register | Bit field | Description |
|-----------------|-----------|----------------------------------------------|
| Data Register 0 | [63:0] | Data [63:0] |
| Data Register 1 | [63:0] | Data [127:64] |
| Data Register 2 | [63:16] | 0 |
| | [15:8] | ECC for Data [127:64] if configured with ECC |
| | [7:0] | ECC for Data [63:0] if configured with ECC |

The following table shows the data that is returned from accessing the L2 victim RAM.

Table 2-38: L2 victim format

| Register | Bit field | Description |
|-----------------|-----------|-------------|
| Data Register 0 | [63:7] | 0 |
| | [6:0] | PLRU [6:0] |
| Data Register 1 | [63:0] | 0 |
| Data Register 2 | [63:0] | 0 |

2.6.6.4 Encoding for the L2 TLB

The following section describes the encoding for L2 TLB direct accesses.

The following table shows the encoding that is required to select a given TLB entry.

Table 2-39: L2 TLB encoding

| Bit fields of Rd | Description | |
|------------------|---------------------------------------------------|--|
| [31:24] | RAMID = 0x18 | |
| [23:21] | Reserved | |
| [20:18] | Way 000 way0 001 way1 010 way2 011 way3 100 way4 | |
| [17:8] | Reserved | |
| [7:0] | Index | |

The following table shows the data that is returned from accessing the L2 TLB.

Table 2-40: L2 TLB format

| Register | | Bit field | Description |
|------------------------|-----------------|----------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| | CORE_PBHA=FALSE | CORE_PBHA=TRUE | |
| Instruction Register 0 | [63:59] | [63:59] | Reserved |
| | [58] | [58] | Non-global |
| | [57] | [57] | Outer-shared |
| | [56] | [56] | Inner-shared |
| | [55] | [55] | Reserved |
| | [54:52] | [54:52] | Memory attributes: |
| | | | 000 Device nGnRnE 001 Device nGnRE 010 Device nGRE 011 Device GRE 100 Non-cacheable 101 Write-Back No- Allocate 110 Write-Back Transient 111 Write-Back Read- Allocate and Write- Allocate |
| | [51:48] | [51:48] | Reserved |
| | [47:20] | [47:20] | Physical address [39:12] |

| Register | | Bit field | Description |
|------------------------|-----------------|----------------|--------------------------------------------------------------------------------------------------------------------------------------|
| | CORE_PBHA=FALSE | CORE_PBHA=TRUE | |
| | [19:17] | [19:17] | Page size: |
| | | | 000 4KB 001 16KB 010 64KB 011 256KB 100 2MB 101 32MB 110 512MB 111 1GB |
| | [16:7] | [16:7] | Reserved |
| | [6] | [6] | Indicates that the entry is coalesced and holds translations for four contiguous pages |
| | [5:2] | [5:2] | This bit field contains the valid bits for four contiguous pages. If the entry is non-coalesced, then 0b0001 indicates a valid entry |
| | [1:0] | [1:0] | Reserved |
| Instruction Register 1 | [63:54] | - | VMID [9:0] |
| | - | [63:56] | VMID [7:0] |
| | [53:38] | [55:40] | ASID [15:0] |
| | - | [39:38] | PBHA[1:0] |
| | $[37]^2$ | [37] | Walk cache entry |
| | [36] | [36] | Prefetched translation |
| | [35:7] | [35:7] | Virtual address [48:20] |
| | [6] | [6] | Non-secure |
| | [5:0] | [5:0] | Reserved |
| Instruction Register 2 | [63:8] | [63:10] | Reserved |
| | [7:6] | [9:8] | Translation regime: |
| | | | 00 Secure EL1 01 EL3 10 Non-secure EL1 11 EL2 |
| | [5:0] | - | VMID [15:10] |
| | - | [7:0] | VMID [15:8] |

2.7 L2 memory system

This chapter describes the L2 memory system.

² when bit [37] of Instruction register 1 is set, indicating that this is a walk cache entry, the decoding provided in this table is not valid.

2.7.1 About the L2 memory system

The L2 memory subsystem consists of:

- An 8-way set associative L2 cache with a configurable size of 128KB, 256KB or 512KB. Cache lines have a fixed length of 64 bytes.
- Strictly inclusive with L1 data cache. Weakly inclusive with L1 instruction cache.
- Configurable CHI interface to the *DynamIQ Shared Unit AE* (DSU-AE) or CHI compliant system with support for 128-bit and 256-bit data widths.
- Dynamic biased replacement policy.
- Modified Exclusive Shared Invalid (MESI) coherency.
- In Lock-mode, L2 tag and data pipelines are forced to inline correction mode to allow single-bit ECC error correction without causing lock-step divergence.

2.7.2 About the L2 cache

The integrated L2 cache is the Point of Unification for the Cortex®-A76AE core. It handles both instruction and data requests from the instruction side and data side of each core respectively.

When fetched from the system, instructions are allocated to the L2 cache and can be invalidated during maintenance operations.



Caches in the core are invalidated automatically at reset deassertion unless the core power mode is initialized to Debug recovery mode. See the $Arm^{\mathbb{R}}$ Dynaml $Q^{\mathbb{M}}$ Shared Unit AE Technical Reference Manual for more information.

2.7.3 Support for memory types

The Cortex®-A76AE core simplifies the coherency logic by downgrading some memory types.

- Memory that is marked as both Inner Write-Back Cacheable and Outer Write-Back Cacheable is cached in the L1 data cache and the L2 cache.
- Memory that is marked Inner Write-Through is downgraded to Non-cacheable.
- Memory that is marked Outer Write-Through or Outer Non-cacheable is downgraded to Non-cacheable, even if the inner attributes are Write-Back cacheable.

The following table shows the transaction capabilities of the Cortex®-A76AE core. It lists the maximum possible values for read, write, DVM issuing, and snoop capabilities of the private L2 cache.

Table 2-41: Cortex®-A76AE transaction capabilities

| Attribute | Value | Description |
|-----------------------------|----------|---------------------------------------------------------------------------------------------------|
| Write issuing capability | 22/34/46 | Maximum number of outstanding write transactions. Dependent on the configured TQ size. (24/36/48) |
| Read issuing capability | 22/34/46 | Maximum number of outstanding read transactions. Dependent on the configured TQ size. (24/36/48) |
| Snoop acceptance capability | 17/23/29 | Maximum number of outstanding snoops and stashes accepted. Dependent on the TQ size. (24/36/48) |
| DVM issuing capability | 22/34/46 | Maximum number of outstanding DVMOp transactions. Dependent on the configured TQ size. (24/36/48) |

2.8 Reliability, Availability, and Serviceability (RAS)

This chapter describes the RAS features implemented in the Cortex®-A76AE core.

2.8.1 Cache ECC and parity

The Cortex®-A76AE core implements the *Reliability, Availability, and Serviceability* (RAS) extension to the Arm®v8-A architecture which provides mechanisms for standardized reporting of the errors that are generated by cache protection mechanisms.

The Cortex®-A76AE core always includes core cache protection. The Cortex®-A76AE core can detect and correct a 1-bit error in any RAM and detect 2-bit errors in some RAMs.



For information about SCU-L3 cache protection, see the $Arm^{\mathbb{R}}$ DynamlQ^M Shared Unit AE Technical Reference Manual.

The RAS extension improves the system by reducing unplanned outages:

- Transient errors can be detected and corrected before they cause application or system failure.
- Failing components can be identified and replaced.
- Failure can be predicted ahead of time to allow replacement during planned maintenance.

Errors that are present but not detected are known as latent or undetected errors. A transaction carrying a latent error is corrupted. In a system with no error detection, all errors are latent errors and are silently propagated by components until either:

• They are masked and do not affect the outcome of the system. These are benign or false errors.

Functional description

• They affect the service interface of the system and cause failure. These are silent data corruptions.

The severity of a failure can range from minor to catastrophic. In many systems, data or service loss is regarded as more of a minor failure than data corruption, as long as backup data is available.

The RAS extension focuses on errors that are produced from hardware faults, which fall into two main categories:

- Transient faults.
- Persistent faults.

The RAS extension describes data corruption faults, which mostly occur in memories and on data links. RAS concepts can also be used for the management of other types of physical faults that are found in systems, such as lock-step errors, thermal trip, and mechanical failure. The RAS extension provides a common programmers model and mechanisms for fault handling and error recovery.

2.8.2 Cache protection behavior

The configuration of the RAS extension that is implemented in the Cortex®-A76AE core includes cache protection.

In this case, the Cortex®-A76AE core protects against errors that result in a RAM bitcell holding the incorrect value.

The RAMs in the Cortex®-A76AE core have the following capability:

SED

Single Error Detect. One bit of parity is applicable to the entire word. The word size is specific for each RAM and depends on the protection granule.

Interleaved parity

One bit of parity is applicable to the even bits of the word, and one bit of parity is applicable to the odd bits of the word.

SECDED

Single Error Correct, Double Error Detect.

Cache protection behavior on page 77 indicates which protection type is applied to each RAM.

The core can progress and remain functionally correct when there is a single bit error in any RAM.

If there are multiple single bit errors in different RAMs, or within different protection granules within the same RAM, then the core also remains functionally correct.

If there is a double bit error in a single RAM within the same protection granule, then the behavior depends on the RAM:

• For RAMs with SECDED capability, the core detects and either reports or defers the error. If the error is in a cache line containing dirty data, then that data might be lost.

• For RAMs with only SED, the core does not detect a double bit error. This might cause data corruption.

If there are three or more bit errors within the same protection granule, then depending on the RAM and the position of the errors within the RAM, the core might or might not detect the errors.

The cache protection feature of the core has a minimal performance impact when no errors are present.

Table 2-42: Cache protection behavior

| RAM | Protection type | Protection granule | Correction behavior |
|---------------------------------------|---------------------------------|------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|
| L1 instruction cache tag | 1 parity bit | 31 bits | The line that contains the error is invalidated from the L1 instruction cache and fetched again from the subsequent memory system. |
| L1 instruction cache data | SED | 72 bits | The line that contains the error is invalidated from the L1 instruction cache and fetched again from the subsequent memory system. |
| L1 BTB | None | - | - |
| L1 GHB | None | - | - |
| L1 BPIQ | None | - | - |
| L1 data cache tag | SECDED | 34 bits + 7 bits for ECC attached to the word. | The cache line that contains the error gets evicted, corrected in line, and refilled to the core. |
| L1 data cache data | SECDED | 32 bits of data +1 poison bit + 7 bits for ECC attached to the word. | The cache line that contains the error gets evicted, corrected in line, and refilled to the core. |
| L1 Prefetch History Table (PHT) | None | - | - |
| MMU translation cache | 2 interleaved parity bits | 67 bits | Entry invalidated, new pagewalk started to refetch it. |
| MMU replacement policy | None | - | - |
| MMU biased replacement | None | - | - |
| L2 cache tag | SECDED | 128KB L2 - 7 ECC bits for 38 tag bits 256KB L2 - 7 ECC bits for 37 tag | Tag is corrected inline. |
| | | bits | |
| | | 512KB L2 - 7 ECC bits for 36 tag bits | |
| L2 cache data | SECDED | 8 ECC bits for 64 data bits | Data is corrected inline. |
| L2 victim | None | - | - |
| L2 TQ data | SECDED | 8 ECC bits for 64 data bits | Data is corrected inline. |

To ensure that progress is guaranteed even in case of hard error, the core returns corrected data to the core, and no cache access is required after data correction.

2.8.3 Uncorrected errors and data poisoning

When an error is detected, the correction mechanism is triggered. However, if the error is a 2-bit error in a RAM protected by ECC, then the error is not correctable.

The behavior on an uncorrected error depends on the type of RAM.

Uncorrected error detected in a data RAM

When an uncorrected error is detected in a data RAM, the chunk of data with the error is marked as poisoned. This poison information is then transferred with the data and stored in the cache if the data is allocated into another cache. The poisoned information is stored per 64 bits of data, except in the L1 data cache where it is stored per 32 bits of data.

Uncorrected error detected in a tag RAM

When an uncorrected error is detected in a tag RAM, either the address or coherency state of the line is not known, and the corresponding data cannot be poisoned. In this case, the line is invalidated and an error recovery interrupt is generated to notify software that data has potentially been lost.

2.8.4 RAS error types

This section describes the RAS error types that are introduced by the RAS extension and supported in the Cortex®-A76AE core.

When a component accesses memory, an error might be detected in that memory and then be corrected, deferred, or detected but silently propagated. The following table lists the types of RAS errors that are supported in the Cortex®-A76AE core.

Table 2-43: RAS error types supported in the Cortex®-A76AE core

| RAS error type | Definition |
|----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Corrected | A Corrected Error (CE) is reported for a single-bit ECC error on any protected RAM. |
| Deferred | A Deferred Error (DE) is reported for a double-bit ECC error that affects the data RAM on either the L1 data cache or the L2 cache. |
| Uncorrected | An <i>Uncorrected Error</i> (UE) is reported for a double-bit ECC error that affects the tag RAM of either the L1 data cache or the L2 cache. An Uncorrected Error is also reported for external aborts that are received in response to a store, data cache maintenance, instruction cache maintenance, TLBI maintenance, or cache copyback of dirty data. |

2.8.5 Error Synchronization Barrier

The Error Synchronization Barrier (ESB) instruction synchronizes unrecoverable system errors.

In the Cortex®-A76AE core, the ESB instruction allows efficient isolation of errors:

- The ESB instruction does not wait for completion of accesses that cannot generate an asynchronous external abort. For example, if all external aborts are handled synchronously or it is known that no such accesses are outstanding.
- The ESB instruction does not order accesses and does not guarantee a pipeline flush.

All system errors must be synchronized by an ESB instruction, which guarantees the following:

- All system errors that are generated before the ESB instruction have pended a System Error Interrupts (SEI) exception.
- If a physical SEI is pended by or was pending before the ESB instruction executes, then:
 - It is taken before completion of the ESB instruction, if the physical SEI exception is unmasked at the current Exception level.
 - The pending SEI is cleared, the SEI status is recorded in DISR_EL1, and DISR_EL1.A is set to 1 if the physical SEI exception is masked at the current Exception level. It indicates that the SEI exception was generated before the ESB instruction by instructions that occur in program order.
- If a virtual SEI is pended by or was pending before the ESB instruction executes, then:
 - It is taken before completion of the ESB instruction, if the virtual SEI exception is unmasked.
 - The pending virtual SEI is cleared and the SEI status is recorded in VDISR_EL2 using the information that is provided by software in VSESR_EL2, if the virtual SEI exception is masked.

After the ESB instruction, one of the following scenarios occurs:

- SEIs pended by errors are taken and their status is recorded in ESR_ELn.
- SEIs pended by errors are deferred and their status is recorded in DISR_EL1 or VDISR_EL2.

This includes unrecoverable SEIs that are generated by instructions, translation table walks, and instruction fetches on the same core.

DISR_EL1 can only be accessed at EL1 and above. If EL2 is implemented and HCR_EL2.AMO is set to 1, then reads and writes of DISR_EL1 at Non-secure EL1 access VDISR_EL2.



See the following registers:

- 3.2.41 DISR_EL1, Deferred Interrupt Status Register, EL1 on page 160.
- 3.2.57 HCR_EL2, Hypervisor Configuration Register, EL2 on page 173.
- 3.2.107 VDISR_EL2, Virtual Deferred Interrupt Status Register, EL2 on page 237.

2.8.6 Error recording

The component that detects an error is called a node. The Cortex®-A76AE core is a node that interacts with the DynamlQ[™] Shared Unit AE node. There is one record per node for the errors detected.

For more information on error recording that is generated by cache protection, see the Arm® Reliability, Availability, and Serviceability (RAS) Specification, Armv8, for the Armv8-A architecture profile. The following points apply specifically to the Cortex®-A76AE core:

- In the Cortex®-A76AE core, any error that is detected is reported and recorded in the error record registers:
 - 3.2.43 ERRSELR_EL1, Error Record Select Register, EL1 on page 163
 - 3.2.44 ERXADDR_EL1, Selected Error Record Address Register, EL1 on page 164
 - 3.2.45 ERXCTLR_EL1, Selected Error Record Control Register, EL1 on page 164
 - 3.2.46 ERXFR_EL1, Selected Error Record Feature Register, EL1 on page 164
 - 3.2.47 ERXMISCO_EL1, Selected Error Record Miscellaneous Register 0, EL1 on page 164
 - 3.2.48 ERXMISC1_EL1, Selected Error Record Miscellaneous Register 1, EL1 on page 165
 - 3.2.49 ERXPFGCDN_EL1, Selected Error Pseudo Fault Generation Count Down Register, EL1 on page 165
 - 3.2.50 ERXPFGCTL_EL1, Selected Error Pseudo Fault Generation Control Register, EL1 on page 166
 - 3.2.51 ERXPFGF_EL1, Selected Pseudo Fault Generation Feature Register, EL1 on page 167
 - 3.2.52 ERXSTATUS_EL1, Selected Error Record Primary Status Register, EL1 on page 169
- There are two error records provided, which can be selected with the ERRSELR_EL1 register:
 - Record 0 is private to the core, and is updated on any error in the core RAMs including L1 caches, TLB, and L2 cache.
 - Record 1 records any error in the L3 and snoop filter RAMs and is shared between all cores in the cluster.
- The fault handling interrupt is generated on the **nFAULTIRQ[0]** pin for L3 and snoop filter errors, or on the **nFAULTIRQ[n+1]** pin for core *n* L1 and L2 errors.

2.8.7 Error injection

The Cortex®-A76AE core supports fault injection for the purpose of testing fault handling software.

The core is programmable to inject an error for any of the possible error types (corrected error, deferred error, uncontainable error, and recoverable error) on a future memory access. When that access is performed, the core responds as if an error was detected on that access by asserting error

interrupts, logging information in the error records, and taking aborts as appropriate for the type of error. Injecting an error will not affect the data in the RAM or the checking process itself. When a real error is detected on an access for which an injected error is programmed, the injected error will not prevent the core from handling the real error. The RAS register might log the injected error or the real error in this case.

To get the error injection to work:

- Program the Error Record Select Register (ERRSELR EL1) to select Error record 0.
- Program the Error Record Control Register (ERROCTLR) to enable error detection/recovery and fault detection.
- Program the Error Pseudo Fault Generation Control Register (ERROPFGCTL) to allow error injection.



Cacheable code must also be executed, which will cause cacheable transactions that can be injected with errors.

The following table describes all the possible types of error that the core can encounter and therefore inject.

Table 2-44: Errors injected in the Cortex®-A76AE core

| Error type | Description |
|----------------------|-----------------------------------------------------------------------------------------------------------------------|
| Corrected errors | A corrected error is generated for a single-bit ECC error on L1 data caches and L2 caches, both on data and tag RAMs. |
| Deferred errors | A deferred error is generated for a double-bit ECC error on L1 data caches and L2 caches, but only on data RAM. |
| Uncontainable errors | An uncontainable error is generated for a double-bit ECC error on L1 data caches and L2 caches, but only on tag RAM. |

The following table describes the registers that handle error injection in the Cortex®-A76AE core.

Table 2-45: Error injection registers

| Register name | Description |
|---------------|------------------------------------------------------------------------------------------|
| ERROPFGF | The ERR Pseudo Fault Generation Feature register defines which errors can be injected. |
| ERROPFGCTL | The ERR Pseudo Fault Generation Control register controls the errors that are injected. |
| ERROPFGCDN | The ERR Pseudo Fault Generation Count Down register controls the fault injection timing. |



This mechanism simulates the corruption of any RAM but the data is not actually corrupted.

See also:

• 3.3.7 ERROPFGCDN, Error Pseudo Fault Generation Count Down Register on page 250.

- 3.3.8 ERROPFGCTL, Error Pseudo Fault Generation Control Register on page 251.
- 3.3.9 ERROPFGF, Error Pseudo Fault Generation Feature Register on page 252.

2.9 Generic Interrupt Controller CPU interface

This chapter describes the Cortex®-A76AE core implementation of the Arm *Generic Interrupt Controller* (GIC) CPU interface.

2.9.1 About the Generic Interrupt Controller CPU interface

The Cortex®-A76AE core implements the GIC CPU interface as described in the Arm® Generic Interrupt Controller Architecture Specification.

This interfaces with an external GICv3 or GICv4 distributor component within the cluster system and is a resource for supporting and managing interrupts. The GIC CPU interface hosts registers to mask, identify, and control states of interrupts forwarded to that core. Each core in the cluster system has a GIC CPU interface component and connects to a common external distributor component.



This chapter describes only features that are specific to the Cortex®-A76AE core implementation. Additional information specific to the cluster can be found in Arm^{\otimes} DynamlQ $^{\infty}$ Shared Unit AE Technical Reference Manual.

The GICv4 architecture supports:

- Two Security states.
- Interrupt virtualization.
- Software-generated Interrupts (SGIs).
- Message-Based Interrupts.
- System register access for the CPU interface.
- Interrupt masking and prioritization.
- Cluster environments, including systems that contain more than eight cores.
- Wake-up events in power management environments.

The GIC includes interrupt grouping functionality that supports:

- Configuring each interrupt to belong to an interrupt group.
- Signaling Group 1 interrupts to the target core using either the IRQ or the FIQ exception request. Group 1 interrupts can be Secure or Non-secure.
- Signaling Group 0 interrupts to the target core using the FIQ exception request only.
- A unified scheme for handling the priority of Group 0 and Group 1 interrupts.

This chapter describes only features that are specific to the Cortex®-A76AE core implementation.

Related information

GIC registers on page 257

2.9.2 Bypassing the CPU interface

The GIC CPU interface is always implemented within the Cortex®-A76AE core.

However, you can disable it if you assert the GICCDISABLE signal HIGH at reset. If you disable the GIC CPU interface, the input pins nVIRQ and nVFIQ can be driven by an external GIC in the SoC. GIC System register access generates **UNDEFINED** instruction exceptions when the GICCDISABLE signal is HIGH.

If the GIC is enabled, the input pins nVIRQ and nVFIQ must be tied off to HIGH. This is because the internal GIC CPU interface generates the virtual interrupt signals to the cores. The nIRQ and nFIQ signals are controlled by software, therefore there is no requirement to tie them HIGH.

2.10 Advanced SIMD and floating-point support

This chapter describes the Advanced SIMD and floating-point features and registers in the Cortex®-A76AE core. The unit in charge of handling the Advanced SIMD and floating-point features is also referred to as the data engine in this manual.

2.10.1 About the Advanced SIMD and floating-point support

The Cortex®-A76AE core supports the Advanced SIMD and scalar floating-point instructions in the A64 instruction set and the Advanced SIMD and floating-point instructions in the A32 and T32 instruction sets.

The Cortex®-A76AE floating-point implementation:

- Does not generate floating-point exceptions.
- Implements all scalar operations in hardware with support for all combinations of:
 - Rounding modes.
 - Flush-to-zero.
 - Default Not a Number (NaN) modes.

The Arm®v8-A architecture does not define a separate version number for its Advanced SIMD and floating-point support in the AArch64 Execution state because the instructions are always implicitly present.

2.10.2 Accessing the feature identification registers

Software can identify the Advanced SIMD and floating-point features using the feature identification registers in the AArch64 Execution state only.

The Cortex®-A76AE core only supports AArch32 in ELO, therefore none of the feature identification registers are accessible in the AArch32 Execution state.

You can access the feature identification registers in the AArch64 Execution state using the MRS instruction, for example:

```
MRS <Xt>, ID_AA64PFR0_EL1 ; Read ID_AA64PFR0_EL1 into Xt
MRS <Xt>, MVFR0_EL1 ; Read MVFR0_EL1 into Xt
MRS <Xt>, MVFR1_EL1 ; Read MVFR1_EL1 into Xt
MRS <Xt>, MVFR2_EL1 ; Read MVFR2_EL1 into Xt
```

Table 2-46: AArch64 Advanced SIMD and scalar floating-point feature identification registers

| Register name | Description |
|-----------------|------------------------------------------------------------------------------------|
| ID_AA64PFR0_EL1 | See 3.2.67 ID_AA64PFR0_EL1, AArch64 Processor Feature Register 0, EL1 on page 185. |
| MVFR0_EL1 | See 3.5.4 MVFRO_EL1, Media, and VFP Feature Register 0, EL1 on page 287. |
| MVFR1_EL1 | See 3.5.5 MVFR1_EL1, Media, and VFP Feature Register 1, EL1 on page 289. |
| MVFR2_EL1 | See 3.5.6 MVFR2_EL1, Media, and VFP Feature Register 2, EL1 on page 291. |

2.11 Split-Lock feature

This chapter describes the Split-Lock feature of the Cortex®-A76AE core.

2.11.1 Implementing Split-Lock

The DynamlQ Shared Unit AE (DSU-AE) uses a specific Split-Lock implementation to enable the cluster to execute in either Split-mode, or Lock-mode, or the mixed execution Hybrid-mode. Use the **CEMODE** input to select the required cluster execution mode at boot time.

All of the DSU-AE logic, except the RAMs, is duplicated. The RAMs are shared between the two copies of the logic. RAM sharing in this way saves significant area and improves the *Failure In Time* (FIT) rate. The SECDED ECC protection scheme is always enabled for all functional DSU-AE RAMs.



ECC protection is enabled for DSU-AE functional RAMs, that is, the L3 tag and data RAMs, the snoop filter, and the Long-Term Data Buffer (LTDB) RAM. The victim RAM is used for performance only and does not have ECC protection.


The DSU-AE uses a comparator with a registered output. In addition to the signals to be compared, the comparator includes a force input, and an enable that controls whether the compare generates an error. The force input can artificially force the comparator to generate an error result, to exercise

Functional description

the error reporting logic. To help protect against failures in the comparator, there are redundant copies of each of the comparators. A CPU bridge manages the asynchronous interface between the DSU-AE and the associated cores.


The following figure shows the DSU-AE Lock-mode operation, that is, where CEMODE = 0b11.

Figure 2-8: DSU-AE Lock-mode operation

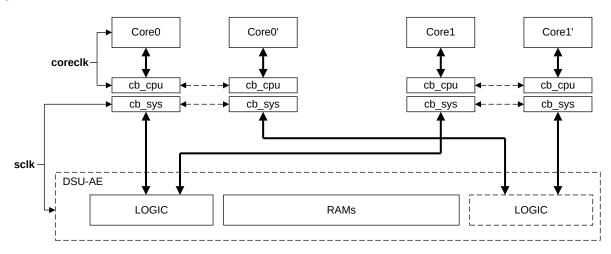


The following figure shows the DSU-AE Split-mode operation, that is, where CEMODE = 0b01.

Figure 2-9: DSU-AE Split-mode operation

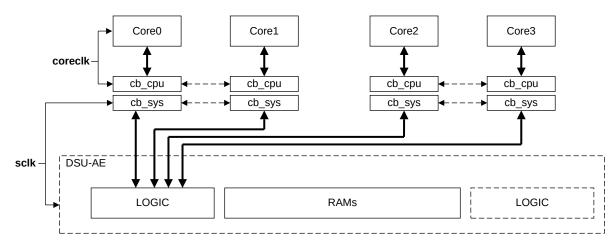

The following figure shows the DSU-AE Hybrid-mode operation, that is, where CEMODE = 0b10.

Figure 2-10: DSU-AE Hybrid-mode operation

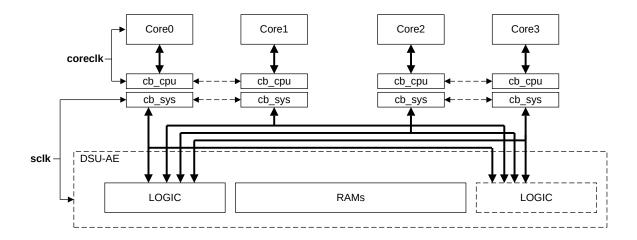

In Split-mode, all the cores are logically present. For example, in the figure above Core0, Core1, Core 2, and Core 3 are logically present.



Cortex®-A76AE supports a maximum of two core pairs per cluster for a total of four cores.

For more information on Split-mode, Lock-mode, and Hybrid-mode, see the Arm^{\otimes} DynamlQ^{$^{\text{M}}$} Shared Unit AE Technical Reference Manual.

2.11.1.1 CPU bridge

The CPU bridge for the Cortex®-A76AE is based on the *DynamIQ Shared Unit AE* (DSU-AE) CPU bridge. The DSU-AE CPU bridge provides the asynchronous bridging functionality, and the clock and power control logic for the core.

The objectives of the CPU bridge with Split-Lock capabilities are to:

- Enable lock-step execution with temporal diversity.
- Maintain lock-step execution after crossing an asynchronous boundary.
- Increase the detection of any transient and permanent faults that affect correct program flow.
- Provide a Fault Management Unit (FMU) to provide fault aggregation logic and safe reporting of faults and Reliability, Availability, and Serviceability (RAS) core signals.

The CPU bridge provides full duplication and appends each channel with logic to handle lock-step asynchronous execution.

CPU bridge synchronous mode logic is included to support CHI interfaces and contains logic to handle asynchronous powerdown requests. If a permanent or transient fault affects correct program flow, a passive mismatch occurs in the DSU-AE comparators.

The outputs from the primary CPU bridge and the redundant CPU bridge are compared to check for errors. There are two comparators for redundancy and therefore two sets of result outputs for signaling errors. The compare outputs are qualified with valid signals whenever possible, for example for payloads. Compare outputs are also aggregated per bridge channel, for example when using CHI. Timeout detectors can detect faults where comparators alone are not sufficient. Compare fault vectors are sticky, and are controlled using core inputs for enabling and forcing mismatches in compare groups. The compare fault vectors are presented to the cluster in the system clock domain, SCLK. In addition, the CPU bridge passes safe outputs of RAS core signals in the system clock domain.

2.11.1.2 Comparators

Comparator logic is only enabled when the Cortex®-A76AE is operating in Lock-mode. There are two instances of each comparator, reporting on separate outputs.

Delay flops are also associated with Lock-mode.

The delay flops:

- Create the temporal diversity between the primary and redundant logic.
- Align the comparison logic.

2.11.1.3 Core RAS reporting signals

The CPUECTLR_EL1[1] control bit forces reads from *Reliability*, *Availability*, *and Serviceability* (RAS) error record registers to Read-As-Zero instead of the current value in the register. This behavior prevents a read from these registers from causing divergence after a fault, where the only divergence is the updating of one or more of the RAS register bits.

Instead of register reads, the RAS register bits are output as pins from both the primary and redundant cores. In the *DynamlQ Shared Unit AE* (DSU-AE), these outputs correspond to core RAS reporting signals that the DSU-AE reports on the cluster output ports. Therefore, no divergence checks occur on these signals between the primary and redundant cores. The SoC is responsible for performing any required logical operations on these signals.

The following table shows the RAS error signals.

Table 2-47: RAS error signals

| Core Signal | Core RAS reporting signal | Direction | Description |
|--------------------|----------------------------------------------------|-----------|---------------------------------------|
| cpu_errmisc0[47:0] | COREERRMISC_CP <cp>_<p <br="">R>[47:0]</p></cp> | Output | Current state of ERROMISC0[47:0] |
| cpu_errstatus_ue | COREERR_UE_CP <cp>_<p r=""></p></cp> | Output | Current state of ERROSTATUS.UE |
| cpu_errstatus_de | COREERR_DE_CP <cp>_<p r=""></p></cp> | Output | Current state of ERROSTATUS.DE |

| Core Signal | Core RAS reporting signal | Direction | Description |
|-----------------------|----------------------------------------------------|-----------|--------------------------------------------------------------------------------------------------|
| cpu_errstatus_ce[1:0] | COREERR_CE_CP <cp>_<p <br="">R>[1:0]</p></cp> | Output | Current state of ERROSTATUS.CE |
| cpu_errstatus_of | COREERR_OF_CP <cp>_<p r=""></p></cp> | Output | Current state of ERROSTATUS.OF |
| cpu_errstatus_av | COREERR_AV_CP <cp>_<p r=""></p></cp> | Output | Current state of ERROSTATUS.AV |
| cpu_err_addr[40:0] | COREERR_ADDR_CP <cp>_<p <br="">R>[p:0]</p></cp> | Output | Current state of ERROADDR[NS,PADDR] |
| cpu_err_valid | COREERR_V_CP <cp>_<p r=""></p></cp> | Output | One-cycle pulse for each new error recorded. |
| | | | Note: Although the preceding signals might not actually change, cpu_err_valid is still asserted. |



These error signals are reported to the DSU-AE. For more information, see the Core RAS reporting signals section in the $Arm^{\text{@}}$ DynamlQ $^{\text{M}}$ Shared Unit AE Integration Manual.

Each core in the Cortex®-A76AE core pair routes the error signals through the CPU bridge. The CPU bridges contain the Split-Lock functionality that monitors divergence within the core pair. The CPU bridge fault management block aggregates all faults into a single vector and reports it with redundancy to the DSU-AE, as the following figure shows.

Figure 2-11: coredclsfault_p/r[7:0] CPU bridge fault vector

| 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0 | |
|------|-----|-------|----|-----|-----|-----|-----|--|
| MISC | SRI | EVENT | TS | APB | ATB | GIC | CHI | |

The following table shows the CPU bridge fault vector bit assignments.

Table 2-48: coredclsfault_p/r[7:0] bit assignments

| Bits | Name | Function | Comparator label |
|------|-------|------------------------------------------|----------------------------------------------------------|
| [7] | MISC | Clock, power, and reset logic | SM_DCLS_ <sys cpu=""><intf>_<pr rd=""></pr></intf></sys> |
| [6] | SRI | System register timer logic | SM_DCLS_ <sys cpu="">SRI_<pr rd=""></pr></sys> |
| [5] | EVENT | Event logic | SM_DCLS_ <sys cpu="">EVT_<pr rd=""></pr></sys> |
| [4] | TS | Timestamp logic | SM_DCLS_ <sys cpu="">TS_<pr rd=""></pr></sys> |
| [3] | APB | Debug logic | SM_DCLS_ <sys cpu="">DBG_<pr rd=""></pr></sys> |
| [2] | ATB | Trace logic | SM_DCLS_ <sys cpu="">ATB_<pr rd=""></pr></sys> |
| [1] | GIC | Generic Interrupt Controller (GIC) logic | SM_DCLS_ <sys cpu="">GIC_<pr rd=""></pr></sys> |
| [O] | CHI | CHI logic | SM_DCLS_ <sys cpu="">CHI_<pr rd=""></pr></sys> |



For a complete list of comparator labels, see the Arm® Cortex®-A76AE Core Failure Modes, Effects and Diagnostic Analysis Report.

2.11.1.4 Detectable faults

In Lock-mode, comparators can detect a single fault occurring in either the functional logic or the redundant copy of the logic. The fault is discovered when it causes a difference in the compared outputs.

A fault in either of the comparators might also be detected.

Multiple faults occurring simultaneously might also be detected when the following statements are true:

- The same fault is not present in both the functional logic and the redundant copy at the same time.
- The faults cause a difference between the compared outputs of the functional logic and those of the redundant copy.



Some faults might not cause incorrect operation. For example, a fault in a register that is never read by the software running in a particular system might not cause incorrect operation.

2.11.1.5 Non-detectable faults

In Lock-mode, faults that do not cause any difference in observable behavior between the primary logic and the redundant logic are not detected. Systematic faults in the primary logic are not detected by the comparators, because the fault results in identical erroneous behavior in both primary and redundant logic.

2.11.1.6 Fault containment

Errors that are detected in Lock-mode cannot be contained. The error on an output, to the external system or on one of the DSU-AE RAMs, might only be detected several cycles after it appears at the output. Therefore, it has potentially propagated into the system or into the RAM.

2.11.1.7 Fault reaction

The Cortex®-A76AE processor does not include any specific features to react to a fault detected by the lock-step mechanism. The system integrator might choose to reset the system on detecting a fault or initiate some other hardware or software recovery mechanism. It is not normally possible

to discover whether the fault occurred in the functional logic, in the redundant copy, or in the comparators themselves.

Fault Reaction Time

It is not possible to quantify the Fault Reaction Time FRT for a fault in the processor that is detected by the lock-step mechanism. The reasons for this include:

- The fault might cause a bit in an internal register to be flipped. Until that register is read and affects the primary outputs of the processor, which might be many cycles later, the fault stays undetected. Alternatively, if this register is not used by the software running on the processor, it might never be detected.
- The number of clock cycles that are needed to propagate the fault to a primary output depends on the number of register (pipeline or buffer) stages between the fault location and the primary output.

Latent fault detection and control mechanisms

The latent faults that could lead to non-detection of faults either within the primary or redundant core are expected to occur within the delay registers or comparator elements. These elements are defined by the system integrator. The system integrator can include latent fault detection mechanisms in the delay and comparator elements as necessary. Faults which do not affect the externally observable behavior of one of the processors in a lock-step configuration are not detectable by the lock-step comparators.

3 Register descriptions

This part describes the non-debug registers of the Cortex®-A76AE core.

3.1 AArch32 System registers

This chapter describes the System registers in the AArch32 state.

3.1.1 AArch32 architectural System register summary

This chapter identifies the AArch32 architectural System registers implemented in the Cortex®-A76AE core.

The following table identifies the architecturally defined registers that are implemented in the Cortex®-A76AE core. For a description of these registers, see the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

For the registers listed in the following table, coproc==0b1111.

Table 3-1: Architecturally defined registers

| Name | CRn | Opc1 | CRm | Opc2 | Width | Description |
|-----------|-----|------|-----|------|-------|--------------------------------------------------------|
| CNTFRQ | с14 | 0 | c0 | 0 | 32 | Timer Clock Ticks per Second |
| CNTP_CTL | c14 | 0 | c2 | 1 | 32 | Counter-timer Physical Timer Control register |
| CNTP_CVAL | - | 2 | c14 | - | 64 | Counter-timer Physical Timer CompareValue register |
| CNTP_TVAL | c14 | 0 | c2 | 0 | 32 | Counter-timer Physical Timer TimerValue register |
| CNTPCT | - | 0 | c14 | - | 64 | Counter-timer Physical Count register |
| CNTV_CTL | c14 | 0 | с3 | 1 | 32 | Counter-timer Virtual Timer Control register |
| CNTV_CVAL | - | 3 | c14 | - | 64 | Counter-timer Virtual Timer CompareValue register |
| CNTV_TVAL | c14 | 0 | c3 | 0 | 32 | Counter-timer Virtual Timer TimerValue register |
| CNTVCT | - | 1 | c14 | - | 64 | Counter-timer Virtual Count register |
| CP15ISB | c7 | 0 | c5 | 4 | 32 | Instruction Synchronization Barrier System instruction |
| CP15DSB | c7 | 0 | c10 | 4 | 32 | Data Synchronization Barrier System instruction |
| CP15DMB | c7 | 0 | c10 | 5 | 32 | Data Memory Barrier System instruction |
| DLR | c4 | 3 | c5 | 1 | 32 | Debug Link Register |
| DSPSR | c4 | 3 | c5 | 0 | 32 | Debug Saved Program Status Register |
| TPIDRURO | c13 | 0 | c0 | 3 | 32 | User read-only Thread ID Register |
| TPIDRURW | c13 | 0 | c0 | 2 | 32 | User read/write Thread ID Register |

3.2 AArch64 System registers

This chapter describes the System registers in the AArch64 state.

3.2.1 AArch64 registers

This chapter provides information about the AArch64 System registers with **IMPLEMENTATION DEFINED** bit fields and **IMPLEMENTATION DEFINED** registers associated with the core.

The chapter provides **IMPLEMENTATION SPECIFIC** information, for a complete description of the registers, see the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

The chapter is presented as follows:

AArch64 architectural System register summary

This section identifies the AArch64 architectural System registers implemented in the Cortex®-A76AE core that have **IMPLEMENTATION DEFINED** bit fields. The register descriptions for these registers only contain information about the **IMPLEMENTATION DEFINED** bits.

AArch64 IMPLEMENTATION DEFINED register summary

This section identifies the AArch64 architectural registers that are implemented in the Cortex®-A76AE core that are **IMPLEMENTATION DEFINED**.

AArch64 registers by functional group

This section groups the **IMPLEMENTATION DEFINED** registers and architectural System registers with **IMPLEMENTATION DEFINED** bit fields, as identified previously, by function. It also provides reset details for key register types.

Register descriptions

The remainder of the chapter provides register descriptions of the **IMPLEMENTATION DEFINED** registers and architectural system registers with **IMPLEMENTATION DEFINED** bit fields, as identified previously. These are listed in alphabetic order.

3.2.2 AArch64 architectural System register summary

This section describes the AArch64 architectural System registers implemented in the Cortex®-A76AE core.

The section contains two tables:

Registers with implementation defined bit fields

This table identifies the architecturally defined registers in Cortex®-A76AE that have implementation defined bit fields. The register descriptions for these registers only contain information about the implementation defined bits.

See Registers with implementation defined bit fields on page 93.

Other architecturally defined registers

This table identifies the other architecturally defined registers that are implemented in the Cortex®-A76AE core. These registers are described in the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

See Other architecturally defined registers on page 96.

Table 3-2: Registers with implementation defined bit fields

| Name | Op0 | CRn | Op1 | CRm | Op2 | Width | Description |
|--------------|-----|-----|-----|-----|-----|-------|--------------------------------------------------------------------------------------|
| ACTLR_EL1 | 3 | с1 | 0 | сO | 1 | 64 | 3.2.5 ACTLR_EL1, Auxiliary Control Register, EL1 on page 105 |
| ACTLR_EL2 | 3 | с1 | 4 | сO | 1 | 64 | 3.2.6 ACTLR_EL2, Auxiliary Control Register, EL2 on page 106 |
| ACTLR_EL3 | 3 | с1 | 6 | c0 | 1 | 64 | 3.2.7 ACTLR_EL3, Auxiliary Control Register, EL3 on page 109 |
| AFSRO_EL1 | 3 | c5 | 0 | c1 | 0 | 32 | 3.2.8 AFSRO_EL1, Auxiliary Fault Status Register 0, EL1 on page 111 |
| AFSRO_EL2 | 3 | c5 | 4 | с1 | 0 | 32 | 3.2.9 AFSRO_EL2, Auxiliary Fault Status Register 0, EL2 on page 112 |
| AFSRO_EL3 | 3 | c5 | 6 | с1 | 0 | 32 | 3.2.10 AFSRO_EL3, Auxiliary Fault Status Register 0, EL3 on page 113 |
| AFSR1_EL1 | 3 | c5 | 0 | с1 | 1 | 32 | 3.2.11 AFSR1_EL1, Auxiliary Fault Status Register 1, EL1 on page 113 |
| AFSR1_EL2 | 3 | c5 | 4 | с1 | 1 | 32 | 3.2.12 AFSR1_EL2, Auxiliary Fault Status Register 1, EL2 on page 114 |
| AFSR1_EL3 | 3 | c5 | 6 | с1 | 1 | 32 | 3.2.13 AFSR1_EL3, Auxiliary Fault Status Register 1, EL3 on page 115 |
| AIDR_EL1 | 3 | сО | 1 | c0 | 7 | 32 | 3.2.14 AIDR_EL1, Auxiliary ID Register, EL1 on page 115 |
| AMAIR_EL1 | 3 | c10 | 0 | сЗ | 0 | 64 | 3.2.15 AMAIR_EL1, Auxiliary Memory Attribute Indirection Register, EL1 on page 116 |
| AMAIR_EL2 | 3 | c10 | 4 | сЗ | 0 | 64 | 3.2.16 AMAIR_EL2, Auxiliary Memory Attribute Indirection Register, EL2 on page 117 |
| AMAIR_EL3 | 3 | c10 | 6 | сЗ | 0 | 64 | 3.2.17 AMAIR_EL3, Auxiliary Memory Attribute Indirection Register, EL3 on page 118 |
| CCSIDR_EL1 | 3 | сO | 1 | сO | 0 | 32 | 3.2.23 CCSIDR_EL1, Cache Size ID Register, EL1 on page 127 |
| CLIDR_EL1 | 3 | сО | 1 | сO | 1 | 64 | 3.2.24 CLIDR_EL1, Cache Level ID Register, EL1 on page 129 |
| CPACR_EL1 | 3 | c1 | 0 | cO | 2 | 32 | 3.2.25 CPACR_EL1, Architectural Feature Access Control Register, EL1 on page 131 |
| CPTR_EL2 | 3 | с1 | 4 | c1 | 2 | 32 | 3.2.26 CPTR_EL2, Architectural Feature Trap Register, EL2 on page 131 |
| CPTR_EL3 | 3 | с1 | 6 | c1 | 2 | 32 | 3.2.27 CPTR_EL3, Architectural Feature Trap Register, EL3 on page 132 |
| CSSELR_EL1 | 3 | cO | 2 | c0 | 0 | 32 | 3.2.38 CSSELR_EL1, Cache Size Selection Register, EL1 on page 157 |
| CTR_ELO | 3 | cO | 3 | c0 | 1 | 32 | 3.2.39 CTR_ELO, Cache Type Register, ELO on page 158 |
| DISR_EL1 | 3 | c12 | 0 | с1 | 1 | 64 | 3.2.41 DISR_EL1, Deferred Interrupt Status Register, EL1 on page 160 |
| ERRIDR_EL1 | 3 | c5 | 0 | сЗ | 0 | 32 | 3.2.42 ERRIDR_EL1, Error ID Register, EL1 on page 162 |
| ERRSELR_EL1 | 3 | c5 | 0 | сЗ | 1 | 32 | 3.2.43 ERRSELR_EL1, Error Record Select Register, EL1 on page 163 |
| ERXADDR_EL1 | 3 | c5 | 0 | с4 | 3 | 64 | 3.2.44 ERXADDR_EL1, Selected Error Record Address Register, EL1 on page 164 |
| ERXCTLR_EL1 | 3 | c5 | 0 | с4 | 1 | 64 | 3.2.45 ERXCTLR_EL1, Selected Error Record Control Register, EL1 on page 164 |
| ERXFR_EL1 | 3 | c5 | 0 | с4 | 0 | 64 | 3.2.46 ERXFR_EL1, Selected Error Record Feature Register, EL1 on page 164 |
| ERXMISCO_EL1 | 3 | c5 | 0 | c5 | 0 | 64 | 3.2.47 ERXMISCO_EL1, Selected Error Record Miscellaneous Register 0, EL1 on page 164 |

| Name | Op0 | CRn | Op1 | CRm | Op2 | Width | Description |
|------------------|-----|-----|-----|-----|-----|-------|----------------------------------------------------------------------------------------|
| ERXMISC1_EL1 | 3 | c5 | 0 | c5 | 1 | 64 | 3.2.48 ERXMISC1_EL1, Selected Error Record Miscellaneous Register 1, EL1 on page 165 |
| ERXSTATUS_EL1 | 3 | c5 | 0 | с4 | 2 | 32 | 3.2.52 ERXSTATUS_EL1, Selected Error Record Primary Status Register, EL1 on page 169 |
| ESR_EL1 | 3 | c5 | 0 | c2 | 0 | 32 | 3.2.53 ESR_EL1, Exception Syndrome Register, EL1 on page 169 |
| ESR_EL2 | 3 | c5 | 4 | c2 | 0 | 32 | 3.2.54 ESR_EL2, Exception Syndrome Register, EL2 on page 170 |
| ESR_EL3 | 3 | c5 | 6 | c2 | 0 | 32 | 3.2.55 ESR_EL3, Exception Syndrome Register, EL3 on page 171 |
| HACR_EL2 | 3 | с1 | 4 | с1 | 7 | 32 | 3.2.56 HACR_EL2, Hyp Auxiliary Configuration Register, EL2 on page 172 |
| HCR_EL2 | 3 | с1 | 4 | с1 | 0 | 64 | 3.2.57 HCR_EL2, Hypervisor Configuration Register, EL2 on page 173 |
| ID_AA64DFR0_EL1 | 3 | cO | 0 | c5 | 0 | 64 | 3.2.60 ID_AA64DFR0_EL1, AArch64 Debug Feature Register 0, EL1 on page 175 |
| ID_AA64ISAR0_EL1 | 3 | c0 | 0 | с6 | 0 | 64 | 3.2.62 ID_AA64ISAR0_EL1, AArch64 Instruction Set Attribute Register 0, EL1 on page 177 |
| ID_AA64ISAR1_EL1 | 3 | c0 | 0 | с6 | 1 | 64 | 3.2.63 ID_AA64ISAR1_EL1, AArch64 Instruction Set Attribute Register 1, EL1 on page 179 |
| ID_AA64MMFR0_EL1 | 3 | cO | 0 | с7 | 0 | 64 | 3.2.64 ID_AA64MMFR0_EL1, AArch64 Memory Model Feature Register 0, EL1 on page 180 |
| ID_AA64MMFR1_EL1 | 3 | c0 | 0 | с7 | 1 | 64 | 3.2.65 ID_AA64MMFR1_EL1, AArch64 Memory Model Feature Register 1, EL1 on page 181 |
| ID_AA64MMFR2_EL1 | 3 | cO | 0 | с7 | 2 | 64 | 3.2.66 ID_AA64MMFR2_EL1, AArch64 Memory Model Feature Register 2, EL1 on page 183 |
| ID_AA64PFR0_EL1 | 3 | cO | 0 | с4 | 0 | 64 | 3.2.67 ID_AA64PFR0_EL1, AArch64 Processor Feature Register 0, EL1 on page 185 |
| ID_AFRO_EL1 | 3 | cO | 0 | c1 | 3 | 32 | 3.2.69 ID_AFRO_EL1, AArch32 Auxiliary Feature Register 0, EL1 on page 188 |
| ID_DFR0_EL1 | 3 | cO | 0 | c1 | 2 | 32 | 3.2.70 ID_DFRO_EL1, AArch32 Debug Feature Register 0, EL1 on page 188 |
| ID_ISAR0_EL1 | 3 | cO | 0 | c2 | 0 | 32 | 3.2.71 ID_ISARO_EL1, AArch32 Instruction Set Attribute Register 0, EL1 on page 190 |
| ID_ISAR1_EL1 | 3 | cO | 0 | c2 | 1 | 32 | 3.2.72 ID_ISAR1_EL1, AArch32 Instruction Set Attribute Register 1, EL1 on page 192 |
| ID_ISAR2_EL1 | 3 | cO | 0 | c2 | 2 | 32 | 3.2.73 ID_ISAR2_EL1, AArch32 Instruction Set Attribute Register 2, EL1 on page 193 |
| ID_ISAR3_EL1 | 3 | cO | 0 | c2 | 3 | 32 | 3.2.74 ID_ISAR3_EL1, AArch32 Instruction Set Attribute Register 3, EL1 on page 195 |
| ID_ISAR4_EL1 | 3 | cO | 0 | c2 | 4 | 32 | 3.2.75 ID_ISAR4_EL1, AArch32 Instruction Set Attribute Register 4, EL1 on page 197 |
| ID_ISAR5_EL1 | 3 | сО | 0 | c2 | 5 | 32 | 3.2.76 ID_ISAR5_EL1, AArch32 Instruction Set Attribute Register 5, EL1 on page 199 |
| ID_ISAR6_EL1 | 3 | cO | 0 | c2 | 7 | 32 | 3.2.77 ID_ISAR6_EL1, AArch32 Instruction Set Attribute Register 6, EL1 on page 201 |
| ID_MMFR0_EL1 | 3 | сО | 0 | c1 | 4 | 32 | 3.2.78 ID_MMFRO_EL1, AArch32 Memory Model Feature Register 0, EL1 on page 202 |
| ID_MMFR1_EL1 | 3 | cO | 0 | c1 | 5 | 32 | 3.2.79 ID_MMFR1_EL1, AArch32 Memory Model Feature Register 1, EL1 on page 204 |

| Name | Op0 | CRn | Op1 | CRm | Op2 | Width | Description |
|--------------|-----|-----|-----|-----|-----|-------|------------------------------------------------------------------------------------|
| ID_MMFR2_EL1 | 3 | cO | 0 | с1 | 6 | 32 | 3.2.80 ID_MMFR2_EL1, AArch32 Memory Model Feature Register 2, EL1 on page 205 |
| ID_MMFR3_EL1 | 3 | c0 | 0 | с1 | 7 | 32 | 3.2.81 ID_MMFR3_EL1, AArch32 Memory Model Feature Register 3, EL1 on page 207 |
| ID_MMFR4_EL1 | 3 | cO | 0 | c2 | 6 | 32 | 3.2.82 ID_MMFR4_EL1, AArch32 Memory Model Feature Register 4, EL1 on page 209 |
| ID_PFRO_EL1 | 3 | c0 | 0 | с1 | 0 | 32 | 3.2.83 ID_PFR0_EL1, AArch32 Processor Feature Register 0, EL1 on page 211 |
| ID_PFR1_EL1 | 3 | c0 | 0 | с1 | 1 | 32 | 3.2.84 ID_PFR1_EL1, AArch32 Processor Feature Register 1, EL1 on page 213 |
| ID_PFR2_EL1 | 3 | cO | 0 | сЗ | 4 | 32 | 3.2.85 ID_PFR2_EL1, AArch32 Processor Feature Register 2, EL1 on page 214 |
| LORC_EL1 | 3 | c10 | 0 | с4 | 3 | 64 | 3.2.86 LORC_EL1, LORegion Control Register, EL1 on page 215 |
| LORID_EL1 | 3 | c10 | 0 | с4 | 7 | 64 | 3.2.87 LORID_EL1, LORegion ID Register, EL1 on page 216 |
| LORN_EL1 | 3 | c10 | 0 | с4 | 2 | 64 | 3.2.88 LORN_EL1, LORegion Number Register, EL1 on page 217 |
| MDCR_EL3 | 3 | с1 | 6 | с3 | 1 | 32 | 3.2.89 MDCR_EL3, Monitor Debug Configuration Register, EL3 on page 217 |
| MIDR_EL1 | 3 | сО | 0 | сО | 0 | 32 | 3.2.90 MIDR_EL1, Main ID Register, EL1 on page 219 |
| MPIDR_EL1 | 3 | c0 | 0 | c0 | 5 | 64 | 3.2.91 MPIDR_EL1, Multiprocessor Affinity Register, EL1 on page 220 |
| PAR_EL1 | 3 | c7 | 0 | с4 | 0 | 64 | 3.2.92 PAR_EL1, Physical Address Register, EL1 on page 222 |
| REVIDR_EL1 | 3 | cO | 0 | c0 | 6 | 32 | 3.2.93 REVIDR_EL1, Revision ID Register, EL1 on page 222 |
| RVBAR_EL3 | 3 | c12 | 6 | сО | 1 | 64 | 3.2.95 RVBAR_EL3, Reset Vector Base Address Register, EL3 on page 224 |
| SCTLR_EL1 | 3 | c1 | 0 | c0 | 0 | 32 | 3.2.96 SCTLR_EL1, System Control Register, EL1 on page 224 |
| SCTLR_EL12 | 3 | с1 | 5 | сО | 0 | 32 | 3.2.96 SCTLR_EL1, System Control Register, EL1 on page 224 |
| SCTLR_EL2 | 3 | с1 | 4 | сО | 0 | 32 | 3.2.97 SCTLR_EL2, System Control Register, EL2 on page 226 |
| SCTLR_EL3 | 3 | с1 | 6 | c0 | 0 | 32 | 3.2.98 SCTLR_EL3, System Control Register, EL3 on page 227 |
| TCR_EL1 | 3 | c2 | 0 | c0 | 2 | 64 | 3.2.99 TCR_EL1, Translation Control Register, EL1 on page 229 |
| TCR_EL2 | 3 | c2 | 4 | c0 | 2 | 64 | 3.2.100 TCR_EL2, Translation Control Register, EL2 on page 231 |
| TCR_EL3 | 3 | c2 | 6 | c0 | 2 | 64 | 3.2.101 TCR_EL3, Translation Control Register, EL3 on page 232 |
| TTBRO_EL1 | 3 | c2 | 0 | сО | 0 | 64 | 3.2.102 TTBRO_EL1, Translation Table Base Register 0, EL1 on page 233 |
| TTBRO_EL2 | 3 | c2 | 4 | сО | 0 | 64 | 3.2.103 TTBRO_EL2, Translation Table Base Register 0, EL2 on page 234 |
| TTBR0_EL3 | 3 | c2 | 6 | c0 | 0 | 64 | 3.2.104 TTBRO_EL3, Translation Table Base Register 0, EL3 on page 235 |
| TTBR1_EL1 | 3 | c2 | 0 | c0 | 1 | 64 | 3.2.105 TTBR1_EL1, Translation Table Base Register 1, EL1 on page 236 |
| TTBR1_EL2 | 3 | c2 | 4 | сО | 1 | 64 | 3.2.106 TTBR1_EL2, Translation Table Base Register 1, EL2 on page 237 |
| VDISR_EL2 | 3 | c12 | 4 | с1 | 1 | 64 | 3.2.107 VDISR_EL2, Virtual Deferred Interrupt Status Register, EL2 on page 237 |
| VSESR_EL2 | 3 | c5 | 4 | c2 | 3 | 64 | 3.2.108 VSESR_EL2, Virtual SError Exception Syndrome Register on page 238 |
| VTCR_EL2 | 3 | c2 | 4 | с1 | 2 | 32 | 3.2.109 VTCR_EL2, Virtualization Translation Control Register, EL2 on page 239 |
| VTTBR_EL2 | 3 | c2 | 4 | с1 | 0 | 64 | 3.2.110 VTTBR_EL2, Virtualization Translation Table Base Register, EL2 on page 240 |

Table 3-3: Other architecturally defined registers

| Name | Op0 | CRn | Op1 | CRm | Op2 | Width | Description |
|-----------------|-----|-----|-----|-----|-----|-------|-----------------------------------------------------------|
| AFSRO_EL12 | 3 | c5 | 5 | 1 | 0 | 32 | Auxiliary Fault Status Register 0 |
| AFSR1_EL12 | 3 | c5 | 5 | 1 | 1 | 32 | Auxiliary Fault Status Register 1 |
| AMAIR_EL12 | 3 | c10 | 5 | сЗ | 0 | 64 | Auxiliary Memory Attribute Indirection Register |
| CNTFRQ_EL0 | 3 | с14 | 3 | 0 | 0 | 32 | Counter-timer Frequency register |
| CNTHCTL_EL2 | 3 | с14 | 4 | с1 | 0 | 32 | Counter-timer Hypervisor Control register |
| CNTHP_CTL_EL2 | 3 | с14 | 4 | c2 | 1 | 32 | Counter-timer Hypervisor Physical Timer Control register |
| CNTHP_CVAL_EL2 | 3 | с14 | 4 | c2 | 2 | 64 | Counter-timer Hyp Physical CompareValue register |
| CNTHP_TVAL_EL2 | 3 | с14 | 4 | c2 | 0 | 32 | Counter-timer Hyp Physical Timer TimerValue register |
| CNTHV_CTL_EL2 | 3 | с14 | 4 | сЗ | 1 | 32 | Counter-timer Virtual Timer Control register |
| CNTHV_CVAL_EL2 | 3 | с14 | 4 | сЗ | 2 | 64 | Counter-timer Virtual Timer CompareValue register |
| CNTHV_TVAL_EL2 | 3 | с14 | 4 | сЗ | 0 | 32 | Counter-timer Virtual Timer TimerValue register |
| CNTKCTL_EL1 | 3 | с14 | 0 | с1 | 0 | 32 | Counter-timer Kernel Control register |
| CNTKCTL_EL12 | 3 | с14 | 5 | с1 | 0 | 32 | Counter-timer Kernel Control register |
| CNTP_CTL_EL0 | 3 | с14 | 3 | c2 | 1 | 32 | Counter-timer Physical Timer Control register |
| CNTP_CTL_EL02 | 3 | с14 | 5 | c2 | 1 | 32 | Counter-timer Physical Timer Control register |
| CNTP_CVAL_EL0 | 3 | с14 | 3 | c2 | 2 | 64 | Counter-timer Physical Timer CompareValue register |
| CNTP_CVAL_EL02 | 3 | с14 | 5 | c2 | 2 | 64 | Counter-timer Physical Timer CompareValue register |
| CNTP_TVAL_EL0 | 3 | с14 | 3 | c2 | 0 | 32 | Counter-timer Physical Timer TimerValue register |
| CNTP_TVAL_EL02 | 3 | с14 | 5 | c2 | 0 | 32 | Counter-timer Physical Timer TimerValue register |
| CNTPCT_EL0 | 3 | с14 | 3 | cO | 1 | 64 | Counter-timer Physical Count register |
| CNTPS_CTL_EL1 | 3 | с14 | 7 | c2 | 1 | 32 | Counter-timer Physical Secure Timer Control register |
| CNTPS_CVAL_EL1 | 3 | с14 | 7 | c2 | 2 | 64 | Counter-timer Physical Secure Timer CompareValue register |
| CNTPS_TVAL_EL1 | 3 | с14 | 7 | c2 | 0 | 32 | Counter-timer Physical Secure Timer TimerValue register |
| CNTV_CTL_EL0 | 3 | с14 | 3 | сЗ | 1 | 32 | Counter-timer Virtual Timer Control register |
| CNTV_CTL_EL02 | 3 | с14 | 5 | сЗ | 1 | 32 | Counter-timer Virtual Timer Control register |
| CNTV_CVAL_EL0 | 3 | с14 | 3 | сЗ | 2 | 64 | Counter-timer Virtual Timer CompareValue register |
| CNTV_CVAL_EL02 | 3 | с14 | 5 | сЗ | 2 | 64 | Counter-timer Virtual Timer CompareValue register |
| CNTV_TVAL_EL0 | 3 | с14 | 3 | сЗ | 0 | 32 | Counter-timer Virtual Timer TimerValue register |
| CNTV_TVAL_EL02 | 3 | с14 | 5 | сЗ | 0 | 32 | Counter-timer Virtual Timer TimerValue register |
| CNTVCT_EL0 | 3 | с14 | 3 | сО | 2 | 64 | Counter-timer Virtual Count register |
| CNTVOFF_EL2 | 3 | с14 | 4 | сО | 3 | 64 | Counter-timer Virtual Offset register |
| CONTEXTIDR_EL1 | 3 | с13 | 0 | сО | 1 | 32 | Context ID Register (EL1) |
| CONTEXTIDR_EL12 | 3 | c13 | 5 | сО | 1 | 32 | Context ID Register (EL12) |
| CONTEXTIDR_EL2 | 3 | c13 | 4 | c0 | 1 | 32 | Context ID Register (EL2) |
| CPACR_EL12 | 3 | с1 | 5 | c0 | 2 | 32 | Architectural Feature Access Control Register |
| CPTR_EL3 | 3 | с1 | 6 | с1 | 2 | 32 | Architectural Feature Trap Register (EL3) |
| ESR_EL12 | 3 | c5 | 5 | c2 | 0 | 32 | Exception Syndrome Register (EL12) |
| FAR_EL1 | 3 | с6 | 0 | c0 | 0 | 64 | Fault Address Register (EL1) |
| FAR_EL12 | 3 | с6 | 5 | сО | 0 | 64 | Fault Address Register (EL12) |

| Name | Op0 | CRn | Op1 | CRm | Op2 | Width | Description |
|-----------------|-----|-----|-----|-----|-----|-------|----------------------------------------------|
| FAR_EL2 | 3 | с6 | 4 | c0 | 0 | 64 | Fault Address Register (EL2) |
| FAR_EL3 | 3 | с6 | 6 | сО | 0 | 64 | Fault Address Register (EL3) |
| FPEXC32_EL2 | 3 | c5 | 4 | сЗ | 0 | 32 | Floating-point Exception Control register |
| HPFAR_EL2 | 3 | с6 | 4 | сО | 4 | 64 | Hypervisor IPA Fault Address Register |
| HSTR_EL2 | 3 | с1 | 4 | с1 | 3 | 32 | Hypervisor System Trap Register |
| ID_AA64AFR0_EL1 | 3 | сО | 0 | c5 | 4 | 64 | AArch64 Auxiliary Feature Register 0 |
| ID_AA64AFR1_EL1 | 3 | сО | 0 | c5 | 5 | 64 | AArch64 Auxiliary Feature Register 1 |
| ID_AA64DFR1_EL1 | 3 | сO | 0 | c5 | 1 | 64 | AArch64 Debug Feature Register 1 |
| ID_AA64PFR1_EL1 | 3 | сO | 0 | с4 | 1 | 64 | AArch64 Core Feature Register 1 |
| ISR_EL1 | 3 | c12 | 0 | c1 | 0 | 32 | Interrupt Status Register |
| LOREA_EL1 | 3 | c10 | 0 | с4 | 1 | 64 | LORegion End Address Register |
| LORSA_EL1 | 3 | c10 | 0 | с4 | 0 | 64 | LORegion Start Address Register |
| MAIR_EL1 | 3 | c10 | 0 | c2 | 0 | 64 | Memory Attribute Indirection Register (EL1) |
| MAIR_EL12 | 3 | c10 | 5 | c2 | 0 | 64 | Memory Attribute Indirection Register (EL12) |
| MAIR_EL2 | 3 | c10 | 4 | c2 | 0 | 64 | Memory Attribute Indirection Register (EL2) |
| MAIR_EL3 | 3 | c10 | 6 | c2 | 0 | 64 | Memory Attribute Indirection Register (EL3) |
| MDCR_EL2 | 3 | с1 | 4 | с1 | 1 | 32 | Monitor Debug Configuration Register |
| MVFR0_EL1 | 3 | сО | 0 | сЗ | 0 | 32 | AArch32 Media and VFP Feature Register 0 |
| MVFR1_EL1 | 3 | сО | 0 | сЗ | 1 | 32 | AArch32 Media and VFP Feature Register 1 |
| MVFR2_EL1 | 3 | cO | 0 | сЗ | 2 | 32 | AArch32 Media and VFP Feature Register 2 |
| RMR_EL3 | 3 | c12 | 6 | сO | 2 | 32 | Reset Management Register |
| SCR_EL3 | 3 | с1 | 6 | с1 | 0 | 32 | Secure Configuration Register |
| TCR_EL12 | 3 | c2 | 5 | сО | 2 | 64 | Translation Control Register (EL12) |
| TPIDR_ELO | 3 | c13 | 3 | сО | 2 | 64 | ELO read/write Software Thread ID Register |
| TPIDR_EL1 | 3 | c13 | 0 | сО | 4 | 64 | EL1 Software Thread ID Register |
| TPIDR_EL2 | 3 | c13 | 4 | сO | 2 | 64 | EL2 Software Thread ID Register |
| TPIDR_EL3 | 3 | c13 | 6 | сО | 2 | 64 | EL3 Software Thread ID Register |
| TPIDRRO_EL0 | 3 | c13 | 3 | сO | 3 | 64 | ELO read-only Software Thread ID Register |
| TTBRO_EL12 | 3 | c2 | 5 | сO | 0 | 64 | Translation Table Base Register 0 (EL12) |
| TTBR1_EL12 | 3 | c2 | 5 | сO | 1 | 64 | Translation Table Base Register 1 (EL12) |
| VBAR_EL1 | 3 | c12 | 0 | cO | 0 | 64 | Vector Base Address Register (EL1) |
| VBAR_EL12 | 3 | c12 | 5 | c0 | 0 | 64 | Vector Base Address Register (EL12) |
| VBAR_EL2 | 3 | c12 | 4 | сО | 0 | 64 | Vector Base Address Register (EL2) |
| VBAR_EL3 | 3 | c12 | 6 | сО | 0 | 64 | Vector Base Address Register (EL3) |
| VMPIDR_EL2 | 3 | сО | 4 | сО | 5 | 64 | Virtualization Multiprocessor ID Register |
| VPIDR_EL2 | 3 | сО | 4 | сО | 0 | 32 | Virtualization Core ID Register |

3.2.3 AArch64 implementation defined register summary

This section describes the AArch64 registers in the Cortex®-A76AE core that are implementation defined.

The following tables list the AArch 64 implementation defined registers, which are sorted by opcode.

Table 3-4: AArch64 implementation defined registers

| Name | Copro | CRn | Op1 | CRm | Op2 | Width | Description |
|----------------|-------|-----|-----|-----|-----|-------|---------------------------------------------------------------------------------------------------|
| ATCR_EL1 | 3 | c15 | 0 | с7 | 0 | 32 | 3.2.18 ATCR_EL1, Auxiliary Translation Control Register, EL1 on page 118 |
| ATCR_EL2 | 3 | c15 | 4 | с7 | 0 | 32 | 3.2.19 ATCR_EL2, Auxiliary Translation Control Register, EL2 on page 121 |
| ATCR_EL12 | 3 | c15 | 5 | с7 | 0 | 32 | 3.2.20 ATCR_EL12, Alias to Auxiliary Translation Control Register EL1 on page 123 |
| ATCR_EL3 | 3 | c15 | 6 | с7 | 0 | 32 | 3.2.21 ATCR_EL3, Auxiliary Translation Control Register, EL3 on page 124 |
| AVTCR_EL2 | 3 | c15 | 4 | с7 | 1 | 32 | 3.2.22 AVTCR_EL2, Auxiliary Virtualized Translation Control Register, EL2 on page 125 |
| CPUACTLR_EL1 | 3 | c15 | 0 | с1 | 0 | 64 | 3.2.28 CPUACTLR_EL1, CPU Auxiliary Control Register, EL1 on page 133 |
| CPUACTLR2_EL1 | 3 | c15 | 0 | с1 | 1 | 64 | 3.2.29 CPUACTLR2_EL1, CPU Auxiliary Control Register 2, EL1 on page 135 |
| CPUACTLR3_EL1 | 3 | c15 | 0 | с1 | 2 | 64 | 3.2.30 CPUACTLR3_EL1, CPU Auxiliary Control Register 3, EL1 on page 136 |
| CPUCFR_EL1 | 3 | c15 | 0 | сО | 0 | 32 | 3.2.31 CPUCFR_EL1, CPU Configuration Register, EL1 on page 138 |
| CPUECTLR_EL1 | 3 | c15 | 0 | с1 | 4 | 64 | 3.2.32 CPUECTLR_EL1, CPU Extended Control Register, EL1 on page 139 |
| CPUPCR_EL3 | 3 | c15 | 6 | с8 | 1 | 64 | 3.2.33 CPUPCR_EL3, CPU Private Control Register, EL3 on page 148 |
| CPUPMR_EL3 | 3 | c15 | 6 | с8 | 3 | 64 | 3.2.34 CPUPMR_EL3, CPU Private Mask Register, EL3 on page 150 |
| CPUPOR_EL3 | 3 | c15 | 6 | с8 | 2 | 64 | 3.2.35 CPUPOR_EL3, CPU Private Operation Register, EL3 on page 151 |
| CPUPSELR_EL3 | 3 | c15 | 6 | с8 | 0 | 32 | 3.2.36 CPUPSELR_EL3, CPU Private Selection Register, EL3 on page 153 |
| CPUPWRCTLR_EL1 | 3 | c15 | 0 | c2 | 7 | 32 | 3.2.37 CPUPWRCTLR_EL1, Power Control Register, EL1 on page 154 |
| ERXPFGCDN_EL1 | 3 | c15 | 0 | c2 | 2 | 32 | 3.2.49 ERXPFGCDN_EL1, Selected Error Pseudo Fault Generation Count Down Register, EL1 on page 165 |
| ERXPFGCTL_EL1 | 3 | c15 | 0 | c2 | 1 | 32 | 3.2.50 ERXPFGCTL_EL1, Selected Error Pseudo Fault Generation Control Register, EL1 on page 166 |
| ERXPFGF_EL1 | 3 | c15 | 0 | c2 | 0 | 32 | 3.2.51 ERXPFGF_EL1, Selected Pseudo Fault Generation Feature Register, EL1 on page 167 |

The following table shows the 32-bit wide implementation defined Cluster registers. Details of these registers can be found in $Arm^{\text{\tiny{\$}}}$ DynamlQ $^{\text{\tiny{$\top}}}$ Shared Unit AE Technical Reference Manual

Table 3-5: Cluster registers

| Name | Copro | CRn | Opc1 | CRm | Opc2 | Width | Description |
|------------------|-------|-----|------|-----|------|--------|-------------------------------------|
| CLUSTERCFR_EL1 | 3 | c15 | 0 | с3 | 0 | 32-bit | Cluster configuration register. |
| CLUSTERIDR_EL1 | 3 | c15 | 0 | с3 | 1 | 32-bit | Cluster main revision ID. |
| CLUSTEREVIDR_EL1 | 3 | c15 | 0 | с3 | 2 | 32-bit | Cluster ECO ID. |
| CLUSTERACTLR_EL1 | 3 | c15 | 0 | сЗ | 3 | 32-bit | Cluster auxiliary control register. |

| Name | Copro | CRn | Opc1 | CRm | Opc2 | Width | Description |
|-------------------------|-------|-----|------|-----|------|--------|------------------------------------------------------|
| CLUSTERECTLR_EL1 | 3 | c15 | 0 | с3 | 4 | 32-bit | Cluster extended control register. |
| CLUSTERPWRCTLR_EL1 | 3 | c15 | 0 | c3 | 5 | 32-bit | Cluster power control register. |
| CLUSTERPWRDN_EL1 | 3 | c15 | 0 | c3 | 6 | 32-bit | Cluster power down register. |
| CLUSTERPWRSTAT_EL1 | 3 | c15 | 0 | c3 | 7 | 32-bit | Cluster power status register. |
| CLUSTERTHREADSID_EL1 | 3 | c15 | 0 | c4 | 0 | 32-bit | Cluster thread scheme ID register. |
| CLUSTERACPSID_EL1 | 3 | c15 | 0 | c4 | 1 | 32-bit | Cluster ACP scheme ID register. |
| CLUSTERSTASHSID_EL1 | 3 | c15 | 0 | с4 | 2 | 32-bit | Cluster stash scheme ID register. |
| CLUSTERPARTCR_EL1 | 3 | c15 | 0 | с4 | 3 | 32-bit | Cluster partition control register. |
| CLUSTERBUSQOS_EL1 | 3 | c15 | 0 | с4 | 4 | 32-bit | Cluster bus QoS control register. |
| CLUSTERL3HIT_EL1 | 3 | c15 | 0 | с4 | 5 | 32-bit | Cluster L3 hit counter register. |
| CLUSTERL3MISS_EL1 | 3 | c15 | 0 | с4 | 6 | 32-bit | Cluster L3 miss counter register. |
| CLUSTERTHREADSIDOVR_EL1 | 3 | c15 | 0 | с4 | 7 | 32-bit | Cluster thread scheme ID override register |
| CLUSTERPMCR_EL1 | 3 | c15 | 0 | c5 | 0 | 32-bit | Cluster Performance Monitors Control Register |
| CLUSTERPMCNTENSET_EL1 | 3 | c15 | 0 | c5 | 1 | 32-bit | Cluster Count Enable Set Register |
| CLUSTERPMCNTENCLR_EL1 | 3 | c15 | 0 | c5 | 2 | 32-bit | Cluster Count Enable Clear Register |
| CLUSTERPMOVSSET_EL1 | 3 | c15 | 0 | c5 | 3 | 32-bit | Cluster Overflow Flag Status Set |
| CLUSTERPMOVSCLR_EL1 | 3 | c15 | 0 | c5 | 4 | 32-bit | Cluster Overflow Flag Status Clear |
| CLUSTERPMSELR_EL1 | 3 | c15 | 0 | c5 | 5 | 32-bit | Cluster Event Counter Selection Register |
| CLUSTERPMINTENSET_EL1 | 3 | c15 | 0 | c5 | 6 | 32-bit | Cluster Interrupt Enable Set Register |
| CLUSTERPMINTENCLR_EL1 | 3 | c15 | 0 | c5 | 7 | 32-bit | Cluster Interrupt Enable Clear Register |
| CLUSTERPMXEVTYPER_EL1 | 3 | c15 | 0 | с6 | 1 | 32-bit | Cluster Selected Event Type and Filter Register |
| CLUSTERPMXEVCNTR_EL1 | 3 | c15 | 0 | с6 | 2 | 32-bit | Cluster Selected Event Counter Register |
| Reserved/RAZ | 3 | c15 | 0 | с6 | 3 | 32-bit | Cluster Monitor Debug Configuration Register |
| CLUSTERPMCEIDO_EL1 | 3 | c15 | 0 | с6 | 4 | 32-bit | Cluster Common Event Identification IDO Register |
| CLUSTERPMCEID1_EL1 | 3 | c15 | 0 | с6 | 5 | 32-bit | Cluster Common Event Identification ID1 Register |
| CLUSTERPMCLAIMSET_EL1 | 3 | c15 | 0 | с6 | 6 | 32-bit | Cluster Performance Monitor Claim Tag Set Register |
| CLUSTERPMCLAIMCLR_EL1 | 3 | c15 | 0 | с6 | 7 | 32-bit | Cluster Performance Monitor Claim Tag Clear Register |

3.2.4 AArch64 registers by functional group

This section identifies the AArch64 registers by their functional groups and applies to the registers in the core that are implementation defined or have micro-architectural bit fields. Reset values are provided for these registers.

Identification registers

| Name | Туре | Reset | Description |
|------------|------|-------|---------------------------------------------------------------|
| AIDR_EL1 | RO | | 3.2.14 AIDR_EL1, Auxiliary ID Register, EL1 on page 115 |
| CCSIDR_EL1 | RO | | 3.2.23 CCSIDR_EL1, Cache Size ID Register, EL1 on page 127 |

| Name | Туре | Reset | Description |
|------------------|------|--------------------------------------------------------------------------|----------------------------------------------------------------------------------------------|
| CLIDR_EL1 | RO | 0xC3000123 if L3 cache present. | 3.2.24 CLIDR_EL1, Cache Level ID Register, |
| | | • 0x82000023 if no L3 cache. | EL1 on page 129 |
| CSSELR_EL1 | RW | UNK | 3.2.38 CSSELR_EL1, Cache Size Selection Register, EL1 on page 157 |
| CTR_ELO | RO | 0x8444C004 | 3.2.39 CTR_ELO, Cache Type Register, ELO on page 158 |
| DCZID_EL0 | RO | 0x0000004 | 3.2.40 DCZID_ELO, Data Cache Zero ID Register, ELO on page 159 |
| ERRIDR_EL1 | RO | 0x00000002 | 3.2.42 ERRIDR_EL1, Error ID Register, EL1 on page 162 |
| ID_AA64AFR0_EL1 | RO | 0x0000000 | 3.2.58 ID_AA64AFR0_EL1, AArch64 Auxiliary Feature Register 0 on page 175 |
| ID_AA64AFR1_EL1 | RO | 0x0000000 | 3.2.59 ID_AA64AFR1_EL1, AArch64 Auxiliary Feature Register 1 on page 175 |
| ID_AA64DFR0_EL1 | RO | 0x000000010305408 | 3.2.60 ID_AA64DFR0_EL1, AArch64 Debug Feature Register 0, EL1 on page 175 |
| ID_AA64DFR1_EL1 | RO | 0x0000000 | 3.2.61 ID_AA64DFR1_EL1, AArch64 Debug Feature Register 1, EL1 on page 177 |
| ID_AA64ISAR0_EL1 | RO | 0x0000100010211120 if the Cryptographic Extension is implemented. | 3.2.62 ID_AA64ISAR0_EL1, AArch64 Instruction Set Attribute Register 0, EL1 on |
| | | 0x0000100010210000 if the Cryptographic Extension is not implemented. | page 177 |
| ID_AA64ISAR1_EL1 | RO | 0x000000000100001 | 3.2.63 ID_AA64ISAR1_EL1, AArch64 Instruction Set Attribute Register 1, EL1 on page 179 |
| ID_AA64MMFR0_EL1 | RO | 0x00000000101122 | 3.2.64 ID_AA64MMFR0_EL1, AArch64 Memory Model Feature Register 0, EL1 on page 180 |
| ID_AA64MMFR1_EL1 | RO | 0x000000010212122 | 3.2.65 ID_AA64MMFR1_EL1, AArch64 Memory Model Feature Register 1, EL1 on page 181 |
| ID_AA64MMFR2_EL1 | RO | 0x000000000001011 | 3.2.66 ID_AA64MMFR2_EL1, AArch64 Memory Model Feature Register 2, EL1 on page 183 |
| ID_AA64PFR0_EL1 | RO | 0x1100000101111112 if the GICv4.1 interface is disabled. | 3.2.67 ID_AA64PFRO_EL1, AArch64 Processor Feature Register 0, EL1 on page 185 |
| | | 0x11000000111111112 if the GICv4.1 interface is enabled. | |
| ID_AA64PFR1_EL1 | RO | 0x000000000000000000000000000000000000 | 3.2.68 ID_AA64PFR1_EL1, AArch64 Processor Feature Register 1, EL1 on page 187 |
| ID_AFRO_EL1 | RO | 0x0000000 | 3.2.69 ID_AFRO_EL1, AArch32 Auxiliary Feature Register O, EL1 on page 188 |
| ID_DFR0_EL1 | RO | 0x04010088 | 3.2.70 ID_DFR0_EL1, AArch32 Debug Feature Register 0, EL1 on page 188 |
| ID_ISARO_EL1 | RO | 0x02101110 | 3.2.71 ID_ISAR0_EL1, AArch32 Instruction Set Attribute Register 0, EL1 on page 190 |
| ID_ISAR1_EL1 | RO | 0x13112111 | 3.2.72 ID_ISAR1_EL1, AArch32 Instruction Set Attribute Register 1, EL1 on page 192 |

| Name | Туре | Reset | Description |
|--------------|------|-----------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| ID_ISAR2_EL1 | RO | 0x21232042 | 3.2.73 ID_ISAR2_EL1, AArch32 Instruction Set Attribute Register 2, EL1 on page 193 |
| ID_ISAR3_EL1 | RO | 0x01112131 | 3.2.74 ID_ISAR3_EL1, AArch32 Instruction Set Attribute Register 3, EL1 on page 195 |
| ID_ISAR4_EL1 | RO | 0x00010142 | 3.2.75 ID_ISAR4_EL1, AArch32 Instruction Set Attribute Register 4, EL1 on page 197 |
| ID_ISAR5_EL1 | RO | 0x01011121 | 3.2.76 ID_ISAR5_EL1, AArch32 Instruction Set Attribute Register 5, EL1 on page 199 |
| | | ID_ISAR5 has the value 0x01010001 if the Cryptographic Extension is not implemented and enabled. | |
| ID_ISAR6_EL1 | RO | 0x0000010 | 3.2.77 ID_ISAR6_EL1, AArch32 Instruction Set Attribute Register 6, EL1 on page 201 |
| ID_MMFR0_EL1 | RO | 0x10201105 | 3.2.78 ID_MMFR0_EL1, AArch32 Memory Model Feature Register 0, EL1 on page 202 |
| ID_MMFR1_EL1 | RO | 0x40000000 | 3.2.79 ID_MMFR1_EL1, AArch32 Memory Model Feature Register 1, EL1 on page 204 |
| ID_MMFR2_EL1 | RO | 0x01260000 | 3.2.80 ID_MMFR2_EL1, AArch32 Memory Model Feature Register 2, EL1 on page 205 |
| ID_MMFR3_EL1 | RO | 0x02122211 | 3.2.81 ID_MMFR3_EL1, AArch32 Memory Model Feature Register 3, EL1 on page 207 |
| ID_MMFR4_EL1 | RO | 0x00021110 | 3.2.82 ID_MMFR4_EL1, AArch32 Memory Model Feature Register 4, EL1 on page 209 |
| ID_PFRO_EL1 | RO | 0x10010131 | 3.2.83 ID_PFRO_EL1, AArch32 Processor Feature Register O, EL1 on page 211 |
| ID_PFR1_EL1 | RO | 0x10010000 | 3.2.84 ID_PFR1_EL1, AArch32 Processor Feature Register 1, EL1 on page 213 |
| | | Bits [31:28] are 0x1 if the GIC CPU interface is implemented and enabled, and 0x0 otherwise. | |
| ID_PFR2_EL1 | RO | 0x00000011 | 3.2.85 ID_PFR2_EL1, AArch32 Processor Feature Register 2, EL1 on page 214 |
| LORID_EL1 | RO | 0x000000000040004 | 3.2.87 LORID_EL1, LORegion ID Register, EL1 on page 216 |
| MIDR_EL1 | RO | 0x411FD0E1 | 3.2.90 MIDR_EL1, Main ID Register, EL1 on page 219 |
| MPIDR_EL1 | RO | The reset value depends on CLUSTERIDAFF2 [7:0] and CLUSTERIDAFF3 [7:0]. See register description for details. | 3.2.91 MPIDR_EL1, Multiprocessor Affinity Register, EL1 on page 220 |
| REVIDR_EL1 | RO | 0x0000000 | 3.2.93 REVIDR_EL1, Revision ID Register, EL1 on page 222 |
| VMPIDR_EL2 | RW | The reset value is the value of MPIDR_EL1. | Virtualization Multiprocessor ID Register EL2 |
| VPIDR_EL2 | RW | The reset value is the value of MIDR_EL1. | Virtualization Core ID Register EL2 |

Other system control registers

| Name | Туре | Description |
|-----------|------|--------------------------------------------------------------|
| ACTLR_EL1 | RW | 3.2.5 ACTLR_EL1, Auxiliary Control Register, EL1 on page 105 |
| ACTLR_EL2 | RW | 3.2.6 ACTLR_EL2, Auxiliary Control Register, EL2 on page 106 |
| ACTLR_EL3 | RW | 3.2.7 ACTLR_EL3, Auxiliary Control Register, EL3 on page 109 |

| Name | Туре | Description |
|------------|------|----------------------------------------------------------------------------------|
| CPACR_EL1 | RW | 3.2.25 CPACR_EL1, Architectural Feature Access Control Register, EL1 on page 131 |
| SCTLR_EL1 | RW | 3.2.96 SCTLR_EL1, System Control Register, EL1 on page 224 |
| SCTLR_EL2 | RW | 3.2.97 SCTLR_EL2, System Control Register, EL2 on page 226 |
| SCTLR_EL3 | RW | 3.2.98 SCTLR_EL3, System Control Register, EL3 on page 227 |
| SCTLR_EL12 | RW | 3.2.96 SCTLR_EL1, System Control Register, EL1 on page 224 |

Reliability, Availability, Serviceability (RAS) registers

| Name | Туре | Description |
|---------------|------|---------------------------------------------------------------------------------------------------|
| DISR_EL1 | RW | 3.2.41 DISR_EL1, Deferred Interrupt Status Register, EL1 on page 160 |
| ERRIDR_EL1 | RW | 3.2.42 ERRIDR_EL1, Error ID Register, EL1 on page 162 |
| ERRSELR_EL1 | RW | 3.2.43 ERRSELR_EL1, Error Record Select Register, EL1 on page 163 |
| ERXADDR_EL1 | RW | 3.2.44 ERXADDR_EL1, Selected Error Record Address Register, EL1 on page 164 |
| ERXCTLR_EL1 | RW | 3.2.45 ERXCTLR_EL1, Selected Error Record Control Register, EL1 on page 164 |
| ERXFR_EL1 | RO | 3.2.46 ERXFR_EL1, Selected Error Record Feature Register, EL1 on page 164 |
| ERXMISCO_EL1 | RW | 3.2.47 ERXMISCO_EL1, Selected Error Record Miscellaneous Register 0, EL1 on page 164 |
| ERXMISC1_EL1 | RW | 3.2.48 ERXMISC1_EL1, Selected Error Record Miscellaneous Register 1, EL1 on page 165 |
| ERXSTATUS_EL1 | RW | 3.2.52 ERXSTATUS_EL1, Selected Error Record Primary Status Register, EL1 on page 169 |
| ERXPFGCDN_EL1 | RW | 3.2.49 ERXPFGCDN_EL1, Selected Error Pseudo Fault Generation Count Down Register, EL1 on page 165 |
| ERXPFGCTL_EL1 | RW | 3.2.50 ERXPFGCTL_EL1, Selected Error Pseudo Fault Generation Control Register, EL1 on page 166 |
| ERXPFGF_EL1 | RO | 3.2.51 ERXPFGF_EL1, Selected Pseudo Fault Generation Feature Register, EL1 on page 167 |
| HCR_EL2 | RW | 3.2.57 HCR_EL2, Hypervisor Configuration Register, EL2 on page 173 |
| VDISR_EL2 | RW | 3.2.107 VDISR_EL2, Virtual Deferred Interrupt Status Register, EL2 on page 237 |
| VSESR_EL2 | RW | 3.2.108 VSESR_EL2, Virtual SError Exception Syndrome Register on page 238 |

Virtual Memory control registers

| Name | Туре | Description | | | | |
|-----------|------|---------------------------------------------------------------------------------------|--|--|--|--|
| AMAIR_EL1 | RW | 3.2.15 AMAIR_EL1, Auxiliary Memory Attribute Indirection Register, EL1 on page 116 | | | | |
| AMAIR_EL2 | RW | 2.16 AMAIR_EL2, Auxiliary Memory Attribute Indirection Register, EL2 on page 117 | | | | |
| AMAIR_EL3 | RW | 3.2.17 AMAIR_EL3, Auxiliary Memory Attribute Indirection Register, EL3 on page 118 | | | | |
| ATCR_EL1 | RW | 3.2.18 ATCR_EL1, Auxiliary Translation Control Register, EL1 on page 118 | | | | |
| ATCR_EL2 | RW | 3.2.19 ATCR_EL2, Auxiliary Translation Control Register, EL2 on page 121 | | | | |
| ATCR_EL12 | RW | 3.2.20 ATCR_EL12, Alias to Auxiliary Translation Control Register EL1 on page 123 | | | | |
| ATCR_EL3 | RW | 3.2.21 ATCR_EL3, Auxiliary Translation Control Register, EL3 on page 124 | | | | |
| AVTCR_EL2 | RW | 3.2.22 AVTCR_EL2, Auxiliary Virtualized Translation Control Register, EL2 on page 125 | | | | |
| LORC_EL1 | RW | 3.2.86 LORC_EL1, LORegion Control Register, EL1 on page 215 | | | | |
| LOREA_EL1 | RW | LORegion End Address Register EL1 | | | | |
| LORID_EL1 | RO | 3.2.87 LORID_EL1, LORegion ID Register, EL1 on page 216 | | | | |
| LORN_EL1 | RW | 3.2.88 LORN_EL1, LORegion Number Register, EL1 on page 217 | | | | |
| LORSA_EL1 | RW | LORegion Start Address Register EL1 | | | | |
| TCR_EL1 | RW | 3.2.99 TCR_EL1, Translation Control Register, EL1 on page 229 | | | | |

| Name | Туре | Description |
|-----------|------|------------------------------------------------------------------------------------|
| TCR_EL2 | RW | 3.2.100 TCR_EL2, Translation Control Register, EL2 on page 231 |
| TCR_EL3 | RW | 3.2.101 TCR_EL3, Translation Control Register, EL3 on page 232 |
| TTBRO_EL1 | RW | 3.2.102 TTBRO_EL1, Translation Table Base Register O, EL1 on page 233 |
| TTBRO_EL2 | RW | 3.2.103 TTBRO_EL2, Translation Table Base Register O, EL2 on page 234 |
| TTBRO_EL3 | RW | 3.2.104 TTBRO_EL3, Translation Table Base Register 0, EL3 on page 235 |
| TTBR1_EL1 | RW | 3.2.105 TTBR1_EL1, Translation Table Base Register 1, EL1 on page 236 |
| TTBR1_EL2 | RW | 3.2.106 TTBR1_EL2, Translation Table Base Register 1, EL2 on page 237 |
| VTTBR_EL2 | RW | 3.2.110 VTTBR_EL2, Virtualization Translation Table Base Register, EL2 on page 240 |

Virtualization registers

| Name | Туре | Description | | | | |
|------------|------|------------------------------------------------------------------------------------|--|--|--|--|
| ACTLR_EL2 | RW | 3.2.6 ACTLR_EL2, Auxiliary Control Register, EL2 on page 106 | | | | |
| AFSRO_EL2 | RW | 2.9 AFSRO_EL2, Auxiliary Fault Status Register 0, EL2 on page 112 | | | | |
| AFSR1_EL2 | RW | 3.2.12 AFSR1_EL2, Auxiliary Fault Status Register 1, EL2 on page 114 | | | | |
| AMAIR_EL2 | RW | 3.2.16 AMAIR_EL2, Auxiliary Memory Attribute Indirection Register, EL2 on page 117 | | | | |
| CPTR_EL2 | RW | 3.2.26 CPTR_EL2, Architectural Feature Trap Register, EL2 on page 131 | | | | |
| ESR_EL2 | RW | 3.2.54 ESR_EL2, Exception Syndrome Register, EL2 on page 170 | | | | |
| HACR_EL2 | RW | 3.2.56 HACR_EL2, Hyp Auxiliary Configuration Register, EL2 on page 172 | | | | |
| HCR_EL2 | RW | 3.2.57 HCR_EL2, Hypervisor Configuration Register, EL2 on page 173 | | | | |
| HPFAR_EL2 | RW | lypervisor IPA Fault Address Register EL2 | | | | |
| TCR_EL2 | RW | 3.2.100 TCR_EL2, Translation Control Register, EL2 on page 231 | | | | |
| VMPIDR_EL2 | RW | Virtualization Multiprocessor ID Register EL2 | | | | |
| VPIDR_EL2 | RW | Virtualization Core ID Register EL2 | | | | |
| VSESR_EL2 | RW | 3.2.108 VSESR_EL2, Virtual SError Exception Syndrome Register on page 238 | | | | |
| VTCR_EL2 | RW | 3.2.109 VTCR_EL2, Virtualization Translation Control Register, EL2 on page 239 | | | | |
| VTTBR_EL2 | RW | 3.2.110 VTTBR_EL2, Virtualization Translation Table Base Register, EL2 on page 240 | | | | |

Exception and fault handling registers

| Name | Туре | Description |
|-----------|------|----------------------------------------------------------------------|
| AFSRO_EL1 | RW | 3.2.8 AFSRO_EL1, Auxiliary Fault Status Register 0, EL1 on page 111 |
| AFSRO_EL2 | RW | 3.2.9 AFSRO_EL2, Auxiliary Fault Status Register 0, EL2 on page 112 |
| AFSRO_EL3 | RW | 3.2.10 AFSRO_EL3, Auxiliary Fault Status Register 0, EL3 on page 113 |
| AFSR1_EL1 | RW | 3.2.11 AFSR1_EL1, Auxiliary Fault Status Register 1, EL1 on page 113 |
| AFSR1_EL2 | RW | 3.2.12 AFSR1_EL2, Auxiliary Fault Status Register 1, EL2 on page 114 |
| AFSR1_EL3 | RW | 3.2.13 AFSR1_EL3, Auxiliary Fault Status Register 1, EL3 on page 115 |
| DISR_EL1 | RW | 3.2.41 DISR_EL1, Deferred Interrupt Status Register, EL1 on page 160 |
| ESR_EL1 | RW | 3.2.53 ESR_EL1, Exception Syndrome Register, EL1 on page 169 |
| ESR_EL2 | RW | 3.2.54 ESR_EL2, Exception Syndrome Register, EL2 on page 170 |
| ESR_EL3 | RW | 3.2.55 ESR_EL3, Exception Syndrome Register, EL3 on page 171 |
| HPFAR_EL2 | RW | Hypervisor IPA Fault Address Register EL2 |

| Name | Туре | Description |
|-----------|------|--------------------------------------------------------------------------------|
| VDISR_EL2 | RW | 3.2.107 VDISR_EL2, Virtual Deferred Interrupt Status Register, EL2 on page 237 |
| VSESR_EL2 | RW | 3.2.108 VSESR_EL2, Virtual SError Exception Syndrome Register on page 238 |

Implementation defined registers

| Name | Туре | Description |
|----------------|------|---------------------------------------------------------------------------------------------------|
| ATCR_EL1 | RW | 3.2.18 ATCR_EL1, Auxiliary Translation Control Register, EL1 on page 118 |
| ATCR_EL2 | RW | 3.2.19 ATCR_EL2, Auxiliary Translation Control Register, EL2 on page 121 |
| ATCR_EL12 | RW | 3.2.20 ATCR_EL12, Alias to Auxiliary Translation Control Register EL1 on page 123 |
| ATCR_EL3 | RW | 3.2.21 ATCR_EL3, Auxiliary Translation Control Register, EL3 on page 124 |
| AVTCR_EL2 | RW | 3.2.22 AVTCR_EL2, Auxiliary Virtualized Translation Control Register, EL2 on page 125 |
| CPUACTLR_EL1 | RW | 3.2.28 CPUACTLR_EL1, CPU Auxiliary Control Register, EL1 on page 133 |
| CPUACTLR2_EL1 | RW | 3.2.29 CPUACTLR2_EL1, CPU Auxiliary Control Register 2, EL1 on page 135 |
| CPUCFR_EL1 | RO | 3.2.31 CPUCFR_EL1, CPU Configuration Register, EL1 on page 138 |
| CPUECTLR_EL1 | RW | 3.2.32 CPUECTLR_EL1, CPU Extended Control Register, EL1 on page 139 |
| CPUPWRCTLR_EL1 | RW | 3.2.37 CPUPWRCTLR_EL1, Power Control Register, EL1 on page 154 |
| ERXPFGCDN_EL1 | RW | 3.2.49 ERXPFGCDN_EL1, Selected Error Pseudo Fault Generation Count Down Register, EL1 on page 165 |
| ERXPFGCTL_EL1 | RW | 3.2.50 ERXPFGCTL_EL1, Selected Error Pseudo Fault Generation Control Register, EL1 on page 166 |
| ERXPFGF_EL1 | RW | 3.2.51 ERXPFGF_EL1, Selected Pseudo Fault Generation Feature Register, EL1 on page 167 |

The following table shows the 32-bit wide implementation defined Cluster registers. Details of these registers can be found in $Arm^{\mathbb{R}}$ DynamlQTM Shared Unit AE Technical Reference Manual

Table 3-13: Cluster registers

| Name | Copro | CRn | Opc1 | CRm | Opc2 | Width | Description |
|-------------------------|-------|-----|------|-----|------|--------|-----------------------------------------------|
| CLUSTERCFR_EL1 | 3 | c15 | 0 | с3 | 0 | 32-bit | Cluster configuration register. |
| CLUSTERIDR_EL1 | 3 | c15 | 0 | сЗ | 1 | 32-bit | Cluster main revision ID. |
| CLUSTEREVIDR_EL1 | 3 | c15 | 0 | сЗ | 2 | 32-bit | Cluster ECO ID. |
| CLUSTERACTLR_EL1 | 3 | c15 | 0 | сЗ | 3 | 32-bit | Cluster auxiliary control register. |
| CLUSTERECTLR_EL1 | 3 | c15 | 0 | сЗ | 4 | 32-bit | Cluster extended control register. |
| CLUSTERPWRCTLR_EL1 | 3 | c15 | 0 | сЗ | 5 | 32-bit | Cluster power control register. |
| CLUSTERPWRDN_EL1 | 3 | c15 | 0 | сЗ | 6 | 32-bit | Cluster power down register. |
| CLUSTERPWRSTAT_EL1 | 3 | c15 | 0 | сЗ | 7 | 32-bit | Cluster power status register. |
| CLUSTERTHREADSID_EL1 | 3 | c15 | 0 | c4 | 0 | 32-bit | Cluster thread scheme ID register. |
| CLUSTERACPSID_EL1 | 3 | c15 | 0 | с4 | 1 | 32-bit | Cluster ACP scheme ID register. |
| CLUSTERSTASHSID_EL1 | 3 | c15 | 0 | с4 | 2 | 32-bit | Cluster stash scheme ID register. |
| CLUSTERPARTCR_EL1 | 3 | c15 | 0 | с4 | 3 | 32-bit | Cluster partition control register. |
| CLUSTERBUSQOS_EL1 | 3 | c15 | 0 | с4 | 4 | 32-bit | Cluster bus QoS control register. |
| CLUSTERL3HIT_EL1 | 3 | c15 | 0 | с4 | 5 | 32-bit | Cluster L3 hit counter register. |
| CLUSTERL3MISS_EL1 | 3 | c15 | 0 | с4 | 6 | 32-bit | Cluster L3 miss counter register. |
| CLUSTERTHREADSIDOVR_EL1 | 3 | c15 | 0 | с4 | 7 | 32-bit | Cluster thread scheme ID override register |
| CLUSTERPMCR_EL1 | 3 | c15 | 0 | c5 | 0 | 32-bit | Cluster Performance Monitors Control Register |

| Name | Copro | CRn | Opc1 | CRm | Opc2 | Width | Description |
|-----------------------|-------|-----|------|-----|------|--------|------------------------------------------------------|
| CLUSTERPMCNTENSET_EL1 | 3 | c15 | 0 | c5 | 1 | 32-bit | Cluster Count Enable Set Register |
| CLUSTERPMCNTENCLR_EL1 | 3 | c15 | 0 | c5 | 2 | 32-bit | Cluster Count Enable Clear Register |
| CLUSTERPMOVSSET_EL1 | 3 | c15 | 0 | c5 | 3 | 32-bit | Cluster Overflow Flag Status Set |
| CLUSTERPMOVSCLR_EL1 | 3 | c15 | 0 | c5 | 4 | 32-bit | Cluster Overflow Flag Status Clear |
| CLUSTERPMSELR_EL1 | 3 | c15 | 0 | c5 | 5 | 32-bit | Cluster Event Counter Selection Register |
| CLUSTERPMINTENSET_EL1 | 3 | c15 | 0 | c5 | 6 | 32-bit | Cluster Interrupt Enable Set Register |
| CLUSTERPMINTENCLR_EL1 | 3 | c15 | 0 | c5 | 7 | 32-bit | Cluster Interrupt Enable Clear Register |
| CLUSTERPMXEVTYPER_EL1 | 3 | c15 | 0 | с6 | 1 | 32-bit | Cluster Selected Event Type and Filter Register |
| CLUSTERPMXEVCNTR_EL1 | 3 | c15 | 0 | с6 | 2 | 32-bit | Cluster Selected Event Counter Register |
| Reserved/RAZ | 3 | c15 | 0 | с6 | 3 | 32-bit | Cluster Monitor Debug Configuration Register |
| CLUSTERPMCEID0_EL1 | 3 | c15 | 0 | с6 | 4 | 32-bit | Cluster Common Event Identification IDO Register |
| CLUSTERPMCEID1_EL1 | 3 | c15 | 0 | с6 | 5 | 32-bit | Cluster Common Event Identification ID1 Register |
| CLUSTERPMCLAIMSET_EL1 | 3 | c15 | 0 | с6 | 6 | 32-bit | Cluster Performance Monitor Claim Tag Set Register |
| CLUSTERPMCLAIMCLR_EL1 | 3 | c15 | 0 | с6 | 7 | 32-bit | Cluster Performance Monitor Claim Tag Clear Register |

Security

| Name | Туре | Description |
|-----------|------|------------------------------------------------------------------------------------|
| ACTLR_EL3 | RW | 3.2.7 ACTLR_EL3, Auxiliary Control Register, EL3 on page 109 |
| AFSRO_EL3 | RW | 3.2.10 AFSRO_EL3, Auxiliary Fault Status Register 0, EL3 on page 113 |
| AFSR1_EL3 | RW | 3.2.13 AFSR1_EL3, Auxiliary Fault Status Register 1, EL3 on page 115 |
| AMAIR_EL3 | RW | 3.2.17 AMAIR_EL3, Auxiliary Memory Attribute Indirection Register, EL3 on page 118 |
| CPTR_EL3 | RW | 3.2.27 CPTR_EL3, Architectural Feature Trap Register, EL3 on page 132 |
| MDCR_EL3 | RW | 3.2.89 MDCR_EL3, Monitor Debug Configuration Register, EL3 on page 217 |

Reset management registers

| Name | Туре | Description |
|-----------|------|-----------------------------------------------------------------------|
| RMR_EL3 | RW | 3.2.94 RMR_EL3, Reset Management Register on page 223 |
| RVBAR_EL3 | RW | 3.2.95 RVBAR_EL3, Reset Vector Base Address Register, EL3 on page 224 |

Address registers

| Name | Туре | Description |
|---------|------|------------------------------------------------------------|
| PAR_EL1 | RW | 3.2.92 PAR_EL1, Physical Address Register, EL1 on page 222 |

3.2.5 ACTLR_EL1, Auxiliary Control Register, EL1


ACTLR_EL1 provides **IMPLEMENTATION DEFINED** configuration and control options for execution at EL1 and EL0.

Bit field descriptions

ACTLR_EL1 is a 64-bit register, and is part of:

- The Other system control registers functional group.
- The **IMPLEMENTATION DEFINED** functional group.

Figure 3-1: ACTLR_EL1 bit assignments



RESO, [63:0]

RESO Reserved.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.6 ACTLR_EL2, Auxiliary Control Register, EL2

The ACTLR_EL2 provides IMPLEMENTATION DEFINED configuration and control options for EL2.


Bit field descriptions

ACTLR_EL2 is a 64-bit register, and is part of:

- The Virtualization registers functional group.
- The Other system control registers functional group.
- The IMPLEMENTATION DEFINED functional group.

This register resets to value 0x000000000000000.

Figure 3-2: ACTLR_EL2 bit assignments

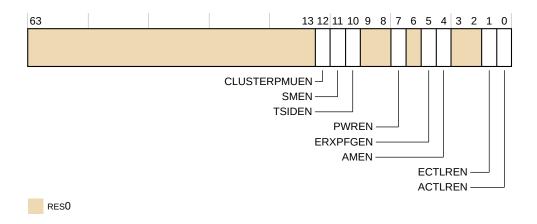

RESO, [63:13]

RESO Reserved.

CLUSTERPMUEN, [12]

Performance Management Registers enable. The possible values are:

- OCLUSTERPM* registers are not write-accessible from a lower Exception level. This is the reset value.
- 1 CLUSTERPM* registers are write-accessible from EL1 Non-secure if they are write-accessible from EL2.

SMEN, [11]

Scheme Management Registers enable. The possible values are:

- Registers CLUSTERACPSID, CLUSTERSTASHSID, CLUSTERPARTCR, CLUSTERBUSQOS, and CLUSTERTHREADSIDOVR are not write-accessible from EL1 Non-secure. This is the reset value.
- Registers CLUSTERACPSID, CLUSTERSTASHSID, CLUSTERPARTCR, CLUSTERBUSQOS, and CLUSTERTHREADSIDOVR are write-accessible from EL1 Non-secure if they are write-accessible from EL2.

TSIDEN, [10]

Thread Scheme ID Register enable. The possible values are:

- Register CLUSTERTHREADSID is not write-accessible from EL1 Non-secure. This is the reset value.
- 1 Register CLUSTERTHREADSID is write-accessible from EL1 Non-secure if they are write-accessible from EL2.

RES0, [9:8]

RESO Reserved.

PWREN, [7]

Power Control Registers enable. The possible values are:

- Registers CPUPWRCTLR, CLUSTERPWRCTLR, CLUSTERPWRDN, CLUSTERPWRSTAT, CLUSTERL3HIT and CLUSTERL3MISS are not write-accessible from EL1 Non-secure. This is the reset value.
- Registers CPUPWRCTLR, CLUSTERPWRCTLR, CLUSTERPWRDN, CLUSTERPWRSTAT, CLUSTERL3HIT and CLUSTERL3MISS are write-accessible from EL1 Non-secure if they are write-accessible from EL2.

RES0, [6]

RESO Reserved.

ERXPFGEN, [5]

Error Record Registers enable. The possible values are:

- ereset value. ERXPFG* are not write-accessible from EL1 Non-secure. This is the
- 1 ERXPFG* are write-accessible from EL1 Non-secure if they are write-accessible from FL2.

AMEN, [4]

Activity Monitor enable. The possible values are:

- Non-secure accesses from EL1 and EL0 to activity monitor registers are trapped to EL2. This is the reset value.
- Non-secure accesses from EL1 and EL0 to activity monitor registers are not trapped to EL2.

RESO, [3:2]

RESO Reserved.

ECTLREN, [1]

Extended Control Registers enable. The possible values are:

- O CPUECTLR and CLUSTERECTLR are not write-accessible from EL1 Non-secure. This is the reset value.
- 1 CPUECTLR and CLUSTERECTLR are write-accessible from EL1 Non-secure if they are write-accessible from EL2.

ACTLREN, [0]

Auxiliary Control Registers enable. The possible values are:

- O CPUACTLR, CPUACTLR2, CPUACTLR3, and CLUSTERACTLR are not write-accessible from EL1 Non-secure. This is the reset value.
- 1 CPUACTLR, CPUACTLR2, CPUACTLR3, and CLUSTERACTLR are write-accessible from EL1 Non-secure if they are write-accessible from EL2.

Configurations

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.7 ACTLR_EL3, Auxiliary Control Register, EL3

The ACTLR_EL3 provides IMPLEMENTATION DEFINED configuration and control options for EL3.


Bit field descriptions

ACTLR_EL3 is a 64-bit register, and is part of:

- The Other system control registers functional group.
- The Security registers functional group.
- The IMPLEMENTATION DEFINED functional group.

This register resets to value 0x000000000000000.

Figure 3-3: ACTLR_EL3 bit assignments

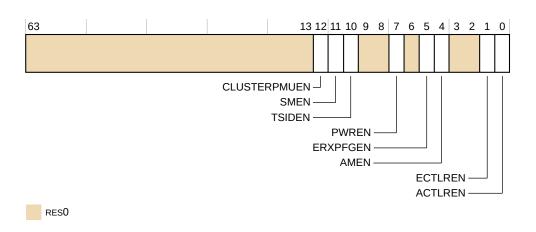

RESO, [63:13]

RESO Reserved.

CLUSTERPMUEN, [12]

Performance Management Registers enable. The possible values are:

- O CLUSTERPM* registers are not write-accessible from a lower Exception level. This is the reset value.
- 1 CLUSTERPM* registers are write-accessible from EL2 and EL1 Secure.

SMEN, [11]

Scheme Management Registers enable. The possible values are:

- Registers CLUSTERACPSID, CLUSTERSTASHSID, CLUSTERPARTCR, CLUSTERBUSQOS, and CLUSTERTHREADSIDOVR are not write-accessible from EL2 and EL1 Secure. This is the reset value.
- Registers CLUSTERACPSID, CLUSTERSTASHSID, CLUSTERPARTCR, CLUSTERBUSQOS, and CLUSTERTHREADSIDOVR are write-accessible from EL2 and EL1 Secure.

TSIDEN, [10]

Thread Scheme ID Register enable. The possible values are:

- Register CLUSTERTHREADSID is not write-accessible from EL2 and EL1 Secure. This is the reset value.
- 1 Register CLUSTERTHREADSID is write-accessible from EL2 and EL1 Secure.

RESO, [9:8]

RESO Reserved.

PWREN, [7]

Power Control Registers enable. The possible values are:

- Registers CPUPWRCTLR, CLUSTERPWRCTLR, CLUSTERPWRDN, CLUSTERPWRSTAT, CLUSTERL3HIT and CLUSTERL3MISS are not write-accessible from EL2 and EL1 Secure. This is the reset value.
- Registers CPUPWRCTLR, CLUSTERPWRCTLR, CLUSTERPWRDN, CLUSTERPWRSTAT, CLUSTERL3HIT and CLUSTERL3MISS are write-accessible from EL2 and EL1 Secure.

RES0, [6]

RESO Reserved.

ERXPFGEN, [5]

Error Record Registers enable. The possible values are:

- o ERXPFG* are not write-accessible from EL2 and EL1 Secure. This is the reset value.
- 1 ERXPFG* are write-accessible from EL2 and EL1 Secure.

AMEN, [4]

Activity Monitor enable. The possible values are:

- Accesses from EL2, EL1, and EL0 to activity monitor registers are trapped to EL3. This is the reset value.
- Accesses from EL2, EL1, and EL0 to activity monitor registers are not trapped to EL3.

RES0, [3:2]

RESO Reserved.

ECTLREN, [1]

Extended Control Registers enable. The possible values are:

- O CPUECTLR and CLUSTERECTLR are not write-accessible from EL2 and EL1 Secure. This is the reset value.
- 1 CPUECTLR and CLUSTERECTLR are write-accessible from EL2 and EL1 Secure.

ACTLREN, [0]

Auxiliary Control Registers enable. The possible values are:

- O CPUACTLR, CPUACTLR2, CPUACTLR3, and CLUSTERACTLR are not write-accessible from EL1 Non-secure. This is the reset value.
- 1 CPUACTLR, CPUACTLR2, CPUACTLR3, and CLUSTERACTLR are write-accessible from EL1 Non-secure if they are write-accessible from EL2.

Configurations

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.8 AFSRO_EL1, Auxiliary Fault Status Register 0, EL1


AFSRO_EL1 provides additional **IMPLEMENTATION DEFINED** fault status information for exceptions that are taken to EL1. In the Cortex®-A76AE core, no additional information is provided for these exceptions. Therefore this register is not used.

Bit field descriptions

AFSRO_EL1 is a 32-bit register, and is part of:

- The Exception and fault handling registers functional group.
- The **IMPLEMENTATION DEFINED** functional group.

Figure 3-4: AFSRO_EL1 bit assignments



RESO, [31:0]

RESO Reserved.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.9 AFSRO_EL2, Auxiliary Fault Status Register 0, EL2


AFSRO_EL2 provides extra **IMPLEMENTATION DEFINED** fault status information for exceptions that are taken to EL2.

Bit field descriptions

AFSRO_EL2 is a 32-bit register, and is part of:

- The Virtualization registers functional group.
- The Exception and fault handling registers functional group.
- The **IMPLEMENTATION DEFINED** functional group.

Figure 3-5: AFSR0_EL2 bit assignments



RESO, [31:0]

RESO Reserved.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.10 AFSRO_EL3, Auxiliary Fault Status Register 0, EL3


AFSRO_EL3 provides additional **IMPLEMENTATION DEFINED** fault status information for exceptions that are taken to EL3. In the Cortex®-A76AE core, no additional information is provided for these exceptions. Therefore this register is not used.

Bit field descriptions

AFSRO_EL3 is a 32-bit register, and is part of:

- The Exception and fault handling registers functional group.
- The Security registers functional group.
- The **IMPLEMENTATION DEFINED** functional group.

Figure 3-6: AFSRO_EL3 bit assignments



RESO, [31:0]

RESO Reserved.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.11 AFSR1_EL1, Auxiliary Fault Status Register 1, EL1


AFSR1_EL1 provides additional **IMPLEMENTATION DEFINED** fault status information for exceptions that are taken to EL1. This register is not used in Cortex®-A76AE.

Bit field descriptions

AFSR1_EL1 is a 32-bit register, and is part of:

- The Exception and fault handling registers functional group.
- The **IMPLEMENTATION DEFINED** functional group.

Figure 3-7: AFSR1_EL1 bit assignments



RESO, [31:0]

RESO Reserved.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.12 AFSR1_EL2, Auxiliary Fault Status Register 1, EL2


AFSR1_EL2 provides additional **IMPLEMENTATION DEFINED** fault status information for exceptions that are taken to EL2. This register is not used in the Cortex®-A76AE core.

Bit field descriptions

AFSR1_EL2 is a 32-bit register, and is part of:

- The Virtualization registers functional group.
- The Exception and fault handling registers functional group.
- The **IMPLEMENTATION DEFINED** functional group.

Figure 3-8: AFSR1_EL2 bit assignments



RESO, [31:0]

RESO Reserved.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.13 AFSR1_EL3, Auxiliary Fault Status Register 1, EL3


AFSR1_EL3 provides additional **IMPLEMENTATION DEFINED** fault status information for exceptions that are taken to EL3. This register is not used in the Cortex®-A76AE core.

Bit field descriptions

AFSR1_EL3 is a 32-bit register, and is part of:

- The Exception and fault handling registers functional group.
- The Security registers functional group.
- The **IMPLEMENTATION DEFINED** functional group.

Figure 3-9: AFSR1_EL3 bit assignments



RESO, [31:0]

RESO Reserved.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.14 AIDR_EL1, Auxiliary ID Register, EL1

AIDR_EL1 provides **IMPLEMENTATION DEFINED** identification information. This register is not used in the Cortex®-A76AE core.


Bit field descriptions

AIDR_EL1 is a 32-bit register, and is part of:

- The Identification registers functional group.
- The **IMPLEMENTATION DEFINED** functional group.

This register is read-only.

Figure 3-10: AIDR_EL1 bit assignments



RESO, [31:0]

RESO Reserved.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.15 AMAIR_EL1, Auxiliary Memory Attribute Indirection Register, EL1


AMAIR_EL1 provides **IMPLEMENTATION DEFINED** memory attributes for the memory regions that are specified by MAIR EL1. This register is not used in the Cortex®-A76AE core.

Bit field descriptions

AMAIR_EL1 is a 64-bit register, and is part of:

- The Virtual memory control registers functional group.
- The **IMPLEMENTATION DEFINED** functional group.

Figure 3-11: AMAIR_EL1 bit assignments



RESO, [63:0]

RESO Reserved.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.16 AMAIR_EL2, Auxiliary Memory Attribute Indirection Register, EL2


AMAIR_EL2 provides **IMPLEMENTATION DEFINED** memory attributes for the memory regions that are specified by MAIR_EL2. This register is not used in the Cortex®-A76AE core.

Bit field descriptions

AMAIR_EL2 is a 64-bit register, and is part of:

- The Virtualization registers functional group.
- The Virtual memory control registers functional group.
- The **IMPLEMENTATION DEFINED** functional group.

Figure 3-12: AMAIR_EL1 bit assignments



RESO, [63:0]

RESO Reserved.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.17 AMAIR_EL3, Auxiliary Memory Attribute Indirection Register, EL3


AMAIR_EL3 provides **IMPLEMENTATION DEFINED** memory attributes for the memory regions that are specified by MAIR_EL3. This register is not used in the Cortex®-A76AE core.

Bit field descriptions

AMAIR EL3 is a 64-bit register, and is part of:

- The Virtual memory control registers functional group.
- The Security registers functional group.
- The **IMPLEMENTATION DEFINED** functional group.

Figure 3-13: AMAIR_EL3 bit assignments



RESO, [63:0]

RESO Reserved.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.18 ATCR_EL1, Auxiliary Translation Control Register, EL1


The ATCR_EL1 determines the values of *Page-Based Hardware Attributes* (PBHA) on translation table walks memory access in EL1 translation regime.

This register has no effects unless PBHA is configured by the core.

Bit field descriptions

ATCR_EL1 is a 64-bit register.

Figure 3-14: ATCR_EL1 bit assignments

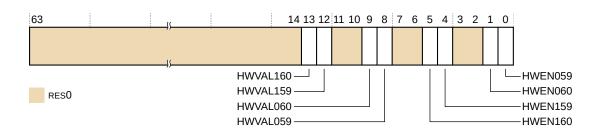

RESO, [63:14]

RESO.

HWVAL160, [13]

Indicates the value of PBHA[1] on translation table walks memory access targeting the base address defined by TTBR1_EL1 if HWEN160 is set.

HWVAL159, [12]

Indicates the value of PBHA[0] on translation table walks memory access targeting the base address defined by TTBR1_EL1 if HWEN159 is set.

RESO, [11:10]

RESO.

HWVAL060, [9]

Indicates the value of PBHA[1] translation table walks memory access targeting the base address defined by TTBRO_EL1 if HWEN060 is set.

HWVAL059, [8]

Indicates the value of PBHA[1] translation table walks memory access targeting the base address defined by TTBRO_EL1 if HWEN059 is set.

RES0, [7:6]

RESO.

HWEN160, [5]

Enables PBHA[1] translation table walks memory access targeting the base address defined by TTBR1_EL1. If this bit is clear, PBHA[1] on translation table walks is 0.

HWEN159, [4]

Enables PBHA[0] translation table walks memory access targeting the base address defined by TTBR1_EL1. If this bit is clear, PBHA[0] on translation table walks is 0.

RESO, [3:2]

RESO.

HWEN060, [1]

Enables PBHA[1] translation table walks memory access targeting the base address defined by TTBRO_EL1. If this bit is clear, PBHA[1] on translation table walks is 0.

HWEN059, [0]

Enables PBHA[0] translation table walks memory access targeting the base address defined by TTBRO_EL1. If this bit is clear, PBHA[0] on translation table walks is 0.

Configurations

AArch64 register ATCR_EL1 is mapped to AArch32 register ATTBCR (NS). At EL2 with HCR EL2.E2H set, accesses to ATCR EL1 are remapped to access ATCR EL2.

Usage constraints

Accessing the ATCR_EL1

To access the ATCR EL1:

This syntax is encoded with the following settings in the instruction encoding:

| Op0 | Op1 | CRn | CRm | Op2 |
|-----|-----|-----|-----|-----|
| 3 | 0 | c15 | c7 | 0 |

Accessibility

ATCR EL1 is accessible as follows:

| | Control | | | Accessibilit | У | | |
|----------|---------|-------|----|--------------|-----|----------|-----|
| | E2H | TGE | NS | ELO | EL1 | EL2 | EL3 |
| ATCR_EL1 | Х | Х | 0 | - | RW | n/a | RW |
| ATCR_EL1 | 0 | 0 1 - | | - | RW | RW | RW |
| ATCR_EL1 | 0 | 1 | 1 | - | n/a | RW | RW |
| ATCR_EL1 | 1 | 0 | 1 | - | RW | ATCR_EL2 | RW |
| ATCR_EL1 | 1 | 1 | 1 | - | n/a | ATCR_EL2 | RW |



ATCR_EL1 is also accessible using ATCR_EL12 when HCR.EL2.E2H is set. See 3.2.20 ATCR_EL12, Alias to Auxiliary Translation Control Register EL1 on page 123.

Traps and enables

Rules of traps and enables for this register are the same as TCR_EL1. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.19 ATCR_EL2, Auxiliary Translation Control Register, EL2


The ATCR_EL2 determines the values of *Page-Based Hardware Attributes* (PBHA) on translation table walks memory access in EL2 translation regime.

This register is only used when PBHA is configured by the core.

Bit field descriptions

ATCR_EL2 is a 64-bit register.

Figure 3-15: ATCR_EL2 bit assignments

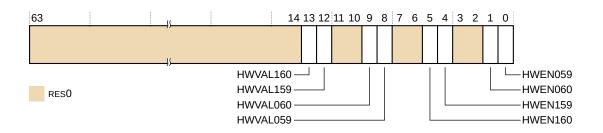

RESO, [63:14]

RESO.

HWVAL160, [13]

Indicates the value of PBHA[1] on translation table walks memory access targeting the base address defined by TTBR1_EL2 if HWEN160 is set.

HWVAL159, [12]

Indicates the value of PBHA[0] on translation table walks memory access targeting the base address defined by TTBR1_EL2 if HWEN159 is set.

RESO, [11:10]

RESO.

HWVAL060, [9]

Indicates the value of PBHA[1] translation table walks memory access targeting the base address defined by TTBRO EL2 if HWEN060 is set.

HWVAL059, [8]

Indicates the value of PBHA[1] translation table walks memory access targeting the base address defined by TTBRO_EL2 if HWEN059 is set.

RES0, [7:6]

RESO.

HWEN160, [5]

Enables PBHA[1] translation table walks memory access targeting the base address defined by TTBR1_EL2. If this bit is clear, PBHA[1] on translation table walks is 0.

HWEN159, [4]

Enables PBHA[0] translation table walks memory access targeting the base address defined by TTBR1_EL2. If this bit is clear, PBHA[0] on translation table walks is 0.

RESO, [3:2]

RESO.

HWEN060, [1]

Enables PBHA[1] translation table walks memory access targeting the base address defined by TTBRO_EL2. If this bit is clear, PBHA[1] on translation table walks is 0.

HWEN059, [0]

Enables PBHA[0] translation table walks memory access targeting the base address defined by TTBRO_EL2. If this bit is clear, PBHA[0] on translation table walks is 0.

Configurations

AArch64 ATCR EL2 register is architecturally mapped to AArch32 register AHTCR.

Usage constraints

Accessing the ATCR_EL2

To access the ATCR_EL2:

```
MRS Xt, S< 3  4  c15  c7  0>; Read ATCR_EL2 into Xt
MSR S < 3  4  c15  c7  0 > , Xt ; Write Xt to ATCR_EL2
```

This syntax is encoded with the following settings in the instruction encoding:

| Op0 | Op1 | CRn | CRm | Op2 |
|-----|-----|-----|-----|-----|
| 3 | 4 | c15 | c7 | 0 |

Accessibility

ATCR EL2 is accessible as follows:

| ELO (NS) | EL1 (NS) | EL1 (S) | EL2 | EL3 (SCR.NS=1) | EL3 (SCR.NS=0) |
|----------|----------|---------|-----|----------------|----------------|
| - | - | - | RW | RW | RW |

3.2.20 ATCR_EL12, Alias to Auxiliary Translation Control Register EL1

The ATCR EL12 alias allows access to ATCR EL1 at EL2 or EL3 when HCR EL2.E2H is set to 1.

This register is only used when Page-Based Hardware Attributes (PBHA) is configured by the core.

Usage constraints

Accessing the ATCR_EL12

To access the ATCR_EL1using the ATCR_EL12 alias:

```
MRS Xt , S< 3 5 c15 c7 0>; Read ATCR_EL12/ATCR_EL1 into Xt
MSR S < 3 5 c15 c7 0 > , Xt ; Write Xt to ATCR_EL12/ATCR_EL1
```

This syntax is encoded with the following settings in the instruction encoding:

| Op0 | Op1 | CRn | CRm | Op2 |
|-----|-----|-----|-----|-----|
| 3 | 5 | 15 | 7 | 0 |

Accessibility

ATCR_EL12 is accessible as follows:

| | Control | | | Accessibil | ity | | | | |
|-----------|---------|-----|----|------------|-----|----------|----------|--|--|
| | E2H | TGE | NS | ELO | EL1 | EL2 | EL3 | | |
| ATCR_EL12 | х | х | 0 | - | - | n/a | - | | |
| ATCR_EL12 | 0 | 0 | 1 | - | - | - | - | | |
| ATCR_EL12 | 0 | 1 | 1 | - | n/a | - | - | | |
| ATCR_EL12 | 1 | 0 | 1 | - | - | ATCR_EL1 | ATCR_EL1 | | |
| ATCR_EL12 | 1 | 1 | 1 | - | n/a | ATCR_EL1 | ATCR_EL1 | | |

Traps and enables

All traps that are associated with the ATCR_EL1 register that apply at EL2 or EL3 also apply to the ATCR EL12 alias.

This alias is only accessible when $HCR_EL2.E2H == 1$.

When HCR EL2.E2H == 0, access to this alias is UNDEFINED.

3.2.21 ATCR_EL3, Auxiliary Translation Control Register, EL3


The ATCR_EL3 determines the values of *Page-Based Hardware Attributes* (PBHA) on translation table walks memory access in EL3 translation regime.

This register is only used when PBHA is configured by the core.

Bit field descriptions

ATCR_EL3 is a 64-bit register.

Figure 3-16: ATCR_EL3 bit assignments



RESO, [63:10]

RESO.

HWVAL60, [9]

Indicates the value of PBHA[1] translation table walks memory access if HWEN60 is set.

HWVAL59, [8]

Indicates the value of PBHA[1] translation table walks memory access if HWEN59 is set.

RES0, [7:2]

RESO.

HWEN60, [1]

Enables PBHA[1] translation table walks memory access. If this bit is clear, PBHA[1] on translation table walks is 0.

HWEN59, [0]

Enables PBHA[0] translation table walks memory access. If this bit is clear, PBHA[0] on translation table walks is 0.

Configurations

AArch64 register ATCR EL3 is architecturally mapped to AArch32 register ATCR (S).

Usage constraints

Accessing the ATCR_EL3

To access the ATCR EL3:

```
MRS Xt , < 3 6 c15 c7 0> ; Read ATCR_EL3 into Xt
MSR S < 3 6 c15 c7 0 > , Xt ; Write Xt to ATCR_EL3
```

This syntax is encoded with the following settings in the instruction encoding:

| Op0 | Op1 | CRn | CRm | Op2 |
|-----|-----|-----|-----|-----|
| 3 | 6 | c15 | c7 | 0 |

Accessibility

ATCR EL3 is accessible as follows:

| ELO | EL1 (NS) | EL1 (S) | EL2 | EL3 (SCR.NS=1) | EL3 (SCR.NS=0) |
|-----|----------|---------|-----|----------------|----------------|
| - | - | - | - | RW | RW |

3.2.22 AVTCR_EL2, Auxiliary Virtualized Translation Control Register, EL2


The AVTCR_EL2 determines the values of *Page-Based Hardware Attributes* (PBHA) on stage 2 translation table walks memory access in EL1 Non-secure translation regime if stage 2 is enable.

This register is only used when PBHA is configured by the core.

Bit field descriptions

AVTCR EL2 is a 64-bit register.

Figure 3-17: AVTCR_EL2 bit assignments



RESO, [63:10]

RESO.

HWVAL60, [9]

Indicates the value of PBHA[1] translation table walks memory access if HWEN60 is set.

HWVAL59, [8]

Indicates the value of PBHA[1] translation table walks memory access if HWEN59 is set.

RES0, [7:2]

RESO.

HWEN60, [1]

Enables PBHA[1] translation table walks memory access. If this bit is clear, PBHA[1] on translation table walks is 0.

HWEN59, [0]

Enables PBHA[0] translation table walks memory access. If this bit is clear, PBHA[0] on translation table walks is 0.

Configurations

AArch64 register AVTCR_EL2 is architecturally mapped to AArch32 register AVTCR.

Usage constraints

Accessing the AVTCR_EL2

To access the AVTCR_EL2:

```
MRS Xt , S< 3 4 c15 c7 1>; Read AVTCR_EL2 into Xt
MSR S < 3 4 c15 c7 1 > , Xt ; Write Xt to AVTCR_EL2
```

This syntax is encoded with the following settings in the instruction encoding:

| Op0 | Op1 | CRn | CRm | Op2 |
|-----|-----|-----|-----|-----|
| 3 | 4 | c15 | c7 | 1 |

Accessibility

AVTCR_EL2 is accessible as follows:

| | ELO | EL1 (NS) | EL1 (S) | EL2 | EL3 (SCR.NS=1) | EL3 (SCR.NS=0) |
|---|-----|----------|---------|-----|----------------|----------------|
| ĺ | - | - | - | RW | RW | RW |

3.2.23 CCSIDR_EL1, Cache Size ID Register, EL1

The CCSIDR_EL1 provides information about the architecture of the currently selected cache.

Bit field descriptions

CCSIDR EL1 is a 32-bit register, and is part of the Identification registers functional group.

This register is read-only.

Figure 3-18: CCSIDR_EL1 bit assignments



WT, [31]

Indicates whether the selected cache level supports Write-Through:

O Cache Write-Through is not supported at any level.

For more information about encoding, see CCSIDR_EL1 encodings on page 129.

WB, [30]

Indicates whether the selected cache level supports Write-Back. Permitted values are:

- 0 Write-Back is not supported.
- 1 Write-Back is supported.

For more information about encoding, see CCSIDR_EL1 encodings on page 129.

RA, [29]

Indicates whether the selected cache level supports read-allocation. Permitted values are:

- O Read-allocation is not supported.
- 1 Read-allocation is supported.

For more information about encoding, see CCSIDR_EL1 encodings on page 129.

WA, [28]

Indicates whether the selected cache level supports write-allocation. Permitted values are:

- 0 Write-allocation is not supported.
- 1 Write-allocation is supported.

For more information about encoding, see CCSIDR_EL1 encodings on page 129.

NumSets, [27:13]

(Number of sets in cache) - 1. Therefore, a value of 0 indicates one set in the cache. The number of sets does not have to be a power of 2.

For more information about encoding, see CCSIDR_EL1 encodings on page 129.

Associativity, [12:3]

(Associativity of cache) - 1. Therefore, a value of 0 indicates an associativity of 1. The associativity does not have to be a power of 2.

For more information about encoding, see CCSIDR EL1 encodings on page 129.

LineSize, [2:0]

(Log₂(Number of bytes in cache line)) - 4. For example:

For a line length of 16 bytes: $Log_2(16) = 4$, LineSize entry = 0. This is the minimum line length.

For a line length of 32 bytes: $Log_2(32) = 5$, LineSize entry = 1.

For more information about encoding, see CCSIDR_EL1 encodings on page 129.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

CCSIDR_EL1 encodings

The following table shows the individual bit field and complete register encodings for the CCSIDR_EL1.

Table 3-27: CCSIDR encodings

| CSSELR | | Cache | Size | Complete register encoding | Regi | ster b | it fie | ld en | coding | | |
|------------|-------|----------------------|-------|----------------------------|------|--------|--------|-------|---------|---------------|----------|
| Level | InD | | | | WT | WB | RA | WA | NumSets | Associativity | LineSize |
| 00000 | 0b0 | L1 Data cache | 64KB | 701FE01A | 0 | 1 | 1 | 1 | 0x00FF | 0x003 | 2 |
| 00000 | 0b1 | L1 Instruction cache | 64KB | 201FE01A | 0 | 0 | 1 | 0 | 0x00FF | 0x003 | 2 |
| 0b001 | 0b0 | L2 cache | 128KB | 701FE03A | 0 | 1 | 1 | 1 | 0x00FF | 0x007 | 2 |
| | | | 256KB | 703FE03A | 0 | 1 | 1 | 1 | 0x01FF | 0x007 | 2 |
| | | | 512KB | 707FE03A | 0 | 1 | 1 | 1 | 0x03FF | 0x007 | 2 |
| 0b001 | 0b1 | Reserved | - | - | - | - | - | - | _ | - | - |
| 0b010 | 0b0 | L3 cache | 512KB | 703FE07A | 0 | 1 | 1 | 1 | 01FF | 00F | 2 |
| | | | 1MB | 707FE07A | | | | | 03FF | 00F | 2 |
| | | | 2MB | 70FFE07A | | | | | 07FF | 00F | 2 |
| | | | 4MB | 71FFE07A | | | | | OFFF | 00F | 2 |
| 0b0101 - 0 | b1111 | Reserved | - | - | - | - | - | - | - | - | - |

3.2.24 CLIDR_EL1, Cache Level ID Register, EL1

The CLIDR_EL1 identifies the type of cache, or caches, which are implemented at each level, up to a maximum of seven levels.


It also identifies the Level of Coherency (LoC) and Level of Unification (LoU) for the cache hierarchy.

Bit field descriptions

CLIDR EL1 is a 64-bit register, and is part of the Identification registers functional group.

This register is read-only.

Figure 3-19: CLIDR_EL1 bit assignments



RESO, [63:33]

RESO Reserved.

ICB, [32:30]

Inner cache boundary. This field indicates the boundary between the inner and the outer domain:

0b010 L2 cache is the highest inner level. 0b011 L3 cache is the highest inner level.

LoUU, [29:27]

Indicates the Level of Unification Uniprocessor for the cache hierarchy:

No levels of cache need to be cleaned or invalidated when cleaning or

invalidating to the Point of Unification. This is the value if no caches are

configured.

LoC, [26:24]

Indicates the Level of Coherency for the cache hierarchy:

0b010 L3 cache is not implemented. 0b011 L3 cache is implemented.

LoUIS, [23:21]

Indicates the Level of Unification Inner Shareable (LoUIS) for the cache hierarchy.

No cache level needs cleaning to Point of Unification.

RESO, [20:9]

No cache at levels L7 down to L4.

RESO Reserved.

Ctype3, [8:6]

Indicates the type of cache if the core implements L3 cache. If present, unified instruction and data caches at level 3:

0b100 Both per-core L2 and cluster L3 caches are present.0b000 All other options.

If Ctype2 has a value of 0b000, then the value of Ctype3 must be IGNORED.

Ctype2, [5:3]

Indicates the type of unified instruction and data caches at level 2:

0b100 Either per-core L2 or cluster L2 cache is present.

0b000 All other options.

Ctype1, [2:0]

Indicates the type of cache which is implemented at L1:

0b011 Separate instruction and data caches at L1.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.


3.2.25 CPACR_EL1, Architectural Feature Access Control Register, EL1

The CPACR_EL1 controls access to trace functionality and access to registers associated with Advanced SIMD and floating-point execution.

Bit field descriptions

CPACR_EL1 is a 32-bit register, and is part of the Other system control registers functional group.

Figure 3-20: CPACR_EL1 bit assignments

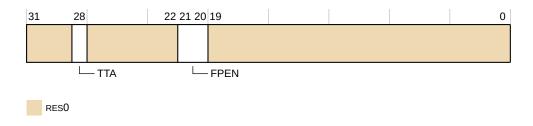

RESO, [31:29]

RESO Reserved.

TTA, [28]

Traps ELO and EL1 System register accesses to all implemented trace registers to EL1, from both Execution states. This bit is **RESO**. The core does not provide System register access to ETM control.

Configurations

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.


3.2.26 CPTR_EL2, Architectural Feature Trap Register, EL2

The CPTR_EL2 controls trapping to EL2 for accesses to CPACR, trace functionality and registers associated with Advanced SIMD and floating-point execution. It also controls EL2 access to this functionality.

Bit field descriptions

CPTR_EL2 is a 32-bit register, and is part of the Virtualization registers functional group.

Figure 3-21: CPTR_EL2 bit assignments

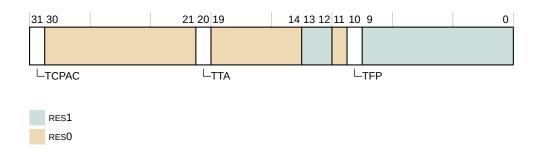

TTA, [20]

Trap Trace Access.

This bit is not implemented. **RESO**.

Configurations

RW fields in this register reset to **UNKNOWN** values.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.27 CPTR_EL3, Architectural Feature Trap Register, EL3


The CPTR_EL3 controls trapping to EL3 of access to CPACR_EL1, CPTR_EL2, trace functionality and registers associated with Advanced SIMD and floating-point execution.

It also controls EL3 access to trace functionality and registers associated with Advanced SIMD and floating-point execution.

Bit field descriptions

CPTR_EL3 is a 32-bit register, and is part of the Security registers functional group.

Figure 3-22: CPTR_EL3 bit assignments

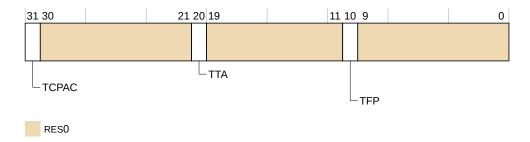

TTA, [20]

Trap Trace Access.

Not implemented. RESO.

TFP, [10]

Traps all accesses to SVE, Advanced SIMD and floating-point functionality to EL3. This applies to all Exception levels, both Security states, and both Execution states. The possible values are:

- Does not cause any instruction to be trapped. This is the reset value.
- Any attempt at any Exception level to execute an instruction that uses the registers that are associated with SVE, Advanced SIMD and floatingpoint is trapped to EL3, subject to the exception prioritization rules.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.


3.2.28 CPUACTLR_EL1, CPU Auxiliary Control Register, EL1

The CPUACTLR_EL1 provides **IMPLEMENTATION DEFINED** configuration and control options for the core.

Bit field descriptions

CPUACTLR_EL1 is a 64-bit register, and is part of the **IMPLEMENTATION DEFINED** registers functional group.

Figure 3-23: CPUACTLR_EL1 bit assignments



Reserved, [63:0]

Reserved for Arm® internal use.

Configurations

CPUACTLR EL1 is common to the Secure and Non-secure states.

Usage constraints

Accessing the CPUACTLR_EL1

The CPU Auxiliary Control Register can be written only when the system is idle. Arm recommends that you write to this register after a Cold reset, before the MMU is enabled.

Setting many of these bits can cause significantly lower performance on your code. Therefore, Arm strongly recommends that you do not modify this register unless directed by Arm.

This register is accessible as follows:

This register can be read with the MRS instruction using the following syntax:

This register can be written with the MSR instruction using the following syntax:

This syntax is encoded with the following settings in the instruction encoding:

| <systemreg></systemreg> | ор0 | op1 | CRn | CRm | op2 |
|-------------------------|-----|-----|-----|-----|-----|
| S3_0_C15_C1_0 | 3 | 0 | c15 | c1 | 0 |

Accessibility

This register is accessible in software as follows:

| <systemreg></systemreg> | Control | | | Accessibility | | | |
|-------------------------|---------|-----|----|---------------|-----|-----|-----|
| | E2H | TGE | NS | ELO | EL1 | EL2 | EL3 |
| S3_0_C15_C1_0 | Х | Х | 0 | - | RW | n/a | RW |

| <systemreg></systemreg> | Control | | | Accessibility | | | |
|-------------------------|---------|-----|----|---------------|-----|-----|-----|
| | E2H | TGE | NS | ELO | EL1 | EL2 | EL3 |
| S3_0_C15_C1_0 | Х | 0 | 1 | - | RW | RW | RW |
| S3_0_C15_C1_0 | X | 1 | 1 | - | n/a | RW | RW |

'n/a' Not accessible. The core cannot be executing at this Exception level, so this access is not possible.

Traps and enables

For a description of the prioritization of any generated exceptions, see Synchronous exception prioritization in the Arm® Architecture Reference Manual Armv8, for A-profile architecture.


3.2.29 CPUACTLR2_EL1, CPU Auxiliary Control Register 2, EL1

The CPUACTLR2_EL1 provides IMPLEMENTATION DEFINED configuration and control options for the core.

Bit field descriptions

CPUACTLR2_EL1 is a 64-bit register, and is part of the *IMPLEMENTATION DEFINED* registers functional group.

Figure 3-24: CPUACTLR2_EL1 bit assignments



Reserved, [63:0]

Reserved for Arm® internal use.

Configurations

CPUACTLR2_EL1 is common to the Secure and Non-secure states.

Usage constraints

Accessing the CPUACTLR2_EL1

The CPUACTLR2_EL1 can be written only when the system is idle. Arm recommends that you write to this register after a powerup reset, before the MMU is enabled.

Setting many of these bits can cause significantly lower performance on your code. Therefore, Arm strongly recommends that you do not modify this register unless directed by Arm.

This register can be read using MRS with the following syntax:

MRS <Xt>,<systemreg>

This register can be written using MSR with the following syntax:

MSR <systemreg>, <Xt>

This syntax is encoded with the following settings in the instruction encoding:

| <systemreg></systemreg> | Op0 | Op1 | CRn | CRm | Op2 |
|-------------------------|-----|-----|-----|-----|-----|
| S3_0_C15_C1_1 | 3 | 0 | c15 | c1 | 1 |

Accessibility

This register is accessible in software as follows:

| <syntax></syntax> | Control | | | Accessibility | | | |
|-------------------|---------|-----|----|---------------|-----|-----|-----|
| | E2H | TGE | NS | ELO | EL1 | EL2 | EL3 |
| S3_0_C15_C1_1 | X | X | 0 | - | RW | n/a | RW |
| S3_0_C15_C1_1 | X | 0 | 1 | - | RW | RW | RW |
| S3_0_C15_C1_1 | Х | 1 | 1 | - | n/a | RW | RW |

'n/a' Not accessible. The PE cannot be executing at this Exception level, so this access is not possible.

Traps and enables

For a description of the prioritization of any generated exceptions, see *Exception priority order* in the *Arm® Architecture Reference Manual Armv8*, for A-profile architecture for exceptions that are taken to AArch64 state, and see *Synchronous exception prioritization* for exceptions that are taken to AArch64 state.

Write-Access to this register from EL1 or EL2 depends on the value of bit[0] of ACTLR_EL2 and ACTLR EL3.


3.2.30 CPUACTLR3_EL1, CPU Auxiliary Control Register 3, EL1

The CPUACTLR3_EL1 provides IMPLEMENTATION DEFINED configuration and control options for the core.

Bit field descriptions

CPUACTLR3_EL1 is a 64-bit register, and is part of the *implementation defined* registers functional group.

Figure 3-25: CPUACTLR3_EL1 bit assignments



Reserved, [63:0]

Reserved for Arm® internal use.

Configurations

Usage constraints

Accessing the CPUACTLR3_EL1

The CPUACTLR3_EL1 can be written only when the system is idle. Arm recommends that you write to this register after a powerup reset, before the MMU is enabled.

Setting many of these bits can cause significantly lower performance on your code. Therefore, Arm strongly recommends that you do not modify this register unless directed by Arm.

This register can be read using MRS with the following syntax:

This register can be written using MSR with the following syntax:

This syntax is encoded with the following settings in the instruction encoding:

| <systemreg></systemreg> | Ор0 | Op1 | CRn | CRm | Op2 |
|-------------------------|-----|-----|-----|-----|-----|
| S3_0_C15_C1_2 | 3 | 0 | c15 | c1 | 2 |

Accessibility

This register is accessible in software as follows:

| <syntax></syntax> | Control | | | Accessibility | | | |
|-------------------|---------|-----|----|---------------|-----|-----|-----|
| | E2H | TGE | NS | ELO | EL1 | EL2 | EL3 |
| S3_0_C15_C1_2 | X | X | 0 | - | RW | n/a | RW |
| S3_0_C15_C1_2 | X | 0 | 1 | - | RW | RW | RW |
| S3_0_C15_C1_2 | X | 1 | 1 | - | n/a | RW | RW |

'n/a' Not accessible. The PE cannot be executing at this Exception level, so this access is not possible.

Traps and enables

For a description of the prioritization of any generated exceptions, see *Exception priority order* in the *Arm® Architecture Reference Manual Armv8*, for A-profile architecture for exceptions that are taken to AArch64 state, and see *Synchronous exception prioritization* for exceptions that are taken to AArch64 state.

Write-Access to this register from EL1 or EL2 depends on the value of bit[0] of ACTLR_EL2 and ACTLR_EL3.

3.2.31 CPUCFR_EL1, CPU Configuration Register, EL1

The CPUCFR EL1 provides configuration information for the core.

Bit field descriptions

CPUCFR_EL1 is a 32-bit register, and is part of the **IMPLEMENTATION DEFINED** registers functional group.

This register is read-only.

Figure 3-26: CPUCFR_EL1 bit assignments



RESO, [31:2]

RES0

RESO Reserved.

ECC, [1:0]

Indicates whether ECC is present or not. The possible values are:

00

ECC is not present.

01

ECC is present.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

Usage constraints

Accessing the CPUCFR_EL1

This register can be read with the MRS instruction using the following syntax:

MRS <Xt>, <systemreg>

To access the CPUCFR EL1:

MRS <Xt>, CPUCFR_EL1 ; Read CPUCFR_EL1 into Xt

This syntax is encoded with the following settings in the instruction encoding:

| <systemreg></systemreg> | ор0 | op1 | CRn | CRm | op2 |
|-------------------------|-----|-----|------|------|-----|
| S3_0_C15_C0_0 | 11 | 000 | 1111 | 0000 | 000 |

Accessibility

This register is accessible in software as follows:

| <systemreg></systemreg> | Control | | | Accessibility | | | |
|-------------------------|---------|-----|----|---------------|-----|-----|-----|
| | E2H | TGE | NS | ELO | EL1 | EL2 | EL3 |
| S3_0_C15_C0_0 | X | X | 0 | - | RO | n/a | RO |
| S3_0_C15_C0_0 | Х | 0 | 1 | - | RO | RO | RO |
| S3_0_C15_C0_0 | X | 1 | 1 | - | n/a | RO | RO |

'n/a' Not accessible. The PE cannot be executing at this Exception level, so this access is not possible.

3.2.32 CPUECTLR_EL1, CPU Extended Control Register, EL1


The CPUECTLR_EL1 provides additional *IMPLEMENTATION DEFINED* configuration and control options for the core.

Bit field descriptions

CPUECTLR EL1 is a 64-bit register, and is part of the 64-bit registers functional group.

This register resets to value 0x000000961563000.

Figure 3-27: CPUECTLR_EL1 bit assignments

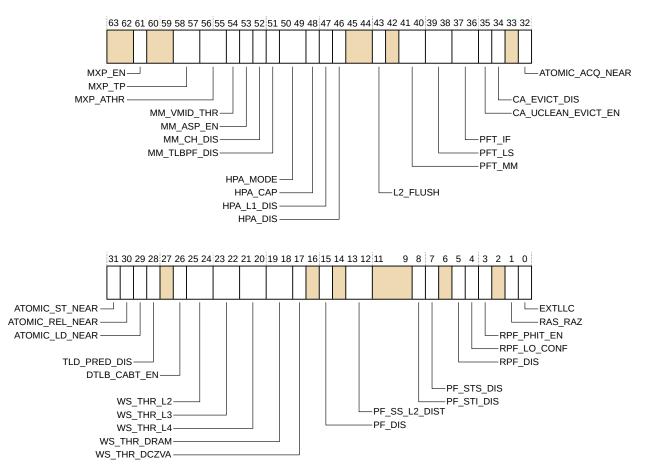

RESO, [63:62]

RESO Reserved.

RES0

MXP_EN, [61]

Max-power throttle enable. The possible values are:

- O Disables max-power throttling mechanism. This is the reset value.
- 1 Enables max-power throttling mechanism.



Both the MXP_EN bit and the **MPMMEN** input pin at the DSU-AE cluster level must be asserted to enable the max-power throttling mechanism.

RESO, [60:59]

RESO Reserved.

MXP_TP, [58:57]

Percentage of throttling in the Load-Store and Vector Execute units during the period when throttling has been triggered and is active. The possible values are:

- Throttle by 60%. This is the reset value.
- Throttle by 50%.
- Throttle by 40%.
- Throttle by 30%.

MXP_ATHR, [56:55]

Peak activity threshold at which max-power throttling is triggered. The possible values are:

- Max-power throttling that is triggered at 70% of peak activity. This is the reset value.
- 01 Max-power throttling that is triggered at 60% of peak activity.
- Max-power throttling that is triggered at 50% of peak activity.
- 11 Max-power throttling that is triggered at 40% of peak activity.

MM_VMID_THR, [54]

1

VMID filter threshold. The possible values are:

- Flush VMID filter after 16 unique VMID allocations to the MMU Translation Cache. This is the reset value.
 - Flush VMID filter after 32 unique VMID allocations to the MMU

Translation Cache.

MM_ASP_EN, [53]

Disables allocation of splintered pages in L2 TLB. The possible values are:

- Enables allocation of splintered pages in the L2 TLB. This is the reset
- 1 Disables allocation of splintered pages in the L2 TLB.

MM_CH_DIS, [52]

Disables use of contiguous hint. The possible values are:

- 0 Enables use of contiguous hint. This is the reset value.
- 1 Disables use of contiguous hint.

MM_TLBPF_DIS, [51]

Disables L2 TLB prefetcher. The possible values are:

- 0 Enables L2 TLB prefetcher. This is the reset value.
- 1 Disables L2 TLB prefetcher.

HPA_MODE, [50:49]

Hardware Page Aggregation (HPA) mode. The possible values are:

- Moderately conservative hardware page aggregation. This is the reset value.
- O1 Aggressive hardware page aggregation.
- Moderately aggressive hardware page aggregation.
- 11 Conservative hardware page aggregation.

HPA_CAP, [48]

Limited or full hardware page aggregation selection. The possible values are:

0

Limited hardware page aggregation. This is the reset value.

1

Full hardware page aggregation.

HPA_L1_DIS, [47]

Disables HPA in L1 TLBs (but continues to use HPA in L2 TLB). The possible values are:

- 0 Enables hardware page aggregation in L1 TLBs. This is the reset value.
- 1 Disables hardware page aggregation in L1 TLBs.

HPA_DIS, [46]

Disables hardware page aggregation. The possible values are:

- 0 Enables hardware page aggregation. This is the reset value.
- 1 Disables hardware page aggregation.

RESO, [45:44]

res0 Reserved.

L2_FLUSH, [43]

Allocation behavior of copybacks that are caused by L2 cache hardware flush and DC CISW instructions targeting the L2 cache. If it is known that data is likely to be used soon by another core, setting this bit can improve system performance. The possible values are:

- L2 cache flushes and invalidates by set/way do not allocate in the L3 cache. Cache lines in the UniqueDirty state cause Write-Back transactions with the allocation hint cleared, while cache lines in UniqueClean or SharedClean states cause address-only Evict transactions. This is the reset value.
- L2 cache flushes by set/way allocate in the L3 cache. Cache lines in the UniqueDirty or UniqueClean state cause WriteBackFull or WriteEvictFull transactions, respectively, both with the allocation hint set. Cache lines in the SharedClean state cause address-only Evict transactions.

RES0, [42]

RESO Reserved.

PFT_MM, [41:40]

DRAM prefetch using PrefetchTgt transactions for table walk requests. The possible values are:

| 00 | Disable prefetchtgt generation for requests from the Memory |
|----|---------------------------------------------------------------------|
| | Management Unit (MMU). This is the reset value. |
| 01 | Conservatively generate prefetchtgt for cacheable requests from the |
| | MMU, always generate for non-cacheable. |
| 10 | Aggressively generate prefetchtgt for cacheable requests from the |
| | MMU, always generate for non-cacheable. |
| 11 | Always generate prefetchtgt for cacheable requests from the MMU, |
| | always generate for non-cacheable. |

PFT_LS, [39:38]

DRAM prefetch using PrefetchTgt transactions for load and store requests. The possible values are:

| 00 | Disable prefetchtgt generation for requests from the Load-Store unit |
|----|-------------------------------------------------------------------------|
| | (LS). This is the reset value. |
| 01 | Conservatively generate prefetchtgt for cacheable requests from the LS, |
| | always generate for non-cacheable. |
| 10 | Aggressively generate prefetchtgt for cacheable requests from the LS, |
| | always generate for non-cacheable. |
| 11 | Always generate prefetchtgt for cacheable requests from the LS, always |
| | generate for non-cacheable |

PFT_IF, [37:36]

DRAM prefetch using PrefetchTgt transactions for instruction fetch requests. The possible values are:

| 00 | Disable prefetchtgt generation for requests from the Instruction Fetch |
|----|-------------------------------------------------------------------------|
| | unit (IF). This is the reset value. |
| 01 | Conservatively generate prefetchtgt for cacheable requests from the IF, |
| | always generate for non-cacheable. |
| 10 | Aggressively generate prefetchtgt for cacheable requests from the IF, |
| | always generate for non-cacheable. |
| 11 | Always generate prefetchtgt for cacheable requests from the IF, always |
| | generate for non-cacheable. |

CA_UCLEAN_EVICT_EN, [35]

Enables sending WriteEvict transactions on the CPU CHI interface for UniqueClean evictions. WriteEvict transactions update downstream caches. Enable WriteEvict transactions only if there is an extra level of cache below the CPU's level 2 cache. The possible values are:

O Disables sending data with UniqueClean evictions.

Enables sending data with UniqueClean evictions. This is the reset value.

CA_EVICT_DIS, [34]

Disables sending of Evict transactions on the CPU CHI interface for clean cache lines that are evicted from the core. Evict transactions are required only if the system contains a snoop filter that requires notification when the core evicts the cache line. The possible values are:

- 0 Enables sending Evict transactions. This is the reset value.
- 1 Disables sending Evict transactions.

RES0, [33]

res0 Reserved.

ATOMIC_ACQ_NEAR, [32]

An atomic instruction to WB memory with acquire semantics that does not hit in the cache in Exclusive state, can make up to one fill request. The possible values are:

- O Acquire-atomic is near if cache line is already Exclusive, otherwise make far atomic request.
- Acquire-atomic will make up to 1 fill request to perform near. This is the reset value.

ATOMIC_ST_NEAR, [31]

A store atomic instruction to WB memory that does not hit in the cache in Exclusive state, can make up to one fill request. The possible values are:

- Store-atomic is near if cache line is already Exclusive, otherwise make far atomic request. This is the reset value.
- Store-atomic will make up to 1 fill request to perform near.

ATOMIC_REL_NEAR, [30]

An atomic instruction to WB memory with release semantics that does not hit in the cache in Exclusive state, can make up to one fill request. The possible values are:

- Release-atomic is near if cache line is already Exclusive, otherwise make far atomic request.
- 1 Release-atomic will make up to 1 fill request to perform near. This is the reset value.

ATOMIC_LD_NEAR, [29]

A load atomic (including SWP and CAS) instruction to WB memory that does not hit in the cache in Exclusive state, can make up to one fill request. The possible values are:

- Load-atomic is near if cache line is already Exclusive, otherwise make far atomic request.
- Load-atomic will make up to 1 fill request to perform near. This is the reset value.

TLD_PRED_DIS, [28]

Disables Transient Load Prediction. The possible values are:

- 0 Enables transient load prediction. This is the reset value.
- 1 Disables transient load prediction.

RES0, [27]

res0 Reserved.

DTLB_CABT_EN, [26]

Enables TLB Conflict Data Abort Exception. The possible values are:

- O Disables TLB conflict data abort exception. This is the reset value.
- 1 Enables TLB conflict data abort exception.

WS_THR_L2, [25:24]

Threshold for direct stream to L2 cache on store. The possible values are:

- 00 256B.
- 01 4KB. This is the reset value.
- 10 8KB.
- Disables direct stream to L2 cache on store.

WS_THR_L3, [23:22]

Threshold for direct stream to L3 cache on store. The possible values are:

- 00 768B.
- 01 16KB. This is the reset value.
- 10 32KB.
- Disables direct stream to L3 cache on store.

WS_THR_L4, [21:20]

Threshold for direct stream to L4 cache on store. The possible values are:

- 00 16KB.
- 01 64KB. This is the reset value.
- 10 128KB.
- Disables direct stream to L4 cache on store.

WS_THR_DRAM, [19:18]

Threshold for direct stream to DRAM on store. The possible values are:

- 00 64KB.
- 1MB, for memory designated as outer-allocate. This is the reset value.
- 10 1MB, allocating irrespective of outer-allocation designation.
- Disables direct stream to DRAM on store.

WS_THR_DCZVA, [17]

Have DCZVA use a lower WS_THR_L2 configuration. The possible values are:

- DCZVA behaves like normal store wrt WS THR L2.
- DCZVA will use one lower stream threshold from WS_THR_L2. This is

the reset value.

RES0, [16]

res0 Reserved.

PF_DIS, [15]

Disables data-side hardware prefetching. The possible values are:

- 0 Enables hardware prefetching. This is the reset value.
- 1 Disables hardware prefetching.

RES0, [14]

RESO Reserved.

PF_SS_L2_DIST, [13:12]

Single cache line stride prefetching L2 distance. The possible values are:

- 00 22 01 28
- 10 34
- 11 40. This is the reset value.

RESO, [11:10]

RESO Reserved.

RES0, [9]

RESO Reserved.

PF_STI_DIS, [8]

- 0 Enables store prefetching. This is the reset value.
- 1 Disables store prefetching.

PF_STS_DIS, [7]

Disables store-stride prefetches. The possible values are:

- 0 Enables store prefetching. This is the reset value.
- 1 Disables store prefetching.

RES0, [6]

RESO Reserved.

RPF_DIS, [5]

Disables region prefetcher. The possible values are:

- 0 Enables region prefetching. This is the reset value.
- 1 Disables region prefetching.

RPF_LO_CONF, [4]

Region prefetcher training behavior. The possible values are:

- Uimited training for region prefetcher on single accesses. This is the reset value.
- Always train the region prefetcher on single accesses, which results in fewer prefetch requests.

RPF_PHIT_EN, [3]

Enable region prefetcher propagation on hit. The possible values are:

- O Disables region prefetcher propagation on hit. This is the reset value.
- 1 Enables region prefetcher propagation on hit.

RES0, [2]

RESO Reserved.

RAS_RAZ, [1]

Force RAS register reads to Read-As-Zero. The possible values are:

- O A read of a RAS register returns the current value of the register.
- 1 A read of a RAS register returns a 0.

Set this bit to 1 to force reads of RAS registers to return 0 in cases where a fault such as **cpu_errmisc0** might alter the register contents. This behavior prevents a read from causing divergence, after a fault where the only divergence is the updating one or more of the RAS register bits.

EXTLLC, [0]

Internal or external Last-level cache (LLC) in the system. The possible values are:

- Indicates that an internal Last-level cache is present in the system, and that the DataSource field on the master CHI interface indicates when data is returned from the LLC. This is used to control how the LL_CACHE* PMU events count. This is the reset value.
- Indicates that an external Last-level cache is present in the system, and that the DataSource field on the master CHI interface indicates when data is returned from the LLC. This is used to control how the LL CACHE* PMU events count.

Configurations

This register has no configuration options.

Usage constraints

Accessing the CPUECTLR_EL1

The CPU Extended Control Register can be written only when the system is idle. Arm recommends that you write to this register after a powerup reset, before the MMU is enabled.

This register can be read using MRS with the following syntax:

MRS <Xt>, <systemreg>

This register can be written using MSR with the following syntax:

MSR <systemreg>, <Xt>

This syntax is encoded with the following settings in the instruction encoding:

| <systemreg></systemreg> | ор0 | op1 | CRn | CRm | op2 |
|-------------------------|-----|-----|------|------|-----|
| CPUECTLR_EL1 | 11 | 000 | 1111 | 0001 | 100 |

Accessibility

This register is accessible in software as follows:

| <systemreg></systemreg> | Control | | | Accessibility | | | |
|-------------------------|---------|-----|----|---------------|-----|-----|-----|
| | E2H | TGE | NS | ELO | EL1 | EL2 | EL3 |
| CPUECTLR_EL1 | X | X | 0 | - | RW | n/a | RW |
| CPUECTLR_EL1 | X | 0 | 1 | - | RW | RW | RW |
| CPUECTLR_EL1 | X | 1 | 1 | - | n/a | RW | RW |

'n/a' Not accessible. The PE cannot be executing at this Exception level, so this access is not possible.

Traps and enables

For a description of the prioritization of any generated exceptions, see *Synchronous exception* prioritization in the Arm® Architecture Reference Manual Armv8, for A-profile architecture for exceptions taken to AArch64 state.

Access to this register depends on bit[1] of ACTLR EL2 and ACTLR EL3.


3.2.33 CPUPCR_EL3, CPU Private Control Register, EL3

The CPUPCR_EL3 provides **IMPLEMENTATION DEFINED** configuration and control options for the core.

Bit field descriptions

CPUPCR_EL3 is a 64-bit register, and is part of the **IMPLEMENTATION DEFINED** registers functional group.

Figure 3-28: CPUPCR_EL3 bit assignments



Reserved, [63:0]

Reserved for Arm® internal use.

Configurations

CPUPCR EL3 is only accessible in Secure state.

Usage constraints

Accessing the CPUPCR_EL3

The CPUPCR_EL3 can be written only when the system is idle. Arm recommends that you write to this register after a powerup reset, before the MMU is enabled.

Writing to this register might cause **UNPREDICTABLE** behaviors. Therefore, Arm strongly recommends that you do not modify this register unless directed by Arm.

This register is accessible as follows:

This register can be read with the MRS instruction using the following syntax:

```
MRS <Xt>,<systemreg>
```

This register can be written with the MSR instruction using the following syntax:

```
MSR <systemreg>, <Xt>
```

This syntax is encoded with the following settings in the instruction encoding:

| <systemreg></systemreg> | ор0 | op1 | CRn | CRm | op2 |
|-------------------------|-----|-----|------|------|-----|
| S3_6_C15_8_1 | 11 | 110 | 1111 | 1000 | 001 |

Accessibility

This register is accessible in software as follows:

| <systemreg></systemreg> | Control | | | Access | Accessibility | | | |
|-------------------------|---------|-----|----|--------|---------------|-----|-----|--|
| | E2H | TGE | NS | ELO | EL1 | EL2 | EL3 | |
| S3_6_C15_8_1 | Х | X | 0 | - | - | n/a | RW | |
| S3_6_C15_8_1 | Х | 0 | 1 | - | - | - | RW | |
| S3_6_C15_8_1 | Х | 1 | 1 | - | n/a | - | RW | |

'n/a' Not accessible. The core cannot be executing at this Exception level, so this access is not possible.

Traps and enables

For a description of the prioritization of any generated exceptions, see Synchronous exception prioritization in the Arm® Architecture Reference Manual Armv8, for A-profile architecture.


3.2.34 CPUPMR_EL3, CPU Private Mask Register, EL3

The CPUPMR_EL3 provides **IMPLEMENTATION DEFINED** configuration and control options for the core.

Bit field descriptions

CPUPMR_EL3 is a 64-bit register, and is part of the **IMPLEMENTATION DEFINED** registers functional group.

Figure 3-29: CPUPMR_EL3 bit assignments



Reserved, [63:0]

Reserved for Arm® internal use.

Configurations

CPUPMR_EL3 is only accessible in Secure state.

Usage constraints

Accessing the CPUPMR_EL3

The CPUPMR_EL3 can be written only when the system is idle. Arm recommends that you write to this register after a powerup reset, before the MMU is enabled.

Writing to this register might cause unpredictable behaviors. Therefore, Arm strongly recommends that you do not modify this register unless directed by Arm.

This register is accessible as follows:

This register can be read with the MRS instruction using the following syntax:

```
MRS <Xt>, <systemreg>
```

This register can be written with the MSR instruction using the following syntax:

```
MSR <systemreg>, <Xt>
```

This syntax is encoded with the following settings in the instruction encoding:

| <systemreg></systemreg> | ор0 | op1 | CRn | CRm | op2 |
|-------------------------|-----|-----|------|------|-----|
| S3_6_C15_8_3 | 11 | 110 | 1111 | 1000 | 011 |

Accessibility

This register is accessible in software as follows:

| <systemreg></systemreg> | Control | | | Access | ccessibility | | | |
|-------------------------|---------|-----|----|--------|--------------|-----|-----|--|
| | E2H | TGE | NS | ELO | EL1 | EL2 | EL3 | |
| S3_6_C15_8_3 | Х | Х | 0 | - | - | n/a | RW | |
| S3_6_C15_8_3 | Х | 0 | 1 | - | - | - | RW | |
| S3_6_C15_8_3 | Х | 1 | 1 | - | n/a | - | RW | |

'n/a' Not accessible. The core cannot be executing at this Exception level, so this access is not possible.

Traps and enables

For a description of the prioritization of any generated exceptions, see *Synchronous exception* prioritization in the Arm® Architecture Reference Manual Armv8, for A-profile architecture.


3.2.35 CPUPOR_EL3, CPU Private Operation Register, EL3

The CPUPOR_EL3 provides **IMPLEMENTATION DEFINED** configuration and control options for the core.

Bit field descriptions

CPUPOR_EL3 is a 64-bit register, and is part of the **IMPLEMENTATION DEFINED** registers functional group.

Figure 3-30: CPUPOR_EL3 bit assignments



Reserved, [63:0]

Reserved for Arm® internal use.

Configurations

CPUPOR EL3 is only accessible in Secure state.

Usage constraints

Accessing the CPUPOR_EL3

The CPUPOR_EL3 can be written only when the system is idle. Arm recommends that you write to this register after a powerup reset, before the MMU is enabled.

Writing to this register might cause unpredictable behaviors. Therefore, Arm strongly recommends that you do not modify this register unless directed by Arm.

This register is accessible as follows:

This register can be read with the MRS instruction using the following syntax:

This register can be written with the MSR instruction using the following syntax:

MSR <systemreg>, <Xt>

This syntax is encoded with the following settings in the instruction encoding:

| <systemreg></systemreg> | ор0 | op1 | CRn | CRm | op2 |
|-------------------------|-----|-----|------|------|-----|
| S3_6_C15_8_2 | 11 | 110 | 1111 | 1000 | 010 |

Accessibility

This register is accessible in software as follows:

| <systemreg></systemreg> | Control | | | Access | Accessibility | | | |
|-------------------------|---------|-----|----|--------|---------------|-----|-----|--|
| | E2H | TGE | NS | ELO | EL1 | EL2 | EL3 | |
| S3_6_C15_8_2 | X | X | 0 | - | - | n/a | RW | |
| S3_6_C15_8_2 | X | 0 | 1 | - | - | - | RW | |

| <systemreg></systemreg> | Control | | | Accessibility | | | |
|-------------------------|---------|-----|----|---------------|-----|-----|-----|
| | E2H | TGE | NS | ELO | EL1 | EL2 | EL3 |
| S3_6_C15_8_2 | X | 1 | 1 | - | n/a | - | RW |

'n/a' Not accessible. The core cannot be executing at this Exception level, so this access is not possible.

Traps and enables

For a description of the prioritization of any generated exceptions, see *Synchronous exception* prioritization in the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.36 CPUPSELR_EL3, CPU Private Selection Register, EL3

The CPUPSELR_EL3 provides **IMPLEMENTATION DEFINED** configuration and control options for the core.

Bit field descriptions

CPUPSELR_EL3 is a 32-bit register, and is part of the **IMPLEMENTATION DEFINED** registers functional group.

Figure 3-31: CPUPSELR_EL3 bit assignments



Reserved, [31:0]

Reserved for Arm® internal use.

Configurations

CPUPSELR_EL3 is only accessible in Secure state.

Usage constraints

Accessing the CPUPSELR_EL3

The CPUPSELR_EL3 can be written only when the system is idle. Arm recommends that you write to this register after a powerup reset, before the MMU is enabled.

Writing to this register might cause unpredictable behaviors. Therefore, Arm strongly recommends that you do not modify this register unless directed by Arm.

This register is accessible as follows:

This register can be read with the MRS instruction using the following syntax:

MRS <Xt>,<systemreg>

This register can be written with the MSR instruction using the following syntax:

MSR <systemreg>, <Xt>

This syntax is encoded with the following settings in the instruction encoding:

| <systemreg></systemreg> | ор0 | op1 | CRn | CRm | op2 |
|-------------------------|-----|-----|------|------|-----|
| S3_6_C15_8_0 | 11 | 110 | 1111 | 1000 | 000 |

Accessibility

This register is accessible in software as follows:

| <systemreg></systemreg> | Control | | | Access | sibility | | | |
|-------------------------|---------|-----|----|--------|----------|-----|-----|--|
| | E2H | TGE | NS | ELO | EL1 | EL2 | EL3 | |
| S3_6_C15_8_0 | X | X | 0 | - | - | n/a | RW | |
| S3_6_C15_8_0 | X | 0 | 1 | - | - | - | RW | |
| S3_6_C15_8_0 | Х | 1 | 1 | - | n/a | - | RW | |

'n/a' Not accessible. The core cannot be executing at this Exception level, so this access is not possible.

Traps and enables

For a description of the prioritization of any generated exceptions, see *Synchronous exception* prioritization in the Arm® Architecture Reference Manual Armv8, for A-profile architecture.


3.2.37 CPUPWRCTLR_EL1, Power Control Register, EL1

The CPUPWRCTLR EL1 provides information about power control support for the core.

Bit field descriptions

CPUPWRCTLR_EL1 is a 32-bit register, and is part of the **IMPLEMENTATION DEFINED** registers functional group.

Figure 3-32: CPUPWRCTLR_EL1 bit assignments

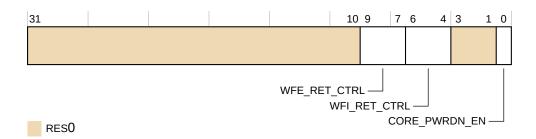

RESO, [31:10]

RESO Reserved.

WFE_RET_CTRL, [9:7]

CPU WFE retention control:

Disable the retention circuit. This is the default value, see

CPUPWRCTLR Retention Control Field on page 155 for more

retention control options.

WFI_RET_CTRL, [6:4]

CPU WFI retention control:

Disable the retention circuit. This is the default value, see

CPUPWRCTLR Retention Control Field on page 155 for more

retention control options.

RESO, [3:1]

RESO Reserved.

CORE_PWRDN_EN, [0]

Indicates to the power controller using PACTIVE if the core wants to power down when it enters WFI state.

No powerdown requested. This is the reset value.

1 A power down is requested.

Table 3-46: CPUPWRCTLR Retention Control Field

| Encoding | Number of counter ticks ³ | Minimum retention entry delay |
|----------|--------------------------------------|---------------------------------|
| | | (System counter at 50MHz-10MHz) |
| 000 | Disable the retention circuit | Default Condition. |
| 001 | 2 | 40ns-200ns |
| 010 | 8 | 160ns-800ns |

| Encoding | Number of counter ticks ³ | Minimum retention entry delay |
|----------|--------------------------------------|---------------------------------|
| | | (System counter at 50MHz-10MHz) |
| 011 | 32 | 640ns - 3,200ns |
| 100 | 64 | 1,280ns-6,400ns |
| 101 | 128 | 2,560ns-12,800ns |
| 110 | 256 | 5,120ns-25,600ns |
| 111 | 512 | 10,240ns-51,200ns |

Configurations

There are no configuration notes.

Usage constraints

Accessing the CPUPWRCTLR_EL1

This register can be read using MRS with the following syntax:

This register can be written using MSR with the following syntax:

This syntax is encoded with the following settings in the instruction encoding:

| <systemreg></systemreg> | ор0 | op1 | CRn | CRm | op2 |
|-------------------------|-----|-----|------|------|-----|
| S3_0_C15_C2_7 | 11 | 000 | 1111 | 0010 | 111 |

Accessibility

This register is accessible in software as follows:

| <systemreg></systemreg> | Control | | | Accessibility | | | |
|-------------------------|---------|-----|----|---------------|-----|-----|-----|
| | E2H | TGE | NS | ELO | EL1 | EL2 | EL3 |
| S3_0_C15_C2_7 | Х | Х | 0 | - | RW | n/a | RW |
| S3_0_C15_C2_7 | Х | 0 | 1 | - | RW | RW | RW |
| S3_0_C15_C2_7 | Х | 1 | 1 | - | n/a | RW | RW |

'n/a' Not accessible. The PE cannot be executing at this Exception level, so this access is not possible.

Traps and enables

For a description of the prioritization of any generated exceptions, see *Synchronous exception* prioritization in the Arm® Architecture Reference Manual Armv8, for A-profile architecture for exceptions taken to AArch64 state.

³ The number of system counter ticks required before the core signals retention readiness on PACTIVE to the power controller. The core does not accept a retention entry request until this time.

Write-Access to this register from EL1 or EL2 depends on the value of bit[7] of ACTLR_EL2 and ACTLR EL3.

3.2.38 CSSELR_EL1, Cache Size Selection Register, EL1

CSSELR_EL1 selects the current Cache Size ID Register (CCSIDR_EL1), by specifying:


- The required cache level.
- The cache type, either instruction or data cache.

For details of the CCSIDR_EL1, see 3.2.23 CCSIDR_EL1, Cache Size ID Register, EL1 on page 127.

Bit field descriptions

CSSELR_EL1 is a 32-bit register, and is part of the Identification registers functional group.

Figure 3-33: CSSELR_EL1 bit assignments

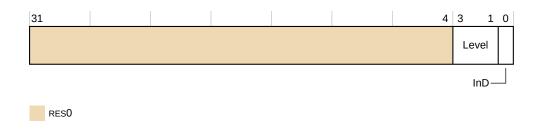

RESO, [31:4]

RESO Reserved.

Level, [3:1]

Cache level of required cache:

000 L1.001 L2.010 L3, if present.

The combination of Level=001 and InD=1 is reserved.

The combinations of Level and InD for 0100 to 1111 are reserved.

InD, [0]

Instruction not Data bit:

- 0 Data or unified cache.
- 1 Instruction cache.

The combination of Level=001 and InD=1 is reserved.

The combinations of Level and InD for 0100 to 1111 are reserved.

Configurations

If a cache level is missing but CSSELR_EL1 selects this level, then a CCSIDR_EL1 read returns an **UNKNOWN** value.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.39 CTR_ELO, Cache Type Register, ELO


The CTR_ELO provides information about the architecture of the caches.

Bit field descriptions

CTR ELO is a 32-bit register, and is part of the Identification registers functional group.

This register is read-only.

Figure 3-34: CTR_ELO bit assignments

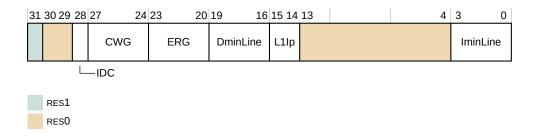

RES1, [31]

RES1 Reserved.

RESO, [30:29]

RESO Reserved.

IDC, [28]

Data cache clean requirements for instruction to data coherence:

- Data cache clean to the point of unification is required for instruction to data coherence, unless CLIDR_EL1.LoC == 0b000 or (CLIDR_EL1.LoUIS == 0b000 && CLIDR_EL1.LoUU == 0b000).
- Data cache clean to the point of unification is not required for instruction to data coherence.

IDC reflects the inverse value of the **BROADCASTCACHEMAINTPOU** pin.

CWG, [27:24]

Cache write-back granule. Log₂ of the number of words of the maximum size of memory that can be overwritten as a result of the eviction of a cache entry that has had a memory location in it modified:

0100 Cache write-back granule size is 16 words.

ERG, [23:20]

Exclusives Reservation Granule. Log_2 of the number of words of the maximum size of the reservation granule that has been implemented for the Load-Exclusive and Store-Exclusive instructions:

0100 Exclusive reservation granule size is 16 words.

DminLine, [19:16]

Log₂ of the number of words in the smallest cache line of all the data and unified caches that the core controls:

0100 Smallest data cache line size is 16 words.

L1lp, [15:14]

Instruction cache policy. Indicates the indexing and tagging policy for the L1 instruction cache:

11 Physically Indexed Physically Tagged (PIPT).

RES0, [13:4]

RESO Reserved.

IminLine, [3:0]

Log₂ of the number of words in the smallest cache line of all the instruction caches that the core controls.

0100 Smallest instruction cache line size is 16 words.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.40 DCZID_ELO, Data Cache Zero ID Register, ELO


The DCZID_ELO indicates the block size that is written with byte values of zero by the DC ZVA (Data Cache Zero by Address) System instruction.

Bit field descriptions

DCZID_ELO is a 32-bit register, and is part of the Identification registers functional group.

This register is read-only.

Figure 3-35: DCZID_EL0 bit assignments



RESO, [31:5]

RESO Reserved.

BlockSize, [3:0]

Log₂ of the block size in words:

0100 The block size is 16 words.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.


3.2.41 DISR_EL1, Deferred Interrupt Status Register, EL1

The DISR EL1 records the SError interrupts consumed by an ESB instruction.

Bit field descriptions

DISR_EL1 is a 64-bit register, and is part of the registers *Reliability*, *Availability*, *Serviceability* (RAS) functional group.

Figure 3-36: DISR_EL1 bit assignments, DISR_EL1.IDS is 0



RESO, [63:32]

RESO Reserved.

A, [31]

Set to 1 when ESB defers an asynchronous SError interrupt. If the implementation does not include any synchronizable sources of SError interrupt, this bit is **RESO**.

RESO, [30:25]

RESO Reserved.

IDS, [24]

Indicates the type of format the deferred SError interrupt uses. The value of this bit is:

O Deferred error uses architecturally-defined format.

RESO, [23:13]

RESO Reserved.

AET, [12:10]

Asynchronous Error Type. Describes the state of the core after taking an asynchronous Data Abort exception. The possible values are:

Uncontainable error (UC).Unrecoverable error (UEU).



The recovery software must also examine any implemented fault records to determine the location and extent of the error.

EA, [9]

RESO Reserved.

RESO, [8:6]

RESO Reserved.

DFSC, [5:0]

Data Fault Status Code. The possible values of this field are:

010001 Asynchronous SError interrupt.



In AArch32, the 010001 code previously meant an Asynchronous External Abort on memory access. With the RAS extension, it extends to include any asynchronous SError interrupt. The Parity Error codes are not used in the RAS extension.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.42 ERRIDR_EL1, Error ID Register, EL1


The ERRIDR EL1 defines the number of error record registers.

Bit field descriptions

ERRIDR_EL1 is a 32-bit register, and is part of the registers *Reliability, Availability, Serviceability* (RAS) functional group.

This register is read-only.

Figure 3-37: ERRIDR_EL1 bit assignments

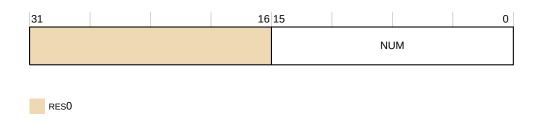

RESO, [31:16]

RESO Reserved.

NUM, [15:0]

Number of records that can be accessed through the Error Record System registers.

0x0002 Two records present.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.


3.2.43 ERRSELR_EL1, Error Record Select Register, EL1

The ERRSELR_EL1 selects which error record should be accessed through the Error Record System registers. This register is not reset on a Warm reset.

Bit field descriptions

ERRSELR_EL1 is a 64-bit register, and is part of the *Reliability*, *Availability*, *Serviceability* (RAS) registers functional group.

Figure 3-38: ERRSELR_EL1 bit assignments



RESO, [63:1]

Reserved, RESO.

SEL, [0]

Selects which error record should be accessed.

- O Select error record O containing errors from level 1 and level 2 RAMs that are located on the Cortex®-A76AE core.
- Select error record 1 containing errors from level 3 RAMs that are located on the *DynamlQ Shared Unit AE* (DSU-AE).

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.44 ERXADDR_EL1, Selected Error Record Address Register, EL1

Register ERXADDR_EL1 accesses the ERR<n>ADDR address register for the error record that is selected by ERRSELR_EL1.SEL.

If ERRSELR_EL1.SEL==0, then ERXADDR_EL1 accesses the ERROADDR register of the core error record. See 3.3.2 ERROADDR, Error Record Address Register on page 242.

If ERRSELR_EL1.SEL==1, then ERXADDR_EL1 accesses the ERR1ADDR register of the DynamlQ Shared Unit AE (DSU-AE) error record. See the $Arm^{\textcircled{R}}$ DynamlQ $^{\textcircled{M}}$ Shared Unit AE Technical Reference Manual.

3.2.45 ERXCTLR_EL1, Selected Error Record Control Register, EL1

Register ERXCTLR_EL1 accesses the ERR<n>CTLR control register for the error record that is selected by ERRSELR_EL1.SEL.

If ERRSELR_EL1.SEL==0, then ERXCTLR_EL1 accesses the ERROCTLR register of the core error record. See 3.3.3 ERROCTLR, Error Record Control Register on page 243.

If ERRSELR_EL1.SEL==1, then ERXCLTR_EL1 accesses the ERR1CTLR register of the DSU-AE error record. See the $Arm^{\text{\tiny \mathbb{R}}}$ DynamlQ $^{\text{\tiny \mathbb{M}}}$ Shared Unit AE Technical Reference Manual.

3.2.46 ERXFR_EL1, Selected Error Record Feature Register, EL1

Register ERXFR_EL1 accesses the ERR<n>FR feature register for the error record that is selected by ERRSELR_EL1.SEL.

If ERRSELR_EL1.SEL==0, then ERXFR_EL1 accesses the ERROFR register of the core error record. See 3.3.4 ERROFR, Error Record Feature Register on page 245.

If ERRSELR_EL1.SEL==1, then ERXFR_EL1 accesses the ERR1FR register of the DynamlQ Shared Unit AE (DSU-AE) error record. See the $Arm^{\text{(B)}}$ DynamlQ $^{\text{(M)}}$ Shared Unit AE Technical Reference Manual.

3.2.47 ERXMISCO_EL1, Selected Error Record Miscellaneous Register 0, EL1

Register ERXMISCO_EL1 accesses the ERR<n>MISCO register for the error record that is selected by ERRSELR EL1.SEL.

If ERRSELR_EL1.SEL==0, then ERXMISCO_EL1 accesses the ERROMISCO register of the core error record. See 3.3.5 ERROMISCO, Error Record Miscellaneous Register 0 on page 247.

If ERRSELR_EL1.SEL==1, then ERXMISCO_EL1 accesses the ERR1MISCO register of the DynamlQ Shared Unit AE (DSU-AE) error record. See the $Arm^{\textcircled{R}}$ DynamlQ $^{\textcircled{M}}$ Shared Unit AE Technical Reference Manual.

3.2.48 ERXMISC1_EL1, Selected Error Record Miscellaneous Register 1, EL1

Register ERXMISC1_EL1 accesses the ERR<n>MISC1 miscellaneous register 1 for the error record that is selected by ERRSELR_EL1.SEL.

If ERRSELR_EL1.SEL==0, then ERXMISC1_EL1 accesses the ERROMISC1 register of the core error record. See 3.3.6 ERROMISC1, Error Record Miscellaneous Register 1 on page 250.

If ERRSELR_EL1.SEL==1, then ERXMISC1_EL1 accesses the ERR1MISC1 register of the DynamlQ Shared Unit AE (DSU-AE) error record. See the $Arm^{\text{(B)}}$ DynamlQ $^{\text{(M)}}$ Shared Unit AE Technical Reference Manual.

3.2.49 ERXPFGCDN_EL1, Selected Error Pseudo Fault Generation Count Down Register, EL1

Register ERXPFGCDN_EL1 accesses the ERR<n>PFGCND register for the error record that is selected by ERRSELR_EL1.SEL.

If ERRSELR_EL1.SEL==0, then ERXPFGCDN_EL1 accesses the ERROPFGCDN register of the core error record. See 3.3.7 ERROPFGCDN, Error Pseudo Fault Generation Count Down Register on page 250.

If ERRSELR_EL1.SEL==1, then ERXPFGCDN_EL1 accesses the ERR1PFGCDNR register of the DynamlQ Shared Unit AE (DSU-AE) error record. See the Arm® DynamlQ™ Shared Unit AE Technical Reference Manual.

Configurations

There are no configuration notes.

Accessing the ERXPFGCDN_EL1

This register can be read using MRS with the following syntax:

MRS <Xt>, <systemreg>

This register can be written using MSR with the following syntax:

MSR <Xt>,<systemreg>

This syntax is encoded with the following settings in the instruction encoding:

| <systemreg></systemreg> | ор0 | op1 | CRn | CRm | op2 |
|-------------------------|-----|-----|------|------|-----|
| S3_0_C15_C2_2 | 11 | 000 | 1111 | 0010 | 010 |

Accessibility

This register is accessible in software as follows:

| <syntax></syntax> | Control | | | Accessibility | | | |
|--------------------------------------------------------------------------------|---------|-----|----|---------------|-----|-----|-----|
| | E2H | TGE | NS | ELO | EL1 | EL2 | EL3 |
| S3_0_C15_C2_2 | X | Х | 0 | - | RW | n/a | RW |
| S3_0_C15_C2_2 | X | 0 | 1 | - | RW | RW | RW |
| S3_0_C15_C2_2 | X | 1 | 1 | - | n/a | RW | RW |
| n/a Not accessible. Executing the PE at this Exception level is not permitted. | | | | | | | |

Traps and enables

For a description of the prioritization of any generated exceptions, see *Exception priority order* in the *Arm® Architecture Reference Manual Armv8*, for A-profile architecture for exceptions taken to AArch32 state, and see *Synchronous exception prioritization* for exceptions taken to AArch64 state. Subject to these prioritization rules, the following traps and enables are applicable when accessing this register.

ERXPFGCDN_EL1 is accessible at EL3 and can be accessible at EL1 and EL2 depending on the value of bit[5] in ACTLR_EL2 and ACTLR_EL3. See 3.2.6 ACTLR_EL2, Auxiliary Control Register, EL2 on page 106 and 3.2.7 ACTLR_EL3, Auxiliary Control Register, EL3 on page 109.

ERXPFGCDN_EL1 is UNDEFINED at ELO.

3.2.50 ERXPFGCTL_EL1, Selected Error Pseudo Fault Generation Control Register, EL1

Register ERXPFGCTL_EL1 accesses the ERR<n>PFGCTL register for the error record that is selected by ERRSELR_EL1.SEL.

If ERRSELR_EL1.SEL==0, then ERXPFGCTL_EL1 accesses the ERROPFGCTL register of the core error record. See 3.3.8 ERROPFGCTL, Error Pseudo Fault Generation Control Register on page 251.

If ERRSELR_EL1.SEL==1, then ERXPFGCTL_EL1 accesses the ERR1PFGCTL register of the DynamlQ Shared Unit AE (DSU-AE) error record. See the $Arm^{\text{\tiny (B)}}$ DynamlQ $^{\text{\tiny (M)}}$ Shared Unit AE Technical Reference Manual.

Configurations

There are no configuration notes.

Accessing the ERXPFGCTL_EL1

This register can be read using MRS with the following syntax:

MRS <Xt>, <systemreg>

This register can be written using MSR with the following syntax:

MSR <Xt>, <systemreg>

This syntax is encoded with the following settings in the instruction encoding:

| <systemreg></systemreg> | ор0 | op1 | CRn | CRm | op2 |
|-------------------------|-----|-----|------|------|-----|
| S3_0_C15_C2_1 | 11 | 000 | 1111 | 0010 | 001 |

Accessibility

This register is accessible in software as follows:

| <syntax></syntax> | Control | | | Accessibility | | | |
|-------------------|---------|-----|----|---------------|-----|-----|-----|
| | E2H | TGE | NS | ELO | EL1 | EL2 | EL3 |
| S3_0_C15_C2_1 | X | X | 0 | - | RW | n/a | RW |
| S3_0_C15_C2_1 | X | 0 | 1 | - | RW | RW | RW |
| S3_0_C15_C2_1 | X | 1 | 1 | - | n/a | RW | RW |

'n/a' Not accessible. The PE cannot be executing at this Exception level, so this access is not possible.

Traps and enables

For a description of the prioritization of any generated exceptions, see *Exception priority order* in the *Arm® Architecture Reference Manual Armv8*, for A-profile architecture for exceptions taken to AArch32 state, and see *Synchronous exception prioritization* for exceptions taken to AArch64 state. Subject to these prioritization rules, the following traps and enables are applicable when accessing this register.

ERXPFGCTL_EL1 is accessible at EL3 and can be accessible at EL1 and EL2 depending on the value of bit[5] in ACTLR_EL2 and ACTLR_EL3. See 3.2.6 ACTLR_EL2, Auxiliary Control Register, EL2 on page 106 and 3.2.7 ACTLR_EL3, Auxiliary Control Register, EL3 on page 109.

ERXPFGCTL EL1 is UNDEFINED at ELO.

If ERXPFGCTL_EL1 is accessible at EL1 and HCR_EL2.TERR == 1, then direct reads and writes of ERXPFGCTL_EL1 at Non-secure EL1 generate a Trap exception to EL2.

If ERXPFGCTL_EL1 is accessible at EL1 or EL2 and SCR_EL3.TERR == 1, then direct reads and writes of ERXPFGCTL_EL1 at EL1 or EL2 generate a Trap exception to EL3.

3.2.51 ERXPFGF_EL1, Selected Pseudo Fault Generation Feature Register, EL1

Register ERXPFGF_EL1 accesses the ERR<n>PFGF register for the error record that is selected by ERRSELR EL1.SEL.

If ERRSELR_EL1.SEL==0, then ERXPFGF_EL1 accesses the ERROPFGF register of the core error record. See 3.3.9 ERROPFGF, Error Pseudo Fault Generation Feature Register on page 252.

If ERRSELR_EL1.SEL==1, then ERXPFGF_EL1 accesses the ERR1PFGFR register of the DynamlQ Shared Unit AE (DSU-AE) error record. See the $Arm^{\text{\tiny{\$}}}$ DynamlQ $^{\text{\tiny{$\top}}}$ Shared Unit AE Technical Reference Manual.

Configurations

This core has no configuration notes.

Accessing the ERXPFGF_EL1

This register can be read using MRS with the following syntax:

MRS <Xt>, <systemreg>

This syntax is encoded with the following settings in the instruction encoding:

| <systemreg></systemreg> | ор0 | op1 | CRn | CRm | op2 |
|-------------------------|-----|-----|------|------|-----|
| S3_0_C15_C2_0 | 11 | 000 | 1111 | 0010 | 000 |

Accessibility

This register is accessible in software as follows:

| <syntax></syntax> | Control | | | Accessibility | | | |
|-------------------|---------|-----|----|---------------|-----|-----|-----|
| | E2H | TGE | NS | ELO | EL1 | EL2 | EL3 |
| S3_0_C15_C2_0 | X | X | 0 | - | RO | n/a | RO |
| S3_0_C15_C2_0 | X | 0 | 1 | - | RO | RO | RO |
| S3_0_C15_C2_0 | × | 1 | 1 | - | n/a | RO | RO |

'n/a' Not accessible. The PE cannot be executing at this Exception level, so this access is not possible.

Traps and enables

For a description of the prioritization of any generated exceptions, see Exception priority order in the Arm® Architecture Reference Manual Armv8, for A-profile architecture for exceptions taken to AArch32 state, and see Synchronous exception prioritization for exceptions taken to AArch64 state. Subject to these prioritization rules, the following traps and enables are applicable when accessing this register.

ERXPFGR_EL1 is accessible at EL3 and can be accessible at EL1 and EL2 depending on the value of bit[5] in ACTLR EL2 and ACTLR EL3. See 3.2.6 ACTLR EL2, Auxiliary Control

Register, EL2 on page 106 and 3.2.7 ACTLR_EL3, Auxiliary Control Register, EL3 on page 109.

ERXPFGR EL1 is UNDEFINED at ELO.

If ERXPFGR_EL1 is accessible at EL1 and HCR_EL2.TERR == 1, then direct reads and writes of ERXPFGR_EL1 at Non-secure EL1 generate a Trap exception to EL2.

If ERXPFGR_EL1 is accessible at EL1 or EL2 and SCR_EL3.TERR == 1, then direct reads and writes of ERXPFGR_EL1 at EL1 or EL2 generate a Trap exception to EL3.

3.2.52 ERXSTATUS_EL1, Selected Error Record Primary Status Register, EL1

Register ERXSTATUS_EL1 accesses the ERR<n>STATUS primary status register for the error record that is selected by ERRSELR_EL1.SEL.

If ERRSELR_EL1.SEL==0, then ERXSTATUS_EL1 accesses the ERROSTATUS register of the core error record. See 3.3.10 ERROSTATUS, Error Record Primary Status Register on page 254.

If ERRSELR_EL1.SEL==1, then ERXSTATUS_EL1 accesses the ERR1STATUS register of the DynamlQ Shared Unit AE (DSU-AE) error record. See the Arm® DynamlQ™ Shared Unit AE Technical Reference Manual.

3.2.53 ESR_EL1, Exception Syndrome Register, EL1

The ESR EL1 holds syndrome information for an exception taken to EL1.

Bit field descriptions

ESR_EL1 is a 32-bit register, and is part of the Exception and fault handling registers functional group.

Figure 3-39: ESR_EL1 bit assignments



EC, [31:26]

Exception Class. Indicates the reason for the exception that this register holds information about.

IL, [25]

Instruction Length for synchronous exceptions. The possible values are:

| 0 | 16-bit. |
|---|---------|
| 1 | 32-bit. |

This field is 1 for the SError interrupt, instruction aborts, misaligned PC, Stack pointer misalignment, data aborts for which the ISV bit is 0, exceptions that are caused by an illegal instruction set state, and exceptions using the 0x00 Exception Class.

ISS, [24:0]

Syndrome information.

When reporting a virtual SEI, bits[24:0] take the value of VSESRL EL2[24:0].

When reporting a physical SEI, the following occurs:

- IDS==0 (architectural syndrome).
- AET always reports an uncontainable error (UC) with value 0b000 or an unrecoverable error (UEU) with value 0b001.
- EA is **RESO**.

When reporting a synchronous data abort, EA is **RESO**.

See 3.2.108 VSESR EL2, Virtual SError Exception Syndrome Register on page 238.

Configurations

This register has no configuration options.

3.2.54 ESR_EL2, Exception Syndrome Register, EL2

The ESR EL2 holds syndrome information for an exception taken to EL2.

Bit field descriptions

ESR_EL2 is a 32-bit register, and is part of:

- The Virtualization registers functional group.
- The Exception and fault handling registers functional group.

Figure 3-40: ESR_EL2 bit assignments



EC, [31:26]

Exception Class. Indicates the reason for the exception that this register holds information about. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture for more information.

IL, [25]

Instruction Length for synchronous exceptions. The possible values are:

0 16-bit. 1 32-bit.

See the Arm® Architecture Reference Manual Armv8, for A-profile architecture for more information.

ISS, [24:0]

Syndrome information. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture for more information.

When reporting a virtual SEI, bits[24:0] take the value of VSESRL_EL2[24:0].

When reporting a physical SEI, the following occurs:

- IDS==0 (architectural syndrome).
- AET always reports an uncontainable error (UC) with value 0b000 or an unrecoverable error (UEU) with value 0b001.
- EA is **RESO**.

When reporting a synchronous Data Abort, EA is **RESO**.

See 3.2.108 VSESR_EL2, Virtual SError Exception Syndrome Register on page 238.

Configurations

RW fields in this register reset to architecturally **UNKNOWN** values.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.


3.2.55 ESR_EL3, Exception Syndrome Register, EL3

The ESR EL3 holds syndrome information for an exception taken to EL3.

Bit field descriptions

ESR_EL3 is a 32-bit register, and is part of the Exception and fault handling registers functional group.

Figure 3-41: ESR_EL3 bit assignments



EC, [31:26]

Exception Class. Indicates the reason for the exception that this register holds information about.

IL, [25]

Instruction Length for synchronous exceptions. The possible values are:

0 16-bit. 1 32-bit.

This field is 1 for the SError interrupt, instruction aborts, misaligned PC, Stack pointer misalignment, data aborts for which the ISV bit is 0, exceptions that are caused by an illegal instruction set state, and exceptions using the 0x0 Exception Class.

ISS, [24:0]

Syndrome information.

When reporting a virtual SEI, bits[24:0] take the value of VSESRL_EL2[24:0].

When reporting a physical SEI, the following occurs:

- IDS==0 (architectural syndrome).
- AET always reports an uncontainable error (UC) with value 0b000 or an unrecoverable error (UEU) with value 0b001.
- EA is RESO.

When reporting a synchronous data abort, EA is RESO.

See 3.2.108 VSESR_EL2, Virtual SError Exception Syndrome Register on page 238.

Configurations

RW fields in this register reset to architecturally unknown values.


3.2.56 HACR_EL2, Hyp Auxiliary Configuration Register, EL2

HACR_EL2 controls trapping to EL2 of **IMPLEMENTATION DEFINED** aspects of Non-secure EL1 or EL0 operation. This register is not used in the Cortex®-A76AE core.

Bit field descriptions

HACR_EL2 is a 32-bit register, and is part of Virtualization registers functional group.

Figure 3-42: HACR_EL2 bit assignments



RESO, [31:0]

Reserved, RESO.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.


3.2.57 HCR_EL2, Hypervisor Configuration Register, EL2

The HCR_EL2 provides configuration control for virtualization, including whether various Non-secure operations are trapped to EL2.

Bit field descriptions

HCR_EL2 is a 64-bit register, and is part of the Virtualization registers functional group.

Figure 3-43: HCR_EL2 bit assignments

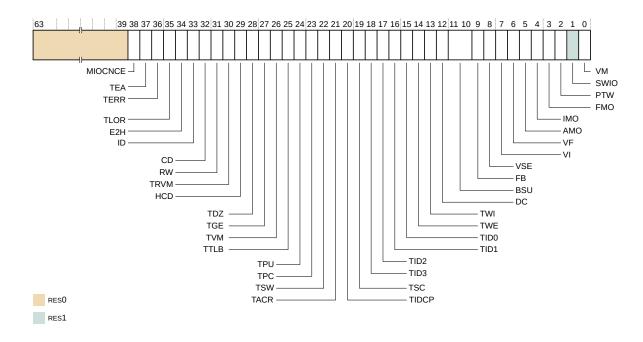

RESO, [63:39]

RESO Reserved.

MIOCNCE, [38]

Mismatched Inner/Outer Cacheable Non-Coherency Enable, for the Non-secure EL1 and EL0 translation regime.

RW, [31]

RES1 Reserved.

HCD, [29]

RESO Reserved.

TGE, [27]

Traps general exceptions. If this bit is set, and SCR_EL3.NS is set, then:

- All exceptions that would be routed to EL1 are routed to EL2.
- The SCTLR_EL1.M bit is treated as 0 regardless of its actual state, other than for reading the bit.
- The HCR_EL2.FMO, IMO, and AMO bits are treated as 1 regardless of their actual state, other than for reading the bits.
- All virtual interrupts are disabled.
- Any IMPLEMENTATION DEFINED mechanisms for signaling virtual interrupts are disabled.

• An exception return to EL1 is treated as an illegal exception return.

HCR EL2.TGE must not be cached in a TLB.

When the value of SCR_EL3.NS is 0, the core behaves as if this field is 0 for all purposes other than a direct read or Write-Access of HCR_EL2.

TID3, [18]

Traps ID group 3 registers. The possible values are:

- 0 ID group 3 register accesses are not trapped.
- 1 Reads to ID group 3 registers that are executed from Non-secure EL1 are trapped to EL2.

See the Arm® Architecture Reference Manual Armv8, for A-profile architecture for the registers covered by this setting.

Configurations

If EL2 is not implemented, this register is **RESO** from EL3

RW fields in this register reset to architecturally **UNKNOWN** values.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.58 ID_AA64AFR0_EL1, AArch64 Auxiliary Feature Register 0

The core does not use this register, ID AA64AFRO EL1 is RESO.

3.2.59 ID_AA64AFR1_EL1, AArch64 Auxiliary Feature Register 1

The core does not use this register, ID AA64AFRO EL1 is RESO.

3.2.60 ID_AA64DFR0_EL1, AArch64 Debug Feature Register 0, EL1

Provides top-level information about the debug system in AArch64.

Bit field descriptions

ID_AA64DFRO_EL1 is a 64-bit register, and is part of the Identification registers functional group.

This register is read-only.

Figure 3-44: ID_AA64DFR0_EL1 bit assignments

RESO, [63:32]

RES₀

Reserved.

CTX_CMPs, [31:28]

Number of breakpoints that are context-aware, minus 1. These are the highest numbered breakpoints:

0x1

Two breakpoints are context-aware.

RESO, [27:24]

RES0

Reserved.

WRPs, [23:20]

The number of watchpoints minus 1:

0x3

Four watchpoints.

RESO, [19:16]

RES0

Reserved.

BRPs, [15:12]

The number of breakpoints minus 1:

0x5

Six breakpoints.

PMUVer, [11:8]

Performance Monitors Extension version.

0x4

Performance monitor System registers implemented, PMUv3.

TraceVer, [7:4]

Trace extension:

0x0

Trace System registers not implemented.

DebugVer, [3:0]

Debug architecture version:

0x8

Arm®v8-A debug architecture implemented.

Configurations

ID_AA64DFRO_EL1 is architecturally mapped to external register EDDFR.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.61 ID_AA64DFR1_EL1, AArch64 Debug Feature Register 1, EL1

This register is reserved for future expansion of top-level information about the debug system in AArch64 state.

3.2.62 ID_AA64ISAR0_EL1, AArch64 Instruction Set Attribute Register 0, EL1

The ID_AA64ISARO_EL1 provides information about the instructions that are implemented in AArch64 state, including the instructions that are provided by the Cryptographic Extension.


Bit field descriptions

ID_AA64ISARO_EL1 is a 64-bit register, and is part of the Identification registers functional group.

This register is read-only.

The optional Cryptographic Extension is not included in the base product of the core. Arm requires licensees to have contractual rights to obtain the Cryptographic Extension.

Figure 3-45: ID_AA64ISAR0_EL1 bit assignments



RES0, [63:48]

RESO Reserved.

DP, [47:44]

Indicates whether Dot Product support instructions are implemented.

0x1 UDOT, SDOT instructions are implemented.

RESO, [43:32]

RESO Reserved.

RDM, [31:28]

Indicates whether sqrdmlah and sqrdmlsh instructions in AArch64 are implemented.

0x1 sqrdmlah and sqrdmlsh instructions are implemented.

RESO, [27:24]

RESO Reserved.

Atomic, [23:20]

Indicates whether Atomic instructions in AArch64 are implemented. The value is:

0x2 LDADD, LDCLR, LDEOR, LDSET, LDSMAX, LDSMIN, LDUMAX, LDUMIN, CAS, CASP, and swp instructions are implemented.

CRC32, [19:16]

Indicates whether CRC32 instructions are implemented. The value is:

0x1 CRC32 instructions are implemented.

SHA2, [15:12]

Indicates whether SHA2 instructions are implemented. The possible values are:

0x0 No SHA2 instructions are implemented. This is the value if the core implementation does not include the Cryptographic Extension.
 0x1 SHA256H, SHA256H2, SHA256U0, and SHA256U1 implemented. This is the value if the core implementation includes the Cryptographic Extension.

SHA1, [11:8]

Indicates whether SHA1 instructions are implemented. The possible values are:

0x0 No SHA1 instructions implemented. This is the value if the core implementation does not include the Cryptographic Extension.
 0x1 SHA1C, SHA1P, SHA1M, SHA1SUO, and SHA1SU1 implemented. This is the value if the core implementation includes the Cryptographic Extension.

AES, [7:4]

Indicates whether AES instructions are implemented. The possible values are:

No AES instructions implemented. This is the value if the core implementation does not include the Cryptographic Extension.

Ox2

AESE, AESD, AESMC, and AESIMC implemented, plus PMULL and PMULL2 instructions operating on 64-bit data. This is the value if the core implementation includes the Cryptographic Extension.

RESO, [3:0]

RESO Reserved.

Configurations

ID AA64ISARO EL1 is architecturally mapped to external register ID AA64ISARO.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.63 ID_AA64ISAR1_EL1, AArch64 Instruction Set Attribute Register 1, EL1


The ID_AA64ISAR1_EL1 provides information about the instructions that are implemented in AArch64 state.

Bit field descriptions

ID AA64ISAR1 EL1 is a 64-bit register, and is part of the Identification registers functional group.

This register is read-only.

Figure 3-46: ID_AA64ISAR1_EL1 bit assignments

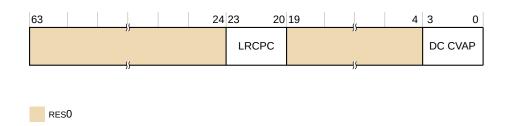

RESO, [63:24]

RESO

Reserved.

LRCPC, [23:20]

Indicates whether load-acquire (LDA) instructions are implemented for a Release Consistent core consistent RCPC model.

Ox1 The LDAPRH, and LDAPR instructions are implemented in AArch64.

RESO, [19:4]

RES0

Reserved.

DC CVAP, [3:0]

Indicates whether data cache, Clean to the Point of Persistence (DC CVAP) instructions are implemented.

0x1 DC CVAP is supported in AArch64.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.64 ID_AA64MMFR0_EL1, AArch64 Memory Model Feature Register 0, EL1


The ID_AA64MMFRO_EL1 provides information about the implemented memory model and memory management support in the AArch64 Execution state.

Bit field descriptions

ID_AA64MMFRO_EL1 is a 64-bit register, and is part of the Identification registers functional group.

This register is read-only.

Figure 3-47: ID_AA64MMFR0_EL1 bit assignments



RESO, [63:32]

RES0

Reserved.

TGran4, [31:28]

Support for 4KB memory translation granule size:

0x0

4KB granule supported.

TGran64, [27:24]

Support for 64KB memory translation granule size:

0x0

64KB granule supported.

TGran16, [23:20]

Support for 16KB memory translation granule size:

Copyright © 2018, 2020, 2022 Arm Limited (or its affiliates). All rights reserved. Non-Confidential

0x1

Indicates that the 16KB granule is supported.

BigEndEL0, [19:16]

Mixed-endian support only at ELO.

0x0

No mixed-endian support at ELO. The SCTLR_EL1.EOE bit has a fixed value.

SNSMem, [15:12]

Secure versus Non-secure Memory distinction:

0x1

Supports a distinction between Secure and Non-secure Memory.

BigEnd, [11:8]

Mixed-endian configuration support:

0x1

Mixed-endian support. The SCTLR_ELx.EE and SCTLR_EL1.EOE bits can be configured.

ASIDBits, [7:4]

Number of ASID bits:

0x2

16 bits.

PARange, [3:0]

Physical address range supported:

0x2

40 bits, 1TB.

The supported Physical Address Range is 40-bits. Other cores in the *DynamlQ Shared Unit AE* (DSU-AE) may support a different Physical Address Range.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.65 ID_AA64MMFR1_EL1, AArch64 Memory Model Feature Register 1, EL1


The ID_AA64MMFR1_EL1 provides information about the implemented memory model and memory management support in the AArch64 Execution state.

Bit field descriptions

ID_AA64MMFR1_EL1 is a 64-bit register, and is part of the Identification registers functional group.

This register is read-only.

Figure 3-48: ID_AA64MMFR1_EL1 bit assignments



RESO, [63:32]

RESO

Reserved.

XNX, [31:28]

Indicates whether provision of ELO vs EL1 execute-never control at stage 2 is supported.

0x1

ELO/EL1 execute control distinction at stage 2 bit is supported. All other values are reserved.

SpecSEI, [27:24]

Describes whether the PE can generate SError interrupt exceptions from Speculative reads of memory, including Speculative instruction fetches.

0x0

The PE never generates an SError interrupt due to an External abort on a Speculative read.

PAN, [23:20]

Privileged Access Never. Indicates support for the PAN bit in PSTATE, SPSR_EL1, SPSR_EL2, SPSR_EL3, and DSPSR_EL0.

0x2

PAN supported and AT S1E1RP and AT S1E1WP instructions supported.

LO, [19:16]

Indicates support for LORegions.

0x1

LORegions are supported.

HPDS, [15:12]

Presence of Hierarchical Disables. Enables an operating system or hypervisor to hand over up to 4 bits of the last level translation table descriptor (bits[62:59] of the translation table entry) for use by hardware for **IMPLEMENTATION DEFINED** usage. The value is:

0x2

Hierarchical Permission Disables and Hardware allocation of bits[62:59] supported.

VH, [11:8]

Indicates whether Virtualization Host Extensions are supported.

0x1

Virtualization Host Extensions supported.

VMIDBits, [7:4]

Indicates the number of VMID bits supported.

0x2

16 bits are supported.

HAFDBS, [3:0]

Indicates the support for hardware updates to Access flag and dirty state in translation tables.

0x2

Hardware update of both the Access flag and dirty state is supported in hardware.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.66 ID_AA64MMFR2_EL1, AArch64 Memory Model Feature Register 2, EL1


The ID_AA64MMFR2_EL1 provides information about the implemented memory model and memory management support in the AArch64 Execution state.

Bit field descriptions

ID_AA64MMFR2_EL1 is a 64-bit register, and is part of the Identification registers functional group.

This register is read-only.

Figure 3-49: ID_AA64MMFR2_EL1 bit assignments



RESO, [63:20]

RES₀

Reserved.

VARange, [19:16]

Indicates support for a larger virtual address. The value is:

0x0

VMSAv8-64 supports 48-bit virtual addresses.

IESB, [15:12]

Indicates whether an implicit Error Synchronization Barrier has been inserted. The value is:

0x1

SCTLR ELx.IESB implicit ErrorSynchronizationBarrier control implemented.

LSM, [11:8]

Indicates whether LDM and STM ordering control bits are supported. The value is:

0x0

LSMAOE and nTLSMD bit not supported.

UAO, [7:4]

Indicates the presence of the User Access Override (UAO). The value is:

0x1

UAO is supported.

CnP, [3:0]

Common not Private. Indicates whether a TLB entry is pointed at a translation table base register that is a member of a common set. The value is:

0x1

CnP bit is supported.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.67 ID_AA64PFR0_EL1, AArch64 Processor Feature Register 0, EL1

The ID_AA64PFRO_EL1 provides additional information about implemented core features in AArch64.


The optional Advanced SIMD and floating-point support is not included in the base product of the core. Arm requires licensees to have contractual rights to obtain the Advanced SIMD and floating-point support.

Bit field descriptions

ID_AA64PFRO_EL1 is a 64-bit register, and is part of the Identification registers functional group.

This register is read-only.

Figure 3-50: ID_AA64PFR0_EL1 bit assignments



CSV3, [63:60]

RES0

0x1

Data that are loaded under speculation with a permission or domain fault cannot be used to form an address or generate condition codes to be used by instructions newer than the load in the speculative sequence. This is the reset value.

All other values reserved.

CSV2, [59:56]

0x1

Branch targets trained in one context cannot affect speculative execution in a different hardware described context. This is the reset value.

All other values reserved.

RESO, [55:32]

RES0

Reserved.

RAS, [31:28]

RAS extension version. The possible values are:

0x0

RAS extension is not present. This is the value if the core implementation does not have ECC present.

0x1

Version 1 of the RAS extension is present. This is the value if the core implementation has ECC present.

GIC, [27:24]

GIC CPU interface:

0x0

GIC CPU interface is disabled, GICCDISABLE is HIGH, or not implemented.

0x1

GIC CPU interface is implemented and enabled, GICCDISABLE is LOW. GICv4 is supported.

AdvSIMD, [23:20]

Advanced SIMD. The possible values are:

0x1

Advanced SIMD, including half-precision support, is implemented.

FP, [19:16]

Floating-point. The possible values are:

0x1

Floating-point, including half-precision support, is implemented.

EL3 handling, [15:12]

EL3 exception handling:

0x1

Instructions can be executed at EL3 in AArch64 state only.

EL2 handling, [11:8]

EL2 exception handling:

0x1

Instructions can be executed at EL3 in AArch64 state only.

EL1 handling, [7:4]

EL1 exception handling. The possible values are:

0x1

Instructions can be executed at EL3 in AArch64 state only.

ELO handling, [3:0]

ELO exception handling. The possible values are:

0x2

Instructions can be executed at ELO in AArch64 or AArch32 state.

Configurations

ID_AA64PFRO_EL1 is architecturally mapped to External register EDPFR.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.68 ID_AA64PFR1_EL1, AArch64 Processor Feature Register 1, EL1


The ID_AA64PFR1_EL1 provides additional information about implemented core features in AArch64.

Bit field descriptions

ID AA64PFR1 EL1 is a 64-bit register, and is part of the Identification registers functional group.

This register is read-only.

Figure 3-51: ID_AA64PFR1_EL1 bit assignments

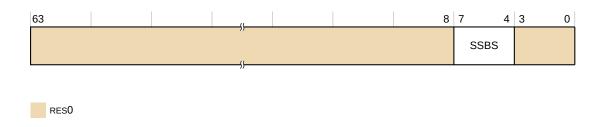

RESO, [63:8]

RESO

Reserved.

SSBS, [7:4]

PSTATE.SSBS. The possible values are:

0x1

AArch64 provides the PSTATE.SSBS mechanism to mark regions that are *Speculative Store Bypassing Safe* (SSBS), but does not implement the MSR/MRS instructions to directly read and write the PSTATE.SSBS field.

RESO, [3:0]

RES₀

Reserved.

Configurations

ID AA64PFR1 EL1 is architecturally mapped to External register EDPFR.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.69 ID_AFRO_EL1, AArch32 Auxiliary Feature Register 0, EL1


The ID_AFRO_EL1 provides information about the **IMPLEMENTATION DEFINED** features of the PE in AArch32. This register is not used in the Cortex®-A76AE core.

Bit field descriptions

ID AFRO EL1 is a 32-bit register, and is part of the Identification registers functional group.

This register is read-only.

Figure 3-52: ID_AFR0_EL1 bit assignments

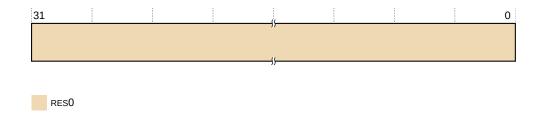

RESO, [31:0]

Reserved, RESO.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.70 ID_DFR0_EL1, AArch32 Debug Feature Register 0, EL1


The ID_DFRO_EL1 provides top-level information about the debug system in AArch32.

Bit field descriptions

ID DFRO EL1 is a 32-bit register, and is part of the Identification registers functional group.

This register is read-only.

Figure 3-53: ID_DFR0_EL1 bit assignments



RESO, [31:28]

RESO Reserved.

PerfMon, [27:24]

Indicates support for performance monitor model:

Support for *Performance Monitoring Unit version 3* (PMUv3) System registers, with a 16-bit evtCount field.

MProfDbg, [23:20]

Indicates support for memory-mapped debug model for M profile cores:

This product does not support M profile Debug architecture.

MMapTrc, [19:16]

Indicates support for memory-mapped trace model:

Support for Arm trace architecture, with memory-mapped access.

In the Trace registers, the ETMIDR gives more information about the implementation.

CopTrc, [15:12]

Indicates support for coprocessor-based trace model:

This product does not support Arm trace architecture.

RESO, [11:8]

RESO Reserved.

CopSDbg, [7:4]

Indicates support for coprocessor-based Secure debug model:

This product supports the Armv8.2 Debug architecture.

CopDbg, [3:0]

Indicates support for coprocessor-based debug model:

This product supports the Armv8.2 Debug architecture.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.71 ID_ISARO_EL1, AArch32 Instruction Set Attribute Register 0, EL1


The ID_ISARO_EL1 provides information about the instruction sets implemented by the core in AArch32.

Bit field descriptions

ID ISARO EL1 is a 32-bit register, and is part of the Identification registers functional group.

This register is read-only.

Figure 3-54: ID_ISAR0_EL1 bit assignments





RESO, [31:28]

RESO Reserved.

Divide, [27:24]

Indicates the implemented Divide instructions:

0x2 • spiv and upiv in the T32 instruction set.

• sprv and uprv in the A32 instruction set.

Debug, [23:20]

Indicates the implemented Debug instructions:

0x1 BKPT.

Coproc, [19:16]

Indicates the implemented coprocessor instructions:

0x0

None implemented, except for instructions separately attributed by the architecture to provide access to AArch32 System registers and System instructions.

CmpBranch, [15:12]

Indicates the implemented combined Compare and Branch instructions in the T32 instruction set:

0x1 cbnz and cbz.

Bitfield, [11:8]

Indicates the implemented bit field instructions:

0x1 BFC, BFI, SBFX, and UBFX.

BitCount, [7:4]

Indicates the implemented Bit Counting instructions:

0x1 CLZ.

Swap, [3:0]

Indicates the implemented Swap instructions in the A32 instruction set:

0x0 None implemented.

Configurations

In an AArch64-only implementation, this register is **UNKNOWN**.

Must be interpreted with ID_ISAR1_EL1, ID_ISAR2_EL1, ID_ISAR3_EL1, ID_ISAR4_EL1, ID_ISAR5_EL1, and ID_ISAR6_EL1. See:

- 3.2.72 ID ISAR1 EL1, AArch32 Instruction Set Attribute Register 1, EL1 on page 192.
- 3.2.73 ID ISAR2 EL1, AArch32 Instruction Set Attribute Register 2, EL1 on page 193.
- 3.2.74 ID_ISAR3_EL1, AArch32 Instruction Set Attribute Register 3, EL1 on page 195.
- 3.2.75 ID ISAR4 EL1, AArch32 Instruction Set Attribute Register 4, EL1 on page 197.
- 3.2.76 ID ISAR5 EL1, AArch32 Instruction Set Attribute Register 5, EL1 on page 199.
- 3.2.77 ID_ISAR6_EL1, AArch32 Instruction Set Attribute Register 6, EL1 on page 201.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.72 ID_ISAR1_EL1, AArch32 Instruction Set Attribute Register 1, EL1

The ID_ISAR1_EL1 provides information about the instruction sets implemented by the core in AArch32.

Bit field descriptions

ID ISAR1 EL1 is a 32-bit register, and is part of the Identification registers functional group.

This register is read-only.

Figure 3-55: ID_ISAR1_EL1 bit assignments

| 31 | 28 | 27 24 | 23 20 | 19 16 | 15 12 | 11 8 | 7 4 | 3 0 |
|---------|----|-----------|-----------|--------|--------|-----------|--------|--------|
| Jazelle | (D | Interwork | Immediate | IfThen | Extend | Except_AR | Except | Endian |

Jazelle, [31:28]

Indicates the implemented Jazelle state instructions:

0x1 Adds the BxJ instruction, and the J bit in the PSR.

Interwork, [27:24]

Indicates the implemented interworking instructions:

0x3

- The Bx instruction, and the T bit in the PSR.
- The BLX instruction. The PC loads have BX-like behavior.
- Data-processing instructions in the A32 instruction set with the PC as the destination and the S bit clear, have Bx-like behavior.

Immediate, [23:20]

Indicates the implemented data-processing instructions with long immediates:

0×1

- The MOVT instruction.
- The Mov instruction encodings with zero-extended 16-bit immediates.
- The T32 ADD and SUB instruction encodings with zero-extended 12-bit immediates, and other ADD, ADR, and SUB encodings cross-referenced by the pseudocode for those encodings.

IfThen, [19:16]

Indicates the implemented If-Then instructions in the T32 instruction set:

0x1 The IT instructions, and the IT bits in the PSRs.

Extend, [15:12]

Indicates the implemented Extend instructions:

0x2

- The sxtb, sxth, uxtb, and uxth instructions.
- The sxtb16, sxtab, sxtab16, sxtah, uxtb16, uxtab, uxtab16, and uxtah instructions.

Except_AR, [11:8]

Indicates the implemented A profile exception-handling instructions:

0x1 The srs and rfe instructions, and the A profile forms of the cps instruction.

Except, [7:4]

Indicates the implemented exception-handling instructions in the A32 instruction set:

Ox1 The LDM (exception return), LDM (user registers), and STM (user registers) instruction versions.

Endian, [3:0]

Indicates the implemented Endian instructions:

0x1 The SETEND instruction, and the E bit in the PSRs.

Configurations

In an AArch64-only implementation, this register is **UNKNOWN**.

Must be interpreted with ID_ISARO_EL1, ID_ISAR2_EL1, ID_ISAR3_EL1, ID_ISAR4_EL1, ID_ISAR5_EL1, and ID_ISAR6_EL1. See:

- 3.2.71 ID_ISARO_EL1, AArch32 Instruction Set Attribute Register 0, EL1 on page 190.
- 3.2.73 ID ISAR2 EL1, AArch32 Instruction Set Attribute Register 2, EL1 on page 193.
- 3.2.74 ID_ISAR3_EL1, AArch32 Instruction Set Attribute Register 3, EL1 on page 195.
- 3.2.75 ID ISAR4 EL1, AArch32 Instruction Set Attribute Register 4, EL1 on page 197.
- 3.2.76 ID ISAR5 EL1, AArch32 Instruction Set Attribute Register 5, EL1 on page 199.
- 3.2.77 ID_ISAR6_EL1, AArch32 Instruction Set Attribute Register 6, EL1 on page 201.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.73 ID_ISAR2_EL1, AArch32 Instruction Set Attribute Register 2, EL1


The ID_ISAR2_EL1 provides information about the instruction sets implemented by the core in AArch32.

Bit field descriptions

ID_ISAR2_EL1 is a 32-bit register, and is part of the Identification registers functional group.

This register is read-only.

Figure 3-56: ID_ISAR2_EL1 bit assignments



Reversal, [31:28]

Indicates the implemented Reversal instructions:

0x2 The REV, REV16, REVSH, and RBIT instructions.

PSR_AR, [27:24]

Indicates the implemented A and R profile instructions to manipulate the PSR:

The MRS and MSR instructions, and the exception return forms of dataprocessing instructions.

The exception return forms of the data-processing instructions are:

- In the A32 instruction set, data-processing instructions with the PC as the destination and the S bit set.
- In the T32 instruction set, the SUBSPC, LR, #N instruction.

MultU, [23:20]

Indicates the implemented advanced unsigned Multiply instructions:

0x2 The umull, umlal, and umaal instructions.

MultS, [19:16]

Indicates the implemented advanced signed Multiply instructions.

- The smull and smlal instructions.
 - The smlabb, smlabt, smlalbb, smlalbt, smlaltb, smlaltt, smlatb, smlatt, smlawb, smlawt, smulbb, smulbt, smultb, smultt, smulwb, smulwt instructions, and the Q bit in the PSRs.

 The smlad, smladx, smlald, smladx, smlsd, smlsld, smlsldx, smmla, smmlar, smmls, smmlsr, smmul, smmulr, smuad, smuadx, smusd, and smusdx instructions.

Mult, [15:12]

Indicates the implemented additional Multiply instructions:

0x2 The MUL, MLA, and MLS instructions.

MultiAccessInt, [11:8]

Indicates the support for interruptible multi-access instructions:

0x0 No support. This means that the LDM and STM instructions are not interruptible.

MemHint, [7:4]

Indicates the implemented memory hint instructions:

0x4 The PLD, PLI, and PLDWinstructions.

LoadStore, [3:0]

Indicates the implemented additional load/store instructions:

0x2 The LDRD and STRD instructions.

The Load Acquire (LDAB, LDAH, LDA, LDAEXB, LDAEXH, LDAEX, and LDAEXD) and Store Release (STLB, STLH, STL, STLEXB, STLEXH, STLEX, and STLEXD) instructions.

Configurations

In an AArch64-only implementation, this register is **UNKNOWN**.

Must be interpreted with ID_ISAR0_EL1, ID_ISAR1_EL1, ID_ISAR3_EL1, ID_ISAR4_EL1, ID_ISAR5_EL1, and ID_ISAR6_EL1. See:

- 3.2.71 ID ISARO EL1, AArch32 Instruction Set Attribute Register 0, EL1 on page 190.
- 3.2.72 ID ISAR1 EL1, AArch32 Instruction Set Attribute Register 1, EL1 on page 192.
- 3.2.74 ID ISAR3 EL1, AArch32 Instruction Set Attribute Register 3, EL1 on page 195.
- 3.2.75 ID ISAR4 EL1, AArch32 Instruction Set Attribute Register 4, EL1 on page 197.
- 3.2.76 ID ISAR5 EL1, AArch32 Instruction Set Attribute Register 5, EL1 on page 199.
- 3.2.77 ID ISAR6 EL1, AArch32 Instruction Set Attribute Register 6, EL1 on page 201.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.74 ID_ISAR3_EL1, AArch32 Instruction Set Attribute Register 3, EL1

The ID_ISAR3_EL1 provides information about the instruction sets implemented by the core in AArch32.

Bit field descriptions

ID_ISAR3_EL1 is a 32-bit register, and is part of the Identification registers functional group.

This register is read-only.

Figure 3-57: ID_ISAR3_EL1 bit assignments

| (| 31 28 | 27 24 | 23 20 | 19 16 | 15 12 | 11 8 | 7 4 | 3 0 |
|---|-------|---------|---------|-----------|-----------|------|------|----------|
| | T32EE | TrueNOP | T32Copy | TabBranch | SynchPrim | SVC | SIMD | Saturate |

T32EE, [31:28]

Indicates the implemented T32EE instructions:

0x0 None implemented.

TrueNOP, [27:24]

Indicates support for True NOP instructions:

True NOP instructions in both the A32 and T32 instruction sets, and additional NOP-compatible hints.

T32Copy, [23:20]

Indicates the support for T32 non flag-setting Mov instructions:

0x1 Support for T32 instruction set encoding T1 of the Mov (register) instruction, copying from a low register to a low register.

TabBranch, [19:16]

Indicates the implemented Table Branch instructions in the T32 instruction set.

0x1 The твв and твн instructions.

SynchPrim, [15:12]

Indicates the implemented synchronization primitive instructions:

• The LDREX and STREX instructions.

- The clrex, ldrexb, strexb, and strexh instructions.
- The LDREXD and STREXD instructions.

SVC, [11:8]

Indicates the implemented SVC instructions:

0x1 The svc instruction.

SIMD, [7:4]

Indicates the implemented Single Instruction Multiple Data (SIMD) instructions.

0x3

- The SSAT and USAT instructions, and the Q bit in the PSRs.
- The PKHBT, PKHTB, QADD16, QADD8, QASX, QSUB16, QSUB8, QSAX, SADD16, SADD8, SASX, SEL, SHADD16, SHADD8, SHASX, SHSUB16, SHSUB8, SHSAX, SSAT16, SSUB16, SSUB8, SSAX, SXTAB16, SXTB16, UADD16, UADD8, UASX, UHADD16, UHADD8, UHASX, UHSUB16, UHSUB8, UHSAX, UQADD16, UQADD8, UQASX, UQSUB16, UQSUB8, UQSAX, USADA8, USAT16, USUB16, USUB8, USAX, UXTAB16, UXTB16 instructions, and the GE[3:0] bits in the PSRs.

Saturate, [3:0]

Indicates the implemented Saturate instructions:

0x1 The QADD, QDADD, QDSUB, QSUB Q bit in the PSRs.

Configurations

In an AArch64-only implementation, this register is **UNKNOWN**.

Must be interpreted with ID_ISAR0_EL1, ID_ISAR1_EL1, ID_ISAR2_EL1, ID_ISAR4_EL1, ID_ISAR5_EL1, and ID_ISAR6_EL1. See:

- 3.2.71 ID ISARO EL1, AArch32 Instruction Set Attribute Register 0, EL1 on page 190.
- 3.2.72 ID ISAR1 EL1, AArch32 Instruction Set Attribute Register 1, EL1 on page 192.
- 3.2.73 ID ISAR2 EL1, AArch32 Instruction Set Attribute Register 2, EL1 on page 193.
- 3.2.75 ID_ISAR4_EL1, AArch32 Instruction Set Attribute Register 4, EL1 on page 197.
- 3.2.76 ID ISAR5 EL1, AArch32 Instruction Set Attribute Register 5, EL1 on page 199.
- 3.2.77 ID ISAR6 EL1, AArch32 Instruction Set Attribute Register 6, EL1 on page 201.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.75 ID_ISAR4_EL1, AArch32 Instruction Set Attribute Register 4, EL1


The ID_ISAR4_EL1 provides information about the instruction sets implemented by the core in AArch32.

Bit field descriptions

ID_ISAR4_EL1 is a 32-bit register, and is part of the Identification registers functional group.

This register is read-only.

Figure 3-58: ID_ISAR4_EL1 bit assignments



SWP_frac, [31:28]

Indicates support for the memory system locking the bus for SWP or SWPB instructions:

0x0 swp and swpb instructions not implemented.

PSR_M, [27:24]

Indicates the implemented M profile instructions to modify the PSRs:

0x0 None implemented.

SynchPrim_frac, [23:20]

This field is used with the ID_ISAR3.SynchPrim field to indicate the implemented synchronization primitive instructions:

0x0 • The LDREX and STREX instructions.

- The clrex, LDREXB, LDREXH, STREXB, and STREXH instructions.
- The LDREXD and STREXD instructions.

Barrier, [19:16]

Indicates the supported Barrier instructions in the A32 and T32 instruction sets:

0x1 The DMB, DSB, and ISB barrier instructions.

SMC, [15:12]

Indicates the implemented smc instructions:

0x0 None implemented.

WriteBack, [11:8]

Indicates the support for Write-Back addressing modes:

0x1 Core supports all the Write-Back addressing modes as defined in Arm®v8-A.

WithShifts, [7:4]

Indicates the support for instructions with shifts.

• Support for shifts of loads and stores over the range LSL 0-3.

- Support for other constant shift options, both on load/store and other instructions.
- Support for register-controlled shift options.

Unpriv, [3:0]

Indicates the implemented unprivileged instructions.

0x2

- The LDRBT, LDRT, STRBT, and STRT instructions.
- The LDRHT, LDRSBT, LDRSHT, and STRHT instructions.

Configurations

In an AArch64-only implementation, this register is **UNKNOWN**.

Must be interpreted with ID_ISAR0_EL1, ID_ISAR1_EL1, ID_ISAR2_EL1, ID_ISAR3_EL1, ID_ISAR5_EL1, and ID_ISAR6_EL1. See:

- 3.2.71 ID_ISARO_EL1, AArch32 Instruction Set Attribute Register 0, EL1 on page 190.
- 3.2.72 ID ISAR1 EL1, AArch32 Instruction Set Attribute Register 1, EL1 on page 192.
- 3.2.73 ID_ISAR2_EL1, AArch32 Instruction Set Attribute Register 2, EL1 on page 193.
- 3.2.74 ID ISAR3 EL1, AArch32 Instruction Set Attribute Register 3, EL1 on page 195.
- 3.2.76 ID ISAR5 EL1, AArch32 Instruction Set Attribute Register 5, EL1 on page 199.
- 3.2.77 ID_ISAR6_EL1, AArch32 Instruction Set Attribute Register 6, EL1 on page 201.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.76 ID_ISAR5_EL1, AArch32 Instruction Set Attribute Register 5, EL1


The ID_ISAR5_EL1 provides information about the instruction sets that the core implements.

Bit field descriptions

ID ISAR5 EL1 is a 32-bit register, and is part of the Identification registers functional group.

This register is read-only.

Figure 3-59: ID_ISAR5_EL1 bit assignments



RESO, [31:28]

RESO Reserved.

RDM, [27:24]

VQRDMLAH and VQRDMLSH instructions in AArch32. The value is:

0x1 VQRDMLAH and VQRDMLSH instructions are implemented.

RESO, [23:20]

RESO Reserved.

CRC32, [19:16]

Indicates whether CRC32 instructions are implemented in AArch32 state. The value is:

0x1 crc32н, crc32н, crc32сн, crc32сн, and crc32сw instructions are implemented.

SHA2, [15:12]

Indicates whether SHA2 instructions are implemented in AArch32 state. The possible values are:

| 0×0 | No SHA2 instructions implemented. This is the value when the |
|--------------|----------------------------------------------------------------------|
| | Cryptographic Extensions are not implemented or are disabled. |
| 0x1 | sнa256н, sнa256н2, sнa256su0, and sнa256su1 instructions are |
| | implemented. This is the value when the Cryptographic Extensions are |
| | implemented and enabled. |

SHA1, [11:8]

Indicates whether SHA1 instructions are implemented in AArch32 state. The possible values are:

| 0×0 | No SHA1 instructions implemented. This is the value when the |
|--------------|----------------------------------------------------------------------|
| | Cryptographic Extensions are not implemented or are disabled. |
| 0x1 | sна1c, sна1p, sна1m, sна1н, sна1su0, and sна1su1 instructions are |
| | implemented. This is the value when the Cryptographic Extensions are |
| | implemented and enabled. |

AES, [7:4]

Indicates whether AES instructions are implemented in AArch32 state. The possible values are:

| 0x0 | No AES instructions implemented. This is the value when the |
|-----|---------------------------------------------------------------|
| | Cryptographic Extensions are not implemented or are disabled. |
| | |

0x2 • AESE, AESD, AESMC, and AESIMC implemented.

• PMULL and PMULL2 instructions operating on 64-bit data.

This is the value when the Cryptographic Extensions are implemented and enabled.

SEVL, [3:0]

Indicates whether the SEVL instruction is implemented:

0x1 sevl implemented to send event local.

Configurations

ID_ISAR5 must be interpreted with ID_ISAR0_EL1, ID_ISAR1_EL1, ID_ISAR2_EL1, ID_ISAR3_EL1, ID_ISAR4_EL1, and ID_ISAR6_EL1. See:

- 3.2.71 ID_ISARO_EL1, AArch32 Instruction Set Attribute Register 0, EL1 on page 190.
- 3.2.72 ID ISAR1 EL1, AArch32 Instruction Set Attribute Register 1, EL1 on page 192.
- 3.2.73 ID ISAR2 EL1, AArch32 Instruction Set Attribute Register 2, EL1 on page 193.
- 3.2.74 ID_ISAR3_EL1, AArch32 Instruction Set Attribute Register 3, EL1 on page 195.
- 3.2.75 ID ISAR4 EL1, AArch32 Instruction Set Attribute Register 4, EL1 on page 197.
- 3.2.77 ID ISAR6 EL1, AArch32 Instruction Set Attribute Register 6, EL1 on page 201.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.77 ID_ISAR6_EL1, AArch32 Instruction Set Attribute Register 6, EL1


The ID ISAR6 EL1 provides information about the instruction sets that the core implements.

Bit field descriptions

ID ISAR6 EL1 is a 32-bit register, and is part of the Identification registers functional group.

This register is read-only.

Figure 3-60: ID_ISAR6_EL1 bit assignments

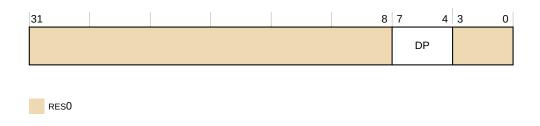

RESO, [31:8]

RESO Reserved.

DP, [7:4]

UDOT and SDOT instructions. The value is:

0b0001 UDOT and SDOT instructions are implemented.

RESO, [3:0]

RESO Reserved.

Configurations

There is one copy of this register that is used in both Secure and Non-secure states.

ID_ISAR6_EL1 must be interpreted with ID_ISAR0_EL1, ID_ISAR1_EL1, ID_ISAR2_EL1, ID_ISAR3_EL1, ID_ISAR4_EL1, and ID_ISAR5_EL1. See:

- 3.2.71 ID ISARO EL1, AArch32 Instruction Set Attribute Register 0, EL1 on page 190.
- 3.2.72 ID ISAR1 EL1, AArch32 Instruction Set Attribute Register 1, EL1 on page 192.
- 3.2.73 ID_ISAR2_EL1, AArch32 Instruction Set Attribute Register 2, EL1 on page 193.
- 3.2.74 ID_ISAR3_EL1, AArch32 Instruction Set Attribute Register 3, EL1 on page 195.
- 3.2.75 ID_ISAR4_EL1, AArch32 Instruction Set Attribute Register 4, EL1 on page 197.
- 3.2.76 ID ISAR5 EL1, AArch32 Instruction Set Attribute Register 5, EL1 on page 199.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.78 ID_MMFR0_EL1, AArch32 Memory Model Feature Register 0, EL1

The ID_MMFR0_EL1 provides information about the memory model and memory management support in AArch32.

Bit field descriptions

ID MMFRO EL1 is a 32-bit register, and is part of the Identification registers functional group.

This register is read-only.

Figure 3-61: ID_MMFR0_EL1 bit assignments

| 31 28 | 27 24 | 23 20 | 19 16 | 15 12 | 11 8 | 7 4 | 3 0 |
|----------|-------|--------|-------|----------|----------|------|------|
| InnerShr | FCSE | AuxReg | ТСМ | ShareLvl | OuterShr | PMSA | VMSA |

InnerShr, [31:28]

Indicates the innermost Shareability domain implemented:

0x1 Implemented with hardware coherency support.

FCSE, [27:24]

Indicates support for Fast Context Switch Extension (FCSE):

0x0 Not supported.

AuxReg, [23:20]

Indicates support for Auxiliary registers:

0x2 Support for Auxiliary Fault Status Registers (AIFSR and ADFSR) and Auxiliary Control Register.

TCM, [19:16]

Indicates support for TCMs and associated DMAs:

0x0 Not supported.

ShareLvl, [15:12]

Indicates the number of Shareability levels implemented:

0x1 Two levels of Shareability implemented.

OuterShr, [11:8]

Indicates the outermost Shareability domain implemented:

0x1 Implemented with hardware coherency support.

PMSA. [7:4]

Indicates support for a Protected Memory System Architecture (PMSA):

0x0 Not supported.

VMSA, [3:0]

Indicates support for a Virtual Memory System Architecture (VMSA).

0x5 Support for:

- VMSAv7, with support for remapping and the Access flag.
- The PXN bit in the Short-descriptor translation table format descriptors.
- The Long-descriptor translation table format.

Configurations

Must be interpreted with ID_MMFR1_EL1, ID_MMFR2_EL1, ID_MMFR3_EL1, and ID_MMFR4_EL1. See:

- 3.2.79 ID_MMFR1_EL1, AArch32 Memory Model Feature Register 1, EL1 on page 204.
- 3.2.80 ID_MMFR2_EL1, AArch32 Memory Model Feature Register 2, EL1 on page 205.

- 3.2.81 ID_MMFR3_EL1, AArch32 Memory Model Feature Register 3, EL1 on page 207.
- 3.2.82 ID_MMFR4_EL1, AArch32 Memory Model Feature Register 4, EL1 on page 209.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.79 ID_MMFR1_EL1, AArch32 Memory Model Feature Register 1, EL1

The ID_MMFR1_EL1 provides information about the memory model and memory management support in AArch32.

Bit field descriptions

ID MMFR1 EL1 is a 32-bit register, and is part of the Identification registers functional group.

This register is read-only.

Figure 3-62: ID_MMFR1_EL1 bit assignments

| 31 | 28 | 27 24 | 23 20 | 19 16 | 15 12 | 11 8 | 7 4 | 3 0 |
|-------|----|----------|-------|-------|---------|---------|---------|---------|
| BPred | | L1TstCln | L1Uni | L1Hvd | L1UniSW | L1HvdSW | L1UniVA | L1HvdVA |

BPred, [31:28]

Indicates branch predictor management requirements:

For execution correctness, branch predictor requires no flushing at any time.

L1TstCln, [27:24]

 0×4

Indicates the supported L1 data cache test and clean operations, for Harvard or unified cache implementation:

0x0 None supported.

L1Uni, [23:20]

Indicates the supported entire L1 cache maintenance operations, for a unified cache implementation:

0x0 None supported.

L1Hvd, [19:16]

Indicates the supported entire L1 cache maintenance operations, for a Harvard cache implementation:

0x0 None supported.

L1UniSW, [15:12]

Indicates the supported L1 cache line maintenance operations by set/way, for a unified cache implementation:

0x0 None supported.

L1HvdSW, [11:8]

Indicates the supported L1 cache line maintenance operations by set/way, for a Harvard cache implementation:

0x0 None supported.

L1UniVA, [7:4]

Indicates the supported L1 cache line maintenance operations by MVA, for a unified cache implementation:

0x0 None supported.

L1HvdVA, [3:0]

Indicates the supported L1 cache line maintenance operations by MVA, for a Harvard cache implementation:

0x0 None supported.

Configurations

Must be interpreted with ID_MMFR0_EL1, ID_MMFR2_EL1, ID_MMFR3_EL1, and ID_MMFR4_EL1. See:

- 3.2.78 ID_MMFR0_EL1, AArch32 Memory Model Feature Register 0, EL1 on page 202.
- 3.2.80 ID_MMFR2_EL1, AArch32 Memory Model Feature Register 2, EL1 on page 205.
- 3.2.81 ID_MMFR3_EL1, AArch32 Memory Model Feature Register 3, EL1 on page 207.
- 3.2.82 ID_MMFR4_EL1, AArch32 Memory Model Feature Register 4, EL1 on page 209.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.80 ID_MMFR2_EL1, AArch32 Memory Model Feature Register 2, EL1

The ID_MMFR2_EL1 provides information about the implemented memory model and memory management support in AArch32.

Bit field descriptions

ID MMFR2 EL1 is a 32-bit register, and is part of the Identification registers functional group.

This register is read-only.

Figure 3-63: ID_MMFR2_EL1 bit assignments

| 31 | 28 | 27 24 | 23 20 | 19 16 | 15 12 | 11 8 | 7 4 | 3 0 |
|--------|----|----------|---------|--------|--------|-----------|---------|---------|
| HWAccF | lg | WFIStall | MemBarr | UniTLB | HvdTLB | LL1HvdRng | L1HvdBG | L1HvdFG |

HWAccFlg, [31:28]

Hardware access flag. Indicates support for a hardware access flag, as part of the VMSAv7 implementation:

0x0 Not supported.

WFIStall, [27:24]

Wait For Interrupt Stall. Indicates the support for Wait For Interrupt (WFI) stalling:

0x1 Support for WFI stalling.

MemBarr, [23:20]

Memory Barrier. Indicates the supported CP15 memory barrier operations.

0x2 Supported CP15 memory barrier operations are:

- Data Synchronization Barrier (DSB).
- Instruction Synchronization Barrier (ISB).
- Data Memory Barrier (DMB).

UniTLB, [19:16]

Unified TLB. Indicates the supported TLB maintenance operations, for a unified TLB implementation.

0x6 Supported unified TLB maintenance operations are:

- Invalidate all entries in the TLB.
- Invalidate TLB entry by MVA.
- Invalidate TLB entries by ASID match.
- Invalidate instruction TLB and data TLB entries by MVA All ASID. This is a shared unified TLB operation.
- Invalidate Hyp mode unified TLB entry by MVA.
- Invalidate entire Non-secure EL1 and EL0 unified TLB.
- Invalidate entire Hyp mode unified TLB.
- TLBIMVALIS, TLBIMVAALIS, TLBIMVALHIS, TLBIMVAL, TLBIMVAAL, and TLBIMVALH.
- TLBIIPAS2IS, TLBIIPAS2LIS, TLBIIPAS2, and TLBIIPAS2L.

HvdTLB, [15:12]

Harvard TLB. Indicates the supported TLB maintenance operations, for a Harvard TLB implementation:

0x0 Not supported.

LL1HvdRng, [11:8]

L1 Harvard cache Range. Indicates the supported L1 cache maintenance range operations, for a Harvard cache implementation:

0x0 Not supported.

L1HvdBG, [7:4]

L1 Harvard cache Background fetch. Indicates the supported L1 cache background prefetch operations, for a Harvard cache implementation:

0x0 Not supported.

L1HvdFG, [3:0]

L1 Harvard cache Foreground fetch. Indicates the supported L1 cache foreground prefetch operations, for a Harvard cache implementation:

0x0 Not supported.

Configurations

Must be interpreted with ID_MMFR0_EL1, ID_MMFR1_EL1, ID_MMFR3_EL1, and ID_MMFR4_EL1. See:

- 3.2.78 ID_MMFR0_EL1, AArch32 Memory Model Feature Register 0, EL1 on page 202.
- 3.2.79 ID_MMFR1_EL1, AArch32 Memory Model Feature Register 1, EL1 on page 204.
- 3.2.81 ID_MMFR3_EL1, AArch32 Memory Model Feature Register 3, EL1 on page 207.
- 3.2.82 ID_MMFR4_EL1, AArch32 Memory Model Feature Register 4, EL1 on page 209.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.81 ID_MMFR3_EL1, AArch32 Memory Model Feature Register 3, EL1

The ID_MMFR3_EL1 provides information about the memory model and memory management support in AArch32.

Bit field descriptions

ID MMFR3 EL1 is a 32-bit register, and is part of the Identification registers functional group.

This register is read-only.

Figure 3-64: ID_MMFR3_EL1 bit assignments

| 31 | 28 | 27 24 | 23 | 20 | 19 | 16 | 15 | 12 | 11 | 8 | 7 | 4 | 3 | 0 |
|---------|----|--------|----|-------|----|-----|----|---------|----|--------|----|---------|---|---------|
| Superse | eC | CMemSz | Co | hWalk | | PAN | Ma | intBcst | ВГ | ⊃Maint | CI | MaintSW | С | MaintVA |

Supersec, [31:28]

Supersections. Indicates support for supersections:

0x0 Supersections supported.

CMemSz, [27:24]

Cached memory size. Indicates the size of physical memory that is supported by the core caches:

1TByte or more, corresponding to a 40-bit, or larger physical address range.

CohWalk, [23:20]

Coherent walk. Indicates whether translation table updates require a clean to the point of unification:

0x1 Updates to the translation tables do not require a clean to the point of unification to ensure visibility by subsequent translation table walks.

PAN, [19:16]

Privileged Access Never.

0x2

PAN supported and new ATS1CPRP and ATS1CPWP instructions supported.

MaintBcst, [15:12]

Maintenance broadcast. Indicates whether cache, TLB, and branch predictor operations are broadcast:

0x2 Cache, TLB, and branch predictor operations affect structures according to Shareability and defined behavior of instructions.

BPMaint, [11:8]

Branch predictor maintenance. Indicates the supported branch predictor maintenance operations.

0x2 Supported branch predictor maintenance operations are:

• Invalidate all branch predictors.

• Invalidate branch predictors by MVA.

CMaintSW, [7:4]

Cache maintenance by set/way. Indicates the supported cache maintenance operations by set/way.

0x1 Supported hierarchical cache maintenance operations by set/way are:

- Invalidate data cache by set/way.
- Clean data cache by set/way.
- Clean and invalidate data cache by set/way.

CMaintVA, [3:0]

Cache maintenance by *Virtual Address* (VA). Indicates the supported cache maintenance operations by VA.

0x1 Supported hierarchical cache maintenance operations by VA are:

- Invalidate data cache by VA.
- Clean data cache by VA.
- Clean and invalidate data cache by VA.
- Invalidate instruction cache by VA.
- Invalidate all instruction cache entries.

Configurations

Must be interpreted with ID_MMFR0_EL1, ID_MMFR1_EL1, ID_MMFR2_EL1, and ID_MMFR4_EL1. See:

- 3.2.78 ID_MMFR0_EL1, AArch32 Memory Model Feature Register 0, EL1 on page 202
- 3.2.79 ID_MMFR1_EL1, AArch32 Memory Model Feature Register 1, EL1 on page 204.
- 3.2.80 ID_MMFR2_EL1, AArch32 Memory Model Feature Register 2, EL1 on page 205.
- 3.2.82 ID_MMFR4_EL1, AArch32 Memory Model Feature Register 4, EL1 on page 209.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.82 ID_MMFR4_EL1, AArch32 Memory Model Feature Register 4, EL1

The ID_MMFR4_EL1 provides information about the memory model and memory management support in AArch32.

Bit field descriptions

ID MMFR4 EL1 is a 32-bit register, and is part of the Identification registers functional group.

This register is read-only.

Figure 3-65: ID_MMFR4_EL1 bit assignments

| 31 | | 24 23 | 3 20 | 19 16 | 15 12 | 11 8 | 7 4 | 3 0 |
|----|-----|-------|------|-------|-------|------|-----|---------|
| | RAZ | | LSM | HPDS | CNP | XNX | AC2 | SpecSEI |

RAZ, [31:24]

Read-As-Zero.

LSM, [23:20]

Load/Store Multiple. Indicates whether adjacent loads or stores can be combined. The value is:

0x0 LSMAOE and nTLSMD bit not supported.

HPDS, [19:16]

Presence of Hierarchical Disables. Enables an operating system or hypervisor to hand over up to 4 bits of the last level translation table descriptor (bits[62:59] of the translation table entry) for use by hardware for *IMPLEMENTATION DEFINED* usage. The value is:

0x2 Hierarchical Permission Disables and Hardware allocation of bits[62:59] supported.

CNP, [15:12]

Common Not Private. Indicates support for selective sharing of TLB entries across multiple PEs. The value is:

0x1 CnP bit supported.

XNX, [11:8]

Execute Never. Indicates whether the stage 2 translation tables allows the stage 2 control of whether memory is executable at EL1 independent of whether memory is executable at EL0. The value is:

0x1 ELO/EL1 execute control distinction at stage 2 bit supported.

AC2, [7:4]

Indicates the extension of the ACTLR and HACTLR registers using ACTLR2 and HACTLR2. The value is:

0x1 ACTLR2 and HACTLR2 are implemented.

SpecSEI, [3:0]

Describes whether the core can generate SError interrupt exceptions from Speculative reads of memory, including Speculative instruction fetches. The value is:

0x0 The core never generates an SError interrupt due to an External abort on a Speculative read.

Configurations

There is one copy of this register that is used in both Secure and Non-secure states.

Must be interpreted with ID_MMFR0_EL1, ID_MMFR1_EL1, ID_MMFR2_EL1, and ID_MMFR3_EL1. See:

- 3.2.78 ID_MMFR0_EL1, AArch32 Memory Model Feature Register 0, EL1 on page 202.
- 3.2.79 ID_MMFR1_EL1, AArch32 Memory Model Feature Register 1, EL1 on page 204.
- 3.2.80 ID_MMFR2_EL1, AArch32 Memory Model Feature Register 2, EL1 on page 205.
- 3.2.81 ID_MMFR3_EL1, AArch32 Memory Model Feature Register 3, EL1 on page 207.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.83 ID_PFRO_EL1, AArch32 Processor Feature Register 0, EL1

The ID_PFRO_EL1 provides top-level information about the instruction sets supported by the core in AArch32.


Bit field descriptions

ID PFRO EL1 is a 32-bit register, and is part of the Identification registers functional group.

This register is read-only.

Issue: 00

Register descriptions





RAS, [31:28]

RAS extension version. The value is:

0x1Version 1 of the RAS extension is present.

RESO, [27:20]

Reserved. RES0

CSV2, [19:16]

This device does not disclose whether branch targets trained in one 0x0context can affect speculative execution in a different context.

Branch targets trained in one context cannot affect speculative 0x1

execution in a different hardware described context. This is the reset value.

State3, [15:12]

Indicates support for Thumb Execution Environment (T32EE) instruction set. This value is:

 0×0 Core does not support the T32EE instruction set.

State2, [11:8]

Indicates support for Jazelle. This value is:

0x1 Core supports trivial implementation of Jazelle.

State1, [7:4]

Indicates support for T32 instruction set. This value is:

Core supports T32 encoding after the introduction of Thumb-2 0x3technology, and for all 16-bit and 32-bit T32 basic instructions.

State0, [3:0]

Indicates support for A32 instruction set. This value is:

0x1 A32 instruction set implemented.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.84 ID_PFR1_EL1, AArch32 Processor Feature Register 1, EL1


The ID_PFR1_EL1 provides information about the programmers model and architecture extensions that are supported by the core.

Bit field descriptions

ID PFR1 EL1 is a 32-bit register, and is part of the Identification registers functional group.

This register is read-only.

Figure 3-67: ID_PFR1_EL1 bit assignments



GIC CPU, [31:28]

GIC CPU support:

0

GIC CPU interface is disabled, **GICCDISABLE** is HIGH, or not implemented.

1

GIC CPU interface is implemented and enabled, **GICCDISABLE** is LOW.

Virt_frac, [27:24]

0

No features from the Armv7 Virtualization Extensions are implemented.

Sec_frac, [23:20]

0

No features from the Armv7 Virtualization Extensions are implemented.

GenTimer, [19:16]

Generic Timer support:

1

Generic Timer supported.

Virtualization, [15:12]

Virtualization support:

0

Virtualization not implemented.

MProgMod, [11:8]

M profile programmers model support:

0

Not supported.

Security, [7:4]

Security support:

0

Security not implemented.

ProgMod, [3:0]

Indicates support for the standard programmers model for Armv4 and later.

Model must support User, FIQ, IRQ, Supervisor, Abort, Undefined, and System modes:

0

Not supported.

Configurations

There are no configuration notes.

3.2.85 ID_PFR2_EL1, AArch32 Processor Feature Register 2, EL1


The ID_PFR2_EL1 provides information about the programmers model and architecture extensions that are supported by the core.

Bit field descriptions

ID PFR2 EL1 is a 32-bit register, and is part of the Identification registers functional group.

This register is read-only.

Figure 3-68: ID_PFR2_EL1 bit assignments

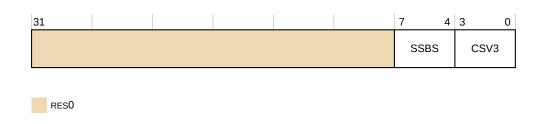

RESO, [31:8]

RES₀

Reserved.

SSBS, [7:4]

1

AArch32 provides the PSTATE.SSBS mechanism to mark regions that are *Speculative Store Bypassing Safe* (SSBS).

CSV3, [3:0]

1

Data that are loaded under speculation with a permission or domain fault cannot be used to form an address or generate condition codes to be used by instructions newer than the load in the speculative sequence. This is the reset value.

Configurations

There are no configuration notes.


3.2.86 LORC_EL1, LORegion Control Register, EL1

The LORC_EL1 register enables and disables LORegions, and selects the current LORegion descriptor.

Bit field descriptions

LORC_EL1 is a 64-bit register and is part of the Virtual memory control registers functional group.

Figure 3-69: LORC_EL1 bit assignments



RESO, [63:4]

Reserved, RESO.

DS, [3:2]

Descriptor Select. Number that selects the current LORegion descriptor that is accessed by the LORSA EL1, LOREA EL1, and LORN EL1 registers.

RESO, [1]

Reserved, RESO.

EN, [0]

Enable. The possible values are:

- O Disabled. This is the reset value.
- 1 Enabled.

Configurations

RW fields in this register reset to architecturally **UNKNOWN** values.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.


3.2.87 LORID_EL1, LORegion ID Register, EL1

The LORID_EL1 ID register indicates the supported number of LORegions and LORegion descriptors.

Bit field descriptions

LORID_EL1 is a 64-bit register.

Figure 3-70: LORID_EL1 bit assignments



RES0, [63:24]

Reserved. RESO.

LD, [23:16]

Number of LORegion descriptors supported by the implementation, expressed as binary 8-bit number. The value is:

0x04 Four LORegion descriptors are supported.

RESO, [15:8]

Reserved, RESO.

LR, [7:0]

Number of LORegions supported by the implementation, expressed as a binary 8-bit number. The value is:

 0×04 Four LORegions are supported.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.


3.2.88 LORN_EL1, LORegion Number Register, EL1

The LORN_EL1 register holds the number of the LORegion described in the current LORegion descriptor that is selected by LORC_EL1.DS.

Bit field descriptions

LORN_EL1 is a 64-bit register and is part of the Virtual memory control registers functional group.

Figure 3-71: LORN_EL1 bit assignments



RESO, [63:2]

Reserved, RESO.

Num, [1:0]

Indicates the LORegion number.

Configurations

RW fields in this register reset to architecturally **UNKNOWN** values.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.89 MDCR_EL3, Monitor Debug Configuration Register, EL3


The MDCR_EL3 provides configuration options for Security to self-hosted debug.

Bit field descriptions

MDCR EL3 is a 32-bit register, and is part of:

- The Debug registers functional group.
- The Security registers functional group.

Figure 3-72: MDCR_EL3 bit assignments

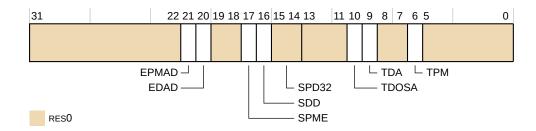

RESO, [31:22]

RESO Reserved.

EPMAD, [21]

External debugger access to Performance Monitors registers disabled. This disables access to these registers by an external debugger. The possible values are:

- Access to Performance Monitors registers from external debugger is permitted.
- Access to Performance Monitors registers from external debugger is disabled, unless overridden by authentication interface.

EDAD, [20]

External debugger access to breakpoint and watchpoint registers disabled. This disables access to these registers by an external debugger. The possible values are:

- O Access to breakpoint and watchpoint registers from external debugger is permitted.
- Access to breakpoint and watchpoint registers from external debugger is disabled, unless overridden by authentication interface.

SPME, [17]

Secure performance monitors enable. This enables event counting exceptions from Secure state. The possible values are:

- 0 Event counting prohibited in Secure state.
- 1 Event counting allowed in Secure state.

SPD32, [15:14]

RES0

Reserved.

TDOSA, [10]

Trap accesses to the OS Debug system registers, OSLAR_EL1, OSLSR_EL1, OSDLR_EL1, and DBGPRCR EL1 OS.

- O Accesses are not trapped.
- Accesses to the OS Debug system registers are trapped to EL3.

The reset value is **UNKNOWN**.

TDA, [9]

Trap accesses to the remaining sets of Debug registers to EL3.

- O Accesses are not trapped.
- 1 Accesses to the remaining Debug system registers are trapped to EL3.

The reset value is **UNKNOWN**.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.90 MIDR_EL1, Main ID Register, EL1


The MIDR_EL1 provides identification information for the core, including an implementer code for the device and a device ID number.

Bit field descriptions

MIDR EL1 is a 32-bit register, and is part of the Identification registers functional group.

This register is read-only.

Figure 3-73: MIDR_EL1 bit assignments



Implementer, [31:24]

Indicates the implementer code. This value is:

0x41 ASCII character 'A' - implementer is Arm® Limited.

Variant, [23:20]

Indicates the variant number of the core. This is the major revision number x in the rx part of the rxpy description of the product revision status. This value is:

0x1 r1p1.

Architecture, [19:16]

Indicates the architecture code. This value is:

0xF Defined by CPUID scheme.

PartNum, [15:4]

Indicates the primary part number. This value is:

0xD0E Cortex®-A76AE core.

Revision, [3:0]

Indicates the minor revision number of the core. This is the minor revision number y in the py part of the rxpy description of the product revision status. This value is:

0x1 r1p1.

Configurations

The MIDR EL1 is architecturally mapped to external MIDR EL1 register.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.91 MPIDR_EL1, Multiprocessor Affinity Register, EL1


The MPIDR_EL1 provides an additional core identification mechanism for scheduling purposes in a cluster.

Bit field descriptions

MPIDR_EL1 is a 64-bit register, and is part of the Other system control registers functional group.

This register is read-only.

Figure 3-74: MPIDR_EL1 bit assignments

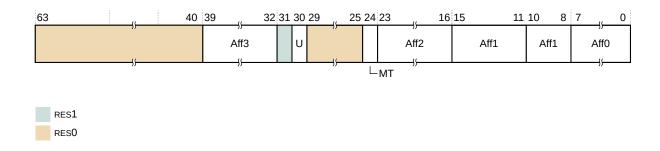

RESO, [63:40]

RESO Reserved.

Aff3, [39:32]

Affinity level 3. Highest level affinity field.

CLUSTERID

0

Indicates the value read in the **CLUSTERIDAFF3** configuration signal.

RES1, [31]

RES1 Reserved.

U, [30]

Indicates a single core system, as distinct from core 0 in a cluster. This value is:

Core is part of a multiprocessor system. This is the value for implementations with more than one core, and for implementations with an ACE or CHI master interface.

RESO, [29:25]

RESO Reserved.

MT, [24]

Indicates whether the lowest level of affinity consists of logical cores that are implemented using a multithreading type approach. This value is:

1 Performance of PEs at the lowest affinity level is interdependent.

AffinityO represents threads. Cortex®-A76AE is not multithreaded, but may be in a system with other cores that are multithreaded.

Aff2, [23:16]

Affinity L2. Second highest level affinity field.

CLUSTERID

Indicates the value read in the **CLUSTERIDAFF2** configuration signal.

Aff1, [15:11]

Part of Affinity L1. Third highest level affinity field.

RAZ Read-As-Zero.

Aff1, [10:8]

Part of Affinity L1. Third highest level affinity field.

CPUID Identification number for each CPU in the cluster:

0x0 MP1: CPUID: 0. 0x7 MP8: CPUID: 7.

Aff0, [7:0]

Affinity level 0. The level identifies individual threads within a multithreaded core. The $Cortex^{\otimes}$ -A76AE core is single-threaded, so this field has the value 0x00.

Configurations

MPIDR_EL1[31:0] is mapped to external register EDDEVAFFO.

MPIDR EL1[63:32] is mapped to external register EDDEVAFF1.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.


3.2.92 PAR_EL1, Physical Address Register, EL1

The PAR_EL1 returns the output address from an address translation instruction that executed successfully, or fault information if the instruction did not execute successfully.

Bit field descriptions, PAR_EL1.F is 0

The following figure shows the PAR bit assignments when PAR.F is 0.

Figure 3-75: PAR bit assignments, PAR_EL1.F is 0

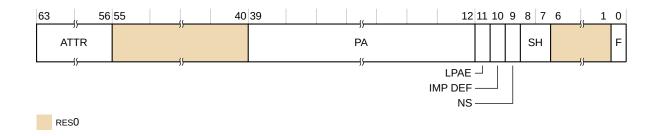

IMP DEF, [10]

IMPLEMENTATION DEFINED. Bit[10] is **RESO**.

F, [0]

Indicates whether the instruction performed a successful address translation.

- O Address translation completed successfully.
- 1 Address translation aborted.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

Bit field descriptions, PAR_EL1.F is 1

See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.93 REVIDR_EL1, Revision ID Register, EL1

The REVIDR_EL1 provides revision information, additional to MIDR_EL1, that identifies minor fixes (errata) which might be present in a specific implementation of the Cortex®-A76AE core.

Bit field descriptions

REVIDR_EL1 is a 32-bit register, and is part of the Identification registers functional group.

This register is read-only.

Figure 3-76: REVIDR_EL1 bit assignments



IMPLEMENTATION DEFINED, [31:0]

IMPLEMENTATION DEFINED.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.


3.2.94 RMR_EL3, Reset Management Register

The RMR_EL3 controls the Execution state that the core boots into and allows request of a Warm reset.

Bit field descriptions

RMR_EL3 is a 32-bit register, and is part of the Reset management registers functional group.

Figure 3-77: RMR_EL3 bit assignments

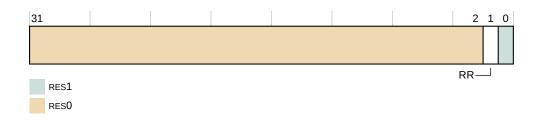

RESO, [31:2]

RESO Reserved.

RR, [1]

Reset Reguest. The possible values are:

- This is the reset value on both a Warm and a Cold reset.
- 1 Requests a Warm reset.

The bit is strictly a request.

RES1, [0]

RFS1 Reserved.

Configurations

There are no configuration notes.

Details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.95 RVBAR_EL3, Reset Vector Base Address Register, EL3

RVBAR_EL3 contains the **IMPLEMENTATION DEFINED** address that execution starts from after reset.

Bit field descriptions

RVBAR EL3 is a 64-bit register, and is part of the Reset management registers functional group.

This register is read-only.

Figure 3-78: RVBAR_EL3 bit assignments

RVBA, [63:0]

Reset Vector Base Address. The address that execution starts from after reset when executing in 64-bit state. Bits[1:0] of this register are 0b00, as this address must be aligned, and bits [63:40] are 0x000000 because the address must be within the physical address size supported by the core.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.96 SCTLR_EL1, System Control Register, EL1


The SCTLR_EL1 provides top-level control of the system, including its memory system, at EL1 and EL0.

Bit field descriptions

SCTLR_EL1 is a 64-bit register, and is part of the Other system control registers functional group.

This register resets to 0x000000030D50838.

Figure 3-79: SCTLR_EL1 bit assignments

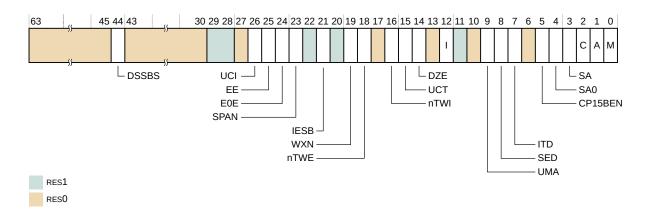

RESO, [63:45]

RESO Reserved

DSSBS, [44]

DSSBS is used to set the new PSTATE bit, SSBS (Speculative Store Bypassing Safe).

O PSTATE.SSBS is set to O on an exception taken to this Exception level. This is the reset value.

1 PSTATE.SSBS is set to 1 on an exception taken to this Exception level.

RESO, [43:30]

RFSO Reserved

RES1, [29:28]

RES1 Reserved

RES0, [27]

RESO Reserved

EE, [25]

Exception endianness. The value of this bit controls the endianness for explicit data accesses at EL1. This value also indicates the endianness of the translation table data for translation table lookups. The possible values of this bit are:

- 0 Little-endian.
- 1 Big-endian.

ITD, [7]

This field is RAZ/WI.

RES0, [6]

RESO Reserved

CP15BEN, [5]

CP15 barrier enable. The possible values are:

- O CP15 barrier operations disabled. Their encodings are UNDEFINED.
- 1 CP15 barrier operations enabled.

M, [0]

MMU enable. The possible values are:

- 0 EL1 and EL0 stage 1 MMU disabled.
- 1 EL1 and EL0 stage 1 MMU enabled.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.97 SCTLR_EL2, System Control Register, EL2


The SCTLR EL2 provides top-level control of the system, including its memory system at EL2.

Bit field descriptions

SCTLR_EL2 is a 64-bit register, and is part of:

- The Virtualization registers functional group
- The Other system control registers functional group

Figure 3-80: SCTLR_EL2 bit assignments

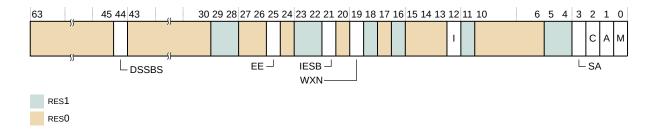

This register resets to 0x30C50838.

DSSBS, [44]

DSSBS is used to set the new PSTATE bit, SSBS (Speculative Store Bypassing Safe).

SCTLR_EL2.DSSBS is held in bit[44] regardless of the value of HCR_EL2.E2H or HCR_EL2.TGE.

- O PSTATE.SSBS is set to 0 on an exception taken to this Exception level. This is the reset value.
- 1 PSTATE.SSBS is set to 1 on an exception taken to this Exception level.

Configurations

If EL2 is not implemented, this register is RESO from EL3.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.98 SCTLR_EL3, System Control Register, EL3


The SCTLR_EL3 provides top-level control of the system, including its memory system at EL3.

Bit field descriptions

SCTLR_EL3 is a 64-bit register, and is part of the Other system control registers functional group.

This register resets to 0x30C50838.

Figure 3-81: SCTLR_EL3 bit assignments





RES0, [63:45]

RESO Reserved

DSSBS, [44]

DSSBS is used to set the new PSTATE bit, SSBS (Speculative Store Bypassing Safe).

O PSTATE.SSBS is set to 0 on an exception taken to this Exception level.

This is the reset value.

1 PSTATE.SSBS is set to 1 on an exception taken to this Exception level.

RESO, [43:30]

RESO Reserved

RES1, [29:28]

RES1 Reserved

RESO, [27:26]

RESO Reserved

EE, [25]

Exception endianness. This bit controls the endianness for:

- Explicit data accesses at EL3.
- Stage 1 translation table walks at EL3.

The possible values are:

0 Little-endian1 Big-endian

The reset value is determined by the CFGEND configuration signal.

I, [12]

Global instruction cache enable. The possible values are:

- Instruction caches disabled. This is the reset value.
- 1 Instruction caches enabled.

C, [2]

Global enable for data and unified caches. The possible values are:

- 0 Disables data and unified caches. This is the reset value.
- 1 Enables data and unified caches.

M, [0]

Global enable for the EL3 MMU. The possible values are:

- Disables EL3 MMU. This is the reset value. 0
- Enables EL3 MMU. 1

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.99 TCR EL1, Translation Control Register, EL1

The TCR EL1 determines which Translation base registers define the base address register for a translation table walk required for stage 1 translation of a memory access from ELO or EL1 and holds Cacheability and Shareability information.

Bit field descriptions

TCR EL1 is a 64-bit register, and is part of the Virtual memory control registers functional group.


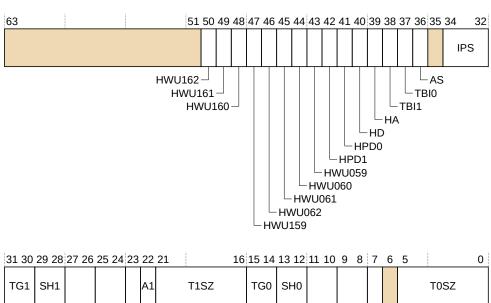


Figure 3-82: TCR_EL1 bit assignments





Bits[50:39], architecturally defined, are implemented in the core.

HD, [40]

Hardware management of dirty state in stage 1 translations from ELO and EL1. The possible values are:

- O Stage 1 hardware management of dirty state disabled.
- Stage 1 hardware management of dirty state enabled, only if the HA bit is also set to 1.

HA, [39]

Hardware Access flag update in stage 1 translations from ELO and EL1. The possible values are:

- O Stage 1 Access flag update disabled.
- 1 Stage 1 Access flag update enabled.

Configurations

RW fields in this register reset to **UNKNOWN** values.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.100 TCR_EL2, Translation Control Register, EL2

The TCR_EL2 controls translation table walks required for stage 1 translation of a memory access from EL2 and holds Cacheability and Shareability information.


Bit field descriptions

TCR EL2 is a 64-bit register.

TCR EL2 is part of:

- The Virtual memory control registers functional group.
- The Hypervisor and virtualization registers functional group.

Figure 3-83: TCR_EL2 bit assignments

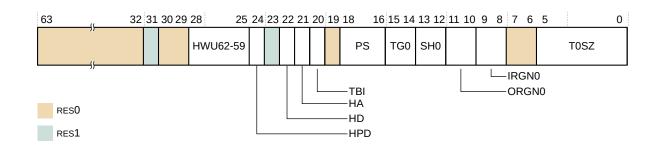



Bits[28:21], architecturally defined, are implemented in the core.

HD, [22]

Dirty bit update. The possible values are:

- O Dirty bit update is disabled.
- 1 Dirty bit update is enabled.

HA, [21]

Stage 1 Access flag update. The possible values are:

- O Stage 1 Access flag update is disabled.
- 1 Stage 1 Access flag update is enabled.

Configurations

When the Virtualization Host Extension is activated, TCR_EL2 has the same bit assignments as TCR_EL1.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.


3.2.101 TCR_EL3, Translation Control Register, EL3

The TCR_EL3 controls translation table walks required for stage 1 translation of memory accesses from EL3 and holds Cacheability and Shareability information for the accesses.

Bit field descriptions

TCR EL3 is a 64-bit register and is part of the Virtual memory control registers functional group.

Figure 3-84: TCR_EL3 bit assignments

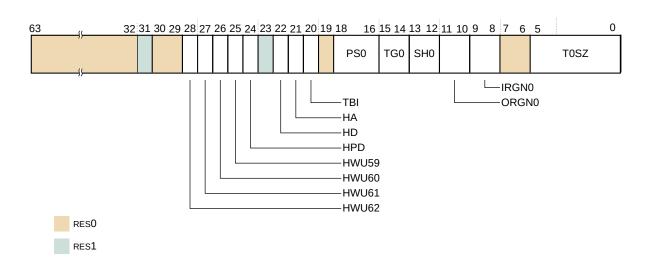



Bits[28:21], architecturally defined, are implemented in the core.

HD, [22]

Dirty bit update. The possible values are:

- O Dirty bit update is disabled.
- 1 Dirty bit update is enabled.

HA, [21]

Stage 1 Access flag update. The possible values are:

- O Stage 1 Access flag update is disabled.
- 1 Stage 1 Access flag update is enabled.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.102 TTBRO_EL1, Translation Table Base Register 0, EL1

The TTBRO_EL1 holds the base address of translation table 0, and information about the memory it occupies. This is one of the translation tables for the stage 1 translation of memory accesses from modes other than Hyp mode.

Bit field descriptions

TTBRO_EL1 is 64-bit register.

Figure 3-85: TTBRO_EL1 bit assignments



ASID, [63:48]

An ASID for the translation table base address. The TCR_EL1.A1 field selects either TTBR0_EL1.ASID or TTBR1_EL1.ASID.

BADDR[47:x], [47:1]

Translation table base address, bits[47:x]. Bits [x-1:1] are RESO.

x is based on the value of TCR_EL1.TOSZ, the stage of translation, and the memory translation granule size.

For instructions on how to calculate it, see the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

The value of x determines the required alignment of the translation table, that must be aligned to 2^x bytes.

If bits [x-1:1] are not all zero, this is a misaligned translation table base address. Its effects are **CONSTRAINED UNPREDICTABLE**, where bits [x-1:1] are treated as if all the bits are zero. The value read back from those bits is the value that is written.

CnP, [0]

Common not Private. The possible values are:

0

CnP is not supported.

1

CnP is supported.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.


3.2.103 TTBRO_EL2, Translation Table Base Register 0, EL2

The TTBRO_EL2 holds the base address of the translation table for the stage 1 translation of memory accesses from EL2.

Bit field descriptions

TTBRO_EL2 is a 64-bit register, and is part of the Virtual memory control registers functional group.

Figure 3-86: TTBRO_EL2 bit assignments



RESO, [63:48]

RESO

Reserved.

BADDR, [47:1]

Translation table base address, bits[47:x]. Bits [x-1:1] are RESO.

x is based on the value of TCR_EL2.TOSZ, the stage of translation, and the memory translation granule size.

For instructions on how to calculate it, see the Arm® Architecture Reference Manual Arm®v8, for Arm®v8-A architecture profile.

The value of x determines the required alignment of the translation table, that must be aligned to 2^x bytes.

If bits [x-1:1] are not all zero, this is a misaligned translation table base address. Its effects are **CONSTRAINED UNPREDICTABLE**, where bits [x-1:1] are treated as if all the bits are zero. The value read back from those bits is the value that is written.

CnP, [0]

Common not Private. The possible values are:

0

CnP is not supported.

1

CnP is supported.

Configurations

When the Virtualization Host Extension is activated, TTBRO_EL2 has the same bit assignments as TTBRO_EL1.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.


3.2.104 TTBRO_EL3, Translation Table Base Register 0, EL3

The TTBRO_EL3 holds the base address of the translation table for the stage 1 translation of memory accesses from EL3.

Bit field descriptions

TTBRO EL3 is a 64-bit register.

Figure 3-87: TTBRO_EL3 bit assignments



[63:48]

Reserved, RESO.

BADDR[47:x], [47:1]

Translation table base address, bits[47:x]. Bits [x-1:1] are RESO.

x is based on the value of TCR_EL1.TOSZ, the stage of translation, and the memory translation granule size.

For instructions on how to calculate it, see the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

The value of x determines the required alignment of the translation table, that must be aligned to 2^x bytes.

If bits [x-1:1] are not all zero, this is a misaligned translation table base address. Its effects are **CONSTRAINED UNPREDICTABLE**, where bits [x-1:1] are treated as if all the bits are zero. The value read back from those bits is the value that is written.

CnP, [0]

Common not Private. The possible values are:

- 0 CnP is not supported.
- 1 CnP is supported.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.


3.2.105 TTBR1_EL1, Translation Table Base Register 1, EL1

The TTBR1_EL1 holds the base address of translation table 1, and information about the memory it occupies. This is one of the translation tables for the stage 1 translation of memory accesses at ELO and EL1.

Bit field descriptions

TTBR1 EL1 is a 64-bit register.

Figure 3-88: TTBR1_EL1 bit assignments



ASID, [63:48]

An ASID for the translation table base address. The TCR_EL1.A1 field selects either TTBR0_EL1.ASID or TTBR1_EL1.ASID.

BADDR[47:x], [47:1]

Translation table base address, bits[47:x]. Bits [x-1:0] are **RESO**.

x is based on the value of TCR_EL1.TOSZ, the stage of translation, and the memory translation granule size.

For instructions on how to calculate it, see the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

The value of x determines the required alignment of the translation table, that must be aligned to 2^x bytes.

If bits [x-1:1] are not all zero, this is a misaligned Translation Table Base Address. Its effects are **CONSTRAINED UNPREDICTABLE**, where bits [x-1:1] are treated as if all the bits are zero. The value read back from those bits is the value that is written.

CnP, [0]

Common not Private. The possible values are:

- O CnP is not supported.
- 1 CnP is supported.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.106 TTBR1_EL2, Translation Table Base Register 1, EL2

TTBR1_EL2 has the same format and contents as TTBR1_EL1.

See 3.2.105 TTBR1 EL1, Translation Table Base Register 1, EL1 on page 236.

3.2.107 VDISR_EL2, Virtual Deferred Interrupt Status Register, EL2

The VDISR_EL2 records that a virtual SError interrupt has been consumed by an ESB instruction executed at Non-secure EL1.

Bit field descriptions

VDISR_EL2 is a 64-bit register, and is part of the *Reliability*, *Availability*, *Serviceability* (RAS) registers functional group.

Configurations

See 3.2.107.1 VDISR_EL2 at EL1 using AArch64 on page 237.


Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.107.1 VDISR_EL2 at EL1 using AArch64

VDISR_EL2 has a specific format when written at EL1.

The following figure shows the VDISR_EL2 bit assignments when written at EL1 using AArch64:

Figure 3-89: VDISR_EL2 at EL1 using AArch64

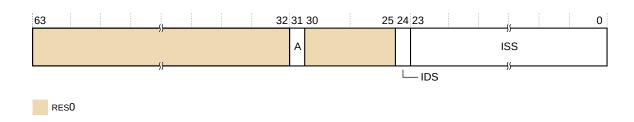

RESO, [63:32]

RESO Reserved.

A, [31]

Set to 1 when ESB defers an asynchronous SError interrupt.

RESO, [30:25]

RESO Reserved.

IDS, [24]

Contains the value from VSESR EL2.IDS.

ISS, [23:0]

Contains the value from VSESR_EL2, bits[23:0].

3.2.108 VSESR_EL2, Virtual SError Exception Syndrome Register

The VSESR_EL2 provides the syndrome value that is reported to software on taking a virtual SError interrupt exception.

Bit field descriptions


VSESR_EL2 is a 64-bit register, and is part of:

- The Exception and fault handling registers functional group.
- The Virtualization registers functional group.

If the virtual SError interrupt is taken to EL1, VSESR_EL2 provides the syndrome value that is reported in ESR EL1.

VSESR_EL2 bit assignments

Figure 3-90: VSESR_EL2 bit assignments



RESO, [63:25]

RESO Reserved.

IDS, [24]

Indicates whether the deferred SError interrupt was of an **IMPLEMENTATION DEFINED** type. See ESR EL1.IDS for a description of the functionality.

On taking a virtual SError interrupt to EL1 using AArch64 because HCR_EL2.VSE == 1, ESR EL1[24] is set to VSESR EL2.IDS.

ISS, [23:0]

Syndrome information. See ESR_EL1.ISS for a description of the functionality.

On taking a virtual SError interrupt to EL1 using AArch32 due to HCR_EL2.VSE == 1, ESR_EL1 [23:0] is set to VSESR_EL2.ISS.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.2.109 VTCR_EL2, Virtualization Translation Control Register, EL2

The VTCR_EL2 controls the translation table walks required for the stage 2 translation of memory accesses from Non-secure ELO and EL1.


It also holds Cacheability and Shareability information for the accesses.

Bit field descriptions

VTCR_EL2 is a 32-bit register, and is part of:

- The Virtualization registers functional group.
- The Virtual memory control registers functional group.

Figure 3-91: VTCR_EL2 bit assignments

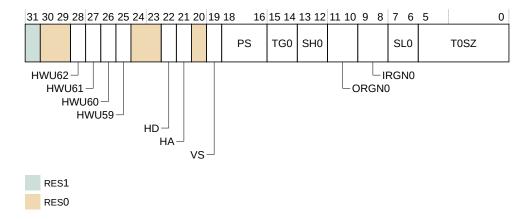



Bits[28:25] and bits[22:21], architecturally defined, are implemented in the core.

TG0, [15:14]

TTBRO EL2 granule size. The possible values are:

00 4KB.01 64KB.10 16KB.11 Reserved.

All other values are not supported.

Configurations

RW fields in this register reset to architecturally **UNKNOWN** values.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.


3.2.110 VTTBR_EL2, Virtualization Translation Table Base Register, EL2

VTTBR_EL2 holds the base address of the translation table for the stage 2 translation of memory accesses from Non-secure ELO and EL1.

Bit field descriptions

VTTBR_EL2 is a 64-bit register.

Figure 3-92: VTTBR_EL2 bit assignments



CnP, [0]

Common not Private. The possible values are:

O CnP is not supported.

1 CnP is supported.

Configurations

There are no configuration notes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

3.3 Error System registers

This chapter describes the error registers accessed by the AArch64 error registers.

3.3.1 Error System register summary

This section identifies the ERRO* core error record registers accessed by the AArch64 ERX* error registers.

For those registers that are not described in this chapter, see the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

The following table describes the architectural error record registers.

Table 3-55: Architectural error System register summary

| Register mnemonic | Size | Register name | Access aliases from AArch64 |
|----------------------|------|-----------------------------------------------------------|-----------------------------------------------------------------------------|
| ERROADDR | | 3.3.2 ERROADDR, Error Record Address Register on page 242 | 3.2.44 ERXADDR_EL1, Selected Error Record Address Register, EL1 on page 164 |
| ERROCTLR | | 3.3.3 ERROCTLR, Error Record Control Register on page 243 | 3.2.45 ERXCTLR_EL1, Selected Error Record Control Register, EL1 on page 164 |
| ERROFR | 64 | 3.3.4 ERROFR, Error Record Feature Register on page 245 | 3.2.46 ERXFR_EL1, Selected Error Record Feature Register, EL1 on page 164 |

| Register mnemonic | Size | Register name | Access aliases from AArch64 |
|-------------------|------|------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| ERROMISCO | 64 | 3.3.5 ERROMISCO, Error Record Miscellaneous Register 0 on page 247 | 3.2.47 ERXMISCO_EL1, Selected Error Record Miscellaneous Register 0, EL1 on page 164 |
| ERROMISC1 | 64 | 3.3.6 ERROMISC1, Error Record Miscellaneous Register 1 on page 250 | 3.2.48 ERXMISC1_EL1, Selected Error Record Miscellaneous Register 1, EL1 on page 165 |
| ERROSTATUS | 32 | 3.3.10 ERROSTATUS, Error Record Primary Status Register on page 254 | 3.2.52 ERXSTATUS_EL1, Selected Error Record Primary Status Register, EL1 on page 169 |

The following table describes the error record registers that are **IMPLEMENTATION DEFINED**.

Table 3-56: IMPLEMENTATION DEFINED error System register summary

| Register mnemonic | Size | Register name | Access aliases from AArch64 |
|----------------------|------|------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|
| ERROPFGCDN | 32 | 3.3.7 ERROPFGCDN, Error Pseudo Fault Generation Count Down Register on page 250 | 3.2.49 ERXPFGCDN_EL1, Selected Error Pseudo Fault Generation Count Down Register, EL1 on page 165 |
| ERROPFGCTL | 32 | 3.3.8 ERROPFGCTL, Error Pseudo Fault Generation Control Register on page 251 | 3.2.50 ERXPFGCTL_EL1, Selected Error Pseudo Fault Generation Control Register, EL1 on page 166 |
| ERROPFGF | 32 | 3.3.9 ERROPFGF, Error Pseudo Fault Generation Feature Register on page 252 | 3.2.51 ERXPFGF_EL1, Selected Pseudo Fault Generation Feature Register, EL1 on page 167 |


3.3.2 ERROADDR, Error Record Address Register

The ERROADDR stores the address that is associated to an error that is recorded.

Bit field descriptions

ERROADDR is a 64-bit register, and is part of the *Reliability*, *Availability*, *Serviceability* (RAS) registers functional group.

Figure 3-93: ERROADDR bit assignments

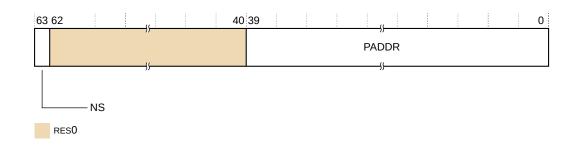

NS, [63]

Non-secure attribute. The possible values are:

- The physical address is Secure.
- 1 The physical address is Non-secure.

RESO, [62:40]

RESO Reserved.

PADDR, [39:0]

Physical address.

Configurations

ERROADDR resets to **UNKNOWN**.

When ERRSELR_EL1.SEL==0, this register is accessible from 3.2.44 ERXADDR_EL1, Selected Error Record Address Register, EL1 on page 164.

3.3.3 ERROCTLR, Error Record Control Register

The ERROCTLR contains enable bits for the node that writes to this record:


- Enabling error detection and correction.
- Enabling an error recovery interrupt.
- Enabling a fault handling interrupt.
- Enabling error recovery reporting as a read or write error response.

Bit field descriptions

ERROCTLR is a 64-bit register and is part of the *Reliability*, *Availability*, *Serviceability* (RAS) registers functional group.

ERROCTLR resets to CFI [8], FI [3], UI [2], and ED[0] are **UNKNOWN**. The rest of the register is **RESO**.

Figure 3-94: ERROCTLR bit assignments

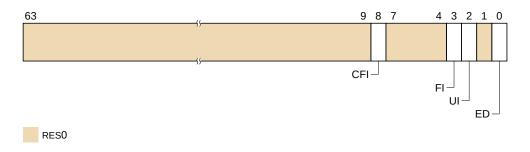

RESO, [63:9]

RESO Reserved.

CFI, [8]

Fault handling interrupt for corrected errors enable.

The fault handling interrupt is generated when one of the standard CE counters on ERROMISCO overflows and the overflow bit is set. The possible values are:

- 0 Fault handling interrupt not generated for corrected errors.
- 1 Fault handling interrupt generated for corrected errors.

The interrupt is generated even if the error status is overwritten because the error record already records a higher priority error.



This applies to both reads and writes.

RESO, [7:4]

RESO Reserved.

FI, [3]

Fault handling interrupt enable.

The fault handling interrupt is generated for all detected Deferred errors and Uncorrected errors. The possible values are:

- o Fault handling interrupt disabled.
- 1 Fault handling interrupt enabled.

UI, [2]

Uncorrected error recovery interrupt enable. When enabled, the error recovery interrupt is generated for all detected Uncorrected errors that are not deferred. The possible values are:

- 0 Error recovery interrupt disabled.
- 1 Error recovery interrupt enabled.



Applies to both reads and writes.

RESO, [1]

RESO Reserved.

ED, [0]

Error Detection and correction enable. In Lock-mode, this bit is **RESO**. In Split-mode, the possible values are:

0 Error detection and correction disabled.

1 Error detection and correction enabled.

Configurations

When ERRSELR_EL1.SEL==0, this register is accessible from 3.2.45 ERXCTLR_EL1, Selected Error Record Control Register, EL1 on page 164.

3.3.4 ERROFR, Error Record Feature Register


The ERROFR defines which of the common architecturally defined features are implemented and, of the implemented features, which are software programmable.

Bit field descriptions

ERROFR is a 64-bit register, and is part of the *Reliability*, *Availability*, *Serviceability* (RAS) registers functional group.

The register is read-only.

Figure 3-95: ERROFR bit assignments



RESO, [63:20]

RES0

Reserved.

CEO, [19:18]

Corrected Error Overwrite. The value is:

Counts CE if a counter is implemented and keeps the previous error status. If the counter overflows, ERROSTATUS.OF is set to 1.

DUI, [17:16]

Error recovery interrupt for deferred errors. The value is:

The core does not support this feature.

RP, [15]

Repeat counter. The value is:

A first repeat counter and a second other counter are implemented. The repeat counter is the same size as the primary error counter.

CEC, [14:12]

Corrected Error Counter. The value is:

The node implements an 8-bit standard CE counter in ERROMISCO[39:32].

CFI, [11:10]

Fault handling interrupt for corrected errors. The value is:

The node implements a control for enabling fault handling interrupts on corrected errors.

UE, [9:8]

In-band uncorrected error reporting. The value is:

The node implements in-band uncorrected error reporting, that is External aborts.

FI, [7:6]

Fault handling interrupt. The value is:

The node implements a fault handling interrupt and implements controls for enabling and disabling.

UI, [5:4]

Error recovery interrupt for uncorrected errors. The value is:

The node implements an error recovery interrupt and implements controls for enabling and disabling.

RESO, [3:2]

RES0

Reserved.

ED, [1:0]

Frror detection and correction.

In Lock-mode, the value is:

01 Error detection and correction is always enabled for the node.

In Split-mode, the value is:

The node implements controls for enabling or disabling error detection and correction.

Configurations

 ERROFR is accessible from the following registers when ERRSELR_EL1.SEL==0: 3.2.46 ERXFR EL1, Selected Error Record Feature Register, EL1 on page 164.


3.3.5 ERROMISCO, Error Record Miscellaneous Register 0

The ERROMISCO is an error syndrome register. It contains corrected error counters, information to identify where the error was detected, and other state information not present in the corresponding status and address error record registers.

Bit field descriptions

ERROMISCO is a 64-bit register, and is part of the *Reliability*, *Availability*, *Serviceability* (RAS) registers functional group.

Figure 3-96: ERROMISCO bit assignments



RESO, [63:48]

Reserved. **RESO**.

OFO, [47]

Sticky overflow bit, other. The possible values of this bit are:

- Other counter has not overflowed.
- 1 Other counter has overflowed.

The fault handling interrupt is generated when the corrected fault handling interrupt is enabled and either overflow bit is set to 1.

CECO, [46:40]

Corrected error count, other. Incremented for each Corrected error that does not match the recorded syndrome.

This field resets to an **IMPLEMENTATION DEFINED** which might be **UNKNOWN** on a Cold reset. If the reset value is **UNKNOWN**, then the value of this field remains **UNKNOWN** until software initializes it.

OFR, [39]

Sticky overflow bit, repeat. The possible values of this bit are:

o Repeat counter has not overflowed.

1 Repeat counter has overflowed.

The fault handling interrupt is generated when the corrected fault handling interrupt is enabled and either overflow bit is set to 1.

CECR, [38:32]

Corrected error count, repeat. Incremented for the first recorded error, which also records other syndromes, and then again for each Corrected error that matches the recorded syndrome.

This field resets to an **IMPLEMENTATION DEFINED** which might be **UNKNOWN** on a Cold reset. If the reset value is **UNKNOWN**, then the value of this field remains **UNKNOWN** until software initializes it.

WAY, [31:28]

The encoding depends on the unit from which the error being recorded was detected. The possible values are:

| L1 | Indicates which Tag RAM way or data RAM way detected the error. |
|-------------|------------------------------------------------------------------------|
| Data | Upper 2 bits are unused. |
| Cache | |
| L2 | Indicates which RAM has an error. The possible values are 0 (RAM 1) to |
| TLB | 9 (RAM 10). |
| L1 | Indicates which way has the error. Upper 2 bits are unused. |
| Instruction | |
| Cache | |

RESO, [27:26]

Reserved, RESO.

SUBBANK, [25]

The encoding depends on the unit from which the error being recorded was detected. The possible values are:

L1 Indicates which subbank has the error, valid for instruction data cache. Instruction For Tag errors, this field is zero.

Cache

BANK, [24:23]

The encoding depends on the unit from which the error being recorded was detected. The possible values are:

| L2 | Indicates which L2 bank detected the error. Upper 1 bit is unused. |
|-------------|---------------------------------------------------------------------------|
| cache | |
| L1 | Indicates which bank has the error, valid for instruction data cache. For |
| Instruction | Tag errors, this field is zero. |
| Cache | |

SUBARRAY, [22:19]

The encoding depends on the unit from which the error being recorded was detected. The possible values are:

| L2 | Indicates which L2 Tag way or data doubleword detected the error. |
|-------|---------------------------------------------------------------------|
| Cache | Upper 1 bit is unused. |
| L1 | Indicates for L1 Data RAM which word had the error detected. For L1 |
| Data | Tag RAMs which bank had the error (0b0000: bank0, 0b0001: bank1) |
| Cache | |

INDEX, [18:6]

The encoding depends on the unit from which the error being recorded was detected. The possible values are:

| ates which index detected the error. Upper bits of the index are |
|--------------------------------------------------------------------|
| ed depending on the cache size. |
| ates which index detected the error. Upper bits of the index are |
| ed depending on the cache size. |
| |
| of TLB RAM. Upper 4 bits are unused. |
| |
| ates which index has the error. Upper bits of the index are unused |
| nding on the cache size. |
| |
| |

ARRAY, [5:4]

The encoding depends on the unit from which the error being recorded was detected. The possible values are:

| L2 | Indicates which array has the error. The possible values are: | |
|-------------|----------------------------------------------------------------------|----------------------|
| Cache | | |
| | 0b00 | L2 Tag RAM. |
| | 0b01 | L2 Data RAM. |
| | 0b10 | TQ Data RAM. |
| | 0b11 | CHI Slave Error. |
| L1 | Indicates which array detected the error. The possible values are: | |
| Data | | |
| Cache | 0b00 | LSO copy of Tag RAM. |
| | 0b01 | LS1 copy of Tag RAM. |
| | 0b10 | LS Data RAM. |
| L1 | Indicates which array that detected the error, Data Array has higher | |
| Instruction | priority. The possible values are: | |
| Cache | | |
| | 0b0 | Tag. |
| | 0b1 | Data. |

UNIT, [3:0]

Indicates the unit which detected the error. The possible values are:

| 0b1000 | L2 Cache. |
|--------|-----------------------|
| 0b0100 | L1 Data Cache. |
| 0b0010 | L2 TLB. |
| 0b0001 | L1 Instruction Cache. |

Configurations

ERROMISCO resets to [63:32] is 0x00000000, [31:0] is **UNKNOWN**.

This register is accessible from the following registers when ERRSELR_EL1.SEL==0:

• 3.2.47 ERXMISCO_EL1, Selected Error Record Miscellaneous Register 0, EL1 on page 164.

3.3.6 ERROMISC1, Error Record Miscellaneous Register 1

This register is unused in the Cortex®-A76AE core and marked as **RESO**.

Configurations

When ERRSELR_EL1.SEL==0, ERROMISC1 is accessible from 3.2.48 ERXMISC1_EL1, Selected Error Record Miscellaneous Register 1, EL1 on page 165.


3.3.7 ERROPFGCDN, Error Pseudo Fault Generation Count Down Register

ERROPFGCDN is the Cortex®-A76AE node register that generates one of the errors that are enabled in the corresponding ERROPFGCTL register.

Bit field descriptions

ERROPFGCDN is a 32-bit register and is RW.

Figure 3-97: ERROPFGCDN bit assignments



CDN, [31:0]

Count Down value. The reset value of the Error Generation Counter is used for the countdown.

Configurations

There are no configuration options.

ERROPFGCDN resets to **UNKNOWN**.

When ERRSELR_EL1.SEL==0, ERROPFGCDN is accessible from 3.2.49 ERXPFGCDN_EL1, Selected Error Pseudo Fault Generation Count Down Register, EL1 on page 165.

3.3.8 ERROPFGCTL, Error Pseudo Fault Generation Control Register

The ERROPFGCTL is the Cortex®-A76AE node register that enables controlled fault generation.

Bit field descriptions

ERROPFGCTL is a 32-bit read/write register.

Figure 3-98: ERROPFGCTL bit assignments



CDNEN, [31]

Count down enable. This bit controls transfers from the value that is held in the ERROPFGCDN into the Error Generation Counter and enables this counter to start counting down. The possible values are:

- o The Error Generation Counter is disabled.
- The value that is held in the ERROPFGCDN register is transferred into the Error Generation Counter. The Error Generation Counter counts down.

R, [30]

Restartable bit. When it reaches 0, the Error Generation Counter restarts from the ERROPFGCDN value or stops. The possible values are:

- When it reaches 0, the counter stops.
- When it reaches 0, the counter reloads the value that is stored in ERROPFGCDN and starts counting down again.

RESO, [29:7]

Reserved, RESO.

CE, [6]

Corrected error generation enable. The possible values are:

No corrected error is generated.

A corrected error might be generated when the Error Generation Counter is triggered.

DE, [5]

Deferred Error generation enable. The possible values are:

- o No deferred error is generated.
- A deferred error might be generated when the Error Generation Counter is triggered.

This bit is **RESO** if the node does not support this control.

This bit resets to an architecturally **UNKNOWN** value on a Cold reset. This bit is preserved on an Error Recovery reset.

RESO, [4:2]

Reserved, RESO.

UC, [1]

Uncontainable error generation enable. The possible values are:

- No uncontainable error is generated.
- An uncontainable error might be generated when the Error Generation Counter is triggered.

RESO, [0]

Reserved, **RESO**.

Configurations

There are no configuration notes.

ERROPFGCTL resets to 0x00000000.

ERROPFGCTL is accessible from the following registers when ERRSELR EL1.SEL==0:

• 3.2.50 ERXPFGCTL_EL1, Selected Error Pseudo Fault Generation Control Register, EL1 on page 166.


3.3.9 ERROPFGF, Error Pseudo Fault Generation Feature Register

The ERROPFGF is the Cortex®-A76AE node register that defines which fault generation features are implemented.

Bit field descriptions

ERROPFGF is a 32-bit register and is RO.

Figure 3-99: ERROPFGF bit assignments

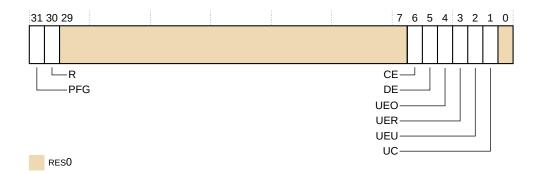

PFG, [31]

Pseudo Fault Generation. The value is:

1 The node implements a fault injection mechanism.

R, [30]

Restartable bit. When it reaches zero, the Error Generation Counter restarts from the ERROPFGCDN value or stops. The value is:

1 This feature is controllable.

RESO, [29:7]

RESO Reserved.

CE, [6]

Corrected Error generation. The value is:

1 This feature is controllable.

DE, [5]

Deferred Error generation. The value is:

1 This feature is controllable.

UEO, [4]

Latent or Restartable Error generation. The value is:

The node does not support this feature.

UER, [3]

Signaled or Recoverable Error generation. The value is:

The node does not support this feature.

UEU, [2]

Unrecoverable Error generation. The value is:

The node does not support this feature.

UC, [1]

Uncontainable Error generation. The value is:

1 This feature is controllable.

Configurations

There are no configuration notes.

ERROPFGF resets to 0xC0000062.

When ERRSELR_EL1.SEL==0, ERROPFGF is accessible from 3.2.51 ERXPFGF_EL1, Selected Pseudo Fault Generation Feature Register, EL1 on page 167.

3.3.10 ERROSTATUS, Error Record Primary Status Register

The ERROSTATUS contains information about the error record.

The register indicates:

- Whether any error has been detected.
- Whether any detected error was not corrected and returned to a master.
- Whether any detected error was not corrected and deferred.
- Whether a second error of the same type was detected before software handled the first error.
- Whether any error has been reported.
- Whether the other error record registers contain valid information.




In Lock-mode, this register is RAZ.

Bit field descriptions

ERROSTATUS is a 32-bit register.

Figure 3-100: ERROSTATUS bit assignments

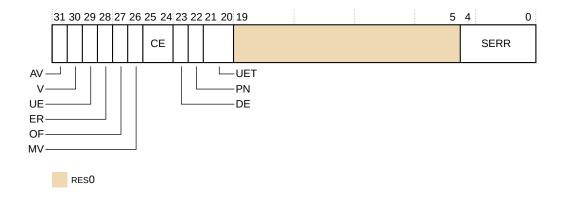

AV, [31]

Address Valid. The possible values are:

- o ERROADDR is not valid.
- ERROADDR contains an address that is associated with the highest priority error recorded by this record.

V, [30]

Status Register valid. The possible values are:

- o ERROSTATUS is not valid.
- 1 ERROSTATUS is valid. At least one error has been recorded.

UE, [29]

Uncorrected error. The possible values are:

- No error that could not be corrected or deferred has been detected.
- At least one error that could not be corrected or deferred has been detected. If error recovery interrupts are enabled, then the interrupt signal is asserted until this bit is cleared.

ER, [28]

Error reported. The possible values are:

- No External abort has been reported.
- The node has reported an External abort to the master that is in access or making a transaction.

OF, [27]

Overflow. The possible values are:

• If UE == 1, then no error status for an Uncorrected error has been discarded.

- If UE == 0 and DE == 1, then no error status for a Deferred error has been discarded.
- If UE == 0, DE == 0, and CE !== 0b00, then: The corrected error counter has not overflowed.
- More than one error has occurred and so details of the other error have been discarded.

MV, [26]

Miscellaneous Registers Valid. The possible values are:

- o ERROMISCO and ERROMISC1 are not valid.
- This bit indicates that ERROMISCO contains additional information about any error that is recorded by this record.

CE, [25:24]

Corrected error. The possible values are:

0b00 No corrected error recorded.

Ob10 At least one corrected error recorded.

DE, [23]

Deferred error. The possible values are:

- No errors were deferred.
- At least one error was not corrected and deferred by poisoning.

PN, [22]

Poison. The value is:

The Cortex®-A76AE core cannot distinguish a poisoned value from a corrupted value.

UET, [21:20]

Uncorrected Error Type. The value is:

0b00 Uncontainable.

RESO, [19:5]

RESO.

Reserved.

SERR, [4:0]

Primary error code. The possible values are:

| 0x0 | No error. |
|-----|--------------------------------------|
| 0x1 | Errors due to fault injection. |
| 0x2 | ECC error from internal data buffer. |
| 0x6 | ECC error on cache data RAM. |

| 0x7 | ECC error on cache tag or dirty RAM. |
|------|-----------------------------------------------------------------------|
| 0x8 | Parity error on TLB data RAM. |
| 0x12 | Error response for a cache copyback. |
| 0x15 | Deferred error from slave not supported at the consumer. For example, |
| | poisoned data received from a slave by a master that cannot defer the |
| | error further. |

Configurations

There are no configuration notes.

ERROSTATUS resets to 0x00000000.

ERROSTATUS is accessible from the following registers when ERRSELR EL1.SEL==0:

 3.2.52 ERXSTATUS_EL1, Selected Error Record Primary Status Register, EL1 on page 169.

3.4 GIC registers

This chapter describes the GIC registers.

3.4.1 CPU interface registers

Each CPU interface block provides the interface for the Cortex®-A76AE core that interfaces with a GIC distributor within the system.

The Cortex®-A76AE core only supports System register access to the GIC CPU interface registers. The following table lists the three types of GIC CPU interface System registers supported in the Cortex®-A76AE core.

Table 3-57: GIC CPU interface System register types supported in the Cortex®-A76AE core.

| Register prefix Register type | | | |
|--------------------------------------------------|---------------------------------------------|--|--|
| ICC Physical GIC CPU interface System registers. | | | |
| ICV | Virtual GIC CPU interface System registers. | | |
| ICH | Virtual interface control System registers. | | |

Access to virtual GIC CPU interface System registers is only possible at Non-secure EL1.

Access to ICC registers or the equivalent ICV registers is determined by HCR_EL2. See 3.2.57 HCR_EL2, Hypervisor Configuration Register, EL2 on page 173.

For more information on the CPU interface, see the Arm® Generic Interrupt Controller Architecture Specification, GIC architecture version 3 and version 4.

3.4.2 AArch64 physical GIC CPU interface System register summary

The following table lists the AArch64 physical GIC CPU interface System registers that have **IMPLEMENTATION DEFINED** bits.

See the Arm® Generic Interrupt Controller Architecture Specification, GIC architecture version 3 and version 4 for more information and a complete list of AArch64 physical GIC CPU interface System registers.

Table 3-58: AArch64 physical GIC CPU interface System register summary

| Name | Op0 | Op1 | CRn | CRm | Op2 | Туре | Description |
|---------------|-----|-----|-----|-----|-----|------|-------------------------------------------------------------------------------------------------|
| ICC_APORO_EL1 | 3 | 0 | 12 | 8 | 4 | RW | 3.4.3 ICC_APORO_EL1, Interrupt Controller Active Priorities Group 0 Register 0, EL1 on page 258 |
| ICC_AP1R0_EL1 | 3 | 0 | 12 | 9 | 0 | RW | 3.4.4 ICC_AP1R0_EL1, Interrupt Controller Active Priorities Group 1 Register 0 EL1 on page 259 |
| ICC_BPR0_EL1 | 3 | 0 | 12 | 8 | 3 | RW | 3.4.5 ICC_BPR0_EL1, Interrupt Controller Binary Point Register 0, EL1 on page 259 |
| ICC_BPR1_EL1 | 3 | 0 | 12 | 12 | 3 | RW | 3.4.6 ICC_BPR1_EL1, Interrupt Controller Binary Point Register 1, EL1 on page 260 |
| ICC_CTLR_EL1 | 3 | 0 | 12 | 12 | 4 | RW | 3.4.7 ICC_CTLR_EL1, Interrupt Controller Control Register, EL1 on page 261 |
| ICC_CTLR_EL3 | 3 | 6 | 12 | 12 | 4 | RW | 3.4.8 ICC_CTLR_EL3, Interrupt Controller Control Register, EL3 on page 263 |
| ICC_SRE_EL1 | 3 | 0 | 12 | 12 | 5 | RW | 3.4.9 ICC_SRE_EL1, Interrupt Controller System Register Enable Register, EL1 on page 265 |
| ICC_SRE_EL2 | 3 | 4 | 12 | 9 | 5 | RW | 3.4.10 ICC_SRE_EL2, Interrupt Controller System Register Enable register, EL2 on page 267 |
| ICC_SRE_EL3 | 3 | 6 | 12 | 12 | 5 | RW | 3.4.11 ICC_SRE_EL3, Interrupt Controller System Register Enable register, EL3 on page 268 |

3.4.3 ICC_APORO_EL1, Interrupt Controller Active Priorities Group 0 Register 0, EL1

The ICC APORO EL1 provides information about Group 0 active priorities.

Bit descriptions

This register is a 32-bit register and is part of:

- The GIC System registers functional group.
- The GIC control registers functional group.

The core implements 5 bits of priority with 32 priority levels, corresponding to the 32 bits [31:0] of the register. The possible values for each bit are:

 0×0000000000 interrupt active. This is the reset value. 0×000000000 terrupt active for priority 0×0 . 0×0000000000 terrupt active for priority 0×8 .

...

0x80000000 terrupt active for priority 0xF8.

Details that are not provided in this description are architecturally defined. See the Arm® Generic Interrupt Controller Architecture Specification, GIC architecture version 3 and version 4.

3.4.4 ICC_AP1R0_EL1, Interrupt Controller Active Priorities Group 1 Register 0 EL1

The ICC AP1R0 EL1 provides information about Group 1 active priorities.

Bit descriptions

This register is a 32-bit register and is part of:

- The GIC System registers functional group.
- The GIC control registers functional group.

The core implements 5 bits of priority with 32 priority levels, corresponding to the 32 bits [31:0] of the register. The possible values for each bit are:

0x0000000Mo interrupt active. This is the reset value. 0x0000000Interrupt active for priority 0x0.

 0×000000000 atterrupt active for priority 0×8 .

0x80000000 terrupt active for priority 0xF8.

Details that are not provided in this description are architecturally defined. See the Arm® Generic Interrupt Controller Architecture Specification, GIC architecture version 3 and version 4.

3.4.5 ICC_BPR0_EL1, Interrupt Controller Binary Point Register 0, EL1


ICC_BPRO_EL1 defines the point at which the priority value fields split into two parts, the group priority field and the subpriority field. The group priority field determines Group 0 interrupt preemption.

Bit field descriptions

ICC BPRO EL1 is a 32-bit register and is part of:

- The GIC System registers functional group.
- The GIC control registers functional group.

Figure 3-101: ICC_BPR0_EL1 bit assignments

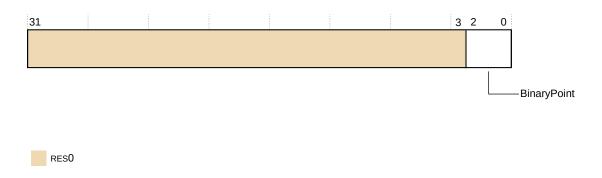

RESO, [31:3]

RESO Reserved.

BinaryPoint, [2:0]

The value of this field controls how the 8-bit interrupt priority field is split into a group priority field, that determines interrupt preemption, and a subpriority field. The minimum value that is implemented is:

0x2

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Generic Interrupt Controller Architecture Specification, GIC architecture version 3 and version 4.

3.4.6 ICC_BPR1_EL1, Interrupt Controller Binary Point Register 1, EL1


ICC_BPR1_EL1 defines the point at which the priority value fields split into two parts, the group priority field and the subpriority field. The group priority field determines Group 1 interrupt preemption.

Bit field descriptions

ICC_BPR1_EL1 is a 32-bit register and is part of:

- The GIC System registers functional group.
- The GIC control registers functional group.

Figure 3-102: ICC_BPR1_EL1 bit assignments

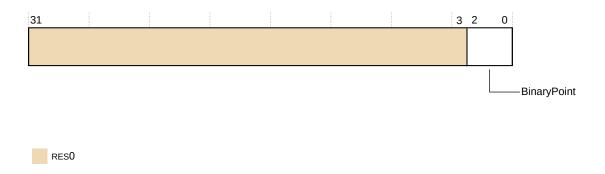

RESO, [31:3]

RESO Reserved.

BinaryPoint, [2:0]

The value of this field controls how the 8-bit interrupt priority field is split into a group priority field, that determines interrupt preemption, and a subpriority field.

The minimum value that is implemented of ICC_BPR1_EL1 Secure register is 0x2.

The minimum value that is implemented of ICC_BPR1_EL1 Non-secure register is 0x3.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Generic Interrupt Controller Architecture Specification, GIC architecture version 3 and version 4.

3.4.7 ICC_CTLR_EL1, Interrupt Controller Control Register, EL1


ICC_CTLR_EL1 controls aspects of the behavior of the GIC CPU interface and provides information about the features implemented.

Bit field descriptions

ICC_CTLR_EL1 is a 32-bit register and is part of:

- The GIC System registers functional group.
- The GIC control registers functional group.

Figure 3-103: ICC_CTLR_EL1 bit assignments

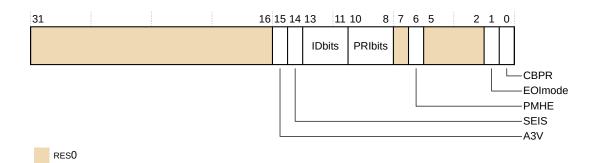

RESO, [31:16]

RESO Reserved.

A3V, [15]

Affinity 3 Valid. The value is:

The CPU interface logic supports nonzero values of Affinity 3 in SGI generation System registers.

SEIS, [14]

SEI Support. The value is:

The CPU interface logic does not support local generation of SEIs.

IDbits, [13:11]

Identifier bits. The value is:

The number of physical interrupt identifier bits supported is 16 bits.

This field is an alias of ICC_CTLR_EL3.IDbits.

PRIbits, [10:8]

Priority bits. The value is:

0x4 The core supports 32 levels of physical priority with 5 priority bits.

RESO, [7]

RESO Reserved.

PMHE, [6]

Priority Mask Hint Enable. This bit is read-only and is an alias of ICC_CTLR_EL3.PMHE. The possible values are:

O Disables use of ICC_PMR as a hint for interrupt distribution.

1 Enables use of ICC PMR as a hint for interrupt distribution.

RESO, [5:2]

RESO Reserved.

EOlmode, [1]

End of interrupt mode for the current Security state. The possible values are:

- O ICC_EOIRO and ICC_EOIR1 provide both priority drop and interrupt deactivation functionality. Accesses to ICC_DIR are **UNPREDICTABLE**.

 ICC EOIRO and ICC EOIR1 provide priority drop functionality only.
 - ICC DIR provides interrupt deactivation functionality.

CBPR, [0]

Common Binary Point Register. Control whether the same register is used for interrupt preemption of both Group 0 and Group 1 interrupt. The possible values are:

- 0 ICC_BPRO determines the preemption group for Group 0 interrupts.
 - ICC_BPR1 determines the preemption group for Group 1 interrupts.
- 1 ICC_BPRO determines the preemption group for Group 0 and Group 1 interrupts.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Generic Interrupt Controller Architecture Specification, GIC architecture version 3 and version 4.

3.4.8 ICC_CTLR_EL3, Interrupt Controller Control Register, EL3


ICC_CTLR_EL3 controls aspects of the behavior of the GIC CPU interface and provides information about the features implemented.

Bit field descriptions

ICC CTLR EL3 is a 32-bit register and is part of:

- The GIC System registers functional group.
- The Security registers functional group.
- The GIC control registers functional group.

Figure 3-104: ICC_CTLR_EL3 bit assignments

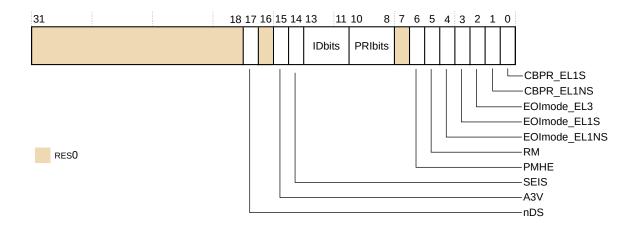

RESO, [31:18]

RESO Reserved.

nDS, [17]

Disable Security not supported. Read-only and writes are **IGNORED**. The value is:

The CPU interface logic does not support disabling of security, and requires that security is not disabled.

RES0, [16]

RESO Reserved.

A3V, [15]

Affinity 3 Valid. This bit is RAO/WI.

SEIS, [14]

SEI Support. The value is:

The CPU interface logic does not support generation of SEIs.

IDbits, [13:11]

Identifier bits. The value is:

0x0 The number of physical interrupt identifier bits supported is 16 bits.

This field is an alias of ICC_CTLR_EL3.IDbits.

PRIbits, [10:8]

Priority bits. The value is:

0x4 The core supports 32 levels of physical priority with 5 priority bits.

RES0, [7]

Reserved, RESO.

PMHE, [6]

Priority Mask Hint Enable. The possible values are:

- O Disables use of ICC PMR as a hint for interrupt distribution.
- 1 Enables use of ICC_PMR as a hint for interrupt distribution.

RM, [5]

Routing Modifier. This bit is RAZ/WI.

EOImode_EL1NS, [4]

EOI mode for interrupts handled at Non-secure EL1 and EL2.

Controls whether a write to an End of Interrupt register also deactivates the interrupt.

EOImode_EL1S, [3]

EOI mode for interrupts handled at Secure EL1.

Controls whether a write to an End of Interrupt register also deactivates the interrupt.

EOImode_EL3, [2]

EOI mode for interrupts handled at EL3.

Controls whether a write to an End of Interrupt register also deactivates the interrupt.

CBPR_EL1NS, [1]

Common Binary Point Register, EL1 Non-secure.

Control whether the same register is used for interrupt preemption of both Group 0 and Group 1 Non-secure interrupts at EL1 and EL2.

CBPR_EL1S, [0]

Common Binary Point Register, EL1 Secure.

Control whether the same register is used for interrupt preemption of both Group 0 and Group 1 Secure interrupt at EL1.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Generic Interrupt Controller Architecture Specification, GIC architecture version 3 and version 4.

3.4.9 ICC_SRE_EL1, Interrupt Controller System Register Enable Register, EL1


ICC_SRE_EL1 controls whether the System register interface or the memory-mapped interface to the GIC CPU interface is used for EL0 and EL1.

Bit field descriptions

ICC_SRE_EL1 is a 32-bit register and is part of:

- The GIC System registers functional group.
- The GIC control registers functional group.

Figure 3-105: ICC_SRE_EL1 bit assignments

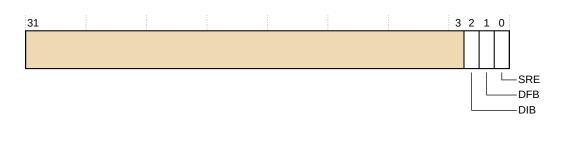

RESO, [31:3]

RES0

RESO Reserved.

DIB, [2]

Disable IRQ bypass. The possible values are:

0x0 IRQ bypass enabled.0x1 IRQ bypass disabled.

This bit is an alias of ICC SRE EL3.DIB

DFB, [1]

Disable FIQ bypass. The possible values are:

0x0 FIQ bypass enabled.0x1 FIQ bypass disabled.

This bit is an alias of ICC_SRE_EL3.DFB

SRE, [0]

System Register Enable. The value is:

0x1 The System register interface for the current Security state is enabled.

This bit is RAO/WI. The core only supports a System register interface to the GIC CPU interface.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Generic Interrupt Controller Architecture Specification, GIC architecture version 3 and version 4.

3.4.10 ICC_SRE_EL2, Interrupt Controller System Register Enable register, EL2


ICC_SRE_EL2 controls whether the System register interface or the memory-mapped interface to the GIC CPU interface is used for EL2.

Bit field descriptions

ICC_SRE_EL2 is a 32-bit register and is part of:

- The GIC System registers functional group.
- The Virtualization registers functional group.
- The GIC control registers functional group.

Figure 3-106: ICC_SRE_EL2 bit assignments

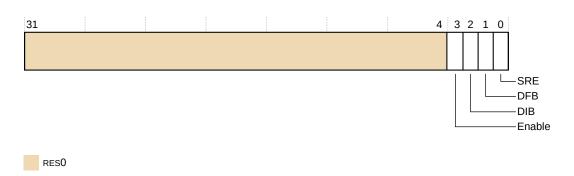

RESO, [31:4]

RESO Reserved.

Enable, [3]

Enables lower Exception level access to ICC_SRE_EL1. The value is:

0x1 Non-secure EL1 accesses to ICC SRE EL1 do not trap to EL2.

This bit is RAO/WI.

DIB, [2]

Disable IRQ bypass. The possible values are:

0x0 IRQ bypass enabled.

0x1 IRQ bypass disabled.

This bit is an alias of ICC_SRE_EL3.DIB

DFB, [1]

Disable FIQ bypass. The possible values are:

0x0 FIQ bypass enabled.0x1 FIQ bypass disabled.

This bit is an alias of ICC SRE EL3.DFB

SRE, [0]

System Register Enable. The value is:

0x1 The System register interface for the current Security state is enabled.

This bit is RAO/WI. The core only supports a System register interface to the GIC CPU interface.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Generic Interrupt Controller Architecture Specification, GIC architecture version 3 and version 4.

3.4.11 ICC_SRE_EL3, Interrupt Controller System Register Enable register, EL3


ICC_SRE_EL3 controls whether the System register interface or the memory-mapped interface to the GIC CPU interface is used for EL3.

Bit field descriptions

ICC SRE EL3 is a 32-bit register and is part of:

- The GIC System registers functional group.
- The Security registers functional group.
- The GIC control registers functional group.

Figure 3-107: ICC_SRE_EL3 bit assignments

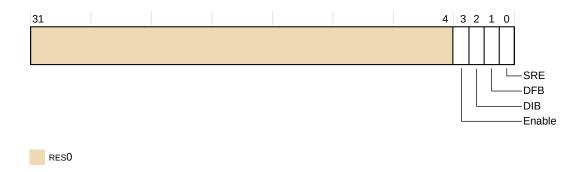

RESO, [31:4]

RESO Reserved.

Enable, [3]

Enables lower Exception level access to ICC_SRE_EL1 and ICC_SRE_EL2. The value is:

- Secure EL1 accesses to Secure ICC_SRE_EL1 do not trap to EL3.
 - EL2 accesses to Non-secure ICC_SRE_EL1 and ICC_SRE_EL2 do not trap to EL3.
 - Non-secure EL1 accesses to ICC_SRE_EL1 do not trap to EL3.

This bit is RAO/WI.

DIB, [2]

Disable IRQ bypass. The possible values are:

- 0 IRQ bypass enabled.
- 1 IRQ bypass disabled.

DFB, [1]

Disable FIQ bypass. The possible values are:

- O FIQ bypass enabled.
- 1 FIQ bypass disabled.

SRE, [0]

System Register Enable. The value is:

The System register interface for the current Security state is enabled.

This bit is RAO/WI. The core only supports a System register interface to the GIC CPU interface.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Generic Interrupt Controller Architecture Specification, GIC architecture version 3 and version 4.

3.4.12 AArch64 virtual GIC CPU interface register summary

The following table describes the AArch64 virtual GIC CPU interface System registers that have **IMPLEMENTATION DEFINED** bits.

See the Arm® Generic Interrupt Controller Architecture Specification, GIC architecture version 3 and version 4 for more information and a complete list of AArch64 virtual GIC CPU interface System registers.

Table 3-59: AArch64 virtual GIC CPU interface register summary

| Name | Op0 | Op1 | CRn | CRm | Op2 | Type Description | |
|---------------|-----|-----|-----|-----|-----|------------------|----------------------------------------------------------------------------------------------------------|
| ICV_APORO_EL1 | 3 | 0 | 12 | 8 | 4 | RW | 3.4.13 ICV_APORO_EL1, Interrupt Controller Virtual Active Priorities Group 0 Register 0, EL1 on page 270 |
| ICV_AP1R0_EL1 | 3 | 0 | 12 | 9 | 0 | RW | 3.4.14 ICV_AP1R0_EL1, Interrupt Controller Virtual Active Priorities Group 1 Register 0, EL1 on page 270 |
| ICV_BPR0_EL1 | 3 | 0 | 12 | 8 | 3 | RW | 3.4.15 ICV_BPRO_EL1, Interrupt Controller Virtual Binary Point Register 0, EL1 on page 271 |
| ICV_BPR1_EL1 | 3 | 0 | 12 | 12 | 3 | RW | 3.4.16 ICV_BPR1_EL1, Interrupt Controller Virtual Binary Point Register 1, EL1 on page 272 |
| ICV_CTLR_EL1 | 3 | 0 | 12 | 12 | 4 | RW | 3.4.17 ICV_CTLR_EL1, Interrupt Controller Virtual Control Register, EL1 on page 273 |

3.4.13 ICV_AP0R0_EL1, Interrupt Controller Virtual Active Priorities Group 0 Register 0, EL1

The ICV_APORO_EL1 register provides information about virtual Group 0 active priorities.

Bit descriptions

This register is a 32-bit register and is part of the virtual GIC System registers functional group.

The core implements 5 bits of priority with 32 priority levels, corresponding to the 32 bits [31:0] of the register. The possible values for each bit are:

0x000000Mo interrupt active. This is the reset value.

 0×00000000 therrupt active for priority 0×0 .

 0×000000000 deterrupt active for priority 0×8 .

...

0x800000000terrupt active for priority 0xF8.

Details that are not provided in this description are architecturally defined. See the Arm® Generic Interrupt Controller Architecture Specification, GIC architecture version 3 and version 4.

3.4.14 ICV_AP1R0_EL1, Interrupt Controller Virtual Active Priorities Group 1 Register 0, EL1

The ICV AP1RO EL1 register provides information about virtual Group 1 active priorities.

Bit descriptions

This register is a 32-bit register and is part of the virtual GIC System registers functional group.

The core implements 5 bits of priority with 32 priority levels, corresponding to the 32 bits [31:0] of the register. The possible values for each bit are:

0x00000000 interrupt active. This is the reset value.

 0×00000000 interrupt active for priority 0×0 .

0x00000000 aterrupt active for priority 0x8.

0x80000000 terrupt active for priority 0xF8.

Details that are not provided in this description are architecturally defined. See the Arm® Generic Interrupt Controller Architecture Specification, GIC architecture version 3 and version 4.


3.4.15 ICV_BPR0_EL1, Interrupt Controller Virtual Binary Point Register 0, EL1

ICV_BPRO_EL1 defines the point at which the priority value fields split into two parts, the group priority field and the subpriority field. The group priority field determines virtual Group 0 interrupt preemption.

Bit field descriptions

ICC_BPRO_EL1 is a 32-bit register and is part of the virtual GIC System registers functional group.

Figure 3-108: ICV_BPR0_EL1 bit assignments

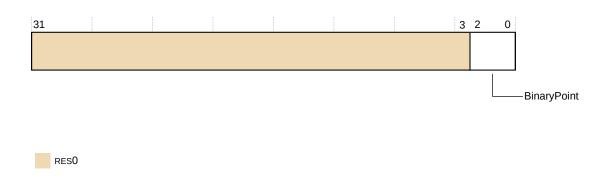

RESO, [31:3]

Reserved, **RESO**.

BinaryPoint, [2:0]

The value of this field controls how the 8-bit interrupt priority field is split into a group priority field, that determines interrupt preemption, and a subpriority field. The minimum value that is implemented is:

0x2

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Generic Interrupt Controller Architecture Specification, GIC architecture version 3 and version 4.


3.4.16 ICV_BPR1_EL1, Interrupt Controller Virtual Binary Point Register 1, EL1

ICV_BPR1_EL1 defines the point at which the priority value fields split into two parts, the group priority field and the subpriority field. The group priority field determines virtual Group 1 interrupt preemption.

Bit field descriptions

ICV_BPR1_EL1 is a 32-bit register and is part of the virtual GIC System registers functional group.

Figure 3-109: ICV_BPR1_EL1 bit assignments

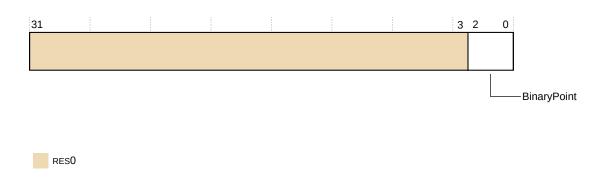

RESO, [31:3]

RESO Reserved.

BinaryPoint, [2:0]

The value of this field controls how the 8-bit interrupt priority field is split into a group priority field, that determines interrupt preemption, and a subpriority field.

The minimum value that is implemented of ICV_BPR1_EL1 Secure register is 0x2.

The minimum value that is implemented of ICV_BPR1_EL1 Non-secure register is 0x3.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Generic Interrupt Controller Architecture Specification, GIC architecture version 3 and version 4.


3.4.17 ICV_CTLR_EL1, Interrupt Controller Virtual Control Register, EL1

ICV_CTLR_EL1 controls aspects of the behavior of the GIC virtual CPU interface and provides information about the features implemented.

Bit field descriptions

ICV_CTLR_EL1 is a 32-bit register and is part of the virtual GIC System registers functional group.

Figure 3-110: ICV_CTLR_EL1 bit assignments

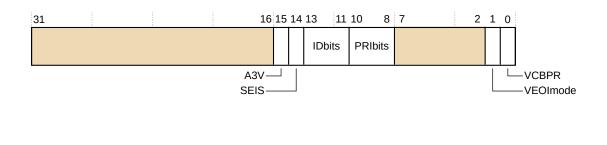

RESO, [31:16]

RES0

RESO Reserved.

A3V, [15]

Affinity 3 Valid. The value is:

0x1 The virtual CPU interface logic supports nonzero values of Affinity 3 in SGI generation System registers.

SEIS, [14]

SEI Support. The value is:

0x0 The virtual CPU interface logic does not support local generation of SFIs

IDbits, [13:11]

Identifier bits. The value is:

0x0 The number of physical interrupt identifier bits supported is 16 bits.

PRIbits, [10:8]

Priority bits. The value is:

0x4 Support 32 levels of physical priority (5 priority bits).

RESO, [7:2]

RESO Reserved.

VEOlmode, [1]

Virtual EOI mode. The possible values are:

0x0 ICV_EOIRO_EL1 and ICV_EOIR1_EL1 provide both priority drop and interrupt deactivation functionality. Accesses to ICV_DIR_EL1 are

UNPREDICTABLE.

0x1 ICV_EOIRO_EL1 and ICV_EOIR1_EL1 provide priority drop functionality only. ICV DIR provides interrupt deactivation functionality.

VCBPR, [0]

Common Binary Point Register. Controls whether the same register is used for interrupt preemption of both virtual Group 0 and virtual Group 1 interrupts. The possible values are:

O ICV_BPRO_EL1 determines the preemption group for virtual Group O interrupts only.

ICV_BPR1_EL1 determines the preemption group for virtual Group 1 interrupts.

1 ICV_BPRO_EL1 determines the preemption group for both virtual Group 0 and virtual Group 1 interrupts.

Reads of ICV_BPR1_EL1 return ICV_BPR0_EL1 plus one, saturated to 111. Writes to ICV_BPR1_EL1 are **IGNORED**.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Generic Interrupt Controller Architecture Specification, GIC architecture version 3 and version 4.

3.4.18 AArch64 virtual interface control System register summary

The following table lists the AArch64 virtual interface control System registers that have **IMPLEMENTATION DEFINED** bits.

See the Arm® Generic Interrupt Controller Architecture Specification, GIC architecture version 3 and version 4 for more information and a complete list of AArch64 virtual interface control System registers.

Table 3-60: AArch64 virtual interface control System register summary

| Name | Op0 | Op1 | CRn | CRm | Op2 | Туре | Description |
|---------------|-----|-----|-----|-----|-----|------|------------------------------------------------------------------------------------------------------|
| ICH_APORO_EL2 | 3 | 0 | 12 | 8 | 4 | | 3.4.19 ICH_APORO_EL2, Interrupt Controller Hyp Active Priorities Group 0 Register 0, EL2 on page 275 |
| ICH_AP1R0_EL2 | 3 | 0 | 19 | 9 | 0 | | 3.4.20 ICH_AP1R0_EL2, Interrupt Controller Hyp Active Priorities Group 1 Register 0, EL2 on page 275 |

| Name | Op0 | Op1 | CRn | CRm | Op2 | Туре | Description |
|--------------|-----|-----|-----|-----|-----|------|---------------------------------------------------------------------------------------------|
| ICH_HCR_EL2 | 3 | 4 | 12 | 11 | 0 | RW | 3.4.21 ICH_HCR_EL2, Interrupt Controller Hyp Control Register, EL2 on page 276 |
| ICH_VTR_EL2 | 3 | 4 | 12 | 11 | 1 | RO | 3.4.22 ICH_VMCR_EL2, Interrupt Controller Virtual Machine Control Register, EL2 on page 278 |
| ICH_VMCR_EL2 | 3 | 4 | 12 | 11 | 7 | RW | 3.4.23 ICH_VTR_EL2, Interrupt Controller VGIC Type Register, EL2 on page 281 |

3.4.19 ICH_APORO_EL2, Interrupt Controller Hyp Active Priorities Group 0 Register 0, EL2

The ICH_APORO_EL2 provides information about Group 0 active priorities for EL2.

Bit field descriptions

This register is a 32-bit register and is part of:

- The GIC System registers functional group.
- The Virtualization registers functional group.
- The GIC host interface control registers functional group.

The core implements 5 bits of priority with 32 priority levels, corresponding to the 32 bits [31:0] of the register. The possible values for each bit are:

0x000000Mo interrupt active. This is the reset value.

 0×00000000 terrupt active for priority 0×0 .

0x000000012 terrupt active for priority 0x8.

0x80000000 terrupt active for priority 0xF8.

Details that are not provided in this description are architecturally defined. See the Arm® Generic Interrupt Controller Architecture Specification, GIC architecture version 3 and version 4.

3.4.20 ICH_AP1R0_EL2, Interrupt Controller Hyp Active Priorities Group 1 Register 0, EL2

The ICH AP1R0 EL2 provides information about Group 1 active priorities for EL2.

Bit field descriptions

This register is a 32-bit register and is part of:

- The GIC System registers functional group.
- The Virtualization registers functional group.
- The GIC host interface control registers functional group.

The core implements 5 bits of priority with 32 priority levels, corresponding to the 32 bits [31:0] of the register. The possible values for each bit are:

 0×0000000000 interrupt active. This is the reset value.

 0×00000000 therrupt active for priority 0×0 .

0x0000000 daterrupt active for priority 0x8.

..

0x80000000 terrupt active for priority 0xF8.

Details that are not provided in this description are architecturally defined. See the Arm® Generic Interrupt Controller Architecture Specification, GIC architecture version 3 and version 4.

3.4.21 ICH_HCR_EL2, Interrupt Controller Hyp Control Register, EL2


ICH_HCR_EL2 controls the environment for VMs.

Bit field descriptions

ICH_HCR_EL2 is a 32-bit register and is part of:

- The GIC System registers functional group.
- The Virtualization registers functional group.
- The GIC host interface control registers functional group.

Figure 3-111: ICH_HCR_EL2 bit assignments

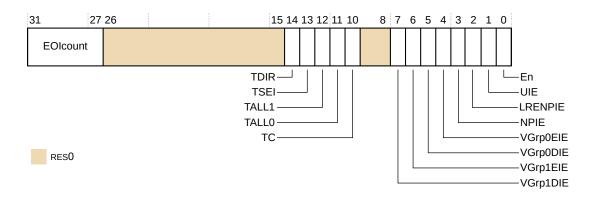

EOlcount, [31:27]

Number of outstanding deactivates.

RESO, [26:15]

RESO Reserved.

TDIR, [14]

Trap Non-secure EL1 writes to ICC_DIR_EL1 and ICV_DIR_EL1. The possible values are:

0x0 Non-secure EL1 writes of ICC_DIR_EL1 and ICV_DIR_EL1 are not trapped to EL2, unless trapped by other mechanisms.

0x1 Non-secure EL1 writes of ICC_DIR_EL1 and ICV_DIR_EL1 are trapped to EL2.

TSEI, [13]

Trap all locally generated SEIs. The value is:

O Locally generated SEIs do not cause a trap to EL2.

TALL1, [12]

Trap all Non-secure EL1 accesses to ICC_* and ICV_* System registers for Group 1 interrupts to EL2. The possible values are:

| 0x0 | Non-secure EL1 accesses to ICC_* and ICV_* registers for Group 1 |
|-----|------------------------------------------------------------------|
| | interrupts proceed as normal. |
| 0x1 | Non-secure EL1 accesses to ICC_* and ICV_* registers for Group 1 |
| | interrupts trap to EL2. |

TALLO, [11]

Trap all Non-secure EL1 accesses to ICC_* and ICV_* System registers for Group 0 interrupts to EL2. The possible values are:

| 0x0 | Non-secure EL1 accesses to ICC_* and ICV_* registers for Group 0 |
|-----|------------------------------------------------------------------|
| | interrupts proceed as normal. |
| 0x1 | Non-secure EL1 accesses to ICC_* and ICV_* registers for Group 0 |
| | interrupts trap to EL2. |

TC, [10]

Trap all Non-secure EL1 accesses to System registers that are common to Group 0 and Group 1 to EL2. The possible values are:

| 0x0 | Non-secure EL1 accesses to common registers proceed as normal. |
|-----|----------------------------------------------------------------|
| 0x1 | Non-secure EL1 accesses to common registers trap to EL2. |

RESO, [9:8]

RESO Reserved.

VGrp1DIE, [7]

VM Group 1 Disabled Interrupt Enable. The possible values are:

Maintenance interrupt disabled.
Maintenance interrupt signaled when ICH VMCR EL2.VENG1 is 0.

VGrp1EIE, [6]

VM Group 1 Enabled Interrupt Enable. The possible values are:

Maintenance interrupt disabled.Maintenance interrupt signaled when ICH_VMCR_EL2.VENG1 is 1.

VGrp0DIE, [5]

VM Group 0 Disabled Interrupt Enable. The possible values are:

- O Maintenance interrupt disabled.
- 1 Maintenance interrupt signaled when ICH VMCR EL2.VENG0 is 0.

VGrp0EIE, [4]

VM Group 0 Enabled Interrupt Enable. The possible values are:

- O Maintenance interrupt disabled.
- 1 Maintenance interrupt signaled when ICH_VMCR_EL2.VENG0 is 1.

NPIE, [3]

No Pending Interrupt Enable. The possible values are:

- O Maintenance interrupt disabled.
- 1 Maintenance interrupt signaled while the List registers contain no interrupts in the pending state.

LRENPIE, [2]

List Register Entry Not Present Interrupt Enable. The possible values are:

- O Maintenance interrupt disabled.
- 1 Maintenance interrupt is asserted while the EOlcount field is not 0.

UIE, [1]

Underflow Interrupt Enable. The possible values are:

- O Maintenance interrupt disabled.
- 1 Maintenance interrupt is asserted if none, or only one, of the List register entries is marked as a valid interrupt.

En, [0]

Enable. The possible values are:

- O Virtual CPU interface operation disabled.
- 1 Virtual CPU interface operation enabled.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Generic Interrupt Controller Architecture Specification, GIC architecture version 3 and version 4.

3.4.22 ICH_VMCR_EL2, Interrupt Controller Virtual Machine Control Register, EL2


ICH_VMCR_EL2 enables the hypervisor to save and restore the virtual machine view of the GIC state.

Bit field descriptions

ICH VMCR EL2 is a 32-bit register and is part of:

- The GIC System registers functional group.
- The Virtualization registers functional group.
- The GIC host interface control registers functional group.

Figure 3-112: ICH_VMCR_EL2 bit assignments

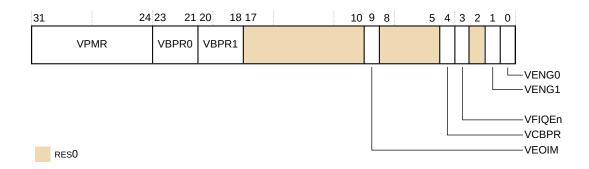

VPMR, [31:24]

Virtual Priority Mask.

This field is an alias of ICV PMR EL1. Priority.

VBPR0, [23:21]

Virtual Binary Point Register, Group O. The minimum value is:

0x2 This field is an alias of ICV BPRO EL1.BinaryPoint.

VBPR1, [20:18]

Virtual Binary Point Register, Group 1. The minimum value is:

0x3 This field is an alias of ICV_BPR1_EL1.BinaryPoint.

RESO, [17:10]

RESO Reserved.

VEOIM, [9]

Virtual EOI mode. The possible values are:

ICV EOIRO EL1 and ICV EOIR1 EL1 provide both priority drop and 0x0interrupt deactivation functionality. Accesses to ICV_DIR_EL1 are UNPREDICTABLE.

0x1 ICV EOIRO EL1 and ICV EOIR1 EL1 provide priority drop functionality only. ICV DIR EL1 provides interrupt deactivation functionality.

This bit is an alias of ICV CTLR EL1.EOImode.

RESO, [8:5]

RES0 Reserved.

VCBPR, [4]

Virtual Common Binary Point Register. The possible values are:

 0×0 ICV BPRO EL1 determines the preemption group for virtual Group O interrupts only.

ICV BPR1 EL1 determines the preemption group for virtual Group 1

interrupts.

ICV BPRO EL1 determines the preemption group for both virtual Group 0x1

0 and virtual Group 1 interrupts.

Reads of ICV BPR1 EL1 return ICV BPR0 EL1 plus one, saturated to 111. Writes to ICV BPR1 EL1 are IGNORED.

VFIQEn, [3]

Virtual FIQ enable. The value is:

Group 0 virtual interrupts are presented as virtual FIQs. 0x1

RES0, [2]

RES0 Reserved.

VENG1, [1]

Virtual Group 1 interrupt enable. The possible values are:

 0×0 Virtual Group 1 interrupts are disabled. 0x1 Virtual Group 1 interrupts are enabled.

VENG0, [0]

Virtual Group 0 interrupt enable. The possible values are:

Virtual Group 0 interrupts are disabled. 0×0 Virtual Group 0 interrupts are enabled. 0x1

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Generic Interrupt Controller Architecture Specification, GIC architecture version 3 and version 4.

3.4.23 ICH_VTR_EL2, Interrupt Controller VGIC Type Register, EL2


ICH_VTR_EL2 reports supported GIC virtualization features.

Bit field descriptions

ICH_VTR_EL2 is a 32-bit register and is part of:

- The GIC System registers functional group.
- The Virtualization registers functional group.
- The GIC host interface control registers functional group.

Figure 3-113: ICH_VTR_EL2 bit assignments

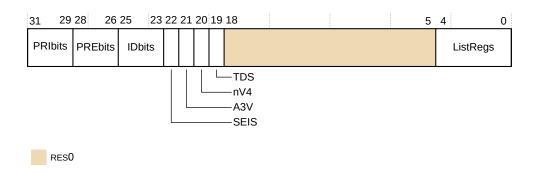

PRIbits, [31:29]

Priority bits. The number of virtual priority bits implemented, minus one.

0x4 Priority implemented is 5-bit.

PREbits, [28:26]

The number of virtual preemption bits implemented, minus one. The value is:

0x4 Virtual preemption implemented is 5-bit.

IDbits, [25:23]

The number of virtual interrupt identifier bits supported. The value is:

0x0 Virtual interrupt identifier bits that are implemented is 16-bit.

SEIS, [22]

SEI Support. The value is:

0x0 The virtual CPU interface logic does not support generation of SEIs.

A3V, [21]

Affinity 3 Valid. The value is:

0x1 The virtual CPU interface logic supports nonzero values of Affinity 3 in SGI generation System registers.

nV4, [20]

Direct injection of virtual interrupts not supported. The value is:

0x0 The CPU interface logic supports direct injection of virtual interrupts.

TDS, [19]

Separate trapping of Non-secure EL1 writes to ICV DIR EL1 supported. The value is:

0x1 Implementation supports ICH_HCR_EL2.TDIR.

RESO, [18:5]

RESO Reserved.

ListRegs, [4:0]

0x3 The number of implemented List registers, minus one.

The core implements four list registers. Accesses to ICH_LR_EL2[x] (x>3) in AArch64 are **UNDEFINED**.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Generic Interrupt Controller Architecture Specification, GIC architecture version 3 and version 4.

3.5 Advanced SIMD and floating-point registers

This chapter describes the Advanced SIMD and floating-point registers.

3.5.1 AArch64 register summary

The core has several Advanced SIMD and floating-point System registers in the AArch64 Execution state. Each register has a specific purpose, specific usage constraints, configurations, and attributes.

The following table gives a summary of the Cortex®-A76AE core Advanced SIMD and floating-point System registers in the AArch64 Execution state.

Table 3-61: AArch64 Advanced SIMD and floating-point System registers

| Name | Туре | Reset | Description |
|-----------|------|------------|--------------------------------------------------------------------------|
| FPCR | RW | 0x0000000 | See 3.5.2 FPCR, Floating-point Control Register on page 283. |
| FPSR | RW | UNKNOWN | See 3.5.3 FPSR, Floating-point Status Register on page 285. |
| MVFRO_EL1 | RO | 0x10110222 | See 3.5.4 MVFRO_EL1, Media, and VFP Feature Register 0, EL1 on page 287. |

| Name | Туре | Reset | Description |
|-----------|------|------------|--------------------------------------------------------------------------|
| MVFR1_EL1 | RO | 0x13211111 | See 3.5.5 MVFR1_EL1, Media, and VFP Feature Register 1, EL1 on page 289. |
| MVFR2_EL1 | RO | | See 3.5.6 MVFR2_EL1, Media, and VFP Feature Register 2, EL1 on page 291. |


3.5.2 FPCR, Floating-point Control Register

The FPCR controls floating-point behavior.

Bit field descriptions

FPCR is a 32-bit register.

Figure 3-114: FPCR bit assignments

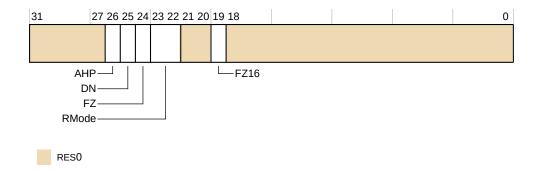

RESO, [31:27]

res0

Reserved.

AHP, [26]

Alternative half-precision control bit. The possible values are:

0

IEEE half-precision format selected. This is the reset value.

1

Alternative half-precision format selected.

DN, [25]

Default NaN mode control bit. The possible values are:

0

NaN operands propagate through to the output of a floating-point operation. This is the reset value.

1

Any operation involving one or more NaNs returns the Default NaN.

FZ, [24]

Flush-to-zero mode control bit. The possible values are:

0

Flush-to-zero mode disabled. Behavior of the floating-point system is fully compliant with the IEEE 754 standard. This is the reset value.

1

Flush-to-zero mode enabled.

RMode, [23:22]

Rounding Mode control field. The encoding of this field is:

| 0b00 | Round to Nearest (RN) mode. This is the reset value. |
|------|------------------------------------------------------|
| 0b01 | Round towards Plus Infinity (RP) mode. |
| 0b10 | Round towards Minus Infinity (RM) mode. |
| 0b11 | Round towards Zero (RZ) mode. |

RESO, [21:20]

res0

Reserved.

FZ16, [19]

Flush-to-zero mode control bit on half-precision data-processing instructions. The possible values are:

0

Flush-to-zero mode disabled. Behavior of the floating-point system is fully compliant with the IEEE 754 standard. This is the default value.

1

Flush-to-zero mode enabled.

RESO, [18:0]

res0

Reserved.

Configurations

The named fields in this register map to the equivalent fields in the AArch32 FPSCR. See 3.5.8 FPSCR, Floating-Point Status and Control Register on page 293.

Usage constraints

Accessing the FPCR

To access the FPCR:

```
MRS <Xt>, FPCR ; Read FPCR into Xt
MSR FPCR, <Xt> ; Write Xt to FPCR
```

Register access is encoded as follows:

Table 3-62: FPCR access encoding

| op0 | op1 | CRn | CRm | op2 |
|-----|-----|------|------|-----|
| 11 | 011 | 0100 | 0100 | 000 |

Accessibility

This register is accessible as follows:

| EL0 EL1 (NS) | | EL1 (S) | EL2 | EL3 (SCR.NS = 1) | EL3 (SCR.NS = 0) |
|--------------|----|------------|-----|---------------------|---------------------|
| RW | RW | RW | RW | RW | RW |


3.5.3 FPSR, Floating-point Status Register

The FPSR provides floating-point system status information.

Bit field descriptions

FPSR is a 32-bit register.

Figure 3-115: FPSR bit assignments

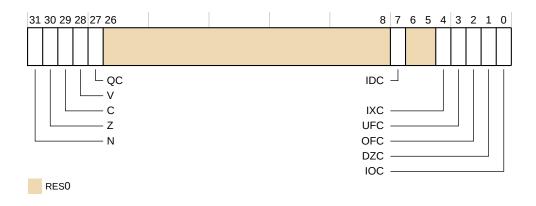

N, [31]

Negative condition flag for AArch32 floating-point comparison operations. AArch64 floating-point comparisons set the PSTATE.N flag instead.

Z, [30]

Zero condition flag for AArch32 floating-point comparison operations. AArch64 floating-point comparisons set the PSTATE.Z flag instead.

C, [29]

Carry condition flag for AArch32 floating-point comparison operations. AArch64 floating-point comparisons set the PSTATE.C flag instead

V, [28]

Overflow condition flag for AArch32 floating-point comparison operations. AArch64 floating-point comparisons set the PSTATE.V flag instead.

QC, [27]

Cumulative saturation bit. This bit is set to 1 to indicate that an Advanced SIMD integer operation has saturated since a 0 was last written to this bit.

RESO, [26:8]

Reserved, res0.

IDC, [7]

Input Denormal cumulative exception bit. This bit is set to 1 to indicate that the Input Denormal exception has occurred since 0 was last written to this bit.

RESO, [6:5]

Reserved, res0.

IXC, [4]

Inexact cumulative exception bit. This bit is set to 1 to indicate that the Inexact exception has occurred since 0 was last written to this bit.

UFC, [3]

Underflow cumulative exception bit. This bit is set to 1 to indicate that the Underflow exception has occurred since 0 was last written to this bit.

OFC, [2]

Overflow cumulative exception bit. This bit is set to 1 to indicate that the Overflow exception has occurred since 0 was last written to this bit.

DZC, [1]

Division by Zero cumulative exception bit. This bit is set to 1 to indicate that the Division by Zero exception has occurred since 0 was last written to this bit.

IOC, [0]

Invalid Operation cumulative exception bit. This bit is set to 1 to indicate that the Invalid Operation exception has occurred since 0 was last written to this bit.

Configurations

The named fields in this register map to the equivalent fields in the AArch32 FPSCR. See 3.5.8 FPSCR, Floating-Point Status and Control Register on page 293.

Usage constraints

Accessing the FPSR

To access the FPSR:

MRS <Xt>, FPSR; Read FPSR into Xt
MSR FPSR, <Xt>; Write Xt to FPSR

Register access is encoded as follows:

Table 3-64: FPSR access encoding

| op0 | op1 | CRn | CRm | op2 |
|-----|-----|------|------|-----|
| 11 | 011 | 0100 | 0100 | 001 |

Accessibility

This register is accessible as follows:

| EL0 EL1 (NS) | | EL1 (S) | EL2 | EL3 (SCR.NS = 1) | EL3 (SCR.NS = 0) |
|--------------|----|------------|-----|---------------------|---------------------|
| RW | RW | RW | RW | RW | RW |

3.5.4 MVFRO_EL1, Media, and VFP Feature Register 0, EL1

The MVFRO_EL1 describes the features that are provided by the AArch64 Advanced SIMD and floating-point implementation.

Bit field descriptions

MVFRO_EL1 is a 32-bit register.

Figure 3-116: MVFRO_EL1 bit assignments

| 31 | 28 | 27 24 | 23 20 | 19 16 | 15 12 | 11 8 | 7 4 | 3 0 |
|--------|----|---------|--------|----------|--------|------|------|---------|
| FPRoun | d | FPShVec | FPSqrt | FPDivide | FPTrap | FPDP | FPSP | SIMDReg |

FPRound, [31:28]

Indicates the rounding modes supported by the floating-point hardware:

0x1

All rounding modes supported.

FPShVec, [27:24]

Indicates the hardware support for floating-point short vectors:

0x0

Not supported.

FPSqrt, [23:20]

Indicates the hardware support for floating-point square root operations:

0x1

Supported.

FPDivide, [19:16]

Indicates the hardware support for floating-point divide operations:

0x1

Supported.

FPTrap, [15:12]

Indicates whether the floating-point hardware implementation supports exception trapping:

0x0

Not supported.

FPDP, [11:8]

Indicates the hardware support for floating-point double-precision operations:

0x2

Supported, VFPv3 or greater.

See the Arm® Architecture Reference Manual Armv8, for Armv8-A architecture profile for more information.

FPSP, [7:4]

Indicates the hardware support for floating-point single-precision operations:

0x2

Supported, VFPv3 or greater.

See the Arm® Architecture Reference Manual Armv8, for Armv8-A architecture profile for more information.

SIMDReg, [3:0]

Indicates support for the Advanced SIMD register bank:

0x2 Supported, 32 x 64-bit registers supported.

See the Arm® Architecture Reference Manual Armv8, for Armv8-A architecture profile for more information.

Configurations

There are no configuration notes.

Usage constraints

Accessing the MVFR0_EL1

To access the MVFRO_EL1:

MRS <Xt>, MVFR0_EL1 ; Read MVFR0_EL1 into Xt

Register access is encoded as follows:

Table 3-66: MVFR0_EL1 access encoding

| op0 | op1 | CRn | CRm | op2 |
|-----|-----|------|------|-----|
| 11 | 000 | 0000 | 0011 | 000 |

Accessibility

This register is accessible as follows:

| | ELO | EL1(NS) | EL1(S) | EL2 | EL3 (SCR.NS = 1) | EL3(SCR.NS = 0) |
|---|-----|---------|--------|-----|------------------|-----------------|
| ı | - | RO | RO | RO | RO | RO |

3.5.5 MVFR1_EL1, Media, and VFP Feature Register 1, EL1

The MVFR1_EL1 describes the features that are provided by the AArch64 Advanced SIMD and floating-point implementation.

Bit field descriptions

MVFR1 EL1 is a 32-bit register.

Figure 3-117: MVFR1_EL1 bit assignments

| 31 28 | 27 24 | 23 20 | 19 16 | 15 12 | 11 8 | 7 4 | 3 0 |
|----------|-------|--------|--------|---------|--------|--------|-------|
| SIMDFMAC | FPHP | SIMDHP | SIMDSP | SIMDInt | SIMDLS | FPDNaN | FPFtZ |

SIMDFMAC, [31:28]

Indicates whether the Advanced SIMD and floating-point unit supports fused multiply accumulate operations:

1

Implemented.

FPHP, [27:24]

Indicates whether the Advanced SIMD and floating-point unit supports half-precision floating-point conversion instructions:

3

Floating-point half-precision conversion and data processing instructions implemented.

SIMDHP, [23:20]

Indicates whether the Advanced SIMD and floating-point unit supports half-precision floating-point conversion operations:

2

Advanced SIMD half-precision conversion and data processing instructions implemented.

SIMDSP, [19:16]

Indicates whether the Advanced SIMD and floating-point unit supports single-precision floating-point operations:

1

Implemented.

SIMDInt, [15:12]

Indicates whether the Advanced SIMD and floating-point unit supports integer operations:

1

Implemented.

SIMDLS, [11:8]

Indicates whether the Advanced SIMD and floating-point unit supports load/store instructions:

1

Implemented.

FPDNaN, [7:4]

Indicates whether the floating-point hardware implementation supports only the Default NaN mode:

1

Hardware supports propagation of NaN values.

FPFtZ, [3:0]

Indicates whether the floating-point hardware implementation supports only the Flush-to-zero mode of operation:

1

Hardware supports full denormalized number arithmetic.

Configurations

There are no configuration notes.

Usage constraints

Accessing the MVFR1_EL1

To access the MVFR1_EL1:

```
MRS <Xt>, MVFR1_EL1 ; Read MVFR1_EL1 into Xt
```

Register access is encoded as follows:

Table 3-68: MVFR1_EL1 access encoding

| op0 | op1 | CRn | CRm | op2 |
|-----|-----|------|------|-----|
| 11 | 000 | 0000 | 0011 | 001 |

Accessibility

This register is accessible as follows:

| ELO | EL1(NS) | EL1(S) | EL2 | EL3 (SCR.NS = 1) | EL3(SCR.NS = 0) |
|-----|---------|--------|-----|------------------|-----------------|
| - | RO | RO | RO | RO | RO |

3.5.6 MVFR2_EL1, Media, and VFP Feature Register 2, EL1

The MVFR2_EL1 describes the features that are provided by the AArch64 Advanced SIMD and floating-point implementation.

Bit field descriptions

MVFR2_EL1 is a 32-bit register.

Figure 3-118: MVFR2_EL1 bit assignments



RESO, [31:8]

RESO

Reserved.

FPMisc, [7:4]

Indicates support for miscellaneous floating-point features.

0x4 Supports:

- Floating-point selection.
- Floating-point Conversion to Integer with Directed rounding modes.
- Floating-point Round to Integral Floating-point.
- Floating-point MaxNum and MinNum.

SIMDMisc, [3:0]

Indicates support for miscellaneous Advanced SIMD features.

0x3 Supports:

- Floating-point Conversion to Integer with Directed rounding modes.
- Floating-point Round to Integral Floating-point.
- Floating-point MaxNum and MinNum.

Configurations

There are no configuration notes.

Usage constraints

Accessing the MVFR2_EL1

To access the MVFR2_EL1:

MRS <Xt>, MVFR2_EL1 ; Read MVFR2_EL1 into Xt

Register access is encoded as follows:

Table 3-70: MVFR2_EL1 access encoding

| op0 | op1 | CRn | CRm | op2 |
|-----|-----|------|------|-----|
| 11 | 000 | 0000 | 0011 | 010 |

Accessibility

This register is accessible as follows:

| ELO | EL1(NS) | EL1(S) | EL2 | EL3 (SCR.NS = 1) | EL3(SCR.NS = 0) |
|-----|---------|--------|-----|------------------|-----------------|
| - | RO | RO | RO | RO | RO |

3.5.7 AArch32 register summary

The core has one Advanced SIMD and floating-point System registers in the AArch32 Execution state.

The following table gives a summary of the Cortex®-A76AE core Advanced SIMD and floating-point System registers in the AArch32 Execution state.

Table 3-72: AArch32 Advanced SIMD and floating-point System registers

| Name | Туре | Reset | Description |
|-------|------|---------|--------------------------------------------------------------------------|
| FPSCR | RW | UNKNOWN | See 3.5.8 FPSCR, Floating-Point Status and Control Register on page 293. |

See the Arm® Architecture Reference Manual Armv8, for Armv8-A architecture profile for information on permitted accesses to the Advanced SIMD and floating-point System registers.


3.5.8 FPSCR, Floating-Point Status and Control Register

The FPSCR provides floating-point system status information and control.

Bit field descriptions

FPSCR is a 32-bit register.

Figure 3-119: FPSCR bit assignments

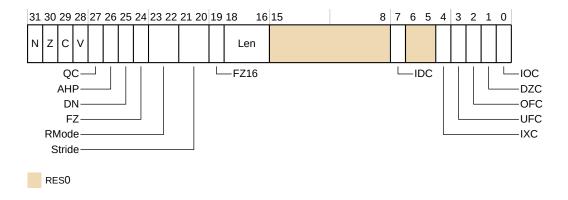

N, [31]

Floating-point Negative condition code flag.

Set to 1 if a floating-point comparison operation produces a less than result.

Z, [30]

Floating-point Zero condition code flag.

Set to 1 if a floating-point comparison operation produces an equal result.

C, [29]

Floating-point Carry condition code flag.

Set to 1 if a floating-point comparison operation produces an equal, greater than, or unordered result.

V, [28]

Floating-point Overflow condition code flag.

Set to 1 if a floating-point comparison operation produces an unordered result.

QC, [27]

Cumulative saturation bit.

This bit is set to 1 to indicate that an Advanced SIMD integer operation has saturated after 0 was last written to this bit.

AHP, [26]

Alternative Half-Precision control bit:

n

IEEE half-precision format selected. This is the reset value.

1

Alternative half-precision format selected.

DN, [25]

Default NaN mode control bit:

0

NaN operands propagate through to the output of a floating-point operation. This is the reset value.

1

Any operation involving one or more NaNs returns the Default NaN.

The value of this bit only controls floating-point arithmetic. AArch32 Advanced SIMD arithmetic always uses the Default NaN setting, regardless of the value of the DN bit.

FZ, [24]

Flush-to-zero mode control bit:

0

Flush-to-zero mode disabled. Behavior of the floating-point system is fully compliant with the IFFF 754 standard. This is the reset value.

1

Flush-to-zero mode enabled.

The value of this bit only controls floating-point arithmetic. AArch32 Advanced SIMD arithmetic always uses the Flush-to-zero setting, regardless of the value of the FZ bit.

RMode, [23:22]

Rounding Mode control field:

0ь00

Round to Nearest (RN) mode. This is the reset value.

0b01

Round towards Plus Infinity (RP) mode.

0b10

Round towards Minus Infinity (RM) mode.

0b11

Round towards Zero (RZ) mode.

The specified rounding mode is used by almost all floating-point instructions. AArch32 Advanced SIMD arithmetic always uses the Round to Nearest setting, regardless of the value of the RMode bits.

Stride, [21:20]

res0

Reserved.

FZ16, [19]

Flush-to-zero mode control bit on half-precision data-processing instructions:

O

Flush-to-zero mode disabled. Behavior of the floating-point system is fully compliant with the IEEE 754 standard.

1

Flush-to-zero mode enabled.

Len, [18:16]

res0

Reserved.

RESO, [15:8]

res0

Reserved.

IDC, [7]

Input Denormal cumulative exception bit. This bit is set to 1 to indicate that the Input Denormal exception has occurred since 0 was last written to this bit.

RES0, [6:5]

res0

Reserved.

IXC, [4]

Inexact cumulative exception bit. This bit is set to 1 to indicate that the Inexact exception has occurred since 0 was last written to this bit.

UFC, [3]

Underflow cumulative exception bit. This bit is set to 1 to indicate that the Underflow exception has occurred since 0 was last written to this bit.

OFC, [2]

Overflow cumulative exception bit. This bit is set to 1 to indicate that the Overflow exception has occurred since 0 was last written to this bit.

DZC, [1]

Division by Zero cumulative exception bit. This bit is set to 1 to indicate that the Division by Zero exception has occurred since 0 was last written to this bit.

IOC, [0]

Invalid Operation cumulative exception bit. This bit is set to 1 to indicate that the Invalid Operation exception has occurred since 0 was last written to this bit.

Configurations

There is one copy of this register that is used in both Secure and Non-secure states.

The named fields in this register map to the equivalent fields in the AArch64 FPCR and FPSR. See 3.5.2 FPCR, Floating-point Control Register on page 283 and 3.5.3 FPSR, Floating-point Status Register on page 285

Usage constraints

Accessing the FPSCR

To access the FPSCR:

```
VMRS <Rt>, FPSCR; Read FPSCR into Rt
VMSR FPSCR, <Rt>; Write Rt to FPSCR
```

Register access is encoded as follows:

Table 3-73: FPSCR access encoding

 spec_reg

 0001



The Cortex®-A76AE core implementation does not support the deprecated VFP short vector feature. Attempts to execute the associated VFP data-processing instructions result in an *UNDEFINED* Instruction exception.

Accessibility

This register is accessible as follows:

| ELO | ELO | EL1 | EL1 | EL2 | EL3 | EL3 |
|--------|-----|------|-----|-----|--------------|--------------|
| (NS) | (S) | (NS) | (S) | | (SCR.NS = 1) | (SCR.NS = 0) |
| Config | RW | - | - | - | - | - |

Access to this register depends on the values of CPACR_EL1.FPEN, CPTR_EL2.FPEN, CPTR_EL2.TFP, and HCR_EL2.{E2H, TGE}. For details of which values of these

Document ID: 101392_0101_00_en Issue: 00 Register descriptions

fields allow access at which Exception levels, see the Arm® Architecture Reference Manual Armv8, for Armv8-A architecture profile.

4 Debug descriptions

This part describes the debug functionality of the Cortex®-A76AE core.

4.1 Debug


This chapter describes the Cortex®-A76AE core Debug registers and shows examples of how to use them.

4.1.1 About debug methods

The core is part of a debug system and supports both self-hosted and external debug.

The following figure shows a typical external debug system.

Figure 4-1: External debug system



Debug host

A computer, for example a personal computer, that is running a software debugger such as the DS-5 Debugger. With the debug host, you can issue high-level commands, such as setting a breakpoint at a certain location or examining the contents of a memory address.

Protocol converter

The debug host sends messages to the debug target using an interface such as Ethernet. However, the debug target typically implements a different interface protocol. A device such as DSTREAM is required to convert between the two protocols.

Debug target

The lowest level of the system implements system support for the protocol converter to access the debug unit using the *Advanced Peripheral Bus* (APB) slave interface. An example of a debug target is a development system with a test chip or a silicon part with a core.

Debug unit

Helps debugging software that is running on the core:

- Hardware systems that are based on the core.
- Operating systems.
- Application software.

With the debug unit, you can:

- Stop program execution.
- Examine and alter process and coprocessor state.
- Examine and alter memory and the state of the input or output peripherals.
- Restart the core.

For self-hosted debug, the debug target runs additional debug monitor software that runs on the Cortex®-A76AE core itself. This way, it does not require expensive interface hardware to connect a second host computer.

4.1.2 Debug register interfaces

The Debug architecture defines a set of Debug registers.

The Debug register interfaces provide access to these registers from:

- Software running on the core.
- An external debugger.

The Cortex®-A76AE core implements the Armv8 Debug architecture and debug events as described in the Arm® Architecture Reference Manual Armv8, for A-profile architecture. It also implements improvements to Debug introduced in Armv8.1 and Armv8.2.

4.1.2.1 Core interfaces

System register access allows the core to directly access certain debug registers.

Debug registers

This function is System register based and memory-mapped. You can access the Debug register map using the APB slave port. The external debug interface enables both external and self-hosted debug agents to access Debug registers. Access to the Debug registers is partitioned as follows:

Performance monitor

This function is System register based and memory-mapped. You can access the performance monitor registers using the APB slave port.

Activity monitor

This function is System register based and memory-mapped. You can access the activity monitor registers using the APB slave port.

Trace registers

This function is memory-mapped.

ELA registers

This function is memory-mapped.

Related information

External debug interface on page 302

4.1.2.2 Breakpoints and watchpoints

The core supports six breakpoints, four watchpoints, and a standard *Debug Communications Channel* (DCC).

A breakpoint consists of a breakpoint control register and a breakpoint value register. These two registers are referred to as a *Breakpoint Register Pair* (BRP).

Four of the breakpoints (BRP 0-3) match only to virtual address and the other two (BRP 4 and 5) match against either virtual address or context ID, or VMID. All the watchpoints can be linked to two breakpoints (BRP 4 and 5) to enable a memory request to be trapped in a given process context.

4.1.2.3 Effects of resets on Debug registers

The core has the following reset signals that affect the Debug registers:

nCPUPORESET

This signal initializes the core processing logic, including the debug, ETM trace unit, breakpoint, watchpoint logic, and performance monitors logic. This maps to a Cold reset that covers reset of the core processing logic and the integrated debug functionality.

nCORERESET

This signal resets some of the debug and performance monitor logic. This maps to a Warm reset that covers reset of the core processing logic.

4.1.2.4 External access permissions to Debug registers

External access permission to the Debug registers is subject to the conditions at the time of the access.

The following table describes the core response to accesses through the external debug interface.

Table 4-1: External access conditions to registers

| Name | Condition | Description |
|------|----------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Off | EDPRSR.PU is 0 | Core power domain is completely off, or in a low-power state where the Core power domain registers cannot be accessed. If debug power is off, then all external debug and memory-mapped register accesses return an error. |
| DLK | DoubleLockStatus() == TRUE (EDPRSR.DLK is 1) | |
| OSLK | OSLSR_EL1.OSLK is 1 | OS Lock is locked. |

| Name | Condition | Description |
|---------|-----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| EDAD | ==FALSE | External debug access is disabled. When an error is returned because of an EDAD condition code, and this is the highest priority error condition, EDPRSR.SDAD is set to 1. Otherwise SDAD is unchanged. |
| Default | - | None of the conditions apply, normal access. |

The following table shows an example of external register access condition codes for access to a performance monitor register. To determine the access permission for the register, scan the columns from left to right. Stop at the first column a condition is true, the entry gives the access permission of the register and scanning stops.

Table 4-2: External register condition code example

| Off | DLK | OSLK | EDAD | Default |
|-----|-----|------|------|---------|
| - | - | - | - | RO |

4.1.3 Debug events

A debug event can be a software debug event or a Halting debug event.

A core responds to a debug event in one of the following ways:

- Ignores the debug event.
- Takes a debug exception.
- Enters debug state.

See the Arm® Architecture Reference Manual Armv8, for A-profile architecture for more information about the debug events.

Related information

External debug interface on page 302 About clocks, resets, and input synchronization on page 32

4.1.3.1 Watchpoint debug events

In the Cortex®-A76AE core, watchpoint debug events are always synchronous.

Memory hint instructions and cache clean operations, except DC ZVA and DC IVAC, do not generate watchpoint debug events. Store exclusive instructions generate a watchpoint debug event even when the check for the control of exclusive monitor fails. Atomic CAS instructions generate a watchpoint debug event even when the compare operation fails.

4.1.3.2 Debug OS Lock

Debug OS Lock is set by the powerup reset, nCPUPORESET.

For normal behavior of debug events and Debug register accesses, Debug OS Lock must be cleared. For more information, see the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

4.1.4 External debug interface

For information about external debug interface, including debug memory map and debug signals, see the $Arm^{\mathbb{R}}$ DynamlQ^M Shared Unit AE Technical Reference Manual.

4.2 Performance Monitoring Unit

This chapter describes the Performance Monitoring Unit (PMU) and the registers that it uses.

4.2.1 About the PMU

The Cortex®-A76AE core includes performance monitors that enable you to gather various statistics on the operation of the core and its memory system during runtime. These provide useful information about the behavior of the core that you can use when debugging or profiling code.

The PMU provides six counters. Each counter can count any of the events available in the core. The absolute counts that are recorded might vary because of pipeline effects. This has negligible effect except in cases where the counters are enabled for a very short time.

Related information

PMU events on page 303

4.2.2 PMU functional description

This section describes the functionality of the PMU.

The PMU includes the following interfaces and counters:

Event interface

Events from all other units from across the design are provided to the PMU.

System register and APB interface

You can program the PMU registers using the System registers or the external APB interface.

Counters

The PMU has 32-bit counters that increment when they are enabled, based on events, and a 64-bit cycle counter.

PMU register interfaces

The Cortex®-A76AE core supports access to the performance monitor registers from the internal System register interface and a memory-mapped interface.

4.2.2.1 External register access permissions

Whether or not access is permitted to a register depends on:

- If the core is powered up.
- The state of the OS Lock and OS Double Lock.
- The state of External Performance Monitors access disable.
- The state of the debug authentication inputs to the core.

The behavior is specific to each register and is not described in this document. For a detailed description of these features and their effects on the registers, see the Arm® Architecture Reference Manual Arm®v8, for Arm®v8-A architecture profile.

The register descriptions that are provided in this manual describe whether each register is read/write or read-only.

4.2.3 PMU events

The following table shows the events that are generated and the numbers that the PMU uses to reference the events. The table also shows the bit position of each event on the event bus. Event reference numbers that are not listed are reserved.

Table 4-3: PMU Events

| Event number | PMU event bus (to trace) | Event mnemonic | Event description | |
|-----------------|--------------------------------|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| 0x0 | [00] | SW_INCR | Software increment. Instruction architecturally executed (condition code check pass). | |
| 0x1 | [01] | L1I_CACHE_REFILL | L1 instruction cache refill. This event counts any instruction fetch which misses in t cache. | |
| | | | The following instructions are not counted: | |
| | | | Cache maintenance instructions. | |
| | | | Non-cacheable accesses. | |
| 0x2 | [02] | L1I_TLB_REFILL | L1 instruction TLB refill. This event counts any refill of the instruction L1 TLB from the L2 TLB. This includes refills that result in a translation fault. | |
| | | | The following instructions are not counted: | |
| | | | TLB maintenance instructions. | |
| | | | This event counts regardless of whether the MMU is enabled. | |

| Event | PMU | Event mnemonic | Event description | |
|--------|------------|-------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| number | event bus | | | |
| 0 0 | (to trace) | LAD CACHE DEFILE | | |
| 0x3 | [167] | L1D_CACHE_REFILL | L1 data cache refill. This event counts any load or store operation or page table walk access which causes data to be read from outside the L1, including accesses which do not allocate into L1. | |
| | | | The following instructions are not counted: | |
| | | | Cache maintenance instructions and prefetches. | |
| | | | • Stores of an entire cache line, even if they make a coherency request outside the L1. | |
| | | | Partial cache line writes which do not allocate into the L1 cache. | |
| | | | Non-cacheable accesses. | |
| | | | This event counts the sum of L1D_CACHE_REFILL_RD and L1D_CACHE_REFILL_WR. | |
| 0x4 | [05:03] | L1D_CACHE | L1 data cache access. This event counts any load or store operation or page table walk access which looks up in the L1 data cache. In particular, any access which could count the L1D_CACHE_REFILL event causes this event to count. | |
| | | | The following instructions are not counted: | |
| | | | Cache maintenance instructions and prefetches. | |
| | | | Non-cacheable accesses. | |
| | | | This event counts the sum of L1D_CACHE_RD and L1D_CACHE_WR. | |
| 0x5 | [07:06] | L1D_TLB_REFILL | L1 data TLB refill. This event counts any refill of the data L1 TLB from the L2 TLB. This includes refills that result in a translation fault. The following instructions are not counted: | |
| | | | TLB maintenance instructions. | |
| | | | This event counts regardless of whether the MMU is enabled. | |
| 0x8 | [11:08] | INST_RETIRED | Instruction architecturally executed. This event counts all retired instructions, including those that fail their condition check. | |
| 0x9 | [12] | EXC_TAKEN | Exception taken. | |
| 0x0A | [13] | EXC_RETURN | Instruction architecturally executed, condition code check pass, exception return. | |
| 0x0B | [156] | CID_WRITE_RETIRED | Instruction architecturally executed, condition code check pass, write to CONTEXTIDR. This event only counts writes to CONTEXTIDR in AArch32 state, and via the CONTEXTIDR_EL1 mnemonic in AArch64 state. | |
| | | | The following instructions are not counted: | |
| | | | Writes to CONTEXTIDR_EL12 and CONTEXTIDR_EL2. | |
| 0x10 | [14] | BR_MIS_PRED | Mispredicted or not predicted branch speculatively executed. This event counts any predictable branch instruction which is mispredicted either due to dynamic misprediction or because the MMU is off and the branches are statically predicted n taken. | |
| 0x11 | [15] | CPU_CYCLES | Cycle | |
| 0x12 | [16] | BR_PRED | Predictable branch speculatively executed. This event counts all predictable branches. | |

| Event PMU Event mnemonic Event description | | Event mnemonic | Event description | |
|--------------------------------------------|----------------------|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| number | event bus (to trace) | | | |
| 0x13 | [19:17] | MEM_ACCESS | Data memory access. This event counts memory accesses due to load or store instructions. | |
| | | | The following instructions are not counted: | |
| | | | Instruction fetches. | |
| | | | Cache maintenance instructions. | |
| | | | Translation table walks or prefetches. | |
| | | | This event counts the sum of MEM_ACCESS_RD and MEM_ACCESS_WR. | |
| 0x14 | [20] | L1I_CACHE | L1 instruction cache access or Level O Macro-op cache access. This event counts any instruction fetch which accesses the L1 instruction cache or LO Macro-op cache. | |
| | | | The following instructions are not counted: | |
| | | | Cache maintenance instructions. | |
| | | | Non-cacheable accesses. | |
| 0x15 | [21] | L1D_CACHE_WB | L1 data cache Write-Back. This event counts any write-back of data from the L1 data cache to L2 or L3. This counts both victim line evictions and snoops, including cache maintenance operations. | |
| | | | The following instructions are not counted: | |
| | | | Invalidations which do not result in data being transferred out of the L1. | |
| | | | Full-line writes which write to L2 without writing L1, such as write streaming mode. | |
| 0x16 | [24:22] | L2D_CACHE | L2 unified cache access. This event counts any transaction from L1 which looks up in the L2 cache, and any write-back from the L1 to the L2. Snoops from outside the core and cache maintenance operations are not counted. | |
| 0x17 | [27:25] | L2D_CACHE_REFILL | L2 unified cache refill. This event counts any Cacheable transaction from L1 which causes data to be read from outside the core. L2 refills caused by stashes and prefetches that target this level of cache, should not be counted. | |
| 0x18 | [30:28] | L2D_CACHE_WB | L2 unified cache write-back. This event counts any write-back of data from the L2 cache to outside the core. This includes snoops to the L2 which return data, regardless of whether they cause an invalidation. Invalidations from the L2 which do not write data outside of the core and snoops which return data from the L1 are not counted. | |
| 0x19 | [32:31] | BUS_ACCESS | Bus access. This event counts for every beat of data that are transferred over the data channels between the core and the SCU. If both read and write data beats are transferred on a given cycle, this event is counted twice on that cycle. This event counts the sum of BUS_ACCESS_RD and BUS_ACCESS_WR. | |
| 0x1A | [33] | MEMORY_ERROR | Local memory error. This event counts any correctable or uncorrectable memory error (ECC or parity) in the protected core RAMs. | |
| 0x1B | [36:34] | INST_SPEC | Operation speculatively executed | |
| 0x1C | [37] | TTBR_WRITE_RETIRED | Instruction architecturally executed, condition code check pass, write to TTBR.This event only counts writes to TTBR0/TTBR1 in AArch32 state and TTBR0_EL1/TTBR1_EL1 in AArch64 state. | |
| | | | The following instructions are not counted: | |
| | | | Accesses to TTBR0_EL12/TTBR1_EL12 or TTBR0_EL2/TTBR1_EL2. | |
| 0x1D | [38] | BUS_CYCLES | Bus cycles. This event duplicates CPU_CYCLES. | |

| Event | PMU | Event mnemonic | Event description | | |
|--------|-------------------------|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|--|
| number | event bus (to trace) | | | | |
| 0x1E | [39] | CHAIN | For odd-numbered counters, increments the count by one for each overflow of the preceding even-numbered counter. For even-numbered counters, there is no increment. | | |
| 0x20 | [41:40] | L2D_CACHE_ALLOCATE | L2 unified cache allocation without refill. This event counts any full cache line write into the L2 cache which does not cause a linefill, including write-backs from L1 to L2 and full-line writes which do not allocate into L1. | | |
| 0x21 | [42] | BR_RETIRED | Instruction architecturally executed, branch. This event counts all branches, taken or not. This excludes exception entries, debug entries and CCFAIL branches. | | |
| 0x22 | [43] | BR_MIS_PRED_RETIRED | Instruction architecturally executed, mispredicted branch. This event counts any branch counted by BR_RETIRED which is not correctly predicted and causes a pipeline flush. | | |
| 0x23 | [44] | STALL_FRONTEND | No operation issued because of the frontend. The counter counts on any cycle when there are no fetched instructions available to dispatch. | | |
| 0x24 | [45] | STALL_BACKEND | No operation issued because of the backend. The counter counts on any cycle fetched instructions are not dispatched due to resource constraints. | | |
| 0x25 | [48:46] | L1D_TLB | L1 data TLB access. This event counts any load or store operation which accesses the data L1 TLB. If both a load and a store are executed on a cycle, this event counts twice. This event counts regardless of whether the MMU is enabled. | | |
| 0x26 | [168] | L1I_TLB | L1 instruction TLB access. This event counts any instruction fetch which accesses the instruction L1 TLB. This event counts regardless of whether the MMU is enabled. | | |
| 0x29 | [157] | L3D_CACHE_ALLOCATE | Attributable L3 data or unified cache allocation without refill. This event counts any full cache line write into the L3 cache which does not cause a linefill, including writebacks from L2 to L3 and full-line writes which do not allocate into L2. | | |
| 0x2A | [159:158] | L3D_CACHE_REFILL | Attributable Level 3 unified cache refill. | | |
| | | | This event counts for any cacheable read transaction returning data from the SCU for which the data source was outside the cluster. Transactions such as ReadUnique are counted here as 'read' transactions, even though they can be generated by store instructions. | | |
| | | | Prefetches and stashes that target the L3 cache are not counted. | | |
| 0x2B | [160] | L3D_CACHE | Attributable L3 unified cache access. | | |
| | | | This event counts for any cacheable read transaction returning data from the SCU, or for any cacheable write to the SCU. | | |
| 0x2D | [49] | L2D_TLB_REFILL | Attributable L2 data or unified TLB refill. This event counts on any refill of the L2 TLB, caused by either an instruction or data access. This event does not count if the MMU is disabled. | | |
| 0x2F | [51:50] | L2D_TLB | Attributable L2 data or unified TLB access. This event counts on any access to the L2 TLB (caused by a refill of any of the L1 TLBs). This event does not count if the MMU is disabled. | | |
| 0x31 | [161] | REMOTE_ACCESS | Access to another socket in a multi-socket system. | | |
| 0x34 | [52] | DTLB_WALK | Access to data TLB that caused a page table walk. This event counts on any data access which causes L2D_TLB_REFILL to count. | | |
| 0x35 | [53] | ITLB_WALK | Access to instruction TLB that caused a page table walk. This event counts on any instruction access which causes L2D_TLB_REFILL to count. | | |

| Event | PMU | Event mnemonic | Event description |
|--------|-------------------------|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| number | event bus (to trace) | | |
| 0x36 | [163:162] | LL_CACHE_RD | Last level cache access, read. |
| | | | If CPUECTLR.EXTLLC is set: This event counts any cacheable read transaction which returns a data source of 'interconnect cache'. |
| | | | • If CPUECTLR.EXTLLC is not set: This event is a duplicate of the L*D_CACHE_RD event corresponding to the last level of cache implemented – L3D_CACHE_RD if both per-core L2 and cluster L3 are implemented, L2D_CACHE_RD if only one is implemented, or L1D_CACHE_RD if neither is implemented. |
| 0x37 | [165:164] | LL_CACHE_MISS_RD | Last level cache miss, read. |
| | | | If CPUECTLR.EXTLLC is set: This event counts any cacheable read transaction which returns a data source of 'DRAM', 'remote' or 'inter-cluster peer'. |
| | | | If CPUECTLR.EXTLLC is not set: This event is a duplicate of the L*D_CACHE_REFILL_RD event corresponding to the last level of cache implemented – L3D_CACHE_REFILL_RD if both per-core L2 and cluster L3 are implemented, L2D_CACHE_REFILL_RD if only one is implemented, or L1D_CACHE_REFILL_RD if neither is implemented. |
| 0x40 | [55:54] | L1D_CACHE_RD | L1 data cache access, read. This event counts any load operation or page table walk access which looks up in the L1 data cache. In particular, any access which could count the L1D_CACHE_REFILL_RD event causes this event to count. |
| | | | The following instructions are not counted: |
| | | | Cache maintenance instructions and prefetches. |
| | | | Non-cacheable accesses. |
| 0x41 | [57:56] | L1D_CACHE_WR | L1 data cache access, write. This event counts any store operation which looks up in the L1 data cache. In particular, any access which could count the L1D_CACHE_REFILL_WR event causes this event to count. |
| | | | The following instructions are not counted: |
| | | | Cache maintenance instructions and prefetches. |
| | | | Non-cacheable accesses. |
| 0x42 | [58] | L1D_CACHE_REFILL_RD | L1 data cache refill, read. This event counts any load operation or page table walk access which causes data to be read from outside the L1, including accesses which do not allocate into L1. |
| | | | The following instructions are not counted: |
| | | | Cache maintenance instructions and prefetches. |
| | | | Non-cacheable accesses. |
| 0x43 | [59] | L1D_CACHE_REFILL_WR | L1 data cache refill, write. This event counts any store operation which causes data to be read from outside the L1, including accesses which do not allocate into L1. |
| | | | The following instructions are not counted: |
| | | | Cache maintenance instructions and prefetches. |
| | | | Stores of an entire cache line, even if they make a coherency request outside the L1. |
| | | | Partial cache line writes which do not allocate into the L1 cache. |
| | | | Non-cacheable accesses. |

| Event | PMU | Event mnemonic | Event description | | | |
|--------|------------|-------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|--|--|
| number | | | | | | |
| 0 11 | (to trace) | LAD CACHE DEFILL ININED | L1 data cache refill, inner. This event counts any L1 data cache linefill (as counted by | | | |
| 0x44 | [60] | L1D_CACHE_REFILL_INNER | L1D_CACHE_REFILL) which hits in the L2 cache, L3 cache, or another core in the cluster. | | | |
| 0x45 | [61] | L1D_CACHE_REFILL_OUTER | L1 data cache refill, outer. This event counts any L1 data cache linefill (as counted by L1D_CACHE_REFILL) which does not hit in the L2 cache, L3 cache, or another core in the cluster, and instead obtains data from outside the cluster. | | | |
| 0x46 | [62] | L1D_CACHE_WB_VICTIM | L1 data cache write-back, victim | | | |
| 0x47 | [63] | L1D_CACHE_WB_CLEAN | L1 data cache write-back cleaning and coherency | | | |
| 0x48 | [64] | L1D_CACHE_INVAL | L1 data cache invalidate. | | | |
| 0x4C | [65] | L1D_TLB_REFILL_RD | L1 data TLB refill, read. | | | |
| 0x4D | [66] | L1D_TLB_REFILL_WR | L1 data TLB refill, write. | | | |
| 0x4E | [68:67] | L1D_TLB_RD | L1 data TLB access, read. | | | |
| 0x4F | [70:69] | L1D_TLB_WR | L1 data TLB access, write. | | | |
| 0x50 | [72:71] | L2D_CACHE_RD | L2 unified cache access, read. This event counts any read transaction from L1 which looks up in the L2 cache. | | | |
| | | | Snoops from outside the core are not counted. | | | |
| 0x51 | [74:73] | L2D_CACHE_WR | L2 unified cache access, write. This event counts any write transaction from L1 which looks up in the L2 cache or any write-back from L1 which allocates into the L2 cache. | | | |
| | | | Snoops from outside the core are not counted. | | | |
| 0x52 | [76:75] | L2D_CACHE_REFILL_RD | L2 unified cache refill, read. This event counts any cacheable read transaction from L1 which causes data to be read from outside the core. L2 refills caused by stashes into L2 should not be counted. Transactions such as ReadUnique are counted here as 'read' transactions, even though they can be generated by store instructions. | | | |
| 0x53 | [78:77] | L2D_CACHE_REFILL_WR | L2 unified cache refill, write. This event counts any write transaction from L1 which causes data to be read from outside the core. L2 refills caused by stashes into L2 should not be counted. Transactions such as ReadUnique are not counted as write transactions. | | | |
| 0x56 | [80:79] | L2D_CACHE_WB_VICTIM | L2 unified cache write-back, victim. | | | |
| 0x57 | [82:81] | L2D_CACHE_WB_CLEAN | L2 unified cache write-back, cleaning, and coherency. | | | |
| 0x58 | [84:83] | L2D_CACHE_INVAL | L2 unified cache invalidate. | | | |
| 0x5C | [85] | L2D_TLB_REFILL_RD | L2 data or unified TLB refill, read. | | | |
| 0x5D | [86] | L2D_TLB_REFILL_WR | L2 data or unified TLB refill, write. | | | |
| 0x5E | [88:87] | L2D_TLB_RD | L2 data or unified TLB access, read. | | | |
| 0x5F | [89] | L2D_TLB_WR | L2 data or unified TLB access, write. | | | |
| 0x60 | [90] | BUS_ACCESS_RD | Bus access read. This event counts for every beat of data transferred over the read data channel between the core and the SCU. | | | |
| 0x61 | [91] | BUS_ACCESS_WR | Bus access write. This event counts for every beat of data transferred over the write data channel between the core and the SCU. | | | |

| Event | PMU Event mnemonic Event description | | | |
|--------|--------------------------------------|-------------------|-----------------------------------------------------------------------------------------------------------------------------------|--|
| number | event bus (to trace) | | | |
| 0x66 | [93:92] | MEM_ACCESS_RD | Data memory access, read. This event counts memory accesses due to load instructions. The following instructions are not counted: | |
| | | | Instruction fetches. | |
| | | | Cache maintenance instructions. | |
| | | | Translation table walks. | |
| | | | • Prefetches. | |
| 0x67 | [95:94] | MEM_ACCESS_WR | Data memory access, write. This event counts memory accesses due to store instructions. | |
| | | | The following instructions are not counted: • Instruction fetches. | |
| | | | Cache maintenance instructions. | |
| | | | Translation table walks. | |
| | | | Prefetches. | |
| 0x68 | [97:96] | UNALIGNED_LD_SPEC | Unaligned access, read | |
| 0x69 | [99:98] | UNALIGNED_ST_SPEC | Unaligned access, write | |
| 0x6C | [103] | LDREX_SPEC | Exclusive operation speculatively executed, LDREX or LDX. | |
| 0x6D | [104] | STREX_PASS_SPEC | Exclusive operation speculatively executed, STREX or STX pass. | |
| 0x6E | [105] | STREX_FAIL_SPEC | Exclusive operation speculatively executed, STREX or STX fail. | |
| 0x6F | [106] | STREX_SPEC | Exclusive operation speculatively executed, STREX or STX. | |
| 0x70 | [109:107] | LD_SPEC | Operation speculatively executed, load. | |
| 0x71 | [112:110] | ST_SPEC | Operation speculatively executed, store. | |
| 0x73 | [117:115] | DP_SPEC | Operation speculatively executed, integer data-processing. | |
| 0x74 | [120:118] | ASE_SPEC | Operation speculatively executed, Advanced SIMD instruction. | |
| 0x75 | [123:121] | VFP_SPEC | Operation speculatively executed, floating-point instruction. | |
| 0x76 | [125:124] | PC_WRITE_SPEC | Operation speculatively executed, software change of the PC. | |
| 0x77 | [128:126] | CRYPTO_SPEC | Operation speculatively executed, Cryptographic instruction. | |
| 0x78 | [129] | BR_IMMED_SPEC | Branch speculatively executed, immediate branch. | |
| 0x79 | [130] | BR_RETURN_SPEC | Branch speculatively executed, procedure return. | |
| 0x7A | [131] | BR_INDIRECT_SPEC | Branch speculatively executed, indirect branch. | |
| 0x7C | [132] | ISB_SPEC | Barrier speculatively executed, ISB. | |
| 0x7D | [134:133] | DSB_SPEC | Barrier speculatively executed, DSB. | |
| 0x7E | [136:135] | DMB_SPEC | Barrier speculatively executed, DMB. | |
| 0x81 | [137] | EXC_UNDEF | Counts the number of undefined exceptions taken locally. | |
| 0x82 | [138] | EXC_SVC | Exception taken locally, Supervisor Call. | |
| 0x83 | [139] | EXC_PABORT | Exception taken locally, Instruction Abort. | |
| 0x84 | [140] | EXC_DABORT | Exception taken locally, Data Abort and SError. | |

| Event | PMU | Event mnemonic | Event description | | | |
|--------|-------------------------|-----------------|----------------------------------------------------------------------|--|--|--|
| number | event bus (to trace) | | | | | |
| 0x86 | [141] | EXC_IRQ | Exception taken locally, IRQ. | | | |
| 0x87 | [142] | EXC_FIQ | Exception taken locally, FIQ. | | | |
| 0x88 | [143] | EXC_SMC | Exception taken locally, Secure Monitor Call. | | | |
| 0x8A | [144] | EXC_HVC | Exception taken locally, Hypervisor Call. | | | |
| 0x8B | [145] | EXC_TRAP_PABORT | Exception taken, Instruction Abort not taken locally. | | | |
| 0x8C | [146] | EXC_TRAP_DABORT | Exception taken, Data Abort or SError not taken locally. | | | |
| 0x8D | [147] | EXC_TRAP_OTHER | Exception taken, Other traps not taken locally. | | | |
| 0x8E | [148] | EXC_TRAP_IRQ | Exception taken, IRQ not taken locally. | | | |
| 0x8F | [149] | EXC_TRAP_FIQ | Exception taken, FIQ not taken locally. | | | |
| 0x90 | [152:150] | RC_LD_SPEC | Release consistency operation speculatively executed, load-acquire. | | | |
| 0x91 | [155:153] | RC_ST_SPEC | Release consistency operation speculatively executed, store-release. | | | |
| 0xA0 | [166] | L3_CACHE_RD | L3 cache read. | | | |

4.2.4 PMU interrupts

The Cortex®-A76AE core asserts the **nPMUIRQ** signal when the PMU generates an interrupt.

You can route this signal to an external interrupt controller for prioritization and masking. This is the only mechanism that signals this interrupt to the core.

This interrupt is also driven as a trigger input to the CTI. See the $Arm^{\mathbb{R}}$ DynamlQ^M Shared Unit AE Technical Reference Manual for more information.

4.2.5 Exporting PMU events

Some of the PMU events are exported to the ETM trace unit to be monitored.



The **PMUEVENT** bus is not exported to external components. This is because the event bus cannot safely cross an asynchronous boundary when events can be generated on every cycle.

4.3 Activity Monitor Unit

This chapter describes the Activity Monitor Unit (AMU).

4.3.1 About the AMU

The Cortex®-A76AE core includes activity monitoring. It has features in common with performance monitoring, but is intended for system management use whereas performance monitoring is aimed at user and debug applications.

The activity monitors provide useful information for system power management and persistent monitoring. The activity monitors are read-only in operation and their configuration is limited to the highest Exception level implemented.

The Cortex®-A76AE core implements five counters, 0-4, and activity monitoring is only implemented in AArch64.

4.3.2 Accessing the activity monitors

The activity monitors can be accessed by:

- The System register interface for AArch64 state.
- Read-only memory-mapped access using the debug APB interface.

4.3.2.1 Access enable bit

The access enable bit for traps on accesses to activity monitor registers is required at EL2 and EL3.

In the Cortex®-A76AE core, the AMEN[4] bit in registers ACTLR_EL2 and ACTLR_EL3 controls the activity monitor registers enable.



In the Cortex®-A76AE core, the AMEN[4] bit is **RESO** in ACTLR and HACTLR. Activity monitors are not implemented in AArch32.

4.3.2.2 System register access

The core implements activity monitoring in AArch64 and the activity monitors can be accessed using the MRS and MSR instructions.

4.3.2.3 External memory-mapped access

Activity monitors can also be memory-mapped accessed from the APB debug interface.

In this case, the AMU registers provide debug information and are read-only.

4.3.3 AMU counters

The Cortex®-A76AE core implements five counters, 0-4. The activity monitor counters, AMEVCNTR<0-4>_ELO, have the following characteristics:

- All events are counted in 64-bit wrapping counters that overflow when they wrap. There is no support for overflow status indication or interrupts.
- Any change in clock frequency, including when a WFI and WFE instruction stops the clock, can affect any counter.
- Events 0, 1, 2, 3, and 4 are fixed, and the AMEVTYPER<n> evtCount bits are read-only.

4.3.4 AMU events

The following table describes the counters that are implemented in the Cortex®-A76AE core and the mapping to events. All events are fixed.

Table 4-4: Mapping of counters to fixed events

| Activity monitor counter <n></n> | Event | Event number | Description |
|----------------------------------|--------------------------------|-----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 0 | Cycles at core frequency | 0x11 | Cycles count. |
| 1 | Cycles at constant frequency | OxEF | This counter is used to replicate the generic system counter that is incremented on a constant basis, and not incremented depending on the PE frequency core. |
| 2 | Instructions retired | 0x08 | Instruction architecturally executed. This counter increments for every instruction that is executed architecturally, including instructions that fail their condition code check. |
| 3 | First miss | 0xF0 | The first miss event tracks whether any external load miss is outstanding and starts counting only from a first-miss until data returns for that miss. The counter does not count for any remaining part of overlapping accesses, only counting again when the first-miss condition is re-detected. |
| 4 | High activity | 0xF1 | Instructions executing through the design which act as a hint for potential high power activity. |



To program AMU counter 4, you need to program the AMEVTYPER4_ELO register. For more information, see 5.8.7 AMEVTYPERn_ELO, Activity Monitor Event Type Register, ELO on page 380.

4.4 Embedded Trace Macrocell

This chapter describes the ETM for the Cortex®-A76AE core.

4.4.1 About the ETM

The ETM trace unit is a module that performs real-time instruction flow tracing that is based on the ETMv4 architecture. The ETM is a CoreSight component, and is an integral part of the Arm Real-time Debug solution, DS-5 Development Studio.

See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4 for more information.

4.4.2 ETM trace unit generation options and resources

The following table shows the trace generation options that are implemented in the Cortex®-A76AE ETM trace unit.

Table 4-5: ETM trace unit generation options implemented

| Description | Configuration |
|-------------------------------------------------------------------|-----------------|
| Instruction address size in bytes | 8 |
| Data address size in bytes | 0 |
| Data value size in bytes | 0 |
| Virtual Machine ID size in bytes | 4 |
| Context ID size in bytes | 4 |
| Support for conditional instruction tracing | Not implemented |
| Support for tracing of data | Not implemented |
| Support for tracing of load and store instructions as PO elements | Not implemented |
| Support for cycle counting in the instruction trace | Implemented |
| Support for branch broadcast tracing | Implemented |
| Number of events supported in the trace | 4 |
| Return stack support | Implemented |
| Tracing of SError exception support | Implemented |
| Instruction trace cycle counting minimum threshold | - |
| Size of Trace ID | 7 bits |
| Synchronization period support | read/write |
| Global timestamp size | 64 bits |
| Number of cores available for tracing | 1 |
| ATB trigger support | Implemented |
| Low power behavior override | Not implemented |
| Stall control support | Implemented |
| Support for overflow avoidance | Not implemented |
| Support for using CONTEXTIDR_EL2 in VMID comparator | Implemented |

The following table shows the resources that are implemented in the Cortex®-A76AE ETM trace unit.

Table 4-6: ETM trace unit resources implemented


| Description | Configuration |
|------------------------------------------------------|----------------------|
| Number of resource selection pairs implemented | 8 |
| Number of external input selectors implemented | 4 |
| Number of external inputs implemented | 165, 4 CTI + 161 PMU |
| Number of counters implemented | 2 |
| Reduced function counter implemented | Not implemented |
| Number of sequencer states implemented | 4 |
| Number of Virtual Machine ID comparators implemented | 1 |
| Number of Context ID comparators implemented | 1 |
| Number of address comparator pairs implemented | 4 |
| Number of single-shot comparator controls | 1 |
| Number of core comparator inputs implemented | 0 |
| Data address comparisons implemented | Not implemented |
| Number of data value comparators implemented | 0 |

4.4.3 ETM trace unit functional description

This section describes the functionality of the ETM trace unit.

The following figure shows the main functional blocks of the ETM trace unit.

Figure 4-2: ETM functional blocks

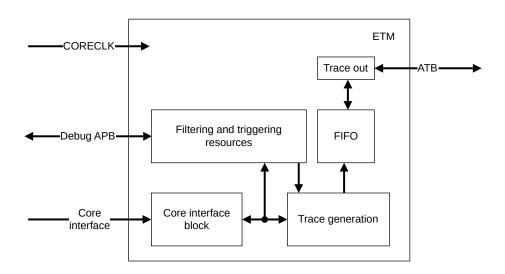

Core interface

This block monitors the behavior of the core and generates PO elements that are essentially executed branches and exceptions traced in program order.

Trace generation

The trace generation block generates various trace packets based on PO elements.

Filtering and triggering resources

You can limit the amount of trace data generated by the ETM through the process of filtering.

For example, generating trace only in a certain address range. More complicated logic analyzer style filtering options are also available.

The ETM trace unit can also generate a trigger that is a signal to the Trace Capture Device to stop capturing trace.

FIFO

The trace generated by the ETM trace unit is in a highly-compressed form.

The FIFO enables trace bursts to be flattened out. When the FIFO becomes full, the FIFO signals an overflow. The trace generation logic does not generate any new trace until the FIFO is emptied. This causes a gap in the trace when viewed in the debugger.

Trace out

Trace from FIFO is output on the AMBA ATB interface.

4.4.4 Resetting the ETM

The reset for the ETM trace unit is the same as a Cold reset for the core.

The ETM trace unit is not reset when Warm reset is applied to the core so that tracing through Warm core reset is possible.

If the ETM trace unit is reset, tracing stops until the ETM trace unit is reprogrammed and reenabled. However, if the core is reset using Warm reset, the last few instructions that are provided by the core before the reset might not be traced.

4.4.5 Programming and reading ETM trace unit registers

You program and read the ETM trace unit registers using the Debug APB interface.

The core does not have to be in debug state when you program the ETM trace unit registers.

When you are programming the ETM trace unit registers, you must enable all the changes at the same time. Otherwise, if you program the counter, it might start to count based on incorrect events before the correct setup is in place for the trigger condition.

To disable the ETM trace unit, use the TRCPRGCTLR.EN bit.

Figure 4-3: Programming ETM trace unit registers

4.4.6 ETM trace unit register interfaces

The Cortex®-A76AE core supports only memory-mapped interface to trace registers.

See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4 for information on the behaviors on register accesses for different trace unit states and the different access mechanisms.

Related information

External debug interface on page 302

4.4.7 Interaction with the PMU and Debug

This section describes the interaction with the PMU and the effect of debug double lock on trace register access.

Interaction with the PMU

The Cortex®-A76AE core includes a PMU that enables events, such as cache misses and instructions executed, to be counted over a period of time.

The PMU and ETM trace unit function together.

Use of PMU events by the ETM trace unit

The PMU architectural events described in 4.2.3 PMU events on page 303 are available to the ETM trace unit through the extended input facility.

See the Arm® Architecture Reference Manual Armv8, for A-profile architecture for more information about PMU events.

The ETM trace unit uses four extended external input selectors to access the PMU events. Each selector can independently select one of the PMU events, that are then active for the cycles where the relevant events occur. These selected events can then be accessed by any of the event registers within the ETM trace unit. The PMU event table describes the PMU events.

Related information

PMU events on page 303

5 Debug registers

This part describes the Debug registers of the Cortex®-A76AE core.

5.1 AArch32 debug registers

This chapter describes the Debug registers in the AArch32 Execution state and shows examples of how to use them.

5.1.1 AArch32 Debug register summary

The following table summarizes the 32-bit and 64-bit debug control registers that are accessible in the AArch32 Execution state from the internal CP14 interface. These registers are accessed by the MCR and MRC instructions in the order of CRn, op2, CRm, Op1, or MCRR and MRRC instructions in the order of CRm, Op1.

For those registers that are not described in this chapter, see the Arm® Architecture Reference Manual Arm®v8, for Arm®v8-A architecture profile.

Table 5-1: AArch32 Debug register summary

| CRn | Op2 | CRm | Op1 | Name | Type | Reset | Description |
|-----|-----|-----|-----|-------------|------|------------|-------------------------------------------------------|
| сO | 0 | с1 | 0 | DBGDSCRint | RO | 000x0000 | Debug Status and Control Register, Internal View |
| сO | 0 | c5 | 0 | DBGDTRTXint | WO | - | Debug Data Transfer Register, Transmit, Internal View |
| сO | 0 | c5 | 0 | DBGDTRRXint | RO | 0x00000000 | Debug Data Transfer Register, Receive, Internal View |

5.2 AArch64 Debug registers

This chapter describes the Debug registers in the AArch64 Execution state and shows examples of how to use them.

5.2.1 AArch64 Debug register summary

This section summarizes the debug control registers that are accessible in the AArch64 Execution state.

These registers, listed in the following table, are accessed by the MRS and MSR instructions in the order of OpO, CRn, Op1, CRm, Op2.

See 5.3.1 Memory-mapped Debug register summary on page 325 for a complete list of registers accessible from the external debug interface. The 64-bit registers cover two addresses on the

external memory interface. For those registers that are not described in this chapter, see the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

Table 5-2: AArch64 debug register summary

| Name | Туре | Reset | Width | Description |
|-----------------|------|------------|-------|------------------------------------------------------------------------|
| OSDTRRX_EL1 | RW | 0x00000000 | 32 | Debug Data Transfer Register, Receive, External View |
| DBGBVR0_EL1 | RW | - | 64 | Debug Breakpoint Value Register O |
| DBGBCR0_EL1 | RW | UNK | 32 | 5.2.2 DBGBCRn_EL1, Debug Breakpoint Control Registers, EL1 on page 319 |
| DBGWVR0_EL1 | RW | - | 64 | Debug Watchpoint Value Register 0 |
| DBGWCR0_EL1 | RW | UNK | 32 | 5.2.4 DBGWCRn_EL1, Debug Watchpoint Control Registers, EL1 on page 323 |
| DBGBVR1_EL1 | RW | - | 64 | Debug Breakpoint Value Register 1 |
| DBGBCR1_EL1 | RW | UNK | 32 | 5.2.2 DBGBCRn_EL1, Debug Breakpoint Control Registers, EL1 on page 319 |
| DBGWVR1_EL1 | RW | - | 64 | Debug Watchpoint Value Register 1 |
| DBGWCR1_EL1 | RW | UNK | 32 | 5.2.4 DBGWCRn_EL1, Debug Watchpoint Control Registers, EL1 on page 323 |
| MDCCINT_EL1 | RW | 0x00000000 | 32 | Monitor Debug Comms Channel Interrupt Enable Register |
| MDSCR_EL1 | RW | - | 32 | Monitor Debug System Control Register, EL1 |
| DBGBVR2_EL1 | RW | - | 64 | Debug Breakpoint Value Register 2 |
| DBGBCR2_EL1 | RW | UNK | 32 | 5.2.2 DBGBCRn_EL1, Debug Breakpoint Control Registers, EL1 on page 319 |
| DBGWVR2_EL1 | RW | - | 64 | Debug Watchpoint Value Register 2 |
| DBGWCR2_EL1 | RW | UNK | 32 | 5.2.4 DBGWCRn_EL1, Debug Watchpoint Control Registers, EL1 on page 323 |
| OSDTRTX_EL1 | RW | - | 32 | Debug Data Transfer Register, Transmit, External View |
| DBGBVR3_EL1 | RW | - | 64 | Debug Breakpoint Value Register 3 |
| DBGBCR3_EL1 | RW | UNK | 32 | 5.2.2 DBGBCRn_EL1, Debug Breakpoint Control Registers, EL1 on page 319 |
| DBGWVR3_EL1 | RW | - | 64 | Debug Watchpoint Value Register 3 |
| DBGWCR3_EL1 | RW | UNK | 32 | 5.2.4 DBGWCRn_EL1, Debug Watchpoint Control Registers, EL1 on page 323 |
| DBGBVR4_EL1 | RW | - | 64 | Debug Breakpoint Value Register 4 |
| DBGBCR4_EL1 | RW | UNK | 32 | 5.2.2 DBGBCRn_EL1, Debug Breakpoint Control Registers, EL1 on page 319 |
| DBGBVR5_EL1 | RW | - | 64 | Debug Breakpoint Value Register 5 |
| DBGBCR5_EL1 | RW | UNK | 32 | 5.2.2 DBGBCRn_EL1, Debug Breakpoint Control Registers, EL1 on page 319 |
| OSECCR_EL1 | RW | 0x00000000 | 32 | Debug OS Lock Exception Catch Register |
| MDCCSR_EL0 | RO | 0x00000000 | 32 | Monitor Debug Comms Channel Status Register |
| DBGDTR_EL0 | RW | 0x00000000 | 64 | Debug Data Transfer Register, half-duplex |
| DBGDTRTX_EL0 | WO | 0x00000000 | 32 | Debug Data Transfer Register, Transmit, Internal View |
| DBGDTRRX_EL0 | RO | 0x00000000 | 32 | Debug Data Transfer Register, Receive, Internal View |
| MDRAR_EL1 | RO | - | 64 | Debug ROM Address Register. This register is reserved, RESO |
| OSLAR_EL1 | WO | - | 32 | Debug OS Lock Access Register |
| OSLSR_EL1 | RO | 0x0000000A | 32 | Debug OS Lock Status Register |
| OSDLR_EL1 | RW | 0x00000000 | 32 | Debug OS Double Lock Register |
| DBGPRCR_EL1 | RW | - | 32 | Debug Power/Reset Control Register |
| DBGCLAIMSET_EL1 | RW | 0x000000FF | 32 | 5.2.3 DBGCLAIMSET_EL1, Debug Claim Tag Set Register, EL1 on page 322 |
| DBGCLAIMCLR_EL1 | RW | 0x00000000 | 32 | Debug Claim Tag Clear Register |

| Name | Туре | Reset | Width | Description |
|-------------------|------|------------|-------|--------------------------------------|
| DBGAUTHSTATUS_EL1 | RO | 0x000000AA | 32 | Debug Authentication Status Register |


5.2.2 DBGBCRn_EL1, Debug Breakpoint Control Registers, EL1

The DBGBCRn_EL1 registers hold control information for a breakpoint. Each DBGBVRn_EL1 is associated with a DBGBCRn_EL1 to form a *Breakpoint Register Pair* (BRP). The range of n for DBGBCRn_EL1 registers is 0 to 5.

Bit field descriptions

The DBGBCRn_EL1 registers are 32-bit registers.

Figure 5-1: DBGBCRn_EL1 bit assignments



RESO, [31:24]

res0

Reserved.

BT, [23:20]

Breakpoint Type. This field controls the behavior of Breakpoint debug event generation. This includes the meaning of the value held in the associated DBGBVRn_EL1, indicating whether it is an instruction address match or mismatch, or a Context match. It also controls whether the breakpoint is linked to another breakpoint. The possible values are:

0ь0000

Unlinked instruction address match.

0ь0001

Linked instruction address match.

0b0010

Unlinked Context ID match.

0b0011

Linked Context ID match.

0b0100

Unlinked instruction address mismatch.

0b0101

Linked instruction address mismatch.

0b0110

Unlinked CONTEXTIDR EL1 match.

0b0111

Linked CONTEXTIDR_EL1 match.

0ь1000

Unlinked VMID match.

0b1001

Linked VMID match.

0ь1010

Unlinked VMID + Conext ID match.

0b1011

Linked VMID + Context ID match.

0ь1100

Unlinked CONTEXTIDR_EL2 match.

0b1101

Linked CONTEXTIDR EL2 match.

0ь1110

Unlinked Full Context ID match.

0b1111

Linked Full Context ID match.

The field breakdown is:

• BT[3:1]: Base type. If the breakpoint is not context-aware, these bits are **RESO**. Otherwise, the possible values are:

| 0b000 | Match address. DBGBVRn_EL1 is the address of an instruction. |
|-------|--------------------------------------------------------------|
| 0b001 | Match context ID. DBGBVRn_EL1[31:0] is a context ID. |
| 0b010 | Match VMID. DBGBVRn_EL1[47:32] is a VMID. |
| 0b011 | Match VMID and CONTEXTIDR_EL1. DBGBVRn_EL1[31:0] is a |
| | context ID, and DBGBVRn_EL1[47:32] is a VMID. |

- BT[2]: Mismatch. **RESO**.
- BT[0]: Enable linking.

LBN, [19:16]

Linked breakpoint number. For Linked address matching breakpoints, this specifies the index of the context-matching breakpoint linked to.

SSC, [15:14]

Security State Control. Determines the Security states under which a breakpoint debug event for breakpoint *n* is generated.

This field must be interpreted with the *Higher Mode Control* (HMC), and *Privileged Mode Control* (PMC), fields to determine the mode and Security states that can be tested.

See the Arm® Architecture Reference Manual Armv8, for A-profile architecture for possible values of the HMC and PMC fields.

HMC, [13]

Hyp Mode Control bit. Determines the debug perspective for deciding when a breakpoint debug event for breakpoint *n* is generated.

This bit must be interpreted with the SSC and PMC fields to determine the mode and Security states that can be tested.

See the Arm® Architecture Reference Manual Armv8, for A-profile architecture for possible values of the SSC and PMC fields.

RESO, [12:9]

res0

Reserved.

BAS, [8:5]

Byte Address Select. Defines which halfwords a regular breakpoint matches, regardless of the instruction set and Execution state. A debugger must program this field as follows:

0x3

Match the T32 instruction at DBGBVRn EL1.

0xC

Match the T32 instruction at DBGBVRn_EL1+2.

0xF

Match the A64 or A32 instruction at DBGBVRn_EL1, or context match.

All other values are reserved.

The Arm®v8-A architecture does not support direct execution of Java bytecodes. BAS[3] and BAS[1] ignore writes and on reads return the values of BAS[2] and BAS[0] respectively.

See the Arm® Architecture Reference Manual Armv8, for A-profile architecture for more information on how the BAS field is interpreted by hardware.

RESO, [4:3]

res0

Reserved.

PMC, [2:1]

Privileged Mode Control. Determines the Exception level or levels that a breakpoint debug event for breakpoint *n* is generated.

This field must be interpreted with the SSC and HMC fields to determine the mode and Security states that can be tested.

See the Arm® Architecture Reference Manual Armv8, for A-profile architecture for possible values of the SSC and HMC fields.

Bits[2:1] have no effect for accesses made in Hyp mode.

E, [0]

Enable breakpoint. This bit enables the BRP:

0

BRP disabled.

1

BRP enabled.

A BRP never generates a breakpoint debug event when it is disabled.

The value of DBGBCRn_EL1.E is **UNKNOWN** on reset. A debugger must ensure that DBGBCRn_EL1.E has a defined value before it enables debug.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.


5.2.3 DBGCLAIMSET_EL1, Debug Claim Tag Set Register, EL1

The DBGCLAIMSET_EL1 is used by software to set CLAIM bits to 1.

Bit field descriptions

The DBGCLAIMSET_EL1 is a 32-bit register.

Figure 5-2: DBGCLAIMSET_EL1 bit assignments



RESO, [31:8]

res0

Reserved.

CLAIM, [7:0]

Claim set bits.

Writing a 1 to one of these bits sets the corresponding CLAIM bit to 1. This is an indirect write to the CLAIM bits.

A single write operation can set multiple bits to 1. Writing 0 to one of these bits has no effect.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.


5.2.4 DBGWCRn_EL1, Debug Watchpoint Control Registers, EL1

The DBGWCRn_EL1 registers hold control information for a watchpoint. Each DBGWCRn_EL1 is associated with a DBGWVRn_EL1 to form a *Watchpoint Register Pair* (WRP). The range of *n* for DBGWCRn_EL1 registers is 0 to 3.

Bit field descriptions

The DBGWCRn_EL1 registers are 32-bit registers.

Figure 5-3: DBGWCRn_EL1 bit assignments



RESO, [31:29]

RES0

Reserved.

MASK, [28:24]

Address mask. Only objects up to 2GB can be watched using a single mask.

0b00000 No mask. 0b00001 Reserved. 0b00010 Reserved.

RESO, [23:21]

RES0

Reserved.

WT, [20]

Watchpoint type. Possible values are:

0b0

Unlinked data address match.

0b1

Linked data address match.

On Cold reset, the field reset value is architecturally **UNKNOWN**.

LBN, [19:16]

Linked breakpoint number. For Linked data address watchpoints, this specifies the index of the Context-matching breakpoint linked to.

On Cold reset, the field reset value is architecturally **UNKNOWN**.

SSC, [15:14]

Security state control. Determines the Security states under which a watchpoint debug event for watchpoint n is generated. This field must be interpreted along with the HMC and PAC fields.

On Cold reset, the field reset value is architecturally **UNKNOWN**.

HMC, [13]

Higher mode control. Determines the debug perspective for deciding when a watchpoint debug event for watchpoint n is generated. This field must be interpreted along with the SSC and PAC fields.

On Cold reset, the field reset value is architecturally **UNKNOWN**.

BAS, [12:5]

Byte address select. Each bit of this field selects whether a byte from within the word or double-word addressed by DBGWVRn_EL1 is being watched. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture for more information.

LSC, [4:3]

Load/store access control. This field enables watchpoint matching on the type of access being made. The possible values are:

0b01

Match instructions that load from a watchpoint address.

0b10

Match instructions that store to a watchpoint address.

0b11

Match instructions that load from or store to a watchpoint address.

All other values are reserved, but must behave as if the watchpoint is disabled. Software must not rely on this property because the behavior of reserved values might change in a future revision of the architecture.

IGNORED

On Cold reset, the field reset value is architecturally **UNKNOWN**.

PAC, [2:1]

Privilege of access control. Determines the Exception level or levels at which a watchpoint debug event for watchpoint n is generated. This field must be interpreted along with the SSC and HMCfields.

On Cold reset, the field reset value is architecturally **UNKNOWN**.

E, [0]

Enable watchpoint n. Possible values are:

0b0

Watchpoint disabled.

0b1

Watchpoint enabled.

On Cold reset, the field reset value is architecturally **UNKNOWN**.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

5.3 Memory-mapped Debug registers

This chapter describes the memory-mapped Debug registers and shows examples of how to use them.

5.3.1 Memory-mapped Debug register summary

The following table shows the offset address for the registers that are accessible from the external debug interface.

For those registers that are not described in this chapter, see the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

Table 5-3: Memory-mapped debug register summary

| Offset | Name | Туре | Width | Description | |
|--------------|--------------|------|-------|--------------------------------------------|--|
| 0x000-0x01C- | | - | - | Reserved | |
| 0x020 EDESR | | RW | 32 | External Debug Event Status Register | |
| 0x024 | EDECR | RW | 32 | External Debug Execution Control Register | |
| 0x028-0x02C- | | - | - | Reserved | |
| 0x030 | EDWAR[31:0] | RO | 64 | External Debug Watchpoint Address Register | |
| 0x034 | EDWAR[63:32] | | | | |
| 0x038-0x07C | - | - | - | Reserved | |

| Offset | Name | Туре | Width | Description |
|-------------|--------------------|------|-------|------------------------------------------------------------------------|
| 0x080 | DBGDTRRX_EL0 | RW | 32 | Debug Data Transfer Register, Receive |
| 0x084 | EDITR | WO | 32 | External Debug Instruction Transfer Register |
| 0x088 | EDSCR | RW | 32 | External Debug Status and Control Register |
| 0x08C | DBGDTRTX_EL0 | WO | 32 | Debug Data Transfer Register, Transmit |
| 0x090 | EDRCR | WO | 32 | 5.3.14 EDRCR, External Debug Reserve Control Register on page 336 |
| 0x094 | - | RW | 32 | Reserved |
| 0x098 | EDECCR | RW | 32 | External Debug Exception Catch Control Register |
| 0x09C | - | - | - | Reserved |
| 0x0A0 | - | - | - | Reserved |
| 0x0A4 | - | - | - | Reserved |
| 0x0A8 | - | - | - | Reserved |
| 0x0AC | - | - | - | Reserved |
| 0x0B0-0x2FC | - | - | - | Reserved |
| 0x300 | OSLAR_EL1 | WO | 32 | OS Lock Access Register |
| 0x304-0x30C | - | - | - | Reserved |
| 0x310 | EDPRCR | RW | 32 | External Debug Power/Reset Control Register |
| 0x314 | EDPRSR | RO | 32 | External Debug Processor Status Register |
| 0x318-0x3FC | - | - | - | Reserved |
| 0x400 | DBGBVR0_EL1[31:0] | RW | 64 | Debug Breakpoint Value Register 0 |
| 0x404 | DBGBVR0_EL1[63:32] | 1 | | |
| 0x408 | DBGBCR0_EL1 | RW | 32 | 5.2.2 DBGBCRn_EL1, Debug Breakpoint Control Registers, EL1 on page 319 |
| 0x40C | - | - | - | Reserved |
| 0x410 | DBGBVR1_EL1[31:0] | RW | 64 | Debug Breakpoint Value Register 1 |
| 0x414 | DBGBVR1_EL1[63:32] |] | | |
| 0x418 | DBGBCR1_EL1 | RW | 32 | 5.2.2 DBGBCRn_EL1, Debug Breakpoint Control Registers, EL1 on page 319 |
| 0x41C | - | - | - | Reserved |
| 0x420 | DBGBVR2_EL1[31:0] | RW | 64 | Debug Breakpoint Value Register 2 |
| 0x424 | DBGBVR2_EL1[63:32] | | | |
| 0x428 | DBGBCR2_EL1 | RW | 32 | 5.2.2 DBGBCRn_EL1, Debug Breakpoint Control Registers, EL1 on page 319 |
| 0x42C | - | - | - | Reserved |
| 0x430 | DBGBVR3_EL1[31:0] | RW | 64 | Debug Breakpoint Value Register 3 |
| 0x434 | DBGBVR3_EL1[63:32] | | | |
| 0x438 | DBGBCR3_EL1 | RW | 32 | 5.2.2 DBGBCRn_EL1, Debug Breakpoint Control Registers, EL1 on page 319 |
| 0x43C | - | - | - | Reserved |
| 0x440 | DBGBVR4_EL1[31:0] | RW | 64 | Debug Breakpoint Value Register 4 |
| 0x444 | DBGBVR4_EL1[63:32] | | | |
| 0x448 | DBGBCR4_EL1 | RW | 32 | 5.2.2 DBGBCRn_EL1, Debug Breakpoint Control Registers, EL1 on page 319 |
| 0x44C | - | - | - | Reserved |
| 0x450 | DBGBVR5_EL1[31:0] | RW | 64 | Debug Breakpoint Value Register 5 |

| Offset | Name | Туре | Width | Description |
|-------------|--------------------|------|-------|---------------------------------------------------------------------------|
| 0×454 | DBGBVR5_EL1[63:32] | RW | 64 | Debug Breakpoint Value Register 5 |
| 0x458 | DBGBCR5_EL1 | RW | 32 | 5.2.2 DBGBCRn_EL1, Debug Breakpoint Control Registers, EL1 on page 319 |
| 0x45C-0x7FC | - | - | - | Reserved |
| 0x800 | DBGWVR0_EL1[31:0] | RW | 64 | Debug Watchpoint Value Register 0 |
| 0x804 | DBGWVR0_EL1[63:32] | 1 | | |
| 0x808 | DBGWCR0_EL1 | RW | 32 | 5.2.4 DBGWCRn_EL1, Debug Watchpoint Control Registers, EL1 on page 323 |
| 0x80C | - | - | - | Reserved |
| 0x810 | DBGWVR1_EL1[31:0] | RW | 64 | Debug Watchpoint Value Register 1 |
| 0x814 | DBGWVR1_EL1[63:32] | 1 | | |
| 0x818 | DBGWCR1_EL1 | RW | 32 | 5.2.4 DBGWCRn_EL1, Debug Watchpoint Control Registers, EL1 on page 323 |
| 0x81C | - | - | - | Reserved |
| 0x820 | DBGWVR2_EL1[31:0] | RW | 64 | Debug Watchpoint Value Register 2 |
| 0x824 | DBGWVR2_EL1[63:32] | 1 | | |
| 0x828 | DBGWCR2_EL1 | RW | 32 | 5.2.4 DBGWCRn_EL1, Debug Watchpoint Control Registers, EL1 on page 323 |
| 0x82C | - | - | - | Reserved |
| 0x830 | DBGWVR3_EL1[31:0] | RW | 64 | Debug Watchpoint Value Register 0, |
| 0x834 | DBGWVR3_EL1[63:32] | 1 | | |
| 0x838 | DBGWCR3_EL1 | RW | 32 | 5.2.4 DBGWCRn_EL1, Debug Watchpoint Control Registers, EL1 on page 323 |
| 0x83C-0xCFC | - | - | - | Reserved |
| 0xD00 | MIDR | RO | 32 | 3.2.90 MIDR_EL1, Main ID Register, EL1 on page 219 |
| 0xD04-0xD1C | - | - | - | Reserved |
| 0xD20 | EDPFR[31:0] | RO | 64 | 3.2.67 ID_AA64PFR0_EL1, AArch64 Processor Feature Register 0, EL1 on page |
| 0xD24 | EDPFR[63:32] | 1 | | 185 |
| 0xD28 | | | 64 | 3.2.67 ID_AA64PFR0_EL1, AArch64 Processor Feature Register 0, EL1 on page |
| 0xD2C | EDDFR[63:32] | | | 185 |
| 0xD60-0xEFC | - | - | - | Reserved |
| 0xF00 | - | - | - | Reserved |
| 0xF04-0xF9C | - | - | - | Reserved |
| 0xFA0 | DBGCLAIMSET_EL1 | RW | 32 | 5.2.3 DBGCLAIMSET_EL1, Debug Claim Tag Set Register, EL1 on page 322 |
| 0xFA4 | DBGCLAIMCLR_EL1 | RW | 32 | Debug Claim Tag Clear Register |
| 0xFA8 | EDDEVAFF0 | RO | 32 | External Debug Device Affinity Register 0 |
| 0xFAC | EDDEVAFF1 | RO | 32 | External Debug Device Affinity Register 1 |
| 0xFB0 | - | - | - | Reserved |
| 0xFB4 | - | - | - | Reserved |
| 0xFB8 | DBGAUTHSTATUS_EL1 | RO | 32 | Debug Authentication Status Register |
| 0xFBC | EDDEVARCH | RO | 32 | External Debug Device Architecture Register |
| 0xFC0 | EDDEVID2 | RO | 32 | External Debug Device ID Register 2, res0 |
| 0xFC4 | EDDEVID1 | RO | 32 | 5.3.7 EDDEVID1, External Debug Device ID Register 1 on page 332 |
| 0xFC8 | EDDEVID | RO | 32 | 5.3.6 EDDEVID, External Debug Device ID Register 0 on page 331 |

| Offset | Name | Туре | Width | Description |
|-------------|-----------|------|-------|------------------------------------------------------------------------------------|
| 0xFCC | EDDEVTYPE | RO | 32 | External Debug Device Type Register |
| 0xFD0 | EDPIDR4 | RO | 32 | 5.3.12 EDPIDR4, External Debug Peripheral Identification Register 4 on page 335 |
| 0xFD4-0xFDC | EDPIDR5-7 | RO | 32 | 5.3.13 EDPIDRn, External Debug Peripheral Identification Registers 5-7 on page 336 |
| 0xFE0 | EDPIDR0 | RO | 32 | 5.3.8 EDPIDRO, External Debug Peripheral Identification Register 0 on page 332 |
| 0xFE4 | EDPIDR1 | RO | 32 | 5.3.9 EDPIDR1, External Debug Peripheral Identification Register 1 on page 333 |
| 0xFE8 | EDPIDR2 | RO | 32 | 5.3.10 EDPIDR2, External Debug Peripheral Identification Register 2 on page 334 |
| 0xFEC | EDPIDR3 | RO | 32 | 5.3.11 EDPIDR3, External Debug Peripheral Identification Register 3 on page 334 |
| 0xFF0 | EDCIDR0 | RO | 32 | 5.3.2 EDCIDRO, External Debug Component Identification Register 0 on page 328 |
| 0xFF4 | EDCIDR1 | RO | 32 | 5.3.3 EDCIDR1, External Debug Component Identification Register 1 on page 329 |
| 0xFF8 | EDCIDR2 | RO | 32 | 5.3.4 EDCIDR2, External Debug Component Identification Register 2 on page 329 |
| 0xFFC | EDCIDR3 | RO | 32 | 5.3.5 EDCIDR3, External Debug Component Identification Register 3 on page 330 |


5.3.2 EDCIDRO, External Debug Component Identification Register 0

The EDCIDRO provides information to identify an external debug component.

Bit field descriptions

The EDCIDRO is a 32-bit register.

Figure 5-4: EDCIDRO bit assignments



RESO, [31:8]

res0

Reserved.

PRMBL_0, [7:0]

0x0D

Preamble byte 0.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

The EDCIDRO can be accessed through the external debug interface, offset 0xFF0.


5.3.3 EDCIDR1, External Debug Component Identification Register 1

The EDCIDR1 provides information to identify an external debug component.

Bit field descriptions

The EDCIDR1 is a 32-bit register.

Figure 5-5: EDCIDR1 bit assignments



RESO, [31:8]

res0

Reserved.

CLASS, [7:4]

0x9

Debug component.

PRMBL_1, [3:0]

0x0

Preamble.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

The EDCIDR1 can be accessed through the external debug interface, offset 0xFF4.


5.3.4 EDCIDR2, External Debug Component Identification Register 2

The EDCIDR2 provides information to identify an external debug component.

Bit field descriptions

The EDCIDR2 is a 32-bit register.

Figure 5-6: EDCIDR2 bit assignments



RESO, [31:8]

res0

Reserved.

PRMBL_2, [7:0]

 0×05

Preamble byte 2.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

The EDCIDR2 can be accessed through the external debug interface, offset 0xFF8.


5.3.5 EDCIDR3, External Debug Component Identification Register 3

The EDCIDR3 provides information to identify an external debug component.

Bit field descriptions

The EDCIDR3 is a 32-bit register.

Figure 5-7: EDCIDR3 bit assignments



RESO, [31:8] res0

Reserved.

PRMBL_3, [7:0]

0xB1

Preamble byte 3.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

The EDCIDR3 can be accessed through the external debug interface, offset 0xFFC.


5.3.6 EDDEVID, External Debug Device ID Register 0

The EDDEVID provides extra information for external debuggers about features of the debug implementation.

Bit field descriptions

The EDDEVID is a 32-bit register.

Figure 5-8: EDDEVID bit assignments



RESO, [31:28]

res0

Reserved.

AuxRegs, [27:24]

Indicates support for Auxiliary registers:

0x0

None supported.

RESO, [23:0]

res0

Reserved.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

The EDDEVID can be accessed through the external debug interface, offset 0xFC8.


5.3.7 EDDEVID1, External Debug Device ID Register 1

The EDDEVID1 provides extra information for external debuggers about features of the debug implementation.

Bit field descriptions

The EDDEVID1 is a 32-bit register.

Figure 5-9: EDDEVID1 bit assignments



RESO, [31:0]

res0

Reserved.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

The EDDEVID1 can be accessed through the external debug interface, offset 0xFC4.


5.3.8 EDPIDRO, External Debug Peripheral Identification Register 0

The EDPIDRO provides information to identify an external debug component.

Bit field descriptions

The EDPIDRO is a 32-bit register.

Figure 5-10: EDPIDR0 bit assignments



RESO, [31:8]

res0

Reserved.

Part_0, [7:0]

0x0E Least significant byte of the debug part number.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

The EDPIDRO can be accessed through the external debug interface, offset 0xFE0.


5.3.9 EDPIDR1, External Debug Peripheral Identification Register 1

The EDPIDR1 provides information to identify an external debug component.

Bit field descriptions

The EDPIDR1 is a 32-bit register.

Figure 5-11: EDPIDR1 bit assignments



RESO, [31:8]

res0

Reserved.

DES_0, [7:4]

0xB

Arm Limited. This is the least significant nibble of JEP106 ID code.

Copyright © 2018, 2020, 2022 Arm Limited (or its affiliates). All rights reserved. Non-Confidential

Part_1, [3:0]

0xD

Most significant nibble of the debug part number.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

The EDPIDR1 can be accessed through the external debug interface, offset 0xFE4.


5.3.10 EDPIDR2, External Debug Peripheral Identification Register 2

The EDPIDR2 provides information to identify an external debug component.

Bit field descriptions

The EDPIDR2 is a 32-bit register.

Figure 5-12: EDPIDR2 bit assignments



RESO, [31:8]

res0 Reserved.

Revision, [7:4]

0x2 r1p1.

JEDEC, [3]

0b1 RAO. Indicates a JEP106 identity code is used.

DES_1, [2:0]

Ob011 Arm Limited. This is the most significant nibble of JEP106 ID code.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

The EDPIDR2 can be accessed through the external debug interface, offset 0xFE8.


5.3.11 EDPIDR3, External Debug Peripheral Identification Register 3

The EDPIDR3 provides information to identify an external debug component.

Bit field descriptions

The EDPIDR3 is a 32-bit register.

Figure 5-13: EDPIDR3 bit assignments



RESO, [31:8]

res0

Reserved.

REVAND, [7:4]

0x0

Part minor revision.

CMOD, [3:0]

0x0

Customer modified.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

The EDPIDR3 can be accessed through the external debug interface, offset 0xFEC.


5.3.12 EDPIDR4, External Debug Peripheral Identification Register 4

The EDPIDR4 provides information to identify an external debug component.

Bit field descriptions

The EDPIDR4 is a 32-bit register.

Figure 5-14: EDPIDR4 bit assignments



RESO, [31:8]

res0

Reserved.

SIZE, [7:4]

0x0

Size of the component. Log_2 the number of 4KB pages from the start of the component to the end of the component ID registers.

DES_2, [3:0]

0x4

Arm Limited This is the least significant nibble JEP106 continuation code.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

The EDPIDR4 can be accessed through the external debug interface, offset 0xFD0.

5.3.13 EDPIDRn, External Debug Peripheral Identification Registers 5-7

No information is held in the Peripheral ID5, Peripheral ID6, and Peripheral ID7 Registers.


They are reserved for future use and are **RESO**.

5.3.14 EDRCR, External Debug Reserve Control Register

The EDRCR is part of the Debug registers functional group.

Bit field descriptions

Figure 5-15: EDRCR bit assignments



RESO, [31:4]

res0

Reserved.

CSPA, [3]

Clear Sticky Pipeline Advance. This bit is used to clear the EDSCR. PipeAdv bit to 0. The actions on writing to this bit are:

0

No action.

1

Clear the EDSCR.PipeAdv bit to 0.

CSE, [2]

Clear Sticky Error. Used to clear the EDSCR cumulative error bits to 0. The actions on writing to this bit are:

0

No action

1

Clear the EDSCR.{TXU, RXO, ERR} bits, and, if the core is in Debug state, the EDSCR.ITO bit, to 0.

RESO, [1:0]

res0

Reserved.

The EDRCR can be accessed through the internal memory-mapped interface and the external debug interface, offset 0x090.

Usage constraints

This register is accessible as follows:

| Off | DLK | OSLK | SLK | Default |
|-------|-------|-------|-----|---------|
| Error | Error | Error | WI | WO |

Configurations

EDRCR is in the Core power domain.

5.4 AArch32 PMU registers

This chapter describes the AArch32 PMU registers and shows examples of how to use them.

5.4.1 AArch32 PMU register summary

The PMU counters and their associated control registers are accessible in the AArch32 Execution state from the internal CP15 System register interface with MCR and MRC instructions for 32-bit registers and MCRR and MRRC for 64-bit registers.

The following table gives a summary of the Cortex®-A76AE PMU registers in the AArch32 Execution state. For those registers that are not described in this chapter, see the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

Table 5-5: PMU register summary in the AArch32 Execution state

| CRn | Op1 | CRm | Op2 | Name | Туре | Width | Reset | Description | |
|-----|-----|-----|-----|---------------|------|-------|-----------------------------------------------------------|----------------------------------------------------------------------------------------|--|
| с9 | 0 | c12 | 0 | PMCR | RW | 32 | 0x410B30XX | 5.4.4 PMCR, Performance Monitors Control Register on page 344 | |
| с9 | 0 | c12 | 1 | PMCNTENSET | RW | 32 | 0x00000000 Performance Monitors Count Enable Set Register | | |
| с9 | 0 | c12 | 2 | PMCNTENCLR | RW | 32 | 0x00000000 | Performance Monitors Count Enable Clear Register | |
| с9 | 0 | c12 | 3 | PMOVSR | RW | 32 | 0x00000000 | Performance Monitors Overflow Flag Status Register | |
| с9 | 0 | c12 | 4 | PMSWINC | WO | 32 | UNK | Performance Monitors Software Increment Register | |
| с9 | 0 | c12 | 5 | PMSELR | RW | 32 | UNK | Performance Monitors Event Counter Selection Register | |
| с9 | 0 | c12 | 6 | PMCEID0 | RO | 32 | 0x7FFF0F3F | 5.4.2 PMCEIDO, Performance Monitors Common Event Identification Register 0 on page 339 | |
| с9 | 0 | c12 | 7 | PMCEID1 | RO | 32 | 0x00F2AE7F | 5.4.3 PMCEID1, Performance Monitors Common Event Identification Register 1 on page 342 | |
| с9 | 0 | с14 | 4 | PMCEID2 | RO | 32 | 0x00000000 | Reserved | |
| с9 | 0 | с14 | 5 | PMCEID3 | RO | 32 | 0x00000000 | Reserved | |
| с9 | 0 | c13 | 0 | PMCCNTR[31:0] | RW | 32 | UNK | Performance Monitors Cycle Count Register | |
| с9 | 3 | c13 | 0 | PMCCNTR[63:0] | RW | 64 | UNK | | |
| с9 | 0 | c13 | 1 | PMXEVTYPER | RW | 32 | UNK | Performance Monitors Selected Event Type Register | |
| с9 | 0 | с13 | 2 | PMXEVCNTR | RW | 32 | UNK | Performance Monitors Selected Event Count Register | |


| CRn | Op1 | CRm | Op2 | Name | Туре | Width | Reset | Description |
|-----|-----|-----|-----|------------|------|-------|------------|-------------------------------------------------------|
| с9 | 0 | с14 | 0 | PMUSERENR | RW | 32 | UNK | Performance Monitors User Enable Register |
| с9 | 0 | с14 | 3 | PMOVSSET | RW | 32 | 0x00000000 | Performance Monitor Overflow Flag Status Set Register |
| с14 | 0 | с8 | 0 | PMEVCNTR0 | RW | 32 | UNK | Performance Monitor Event Count Registers |
| c14 | 0 | с8 | 1 | PMEVCNTR1 | RW | 32 | UNK | |
| c14 | 0 | с8 | 2 | PMEVCNTR2 | RW | 32 | UNK | |
| c14 | 0 | с8 | 3 | PMEVCNTR3 | RW | 32 | UNK | |
| с14 | 0 | с8 | 4 | PMEVCNTR4 | RW | 32 | UNK | |
| с14 | 0 | с8 | 5 | PMEVCNTR5 | RW | 32 | UNK | |
| с14 | 0 | c12 | 0 | PMEVTYPERO | RW | 32 | UNK | Performance Monitors Event Type Registers |
| с14 | 0 | c12 | 1 | PMEVTYPER1 | RW | 32 | UNK | |
| с14 | 0 | c12 | 2 | PMEVTYPER2 | RW | 32 | UNK | |
| с14 | 0 | c12 | 3 | PMEVTYPER3 | RW | 32 | UNK | |
| c14 | 0 | c12 | 4 | PMEVTYPER4 | RW | 32 | UNK | |
| с14 | 0 | с12 | 5 | PMEVTYPER5 | RW | 32 | UNK | |
| с14 | 0 | c15 | 7 | PMCCFILTR | RW | 32 | UNK | Performance Monitors Cycle Count Filter Register |

5.4.2 PMCEID0, Performance Monitors Common Event Identification Register 0

The PMCEIDO defines which common architectural and common microarchitectural feature events are implemented.

Bit field descriptions

Figure 5-16: PMCEID0 bit assignments



ID[31:0], [31:0]

Common architectural and microarchitectural feature events that can be counted by the PMU event counters.

The following table shows the PMCEIDO bit assignments with event implemented or not implemented when the associated bit is set to 1 or 0. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture for more information about these events.

Table 5-6: PMU events

| Bit | Event mnemonic | Description |
|-------|--------------------|------------------------------------------------------------------------------------------------|
| [31] | L1D_CACHE_ALLOCATE | L1 Data cache allocate: |
| | | 0 |
| | | This event is not implemented. |
| [30] | CHAIN | Chain. For odd-numbered counters, counts once for each overflow of the preceding even-numbered |
| | | counter. For even-numbered counters, does not count: |
| | | |
| | | This event is implemented. |
| [29] | BUS_CYCLES | Bus cycle: |
| | | |
| | | This event is implemented. |
| [28] | TTBR_WRITE_RETIRED | TTBR write, architecturally executed, condition check pass - write to translation table base: |
| | | |
| | | This event is implemented. |
| [27] | INST_SPEC | Instruction speculatively executed: |
| | | |
| | | This event is implemented. |
| [26] | MEMORY_ERROR | Local memory error: |
| | | |
| | | This event is implemented. |
| [25] | BUS_ACCESS | Bus access: |
| | | |
| ļ | | This event is implemented. |
| [24] | L2D_CACHE_WB | L2 Data cache Write-Back: |
| | | |
| | | This event is implemented. |
| [23] | L2D_CACHE_REFILL | L2 Data cache refill: |
| | | |
| | | This event is implemented. |
| [22] | L2D_CACHE | L2 Data cache access: |
| | | |
| [04] | LAD CACHE MD | This event is implemented. |
| [21] | L1D_CACHE_WB | L1 Data cache Write-Back: |
| | | |
| [00] | LAL CACLIE | This event is implemented. |
| [20] | L1I_CACHE | L1 Instruction cache access: |
| | | This event is implemented |
| [4.0] | MENA ACCECC | This event is implemented. |
| [[19] | MEM_ACCESS | Data memory access: |
| | | This event is implemented |
| | | This event is implemented. |

| Bit | Event mnemonic | Description |
|------|------------------------|-----------------------------------------------------------------------------------------|
| [18] | BR_PRED | Predictable branch Speculatively executed: |
| | | 1 |
| | | This event is implemented. |
| [17] | CPU_CYCLES | Cycle: |
| | | 1 |
| | | This event is implemented. |
| [16] | BR_MIS_PRED | Mispredicted or not predicted branch Speculatively executed: |
| | | 1 |
| | | This event is implemented. |
| [15] | UNALIGNED_LDST_RETIRED | Instruction architecturally executed, condition check pass - unaligned load or store: |
| | | 0 |
| | | This event is not implemented. |
| [14] | BR_RETURN_RETIRED | Instruction architecturally executed, condition check pass - procedure return: |
| | | 0 |
| | | This event is not implemented. |
| [13] | BR_IMMED_RETIRED | Instruction architecturally executed - immediate branch: |
| | | 0 |
| | | This event is not implemented. |
| [12] | PC_WRITE_RETIRED | Instruction architecturally executed, condition check pass - software change of the PC: |
| | | 0 |
| | | This event is not implemented. |
| [11] | CID_WRITE_RETIRED | Instruction architecturally executed, condition check pass - write to CONTEXTIDR: |
| | | 1 |
| | | This event is implemented. |
| [10] | EXC_RETURN | Instruction architecturally executed, condition check pass - exception return: |
| | | 1 |
| | | This event is implemented. |
| [9] | EXC_TAKEN | Exception taken: |
| | | 1 |
| | | This event is implemented. |
| [8] | INST_RETIRED | Instruction architecturally executed: |
| | | 1 |
| | | This event is implemented. |
| [7] | ST_RETIRED | Instruction architecturally executed, condition check pass - store: |
| | | 0 |
| | | This event is not implemented. |
| [6] | LD_RETIRED | Instruction architecturally executed, condition check pass - load: |
| | | 0 |
| | | This event is not implemented. |
| [5] | L1D_TLB_REFILL | L1 Data TLB refill: |
| | | 1 |
| | | This event is implemented. |

| Bit | Event mnemonic | Description | | | |
|-----|------------------|----------------------------------------------------------------------------------|--|--|--|
| [4] | L1D_CACHE | L1 Data cache access: | | | |
| | | 1 | | | |
| | | This event is implemented. | | | |
| [3] | L1D_CACHE_REFILL | L1 Data cache refill: | | | |
| | | 1 | | | |
| | | This event is implemented. | | | |
| [2] | L1I_TLB_REFILL | L1 Instruction TLB refill: | | | |
| | | 1 | | | |
| | | This event is implemented. | | | |
| [1] | L1I_CACHE_REFILL | L1 Instruction cache refill: | | | |
| | | 1 | | | |
| | | This event is implemented. | | | |
| [O] | SW_INCR | Instruction architecturally executed, condition check pass - software increment: | | | |
| | | 1 | | | |
| | | This event is implemented. | | | |



The PMU events implemented in the above table can be found in PMU Events on page 303.


Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

5.4.3 PMCEID1, Performance Monitors Common Event Identification Register 1

The PMCEID1 defines which common architectural and common microarchitectural feature events are implemented.

Bit field descriptions

Figure 5-17: PMCEID1 bit assignments



RESO, [31:16]

res0 Reserved.

ID[47:32], [15:0]

Common architectural and microarchitectural feature events that can be counted by the PMU event counters.

For each bit described in the following table, the event is implemented if the bit is set to 1, or not implemented if the bit is set to 0.

Table 5-7: PMU common events

| Bit | Event mnemonic | Description |
|------|---------------------|------------------------------------------------------------------------------------------|
| [23] | LL_CACHE_MISS_RD | Attributable Last Level cache memory read miss. |
| | | 1 This event is implemented. |
| [22] | LL_CACHE_RD | Attributable Last Level cache memory read. |
| | | 1 This event is implemented. |
| [21] | ITLB_WALK | Attributable instruction TLB access with at least one translation table walk. |
| | | 1 This event is implemented. |
| [20] | DTLB_WALK | Attributable data or unified TLB access with at least one translation table walk. |
| | | 1 This event is implemented. |
| [17] | REMOTE_ACCESS | Attributable access to another socket in a multi-socket system. |
| | | 1 This event is implemented. |
| [15] | L2D_TLB | Attributable L2 data or unified TLB access. |
| | | 1 This event is implemented. |
| [13] | L2D_TLB_REFILL | Attributable L2 data or unified TLB refill. |
| | | 1 This event is implemented. |
| [6] | L1I_TLB | L1 instruction TLB access. |
| | | 1 This event is implemented. |
| [5] | L1D_TLB | L1 data TLB access. |
| | | 1 This event is implemented. |
| [4] | STALL_BACKEND | No operation issued due to backend. |
| | | 1 This event is implemented. |
| [3] | STALL_FRONTEND | No operation issued due to frontend. |
| | _ | |
| [2] | BR_MIS_PRED_RETIRED | 1 This event is implemented. Instruction architecturally executed, mispredicted branch. |
| | | |
| [1] | BR_RETIRED | 1 This event is not implemented. Instruction architecturally executed, branch. |
| [1] | DIVERTINED | |
| | | 1 This event is implemented. |

| Bit | Event mnemonic | Description | | | | | |
|-----|--------------------|------------------------------------------|--|--|--|--|--|
| [O] | L2D_CACHE_ALLOCATE | L2 data cache allocation without refill. | | | | | |
| | | 1 This event is implemented. | | | | | |



The PMU events implemented in the above table can be found in PMU Events on page 303.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.


5.4.4 PMCR, Performance Monitors Control Register

The PMCR provides details of the Performance Monitors implementation, including the number of counters that are implemented, and configures and controls the counters.

Bit field descriptions

PMCR is a 32-bit register, and is part of the Performance Monitors registers functional group.

Figure 5-18: PMCR bit assignments

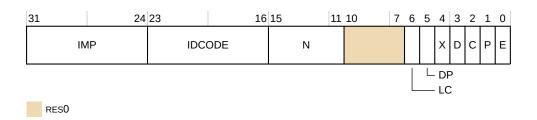

IMP, [31:24]

Indicates the implementer code. The value is:

0x41 ASCII character 'A' - implementer is Arm® Limited.

IDCODE, [23:16]

Identification code. The value is:

0x11 Cortex®-A76AF core.

N, [15:11]

Identifies the number of event counters implemented.

0b00110 The core implements six event counters.

RESO, [10:7]

res0 Reserved.

LC, [6]

Long cycle count enable. Determines which PMCCNTR bit generates an overflow recorded in PMOVSR[31]. The overflow event is generated on a 32-bit or 64-bit boundary. The possible values are:

| 0b0 | Overflow event is generated on a 32-bit boundary, when an increment |
|-----|---------------------------------------------------------------------|
| | changes PMCCNTR[31] from 1 to 0. This is the reset value. |
| 0b1 | Overflow event is generated on a 64-bit boundary, when an increment |
| | changes PMCCNTR[63] from 1 to 0 |

Arm deprecates use of PMCR.LC = 0b0.

DP, [5]

Disable cycle counter CCNT when event counting is prohibited. The possible values are:

| 0b0 | Cycle counter operates regardless of the non-invasive debug |
|-----|----------------------------------------------------------------------|
| | authentication settings. This is the reset value. |
| 0b1 | Cycle counter is disabled if non-invasive debug is not permitted and |
| | enabled. |

X, [4]

Export enable. This bit permits events to be exported to another debug device, such as a trace macrocell, over an event bus. The possible values are:

| 0b0 | Export of events is disabled. This is the reset value. |
|-----|--------------------------------------------------------|
| 0b1 | Export of events is enabled. |

No events are exported when counting is prohibited.

This field does not affect the generation of Performance Monitors overflow interrupt requests or signaling to a cross-trigger interface (CTI) that can be implemented as signals exported from the PE.

When this register has an architecturally defined reset value, if this field is implemented as an RW field, it resets to 0.

D, [3]

Clock divider. The possible values are:

| 0b0 | When enabled, counter CCNT counts every clock cycle. This is the reset |
|-----|------------------------------------------------------------------------|
| | value. |
| 0b1 | When enabled, counter CCNT counts once every 64 clock cycles. |

Arm deprecates use of PMCR.D = 0b1.

C, [2]

Cycle counter reset. This bit is WO. The effects of writing to this bit are:

0b0 No action. This is the reset value.

0b1 Reset PMCCNTR to zero.

This bit is always RAZ.

Resetting PMCCNTR does not clear the PMCCNTR overflow bit to 0. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture for more information.

P, [1]

Event counter reset. This bit is WO. The effects of writing to this bit are:

0b0 No action. This is the reset value.

0b1 Reset all event counters accessible in the current EL, not including

PMCCNTR, to zero.

This bit is always RAZ.

In Non-secure ELO and EL1, a write of 1 to this bit does not reset event counters that HDCR.HPMN or MDCR_EL2.HPMN reserves for EL2 use.

In EL2 and EL3, a write of 1 to this bit resets all the event counters.

Resetting the event counters does not clear any overflow bits to 0.

E, [0]

Enable. The possible values are:

ObO All counters that are accessible at Non-secure EL1, including

PMCCNTR, are disabled. This is the reset value.

0b1 When this register has an architecturally defined reset value, this field

resets to 0.

This bit is RW.

This bit does not affect the operation of event counters that HDCR.HPMN or MDCR_EL2.HPMN reserves for EL2 use.

When this register has an architecturally defined reset value, this field resets to 0.

Configurations

AArch32 System register PMCR is architecturally mapped to AArch64 System register PMCR_ELO. See 5.5.4 PMCR_ELO, Performance Monitors Control Register, ELO on page 353.

AArch32 System register PMCR bits [6:0] are architecturally mapped to External register PMCR EL0[6:0].

There is one instance of this register that is used in both Secure and Non-secure states.

This register is in the Warm reset domain. Some or all RW fields of this register have defined reset values. On a Warm or Cold reset these apply only if the PE resets into an Exception level that is using AArch32. Otherwise, on a Warm or Cold reset RW fields in this register reset to architecturally *UNKNOWN* values.

5.5 AArch64 PMU registers

This chapter describes the AArch64 PMU registers and shows examples of how to use them.

5.5.1 AArch64 PMU register summary

The PMU counters and their associated control registers are accessible in the AArch64 Execution state with MRS and MSR instructions.

The following table gives a summary of the Cortex®-A76AE PMU registers in the AArch64 Execution state. For those registers that are not described in this chapter, see the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

Table 5-8: PMU register summary in the AArch64 Execution state

| Name | Туре | Width | Reset | Description |
|----------------|------|-------|-------------------|-------------------------------------------------------------------------------------------------------------|
| PMCR_EL0 | RW | 32 | 0x411130XX | 5.5.4 PMCR_ELO, Performance Monitors Control Register, ELO on page 353 |
| PMCNTENSET_ELO | RW | 32 | UNK | Performance Monitors Count Enable Set Register |
| PMCNTENCLR_ELO | RW | 32 | UNK | Performance Monitors Count Enable Clear Register |
| PMOVSCLR_EL0 | RW | 32 | UNK | Performance Monitors Overflow Flag Status Register |
| PMSWINC_EL0 | WO | 32 | UNK | Performance Monitors Software Increment Register |
| PMSELR_ELO | RW | 32 | UNK | Performance Monitors Event Counter Selection Register |
| PMCEIDO_ELO | RO | 64 | 0x00000007FFF0F3F | 5.5.2 PMCEIDO_ELO, Performance Monitors Common Event Identification Register O, ELO on page 349 |

| Name | Туре | Width | Reset | Description |
|----------------|------|-------|-------------------|-------------------------------------------------------------------------------------------------------------|
| PMCEID1_EL0 | RO | 64 | 0x000000000F2AE7F | 5.5.3 PMCEID1_EL0, Performance Monitors Common Event Identification Register 1, EL0 on page 351 |
| PMCCNTR_EL0 | RW | 64 | UNK | Performance Monitors Cycle Count Register |
| PMXEVTYPER_ELO | RW | 32 | UNK | Performance Monitors Selected Event Type and Filter Register |
| PMCCFILTR_EL0 | RW | 32 | UNK | Performance Monitors Cycle Count Filter Register |
| PMXEVCNTR_EL0 | RW | 32 | UNK | Performance Monitors Selected Event Count Register |
| PMUSERENR_ELO | RW | 32 | UNK | Performance Monitors User Enable Register |
| PMINTENSET_EL1 | RW | 32 | UNK | Performance Monitors Interrupt Enable Set Register |
| PMINTENCLR_EL1 | RW | 32 | UNK | Performance Monitors Interrupt Enable Clear Register |
| PMOVSSET_EL0 | RW | 32 | UNK | Performance Monitors Overflow Flag Status Set Register |
| PMEVCNTRO_ELO | RW | 32 | UNK | Performance Monitors |
| PMEVCNTR1_EL0 | RW | 32 | UNK | Event Count Registers |
| PMEVCNTR2_EL0 | RW | 32 | UNK | |
| PMEVCNTR3_EL0 | RW | 32 | UNK | |
| PMEVCNTR4_EL0 | RW | 32 | UNK | |
| PMEVCNTR5_EL0 | RW | 32 | UNK | |
| PMEVTYPERO_ELO | RW | 32 | UNK | Performance Monitors |
| PMEVTYPER1_EL0 | RW | 32 | UNK | Event Type Registers |
| PMEVTYPER2_EL0 | RW | 32 | UNK | |
| PMEVTYPER3_EL0 | RW | 32 | UNK | |
| PMEVTYPER4_EL0 | RW | 32 | UNK | |
| PMEVTYPER5_EL0 | RW | 32 | UNK | |
| PMCCFILTR_EL0 | RW | 32 | UNK | Performance Monitors Cycle Count Filter Register |

Related information


PMU events on page 303

5.5.2 PMCEIDO_ELO, Performance Monitors Common Event Identification Register 0, ELO

The PMCEIDO_ELO defines which common architectural and common microarchitectural feature events are implemented.

Bit field descriptions

Figure 5-19: PMCEIDO_ELO bit assignments



RESO, [63:32]

res0 Reserved.

ID[31:0], [31:0]

Common architectural and microarchitectural feature events that can be counted by the PMU event counters.

For each bit described in the following table, the event is implemented if the bit is set to 1, or not implemented if the bit is set to 0.

Table 5-9: PMU common events

| Bit | Event mnemonic | Description | | |
|------|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|--|--|
| [31] | L1D_CACHE_ALLOCATE | L1 Data cache allocate: | | |
| | | 0 This event is not implemented. | | |
| [30] | CHAIN | Chain. For odd-numbered counters, counts once for each overflow of the preceding even-numbered counter. For even-numbered counters, does not count: | | |
| | | 1 This event is implemented. | | |
| [29] | BUS_CYCLES | Bus cycle: | | |
| | | 1 This event is implemented. | | |
| [28] | TTBR_WRITE_RETIRED | TTBR write, architecturally executed, condition check pass - write to translation table base: | | |
| | | 1 This event is implemented. | | |
| [27] | INST_SPEC | Instruction speculatively executed: | | |
| | | 1 This event is implemented. | | |

| Bit | Event mnemonic | Description | | |
|---------|------------------------|--------------------------------------------------------------------------------------------------------------------------|--|--|
| [26] | MEMORY_ERROR | Local memory error: | | |
| | | 1 This event is implemented. | | |
| [25] | BUS_ACCESS | Bus access: | | |
| | | 1 This event is implemented. | | |
| [24] | L2D_CACHE_WB | L2 Data cache Write-Back: | | |
| [| 223_6/16/12_775 | | | |
| [22] | LOD CACHE BEELL | This event is implemented. L2 Data cache refill: | | |
| [23] | L2D_CACHE_REFILL | LZ Data Cacrie retiii. | | |
| | | 1 This event is implemented. | | |
| [22] | L2D_CACHE | L2 Data cache access: | | |
| | | 1 This event is implemented. | | |
| [21] | L1D_CACHE_WB | L1 Data cache Write-Back: | | |
| | | 1 This event is implemented. | | |
| [20] | L1I_CACHE | L1 Instruction cache access: | | |
| | | 1 This event is implemented. | | |
| [19] | MEM_ACCESS | Data memory access: | | |
| | | 1 This event is implemented. | | |
| [18] | BR_PRED | Predictable branch speculatively executed: | | |
| | | | | |
| [4 7] | CDLL CVCLES | 1 This event is implemented. | | |
| | CPU_CYCLES | Cycle: | | |
| | | 1 This event is implemented. | | |
| [16] | BR_MIS_PRED | Mispredicted or not predicted branch speculatively executed: | | |
| | | 1 This event is implemented. | | |
| [15] | UNALIGNED_LDST_RETIRED | Instruction architecturally executed, condition check pass - unaligned load or store: | | |
| | | 0 This event is not implemented. | | |
| [14] | BR_RETURN_RETIRED | Instruction architecturally executed, condition check pass - procedure return: | | |
| | | 0 This event is not implemented. | | |
| [13] | BR_IMMED_RETIRED | Instruction architecturally executed - immediate branch: | | |
| | | | | |
| [12] | PC_WRITE_RETIRED | I his event is not implemented. Instruction architecturally executed, condition check pass - software change of the PC: | | |
| [د د د | , O_VVINITE_INCTINED | | | |
| [4 4] | CID MIDITE DETIDED | 0 This event is not implemented. | | |
| [11] | CID_WRITE_RETIRED | Instruction architecturally executed, condition check pass - write to CONTEXTIDR: | | |
| | | 1 This event is implemented. | | |

| Bit | Event mnemonic | Description | | |
|------|------------------|----------------------------------------------------------------------------------|--|--|
| [10] | EXC_RETURN | Instruction architecturally executed, condition check pass - exception return: | | |
| | | 1 This event is implemented. | | |
| [9] | EXC_TAKEN | Exception taken: | | |
| | | 1 This event is implemented. | | |
| [8] | INST_RETIRED | Instruction architecturally executed: | | |
| | | 1 This event is implemented. | | |
| [7] | ST_RETIRED | Instruction architecturally executed, condition check pass - store: | | |
| | | 0 This event is not implemented. | | |
| [6] | LD_RETIRED | Instruction architecturally executed, condition check pass - load: | | |
| | | 0 This event is not implemented. | | |
| [5] | L1D_TLB_REFILL | L1 Data TLB refill: | | |
| | | 1 This event is implemented. | | |
| [4] | L1D_CACHE | L1 Data cache access: | | |
| | | 1 This event is implemented. | | |
| [3] | L1D_CACHE_REFILL | L1 Data cache refill: | | |
| | | 1 This event is implemented. | | |
| [2] | L1I_TLB_REFILL | L1 Instruction TLB refill: | | |
| | | 1 This event is implemented. | | |
| [1] | L1I_CACHE_REFILL | L1 Instruction cache refill: | | |
| | | 1 This event is implemented. | | |
| [O] | SW_INCR | Instruction architecturally executed, condition check pass - software increment: | | |
| | | 1 This event is implemented. | | |




The PMU events implemented in the above table can be found in PMU Events on page 303.

5.5.3 PMCEID1_EL0, Performance Monitors Common Event Identification Register 1, EL0

The PMCEID1_ELO defines which common architectural and common microarchitectural feature events are implemented.

Bit field descriptions

Figure 5-20: PMCEID1 bit assignments



RESO, [63:24]

res0 Reserved.

ID[55:32], [23:0]

Common architectural and microarchitectural feature events that can be counted by the PMU event counters.

For each bit described in the following table, the event is implemented if the bit is set to 1, or not implemented if the bit is set to 0.

Table 5-10: PMU common events

| Bit | Event mnemonic | Description | |
|------|------------------|-----------------------------------------------------------------------------------|--|
| [23] | LL_CACHE_MISS_RD | Attributable Last Level cache memory read miss. | |
| | | 1 This event is implemented. | |
| [22] | LL_CACHE_RD | Attributable Last Level cache memory read. | |
| | | 1 This event is implemented. | |
| [21] | ITLB_WALK | Attributable instruction TLB access with at least one translation table walk. | |
| | | 1 This event is implemented. | |
| [20] | DTLB_WALK | Attributable data or unified TLB access with at least one translation table walk. | |
| | | 1 This event is implemented. | |
| [17] | REMOTE_ACCESS | Attributable access to another socket in a multi-socket system. | |
| | | 1 This event is implemented. | |
| [15] | L2D_TLB | Attributable L2 data or unified TLB access. | |
| | | 1 This event is implemented. | |

| Bit | Event mnemonic | Description | |
|------|---------------------|------------------------------------------------------------|--|
| [13] | L2D_TLB_REFILL | Attributable L2 data or unified TLB refill. | |
| | | 1 This event is implemented. | |
| [6] | L1I_TLB | L1 instruction TLB access. | |
| | | 1 This event is implemented. | |
| [5] | L1D_TLB | L1 data TLB access. | |
| | | 1 This event is implemented. | |
| [4] | STALL_BACKEND | No operation issued due to backend. | |
| | | 1 This event is implemented. | |
| [3] | STALL_FRONTEND | No operation issued due to frontend. | |
| | | 1 This event is implemented. | |
| [2] | BR_MIS_PRED_RETIRED | Instruction architecturally executed, mispredicted branch. | |
| | | 1 This event is not implemented. | |
| [1] | BR_RETIRED | Instruction architecturally executed, branch. | |
| | | 1 This event is implemented. | |
| [O] | L2D_CACHE_ALLOCATE | L2 data cache allocation without refill. | |
| | | 1 This event is implemented. | |




The PMU events implemented in the above table can be found in PMU Events on page 303.

5.5.4 PMCR_ELO, Performance Monitors Control Register, ELO

The PMCR_ELO provides details of the Performance Monitors implementation, including the number of counters that are implemented, and configures and controls the counters.

Bit field descriptions

Figure 5-21: PMCR_ELO bit assignments



IMP, [31:24]

Implementer code:

0x41 Arm.

This is a read-only field.

IDCODE, [23:16]

Identification code:

0x11 Cortex®-A76AE.

This is a read-only field.

N, [15:11]

Number of event counters.

Ob00110 Six counters.

RESO, [10:7]

RFSO Reserved.

LC, [6]

Long cycle count enable. Determines which PMCCNTR_ELO bit generates an overflow recorded in PMOVSR[31]. The possible values are:

- Overflow on increment that changes PMCCNTR EL0[31] from 1 to 0.
- Overflow on increment that changes PMCCNTR_EL0[63] from 1 to 0.

DP, [5]

Disable cycle counter, PMCCNTR ELO when event counting is prohibited:

- O Cycle counter operates regardless of the non-invasive debug authentication settings. This is the reset value.
- Cycle counter is disabled if non-invasive debug is not permitted and enabled.

This bit is read/write.

X, [4]

Export enable. This bit permits events to be exported to another debug device, such as a trace macrocell, over an event bus:

- o Export of events is disabled. This is the reset value.
- 1 Export of events is enabled.

This bit is read/write and does not affect the generation of Performance Monitors interrupts on the **nPMUIRQ** pin.

D, [3]

Clock divider:

- When enabled, PMCCNTR_ELO counts every clock cycle. This is the reset value.
- 1 When enabled, PMCCNTR_ELO counts every 64 clock cycles.

This bit is read/write.

C, [2]

Clock counter reset. This bit is WO. The effects of writing to this bit are:

- No action. This is the reset value.
- 1 Reset PMCCNTR ELO to 0.

This bit is always RAZ.

Resetting PMCCNTR_ELO does not clear the PMCCNTR_ELO overflow bit to 0. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture for more information.

P, [1]

Event counter reset. This bit is WO. The effects of writing to this bit are:

- No action. This is the reset value.
- 1 Reset all event counters, not including PMCCNTR_ELO, to zero.

This bit is always RAZ.

In Non-secure ELO and EL1, a write of 1 to this bit does not reset event counters that MDCR_EL2.HPMN reserves for EL2 use.

In EL2 and EL3, a write of 1 to this bit resets all the event counters.

Resetting the event counters does not clear any overflow bits to 0.

E, [0]

Enable. The possible values of this bit are:

- All counters, including PMCCNTR_ELO, are disabled. This is the reset value.
- 1 All counters are enabled.

This bit is RW.

In Non-secure ELO and EL1, this bit does not affect the operation of event counters that MDCR_EL2.HPMN reserves for EL2 use.

On Warm reset, the field resets to 0.

Configurations

AArch64 System register PMCR_EL0 is architecturally mapped to AArch32 System register PMCR.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

5.6 Memory-mapped PMU registers

This chapter describes the memory-mapped PMU registers and shows examples of how to use them.

5.6.1 Memory-mapped PMU register summary

There are PMU registers that are accessible through the external debug interface.

These registers are listed in the following table. For those registers that are not described in this chapter, see the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

Table 5-11: Memory-mapped PMU register summary

| Offset | Name | Туре | Description |
|-------------|--------------------|------|--------------------------------------------|
| 0x000 | PMEVCNTRO_ELO | RW | Performance Monitor Event Count Register 0 |
| 0x004 | - | - | Reserved |
| 0x008 | PMEVCNTR1_EL0 | RW | Performance Monitor Event Count Register 1 |
| 0x00C | - | - | Reserved |
| 0x010 | PMEVCNTR2_EL0 | RW | Performance Monitor Event Count Register 2 |
| 0x014 | - | - | Reserved |
| 0x018 | PMEVCNTR3_EL0 | RW | Performance Monitor Event Count Register 3 |
| 0x01C | - | - | Reserved |
| 0x020 | PMEVCNTR4_EL0 | RW | Performance Monitor Event Count Register 4 |
| 0x024 | - | - | Reserved |
| 0x028 | PMEVCNTR5_EL0 | RW | Performance Monitor Event Count Register 5 |
| 0x02C-0x0F4 | - | - | Reserved |
| 0x0F8 | PMCCNTR_EL0[31:0] | RW | Performance Monitor Cycle Count Register |
| 0x0FC | PMCCNTR_EL0[63:32] | RW | |
| 0x100-0x1FC | - | - | Reserved |
| 0x200 | PMPCSR[31:0] | RO | Program Counter Sample Register |

| Offset | Name | Туре | Description |
|-------------|----------------|------|--------------------------------------------------------------------------------|
| 0x204 | PMPCSR[63:32] | | |
| 0x208 | PMCID1SR | RO | CONTEXTIDR_EL1 Sample Register |
| 0x20C | PMVIDSR | RO | VMID Sample Register |
| 0x220 | PMPCSR[31:0] | RO | RO Program Counter Sample Register (alias) |
| 0x224 | PMPCSR[63:32] | | |
| 0x228 | PMCID1SR | RO | CONTEXTIDR_EL1 Sample Register (alias) |
| 0x22C | PMCID2SR | RO | CONTEXTIDR_EL2 Sample Register |
| 0x230-0x3FC | - | - | Reserved |
| 0x400 | PMEVTYPERO_ELO | RW | Performance Monitors Event Type Register 0 |
| 0x404 | PMEVTYPER1_EL0 | RW | Performance Monitors Event Type Register 1 |
| 0x408 | PMEVTYPER2_EL0 | RW | Performance Monitors Event Type Register 2 |
| 0x40C | PMEVTYPER3_ELO | RW | Performance Monitors Event Type Register 3 |
| 0x410 | PMEVTYPER4_EL0 | RW | Performance Monitors Event Type Register 4 |
| 0x414 | PMEVTYPER5_ELO | RW | Performance Monitors Event Type Register 5 |
| 0x418-0x478 | - | - | Reserved |
| 0x47C | PMCCFILTR_EL0 | RW | Performance Monitor Cycle Count Filter Register |
| 0x600 | PMPCSSR_LO | RO | 5.7.2 PMPCSSR, PMU Snapshot Program |
| 0x604 | PMPCSSR_HI | RO | Counter Sample Register on page 368 |
| 0x608 | PMCIDSSR | RO | 5.7.3 PMCIDSSR, PMU Snapshot CONTEXTIDR_EL1 Sample Register on page 369 |
| 0x60C | PMCID2SSR | RO | 5.7.4 PMCID2SSR, PMU Snapshot CONTEXTIDR_EL2 Sample Register on page 369 |
| 0x610 | PMSSSR | RO | 5.7.5 PMSSSR, PMU Snapshot Status Register on page 369 |
| 0x614 | PMOVSSR | RO | 5.7.6 PMOVSSR, PMU Snapshot Overflow Status Register on page 370 |
| 0x618 | PMCCNTSR_LO | RO | 5.7.7 PMCCNTSR, PMU Snapshot Cycle |
| 0x61C | PMCCNTSR_HI | RO | Counter Register on page 371 |
| 0x620+ 4×n | PMEVCNTSRn | RO | 5.7.8 PMEVCNTSRn, PMU Snapshot Cycle Counter Registers 0-5 on page 371 |
| 0x6F0 | PMSSCR | WO | 5.7.9 PMSSCR, PMU Snapshot Capture Register on page 372 |
| 0xC00 | PMCNTENSET_ELO | RW | Performance Monitor Count Enable Set Register |
| 0xC04-0xC1C | - | - | Reserved |
| 0xC20 | PMCNTENCLR_EL0 | RW | Performance Monitor Count Enable Clear Register |
| 0xC24-0xC3C | - | | Reserved |
| 0xC40 | PMINTENSET_EL1 | RW | Performance Monitor Interrupt Enable Set Register |

| Offset | Name | Туре | Description |
|-------------|----------------|------|-----------------------------------------------------------------------------------------------|
| 0xC44-0xC5C | - | - | Reserved |
| 0xC60 | PMINTENCLR_EL1 | RW | Performance Monitor Interrupt Enable Clear Register |
| 0xC64-0xC7C | - | - | Reserved |
| 0xC80 | PMOVSCLR_EL0 | RW | Performance Monitor Overflow Flag Status Register |
| 0xC84-0xC9C | - | - | Reserved |
| 0xCA0 | PMSWINC_EL0 | WO | Performance Monitor Software Increment Register |
| 0xCA4-0xCBC | - | - | Reserved |
| 0xCC0 | PMOVSSET_EL0 | RW | Performance Monitor Overflow Flag Status Set Register |
| 0xCC4-0xDFC | - | - | Reserved |
| 0xE00 | PMCFGR | RO | 5.6.2 PMCFGR, Performance Monitors Configuration Register on page 359 |
| 0xE04 | PMCR_EL0 | RW | Performance Monitors Control Register. |
| | | | This register is distinct from the PMCR_ELO System register. It does not have the same value. |
| 0xE08-0xE1C | - | - | Reserved |
| 0xE20 | PMCEID0 | RO | 5.4.2 PMCEIDO, Performance Monitors Common Event Identification Register 0 on page 339 |
| 0xE24 | PMCEID1 | RO | 5.4.3 PMCEID1, Performance Monitors Common Event Identification Register 1 on page 342 |
| 0xE28 | PMCEID2 | RO | Performance Monitors Common Event Identification register 2 |
| 0xE2C | PMCEID3 | RO | Performance Monitors Common Event Identification register 3 |
| 0xFA4 | - | - | Reserved |
| 0xFA8 | PMDEVAFF0 | RO | 3.2.91 MPIDR_EL1, Multiprocessor Affinity Register, EL1 on page 220 |
| 0xFAC | PMDEVAFF1 | RO | 3.2.91 MPIDR_EL1, Multiprocessor Affinity Register, EL1 on page 220 |
| 0xFB8 | PMAUTHSTATUS | RO | Performance Monitor Authentication Status Register |
| 0xFBC | PMDEVARCH | RO | Performance Monitor Device Architecture Register |
| 0xFC0-0xFC8 | - | - | Reserved |
| 0xFCC | PMDEVTYPE | RO | Performance Monitor Device Type Register |
| 0xFD0 | PMPIDR4 | RO | 5.6.11 PMPIDR4, Performance Monitors Peripheral Identification Register 4 on page 366 |

| Offset | Name | Туре | Description |
|--------|---------|------|---------------------------------------------------------------------------------------------|
| 0xFD4 | PMPIDR5 | RO | 5.6.12 PMPIDRn, Performance Monitors Peripheral Identification Register 5-7 on page 367 |
| 0xFD8 | PMPIDR6 | RO | |
| 0xFDC | PMPIDR7 | RO | |
| 0xFE0 | PMPIDRO | RO | 5.6.7 PMPIDRO, Performance Monitors Peripheral Identification Register 0 on page 363 |
| 0xFE4 | PMPIDR1 | RO | 5.6.8 PMPIDR1, Performance Monitors Peripheral Identification Register 1 on page 364 |
| 0xFE8 | PMPIDR2 | RO | 5.6.9 PMPIDR2, Performance Monitors Peripheral Identification Register 2 on page 365 |
| 0xFEC | PMPIDR3 | RO | 5.6.10 PMPIDR3, Performance Monitors Peripheral Identification Register 3 on page 365 |
| 0xFF0 | PMCIDR0 | RO | 5.6.3 PMCIDRO, Performance Monitors Component Identification Register 0 on page 360 |
| 0xFF4 | PMCIDR1 | RO | 5.6.4 PMCIDR1, Performance Monitors Component Identification Register 1 on page 361 |
| 0xFF8 | PMCIDR2 | RO | 5.6.5 PMCIDR2, Performance Monitors Component Identification Register 2 on page 362 |
| 0xFFC | PMCIDR3 | RO | 5.6.6 PMCIDR3, Performance Monitors Component Identification Register 3 on page 362 |


5.6.2 PMCFGR, Performance Monitors Configuration Register

The PMCFGR contains PMU specific configuration data.

Bit field descriptions

The PMCFGR is a 32-bit register.

Figure 5-22: PMCFGR bit assignments



RESO, [31:17]

res0 Reserved.

EX, [16]

Export supported. The value is:

Export is supported. PMCR ELO.EX is read/write.

CCD, [15]

Cycle counter has pre-scale. The value is:

1 PMCR_ELO.D is read/write.

CC, [14]

Dedicated cycle counter supported. The value is:

Dedicated cycle counter is supported.

Size, [13:8]

Counter size. The value is:

оь111111 64-bit counters.

N, [7:0]

Number of event counters. The value is:

 0×06 Six counters.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

The PMCFGR can be accessed through the external debug interface, offset 0xE00.


5.6.3 PMCIDRO, Performance Monitors Component Identification Register 0

The PMCIDRO provides information to identify a Performance Monitor component.

Bit field descriptions

The PMCIDRO is a 32-bit register.

Figure 5-23: PMCIDRO bit assignments



RESO, [31:8]

res0

Reserved.

PRMBL_0, [7:0]

0x0D

Preamble byte 0.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

The PMCIDRO can be accessed through the external debug interface, offset 0xFF0.


5.6.4 PMCIDR1, Performance Monitors Component Identification Register 1

The PMCIDR1 provides information to identify a Performance Monitor component.

Bit field descriptions

The PMCIDR1 is a 32-bit register.

Figure 5-24: PMCIDR1 bit assignments



RESO, [31:8]

res0

Reserved.

CLASS, [7:4]

0x9

Debug component.

PRMBL_1, [3:0]

0x0

Preamble byte 1.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

The PMCIDR1 can be accessed through the external debug interface, offset 0xFF4.


5.6.5 PMCIDR2, Performance Monitors Component Identification Register 2

The PMCIDR2 provides information to identify a Performance Monitor component.

Bit field descriptions

The PMCIDR2 is a 32-bit register.

Figure 5-25: PMCIDR2 bit assignments



RESO, [31:8]

res0

Reserved.

PRMBL_2, [7:0]

 0×05

Preamble byte 2.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

The PMCIDR2 can be accessed through the external debug interface, offset 0xFF8.


5.6.6 PMCIDR3, Performance Monitors Component Identification Register 3

The PMCIDR3 provides information to identify a Performance Monitor component.

Bit field descriptions

The PMCIDR3 is a 32-bit register.

Figure 5-26: PMCIDR3 bit assignments



RESO, [31:8]

res0

Reserved.

PRMBL_3, [7:0]

0xB1

Preamble byte 3.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

The PMCIDR3 can be accessed through the external debug interface, offset 0xFFC.


5.6.7 PMPIDRO, Performance Monitors Peripheral Identification Register 0

The PMPIDRO provides information to identify a Performance Monitor component.

Bit field descriptions

The PMPIDRO is a 32-bit register.

Figure 5-27: PMPIDR0 bit assignments



RESO, [31:8]

res0

Reserved.

Part_0, [7:0]

0x0E

Least significant byte of the performance monitor part number.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

The PMPIDRO can be accessed through the external debug interface, offset 0xFE0.


5.6.8 PMPIDR1, Performance Monitors Peripheral Identification Register 1

The PMPIDR1 provides information to identify a Performance Monitor component.

Bit field descriptions

The PMPIDR1 is a 32-bit register.

Figure 5-28: PMPIDR1 bit assignments



RESO, [31:8]

res0

Reserved.

DES_0, [7:4]

0xB

Arm Limited. This is the least significant nibble of JEP106 ID code.

Part_1, [3:0]

0xD

Most significant nibble of the performance monitor part number.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

The PMPIDR1 can be accessed through the external debug interface, offset 0xFE4.


5.6.9 PMPIDR2, Performance Monitors Peripheral Identification Register 2

The PMPIDR2 provides information to identify a Performance Monitor component.

Bit field descriptions

The PMPIDR2 is a 32-bit register.

Figure 5-29: PMPIDR2 bit assignments



RESO, [31:8]

res0

Reserved.

Revision, [7:4]

0x2

r1p1.

JEDEC, [3]

0b1

RAO. Indicates a JEP106 identity code is used.

DES_1, [2:0]

0ь011

Arm Limited. This is the most significant nibble of JEP106 ID code.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

The PMPIDR2 can be accessed through the external debug interface, offset 0xFE8.


5.6.10 PMPIDR3, Performance Monitors Peripheral Identification Register 3

The PMPIDR3 provides information to identify a Performance Monitor component.

Bit field descriptions

The PMPIDR3 is a 32-bit register.

Figure 5-30: PMPIDR3 bit assignments



RESO, [31:8]

res0

Reserved.

REVAND, [7:4]

0x0

Part minor revision.

CMOD, [3:0]

0x0

Customer modified.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

The PMPIDR3 can be accessed through the external debug interface, offset 0xFEC.


5.6.11 PMPIDR4, Performance Monitors Peripheral Identification Register 4

The PMPIDR4 provides information to identify a Performance Monitor component.

Bit field descriptions

The PMPIDR4 is a 32-bit register.

Figure 5-31: PMPIDR4 bit assignments



RESO, [31:8]

res0

Reserved.

Size, [7:4]

0x0

Size of the component. Log_2 the number of 4KB pages from the start of the component to the end of the component ID registers.

DES_2, [3:0]

0x4

Arm Limited. This is the least significant nibble JEP106 continuation code.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

The PMPIDR4 can be accessed through the external debug interface, offset 0xFD0.

5.6.12 PMPIDRn, Performance Monitors Peripheral Identification Register 5-7

No information is held in the Peripheral ID5, Peripheral ID6, and Peripheral ID7 Registers.

They are reserved for future use and are **RESO**.

5.7 PMU snapshot registers

PMU snapshot registers are an **IMPLEMENTATION DEFINED** extension to an Arm®v8-A compliant PMU to support an external core monitor that connects to a system profiler.

5.7.1 PMU snapshot register summary

The snapshot registers are visible in an **IMPLEMENTATION DEFINED** region of the PMU external debug interface. Each time the debugger sends a snapshot request, information is collected to see how the code is executed in the different cores.

The following table describes the PMU snapshot registers implemented in the core.

Table 5-12: PMU snapshot register summary

| Offset | Name | Туре | Width | Description |
|-------------|-------------|------|-------|--------------------------------------------------------------------------|
| 0x600 | PMPCSSR_LO | RO | 32 | 5.7.2 PMPCSSR, PMU Snapshot Program Counter Sample Register on page 368 |
| 0x604 | PMPCSSR_HI | RO | 32 | |
| 0x608 | PMCIDSSR | RO | 32 | 5.7.3 PMCIDSSR, PMU Snapshot CONTEXTIDR_EL1 Sample Register on page 369 |
| 0x60C | PMCID2SSR | RO | 32 | 5.7.4 PMCID2SSR, PMU Snapshot CONTEXTIDR_EL2 Sample Register on page 369 |
| 0x610 | PMSSSR | RO | 32 | 5.7.5 PMSSSR, PMU Snapshot Status Register on page 369 |
| 0x614 | PMOVSSR | RO | 32 | 5.7.6 PMOVSSR, PMU Snapshot Overflow Status Register on page 370 |
| 0x618 | PMCCNTSR_LO | RO | 32 | 5.7.7 PMCCNTSR, PMU Snapshot Cycle Counter Register on page 371 |
| 0x61C | PMCCNTSR_HI | RO | 32 | |
| 0x620 + 4×n | PMEVCNTSRn | RO | 32 | 5.7.8 PMEVCNTSRn, PMU Snapshot Cycle Counter Registers 0-5 on page 371 |
| 0x6F0 | PMSSCR | WO | 32 | 5.7.9 PMSSCR, PMU Snapshot Capture Register on page 372 |

5.7.2 PMPCSSR, PMU Snapshot Program Counter Sample Register


The PMPCSSR holds the same value as the PMPCSR register at the time of the snapshot.

However, unlike the other view of PMPCSR, it is not sensitive to reads. That is, reads of PMPCSSR through the PMU snapshot view do not cause a new sample capture and do not change PMCID1SR, PMCID2SR, or PMVIDSR.

Bit field descriptions

The PMPCSSR is a 64-bit read-only register.

Figure 5-32: PMPCSSR bit assignments

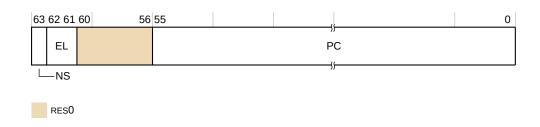

NS, [63]

Non-secure sample.

EL, [62:61]

Exception level sample.

RESO, [60:56]

Reserved, RESO.

PC, [55:0]

Sampled PC.

Configurations

There are no configuration notes.

Usage constraints

Any access to PMPCSSR returns an error if any of the following occurs:

- The Core power domain is off.
- DoubleLockStatus() == TRUE.

5.7.3 PMCIDSSR, PMU Snapshot CONTEXTIDR_EL1 Sample Register

The PMCIDSSR holds the same value as the PMCID1SR register at the time of the snapshot.

Configurations

There are no configuration notes.

Usage constraints

Any access to PMCIDSSR returns an error if any of the following occurs:

- The Core power domain is off.
- DoubleLockStatus() == TRUE.

5.7.4 PMCID2SSR, PMU Snapshot CONTEXTIDR_EL2 Sample Register

The PMCID2SSR holds the same value as the PMCID2SR register at the time of the snapshot.

Configurations

There are no configuration notes.

Usage constraints

Any access to PMCID2SSR returns an error if any of the following occurs:

- The Core power domain is off.
- DoubleLockStatus() == TRUE.


5.7.5 PMSSSR, PMU Snapshot Status Register

The PMSSSR holds status information about the captured counters.

Bit field descriptions

The PMSSSR is a 32-bit read-only register.

Figure 5-33: PMSSSR bit assignments



RESO, [31:1]

Reserved. RESO.

NC, [0]

No capture. This bit indicates whether the PMU counters have been captured. The possible values are:

- O PMU counters are captured.
- 1 PMU counters are not captured.

If there is a security violation, the core does not capture the event counters. The external monitor is responsible for keeping track of whether it managed to capture the snapshot registers from the core.

This bit does not reflect the status of the captured Program Counter Sample registers.

The core resets this bit to 1 by a Warm reset but MPSSSR.NC is overwritten at the first capture.

Configurations

There are no configuration notes.

Usage constraints

Any access to PMSSSR returns an error if any of the following occurs:

- The Core power domain is off.
- DoubleLockStatus() == TRUE.

5.7.6 PMOVSSR, PMU Snapshot Overflow Status Register

The PMOVSSR is a captured copy of PMOVSR.

Once it is captured, the value in PMOVSSR is unaffected by writes to PMOVSSET_ELO and PMOVSCLR ELO.

Configurations

There are no configuration notes.

Usage constraints

Any access to PMOVSSR returns an error if any of the following occurs:

- The Core power domain is off.
- DoubleLockStatus() == TRUE.

5.7.7 PMCCNTSR, PMU Snapshot Cycle Counter Register

The PMCCNTSR is a captured copy of PMCCNTR_ELO.

Once it is captured, the value in PMCCNTSR is unaffected by writes to PMCCNTR_ELO and PMCR ELO.C.

Configurations

There are no configuration notes.

Usage constraints

Any access to PMCCNTSR returns an error if any of the following occurs:

- The Core power domain is off.
- DoubleLockStatus() == TRUE.

5.7.8 PMEVCNTSRn, PMU Snapshot Cycle Counter Registers 0-5

The PMEVCNTSRn, are captured copies of PMEVCNTRn_ELO, n is 0-5.

When they are captured, the value in PMSSEVCNTRn is unaffected by writes to PMSSEVCNTRn_ELO and PMCR_ELO.P.

Configurations

There are no configuration notes.

Usage constraints

Any access to PMSSEVCNTRn returns an error if any of the following occurs:

The Core power domain is off.

• DoubleLockStatus() == TRUE.


5.7.9 PMSSCR, PMU Snapshot Capture Register

The PMSSCR provides a mechanism for software to initiate a sample.

Bit field descriptions

The PMSSCR is a 32-bit write-only register.

Figure 5-34: PMSSCR bit assignments



RESO, [31:1]

Reserved, RESO.

SS, [0]

Capture now. The possible values are:

- O **IGNORED**.
- 1 Initiate a capture immediately.

Configurations

There are no configuration notes.

Usage constraints

Any access to PMSSCR returns an error if any of the following occurs:

- The Core power domain is off.
- DoubleLockStatus() == TRUE.

5.8 AArch64 AMU registers

This chapter describes the AArch64 AMU registers and shows examples of how to use them.

5.8.1 AArch64 AMU register summary

The following table gives a summary of the Cortex®-A76AE AMU registers in the AArch64 Execution state.

Table 5-13: AArch64 AMU registers

| Name | Width | Reset | Description |
|----------------|-------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| AMCNTENCLR_ELO | 32 | 0x0000000 | 5.8.2 AMCNTENCLR_ELO, Activity Monitors Count Enable Clear Register, ELO on page 373 |
| AMCNTENSET_ELO | 32 | 0x0000000 | 5.8.3 AMCNTENSET_ELO, Activity Monitors Count Enable Set Register, ELO on page 374 |
| AMCFGR_EL0 | 32 | 0x00003F04 | 5.8.4 AMCFGR_ELO, Activity Monitors Configuration Register, ELO on page 376 |
| AMUSERENR_ELO | 32 | 0x0000000 | 5.8.5 AMUSERENR_ELO, Activity Monitor ELO Enable access, ELO on page 377 |
| AMEVCNTRn_EL0 | 64 | 0x000000000000000 | 5.8.6 AMEVCNTRn_ELO, Activity Monitor Event Counter Register, ELO on page 379 |
| AMEVTYPERn_ELO | 32 | The reset value depends on the register: • AMEVTYPERO_ELO = 0x00000011. • AMEVTYPER1_ELO = 0x000000EF. • AMEVTYPER2_ELO = 0x00000008. • AMEVTYPER3_ELO = 0x000000F0. • AMEVTYPER4_ELO = 0x000000F1. | 5.8.7 AMEVTYPERn_ELO, Activity Monitor Event Type Register, ELO on page 380 |

5.8.2 AMCNTENCLR_EL0, Activity Monitors Count Enable Clear Register, EL0

The AMCNTENCLR_ELO disables the activity monitor counters that are implemented, AMEVCNTR<0-4>_ELO.

Bit field descriptions

The AMCNTENCLR_ELO is a 32-bit register.

Figure 5-35: AMCNTENCLR_ELO bit assignments



P<n>, bit[n]

AMEVCNTRn disable bit for n=0-4. The possible values are:

- When this bit is read, the activity counter n is disabled. When it is written, it has no effect.
- When this bit is read, the activity counter n is enabled. When it is written, it disables the activity counter n.

Configurations

There are no configuration notes.

Usage constraints

Accessing the AMCNTENCLR_EL0

To access the AMCNTENCLR ELO:

```
MRS <Xt>, AMCNTENCLR_EL0 ; Read AMCNTENCLR_EL0 into Xt
MSR AMCNTENCLR_EL0, <Xt> ; Write <Xt> to AMCNTENCLR_EL0
```

Register access is encoded as follows:

Table 5-14: AMCNTENCLR_ELO encoding

| op0 | op1 | CRn | CRm | op2 |
|-----|-----|------|------|-----|
| 11 | 011 | 1111 | 1001 | 111 |

The AMCNTENCLR_ELO can be accessed through the external debug interface, offset 0xC20. In this case, it is read-only.

This register is accessible as follows:

| ELO | EL1 | EL2 | EL3 |
|-----|-----|-----|-----|
| RO | RO | RO | RW |

Traps and enables

If ACTLR_EL2.AMEN is 0, then Non-secure accesses to this register from EL0 and EL1 are trapped to EL2.

If ACTLR_EL3.AMEN is 0, then accesses to this register from EL0, EL1, and EL2 are trapped to EL3.

If AMUSERENR_ELO.EN is 0, then accesses to this register from ELO are trapped to EL1.

5.8.3 AMCNTENSET_ELO, Activity Monitors Count Enable Set Register, ELO

The AMCNTENSET_ELO enables the activity monitor counters that are implemented, AMEVCNTRn (n is 0-4).

Bit field descriptions

The AMCNTENSET_ELO is a 32-bit register.

Figure 5-36: AMCNTENSET_ELO bit assignments



P<n>, bit[n]

AMEVCNTRn enable bit for n=0-4. The possible values are:

- When this bit is read, the activity counter n is disabled. When it is written, it has no effect.
- When this bit is read, the activity counter n is enabled. When it is written, it enables the activity counter n.

Configurations

There are no configuration notes.

Usage constraints

Accessing the AMCNTENSET_ELO

To access the AMCNTENSET ELO:

```
MRS <Xt>, AMCNTENSET_EL0 ; Read AMCNTENSET_EL0 into Xt MSR AMCNTENSET_EL0, <Xt> ; Write <Xt> to AMCNTENSET_EL0
```

Register access is encoded as follows:

Table 5-16: AMCNTENSET_ELO encoding

| op0 | op1 | CRn | CRm | op2 |
|-----|-----|------|------|-----|
| 11 | 011 | 1111 | 1001 | 110 |

The AMCNTENSET_ELO can be accessed through the external debug interface, offset 0xC00. In this case, it is read-only.

This register is accessible as follows:

| ELO | EL1 | EL2 | EL3 |
|-----|-----|-----|-----|
| RO | RO | RO | RW |

Traps and enables

If ACTLR_EL2.AMEN is 0, then Non-secure accesses to this register from EL0 and EL1 are trapped to EL2.

If ACTLR_EL3.AMEN is 0, then accesses to this register from EL0, EL1, and EL2 are trapped to EL3.

If AMUSERENR ELO.EN is 0, then accesses to this register from ELO are trapped to EL1.


5.8.4 AMCFGR_ELO, Activity Monitors Configuration Register, ELO

The AMCFGR_ELO provides information on the number of activity counters that are implemented and their size.

Bit field descriptions

The AMCFGR_ELO is a 32-bit register.

Figure 5-37: AMCFGR_ELO bit assignments



RESO, [31:14]

Reserved, RESO.

SIZE, [13:8]

Size of counters, minus one.

This field defines the size of the largest counter that is implemented by the activity monitors. In the Armv8-A architecture, the largest counter has 64 bits, therefore the value of this field is 0b111111.

N, [7:0]

Number of activity counters that are implemented, where the number of counters is N+1. The Cortex $^{\otimes}$ -A76AE core implements five counters, therefore the value is 0x04.

Configurations

There are no configuration notes.

Usage constraints

Accessing the AMCFGR_EL0

To access the AMCFGR_ELO:

MRS <Xt>, AMCFGR_ELO ; Read AMCFGR_ELO into Xt

Register access is encoded as follows:

Table 5-18: AMCFGR_ELO encoding

| op0 | op1 | CRn | CRm | op2 |
|-----|-----|------|------|-----|
| 11 | 011 | 1111 | 1010 | 110 |

The AMCFGR_ELO can be accessed through the external debug interface, offset 0xE00. In this case, it is read-only.

This register is accessible as follows:

| ELO | EL1 | EL2 | EL3 |
|-----|-----|-----|-----|
| RO | RO | RO | RO |

Traps and enables

If ACTLR_EL2.AMEN is 0, then Non-secure accesses to this register from EL0 and EL1 are trapped to EL2.

If ACTLR_EL3.AMEN is 0, then accesses to this register from EL0, EL1, and EL2 are trapped to EL3.

If AMUSERENR ELO.EN is 0, then accesses to this register from ELO are trapped to EL1.

5.8.5 AMUSERENR_ELO, Activity Monitor ELO Enable access, ELO

The AMUSERENR_ELO enables or disables ELO access to the activity monitors.

Bit field descriptions

The AMUSERENR_ELO is a 32-bit register.

This register resets to value 0x0000000.

Figure 5-38: AMUSERENR_ELO bit assignments



RESO, [31:1]

Reserved, RESO.

EN, [0]

Traps ELO accesses to the activity monitor registers to EL1. The possible values are:

- 0 ELO accesses to the activity monitor registers are trapped to EL1. This is the reset value.
- ELO accesses to the activity monitor registers are not trapped to EL1. Software can access all activity monitor registers at ELO.

Configurations

There are no configuration notes.

Usage constraints

Accessing the AMUSERENR_ELO

To access the AMUSERENR_ELO:

```
MRS <Xt>, AMUSERENR_ELO; Read AMUSERENR_ELO into Xt
MSR AMUSERENR_ELO, <Xt>; Write Xt to AMUSERENR_ELO
```

Register access is encoded as follows:

Table 5-20: AMUSERENR_ELO encoding

| op0 | op1 | CRn | CRm | op2 |
|-----|-----|------|------|-----|
| 11 | 011 | 1111 | 1010 | 111 |

This register is accessible as follows:

| ELO | EL1 | EL2 | EL3 |
|-----|-----|-----|-----|
| RO | RW | RW | RW |



AMUSERENR_ELO is always RO at ELO and not trapped by the EN bit.

Traps and enables

If ACTLR_EL2.AMEN is 0, then Non-secure accesses to this register from EL0 and EL1 are trapped to EL2.

If ACTLR_EL3.AMEN is 0, then accesses to this register from EL0, EL1, and EL2 are trapped to EL3.

5.8.6 AMEVCNTRn_ELO, Activity Monitor Event Counter Register, ELO

The activity counters AMEVCNTRn_ELO are directly accessible in the memory mapped-view. n is 0-4.

Bit field descriptions

The AMEVCNTRn_ELO is a 64-bit register.

Figure 5-39: AMEVCNTRn_ELO bit assignments



ACNT, [63:0]

Value of the activity counter AMEVCNTRn ELO.

This bit field resets to zero and the counters monitoring cycle events do not increment when the core is in WFI or WFE.

Configurations

Counters might have fixed event allocation.

Usage constraints

Accessing the AMEVCNTRn_EL0

To access the AMEVCNTRn ELO:

```
MRS <Xt>, AMEVCNTRn_EL0 ; Read AMEVCNTRn_EL0 into Xt
MSR AMEVCNTRn_EL0, <Xt> ; Write Xt to AMEVCNTRn_EL0
```

Register access is encoded as follows:

Table 5-22: AMEVCNTRn_ELO encoding

| ор0 | op1 | CRn | CRm | op2 |
|-----|-----|------|------|-------|
| 11 | 011 | 1111 | 1001 | <0-4> |

The AMEVCNTRn_EL0[63:32] can also be accessed through the external memory-mapped interface, offset 0x004+8n. In this case, it is read-only.

The AMEVCNTRn_ELO[31:0] can also be accessed through the external memory-mapped interface, offset 0x000+8n. In this case, it is read-only.

This register is accessible as follows:

| ELO | EL1 | EL2 | EL3 |
|-----|-----|-----|-----|
| RO | RO | RO | RW |

Traps and enables

If ACTLR_EL2.AMEN is 0, then Non-secure accesses to this register from EL0 and EL1 are trapped to EL2.

If ACTLR_EL3.AMEN is 0, then accesses to this register from EL0, EL1, and EL2 are trapped to EL3.

If AMUSERENR ELO.EN is 0, then accesses to this register from ELO are trapped to EL1.


5.8.7 AMEVTYPERn_ELO, Activity Monitor Event Type Register, ELO

The activity counters AMEVTYPERn_ELO are directly accessible in the memory mapped view, where n is 0-4.

Bit field descriptions

The AMEVTYPERn_ELO is a 32-bit register.

Figure 5-40: AMEVTYPERn_EL0 bit assignments



RESO, [31:10]

Reserved, RESO.

evtCount, bits[9:0]

The event the counter monitors might be fixed at implementation. In this case, the field is read-only. See 4.3.4 AMU events on page 312.

Configurations

Counters might have fixed event allocation.

Traps and enables

If is 0, then Non-secure accesses to this register from ELO and EL1 are trapped to EL2.

If ACTLR_EL3.AMEN is 0, then accesses to this register from EL0, EL1, and EL2 are trapped to EL3.

If AMUSERENR ELO.EN is 0, then accesses to this register from ELO are trapped to EL1.

Usage constraints

Accessing the AMEVTYPERn_EL0

To access the AMEVTYPERn_ELO:

```
MRS <Xt>, AMEVTYPERn_ELO ; Read AMEVTYPERn_ELO into Xt
MSR AMEVTYPERn_ELO, <Xt> ; Write Xt to AMEVTYPERn_ELO
```

Register access is encoded as follows:

Table 5-24: AMEVTYPER_ELO encoding

| op0 | op1 | CRn | CRm | op2 |
|-----|-----|------|------|-------|
| 11 | 011 | 1111 | 1010 | <0-4> |

This register can also be accessed through the external memory-mapped interface, offset 0x400+4n. In this case, it is read-only.

This register is accessible as follows:

| ELO | EL1 | EL2 | EL3 |
|-----|-----|-----|-----|
| RO | RO | RO | RO |

Traps and enables

If ACTLR_EL2.AMEN is 0, then Non-secure accesses to this register from EL0 and EL1 are trapped to EL2.

If ACTLR_EL3.AMEN is 0, then accesses to this register from EL0, EL1, and EL2 are trapped to FL3.

If AMUSERENR_ELO.EN is 0, then accesses to this register from ELO are trapped to EL1.

5.9 Memory-mapped AMU registers

This chapter describes the memory-mapped AMU registers. The memory-mapped interface provides read-only access to the AMU registers via the external debug interface.

5.9.1 Memory-mapped AMU register summary

The AMU registers are accessible through the external debug interface.

The memory-mapped AMU registers are listed in the following table. For those registers that are not described in this chapter, see the Arm® Architecture Reference Manual Armv8, for A-profile architecture.

Table 5-26: Memory-mapped AMU register summary

| Offset | Name | Туре | Description |
|---------------------------------------|----------------|------|--------------------------------------------------------------------------------------------|
| 0xC20 | AMCNTENCLR_ELO | RO | 5.8.2 AMCNTENCLR_ELO, Activity Monitors Count Enable Clear Register, ELO on page 373 |
| 0xC00 | AMCNTENSET_ELO | RO | 5.8.3 AMCNTENSET_ELO, Activity Monitors Count Enable Set Register, ELO on page 374 |
| 0xE00 | AMCFGR_EL0 | RO | 5.8.4 AMCFGR_ELO, Activity Monitors Configuration Register, ELO on page 376 |
| [63:32]: 0x004+8n [31:0]: 0x000+8n | AMEVCNTRn_ELO | RO | 5.8.6 AMEVCNTRn_ELO, Activity Monitor Event Counter Register, ELO on page 379 |
| 0x400+4n | AMEVTYPERn_ELO | RO | 5.8.7 AMEVTYPERn_ELO, Activity Monitor Event Type Register, ELO on page 380 |



AMUSERENR_ELO is excluded from the memory mapped view.

5.10 ETM registers

This chapter describes the ETM registers.

5.10.1 ETM register summary

This section summarizes the ETM trace unit registers.

All ETM trace unit registers are 32-bit wide. The description of each register includes its offset from a base address. The base address is defined by the system integrator when placing the ETM trace unit in the Debug-APB memory map.

The following table lists all of the ETM trace unit registers.

Table 5-27: ETM trace unit register summary

| Offset | Name | Туре | Reset | Description |
|--------|---------------|------|------------|----------------------------------------------------------------------------------|
| 0x004 | TRCPRGCTLR | RW | 0x00000000 | 5.10.59 TRCPRGCTLR, Programming Control Register on page 437 |
| 0x00C | TRCSTATR | RO | 0x0000003 | 5.10.66 TRCSTATR, Status Register on page 445 |
| 0x010 | TRCCONFIGR | RW | UNK | 5.10.20 TRCCONFIGR, Trace Configuration Register on page 402 |
| 0x018 | TRCAUXCTLR | RW | 0x00000000 | 5.10.5 TRCAUXCTLR, Auxiliary Control Register on page 388 |
| 0x020 | TRCEVENTCTLOR | RW | UNK | 5.10.26 TRCEVENTCTLOR, Event Control 0 Register on page 407 |
| 0x024 | TRCEVENTCTL1R | RW | UNK | 5.10.27 TRCEVENTCTL1R, Event Control 1 Register on page 409 |
| 0x030 | TRCTSCTLR | RW | UNK | 5.10.69 TRCTSCTLR, Global Timestamp Control Register on page 447 |
| 0x034 | TRCSYNCPR | RW | UNK | 5.10.67 TRCSYNCPR, Synchronization Period Register on page 445 |
| 0x038 | TRCCCCTLR | RW | UNK | 5.10.7 TRCCCCTLR, Cycle Count Control Register on page 391 |
| 0x03C | TRCBBCTLR | RW | UNK | 5.10.6 TRCBBCTLR, Branch Broadcast Control Register on page 390 |
| 0x040 | TRCTRACEIDR | RW | UNK | 5.10.68 TRCTRACEIDR, Trace ID Register on page 446 |
| 0x080 | TRCVICTLR | RW | UNK | 5.10.70 TRCVICTLR, ViewInst Main Control Register on page 448 |
| 0x084 | TRCVIIECTLR | RW | UNK | 5.10.71 TRCVIIECTLR, ViewInst Include-Exclude Control Register on page 450 |
| 0x088 | TRCVISSCTLR | RW | UNK | 5.10.72 TRCVISSCTLR, ViewInst Start-Stop Control Register on page 451 |
| 0x100 | TRCSEQEVR0 | RW | UNK | 5.10.61 TRCSEQEVRn, Sequencer State Transition Control Registers 0-2 on page 439 |
| 0x104 | TRCSEQEVR1 | RW | UNK | 5.10.61 TRCSEQEVRn, Sequencer State Transition Control Registers 0-2 on page 439 |
| 0x108 | TRCSEQEVR2 | RW | UNK | 5.10.61 TRCSEQEVRn, Sequencer State Transition Control Registers 0-2 on page 439 |
| 0x118 | TRCSEQRSTEVR | RW | UNK | 5.10.62 TRCSEQRSTEVR, Sequencer Reset Control Register on page 441 |
| 0x11C | TRCSEQSTR | RW | UNK | 5.10.63 TRCSEQSTR, Sequencer State Register on page 442 |
| 0x120 | TRCEXTINSELR | RW | UNK | 5.10.28 TRCEXTINSELR, External Input Select Register on page 410 |
| 0x140 | TRCCNTRLDVR0 | RW | UNK | 5.10.18 TRCCNTRLDVRn, Counter Reload Value Registers 0-1 on page 401 |
| 0x144 | TRCCNTRLDVR1 | RW | UNK | 5.10.18 TRCCNTRLDVRn, Counter Reload Value Registers 0-1 on page 401 |
| 0x150 | TRCCNTCTLRO | RW | UNK | 5.10.16 TRCCNTCTLR0, Counter Control Register 0 on page 397 |
| 0x154 | TRCCNTCTLR1 | RW | UNK | 5.10.17 TRCCNTCTLR1, Counter Control Register 1 on page 399 |
| 0x160 | TRCCNTVR0 | RW | UNK | 5.10.19 TRCCNTVRn, Counter Value Registers 0-1 on page 401 |
| 0x164 | TRCCNTVR1 | RW | UNK | 5.10.19 TRCCNTVRn, Counter Value Registers 0-1 on page 401 |
| 0x180 | TRCIDR8 | RO | 0x00000000 | 5.10.35 TRCIDR8, ID Register 8 on page 421 |
| 0x184 | TRCIDR9 | RO | 0x00000000 | 5.10.36 TRCIDR9, ID Register 9 on page 422 |
| 0x188 | TRCIDR10 | RO | 0x00000000 | 5.10.37 TRCIDR10, ID Register 10 on page 422 |
| 0x18C | TRCIDR11 | RO | 0x00000000 | 5.10.38 TRCIDR11, ID Register 11 on page 423 |
| 0x190 | TRCIDR12 | RO | 0x00000000 | 5.10.39 TRCIDR12, ID Register 12 on page 423 |
| 0x194 | TRCIDR13 | RO | 0x00000000 | 5.10.40 TRCIDR13, ID Register 13 on page 424 |
| 0x1C0 | TRCIMSPEC0 | RW | 0x00000000 | 5.10.41 TRCIMSPECO, Implementation Specific Register 0 on page 424 |
| 0x1E0 | TRCIDR0 | RO | 0x28000EA1 | 5.10.29 TRCIDRO, ID Register 0 on page 411 |
| 0x1E4 | TRCIDR1 | RO | 0x4100F422 | 5.10.30 TRCIDR1, ID Register 1 on page 414 |
| 0x1E8 | TRCIDR2 | RO | 0x20001088 | 5.10.31 TRCIDR2, ID Register 2 on page 415 |
| 0x1EC | TRCIDR3 | RO | 0x017B0004 | 5.10.32 TRCIDR3, ID Register 3 on page 416 |

| 0x1F0TRCIDR4RO0x111700045.10.33 TRCIDR4, ID Register 4 on page0x1F4TRCIDR5RO0x284708AD5.10.34 TRCIDR5, ID Register 5 on page0x200TRCRSCTLRnRWUNK5.10.60 TRCRSCTLRn, Resource Selection is 2, 150x280TRCSSCCRORWUNK5.10.64 TRCSSCCRO, Single-Shot Compa0x2A0TRCSSCSRORWUNK5.10.65 TRCSSCSRO, Single-Shot Compa0x300TRCOSLARWO0x000000015.10.49 TRCOSLAR, OS Lock Access Reg0x304TRCOSLSRRO0x00000000A5.10.50 TRCOSLSR, OS Lock Status Regis0x310TRCPDCRRW0x000000005.10.51 TRCPDCR, Power Down Control0x314TRCPDSRRO0x0000000235.10.52 TRCPDSR, Power Down Status F0x400TRCACVRnRWUNK5.10.3 TRCACVRn, Address Comparator0x480TRCACATRnRWUNK5.10.2 TRCACATRn, Address Comparator | on Control Registers 2-15 on page 438, |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------|
| 0x200TRCRSCTLRnRWUNK5.10.60 TRCRSCTLRn, Resource Selection is 2, 150x280TRCSSCCRORWUNK5.10.64 TRCSSCCRO, Single-Shot Comparator0x2A0TRCSSCSRORWUNK5.10.65 TRCSSCSRO, Single-Shot Comparator0x300TRCOSLARWO0x000000015.10.49 TRCOSLAR, OS Lock Access Reg0x304TRCOSLSRRO0x00000000A5.10.50 TRCOSLSR, OS Lock Status Regis0x310TRCPDCRRW0x000000005.10.51 TRCPDCR, Power Down Control0x314TRCPDSRRO0x000000235.10.52 TRCPDSR, Power Down Status F0x400TRCACVRnRWUNK5.10.3 TRCACVRn, Address Comparator0x480TRCACATRnRWUNK5.10.2 TRCACATRn, Address Comparator | on Control Registers 2-15 on page 438, |
| 0x280 TRCSSCCRO RW UNK 5.10.64 TRCSSCCRO, Single-Shot Compa 0x2A0 TRCSSCSRO RW UNK 5.10.65 TRCSSCSRO, Single-Shot Compa 0x300 TRCOSLAR WO 0x00000001 5.10.49 TRCOSLAR, OS Lock Access Reg 0x304 TRCOSLSR RO 0x00000000A 5.10.50 TRCOSLSR, OS Lock Status Regis 0x310 TRCPDCR RW 0x00000000 5.10.51 TRCPDCR, Power Down Control 0x314 TRCPDSR RO 0x00000023 5.10.52 TRCPDSR, Power Down Status F 0x400 TRCACVRn RW UNK 5.10.3 TRCACVRn, Address Comparator 0x480 TRCACATRn RW UNK 5.10.2 TRCACATRn, Address Comparator | |
| 0x2A0 TRCSSCSRO RW UNK 5.10.65 TRCSSCSRO, Single-Shot Comparator 0x300 TRCOSLAR WO 0x00000001 5.10.49 TRCOSLAR, OS Lock Access Reg 0x304 TRCOSLSR RO 0x0000000A 5.10.50 TRCOSLSR, OS Lock Status Regis 0x310 TRCPDCR RW 0x00000000 5.10.51 TRCPDCR, Power Down Control 0x314 TRCPDSR RO 0x00000023 5.10.52 TRCPDSR, Power Down Status F 0x400 TRCACVRn RW UNK 5.10.3 TRCACVRn, Address Comparator 0x480 TRCACATRn RW UNK 5.10.2 TRCACATRn, Address Comparator | arator Control Register 0 on page 443 |
| 0x300 TRCOSLAR WO 0x00000001 5.10.49 TRCOSLAR, OS Lock Access Reg 0x304 TRCOSLSR RO 0x00000000A 5.10.50 TRCOSLSR, OS Lock Status Regis 0x310 TRCPDCR RW 0x00000000 5.10.51 TRCPDCR, Power Down Control 0x314 TRCPDSR RO 0x00000023 5.10.52 TRCPDSR, Power Down Status F 0x400 TRCACVRn RW UNK 5.10.3 TRCACVRn, Address Comparator 0x480 TRCACATRn RW UNK 5.10.2 TRCACATRn, Address Comparator | |
| 0x304 TRCOSLSR RO 0x0000000A 5.10.50 TRCOSLSR, OS Lock Status Regis 0x310 TRCPDCR RW 0x00000000 5.10.51 TRCPDCR, Power Down Control 0x314 TRCPDSR RO 0x00000023 5.10.52 TRCPDSR, Power Down Status F 0x400 TRCACVRn RW UNK 5.10.3 TRCACVRn, Address Comparator 0x480 TRCACATRn RW UNK 5.10.2 TRCACATRn, Address Comparator | arator Status Register 0 on page 444 |
| 0x310TRCPDCRRW0x000000005.10.51 TRCPDCR, Power Down Control0x314TRCPDSRRO0x000000235.10.52 TRCPDSR, Power Down Status F0x400TRCACVRnRWUNK5.10.3 TRCACVRn, Address Comparator0x480TRCACATRnRWUNK5.10.2 TRCACATRn, Address Comparator | gister on page 430 |
| 0x314TRCPDSRRO0x000000235.10.52 TRCPDSR, Power Down Status F0x400TRCACVRnRWUNK5.10.3 TRCACVRn, Address Comparator0x480TRCACATRnRWUNK5.10.2 TRCACATRn, Address Comparator | ster on page 431 |
| 0x400TRCACVRnRWUNK5.10.3 TRCACVRn, Address Comparator0x480TRCACATRnRWUNK5.10.2 TRCACATRn, Address Comparato | l Register on page 432 |
| 0x480 TRCACATRn RW UNK 5.10.2 TRCACATRn, Address Comparato | Register on page 433 |
| | Value Registers 0-7 on page 386 |
| | or Access Type Registers 0-7 on page |
| 0x600 TRCCIDCVRO RW UNK 5.10.9 TRCCIDCVRO, Context ID Compa | arator Value Register 0 on page 393 |
| 0x640 TRCVMIDCVRO RW UNK 5.10.73 TRCVMIDCVRO, VMID Compara | ator Value Register 0 on page 452 |
| 0x680 TRCCIDCCTLR0 RW UNK 5.10.8 TRCCIDCCTLR0, Context ID Com | nparator Control Register 0 on page |
| 0x688 TRCVMIDCCTLR0 RW UNK 5.10.74 TRCVMIDCCTLR0, Virtual conte | ext identifier Comparator Control Register |
| 0xEE4 TRCITATBIDR RW UNK 5.10.42 TRCITATBIDR, Integration ATB I | dentification Register on page 425 |
| 0xEEC TRCITIDATAR WO UNK 5.10.46 TRCITIDATAR, Integration Instru | ıction ATB Data Register on page 428 |
| 0xEF4 TRCITIATBINR RO UNK 5.10.44 TRCITIATBINR, Integration Instru | uction ATB In Register on page 426 |
| 0xEFC TRCITIATBOUTR WO UNK 5.10.45 TRCITIATBOUTR, Integration Ins | struction ATB Out Register on page |
| 0xF00 TRCITCTRL RW 0x00000000 5.10.43 TRCITCTRL, Integration Mode Co | ontrol Register on page 426 |
| 0xFa0 TRCCLAIMSET RW UNK 5.10.15 TRCCLAIMSET, Claim Tag Set Re | egister on page 397 |
| 0xFA4 TRCCLAIMCLR RW 0x00000000 5.10.14 TRCCLAIMCLR, Claim Tag Clear | Register on page 396 |
| 0xFA8 TRCDEVAFFO RO UNK 5.10.21 TRCDEVAFFO, Device Affinity Ro | egister 0 on page 405 |
| 0xFAC TRCDEVAFF1 RO UNK 5.10.22 TRCDEVAFF1, Device Affinity Ro | egister 1 on page 405 |
| 0xFB0 TRCLAR WO UNK 5.10.47 TRCLAR, Software Lock Access F | Register on page 429 |
| 0xFB4 TRCLSR RO 0x00000000 5.10.48 TRCLSR, Software Lock Status Ro | egister on page 429 |
| 0xFB8 TRCAUTHSTATUS RO UNK 5.10.4 TRCAUTHSTATUS, Authentication | n Status Register on page 387 |
| 0xFBC TRCDEVARCH RO 0x47724A13 5.10.23 TRCDEVARCH, Device Architect | ture Register on page 405 |
| 0xFC8 TRCDEVID RO 0x00000000 5.10.24 TRCDEVID, Device ID Register of | on page 406 |
| 0xFCC TRCDEVTYPE RO 0x00000013 5.10.25 TRCDEVTYPE, Device Type Regi | ister on page 406 |
| 0xFE0 TRCPIDRO RO 0x0000000B 5.10.53 TRCPIDRO, ETM Peripheral Iden | tification Register 0 on page 434 |
| 0xFE4 TRCPIDR1 RO 0x000000BD 5.10.54 TRCPIDR1, ETM Peripheral Iden | tification Register 1 on page 434 |
| 0xFE8 TRCPIDR2 RO 0x0000002B 5.10.55 TRCPIDR2, ETM Peripheral Iden | tification Register 2 on page 435 |
| 0xFEC TRCPIDR3 RO 0x00000000 5.10.56 TRCPIDR3, ETM Peripheral Iden | tification Register 3 on page 436 |
| 0xFD0 TRCPIDR4 RO 0x00000004 5.10.57 TRCPIDR4, ETM Peripheral Iden | tification Register 4 on page 437 |
| 0xFD4-0xFDCRCPIDRn RO 0x00000000 5.10.58 TRCPIDRn, ETM Peripheral Ident | |
| 0xFF0 TRCCIDRO RO 0x0000000 5.10.10 TRCCIDRO, ETM Component Ide | tification Registers 5-7 on page 437 |

| Offset | Name | Туре | Reset | Description |
|--------|----------|------|------------|-----------------------------------------------------------------------|
| 0xFF4 | TRCCIDR1 | RO | 0x00000090 | 5.10.11 TRCCIDR1, ETM Component Identification Register 1 on page 394 |
| 0xFF8 | TRCCIDR2 | RO | 0x0000005 | 5.10.12 TRCCIDR2, ETM Component Identification Register 2 on page 395 |
| 0xFFC | TRCCIDR3 | RO | 0x000000B1 | 5.10.13 TRCCIDR3, ETM Component Identification Register 3 on page 395 |


5.10.2 TRCACATRn, Address Comparator Access Type Registers 0-7

The TRCACATRn registers control the access for the corresponding address comparators.

Bit field descriptions

The TRCACATRn registers are 64-bit registers.

Figure 5-41: TRCACATRn bit assignments



RESO, [63:16]

RESO Reserved

EXLEVEL_NS, [15:12]

Each bit controls whether a comparison can occur in Non-secure state for the corresponding Exception level. The possible values are:

- The trace unit can perform a comparison, in Non-secure state, for Exception level *n*.
- The trace unit does not perform a comparison, in Non-secure state, for Exception level n.

The Exception levels are:

| Bit[12] | Exception level 0 |
|---------|--------------------|
| Bit[13] | Exception level 1 |
| Bit[14] | Exception level 2 |
| Bit[15] | Always RESO |

EXLEVEL_S, [11:8]

Each bit controls whether a comparison can occur in Secure state for the corresponding Exception level. The possible values are:

The trace unit can perform a comparison, in Secure state, for Exception

The trace unit does not perform a comparison, in Secure state, for Exception level *n*.

The Exception levels are:

| Bit[8] | Exception level 0 |
|---------|--------------------|
| Bit[9] | Exception level 1 |
| Bit[10] | Always RESO |
| Bit[11] | Exception level 3 |

RES0, [7:4]

RESO Reserved

CONTEXT TYPE, [3:2]

Controls whether the trace unit performs a Context ID comparison, a VMID comparison, or both comparisons:

| 0b00 | The trace unit does not perform a Context ID comparison. |
|------|----------------------------------------------------------------------|
| 0b01 | The trace unit performs a Context ID comparison using the Context ID |
| | comparator that the CONTEXT field specifies, and signals a match if |
| | both the Context ID comparator matches and the address comparator |
| | match. |
| 0b10 | The trace unit performs a VMID comparison using the VMID |
| | comparator that the CONTEXT field specifies, and signals a match if |
| | both the VMID comparator and the address comparator match. |
| 0b11 | The trace unit performs a Context ID comparison and a VMID |
| | comparison using the comparators that the CONTEXT field specifies, |
| | and signals a match if the Context ID comparator matches, the VMID |
| | comparator matches, and the address comparator matches. |

TYPE, [1:0]

Type of comparison:

оьоо Instruction address, **RESO**

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCACATR*n* registers can be accessed through the external debug interface, offset 0x480-0x488.

5.10.3 TRCACVRn, Address Comparator Value Registers 0-7

The TRCACVRn registers indicate the address for the address comparators.

Bit field descriptions

The TRCACVRn registers are 64-bit registers.

Figure 5-42: TRCACVRn bit assignments



ADDRESS, [63:0]

The address value to compare against

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCACVRn can be accessed through the external debug interface, offset 0x400-0x43C.


5.10.4 TRCAUTHSTATUS, Authentication Status Register

The TRCAUTHSTATUS indicates the current level of tracing permitted by the system.

Bit field descriptions

The TRCAUTHSTATUS is a 32-bit register.

Figure 5-43: TRCAUTHSTATUS bit assignments

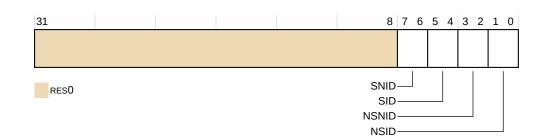

RESO, [31:8]

RESO Reserved.

SNID, [7:6]

Secure Non-invasive Debug:

Secure Non-invasive Debug implemented but disabled.
Secure Non-invasive Debug implemented and enabled.

SID, [5:4]

Secure Invasive Debug:

оьоо Secure Invasive Debug is not implemented.

NSNID, [3:2]

Non-secure Non-invasive Debug:

Non-secure Non-invasive Debug implemented but disabled, **NIDEN**=0.
Non-secure Non-invasive Debug implemented and enabled, **NIDEN**=1.

NSID, [1:0]

Non-secure Invasive Debug:

оьоо Non-secure Invasive Debug is not implemented.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.


The TRCAUTHSTATUS can be accessed through the external debug interface, offset 0xFB8.

5.10.5 TRCAUXCTLR, Auxiliary Control Register

The TRCAUXCTLR provides IMPLEMENTATION DEFINED configuration and control options.

Bit field descriptions

Figure 5-44: TRCAUXCTLR bit assignments

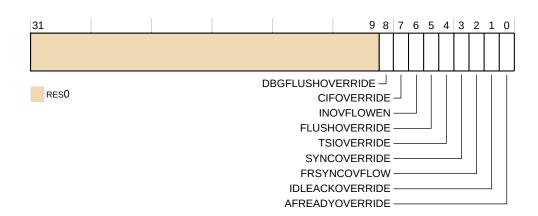

RESO, [31:9]

RESO Reserved.

DBGFLUSHOVERRIDE, [8]

Override trace flush on debug state entry. The possible values are:

- o Trace flush on debug state entry is enabled.
- 1 Trace flush on debug state entry is disabled.

CIFOVERRIDE, [7]

Override core interface register repeater clock enable. The possible values are:

- o Core interface clock gate is enabled.
- 1 Core interface clock gate is disabled.

INOVFLOWEN, [6]

Allow overflows of the core interface buffer, removing any rare impact that the trace unit might have on the core's speculation when enabled. The possible values are:

- o Core interface buffer overflows are disabled.
- 1 Core interface buffer overflows are enabled.

When this bit is set to 1, the trace start/stop logic might deviate from architecturally-specified behavior.

FLUSHOVERRIDE, [5]

Override ETM flush behavior. The possible values are:

- o ETM trace unit FIFO is flushed and ETM trace unit enters idle state when **DBGEN** or **NIDEN** is LOW.
- ETM trace unit FIFO is not flushed and ETM trace unit does not enter idle state when **DBGEN** or **NIDEN** is LOW.

When this bit is set to 1, the trace unit behavior deviates from architecturally-specified behavior.

TSIOVERRIDE, [4]

Override TS packet insertion behavior. The possible values are:

- Timestamp packets are inserted into FIFO only when trace activity is I OW
- Timestamp packets are inserted into FIFO irrespective of trace activity.

SYNCOVERRIDE, [3]

Override SYNC packet insertion behavior. The possible values are:

- o SYNC packets are inserted into FIFO only when trace activity is low.
- SYNC packets are inserted into FIFO irrespective of trace activity.

FRSYNCOVFLOW, [2]

Force overflows to output synchronization packets. The possible values are:

No FIFO overflow when SYNC packets are delayed.

Forces FIFO overflow when SYNC packets are delayed.

When this bit is set to 1, the trace unit behavior deviates from architecturally-specified behavior.

IDLEACKOVERRIDE, [1]

Force ETM idle acknowledge. The possible values are:

- o ETM trace unit idle acknowledge is asserted only when the ETM trace unit is in idle state.
- ETM trace unit idle acknowledge is asserted irrespective of the ETM trace unit idle state.

When this bit is set to 1, trace unit behavior deviates from architecturally-specified behavior.

AFREADYOVERRIDE, [0]

Force assertion of **AFREADYM** output. The possible values are:

- o ETM trace unit **AFREADYM** output is asserted only when the ETM trace unit is in idle state or when all the trace bytes in FIFO before a flush request are output.
- 1 ETM trace unit **AFREADYM** output is always asserted HIGH.

When this bit is set to 1, trace unit behavior deviates from architecturally-specified behavior.

The TRCAUXCTLR can be accessed through the internal memory-mapped interface and the external debug interface, offset 0x018.

Configurations

Available in all configurations.


5.10.6 TRCBBCTLR, Branch Broadcast Control Register

The TRCBBCTLR controls how branch broadcasting behaves, and allows branch broadcasting to be enabled for certain memory regions.

Bit field descriptions

The TRCBBCTLR is a 32-bit register.

Figure 5-45: TRCBBCTLR bit assignments



RESO, [31:9]

| RES0 | Reserved |
|------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| MODE, [8] Mode bit: | |
| 0 | Exclude mode. Branch broadcasting is not enabled in the address range that RANGE defines. |
| 1 | If RANGE==0 then branch broadcasting is enabled for the entire memory map. Include mode. Branch broadcasting is enabled in the address range that RANGE defines. |
| | If RANGE==0 then the behavior of the trace unit is CONSTRAINED UNPREDICTABLE . That is, the trace unit might or might not consider any instructions to be in a branch broadcast region. |

RANGE, [7:0]

Address range field.

Selects which address range comparator pairs are in use with branch broadcasting. Each bit represents an address range comparator pair, so bit[n] controls the selection of address range comparator pair n. If bit[n] is:

- The address range that address range comparator pair n defines, is not selected.
- The address range that address range comparator pair n defines, is selected.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCBBCTLR can be accessed through the external debug interface, offset 0x03C.


5.10.7 TRCCCCTLR, Cycle Count Control Register

The TRCCCCTLR sets the threshold value for cycle counting.

Bit field descriptions

The TRCCCCTLR is a 32-bit register.

Figure 5-46: TRCCCCTLR bit assignments



RESO, [31:12]

RESO Reserved.

THRESHOLD, [11:0]

Instruction trace cycle count threshold.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCCCCTLR can be accessed through the external debug interface, offset 0x038.


5.10.8 TRCCIDCCTLR0, Context ID Comparator Control Register 0

The TRCCIDCCTLRO controls the mask value for the context ID comparators.

Bit field descriptions

The TRCCIDCCTLRO is a 32-bit register.

Figure 5-47: TRCCIDCCTLR0 bit assignments



RESO, [31:4]

RESO Reserved.

COMP0, [3:0]

Controls the mask value that the trace unit applies to TRCCIDCVRO. Each bit in this field corresponds to a byte in TRCCIDCVRO. When a bit is:

The trace unit includes the relevant byte in TRCCIDCVRO when it performs the Context ID comparison.

The trace unit ignores the relevant byte in TRCCIDCVRO when it performs the Context ID comparison.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCCIDCCTLRO can be accessed through the external debug interface, offset 0x680.

5.10.9 TRCCIDCVR0, Context ID Comparator Value Register 0

The TRCCIDCVRO contains a Context ID value.

Bit field descriptions

The TRCCIDCVRO is a 64-bit register.

Figure 5-48: TRCCIDCVR0 bit assignments



RESO, [63:32]

RESO Reserved.

VALUE, [31:0]

The data value to compare against.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCCIDCVRO can be accessed through the external debug interface, offset 0x600.


5.10.10 TRCCIDRO, ETM Component Identification Register 0

The TRCCIDRO provides information to identify a trace component.

Bit field descriptions

The TRCCIDRO is a 32-bit register.

Figure 5-49: TRCCIDRO bit assignments



RESO, [31:8]

RESO Reserved.

PRMBL_0, [7:0]

0x0D Preamble byte 0.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCCIDRO can be accessed through the external debug interface, offset 0xFF0.


5.10.11 TRCCIDR1, ETM Component Identification Register 1

The TRCCIDR1 provides information to identify a trace component.

Bit field descriptions

The TRCCIDR1 is a 32-bit register.

Figure 5-50: TRCCIDR1 bit assignments



RESO, [31:8]

RESO Reserved.

CLASS, [7:4]

0x9 Debug component.

PRMBL_1, [3:0]

0x0 Preamble byte 1.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCCIDR1 can be accessed through the external debug interface, offset 0xFF4.


5.10.12 TRCCIDR2, ETM Component Identification Register 2

The TRCCIDR2 provides information to identify a CTI component.

Bit field descriptions

The TRCCIDR2 is a 32-bit register.

Figure 5-51: TRCCIDR2 bit assignments



RESO, [31:8]

RESO Reserved.

PRMBL_2, [7:0]

 0×05 Preamble byte 2.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCCIDR2 can be accessed through the external debug interface, offset 0xFF8.


5.10.13 TRCCIDR3, ETM Component Identification Register 3

The TRCCIDR3 provides information to identify a trace component.

Bit field descriptions

The TRCCIDR3 is a 32-bit register.

Figure 5-52: TRCCIDR3 bit assignments



RESO, [31:8]

RESO Reserved.

PRMBL_3, [7:0]

0xB1 Preamble byte 3.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCCIDR3 can be accessed through the external debug interface, offset 0xFFC.


5.10.14 TRCCLAIMCLR, Claim Tag Clear Register

The TRCCLAIMCLR clears bits in the claim tag and determines the current value of the claim tag.

Bit field descriptions

The TRCCLAIMCLR is a 32-bit register.

Figure 5-53: TRCCLAIMCLR bit assignments



RESO, [31:4]

RESO Reserved.

CLR, [3:0]

On reads, for each bit:

- O Claim tag bit is not set.
- 1 Claim tag bit is set.

On writes, for each bit:

- o Has no effect.
- Clears the relevant bit of the claim tag.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCCLAIMCLR can be accessed through the external debug interface, offset 0xFA4.


5.10.15 TRCCLAIMSET, Claim Tag Set Register

The TRCCLAIMSET sets bits in the claim tag and determines the number of claim tag bits implemented.

Bit field descriptions

The TRCCLAIMSET is a 32-bit register.

Figure 5-54: TRCCLAIMSET bit assignments



RESO, [31:4]

RESO Reserved.

SET, [3:0]

On reads, for each bit:

- o Claim tag bit is not implemented.
- 1 Claim tag bit is implemented.

On writes, for each bit:

- o Has no effect.
- Sets the relevant bit of the claim tag.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCCLAIMSET can be accessed through the external debug interface, offset 0xFA0.


5.10.16 TRCCNTCTLRO, Counter Control Register 0

The TRCCNTCTLRO controls the counter.

Bit field descriptions

The TRCCNTCTLRO is a 32-bit register.

Figure 5-55: TRCCNTCTLR0 bit assignments



RESO, [31:17]

RESO Reserved.

RLDSELF, [16]

Defines whether the counter reloads when it reaches zero:

- The counter does not reload when it reaches zero. The counter only reloads based on RLDTYPE and RLDSEL.
- The counter reloads when it reaches zero and the resource selected by CNTTYPE and CNTSEL is also active. The counter also reloads based on RLDTYPE and RLDSEL.

RLDTYPE, [15]

Selects the resource type for the reload:

- o Single selected resource.
- Boolean combined resource pair.

RESO, [14:12]

RESO Reserved.

RLDSEL, [11:8]

Selects the resource number, based on the value of RLDTYPE:

When RLDTYPE is 0, selects a single selected resource from 0-15 defined by bits[3:0].

When RLDTYPE is 1, selects a Boolean combined resource pair from 0-7 defined by bits[2:0].

CNTTYPE, [7]

Selects the resource type for the counter:

- o Single selected resource.
- Boolean combined resource pair.

RES0, [6:4]

RESO Reserved.

CNTSEL, [3:0]

Selects the resource number, based on the value of CNTTYPE:

When CNTTYPE is 0, selects a single selected resource from 0-15 defined by bits[3:0].

When CNTTYPE is 1, selects a Boolean combined resource pair from 0-7 defined by bits[2:0].

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCCNTCTLRO can be accessed through the external debug interface, offset 0x150.


5.10.17 TRCCNTCTLR1, Counter Control Register 1

The TRCCNTCTLR1 controls the counter.

Bit field descriptions

The TRCCNTCTLR1 is a 32-bit register.

Figure 5-56: TRCCNTCTLR1 bit assignments



RESO, [31:18]

RESO Reserved.

CNTCHAIN, [17]

Defines whether the counter decrements when the counter reloads. This enables two counters to be used in combination to provide a larger counter:

The counter operates independently from the counter. The counter only decrements based on CNTTYPE and CNTSEL.

The counter decrements when the counter reloads. The counter also decrements when the resource selected by CNTTYPE and CNTSEL is active.

RLDSELF, [16]

Defines whether the counter reloads when it reaches zero:

- The counter does not reload when it reaches zero. The counter only reloads based on RLDTYPE and RLDSEL.
- The counter reloads when it is zero and the resource selected by CNTTYPE and CNTSEL is also active. The counter also reloads based on RLDTYPE and RLDSEL.

RLDTYPE, [15]

Selects the resource type for the reload:

- o Single selected resource.
- 1 Boolean combined resource pair.

RESO, [14:12]

RESO Reserved.

RLDSEL, [11:8]

Selects the resource number, based on the value of RLDTYPE:

When RLDTYPE is 0, selects a single selected resource from 0-15 defined by bits[3:0].

When RLDTYPE is 1, selects a Boolean combined resource pair from 0-7 defined by bits[2:0].

CNTTYPE, [7]

Selects the resource type for the counter:

- o Single selected resource.
- 1 Boolean combined resource pair.

RES0, [6:4]

RESO Reserved.

CNTSEL, [3:0]

Selects the resource number, based on the value of CNTTYPE:

When CNTTYPE is 0, selects a single selected resource from 0-15 defined by bits[3:0].

When CNTTYPE is 1, selects a Boolean combined resource pair from 0-7 defined by bits[2:0].

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCCNTCTLR1 can be accessed through the external debug interface, offset 0x154.


5.10.18 TRCCNTRLDVRn, Counter Reload Value Registers 0-1

The TRCCNTRLDVRn registers define the reload value for the counter.

Bit field descriptions

The TRCCNTRLDVRn registers are 32-bit registers.

Figure 5-57: TRCCNTRLDVRn bit assignments



RESO, [31:16]

RESO Reserved

VALUE, [15:0]

Defines the reload value for the counter. This value is loaded into the counter each time the reload event occurs.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCCNTRLDVRn registers can be accessed through the external debug interface, offsets:

TRCCNTRLDVR0

0x140

TRCCNTRLDVR1

0x144


5.10.19 TRCCNTVRn, Counter Value Registers 0-1

The TRCCNTVRn registers contain the current counter value.

Bit field descriptions

The TRCCNTVRn registers are 32-bit registers.

Figure 5-58: TRCCNTVRn bit assignments



RESO, [31:16]

RESO Reserved

VALUE, [15:0]

Contains the current counter value.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCCNTVRn registers can be accessed through the external debug interface, offsets:

TRCCNTVRO

0x160

TRCCNTVR1

0x164


5.10.20 TRCCONFIGR, Trace Configuration Register

The TRCCONFIGR controls the tracing options.

Bit field descriptions

The TRCCONFIGR is a 32-bit register.

Figure 5-59: TRCCONFIGR bit assignments

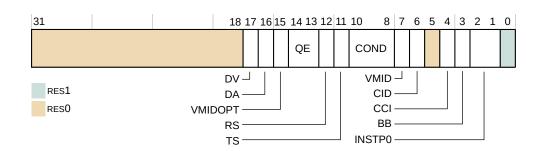

RESO, [31:18]

RESO Reserved.

DV, [17]

Enables data value tracing. The possible values are:

- o Disables data value tracing.
- 1 Enables data value tracing.

DA, [16]

Enables data address tracing. The possible values are:

- o Disables data address tracing.
- 1 Enables data address tracing.

VMIDOPT, [15]

Configures the Virtual context identifier value that is used by the trace unit, both for trace generation and in the Virtual context identifier comparators. The possible values are:

оъо VTTBR_EL2.VMID is used. If the trace unit supports a Virtual context

identifier larger than the VTTBR_EL2.VMID, the upper unused bits are always zero. If the trace unit supports a Virtual context identifier larger than 8 bits and if the VTCR_EL2.VS bit forces use of an 8-bit Virtual context identifier, bits [15:8] of the trace unit Virtual context identifier

are always zero.

0b1 CONTEXTIDR EL2 is used. TRCIDR2.VMIDOPT indicates whether this

field is implemented.

QE, [14:13]

Enables Q element. The possible values are:

оьоо Q elements are disabled.

Q elements with instruction counts are disabled. Q elements without

instruction counts are disabled.

оь10 Reserved.

Q elements with and without instruction counts are enabled.

RS, [12]

Enables the return stack. The possible values are:

- o Disables the return stack.
- 1 Enables the return stack.

TS, [11]

Enables global timestamp tracing. The possible values are:

- o Disables global timestamp tracing.
- 1 Enables global timestamp tracing.

COND, [10:8]

Enables conditional instruction tracing. The possible values are:

| 0b000 | Conditional instruction tracing is disabled. |
|-------|-----------------------------------------------------|
| 0b001 | Conditional load instructions are traced. |
| 0b010 | Conditional store instructions are traced. |
| 0b011 | Conditional load and store instructions are traced. |
| 0b111 | All conditional instructions are traced. |

VMID, [7]

Enables VMID tracing. The possible values are:

Disables VMID tracing.Enables VMID tracing.

CID, [6]

Enables context ID tracing. The possible values are:

Disables context ID tracing.Enables context ID tracing.

RESO, [5]

RESO Reserved.

CCI, [4]

Enables cycle counting instruction trace. The possible values are:

- Disables cycle counting instruction trace.Enables cycle counting instruction trace.
- BB, [3]

Enables branch broadcast mode. The possible values are:

Disables branch broadcast mode.Enables branch broadcast mode.

INSTP0, [2:1]

Controls whether load and store instructions are traced as PO instructions. The possible values are:

| 0b00 | Load and store instructions are not traced as PO instructions. |
|------|----------------------------------------------------------------|
| 0b01 | Load instructions are traced as PO instructions. |
| 0b10 | Store instructions are traced as PO instructions. |
| 0b11 | Load and store instructions are traced as PO instructions. |

RES1, [0]

RES1 Reserved.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCCONFIGR can be accessed through the external debug interface, offset 0x010.

5.10.21 TRCDEVAFFO, Device Affinity Register 0

The TRCDEVAFFO provides an additional core identification mechanism for scheduling purposes in a cluster. TRCDEVAFFO is a read-only copy of MPIDR_EL1[31:0] accessible from the external debug interface.

Bit field descriptions

The TRCDEVAFFO is a 32-bit register and is a copy of MPIDR_EL1[31:0]. See 3.2.91 MPIDR_EL1, Multiprocessor Affinity Register, EL1 on page 220 for full bit field descriptions.

5.10.22 TRCDEVAFF1, Device Affinity Register 1

The TRCDEVAFF1 provides an additional core identification mechanism for scheduling purposes in a cluster. TRCDEVAFF1 is a read-only copy of MPIDR_EL1[63:32] accessible from the external debug interface.

Bit field descriptions

The TRCDEVAFF1 is a 32-bit register and is a copy of MPIDR_EL1[63:32]. See 3.2.91 MPIDR_EL1, Multiprocessor Affinity Register, EL1 on page 220 for full bit field descriptions.


5.10.23 TRCDEVARCH, Device Architecture Register

The TRCDEVARCH identifies the ETM trace unit as an ETMv4 component.

Bit field descriptions

The TRCDEVARCH is a 32-bit register.

Figure 5-60: TRCDEVARCH bit assignments

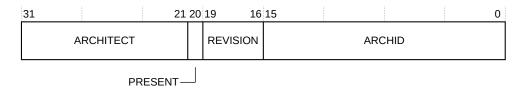

ARCHITECT, [31:21]

Defines the architect of the component:

0x4 Arm JEP continuation. 0x3B Arm JEP 106 code.

PRESENT, [20]

Indicates the presence of this register:

оъ1 Register is present.

REVISION, [19:16]

Architecture revision:

 0×02 Architecture revision 2.

ARCHID, [15:0]

Architecture ID:

0x4A13 ETMv4 component.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCDEVARCH can be accessed through the external debug interface, offset 0xFBC.


5.10.24 TRCDEVID, Device ID Register

The TRCDEVID indicates the capabilities of the ETM trace unit.

Bit field descriptions

The TRCDEVID is a 32-bit register.

Figure 5-61: TRCDEVID bit assignments

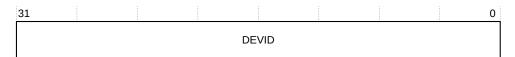

DEVID, [31:0]

RAZ. There are no component-defined capabilities.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCDEVID can be accessed through the external debug interface, offset 0xFC8.


5.10.25 TRCDEVTYPE, Device Type Register

The TRCDEVTYPE indicates the type of the component.

Bit field descriptions

The TRCDEVTYPE is a 32-bit register.

Figure 5-62: TRCDEVTYPE bit assignments

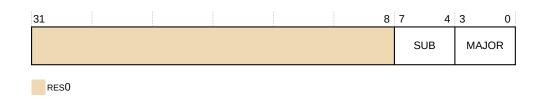

RESO, [31:8]

RESO Reserved.

SUB, [7:4]

The sub-type of the component:

Ob0001 Core trace.

MAJOR, [3:0]

The main type of the component:

0b0011 Trace source.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCDEVTYPE can be accessed through the external debug interface, offset 0xFCC.


5.10.26 TRCEVENTCTLOR, Event Control 0 Register

The TRCEVENTCTLOR controls the tracing of events in the trace stream. The events also drive the external outputs from the ETM trace unit. The events are selected from the Resource Selectors.

Bit field descriptions

The TRCEVENTCTLOR is a 32-bit register.

Figure 5-63: TRCEVENTCTLOR bit assignments



TYPE3, [31]

Selects the resource type for trace event 3:

- o Single selected resource.
- 1 Boolean combined resource pair.

RESO, [30:28]

RESO Reserved.

SEL3, [27:24]

Selects the resource number, based on the value of TYPE3:

When TYPE3 is 0, selects a single selected resource from 0-15 defined by bits[3:0].

When TYPE3 is 1, selects a Boolean combined resource pair from 0-7 defined by bits[2:0].

TYPE2, [23]

Selects the resource type for trace event 2:

- o Single selected resource.
- Boolean combined resource pair.

RESO, [22:20]

RESO Reserved.

SEL2, [19:16]

Selects the resource number, based on the value of TYPE2:

When TYPE2 is 0, selects a single selected resource from 0-15 defined by bits[3:0].

When TYPE2 is 1, selects a Boolean combined resource pair from 0-7 defined by bits[2:0].

TYPE1, [15]

Selects the resource type for trace event 1:

- o Single selected resource.
- Boolean combined resource pair.

RESO, [14:12]

RESO Reserved.

SEL1, [11:8]

Selects the resource number, based on the value of TYPE1:

When TYPE1 is 0, selects a single selected resource from 0-15 defined by bits[3:0].

When TYPE1 is 1, selects a Boolean combined resource pair from 0-7 defined by bits[2:0].

TYPE0, [7]

Selects the resource type for trace event 0:

- o Single selected resource.
- Boolean combined resource pair.

RESO, [6:4]

RESO Reserved.

SEL0, [3:0]

Selects the resource number, based on the value of TYPEO:

When TYPEO is 0, selects a single selected resource from 0-15 defined by bits[3:0].

When TYPEO is 1, selects a Boolean combined resource pair from 0-7 defined by bits[2:0].

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCEVENTCTLOR can be accessed through the external debug interface, offset 0x020.


5.10.27 TRCEVENTCTL1R, Event Control 1 Register

The TRCEVENTCTL1R controls the behavior of the events that TRCEVENTCTLOR selects.

Bit field descriptions

The TRCEVENTCTL1R is a 32-bit register.

Figure 5-64: TRCEVENTCTL1R bit assignments



RESO, [31:13]

RESO Reserved.

LPOVERRIDE, [12]

Low-power state behavior override:

- o Low-power state behavior unaffected.
- Low-power state behavior overridden. The resources and Event trace generation are unaffected by entry to a low-power state.

ATB, [11]

ATB trigger enable:

- o ATB trigger disabled.
- 1 ATB trigger enabled.

RESO, [10:4]

RESO Reserved.

EN, [3:0]

One bit per event, to enable generation of an event element in the instruction trace stream when the selected event occurs:

- o Event does not cause an event element.
- 1 Event causes an event element.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.


The TRCEVENTCTL1R can be accessed through the external debug interface, offset 0x024.

5.10.28 TRCEXTINSELR, External Input Select Register

The TRCEXTINSELR controls the selectors that choose an external input as a resource in the ETM trace unit. You can use the Resource Selectors to access these external input resources.

Bit field descriptions

Figure 5-65: TRCEXTINSELR bit assignments



RESO, [31:29]

RESO Reserved.

SEL3, [28:24]

Selects an event from the external input bus for External Input Resource 3.

RESO, [23:21]

RESO Reserved.

SEL2, [20:16]

Selects an event from the external input bus for External Input Resource 2.

RESO, [15:13]

RESO Reserved.

SEL1, [12:8]

Selects an event from the external input bus for External Input Resource 1.

RES0, [7:5]

RESO Reserved.

SEL0, [4:0]

Selects an event from the external input bus for External Input Resource O.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCEXTINSELR can be accessed through the external debug interface, offset 0x120.


5.10.29 TRCIDRO, ID Register 0

The TRCIDRO returns the tracing capabilities of the ETM trace unit.

Bit field descriptions

The TRCIDRO is a 32-bit register.

Figure 5-66: TRCIDRO bit assignments

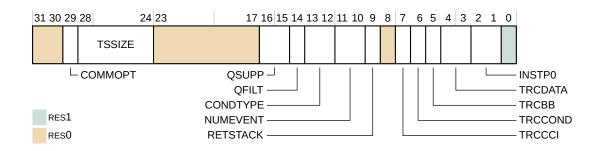

RESO, [31:30]

RESO Reserved.

COMMOPT, [29]

Indicates the meaning of the commit field in some packets:

1 Commit mode 1.

TSSIZE, [28:24]

Global timestamp size field:

овотого Implementation supports a maximum global timestamp of 64 bits.

RESO, [23:17]

RESO Reserved.

QSUPP, [16:15]

Indicates Q element support:

оьоо Q elements not supported.

QFILT, [14]

Indicates Q element filtering support:

оьо Q element filtering not supported.

CONDTYPE, [13:12]

Indicates how conditional results are traced:

0600 Conditional trace not supported.

NUMEVENT, [11:10]

Number of events supported in the trace, minus 1:

ob11 Four events supported.

RETSTACK, [9]

Return stack support:

1 Return stack implemented.

RESO, [8]

RESO Reserved.

TRCCCI, [7]

Support for cycle counting in the instruction trace:

1 Cycle counting in the instruction trace is implemented.

TRCCOND, [6]

Support for conditional instruction tracing:

o Conditional instruction tracing is not supported.

TRCBB, [5]

Support for branch broadcast tracing:

Branch broadcast tracing is implemented.

TRCDATA, [4:3]

Conditional tracing field:

оьоо Tracing of data addresses and data values is not implemented.

INSTP0, [2:1]

PO tracing support field:

овоо Tracing of load and store instructions as PO elements is not supported.

RES1, [0]

RES1 Reserved.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCIDRO can be accessed through the external debug interface, offset 0x1E0.


5.10.30 TRCIDR1, ID Register 1

The TRCIDR1 returns the base architecture of the trace unit.

Bit field descriptions

The TRCIDR1 is a 32-bit register.

Figure 5-67: TRCIDR1 bit assignments

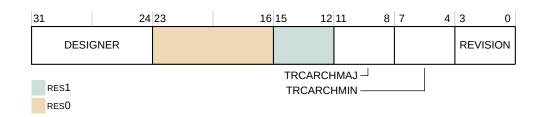

DESIGNER, [31:24]

Indicates which company designed the trace unit:

0x41 Arm.

RESO, [23:16]

RESO Reserved.

RES1, [15:12]

RES1 Reserved.

TRCARCHMAJ, [11:8]

Major trace unit architecture version number:

0x4 ETMv4.

TRCARCHMIN, [7:4]

Minor trace unit architecture version number:

0x2 ETMv4.2

REVISION, [3:0]

Trace unit implementation revision number:

0x2 ETM revision for r1p1

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCIDR1 can be accessed through the external debug interface, offset 0x1E4.

5.10.31 TRCIDR2, ID Register 2

The TRCIDR2 returns the maximum size of six parameters in the trace unit.


The parameters are:

- Cycle counter.
- Data value.
- Data address.
- VMID.
- Context ID.
- Instruction address.

Bit field descriptions

The TRCIDR2 is a 32-bit register.

Figure 5-68: TRCIDR2 bit assignments



RES0, [31]

res0

Reserved.

VMIDOPT, [30:29]

Indicates the options for observing the Virtual context identifier:

0x1

VMIDOPT is implemented.

CCSIZE, [28:25]

Size of the cycle counter in bits minus 12:

0x0

The cycle counter is 12 bits in length.

DVSIZE, [24:20]

Data value size in bytes:

0x00

Data value tracing is not implemented.

DASIZE, [19:15]

Data address size in bytes:

0x00

Data address tracing is not implemented.

VMIDSIZE, [14:10]

Virtual Machine ID size:

0x4

Maximum of 32-bit Virtual Machine ID size.

CIDSIZE, [9:5]

Context ID size in bytes:

0x4

Maximum of 32-bit Context ID size.

IASIZE, [4:0]

Instruction address size in bytes:

8x0

Maximum of 64-bit address size.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCIDR2 can be accessed through the external debug interface, offset 0x1E8.

5.10.32 TRCIDR3, ID Register 3


The TRCIDR3 indicates:

- Whether TRCVICTLR is supported.
- The number of cores available for tracing.
- If an Exception level supports instruction tracing.
- The minimum threshold value for instruction trace cycle counting.
- Whether the synchronization period is fixed.

Bit field descriptions

The TRCIDR3 is a 32-bit register.

Figure 5-69: TRCIDR3 bit assignments

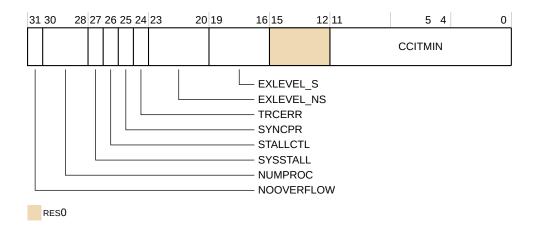

NOOVERFLOW, [31]

Indicates whether TRCSTALLCTLR.NOOVERFLOW is implemented:

o TRCSTALLCTLR.NOOVERFLOW is not implemented.

NUMPROC, [30:28]

Indicates the number of cores available for tracing:

овооо The trace unit can trace one core, ETM trace unit sharing not supported.

SYSSTALL, [27]

Indicates whether stall control is implemented:

The system does not support core stall control.

STALLCTL, [26]

Indicates whether TRCSTALLCTLR is implemented:

o TRCSTALLCTLR is not implemented.

This field is used in conjunction with SYSSTALL.

SYNCPR, [25]

Indicates whether there is a fixed synchronization period:

TRCSYNCPR is read/write so software can change the synchronization period.

TRCERR, [24]

Indicates whether TRCVICTLR.TRCERR is implemented:

1 TRCVICTLR.TRCERR is implemented.

EXLEVEL_NS, [23:20]

Each bit controls whether instruction tracing in Non-secure state is implemented for the corresponding Exception level:

оьотт Instruction tracing is implemented for Non-secure ELO, EL1, and EL2

Exception levels.

EXLEVEL_S, [19:16]

Each bit controls whether instruction tracing in Secure state is implemented for the corresponding Exception level:

оъ1011 Instruction tracing is implemented for Secure ELO, EL1, and EL3

Exception levels.

RESO, [15:12]

res0 Reserved.

CCITMIN, [11:0]

The minimum value that can be programmed in TRCCCCTLR.THRESHOLD:

0x004 Instruction trace cycle counting minimum threshold is 4.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCIDR3 can be accessed through the external debug interface, offset 0x1EC.


5.10.33 TRCIDR4, ID Register 4

The TRCIDR4 indicates the resources available in the ETM trace unit.

Bit field descriptions

The TRCIDR4 is a 32-bit register.

Figure 5-70: TRCIDR4 bit assignments



NUMVMIDC, [31:28]

Indicates the number of VMID comparators available for tracing:

0x1 One VMID comparator is available.

NUMCIDC, [27:24]

Indicates the number of CID comparators available for tracing:

0x1 One Context ID comparator is available.

NUMSSCC, [23:20]

Indicates the number of single-shot comparator controls available for tracing:

0x1 One single-shot comparator control is available.

NUMRSPAIRS, [19:16]

Indicates the number of resource selection pairs available for tracing:

0x7 Eight resource selection pairs are available.

NUMPC, [15:12]

Indicates the number of core comparator inputs available for tracing:

0x0 Core comparator inputs are not implemented.

RESO, [11:9]

RESO Reserved.

SUPPDAC, [8]

Indicates whether the implementation supports data address comparisons: This value is:

Data address comparisons are not implemented.

NUMDVC, [7:4]

Indicates the number of data value comparators available for tracing:

0x0 Data value comparators are not implemented.

NUMACPAIRS, [3:0]

Indicates the number of address comparator pairs available for tracing:

0x4 Four address comparator pairs are implemented.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCIDR4 can be accessed through the external debug interface, offset 0x1F0.


Issue: 00

5.10.34 TRCIDR5, ID Register 5

The TRCIDR5 returns how many resources the trace unit supports.

Bit field descriptions

Figure 5-71: TRCIDR5 bit assignments

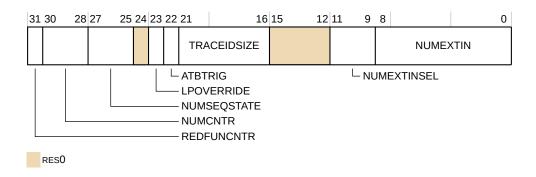

REDFUNCNTR, [31]

Reduced Function Counter implemented:

Reduced Function Counter not implemented.

NUMCNTR, [30:28]

Number of counters implemented:

Two counters implemented. 0b010

NUMSEQSTATE, [27:25]

Number of sequencer states implemented:

0b100 Four sequencer states implemented.

RES0, [24]

Reserved. RES0

LPOVERRIDE, [23]

Low-power state override support:

Low-power state override support is not implemented.

ATBTRIG, [22]

ATB trigger support:

1 ATB trigger support implemented.

TRACEIDSIZE, [21:16]

Number of bits of trace ID:

0x07 Seven-bit trace ID implemented.

RESO, [15:12]

RESO Reserved.

NUMEXTINSEL, [11:9]

Number of external input selectors implemented:

оъто Four external input selectors implemented.

NUMEXTIN, [8:0]

Number of external inputs implemented:

0xAD 32 external inputs implemented.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCIDR5 can be accessed through the external debug interface, offset 0x1F4.

5.10.35 TRCIDR8, ID Register 8

The TRCIDR8 returns the maximum speculation depth of the instruction trace stream.

Bit field descriptions

The TRCIDR8 is a 32-bit register.

Figure 5-72: TRCIDR8 bit assignments



MAXSPEC, [31:0]

The maximum number of PO elements in the trace stream that can be Speculative at any time.

o Maximum speculation depth of the instruction trace stream.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCIDR8 can be accessed through the external debug interface, offset 0x180.


5.10.36 TRCIDR9, ID Register 9

The TRCIDR9 returns the number of PO right-hand keys that the trace unit can use.

Bit field descriptions

The TRCIDR9 is a 32-bit register.

Figure 5-73: TRCIDR9 bit assignments



NUMP0KEY, [31:0]

The number of PO right-hand keys that the trace unit can use.

Number of PO right-hand keys.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCIDR9 can be accessed through the external debug interface, offset 0x184.


5.10.37 TRCIDR10, ID Register 10

The TRCIDR10 returns the number of P1 right-hand keys that the trace unit can use.

Bit field descriptions

The TRCIDR10 is a 32-bit register.

Figure 5-74: TRCIDR10 bit assignments



NUMP1KEY, [31:0]

The number of P1 right-hand keys that the trace unit can use.

Number of P1 right-hand keys.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCIDR10 can be accessed through the external debug interface, offset 0x188.

5.10.38 TRCIDR11, ID Register 11

The TRCIDR11 returns the number of special P1 right-hand keys that the trace unit can use.

Bit field descriptions

The TRCIDR11 is a 32-bit register.

Figure 5-75: TRCIDR11 bit assignments



NUMP1SPC, [31:0]

The number of special P1 right-hand keys that the trace unit can use.

Number of special P1 right-hand keys.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCIDR11 can be accessed through the external debug interface, offset 0x18C.

5.10.39 TRCIDR12, ID Register 12

The TRCIDR12 returns the number of conditional instruction right-hand keys that the trace unit can use.

Bit field descriptions

The TRCIDR12 is a 32-bit register.

Figure 5-76: TRCIDR12 bit assignments



NUMCONDKEY, [31:0]

The number of conditional instruction right-hand keys that the trace unit can use, including normal and special keys.

Number of conditional instruction right-hand keys.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCIDR12 can be accessed through the external debug interface, offset 0x190.


5.10.40 TRCIDR13, ID Register 13

The TRCIDR13 returns the number of special conditional instruction right-hand keys that the trace unit can use.

Bit field descriptions

The TRCIDR13 is a 32-bit register.

Figure 5-77: TRCIDR13 bit assignments



NUMCONDSPC, [31:0]

The number of special conditional instruction right-hand keys that the trace unit can use, including normal and special keys.

Number of special conditional instruction right-hand keys.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCIDR13 can be accessed through the external debug interface, offset 0x194.


5.10.41 TRCIMSPECO, Implementation Specific Register 0

The TRCIMSPECO shows the presence of any *implementation specific* features, and enables any features that are provided.

Bit field descriptions

The TRCIMSPECO is a 32-bit register.

Figure 5-78: TRCIMSPEC0 bit assignments



RESO, [31:4]

res0

Reserved.

SUPPORT, [3:0]

0

No implementation specific extensions are supported.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCIMSPECO can be accessed through the external debug interface, offset 0x1c0.



System register accesses to the TRCIMSPECOR will result in an UNDEF exception.

5.10.42 TRCITATBIDR, Integration ATB Identification Register

The TRCITATBIDR sets the state of output pins, which are mentioned in the bit descriptions in this section.

Bit field descriptions

The TRCITATBIDR is a 32-bit register.

Figure 5-79: TRCITATBIDR bit assignments



[31:7]

Reserved. Read undefined.

ID, [6:0]

Drives the ATIDMn[6:0] output pins.

When a bit is set to 0, the corresponding output pin is LOW.

When a bit is set to 1, the corresponding output pin is HIGH.

The TRCITATBIDR bit values correspond to the physical state of the output pins.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCITATBIDR can be accessed through the external debug interface, offset 0xEE4.


5.10.43 TRCITCTRL, Integration Mode Control Register

The TRCITCTRL enables topology detection or integration testing, by putting the ETM trace unit into integration mode.

Bit field descriptions

The TRCITCTRL is a 32-bit register.

Figure 5-80: TRCITCTRL bit assignments



RESO, [31:1]

RESO Reserved.

IME, [0]

Integration mode enable bit. The possible values are:

- The trace unit is not in integration mode.
- The trace unit is in integration mode. This mode enables:
 - A debug agent to perform topology detection.
 - SoC test software to perform integration testing.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCITCTRL can be accessed through the external debug interface, offset 0xF00.


5.10.44 TRCITIATBINR, Integration Instruction ATB In Register

The TRCITIATBINR reads the state of the input pins that are described in this section.

Bit field descriptions

The TRCITIATBINR is a 32-bit register.

Figure 5-81: TRCITIATBINR bit assignments



For all non-reserved bits:

- When an input pin is LOW, the corresponding register bit is 0.
- When an input pin is HIGH, the corresponding register bit is 1.
- The TRCITIATBINR bit values always correspond to the physical state of the input pins.

[31:2]

Reserved. Read undefined.

AFVALIDM, [1]

Returns the value of the **AFVALIDMn** input pin.

ATREADYM, [0]

Returns the value of the **ATREADYMn** input pin.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCITIATBINR can be accessed through the external debug interface, offset 0xEF4.


5.10.45 TRCITIATBOUTR, Integration Instruction ATB Out Register

The TRCITIATBOUTR sets the state of the output pins that are mentioned in the bit descriptions in this section.

Bit field descriptions

The TRCITIATBOUTR is a 32-bit register.

Figure 5-82: TRCITIATBOUTR bit assignments

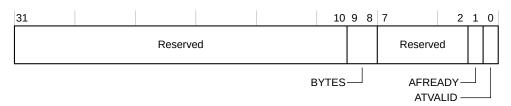

For all non-reserved bits:

• When a bit is set to 0, the corresponding output pin is LOW.

- When a bit is set to 1, the corresponding output pin is HIGH.
- The TRCITIATBOUTR bit values always correspond to the physical state of the output pins.

[31:10]

Reserved. Read undefined.

BYTES, [9:8]

Drives the **ATBYTESMn[1:0]** output pins.

[7:2]

Reserved. Read undefined.

AFREADY, [1]

Drives the **AFREADYMn** output pin.

ATVALID, [0]

Drives the **ATVALIDMn** output pin.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCITIATBOUTR can be accessed through the external debug interface, offset 0xEFC.


5.10.46 TRCITIDATAR, Integration Instruction ATB Data Register

The TRCITIDATAR sets the state of the **ATDATAMn** output pins that are shown in the TRCITIDATAR bit assignments table.

Bit field descriptions

The TRCITIDATAR is a 32-bit register.

Figure 5-83: TRCITIDATAR bit assignments

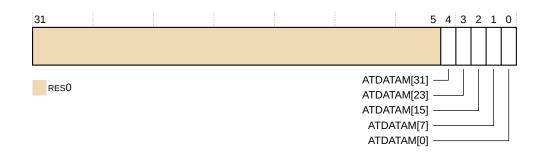

RESO, [31:5]

RESO Reserved.

ATDATAM[31], [4]

Drives the ATDATAM[31] output. 4

ATDATAM[23], [3]

Drives the ATDATAM[23] output.4

ATDATAM[15], [2]

Drives the ATDATAM[15] output.⁴

ATDATAM[7], [1]

Drives the ATDATAM[7] output.4

ATDATAM[0], [0]

Drives the ATDATAM[0] output.4

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCITIDATAR can be accessed through the external debug interface, offset 0xEEC.

5.10.47 TRCLAR, Software Lock Access Register

The TRCLAR controls access to registers using the memory-mapped interface, when **PADDRDBG31** is LOW.

Bit field descriptions

The TRCLAR is a 32-bit register.

Figure 5-84: TRCLAR bit assignments



RAZ/WI, [31:0]

Read-As-Zero, write ignore.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCLAR can be accessed through the external debug interface, offset 0xFB0.

When a bit is set to 0, the corresponding output pin is LOW. When a bit is set to 1, the corresponding output pin is HIGH. The TRCITIDATAR bit values correspond to the physical state of the output pins.

5.10.48 TRCLSR, Software Lock Status Register

The TRCLSR determines whether the software lock is implemented, and indicates the current status of the software lock.

Bit field descriptions

The TRCLSR is a 32-bit register.

Figure 5-85: TRCLSR bit assignments



RAZ/WI, [31:0]

Read-As-Zero, write ignore.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCLSR can be accessed through the external debug interface, offset 0xFB4.

5.10.49 TRCOSLAR, OS Lock Access Register

The TRCOSLAR sets and clears the OS Lock, to lock out external debugger accesses to the ETM trace unit registers.

Bit field descriptions

The TRCOSLAR is a 32-bit register.

Figure 5-86: TRCOSLAR bit assignments



RESO, [31:1]

RESO Reserved.

OSLK, [0]

OS Lock key value:

- 0 Unlock the OS Lock.
- 1 Lock the OS Lock.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCOSLAR can be accessed through the external debug interface, offset 0x300.


5.10.50 TRCOSLSR, OS Lock Status Register

The TRCOSLSR returns the status of the OS Lock.

Bit field descriptions

The TRCOSLSR is a 32-bit register.

Figure 5-87: TRCOSLSR bit assignments

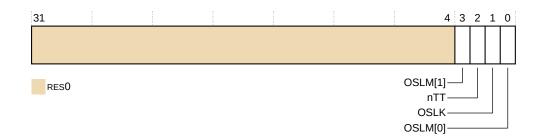

RESO, [31:4]

RESO Reserved.

OSLM[1], [3]

OS Lock model [1] bit. This bit is combined with OSLM[0] to form a two-bit field that indicates the OS Lock model is implemented.

The value of this field is always 0b10, indicating that the OS Lock is implemented.

nTT, [2]

This bit is RAZ, that indicates that software must perform a 32-bit write to update the TRCOSLAR.

OSLK, [1]

OS Lock status bit:

- OS Lock is unlocked.
- OS Lock is locked.

OSLM[0], [0]

OS Lock model [0] bit. This bit is combined with OSLM[1] to form a two-bit field that indicates the OS Lock model is implemented.

The value of this field is always ob10, indicating that the OS Lock is implemented.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCOSLSR can be accessed through the external debug interface, offset 0x304.


5.10.51 TRCPDCR, Power Down Control Register

The TRCPDCR request to the system power controller to keep the ETM trace unit powered up.

Bit field descriptions

The TRCPDCR is a 32-bit register.

Figure 5-88: TRCPDCR bit assignments



RESO, [31:4]

RESO Reserved.

PU, [3]

Powerup request, to request that power to the ETM trace unit and access to the trace registers is maintained:

- o Power not requested.
- 1 Power requested.

This bit is reset to 0 on a trace unit reset.

RESO, [2:0]

RESO Reserved.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCPDCR can be accessed through the external debug interface, offset 0x310.


5.10.52 TRCPDSR, Power Down Status Register

The TRCPDSR indicates the power down status of the ETM trace unit.

Bit field descriptions

The TRCPDSR is a 32-bit register.

Figure 5-89: TRCPDSR bit assignments



RESO, [31:6]

RESO Reserved.

OSLK, [5]

OS lock status.

- o The OS Lock is unlocked.
- The OS Lock is locked.

RESO, [4:2]

RESO Reserved.

STICKYPD, [1]

Sticky power down state.

- Trace register power has not been removed since the TRCPDSR was last read.
- Trace register power has been removed since the TRCPDSR was last read.

This bit is set to 1 when power to the ETM trace unit registers is removed, to indicate that programming state has been lost. It is cleared after a read of the TRCPDSR.

POWER, [0]

Indicates the ETM trace unit is powered:

- o ETM trace unit is not powered. The trace registers are not accessible and they all return an error response.
- ETM trace unit is powered. All registers are accessible.

If a system implementation allows the ETM trace unit to be powered off independently of the Debug power domain, the system must handle accesses to the ETM trace unit appropriately.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCPDSR can be accessed through the external debug interface, offset 0x314.


5.10.53 TRCPIDRO, ETM Peripheral Identification Register 0

The TRCPIDRO provides information to identify a trace component.

Bit field descriptions

The TRCPIDRO is a 32-bit register.

Figure 5-90: TRCPIDRO bit assignments



RESO, [31:8]

RESO Reserved.

Part_0, [7:0]

0x0E Least significant byte of the ETM trace unit part number.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCPIDRO can be accessed through the external debug interface, offset 0xFE0.


5.10.54 TRCPIDR1, ETM Peripheral Identification Register 1

The TRCPIDR1 provides information to identify a trace component.

Bit field descriptions

The TRCPIDR1 is a 32-bit register.

Figure 5-91: TRCPIDR1 bit assignments



RESO, [31:8]

RESO Reserved.

DES_0, [7:4]

0xB Arm Limited. This is bits[3:0] of JEP106 ID code.

Part_1, [3:0]

0xD Most significant four bits of the ETM trace unit part number.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCPIDR1 can be accessed through the external debug interface, offset 0xFE4.


5.10.55 TRCPIDR2, ETM Peripheral Identification Register 2

The TRCPIDR2 provides information to identify a trace component.

Bit field descriptions

The TRCPIDR2 is a 32-bit register.

Figure 5-92: TRCPIDR2 bit assignments



RESO, [31:8]

RESO Reserved.

Revision, [7:4]

0x2 r1p1.

JEDEC, [3]

RES1. Indicates a JEP106 identity code is used.

DES_1, [2:0]

оъо11 Arm Limited. This is bits[6:4] of JEP106 ID code.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCPIDR2 can be accessed through the external debug interface, offset 0xFE8.


5.10.56 TRCPIDR3, ETM Peripheral Identification Register 3

The TRCPIDR3 provides information to identify a trace component.

Bit field descriptions

The TRCPIDR3 is a 32-bit register.

Figure 5-93: TRCPIDR3 bit assignments



RESO, [31:8]

RESO Reserved.

REVAND, [7:4]

 0×0 Part minor revision.

CMOD, [3:0]

0x0 Not customer modified.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCPIDR3 can be accessed through the external debug interface, offset 0xFEC.

5.10.57 TRCPIDR4, ETM Peripheral Identification Register 4

The TRCPIDR4 provides information to identify a trace component.

Bit field descriptions

The TRCPIDR4 is a 32-bit register.

Figure 5-94: TRCPIDR4 bit assignments



RESO, [31:8]

RESO Reserved.

Size, [7:4]

0x0 Size of the component. Log2 the number of 4KB pages from the start of the component to the end of the component ID registers.

DES_2, [3:0]

0x4 Arm Limited. This is bits[3:0] of the JEP106 continuation code.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCPIDR4 can be accessed through the external debug interface, offset 0xFD0.

5.10.58 TRCPIDRn, ETM Peripheral Identification Registers 5-7

No information is held in the Peripheral ID5, Peripheral ID6, and Peripheral ID7 Registers.

They are reserved for future use and are **RESO**.


5.10.59 TRCPRGCTLR, Programming Control Register

The TRCPRGCTLR enables the ETM trace unit.

Bit field descriptions

The TRCPRGCTLR is a 32-bit register.

Figure 5-95: TRCPRGCTLR bit assignments



RESO, [31:1]

RESO Reserved.

EN, [0]

Trace program enable:

- The ETM trace unit interface in the core is disabled, and clocks are enabled only when necessary to process APB accesses, or drain any already generated trace. This is the reset value.
- The ETM trace unit interface in the core is enabled, and clocks are enabled. Writes to most trace registers are **IGNORED**.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCPRGCTLR can be accessed through the external debug interface, offset 0x004.


5.10.60 TRCRSCTLRn, Resource Selection Control Registers 2-15

The TRCRSCTLRn registers control the trace resources. There are eight resource pairs, the first pair is predefined as {0,1,pair=0} and having reserved select registers. This leaves seven pairs to be implemented as programmable selectors.

Bit field descriptions

The TRCRSCTLRn registers are 32-bit registers.

Figure 5-96: TRCRSCTLRn bit assignments



RESO, [31:22]

RESO Reserved

PAIRINV, [21]

Inverts the result of a combined pair of resources.

This bit is implemented only on the lower register for a pair of resource selectors.

INV, [20]

Inverts the selected resources:

o Resource is not inverted.

1 Resource is inverted.

RES0, [19]

RESO Reserved

GROUP, [18:16]

Selects a group of resources. See the Arm® ETM Architecture Specification, ETMv4 for more information.

RESO, [15:8]

RESO Reserved

SELECT, [7:0]

Selects one or more resources from the required group. One bit is provided for each resource from the group.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCRSCTLRn registers can be accessed through the external debug interface, offset 0x208-0x023C.


5.10.61 TRCSEQEVRn, Sequencer State Transition Control Registers 0-2

The TRCSEQEVRn registers define the sequencer transitions that progress to the next state or backwards to the previous state. The ETM trace unit implements a sequencer state machine with up to four states.

Bit field descriptions

The TRCSEQEVRn registers are 32-bit registers.

Figure 5-97: TRCSEQEVRn bit assignments

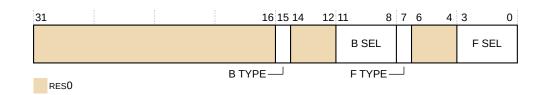

RESO, [31:16]

RESO Reserved

B TYPE, [15]

Selects the resource type to move backwards to this state from the next state:

- o Single selected resource
- 1 Boolean combined resource pair

RESO, [14:12]

RESO Reserved

B SEL, [11:8]

Selects the resource number, based on the value of B TYPE:

When B TYPE is 0, selects a single selected resource from 0-15 defined by bits[3:0].

When B TYPE is 1, selects a Boolean combined resource pair from 0-7 defined by bits[2:0].

F TYPE, [7]

Selects the resource type to move forwards from this state to the next state:

- o Single selected resource
- Boolean combined resource pair

RESO, [6:4]

RESO Reserved

F SEL, [3:0]

Selects the resource number, based on the value of F TYPE:

When F TYPE is 0, selects a single selected resource from 0-15 defined by bits[3:0].

When F TYPE is 1, selects a Boolean combined resource pair from 0-7 defined by bits[2:0].

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCSEQEVRn registers can be accessed through the external debug interface, offsets:

TRCSEQEVRO

0x100

TRCSEQEVR1

0x104

TRCSEQEVR2

0x108


5.10.62 TRCSEQRSTEVR, Sequencer Reset Control Register

The TRCSEQRSTEVR resets the sequencer to state 0.

Bit field descriptions

The TRCSEQRSTEVR is a 32-bit register.

Figure 5-98: TRCSEQRSTEVR bit assignments



RESO, [31:8]

RESO Reserved.

RESETTYPE, [7]

Selects the resource type to move back to state 0:

- o Single selected resource.
- 1 Boolean combined resource pair.

RESO, [6:4]

RESO Reserved.

RESETSEL, [3:0]

Selects the resource number, based on the value of RESETTYPE:

When RESETTYPE is 0, selects a single selected resource from 0-15 defined by bits[3:0].

When RESETTYPE is 1, selects a Boolean combined resource pair from 0-7 defined by bits[2:0].

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCSEQRSTEVR can be accessed through the external debug interface, offset 0x118.


5.10.63 TRCSEQSTR, Sequencer State Register

The TRCSEQSTR holds the value of the current state of the sequencer.

Bit field descriptions

The TRCSEQSTR is a 32-bit register.

Figure 5-99: TRCSEQSTR bit assignments



RESO, [31:2]

RESO Reserved.

STATE, [1:0]

Current sequencer state:

| 0b00 | State 0. |
|------|----------|
| 0b01 | State 1. |
| 0b10 | State 2. |
| 0b11 | State 3. |

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCSEQSTR can be accessed through the external debug interface, offset 0x11c.


5.10.64 TRCSSCCR0, Single-Shot Comparator Control Register 0

The TRCSSCCRO controls the single-shot comparator.

Bit field descriptions

The TRCSSCCRO is a 32-bit register.

Figure 5-100: TRCSSCCR0 bit assignments



RESO, [31:25]

RESO Reserved.

RST, [24]

Enables the single-shot comparator resource to be reset when it occurs, to enable another comparator match to be detected:

1 Reset enabled. Multiple matches can occur.

RESO, [23:20]

RESO Reserved.

ARC, [19:16]

Selects one or more address range comparators for single-shot control.

One bit is provided for each implemented address range comparator.

RESO, [15:8]

RESO Reserved.

SAC, [7:0]

Selects one or more single address comparators for single-shot control.

One bit is provided for each implemented single address comparator.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCSSCCRO can be accessed through the external debug interface, offset 0x280.


5.10.65 TRCSSCSR0, Single-Shot Comparator Status Register 0

The TRCSSCSRO indicates the status of the single-shot comparator. TRCSSCSRO is sensitive to instruction addresses.

Bit field descriptions

The TRCSSCSRO is a 32-bit register.

Figure 5-101: TRCSSCSR0 bit assignments



STATUS, [31]

Single-shot status. This indicates whether any of the selected comparators have matched:

- o Match has not occurred.
- 1 Match has occurred at least once.

When programming the ETM trace unit, if TRCSSCCRn.RST is b0, the STATUS bit must be explicitly written to 0 to enable this single-shot comparator control.

RESO, [30:3]

RESO Reserved.

DV, [2]

Data value comparator support:

o Single-shot data value comparisons not supported.

DA, [1]

Data address comparator support:

o Single-shot data address comparisons not supported.

INST, [0]

Instruction address comparator support:

Single-shot instruction address comparisons supported.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCSSCSRO can be accessed through the external debug interface, offset 0x2A0.


5.10.66 TRCSTATR, Status Register

The TRCSTATR indicates the ETM trace unit status.

Bit field descriptions

The TRCSTATR is a 32-bit register.

Figure 5-102: TRCSTATR bit assignments

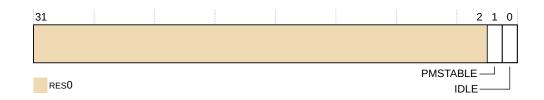

RESO, [31:2]

RESO Reserved.

PMSTABLE, [1]

Indicates whether the ETM trace unit registers are stable and can be read:

- o The programmers model is not stable.
- 1 The programmers model is stable.

IDLE, [0]

Idle status:

- o The FTM trace unit is not idle.
- 1 The ETM trace unit is idle.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCSTATR can be accessed through the external debug interface, offset 0x00C.


5.10.67 TRCSYNCPR, Synchronization Period Register

The TRCSYNCPR controls how often periodic trace synchronization requests occur.

Bit field descriptions

The TRCSYNCPR is a 32-bit register.

Figure 5-103: TRCSYNCPR bit assignments



RESO, [31:5]

RESO Reserved.

PERIOD, [4:0]

Defines the number of bytes of trace between synchronization requests as a total of the number of bytes generated by both the instruction and data streams. The number of bytes is 2^N where N is the value of this field:

- A value of zero disables these periodic synchronization requests, but does not disable other synchronization requests.
- The minimum value that can be programmed, other than zero, is 8, providing a minimum synchronization period of 256 bytes.
- The maximum value is 20, providing a maximum synchronization period of 2^{20} bytes.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCSYNCPR can be accessed through the external debug interface, offset 0x034.


5.10.68 TRCTRACEIDR, Trace ID Register

The TRCTRACEIDR sets the trace ID for instruction trace.

Bit field descriptions

The TRCTRACEIDR is a 32-bit register.

Figure 5-104: TRCTRACEIDR bit Assignments

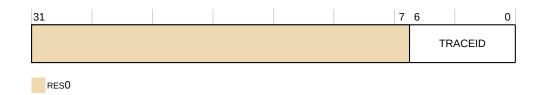

RESO, [31:7]

RESO Reserved.

TRACEID, [6:0]

Trace ID value. When only instruction tracing is enabled, this provides the trace ID.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCTRACEIDR can be accessed through the external debug interface, offset 0x040.


5.10.69 TRCTSCTLR, Global Timestamp Control Register

The TRCTSCTLR controls the insertion of global timestamps in the trace streams. When the selected event is triggered, the trace unit inserts a global timestamp into the trace streams. The event is selected from one of the Resource Selectors.

Bit field descriptions

The TRCTSCTLR is a 32-bit register.

Figure 5-105: TRCTSCTLR bit assignments

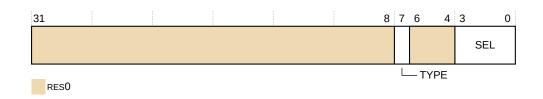

RESO, [31:8]

RESO Reserved

TYPE, [7]

Single or combined resource selector.

RESO, [6:4]

RESO Reserved

SEL, [3:0]

Identifies the resource selector to use.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCTSCTLR can be accessed through the external debug interface, offset 0x030.


5.10.70 TRCVICTLR, ViewInst Main Control Register

The TRCVICTLR controls instruction trace filtering.

Bit field descriptions

The TRCVICTLR is a 32-bit register.

Figure 5-106: TRCVICTLR bit assignments

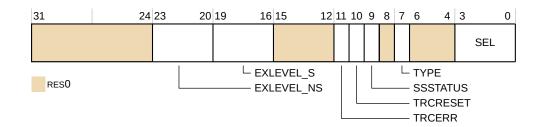

RESO, [31:24]

RESO Reserved.

EXLEVEL_NS, [23:20]

In Non-secure state, each bit controls whether instruction tracing is enabled for the corresponding Exception level:

- Trace unit generates instruction trace, in Non-secure state, for Exception level n.
- Trace unit does not generate instruction trace, in Non-secure state, for Exception level *n*.

The Exception levels are:

Bit[20] Exception level 0. Bit[21] Exception level 1.

| Bit[22] | Excenti | ion level 2. |
|---------|---------|---------------|
| DILIZZI | LYCCHI | IUII IEVEI Z. |

Bit[23] RAZ/WI. Instruction tracing is not implemented for Exception level 3.

EXLEVEL_S, [19:16]

In Secure state, each bit controls whether instruction tracing is enabled for the corresponding Exception level:

- Trace unit generates instruction trace, in Secure state, for Exception
 - level n.
- Trace unit does not generate instruction trace, in Secure state, for Exception level *n*.

The Exception levels are:

| Bit[16] | Exception level 0. |
|---------|-----------------------------------------------------------------------|
| Bit[17] | Exception level 1. |
| Bit[18] | RAZ/WI. Instruction tracing is not implemented for Exception level 2. |
| Bit[19] | Exception level 3. |

RESO, [15:12]

RESO Reserved.

TRCERR, [11]

Selects whether a system error exception must always be traced:

- System error exception is traced only if the instruction or exception immediately before the system error exception is traced.
- System error exception is always traced regardless of the value of ViewInst.

TRCRESET, [10]

Selects whether a reset exception must always be traced:

- Reset exception is traced only if the instruction or exception immediately before the reset exception is traced.
- 1 Reset exception is always traced regardless of the value of ViewInst.

SSSTATUS, [9]

Indicates the current status of the start/stop logic:

- o Start/stop logic is in the stopped state.
- Start/stop logic is in the started state.

RES0, [8]

RESO Reserved.

TYPE, [7]

Selects the resource type for the viewinst event:

- o Single selected resource.
- Boolean combined resource pair.

RESO, [6:4]

RESO Reserved.

SEL, [3:0]

Selects the resource number to use for the viewinst event, based on the value of TYPE:

When TYPE is 0, selects a single selected resource from 0-15 defined by bits[3:0].

When TYPE is 1, selects a Boolean combined resource pair from 0-7 defined by bits[2:0].

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCVICTLR can be accessed through the external debug interface, offset 0x080.


5.10.71 TRCVIIECTLR, ViewInst Include-Exclude Control Register

The TRCVIIECTLR defines the address range comparators that control the ViewInst include/exclude control.

Bit field descriptions

The TRCVIIECTLR is a 32-bit register.

Figure 5-107: TRCVIIECTLR bit assignments



RESO, [31:20]

RESO Reserved.

EXCLUDE, [19:16]

Defines the address range comparators for ViewInst exclude control. One bit is provided for each implemented Address Range Comparator.

RESO, [15:4]

RESO Reserved.

INCLUDE, [3:0]

Defines the address range comparators for ViewInst include control.

Selecting no include comparators indicates that all instructions must be included. The exclude control indicates which ranges must be excluded.

One bit is provided for each implemented Address Range Comparator.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCVIIECTLR can be accessed through the external debug interface, offset 0x084.


5.10.72 TRCVISSCTLR, ViewInst Start-Stop Control Register

The TRCVISSCTLR defines the single address comparators that control the ViewInst Start/Stop logic.

Bit field descriptions

The TRCVISSCTLR is a 32-bit register.

Figure 5-108: TRCVISSCTLR bit assignments

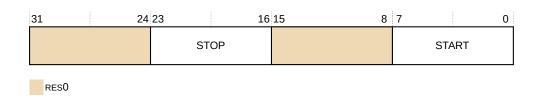

RESO, [31:24]

RESO Reserved.

STOP, [23:16]

Defines the single address comparators to stop trace with the ViewInst Start/Stop control.

One bit is provided for each implemented single address comparator.

RESO, [15:8]

RESO Reserved.

START, [7:0]

Defines the single address comparators to start trace with the ViewInst Start/Stop control.

One bit is provided for each implemented single address comparator.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.


The TRCVISSCTLR can be accessed through the external debug interface, offset 0x088.

5.10.73 TRCVMIDCVR0, VMID Comparator Value Register 0

The TRCVMIDCVR0 contains a VMID value.

Bit field descriptions

Figure 5-109: TRCVMIDCVR0 bit assignments



RES0, [63:32]

RESO Reserved.

VALUE, [31:0]

The VMID value.

The TRCVMIDCVRO can be accessed through the internal memory-mapped interface and the external debug interface, offset 0x640.

Usage constraints

Accepts writes only when the trace unit is disabled.

Configurations

Available in all configurations.


5.10.74 TRCVMIDCCTLR0, Virtual context identifier Comparator Control Register 0

The TRCVMIDCCTLRO contains the Virtual Machine Identifier mask value for the TRCVMIDCVRO register.

Bit field descriptions

The TRCVMIDCCTLRO is a 32-bit register.

Figure 5-110: TRCVMIDCCTLR0 bit assignments



RESO, [31:4]

RESO Reserved.

COMP0, [3:0]

Controls the mask value that the trace unit applies to TRCVMIDCVRO. Each bit in this field corresponds to a byte in TRCVMIDCVRO. When a bit is:

- The trace unit includes the relevant byte in TRCVMIDCVRO when it performs the Virtual context ID comparison.
- The trace unit ignores the relevant byte in TRCVMIDCVRO when it performs the Virtual context ID comparison.

Bit fields and details that are not provided in this description are architecturally defined. See the Arm® Embedded Trace Macrocell Architecture Specification ETMv4.

The TRCVMIDCCTLR0 can be accessed through the external debug interface, offset 0x688.

Appendix A Core AArch32 UNPREDICTABLE behaviors

This appendix describes the cases in which the Cortex®-A76AE core implementation diverges from the preferred behavior that is described in Armv8 AArch32 **UNPREDICTABLE** behaviors.

A.1 Use of R15 by Instruction

If the use of R15 as a base register for a load or store is **UNPREDICTABLE**, the value that is used by the load or store using R15 as a base register is the *Program Counter* (PC) with its usual offset and, in the case of T32 instructions, with the forced word alignment. In this case, if the instruction specifies write-back, then the load or store is performed without write-back.

The Cortex®-A76AE core does not implement a *Read 0* or *Ignore Write* policy on **UNPREDICTABLE** use of R15 by instruction. Instead, the Cortex®-A76AE core takes an **UNDEFINED** exception trap.

A.2 Load/Store accesses crossing page boundaries

The Cortex®-A76AE core implements a set of behaviors for load or store accesses that cross page boundaries.

Crossing a page boundary with different memory types or Shareability attributes

The Arm® Architecture Reference Manual Armv8, for A-profile architecture, states that a memory access from a load or store instruction that crosses a page boundary to a memory location that has a different memory type or Shareability attribute results in **CONSTRAINED UNPREDICTABLE** behavior.

Crossing a 4KB boundary with a Device access

The Arm® Architecture Reference Manual Armv8, for A-profile architecture, states that a memory access from a load or store instruction to Device memory that crosses a 4KB boundary results in **CONSTRAINED UNPREDICTABLE** behavior.

Implementation (for both page boundary specifications)

For an access that crosses a page boundary, the Cortex®-A76AE core implements the following behaviors:

- Store crossing a page boundary:
 - No alignment fault.
 - The access is split into two stores.
 - Each store uses the memory type and Shareability attributes that are associated with its own address.

- Issue: 00 Cortex®-A76AE Core AArch32 UNPREDICTABLE behaviors
- Load crossing a page boundary (Device to Device and Normal to Normal):
 - No alignment fault.
 - The access is split into two loads.
 - Each load uses the memory type and Shareability attributes that are associated with its own address.
- Load crossing a page boundary (Device to Normal and Normal to Device):
 - The instruction will generate an alignment fault.

A.3 Armv8 Debug UNPREDICTABLE behaviors

This section describes the behavior that the Cortex®-A76AE core implements when:

- A topic has multiple options.
- The behavior differs from either or both of the Options and Preferences behaviors.



This section does not describe the behavior when a topic only has a single option and the core implements the preferred behavior.

Table A-1: Armv8 Debug UNPREDICTABLE behaviors

| Scenario | Behavior |
|--------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| A32 BKPT instruction with condition code not AL | The core implements the following preferred option: |
| | Executed unconditionally. |
| Address match breakpoint match only on second halfword of an instruction | The core generates a breakpoint on the instruction if CPSR.IL=0. In the case of CPSR.IL=1, the core does not generate a breakpoint exception. |
| Address matching breakpoint on A32 instruction with | The core implements the following option: |
| DBGBCRn.BAS=1100 | Does match if CPSR.IL=0. |
| Address match breakpoint match on T32 instruction at | The core implements the following option: |
| DBGBCRn+2 with DBGBCRn.BAS=1111 | Does match. |
| Link to non-existent breakpoint or breakpoint that is not | The core implements the following option: |
| context-aware | No Breakpoint or Watchpoint debug event is generated, and the LBN field of the <i>linker</i> reads <i>unknown</i> . |
| DBGWCRn_EL1.MASK!=00000 and | The core behaves as indicated in the sole Preference: |
| DBGWCRn_EL1.BAS!=11111111 | DBGWCRn_EL1.BAS is ignored and treated as if 0x111111111. |
| Address match breakpoint with | The core implements the following option: |
| DBGBCRn_EL1.BAS=0000 | As if disabled. |
| DBGWCRn_EL1.BAS specifies a non-contiguous set of | The core implements the following option: |
| bytes within a double-word | A Watchpoint debug event is generated for each byte. |
| A32 HLT instruction with condition code not AL | The core implements the following option: |
| | Executed unconditionally. |

| Scenario | Behavior |
|----------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Execute instruction at a given EL when the corresponding | The core behaves as follows: |
| EDECCR bit is 1 and Halting is allowed | Generates debug event and Halt no later than the instruction following the next Context Synchronization operation (CSO) excluding ISB instruction. |
| H > N or H = 0 at Non-secure EL1 and EL0, including | The core implements: |
| value read from PMCR_ELO.N | A simple implementation where all of HPMN[4:0] are implemented, and In Non-secure EL1 and EL0: |
| | ∘ If H > N then M = N. |
| | ∘ If H = 0 then M = 0. |
| H > N or H = 0: value read back in MDCR_EL2.HPMN | The core implements: |
| | A simple implementation where all of HPMN[4:0] are implemented and for reads of MDCR_EL2.HPMN, return H. |
| P ≥ M and P ≠ 31: reads and writes of PM | The core implements: |
| XEVTYPER_ELO and PMXEVCNTR_ELO | A simple implementation where all of SEL[4:0] are implemented, and if P ≥ M and P ≠ 31 then the register is res0. |
| P ≥ M and P ≠ 31: value read in PMSELR_EL0.SEL | The core implements: |
| | A simple implementation where all of SEL[4:0] are implemented, and if P ≥ M and P ≠ 31 then the register is res0. |
| P = 31: reads and writes of PMXEVCNTR_EL0 | The core implements: |
| | • res0. |
| n ≥ M: Direct access to PMEVCNTRn_ELO and | The core implements: |
| PMEVTYPERn_ELO | • If $n \ge N$, then the instruction is <i>unallocated</i> . |
| | Otherwise if n ≥ M, then the register is res0. |
| Exiting Debug state while instruction issued through | The core implements the following option: |
| EDITR is in flight | The instruction completes in Debug state before executing the restart. |
| Using memory-access mode with a non-word-aligned | The core behaves as indicated in the sole Preference: |
| address | Does unaligned accesses, faulting if these are not permitted for the memory type. |
| Access to memory-mapped registers mapped to Normal | The core behaves as indicated in the sole Preference: |
| memory | The access is generated, and accesses might be repeated, gathered, split or resized, in accordance with the rules for Normal memory, meaning the effect is <i>unpredictable</i> . |
| Not word-sized accesses or (AArch64 only) doubleword- | The core behaves as indicated in the sole Preference: |
| sized accesses | Reads occur and return unknown data. |
| | Writes set the accessed register(s) to unknown. |
| External debug write to register that is being reset | The core behaves as indicated in the sole Preference: |
| | Takes reset value. |

| Scenario | Bel | havior |
|------------------------------------------------------------|-----|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Accessing reserved Debug registers | | e core deviates from preferred behavior because the hardware cost to code some of these addresses in Debug power domain is significantly high. |
| | The | e actual behavior is: |
| | 1. | For reserved Debug registers in the address range 0x000-0xCFC and Performance Monitors registers in the address range 0x000, the response is either <i>constrained unpredictable</i> Error or <i>res</i> 0 when any of the following errors occurs: |
| | | Off |
| | | The Core power domain is either completely off or in a low-power state where the Core power domain registers cannot be accessed. |
| | | DLK |
| | | DoubleLockStatus () is TRUE and OS double-lock is locked (EDPRSR.DLK is 1). |
| | | OSLK |
| | | OS lock is locked (OSLSR_EL1.OSLK is 1). |
| | 2. | For reserved Debug registers in the address ranges 0x400-0x4FC and 0x800-0x8FC, the response is <i>constrained unpredictable</i> Error or <i>res0</i> when the conditions in 1 on page 457 do not apply and the following error occurs: |
| | | EDAD |
| | | AllowExternalDebugAccess() is FALSE. External debug access is disabled. |
| | 3. | For reserved Performance Monitor registers in the address ranges 0x000-0x0FC and 0x400-0x47C, the response is either <i>constrained</i> unpredictable Error, or res0 when the conditions in 1 on page 457 and 2 on page 457 do not apply, and the following error occurs: |
| | | EPMAD |
| | | AllowExternalPMUAccess() is FALSE. External Performance Monitors access is disabled. |
| Clearing the <i>clear-after-read</i> EDPRSR bits when Core | The | e core behaves as indicated in the sole Preference: |
| power domain is on, and DoubleLockStatus() is TRUE | • | Bits are not cleared to zero. |

A.4 Other UNPREDICTABLE behaviors

This section describes other unpredictable behaviors.

Table A-2: Other unpredictable behaviors

| Scenario | Description | |
|---------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| CSSELR indicates a cache that is not implemented. | If CSSELR indicates a cache that is not implemented, then on a read of the CCSIDR the behavior is constrained unpredictable, and can be one of the following: | |
| | The CCSIDR read is treated as NOP. | |
| | The CCSIDR read is undefined. | |
| | The CCSIDR read returns an <i>unknown</i> value (preferred). | |

| Scenario | Description |
|----------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| HDCR.HPMN is set to 0, or to a value larger than PMCR.N. | If HDCR.HPMN is set to 0, or to a value larger than PMCR.N, then the behavior in Non-secure ELO and EL1 is constrained unpredictable, and one of the following must happen: |
| | • The number of counters accessible is an <i>unknown</i> nonzero value less than PMCR.N. |
| | There is no access to any counters. |
| | For reads of HDCR.HPMN by EL2 or higher, if this field is set to 0 or to a value larger than PMCR.N, the core must return a <i>constrained unpredictable</i> value that is one of: |
| | PMCR.N. |
| | The value that was written to HDCR.HPMN. |
| | • (The value that was written to HDCR.HPMN) modulo 2h, where h is the smallest number of bits required for a value in the range 0 to PMCR.N. |
| CRC32 or CRC32C instruction with size==64. | On read of the instruction, the behavior is <i>constrained unpredictable</i> , and the instruction executes with the additional decode: size==32. |
| CRC32 or CRC32C instruction with | The core implements the following option: |
| cond!=1110 in the A1 encoding. | Executed unconditionally. |

Appendix B Revisions

This appendix describes the technical changes between released issues of this book.

B.1 Revisions

This appendix describes the technical changes between released issues of this book.

Table B-1: Issue 0000-01

| Change | Location |
|------------------------------------------|----------|
| First Non-Confidential release for r0p0. | - |

Table B-2: Differences between Issue 0000-01 and Issue 0100-00

| Change | Location |
|----------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| First Confidential release for r1p0. | - |
| Updated Features list. | 2.1.2 Features on page 22 |
| Added information for Hybrid-mode. | 2.1.3 Split-Lock on page 23 |
| Provided additional information for voltage domains. | 2.4.2 Voltage domains on page 33 |
| Updated information related to debug recory mode. | 2.4.6.5 Debug recovery mode on page 41 |
| Added support for Page-based hardware attributes. | 2.5.7 Page-based hardware attributes on page 52 |
| Updated the Note on cache behavior. | 2.6.2 Cache behavior on page 53 |
| Provided additional information for data cache operations. | 2.6.2.4 Data cache maintenance considerations on page 55 |
| Updated Bit field column in L1 instruction TLB cache format table with additional information. | 2.6.6.1 Encoding for L1 instruction cache tag, L1 instruction cache data, L1 BTB, L1 GHB, L1 TLB instruction, and BPIQ on page 61 |
| Updated Instruction Register O, Physical Address row in L1 instruction TLB cache format table with additional information. | 2.6.6.1 Encoding for L1 instruction cache tag, L1 instruction cache data, L1 BTB, L1 GHB, L1 TLB instruction, and BPIQ on page 61 |
| Updated Bit field column in the L1 data TLB cache format table with additional information. | 2.6.6.2 Encoding for L1 data cache tag, L1 data cache data, and L1 TLB data on page 65 |
| Updated Bit field column in the L2 tag format with a 128KB L2 cache size table with additional information. | 2.6.6.3 Encoding for the L2 unified cache on page 69 |

| Change | Location |
|------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Updated Bit field column in the L2 TLB encoding table with additional information. | 2.6.6.4 Encoding for the L2 TLB on page 71 |
| Updated the Note on L2 cache. | 2.7.2 About the L2 cache on page 74 |
| Provided additional information for error injection. | 2.8.7 Error injection on page 80 |
| Corrected MIDR_EL1 reset value. | 3.2.4 AArch64 registers by functional group on page 99 |
| Corrected ACTLR_EL2 bit fields descriptions. | 3.2.6 ACTLR_EL2, Auxiliary Control Register, EL2 on page 106 |
| Corrected ACTLR_EL3 bit field descriptions. | 3.2.7 ACTLR_EL3, Auxiliary Control Register, EL3 on page 109 |
| Added Auxiliary Translation Control registers. | 3.2.18 ATCR_EL1, Auxiliary Translation Control Register, EL1 on page 118 3.2.19 ATCR_EL2, Auxiliary Translation Control Register, EL2 on page 121 3.2.20 ATCR_EL12, Alias to Auxiliary Translation Control Register EL1 on page 123 3.2.21 ATCR_EL3, Auxiliary Translation Control Register, EL3 on page 124 3.2.22 AVTCR_EL2, Auxiliary Virtualized Translation Control Register, EL2 on page 125 |
| Corrected CCSIDR encodings. | 3.2.23 CCSIDR_EL1, Cache Size ID Register, EL1 on page 127 |
| Corrected CPUACTLR_EL1 instruction encodings. | 3.2.28 CPUACTLR_EL1, CPU Auxiliary Control Register, EL1 on page 133 |
| Corrected CPUACTLR2_EL1 instruction encodings. | 3.2.29 CPUACTLR2_EL1, CPU Auxiliary Control Register 2, EL1 on page 135 |
| Corrected CPUACTLR3_EL1 instruction encodings. | 3.2.30 CPUACTLR3_EL1, CPU Auxiliary Control Register 3, EL1 on page 136 |
| Updated ID_AA64MMFR2_EL1 bit field descriptions. | 3.2.66 ID_AA64MMFR2_EL1, AArch64 Memory Model Feature Register 2, EL1 on page 183 |
| Added ID_DFRO_EL1 Bit field descriptions figure. | 3.2.70 ID_DFR0_EL1, AArch32 Debug Feature Register 0, EL1 on page 188 |
| Added ID_ISAR5_EL1 Bit field descriptions figure. | 3.2.76 ID_ISAR5_EL1, AArch32 Instruction Set Attribute Register 5, EL1 on page 199 |
| Added ID_ISAR6_EL1 Bit field descriptions figure. | 3.2.77 ID_ISAR6_EL1, AArch32 Instruction Set Attribute Register 6, EL1 on page 201 |
| Corrected LORID_EL1 register descriptions. | 3.2.87 LORID_EL1, LORegion ID Register, EL1 on page 216 |
| Corrected MDCR_EL3 register descriptions. | 3.2.89 MDCR_EL3, Monitor Debug Configuration Register, EL3 on page 217 |
| Updated TCR_EL2 register. | 3.2.100 TCR_EL2, Translation Control Register, EL2 on page 231 |
| Added Bit field descriptions figure for TCR_EL3 register. | 3.2.101 TCR_EL3, Translation Control Register, EL3 on page 232 |
| Updated EDPIDR0 register. | 5.3.8 EDPIDRO, External Debug Peripheral Identification Register 0 on page 332 |
| Updated PMCEID1 PMU common events table. | 5.4.3 PMCEID1, Performance Monitors Common Event Identification Register 1 on page 342 |
| Updated PMCR register. | 5.4.4 PMCR, Performance Monitors Control Register on page 344 |
| Updated PMCEIDO_ELO and PMCEID1_ELO reset values. | 5.5.1 AArch64 PMU register summary on page 347 |
| Updated figure and the Bit field descriptions of the PMCEIDO_ELO register. | 5.5.2 PMCEIDO_ELO, Performance Monitors Common Event Identification Register O, ELO on page 349 |

| Change | Location |
|--------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|
| Updated the figure, the PMU common events table, and the Bit field descriptions of the PMCEID1_ELO register. | 5.5.3 PMCEID1_EL0, Performance Monitors Common Event Identification Register 1, EL0 on page 351 |
| Updated AMCNTENCLR_ELO register. | 5.8.2 AMCNTENCLR_ELO, Activity Monitors Count Enable Clear Register, ELO on page 373 |
| Updated AMCNTENSET_ELO register. | 5.8.3 AMCNTENSET_ELO, Activity Monitors Count Enable Set Register, ELO on page 374 |
| Added information for Memory-mapped AMU registers. | 5.9 Memory-mapped AMU registers on page 381 |
| Updated TRCIDR1, TRCIDR3, and TRCIDR5 reset values in ETM trace unit register summary. | 5.10.1 ETM register summary on page 382 |
| Removed TRCSTALLCTLR register. | 5.10.1 ETM register summary on page 382 |
| Updated TRCAUXCTLR register. | 5.10.5 TRCAUXCTLR, Auxiliary Control Register on page 388 |
| Updated TRCDEVAFF0 register. | 5.10.21 TRCDEVAFF0, Device Affinity Register 0 on page 405 |
| Updated TRCIDR3 register. | 5.10.32 TRCIDR3, ID Register 3 on page 416 |
| Updated TRCIDR5 register. | 5.10.34 TRCIDR5, ID Register 5 on page 419 |
| Updated TRCPIDRO register. | 5.10.53 TRCPIDRO, ETM Peripheral Identification Register 0 on page 434 |

Table B-3: Differences between Issue 0100-00 and Issue 0101-00

| Change | Location |
|-------------------------------------------------------------|----------------------------------------------------------------|
| First Non-Confidential release for r1p1. | - |
| Removed SDER32-EL3 register from Table 3-3 for r1p1. | 3.2.2 AArch64 architectural System register summary on page 92 |
| Updated TRCIDR1 register reset value. | 5.10.1 ETM register summary on page 382 |
| Updated TRCPIDR2 register reset value. | 5.10.1 ETM register summary on page 382 |
| Updated MIDR_EL1 register reset value. | 3.2.4 AArch64 registers by functional group on page 99 |
| Updated table 2-4. | 2.4.7 Encoding for power modes on page 42 |
| Updated PCMR-ELO register reset value in table 5-8. | 5.5.1 AArch64 PMU register summary on page 347 |
| Removed SDER32-EL3 and DACR32-EL2 registers from table 3-3. | 3.2.2 AArch64 architectural System register summary on page 92 |
| Removed IFSR32-EL2 register from table 3-3. | 3.2.2 AArch64 architectural System register summary on page 92 |
| Added note. | 2.4.7 Encoding for power modes on page 42 |
| Updated table 5-11. | 5.6.1 Memory-mapped PMU register summary on page 356 |
| Removed bullet point. | 5.10.32 TRCIDR3, ID Register 3 on page 416 |
| Updated bit assignment. | 5.10.30 TRCIDR1, ID Register 1 on page 414 |
| Updated bit assignment. | 3.2.96 SCTLR_EL1, System Control Register, EL1 on page 224 |
| Updated bit assignment. | 3.2.97 SCTLR_EL2, System Control Register, EL2 on page 226 |
| Updated bit assignment. | 3.2.98 SCTLR_EL3, System Control Register, EL3 on page 227 |
| Updated table 2-48. | 2.11.1.3 Core RAS reporting signals on page 87 |

| Change | Location |
|------------------------------------------------------|----------------------------------------------------------------------------------------|
| Updated table 2-28. | 2.6.6.2 Encoding for L1 data cache tag, L1 data cache data, and L1 TLB data on page 65 |
| Removed 0x6A and 0x72 and updated 0x40 in table 4-3. | 4.2.3 PMU events on page 303 |