## CSE 431 Computer Architecture Fall 2015

# **Chapter 5B: Exploiting the Memory Hierarchy: Caches**

Mary Jane Irwin ( www.cse.psu.edu/~mji )

[Adapted from Computer Organization and Design, 5<sup>th</sup> Edition, Patterson & Hennessy, © 2014, Morgan Kaufmann]

CSE431 Chapter 5B1 Irwin, PSU, 2015


## **Reminders**

- Today
  - Cache basics, improving cache performance P&H, 5.3, 5.7
- Next week
  - Virtual memory hardware support (TLBs) P&H 5.6-5.8
  - VLIW datapaths P&H 4.10
- Reminders
  - HW3 dropbox closes midnight Oct 1st
  - Quiz 3 dropbox closes midnight Oct 4<sup>th</sup>
  - · First evening midterm exam scheduled
    - Tuesday, October 6th, 20:15 to 22:15, Location 22 Deike
    - No conflict exam !!

CSE431 Chapter 5B2 Irwin, PSU, 2015

## **Review: A Typical Memory Hierarchy**

□ Take advantage of the principle of locality to present the user with as much memory as is available in the cheapest technology at the speed offered by the fastest technology

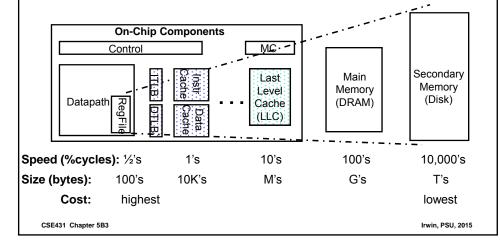

## **How is the Hierarchy Managed?**


- □ registers ↔ memory
  - by compiler (programmer?)
- □ cache ↔ main memory
  - by the cache controller hardware
- main memory ↔ disks
  - by the operating system (virtual memory)
  - virtual to physical address mapping assisted by the hardware (TLB)
  - by the programmer (files)


CSE431 Chapter 5B4 Irwin, PSU, 2015


## **Cache Basics**


- □ Two questions to answer (in hardware):
  - Q1: How do we know if a data item is in the cache?
  - Q2: If it is, how do we find it?
- Direct mapped
  - Each memory block is mapped to exactly one block in the cache
    - lots of memory blocks must share a block in the cache
  - Address mapping (to answer Q2):
     (block address) modulo (# of blocks in the cache)
  - Have a tag associated with each cache block that contains the address information (the upper portion of the address) required to identify the block (to answer Q1)


CSE431 Chapter 5B5 Irwin, PSU, 2015

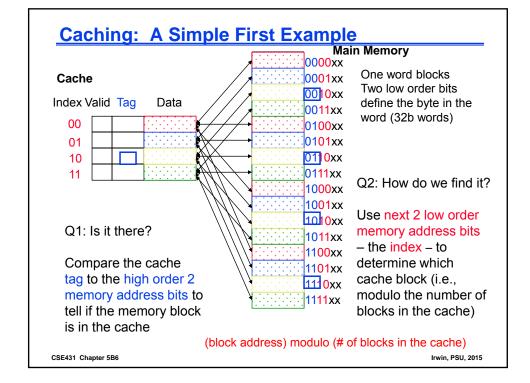

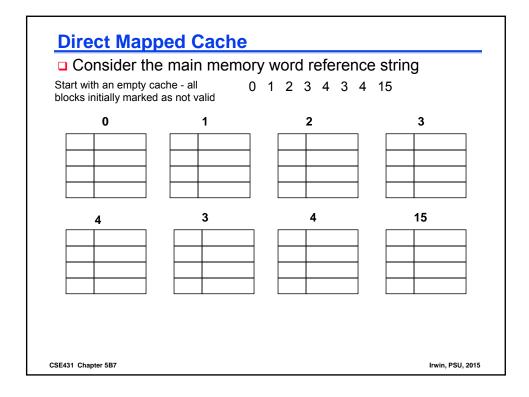

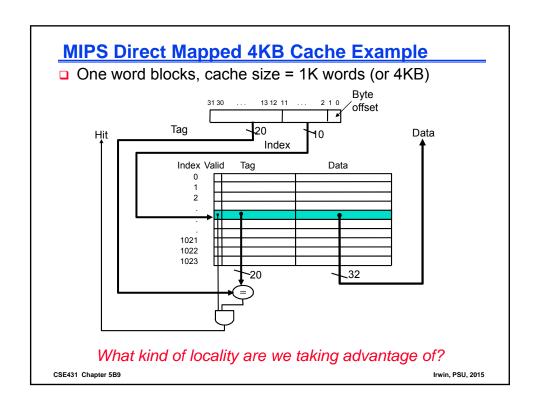

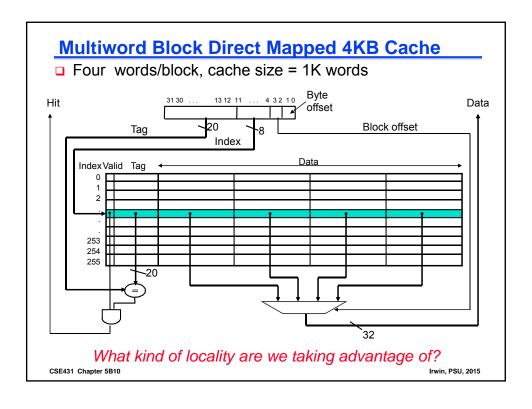

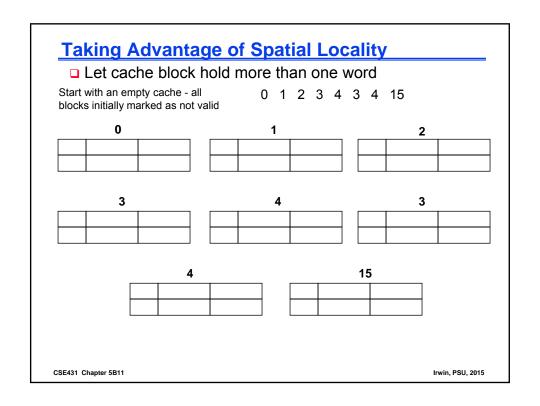


#### **Cache Field Sizes**

- □ The number of bits in a cache includes both the storage for data and for the tags
  - 32-bit byte address
  - For a direct mapped cache with 2<sup>n</sup> blocks, n bits are used for the index
  - For a block size of 2<sup>m</sup> words (2<sup>m+2</sup> bytes), m bits are used to address the word within the block and 2 bits are used to address the byte within the word
- □ What is the size of the tag field?
- ☐ The total number of bits in a direct-mapped cache is then
  2<sup>n</sup> x (block size + tag field size + valid field size)
- □ How many total bits are required for a direct mapped cache with 16KB of data and 4-word blocks assuming a 32-bit address?

CSE431 Chapter 5B13 Irwin, PSU, 2015

## Miss Rate vs Block Size vs Cache Size

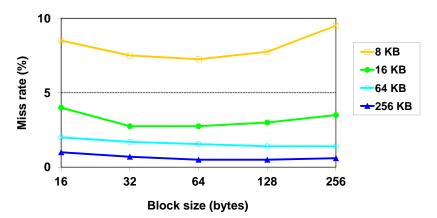

■ Miss rate goes up if the block size becomes a significant fraction of the cache size because the number of blocks that can be held in the same size cache is smaller (increasing capacity misses)

CSE431 Chapter 5B15 Irwin, PSU, 2015

#### **Handling Cache Hits**

- Read hits (I\$ and D\$)
  - this is what we want!
- Write hits (D\$ only)
  - If we require the cache and memory to be consistent
    - always write the data into both the cache block and the next level in the memory hierarchy (write-through)
    - writes run at the speed of the next level in the memory hierarchy so slow! – or can use a write buffer and stall only if the write buffer is full
  - If we allow cache and memory to be inconsistent
    - write the data only into the cache block (write-back the cache block to the next level in the memory hierarchy when that cache block is "evicted")
    - need a dirty bit for each data cache block to tell if it needs to be written back to memory when it is evicted – can use a write buffer to help "buffer" write-backs of dirty blocks

CSE431 Chapter 5B16 Irwin, PSU, 2015


#### **Sources of Cache Misses**

- Compulsory (cold start or process migration, first reference):
  - First access to a block, "cold" fact of life, not a whole lot you can do about it. If you are going to run "millions" of instruction, compulsory misses are insignificant
  - Solution: increase block size (increases miss penalty; very large blocks could increase miss rate)

#### □ Capacity:

- Cache cannot contain all blocks accessed by the program
- Solution: increase cache size (may increase access time)
- □ Conflict (collision):
  - Multiple memory locations mapped to the same cache location
  - Solution 1: increase cache size
  - Solution 2: increase associativity (stay tuned) (may increase access time)

CSE431 Chapter 5B17 Irwin, PSU, 2015

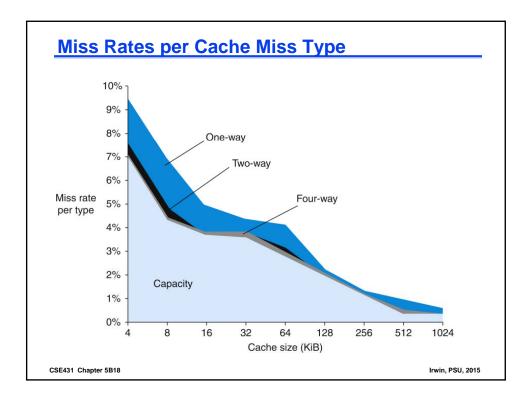

## **Handling Cache Misses (Single Word Blocks)**

- Read misses (I\$ and D\$)
  - stall the pipeline, fetch the block from the next level in the memory hierarchy, install it in the cache (which may involve having to evict a dirty block if using a write-back cache), and send the requested word to the core, then let the pipeline resume
- Write misses (D\$ only)
  - stall the pipeline, fetch the block from next level in the memory hierarchy, install it in the cache (which may involve having to evict a dirty block if using a write-back cache), write the word from the core to the cache, then let the pipeline resume
  - Write allocate just write the word (and its tag) into the cache (which may involve having to evict a dirty block if using a writeback cache), no need to check for cache hit, no need to stall
- 3. No-write allocate skip the cache write (but must invalidate that cache block since it will now hold stale data) and just write the word to the write buffer (and eventually to the next memory level), no need to stall if the write buffer isn't full
  Invin, PSU, 2015

#### **Multiword Block Considerations**

- □ Read misses (I\$ and D\$)
  - Processed the same as for single word blocks a miss returns the entire block from memory
  - Miss penalty grows as block size grows
    - Early restart core resumes execution as soon as the requested word of the block is returned
    - Requested word first requested word is transferred from the memory to the cache (and core) first
  - Nonblocking cache allows the core to continue to access the cache while the cache is handling an earlier miss
- Write misses (D\$ only)
  - If using write allocate must first fetch the block from memory and then write the word to the block (or could end up with a "garbled" block in the cache (e.g., for 4 word blocks, a new tag, one word of data from the new block, and three words of data from the old block)

CSE431 Chapter 5B20 Irwin, PSU, 2015

#### **Measuring Cache Performance**

 Assuming cache hit costs are included as part of the normal CPU execution cycle, then

```
CPU time = IC × CPI × CC
= IC × (CPI<sub>ideal</sub> + Memory-stall cycles) × CC

CPI<sub>stall</sub>
```

 Memory-stall cycles come from cache misses (a sum of read-stalls and write-stalls)

```
Read-stall cycles = reads/program × read miss rate
× read miss penalty

Write-stall cycles = (writes/program × write miss rate
× write miss penalty)
+ write buffer stalls
```

For write-through caches, we can simplify this to

Memory-stall cycles = accesses/program × miss rate × miss penalty

CSE431 Chapter 5B21 Irwin, PSU, 2015

## **Impacts of Cache Performance**

- □ Relative cache penalty increases as core performance improves (faster clock rate and/or lower CPI)
  - The memory speed is unlikely to improve as fast as core cycle time. When calculating CPI<sub>stall</sub>, the cache miss penalty is measured in *core* clock cycles needed to handle a miss
  - The lower the CPI<sub>ideal</sub>, the more pronounced the impact of stalls
- □ A core with a CPI<sub>ideal</sub> of 2, a 100 cycle miss penalty, 36% load/store instr's, and 2% I\$ and 4% D\$ miss rates

Memory-stall cycles = 
$$2\% \times 100 + 36\% \times 4\% \times 100 = 3.44$$
  
So  $CPI_{stalls} = 2 + 3.44 = 5.44$ 

more than twice the CPI<sub>ideal</sub>!

CSE431 Chapter 5B22 Irwin, PSU, 2015

## **Impacts of Cache Performance, Con't**

- Relative cache penalty increases as core performance improves (lower CPI)
- □ What if the CPI<sub>ideal</sub> is reduced to 1? 0.5? 0.25?
- □ What if the D\$ miss rate went up 1%? 2%?
- What if the core clock rate is doubled (doubling the miss penalty)?

CSE431 Chapter 5B23 Irwin, PSU, 2015

#### **Average Memory Access Time (AMAT)**

- □ A larger cache will have a longer access time. An increase in hit time will likely add another stage to the pipeline. At some point the increase in hit time for a larger cache will overcome the improvement in hit rate leading to a decrease in performance.
- Average Memory Access Time (AMAT) is the average to access memory considering both hits and misses

AMAT = Time for a hit + Miss rate x Miss penalty

■ What is the AMAT for a core with a 20 psec clock, a miss penalty of 50 clock cycles, a miss rate of 0.02 misses per instruction and a cache access time of 1 clock cycle?

AMAT = 1 + 0.02x50 = 2 cycles

CSE431 Chapter 5B25


Irwin, PSU, 2015


## Reducing Cache Miss Rates #1

- 1. Allow more flexible block placement
- □ In a direct mapped cache a memory block maps to exactly one cache block
- □ At the other extreme, could allow a memory block to be mapped to *any* cache block fully associative cache
- A compromise is to divide the cache into sets each of which consists of n "ways" (n-way set associative). A memory block maps to a unique set (specified by the index field) and can be placed in any way of that set (so there are n choices)

(block address) modulo (# sets in the cache)

CSE431 Chapter 5B26

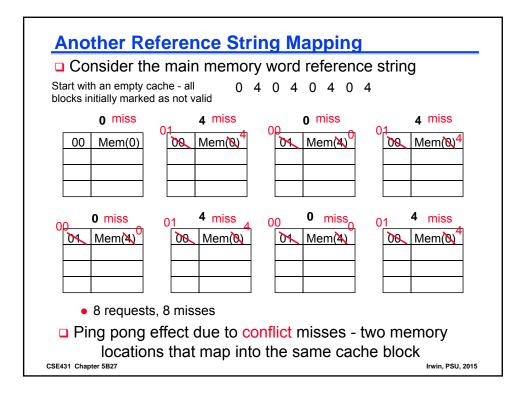


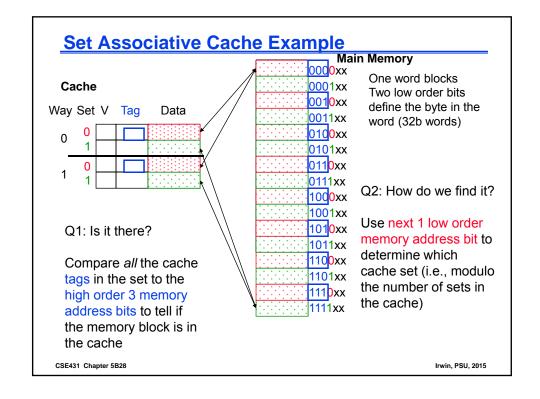

## **Another Reference String Mapping**

Consider the main memory word reference string

Start with an empty cache - all blocks initially marked as not valid



0 miss 000 Mem(0)




o hit		
000	Mem(0)	
010	Mem(4)	

4 hit	
000	Mem(0)
010	Mem(4)


- 8 requests, 2 misses
- □ Solves the ping pong effect in a direct mapped cache due to conflict misses since now two memory locations that map into the same cache set can co-exist!

CSE431 Chapter 5B29 Irwin, PSU, 2015

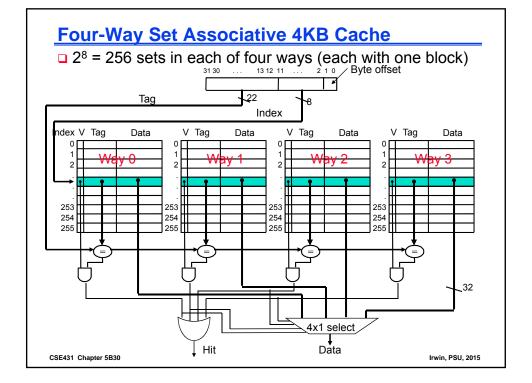

#### **Range of Set Associative Caches**

□ For a fixed size cache, each increase by a factor of two in associativity doubles the number of ways (i.e., doubles the number of blocks per set) and halves the number of sets – decreases the size of the index by 1 bit and increases the size of the tag by 1 bit

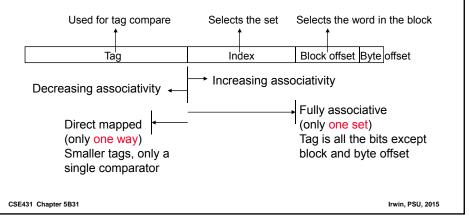


#### **Costs of Set Associative Caches**

- When a miss occurs, which way's block do we pick for replacement?
  - Least Recently Used (LRU): the block replaced is the one that has been unused for the longest time
    - Must have hardware to keep track of when each way's block was used relative to the other blocks in the set
    - For 2-way set associative, takes one bit per way → set the bit when a block is referenced (and reset the other way's bit)
- N-way set associative cache additional costs
  - N comparators (delay and area) one per way
  - MUX delay (way selection) before data is available
  - Data available after way selection (and Hit/Miss decision). In a direct mapped cache, the cache block is available before the Hit/Miss decision
    - So its not possible to just assume a hit and continue and recover later if it was a miss

CSE431 Chapter 5B32 Irwin, PSU, 2015

#### **Benefits of Set Associative Caches**

□ The choice of direct mapped or set associative depends on the cost of a miss versus the cost of implementation

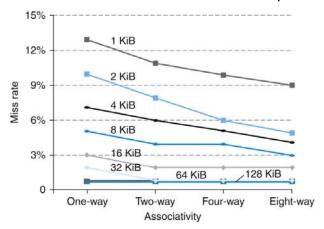

□ Largest gains are in going from direct mapped to 2-way (20%+ reduction in miss rate)

CSE431 Chapter 5B33

Irwin, PSU, 2015

## **Reducing Cache Miss Rates #2**

- 2. Use multiple levels of caches
- □ With advancing technology have more than enough room on the die for bigger L1 caches *and* for a second level of caches normally a unified L2 cache (i.e., it holds both instructions and data) and even a unified L3 cache
- □ For our example, CPI<sub>ideal</sub> of 2, 100 cycle miss penalty (to main memory) and a 25 cycle miss penalty (to UL2\$), 36% load/stores, a 2% (4%) L1I\$ (L1D\$) miss rate, add a 0.5% UL2\$ miss rate

$$CPI_{stalls} = 2 + .02 \times 25 + .36 \times .04 \times 25 + .005 \times 100 + .36 \times .005 \times 100 = 3.54$$
(as compared to 5.44 with no L2\$)

CSE431 Chapter 5B34

#### **Multilevel Cache Design Considerations**

- Design considerations for L1 and L2 caches are very different
  - Primary cache should focus on minimizing hit time in support of a shorter core clock cycle
    - Smaller with smaller block sizes
  - Secondary cache(s) should focus on reducing miss rate to reduce the penalty of long main memory access times
    - Larger with larger block sizes
    - Higher levels of associativity
- □ The miss penalty of the L1 cache is significantly reduced by the presence of an L2 cache – so it can be smaller (i.e., faster) but have a higher miss rate
- □ For the L2 cache, hit time is less important than miss rate

Irwin, PSU, 2015

- The L2\$ hit time determines L1\$'s miss penalty
- L2\$ local miss rate >> than the global miss rate

CSE431 Chapter 5B35

## **Split vs Unified Caches**

- Split L1I\$ and L1D\$: instr's and data in different caches at L1
  - To minimize structural hazards and t<sub>hit</sub>
    - So low capacity/associativity (to reduce thit)
    - So small to medium block size (to reduce conflict misses)
  - To optimize L1I\$ for wide output (superscalar) and no writes
- □ Unified L2, L3, ...: instr's and data together in one cache
  - $\bullet$  To minimize  $\%_{\text{miss}}$  (thit is less important due to (hopefully) infrequent accesses)
    - So high capacity/associativity/block size (to reduce %<sub>miss</sub>)
  - Fewer capacity misses: unused instr capacity can be used for data
  - More conflict misses: instr / data conflicts (smaller effect in large caches)
  - Instr / data structural hazards are rare (would take a simultaneous L1I\$ and L1D\$ miss)

CSE431 Chapter 5B36 Irwin, PSU, 2015


Characteristic	ARM Cortex-A8	Intel Nehalem
L1 cache organization	Split instruction and data caches	Split instruction and data caches
L1 cache size	32 KiB each for instructions/data	32 KiB each for instructions/data per core
L1 cache associativity	4-way (I), 4-way (D) set associative	4-way (I), 8-way (D) set associative
L1 replacement	Random	Approximated LRU
L1 block size	64 bytes	64 bytes
L1 write policy	Write-back, Write-allocate(?)	Write-back, No-write-allocate
L1 hit time (load-use)	1 clock cycle	4 clock cycles, pipelined
L2 cache organization	Unified (instruction and data)	Unified (instruction and data) per cor
L2 cache size	128 KiB to 1 MiB	256 KiB (0.25 MiB)
L2 cache associativity	8-way set associative	8-way set associative
L2 replacem		Approximated LRU
		64 bytes
		Write-back, Write-allocate
L2 hit time	3.4GHz, 84W	10 clock cycles
L3 cache or L1D\$ 4x32KB, 8-way		Unified (instruction and data)
L3 cache siz L1I\$ 4x32KB, 8-way		8 MiB, shared
L3 cache as L2 4x256KB, 8-way		16-way set associative
L3 1x8MB, 16-way		Approximated LRU
L3 block size Cycles: L1:4, L2:11-16, L3:30-55		041.1
L3 block size Cycle	s·   1·4   2·11-16   3·30-55	64 bytes


1600MHz DDR3

L3 hit time

CSE431 Chapter 5B37

35 clock cycles

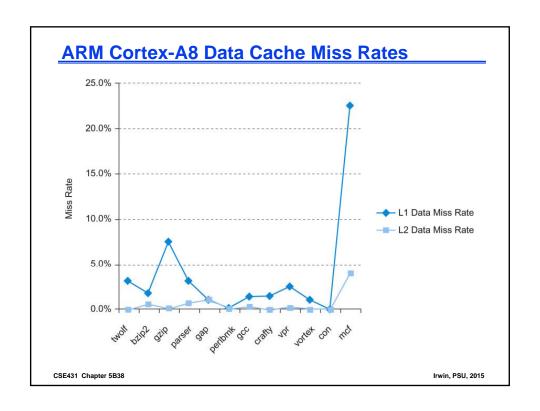

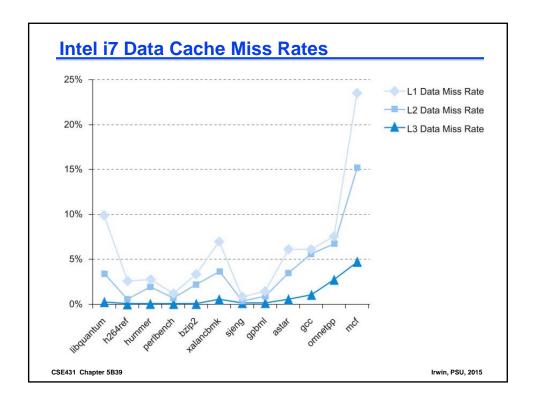


### **Reducing Cache Miss Rates #3**


- 3. Hardware prefetching
  - Fetch blocks into the cache proactively (speculatively)
  - Key is to anticipate the upcoming miss addresses accurately
  - Relies on having unused memory bandwidth available
- □ A simple case is to use next block prefetching
  - Miss on address X → anticipate next reference miss on X + block-size
  - Works well for instr's (sequential execution) and for arrays of data
- □ Need to initiate prefetches sufficiently in advance
- If prefetch instr/data that is not going to be used then have polluted the cache with unnecessary data (possibly evicting useful data)

CSE431 Chapter 5B40 Irwin, PSU, 2015

#### **FSM Cache Controller**

- □ Key characteristics for a simple L1 cache
  - Direct mapped
  - Write-back using write-allocate
  - Block size of 4 32-bit words (so 16B); Cache size of 16KB (so 1024 blocks)
  - 18-bit tags, 10-bit index, 2-bit block offset, 2-bit byte offset, dirty bit, valid bit, LRU bits (if set associative)

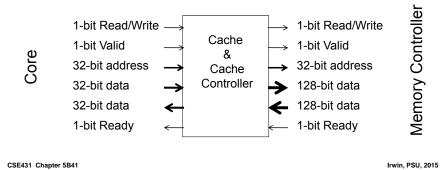

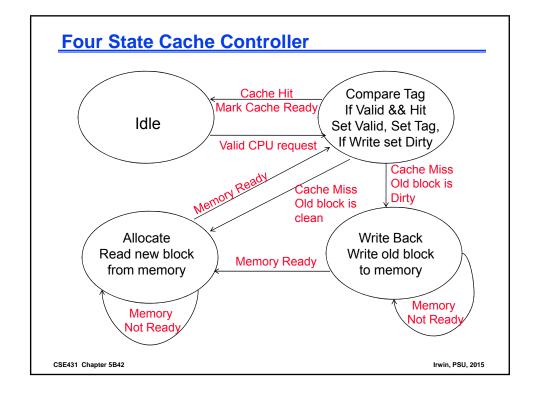

## **Cache Coherence Issues – More Details to Come**

- Need a cache controller to also ensure cache coherence the most popular of which is snooping
  - - Will cover this important
- □ Writ material later in the ve
  - E Semester itable copies of an item exists
- □ If two cores attempt to write the same data at the same time, one of them wins the race causing the other core's copy to be invalidated. For the other core to complete, it must obtain a new copy of the data which must now contain the updated value – thus enforcing write

serialization

CSE431 Chapter 5B43

Irwin, PSU, 2015

## Impact of Code Transformations on Cache Performance

- Code transformations change data access pattern, influencing cache hits and misses
- □ A large body of compiler transformations designed to maximize cache performance
  - Data Reuse => Data Locality => Cache Performance
- Examples
  - Loop interchange
  - Iteration space tiling (aka code blocking)
  - Loop fusion
  - Statement scheduling

CSE431 Chapter 5B44 Irwin, PSU, 2015

## **Loop Fusion**

- □ Merges two adjacent countable loops into a single loop
- □ Reduces the cost of test and branch code
- Fusing loops that refer to the same data enhances temporal locality
- One potential drawback is that larger loop body may reduce instruction locality when the instruction cache is very small

for i = 1, N  

$$A(i) = B(i) + C(i)$$
  
for i = 1, N  
 $D(i) = E(i) + B(i)$   
for i = 1, N  
 $A(i) = B(i) + C(i)$   
 $D(i) = E(i) + B(i)$ 

CSE431 Chapter 5B45

Irwin, PSU, 2015

## **Loop Interchange**

- □ Changes the direction of array traversing by swapping two loops.
- □ The goal is to align data access direction with the memory layout order.

for i = 1, N  
for j = 1, N  
... 
$$A(j,i)$$
 ...

for j = 1, N  
for i = 1, N  
...  $A(j,i)$  ...

assuming ROW-MAJOR memory layout

■ What type of locality do we exploit?

CSE431 Chapter 5B46 Irwin, PSU, 2015

## **Summary: Improving Cache Performance**

- 0. Reduce the time to hit in the cache
  - smaller cache
  - direct mapped cache
  - smaller blocks
  - for writes
    - no write allocate no "hit" on cache, just write to write buffer
    - write allocate to avoid two cycles (first check for hit, then write) pipeline writes via a delayed write buffer to cache

#### 1. Reduce the miss rate

- bigger cache
- more flexible placement (increase associativity)
- larger blocks (16 to 64 bytes typical)
- victim cache small buffer holding most recently discarded blocks

CSE431 Chapter 5B48 Irwin, PSU, 2015

## **Summary: Improving Cache Performance**


#### 2. Reduce the miss penalty

- smaller blocks
- use a write buffer to hold dirty blocks being replaced so don't have to wait for the write to complete before reading
- check write buffer (and/or victim cache) on read miss may get lucky
- for large blocks fetch critical word first
- use multiple cache levels L2 cache not tied to CPU clock rate
- faster backing store/improved memory bandwidth
  - wider buses
  - memory interleaving, DDR SDRAMs


CSE431 Chapter 5B49 Irwin, PSU, 2015

## **Summary: The Cache Design Space**

- □ Several interacting dimensions
  - cache size
  - block size
  - associativity
  - replacement policy
  - write-through vs write-back
  - write allocation
- □ The optimal choice is a compromise
  - depends on access characteristics
    - workload
    - use (I-cache, D-cache, TLB)
  - depends on technology / cost
- □ Simplicity often wins

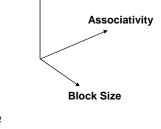

**Cache Size** 



CSE431 Chapter 5B50

Irwin, PSU, 2015

## **Reminders**

- Next week
  - Virtual memory hardware support (TLBs) P&H 5.6-5.8
  - VLIW datapaths P&H 4.10
- Reminders
  - HW3 dropbox closes midnight Oct 1st
  - Quiz 3 dropbox closes midnight Oct 4<sup>th</sup>
  - First evening midterm exam scheduled
    - Tuesday, October 6th, 20:15 to 22:15, Location 22 Deike
    - No conflict exam !!

CSE431 Chapter 5B51