




open the image\_recording.vi

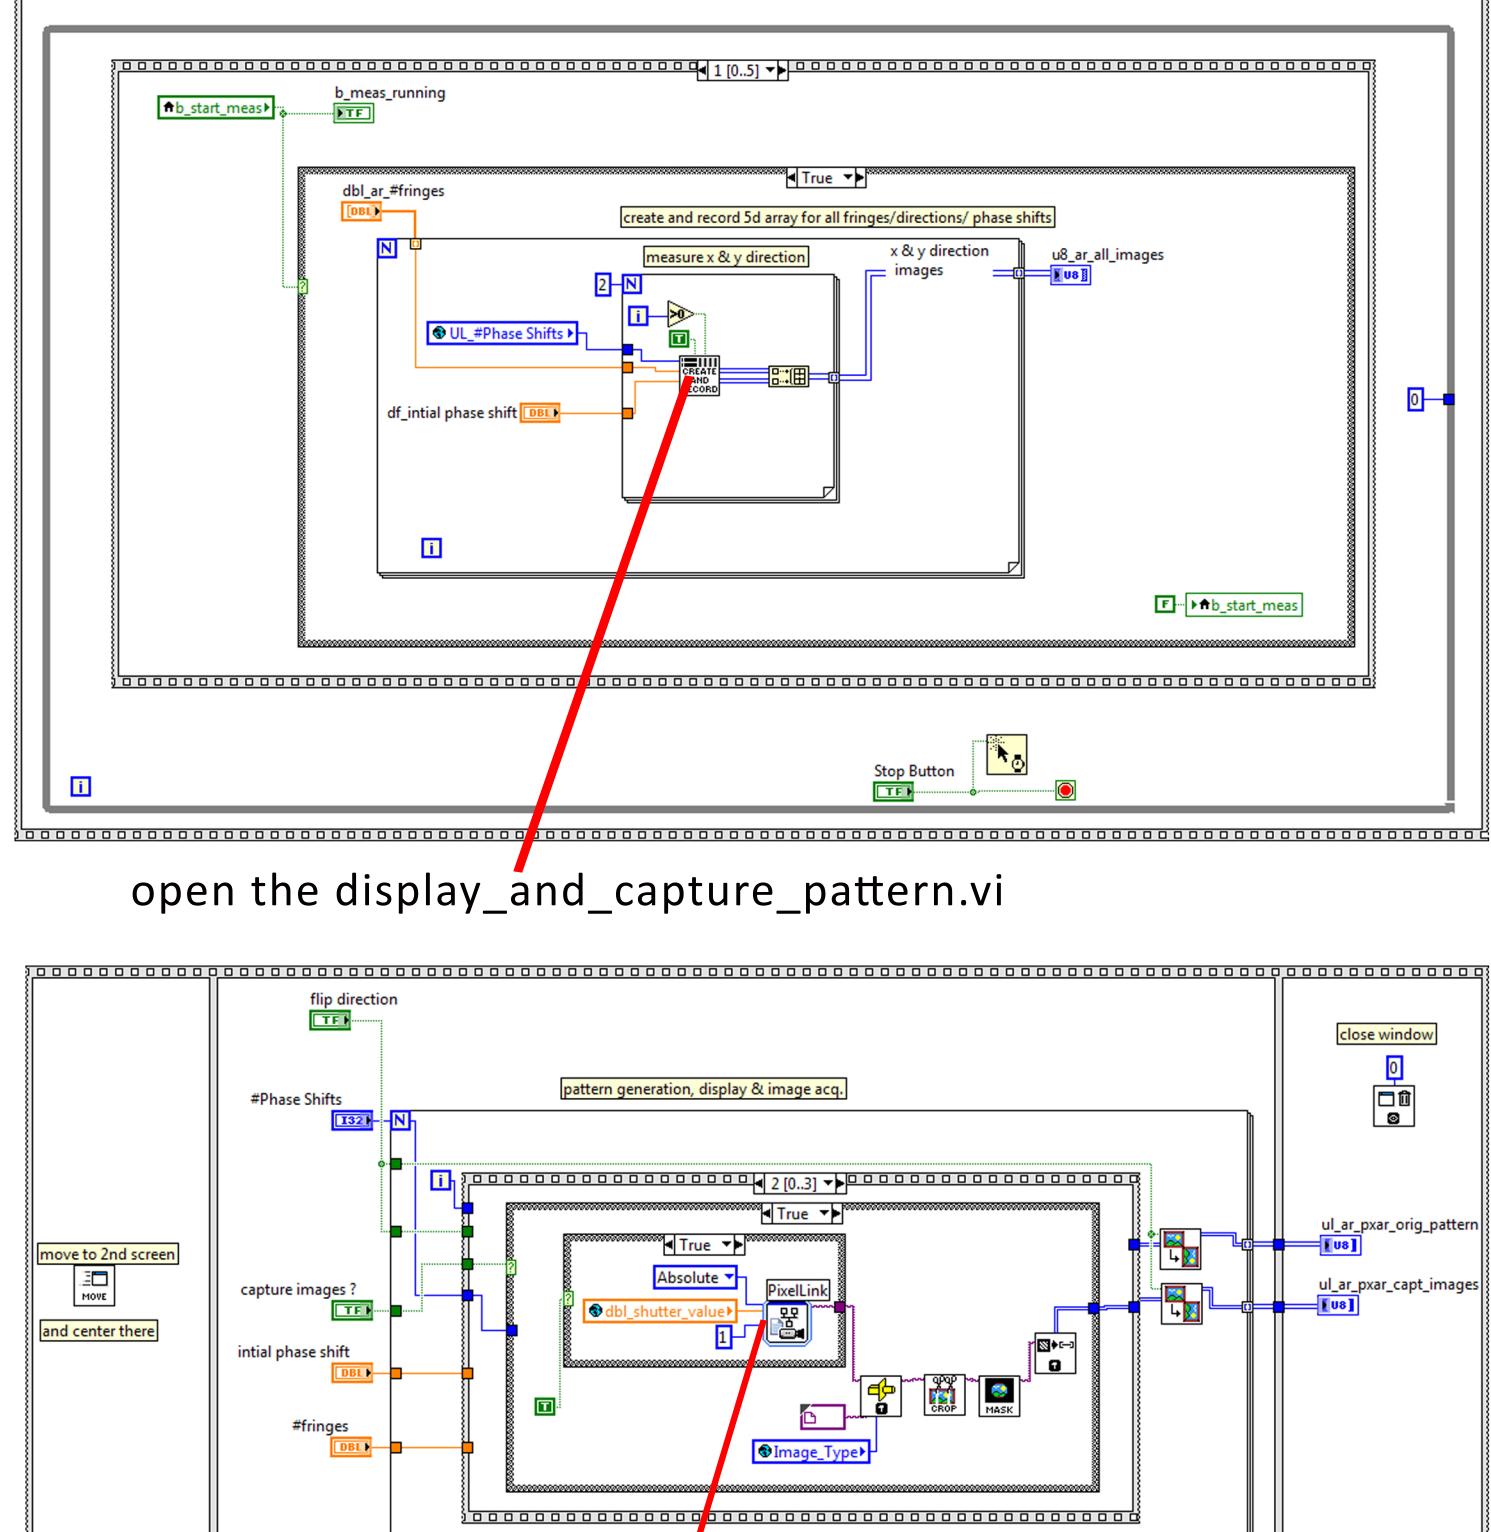


open the display\_and\_capture\_pattern.vi

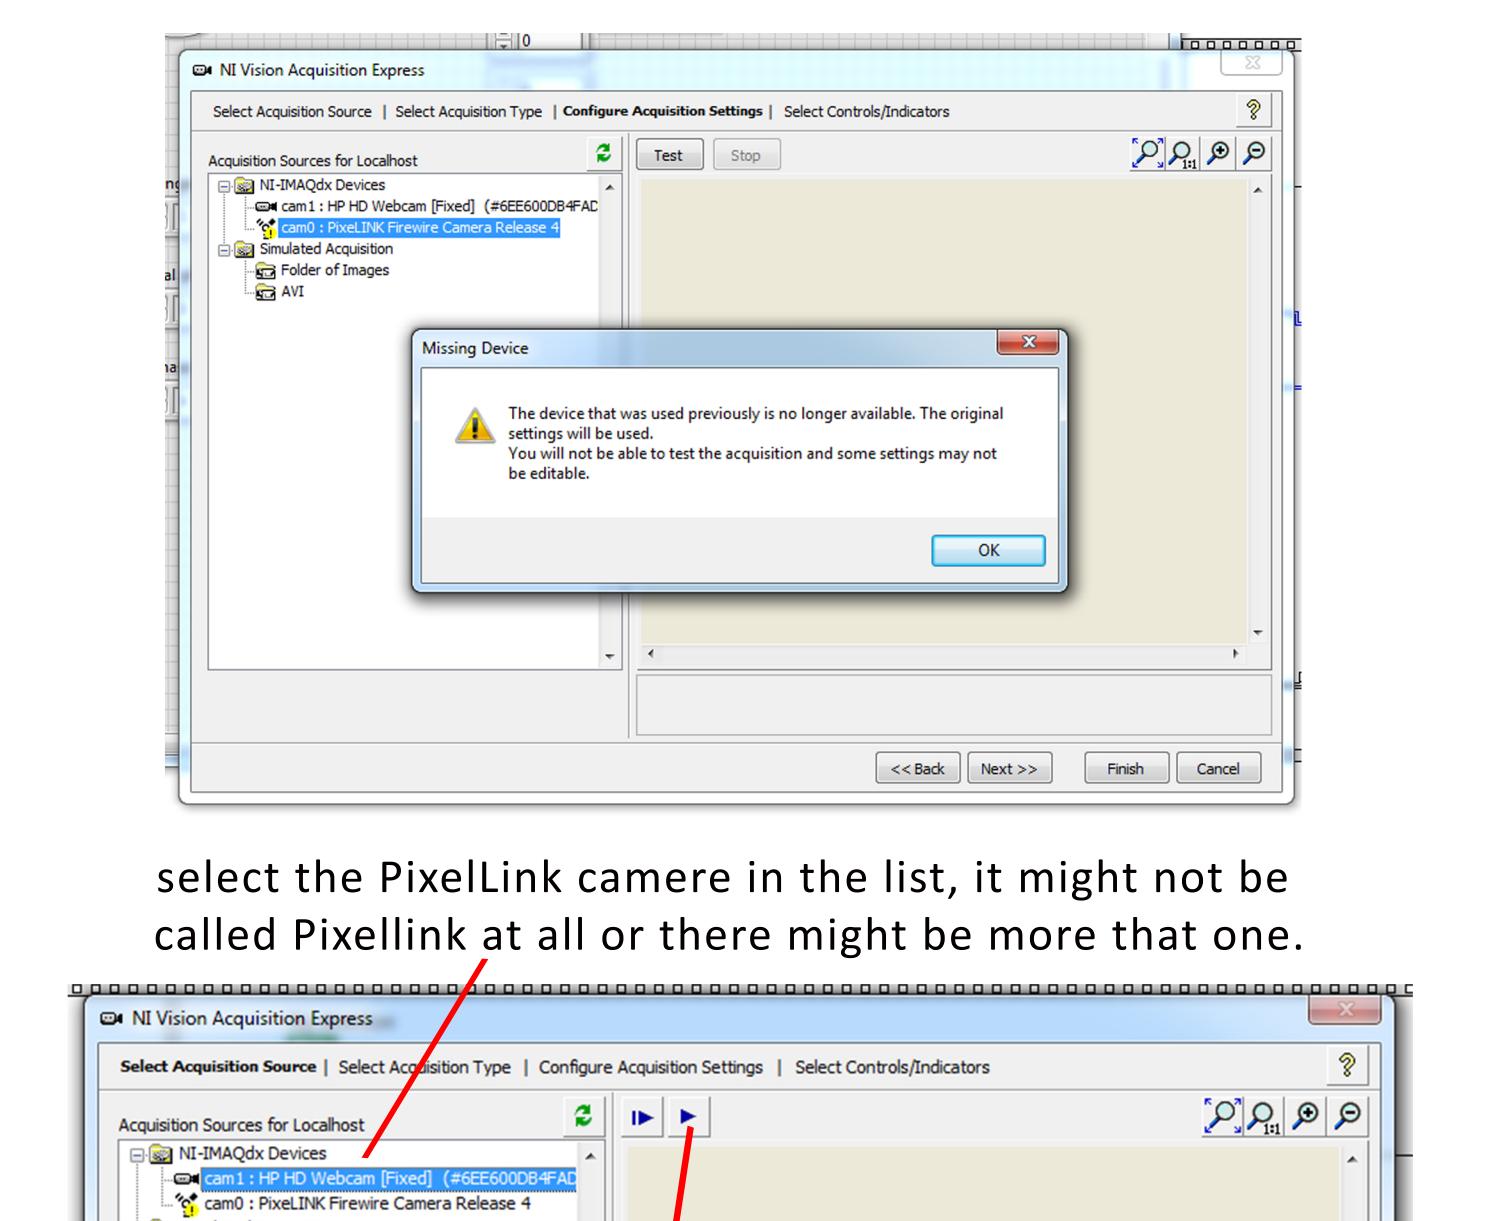

double click should open  
this dialog (and probably also this error message)

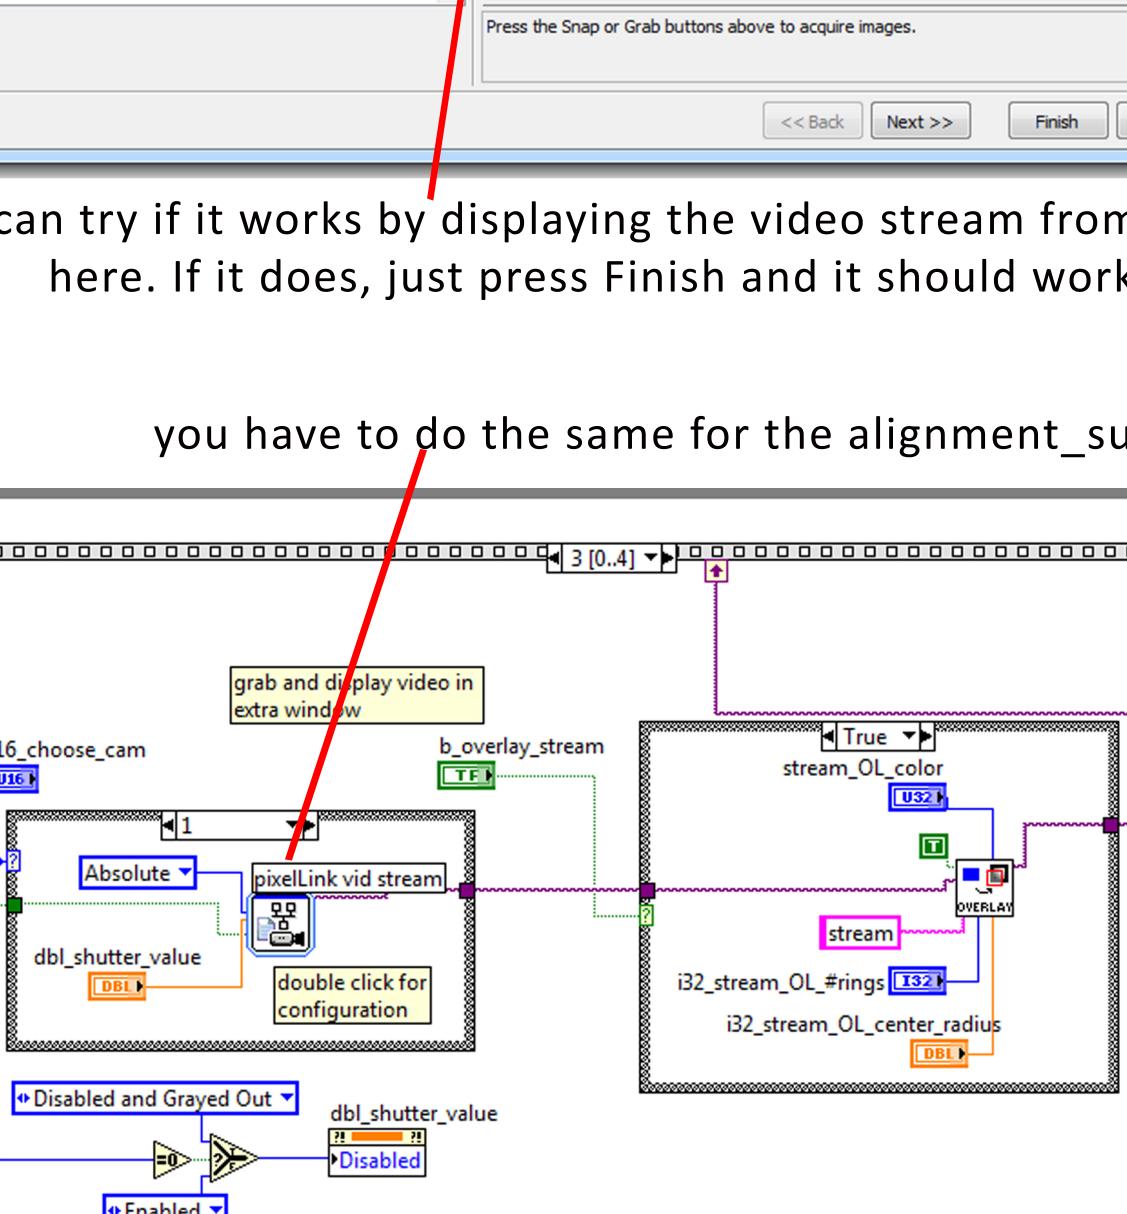


select the PixelLink camera in the list, it might not be called Pixellink at all or there might be more than one.

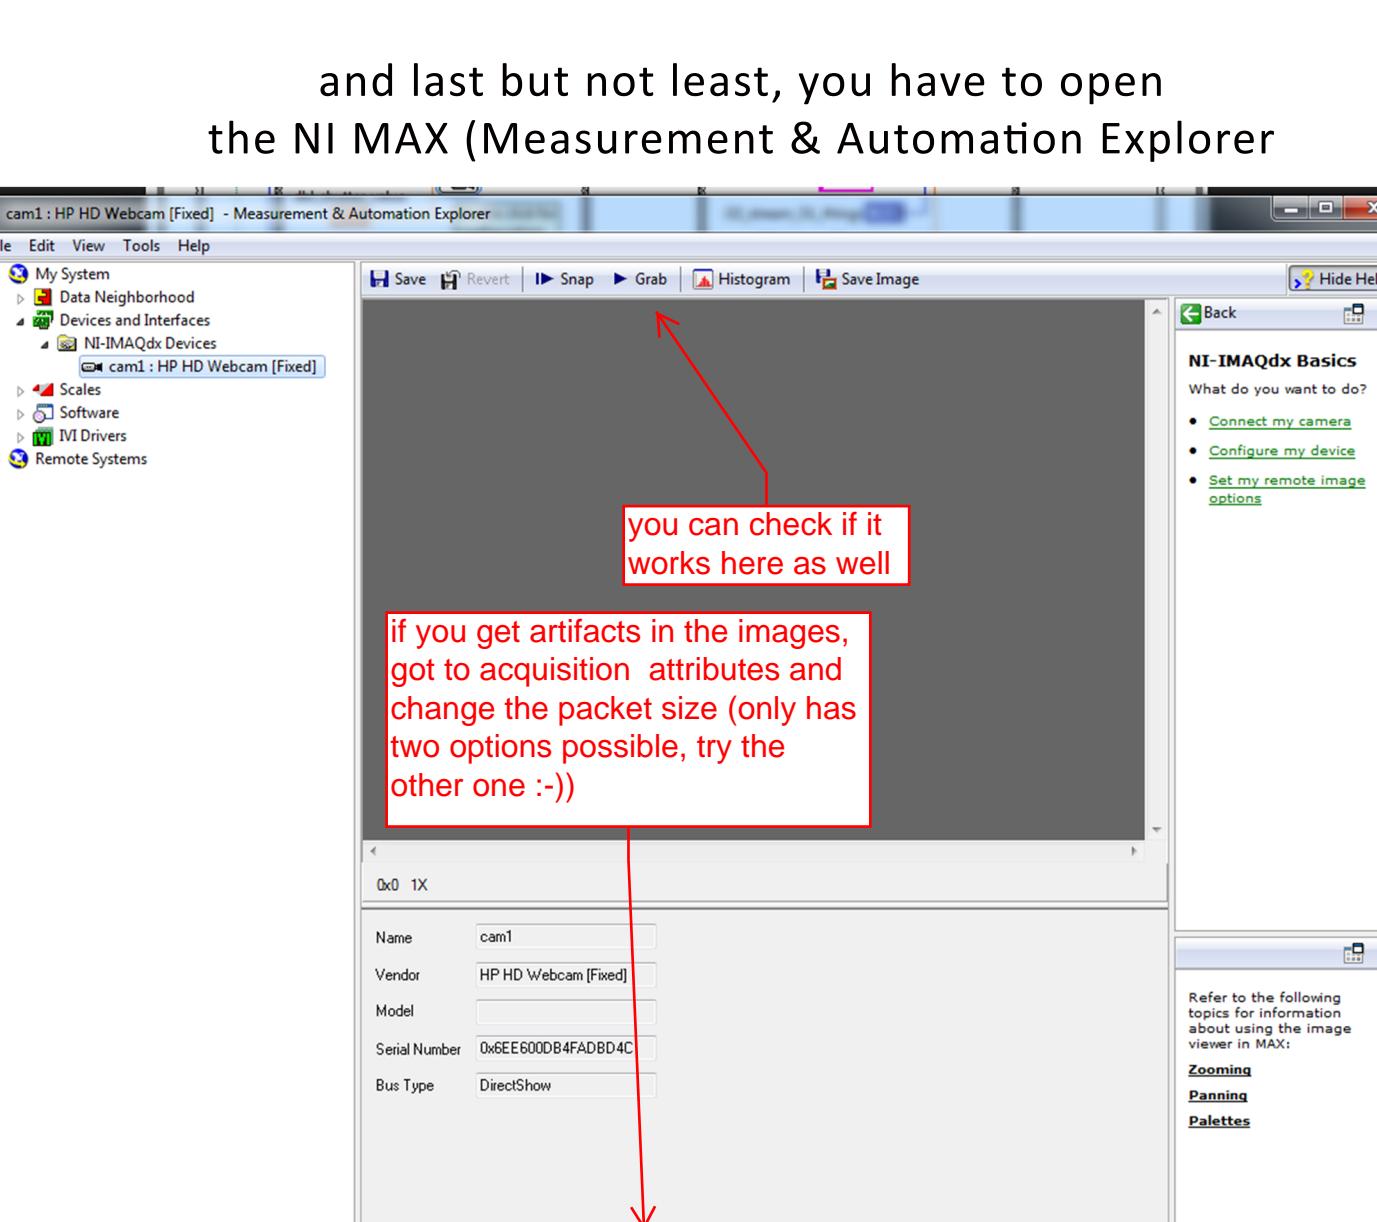


you can try if it works by displaying the video stream from the cam here. If it does, just press Finish and it should work...

you have to do the same for the alignment\_sub.vi

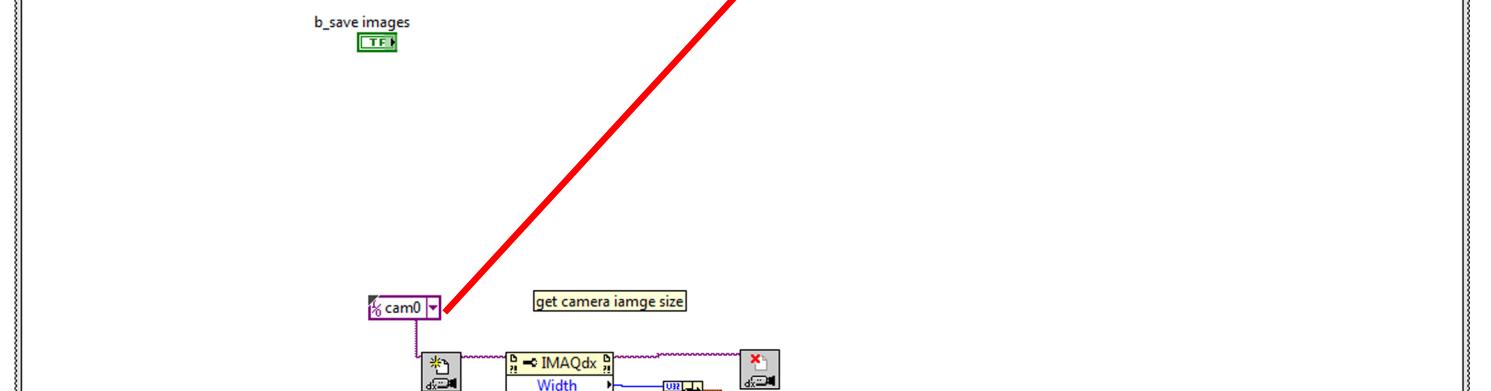

and last but not least, you have to open  
the NI MAX (Measurement & Automation Explorer)

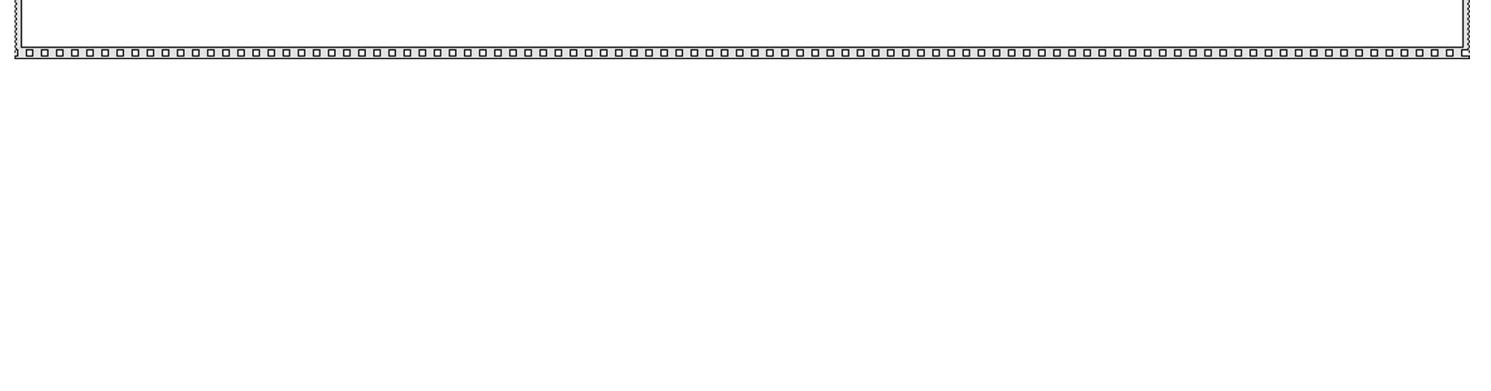

find the correct camera under devices > NI IMAQDX Devices

and remember/write down the name of the pixellink camera.

In my case (for my laptop cam) its cam1. Then go back to the  
image\_recording.vi, on the first frame of the outer stacked  
sequence select the correct camera

