

EMPIRE SLOT BENCH — FLAT-PACK CNC


36" W × 15" D × 17" H · 5 parts · half sheet 3/4" ply · slot-together, glue optional

WOODCRAFT BY EMPIRE

Design v1 · 07/24/2026 · files: SVG (Easel) + DXF (Vetric)

CUT FOR MEASURED PLY 0.72" — verify your sheet; slots 0.74" as drawn

FRONT ELEVATION — ASSEMBLED

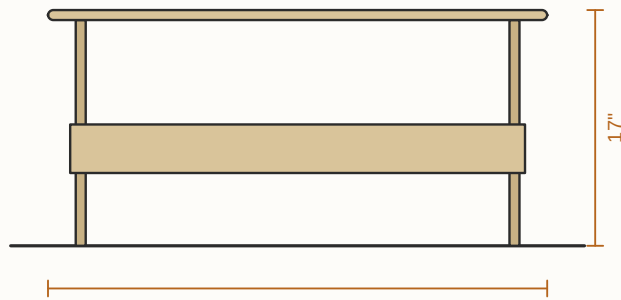

CAM SETUP (EASEL / VECTRIC)

Units: INCHES, 1:1 · sheet 48 × 48 min · material 3/4" ply (0.72" measured)

Bit: 1/4" upcut endmill · dogbones ALREADY WELDED into slot outlines — no CAM corner fix needed


INNER rings (6: 2 stretcher slots, 4 seat mortises): profile INSIDE the line, full depth +0.02" into spoilboard

OUTER rings (5 parts): profile OUTSIDE the line, full depth, 3–4 holding tabs per part

Easel: import SVG → set material 0.72 → select inner paths = "cut inside", outers = "cut outside"

Vetric: import DXF (layer CUT) → vectors are closed polylines → same inside/outside toolpaths

SIDE — ARCH FOOT + STRETCHER SLOT

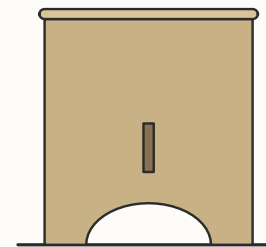

ASSEMBLY

1. Slide stretchers through both side slots (ends sit 0.4" proud — chamfer by hand if desired)
2. Stand sides, drop seat onto the four tabs (tabs 3" wide, through-fit)
3. Dry-fit first — slots cut at 0.74" for 0.72" ply; sand tabs if tight, glue if permanent
4. Load rating: solid for seating; add corner glue blocks under seat for heavy duty

IF YOUR PLY ≠ 0.72": say the word — slots re-cut to measure in one minute (parametric)