Instrumentation II BCT III/I

Dr. Raksha Dangol,
Assistant Professor,
Advanced College of Engineering and Management

Course Details

- Course Objectives:
 - Continuation of Instrumentation I with emphasis on advance system design and case studies.
 - To introduce and apply the knowledge of microprocessor, A/D, D/A converter to design Instrumentation system.
 - To provide the concept on interfacing with microprocessor based system and circuit design techniques.
- Theory marks: 80
- Internal marks: 20
- Practical marks: 25

Tentative Chapter-wise Marks Distribution

Chapters	Hours	Marks distribution
1	4	8
2	4	8
3	6	10
4	4	8
5	5	8
6	3	6
7	3	6
8	3	6
9	4	8
10	9	12
Total	45	80

Chapter 1 : Microprocessor Based Instrumentation System (4 hours)

- Chapter Outline
- 1.1 Basic Features of Microprocessor Based System
- 1.2 Open Loop and Closed Loop Microprocessor Based System
- 1.3 Benefits of Microprocessor Based System
- 1.4 Microcomputer on Instrumentation Design
- 1.5 Interfacing With Microprocessor
 - 1.5.1 PC Interfacing Techniques
 - 1.5.2 Review of Address Decoding
 - 1.5.3 Memory Interfacing
 - 1.5.4 Programmed I/O, Interrupt Driven I/O and Direct Memory Access (DMA)

Chapter 1: Introduction

- Microprocessor: A microprocessor is a multipurpose programmable, clock driven, register based electronic device fabricated using scaled integrations from SSI to VLSI that reads binary instructions from a storage device called memory, accepts binary data as input, processes data according to those instructions and provide results as output.
- Instrumentation System: The system which is defined as the assembly of various instruments and other components interconnected to measure, analyze and control physical quantities such as electrical, thermal, mechanical etc.
- Microprocessor based Instrumentation System: Any instrumentation systems centered around a microprocessor are known as microprocessor based system. Logical and computing power of microprocessor has extended the capabilities of many basic instruments, improving accuracy and efficiency of use. Microprocessor is versatile device for use in any instrumentation system. Examples are ATM, automatic washing machine, fuel control, oven etc.

Chapter 1: Introduction

Why microprocessor?

- Can be used in any system.
- Can be used in specific applications and specific design.
- Logical and computational power of microprocessor has been used to develop more accurate and efficient system.

Why not microprocessor?

- Complexity in interfacing.
- Need to learn complex machine dependent language.
- Need of an expensive microprocessor development system.

But all these problems are accepted if system designed sells a number of units so that the development cost spreads out.

Features for selecting microprocessor

- How fast the data has to be processed
- Cost-amount of memory intelligence
- Complexity of work
- Field for which system is designed

1.1 Basic Features of Microprocessor Based System

- Three components: Microprocessor, I/O, and memory
- Decision making power based on previous entered values
- Repeatability of readings
- User friendly (Signal readout)
- Parallel processing
- Timeshare and multiprocessing
- Data storage, retrieval and transmission
- Effective control of multiple equipments on time sharing basis
- Various processing capability

1.2 Open Loop and Closed Loop Microprocessor Based System

• Any instrumentation system can be controlled by microprocessor in two ways open loop control system and closed loop control system.

Open loop control system

- Microprocessor gives output of control variable in the form of some display to
- human operator and then on the basis of displayed information, the human
- operator makes changes in the necessary control inputs.
- Example: pressure and temperature monitoring system in any chemical processing plant
 - It is simple, low cost and used when feedback is not critical.
 - Upper and lower limit of desired pressure is set
 - Pressure is converted to digital form to be fed to microprocessor
 - The microprocessor compares a sample of pressure measurement with present pressure limits.
 - If sample is beyond limits, the microprocessor indicates in form of come alarm or lamp.
 - So, according to output signal, human operator makes necessary changes.

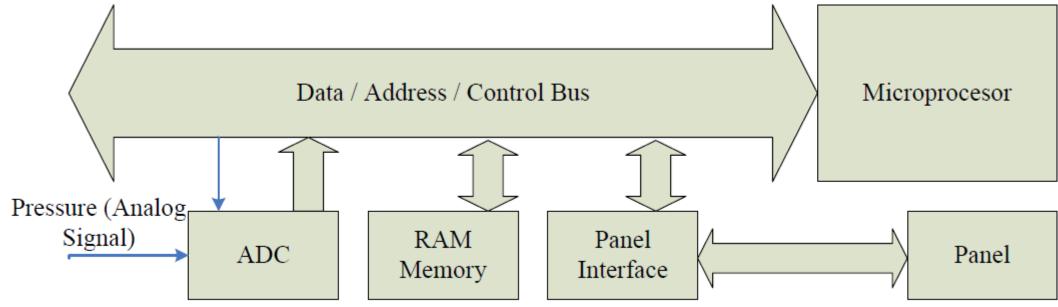


Fig: Block diagram of pressure monitoring system - Open loop control

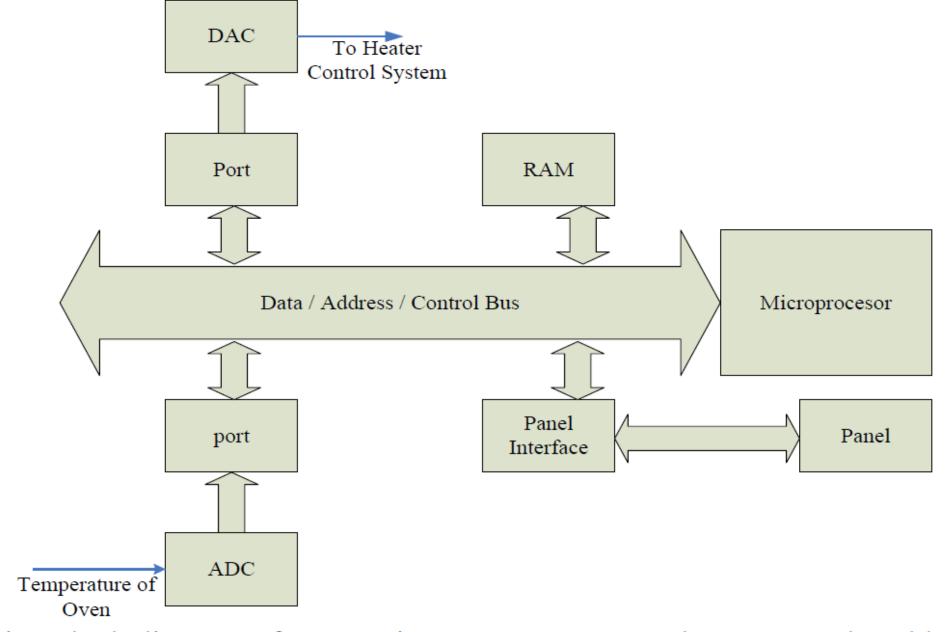


Fig: Block diagram of automatic temperature control system – Closed loop control

1.2 Open Loop and Closed Loop Microprocessor Based System

Closed loop control system

- Microprocessor monitors the process variables continuously and then supplies the output signal to the electromechanical devices, which in turn controls the values of process variables.
- Accurate and Adaptive
- No human operator required
- In microprocessor, upper and lower limits of temperature are set.
- Example: automatic temperature control system in an oven
 - Every sample of temperature measurement from transducer is compared by the processor.
 - If temperature exceeds the preset higher limit, the microprocessor transmits an output signal to a system which in turn turns off the supply to some of the heater elements.
 - If temperature is less than the preset lower limit, the microprocessor transmits signal to system so that it turns on the supply to the heater element of the oven.

1.3 Benefits of Microprocessor Based System

- Complete automation
- Added intelligence
- Reduced manpower
- Flexibility to modify
- Economic design
- Reduced circuit complexity
- Reduced operating costs (eg. Fuel savings)
- Reduced product wearing; furnish more uniform operation; tighter control enforcement.
- Improved responsiveness to changes in process: production rates, product specifications, addition of new products.

- Incorporate strategies to minimize production upsets; resulting from plant equipment failures by anticipated process conditions and improved plant safety.
- Improved timely information to plant operation and maintenance managers to enable them to keep a plant running longer and more efficiently.
- Improved integration and interaction of plant operation through coordinated strategy.
- Relational database management
- Statistical process control capabilities
- Information exchange with other plant system for process synchronization.

1.4 Microcomputer on Instrumentation Design

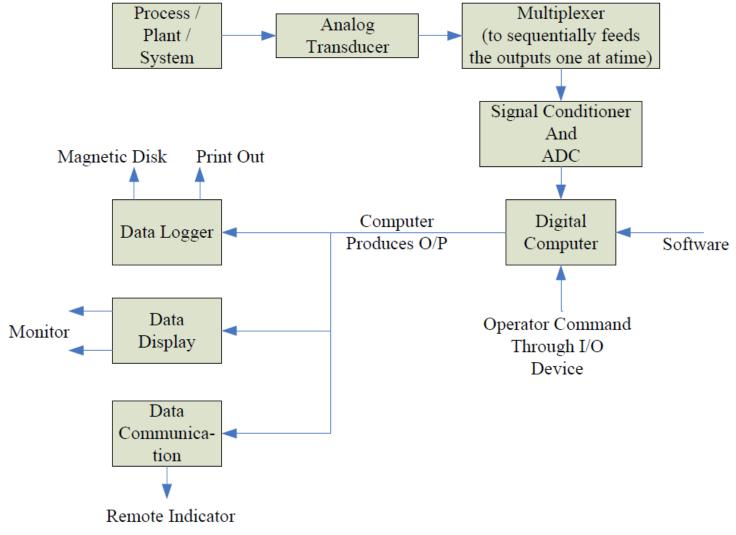


Fig: A typical digital computer based instrumentation system

1.4 Microcomputer on Instrumentation Design

• A process or plant or system may have to simultaneously measure multiple variables like pressure, temperature, velocity, viscosity, flow rate etc. A computer based measurement system has the capability of processing all inputs and present the data in real time. A digital computer is fed with a sequential list of instructions termed as computer program for suitable processing and manipulation of data.

Advantages:

- Suitably programmed to automatically carry out the mundane tasks of drift correction, noise reduction, gain adjustments, automatic calibration etc.
- These instruments have signal conditioning and display which are compact, rugged and reliable and are suited for performing in wide conditions like industrial, consumer, military, automobile etc.
- Built in diagnostic subroutines to detect only or detent and correct.
- Real time measurement, processing and display.
- Lower cost, higher accuracy, and more flexibility.

1.4 Microcomputer on Instrumentation Design

Disadvantages:

- They cannot replace the program themselves.
- Software update
- Prone to virus problem, so may become in-operational.

1.5 Interfacing With Microprocessor

- Primary function of microprocessor
 - accept data from input devices (such as keyboard and A/D converters)
 - read instructions from memory
 - process data accordingly to the instructions,
 - send the results to output devices such as LEDs, printers and video monitors.
 - These input and output devices are called peripherals or I/Os. Designing the logic circuits (hardware) and writing instructions (software) to enable the microprocessor to communicate with these peripherals is called interfacing, and the logic circuits are called I/O ports of interfacing devices.

1.5.1 PC Interfacing Techniques

• PC provides several interfaces for attaching peripherals to it. PC compatible devices are interfaced to a PC through an internal expansion slot, a parallel port or a serial port. Latest PCs have USB for connecting the peripherals.

1) I/O Buses

PC brings out the system bus signals through expansion slots known as I/O buses on the motherboard that is an I/O bus interfaces an external device directly to the system bus. Video card, sound card, network card etc. are inserted into the slots for various applications.

2) Parallel and Serial Ports

Basic PC configuration includes one parallel port (LPT1) and two serial ports (COM1 and COM2). However, additional ports can be created by adding expansion cards. For industrial measurement and control operations, remote data acquisition system compatible for serial port are used.

3) USB ports

Universal serial bus used for connecting number of peripheral devices such as printer, scanner, digital cameras, and pen drives etc. It is faster compared to traditional parallel and serial ports.

1.5.2 Review of Address Decoding

- The R/W memory is made of registers and each register has a group of flip flops or field-effect transistors that store bits of information; these flip flops are called memory cells. The number of bits stored in a register is called a memory word. In a memory chip, all registers are arranged in a sequence and identified by binary numbers called memory address.
- To communicate with memory, the MPU should be able to:
 - Select the chip
 - Identify the register
 - Read from or write into the register
- The address decoding circuit enables MPU to select an address within memory chip or I/O chip and then read or write into it through the available data bus and thus avoid contention or data collision within the data bus.

- Microprocessor is connected with memory and I/O devices via common address and data bus. Only one device can send data at a time and other devices can only receive that data. If more than one device sends data at the same time, the data gets garbled. In order to avoid this situation, ensuring that the proper device gets addressed at proper time, the technique called address decoding is used.
- In address decoding method, all devices like memory blocks, I/O units etc. are assigned with a specific address. The address of the device is determined from the way in which the address lines are used to derive a special device selection signal known as chip select (\overline{CS}) . If the microprocessor has to write or to read from a device, the signal \overline{CS} to that block should be enabled and the address decoding circuit must ensure that signal \overline{CS} to other devices are not activated.

• Depending upon the no. of address lines used to generate chip select signal for the device, the address decoding is classified as:

a) I/O mapped I/O

In this method, a device is identified with an 8 bit address and operated by I/O related functions IN and OUT for that IO/M' = 1. Since only 8bit address is used, at most 256 bytes can be identified uniquely. Generally low order address bits A_0 - A_7 are used and upper bits A_8 - A_{15} are considered don't care. Usually I/O mapped I/O is used to map devices like 8255A, 8251A etc.

b) Memory mapped I/O

In this method, a device is identified with 16 bit address and enabled memory related functions such as STA, LDA for which IO/M' = 0, here chip select signal of each device is derived from 16 bit address lines thus total addressing capability is 64K bytes. Usually memory mapped I/O is used to map memories like RAM, ROM etc.

Difference between Memory-Mapped I/O Interfacing and I/O Mapped I/O Interfacing

'	,	
Features	Memory Mapped IO	IO Mapped IO
Addressing	I/O devices are accessed like any other memory location.	They cannot be accessed like any other memory location.
Address Size	They are assigned with 16-bit address values.	They are assigned with 8-bit address values.
Instructions Used	The instruction used are LDA and STA, etc.	The instruction used are IN and OUT.
Cycles	Cycles involved during operation are Memory Read, Memory Write.	Cycles involved during operation are IO read and IO writes in the case of IO Mapped IO.
Registers Communicating	Any register can communicate with the IO device in case of Memory Mapped IO.	Only Accumulator can communicate with IO devices in case of IO Mapped IO.
Space Involved	2^{16} IO ports are possible to be used for interfacing in case of Memory Mapped IO.	Only 256 I/O ports are available for interfacing in case of IO Mapped IO.
IO/M` signal	During writing or read cycles (IO/M $$ = 0) in case of Memory Mapped IO.	During writing or read cycles (IO/M` = 1) in case of IO Mapped IO.
Control Signal	No separate control signal required since we have unified memory space in the case of Memory Mapped IO.	Special control signals are used in the case of IO Mapped IO.

Arithmetic and logical operations are performed directly on Arithmetic and logical operations cannot be performed

directly on the data in the case of IO Mapped IO.

Source: https://www.geeksforgeeks.org/difference-between-memory-mapped-io-and-io-mapped-io-with-reference-to-8085-microprocessor

the data in the case of Memory Mapped IO.

Arithmetic and Logical

operations

• Depending on the address that are allocated to the device the address decoding are categorized in the following two groups as follows:


a) Unique Address Decoding:

If all the address lines on that mapping mode are used for address decoding then that decoding is called unique address decoding. It means all 8-lines in I/O mapped I/O and all 16 lines in memory mapped I/O are used to derive signal. It is expensive and complicated but fault proof in all cases.

b) Non Unique Address decoding:

If all the address lines available on that mode are not used in address decoding then that decoding is called non unique address decoding. Though it is cheaper there may be a chance of address conflict.

• Example of Unique Address Decoding:

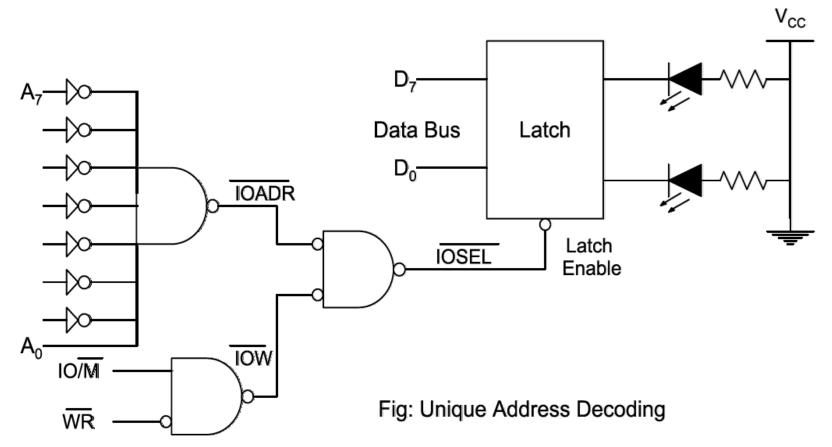

- \triangleright If A₀ is high and A₁- A₇ are low and if \overline{IOW} becomes low, the latch gets enabled.
- The data to the LED can be transferred in only one case and hence the device has unique address of 01H.

• Example of Non-unique Address Decoding:

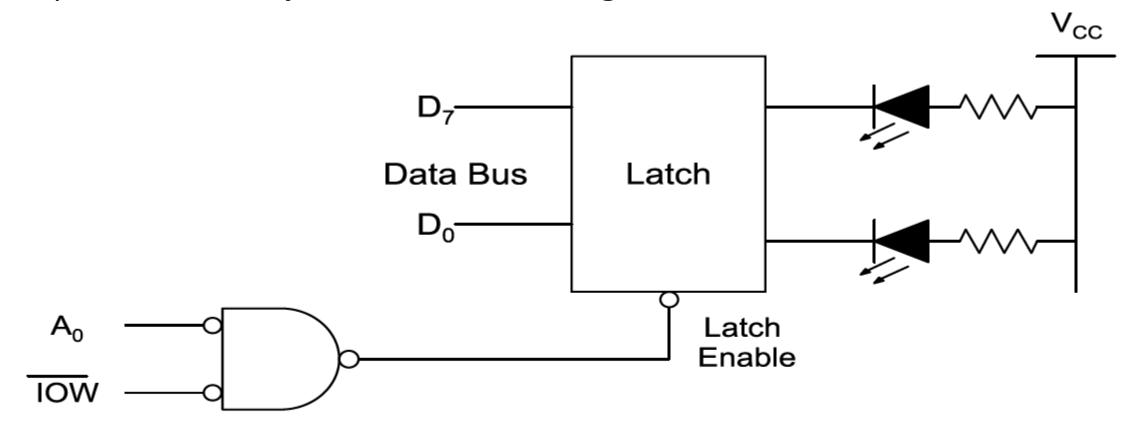


Fig: Non unique Address Decoding

- If A_0 is low and \overline{IOW} is low. Then latch gets enabled.
- Here A_1 - A_7 is neglected that is any even address can enable the latch.

1.5.3 Memory Interfacing

- A memory chip requires address lines to identify a memory register. The number of address lines required is determined by the number of registers in a chip $(2^n = number of registers where n is the number of address lines).$
- A memory chip requires a chip select (CS) signal to enable the chip. The remaining address lines (from above step) of the microprocessor can be connected to the CS signal through an interfacing logic.
- Thus, all address lines are responsible to select a specific register within a memory chip.

• Design an address decoding circuit for two RAM chips each of 4K X 8 at address 2050H.

• Design an address decoding circuit for two RAM chips each of 4K X 8 at address 2050H.

• Solution:

➤ Step 1: Calculate the number of address pins

Here both memory devices are of 4K X 8 memory which is 4KB.

That means, $2^n = 4KB = 4X1KB = 2^2 \times 2^{10} = 2^{12}$. $\Rightarrow n=12$

Therefore, 4KB memory requires 12 address lines.

➤ Step 2: Memory mapping

Starting memory address of RAM1 = 2050H

End memory address of RAM1 = 2050H + 0FFFH = 304FH

	Memory Block	Address	A ₁₅	A ₁₄	A ₁₃	A ₁₂	A ₁₁	A ₁₀	A ₉	A_8	\mathbf{A}_7	\mathbf{A}_{6}	$\mathbf{A_5}$	A_4	A_3	A_2	$\mathbf{A_1}$	$\mathbf{A_0}$
	RAM1	Start:2050H	0	0	1	0	0	0	0	0	0	1	0	1	0	0	0	0
	KANII	End:304FH	0	0	1	1	0	0	0	0	0	1	0	0	1	1	1	1
	RAM2	Start:3050H	0	0	1	1	0	0	0	0	0	1	0	1	0	0	0	0
KAIVIZ	End:404FH	0	1	0	0	0	0	0	0	0	1	0	0	1	1	1	1	


- Solution (Contd...):
- ➤ Step 3: Decide decoder pins

Here, bit A_{12} in address lines for RAM1 and RAM2 referring to start address are different, so we require a 1X2 decoder. If we refer the end address, bits A_{12} , A_{13} and A_{14} are different; in this case we should use 3X8 decoder. Address lines A_0 through A_{11} are used by RAM1 and RAM2 as both having 12 address pins. Rest of the address lines (A_{15} if 3X8 decoder and A_{13} , A_{14} and A_{15} if 1X2 decoder) will be decoded to generate chip enable signals for decoder.

- ➤ Step 4: Draw a decoding circuit
 - ➤In next slides


• Solution (Co

➤ Step 4: Drav

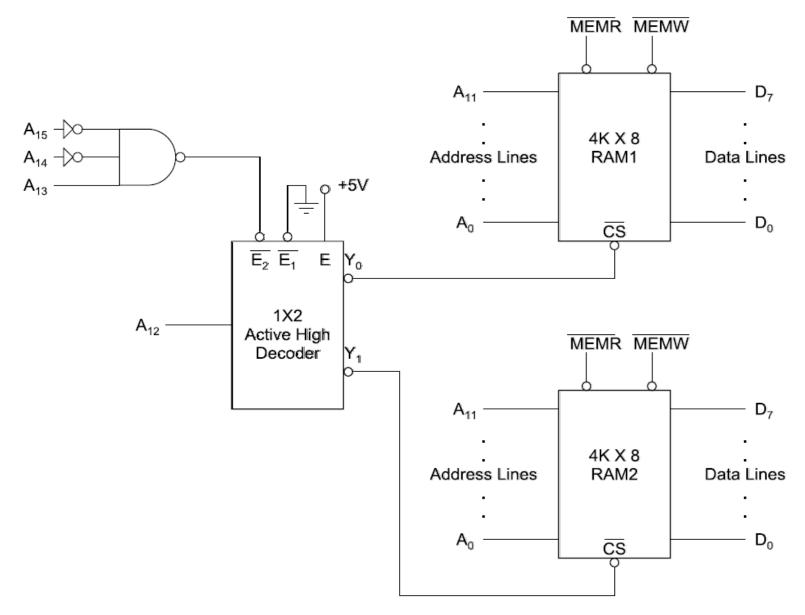

• Solution (

➤Step 4: D

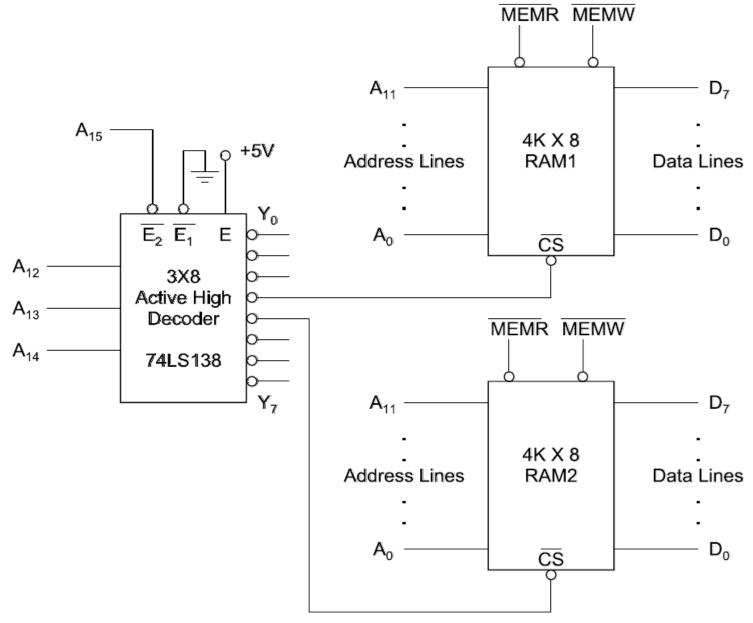

Address Decoding circuit with respect to end addresses

1.5.4 Programmed I/O, Interrupt Driven I/O and Direct Memory Access (DMA)

Programmed I/O or Polling:

The microprocessor is kept in a loop (programmed) to check whether data are available. For example to read a data from an input keyboard in a single board microcomputer, the microprocessor can keep polling the port until a key is pressed.

Interrupt Driven I/O:

When a peripheral is ready to transfer data, it sends an interrupt signal to the microprocessor. The microprocessor stops the execution of the current program, accepts the data from the peripheral and then returns to the program. The processor is free to perform other tasks rather than being hold in a polling loop.

1.5.4 Programmed I/O, Interrupt Driven I/O and Direct Memory Access (DMA)

Direct Memory Access (DMA):

This type of data transfer is employed when the peripheral is much faster than the microprocessor. The DMA controller sends a HOLD signal to the microprocessor, the microprocessor releases its data bus and the address bus to the DMA controller, and data are transferred at high speed without the intervention of the microprocessor.

End of first lecture. Thank you!