
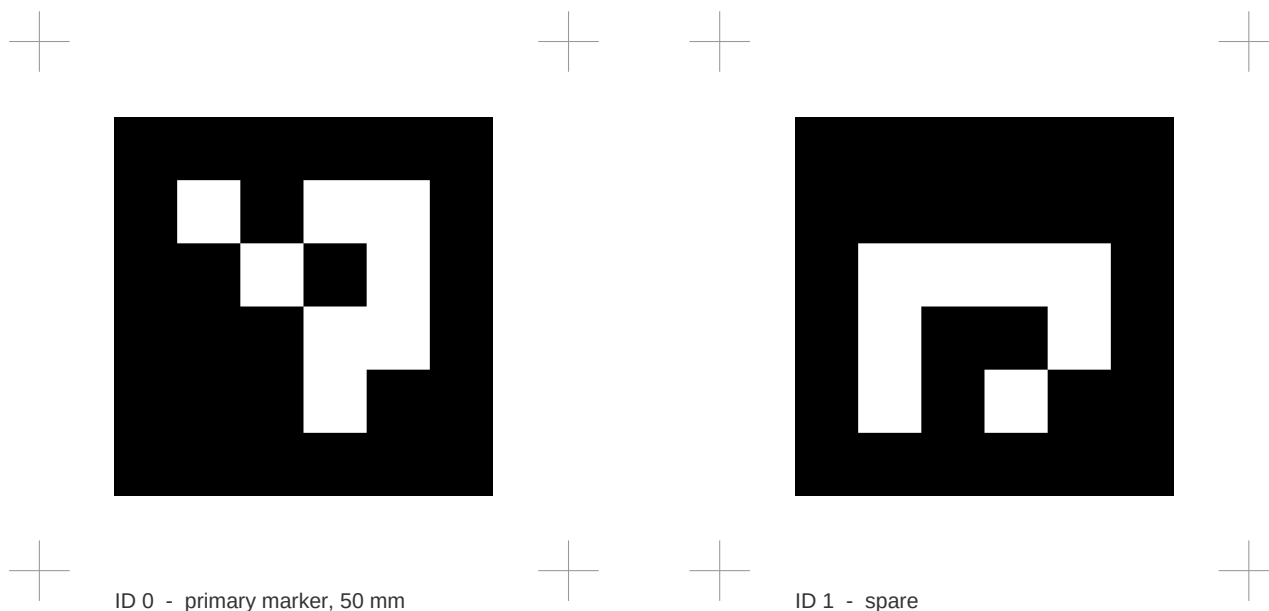


KarstGuard PA - reference marker

ArUco DICT_4X4_50. Marker 50.0 mm square, matching marker_side_mm in the service configuration.

CHECK THIS FIRST: the bar below must measure exactly 100 mm with a ruler.

If it does not, reprint with scaling set to 100% / Actual Size. A mis-scaled marker silently corrupts every measurement.



Printing

1. Print at 100% / Actual Size. Do not use Fit to Page. Verify the 100 mm bar above.
2. Use MATTE paper or matte adhesive label stock. Glossy paper reflects sunlight and detection fails.
3. Cut on the crop marks, keeping the full white border. The white quiet zone is part of the marker.
4. Mount on something rigid - 3 mm foam board, corrugated plastic or thin aluminium.

A marker that curls or bends breaks the perspective correction, which is the whole point of it.

Placing it on the road

Do NOT glue or paste anything to a public road surface. It is unnecessary and it is not yours to modify.

Lay the mounted marker FLAT on the pavement beside the crack, in the same plane as the surface being measured, roughly 50-150 mm away and parallel to the crack. Lift it and take it with you afterwards.

For a repeat scan weeks later, put it back in the same spot: mark the corner position with chalk, or note it against a fixed feature such as a joint line or drain edge. The marker fixes scale and angle; the app handles the rest of the alignment, so it does not need to be millimetre-perfect - just flat, unshaded and fully in frame.