Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

ENGINEERING FUNDA

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

8051 Microcontroller by Hitesh Dholakiya

ENGINEERING FUNDA

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

8051 Microcontroller by Hitesh Dholakiya

ENGINEERING FUNDA

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

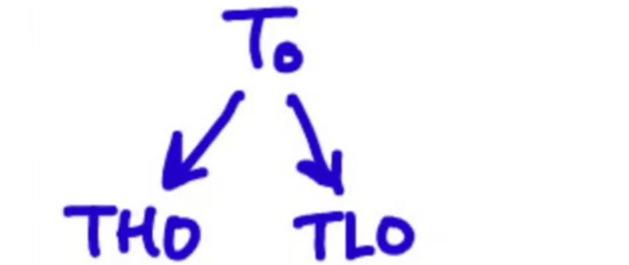

{ 8 bits register }

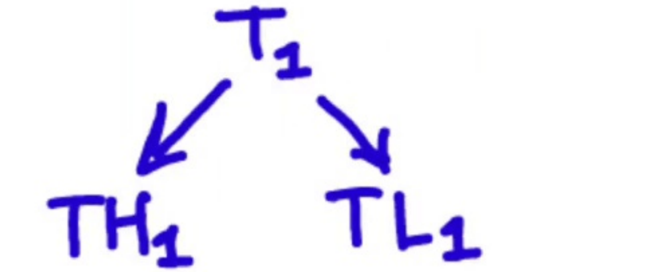

{ 8 bits register }

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

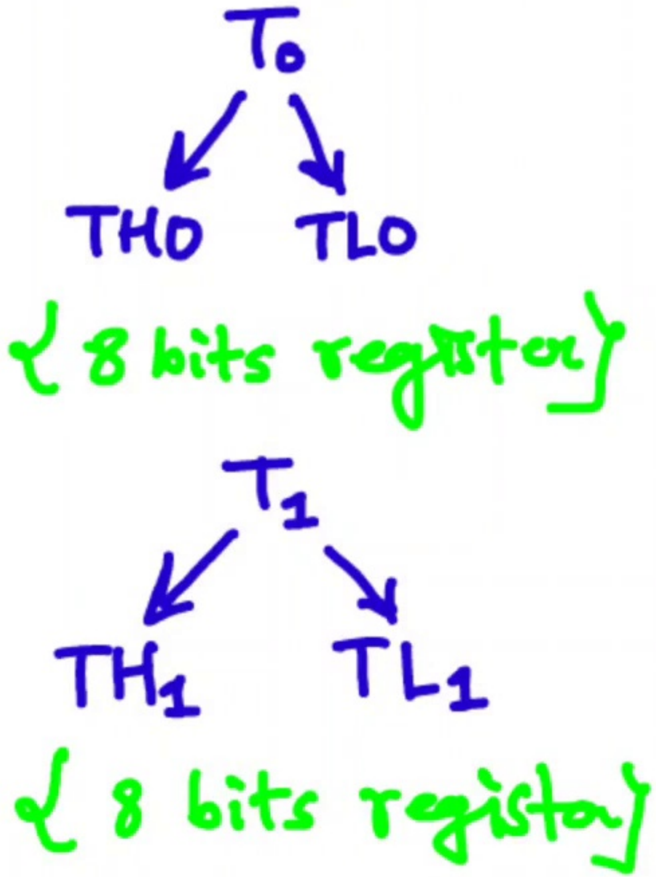

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

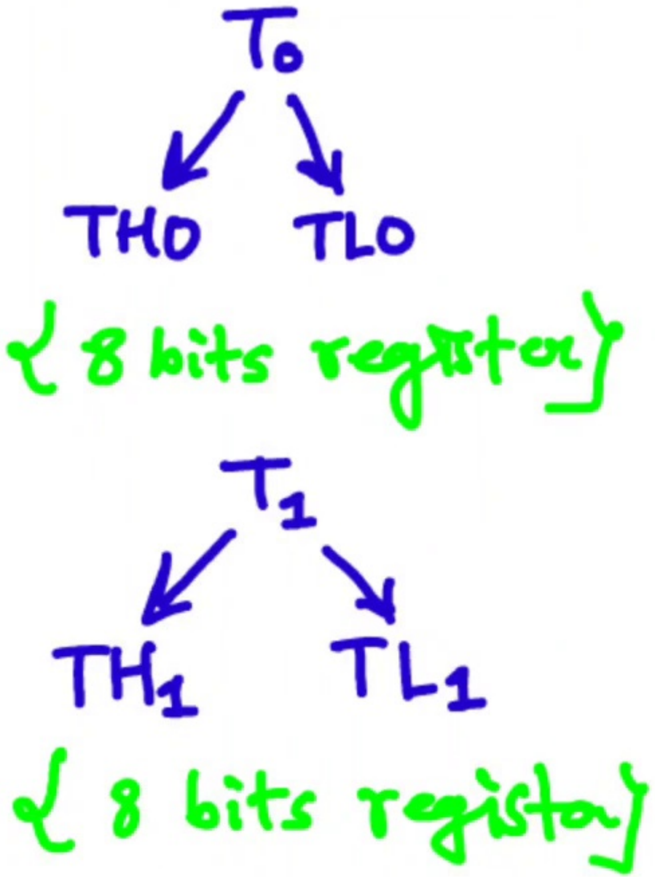

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

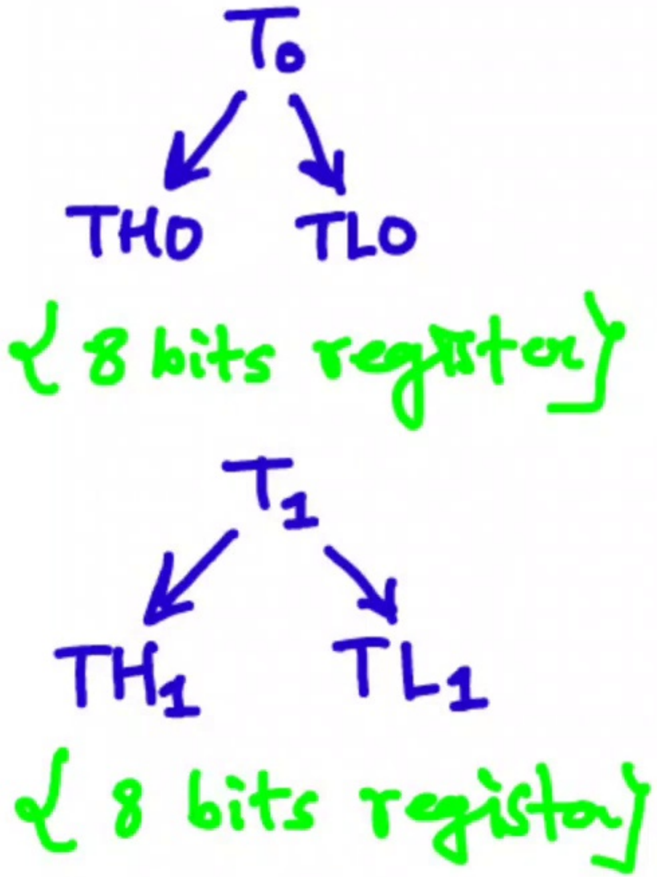

- ✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- ✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

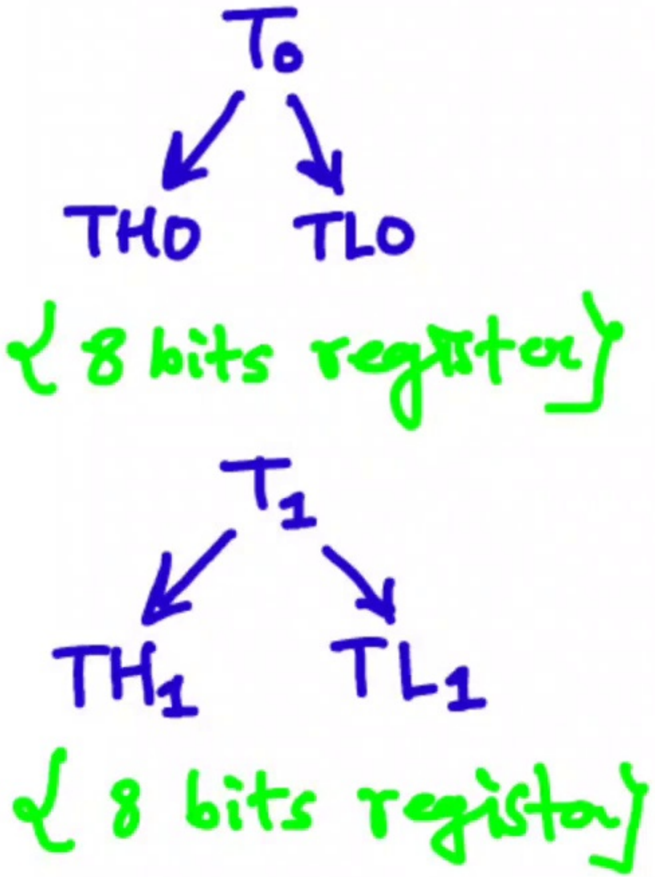

- ✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- ✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

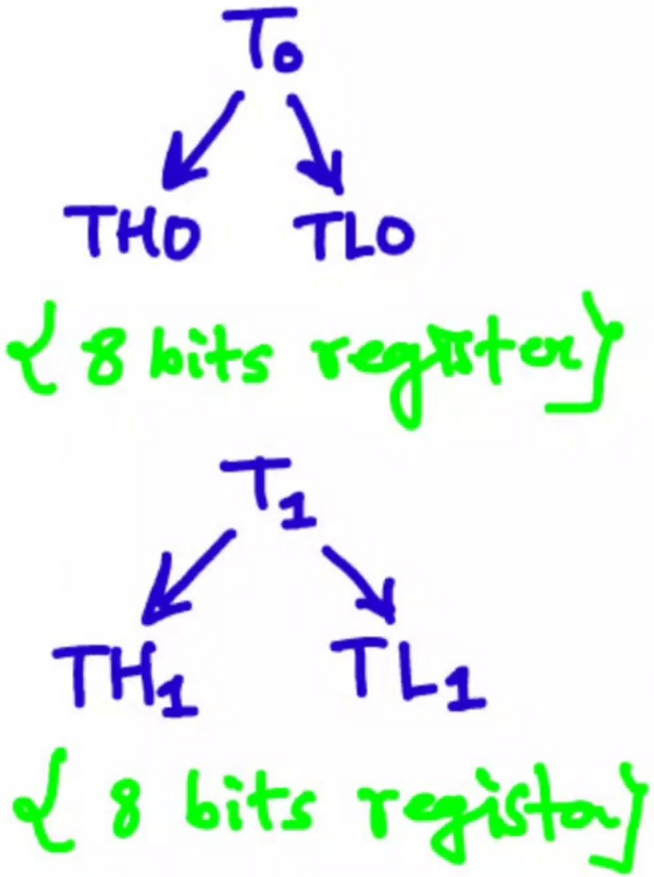

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

T_0

$TH0$ $TL0$

{ 8 bits register }

T_1

TH_1 TL_1

{ 8 bits register }

- TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

C/$\overline{T}$.

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

T_0

$TH0$ $TL0$

{ 8 bits register }

T_1

TH_1 TL_1

{ 8 bits register }

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

C/$\overline{T}$ = 1, Counter

C/$\overline{T}$ = 0, Timer

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

T_0

$TH0$ $TL0$

{ 8 bits register }

T_1

TH_1 TL_1

{ 8 bits register }

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

C/$\overline{T}$ = 1, Counter

C/$\overline{T}$ = 0, Timer

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

{ 8 bits register }

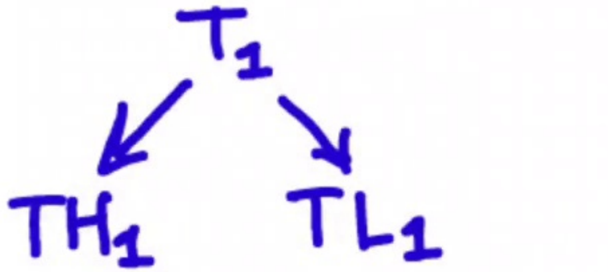

{ 8 bits register }

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

C/$\overline{T}$ = 1, Counter

C/$\overline{T}$ = 0, Timer

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

T_0

$TH0$ $TL0$

{ 8 bits register }

T_1

TH_1 TL_1

{ 8 bits register }

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

C/$\overline{T}$ = 1, Counter

C/$\overline{T}$ = 0, Timer

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

T_0

$TH0$ $TL0$

{ 8 bits register }

T_1

TH_1 TL_1

{ 8 bits register }

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

C/$\overline{T}$ = 1, Counter

C/$\overline{T}$ = 0, Timer

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

T_0

$TH0$ $TL0$

{ 8 bits register }

T_1

TH_1 TL_1

{ 8 bits register }

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

C/$\overline{T}$ = 1, Counter

C/$\overline{T}$ = 0, Timer

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

T_0

$TH0$ $TL0$

{ 8 bits register }

T_1

TH_1 TL_1

{ 8 bits register }

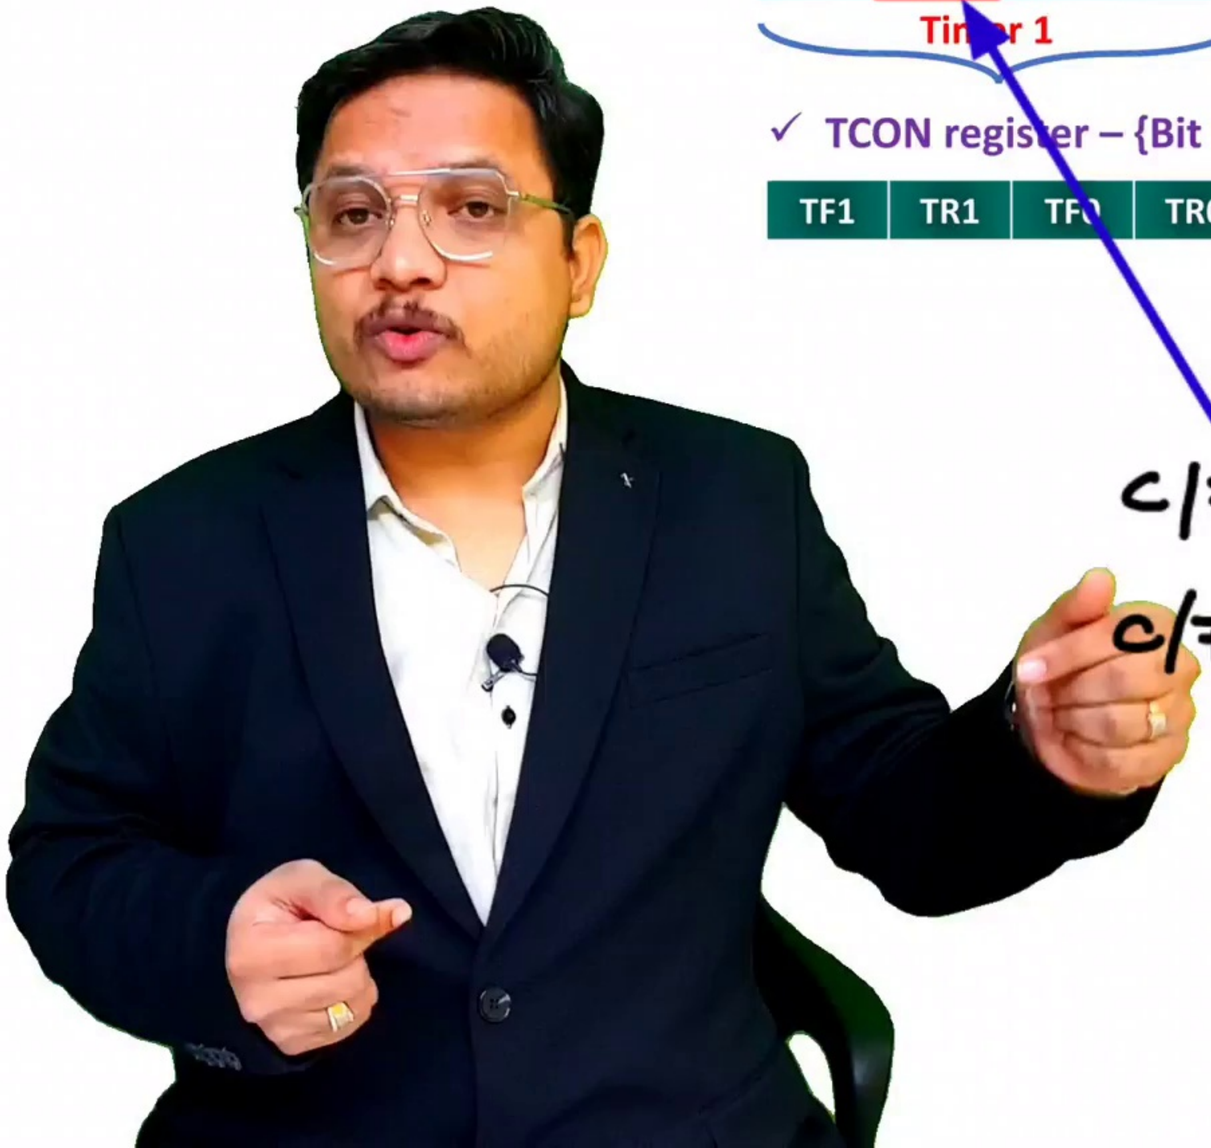

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

C/$\overline{T}$ = 1, Counter

C/$\overline{T}$ = 0, Timer

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

{ 8 bits register }

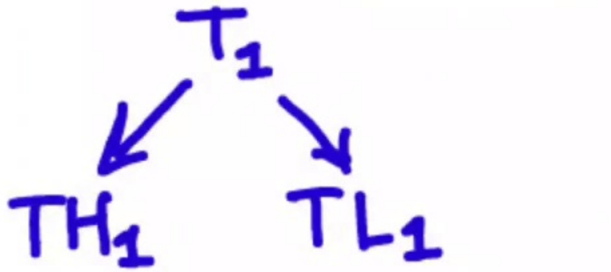

{ 8 bits register }

- ✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- ✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

C/$\overline{T}$ = 1, Counter

C/$\overline{T}$ = 0, Timer

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

T_0

$TH0$ $TL0$

{ 8 bits register }

T_1

TH_1 TL_1

{ 8 bits register }

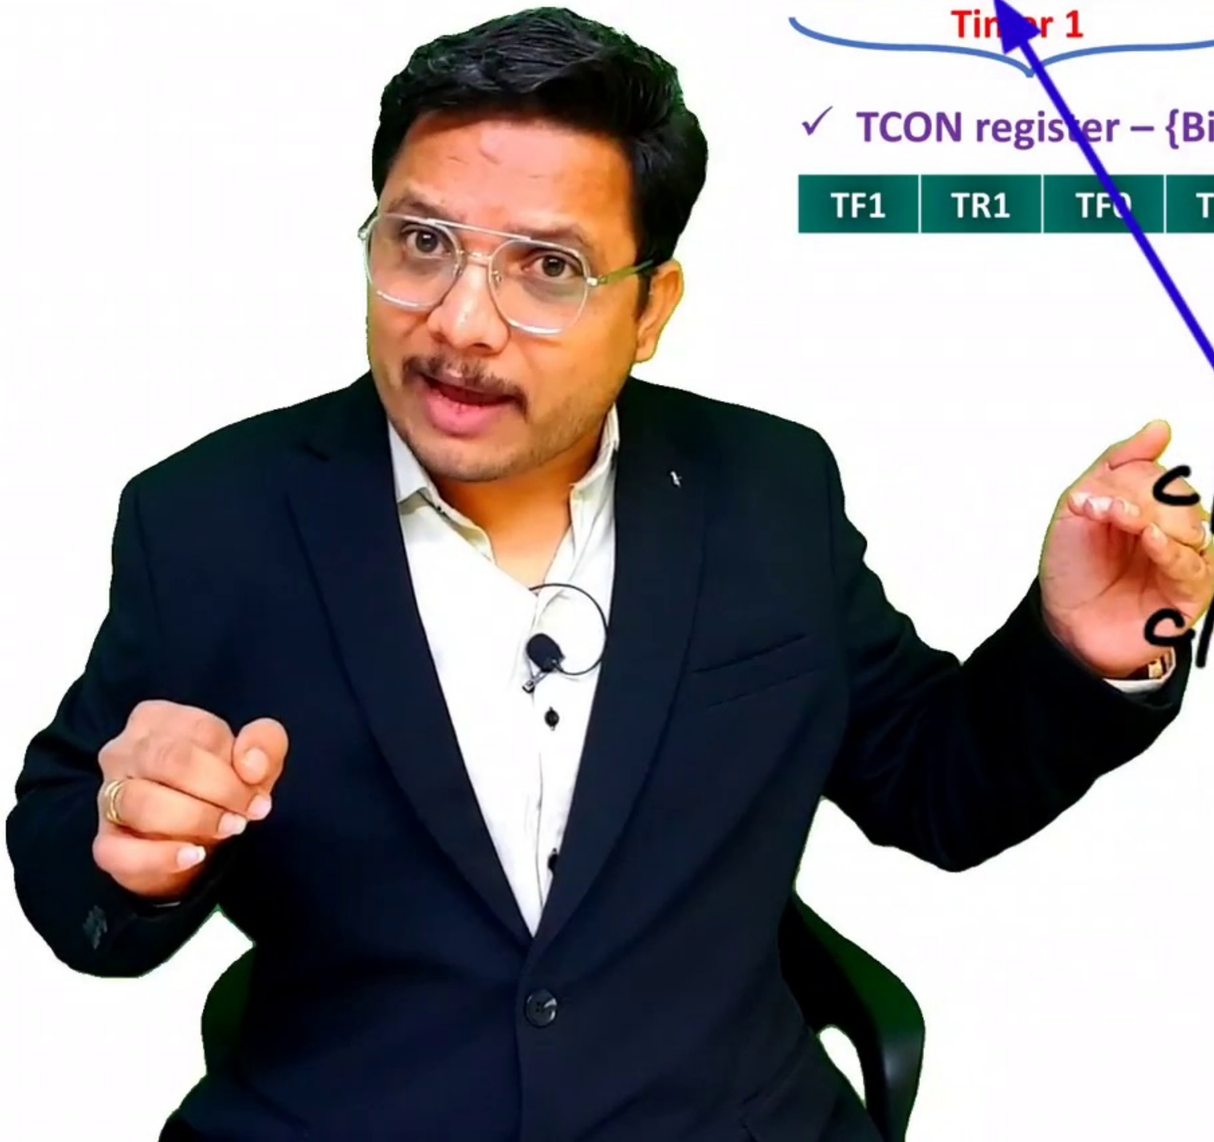

- TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

C/$\overline{T}$ = 1, Counter

C/$\overline{T}$ = 0, Timer

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

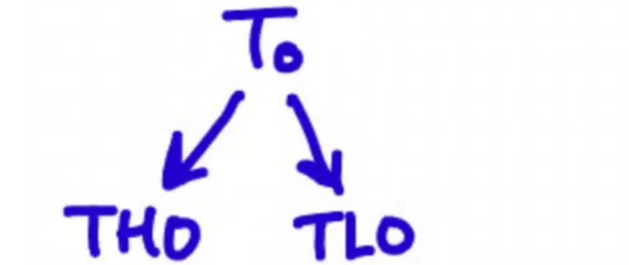

{ 8 bits register }

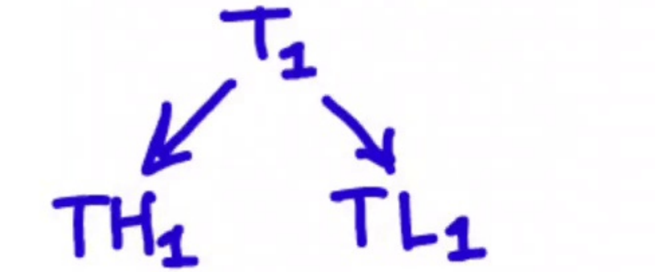

{ 8 bits register }

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

C/$\overline{T}$ = 1, Counter

C/$\overline{T}$ = 0, Timer

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

T_0

$TH0$ $TL0$

{ 8 bits register }

T_1

TH_1 TL_1

{ 8 bits register }

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

C/$\overline{T}$ = 1, Counter

C/$\overline{T}$ = 0, Timer

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

T_0

$TH0$ $TL0$

{ 8 bits register }

T_1

TH_1 TL_1

{ 8 bits register }

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
	Timer 1				Timer 0		

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

C/$\overline{T}$ = 1, Counter

C/$\overline{T}$ = 0, Timer

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

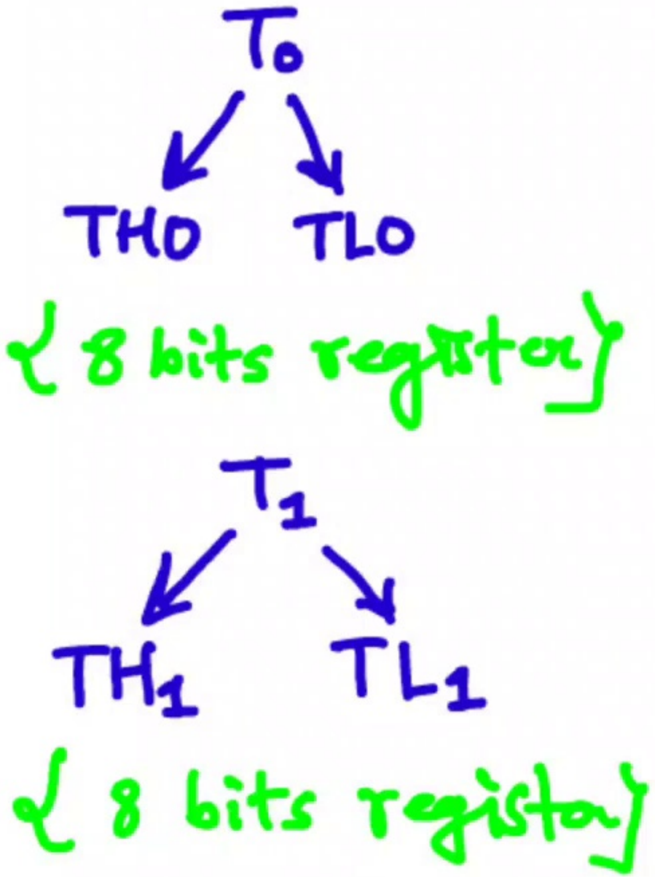

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

T_0

TH_0 TL_0

{ 8 bits register }

T_1

TH_1 TL_1

{ 8 bits register }

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

Mode selection bits m_0 & m_1

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

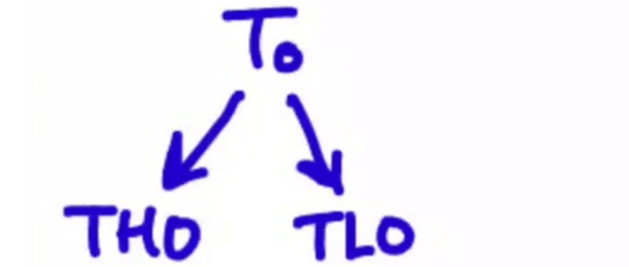

{ 8 bits register }

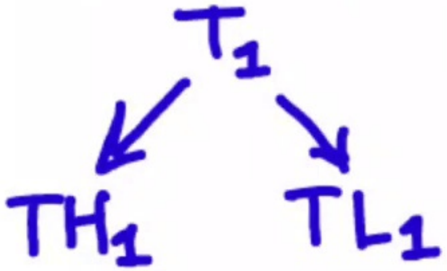

{ 8 bits register }

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

Mode selection bits M_0 & M_1

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

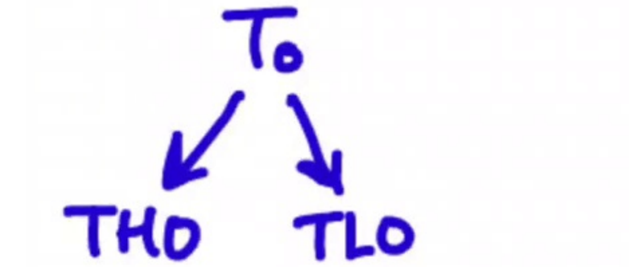

{ 8 bits register }

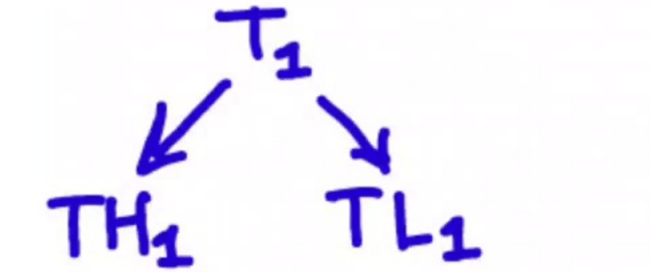

{ 8 bits register }

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

Mode selection bits M_0 & M_1

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

T_0

TH_0 TL_0

{ 8 bits register }

T_1

TH_1 TL_1

{ 8 bits register }

- ✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- ✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

Mode selection bits M_0 & M_1

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

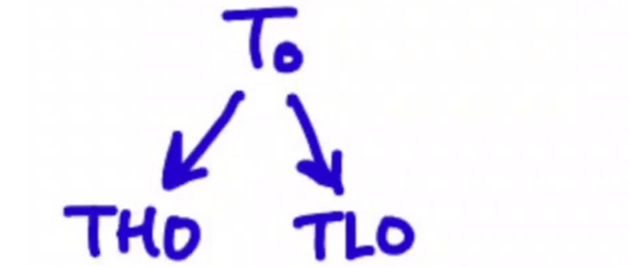

{ 8 bits register }

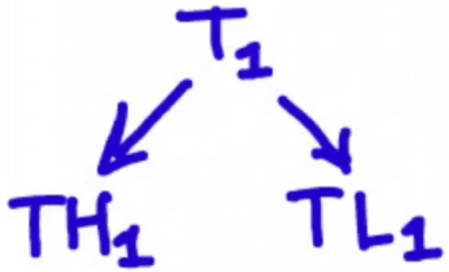

{ 8 bits register }

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

Mode selection bits m_0 & m_1

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

T_0

$TH0$ $TL0$

{ 8 bits register }

T_1

TH_1 TL_1

{ 8 bits register }

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

Mode selection bits m_0 & m_1

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

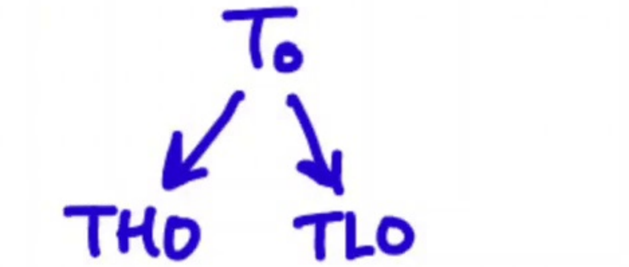

{ 8 bits register }

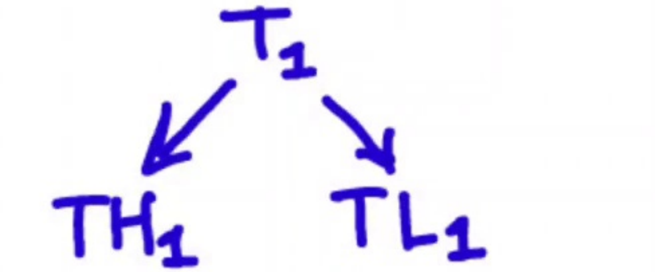

{ 8 bits register }

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

{ 8 bits register }

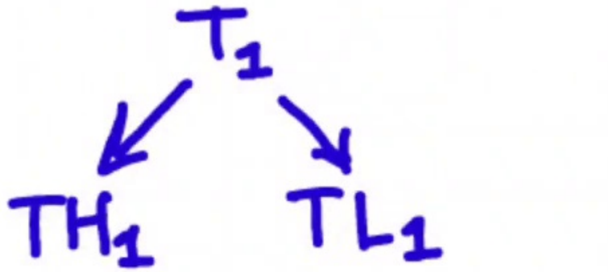

{ 8 bits register }

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

{ 8 bits register }

{ 8 bits register }

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

T_0

$TH0$ $TL0$

{ 8 bits register }

T_1

TH_1 TL_1

{ 8 bits register }

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

TR bit,

1 = Start

0 = Stop

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

T_0

$TH0$ $TL0$

{ 8 bits register }

T_1

TH_1 TL_1

{ 8 bits register }

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

TR bit,

1 = Start

0 = Stop

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

T_0

TH_0 TL_0

{ 8 bits register }

T_1

TH_1 TL_1

{ 8 bits register }

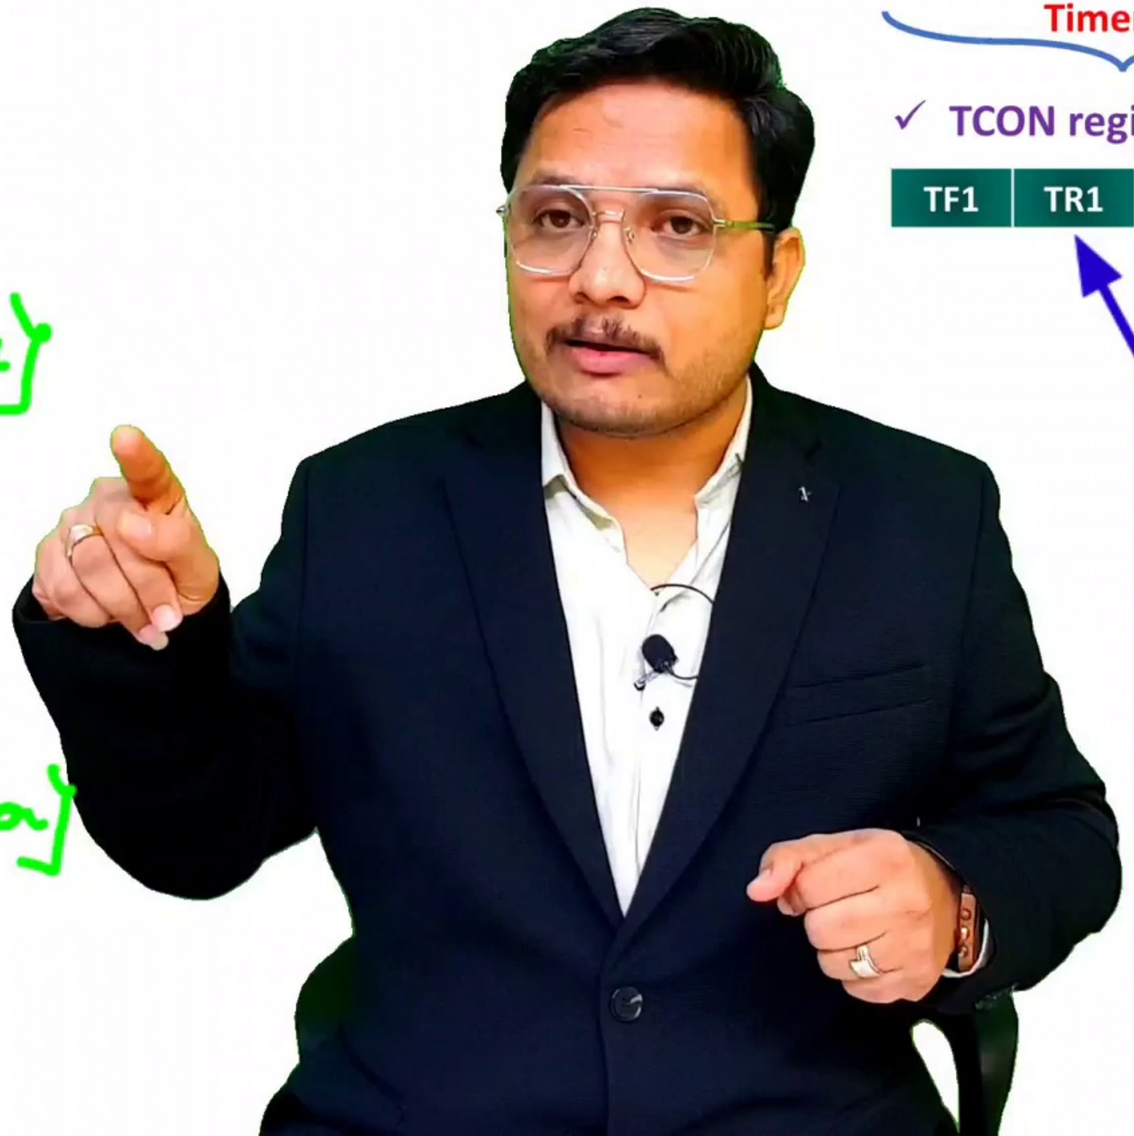

- ✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- ✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

TR bit,

1 = Start

0 = Stop

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

T_0

$TH0$ $TL0$

{ 8 bits register }

T_1

TH_1 TL_1

{ 8 bits register }

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

TR bit,

1 = Start

0 = Stop

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

T_0

$TH0$ $TL0$

{ 8 bits register }

T_1

TH_1 TL_1

{ 8 bits register }

- TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

TR bit,

1 = Start

0 = Stop

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

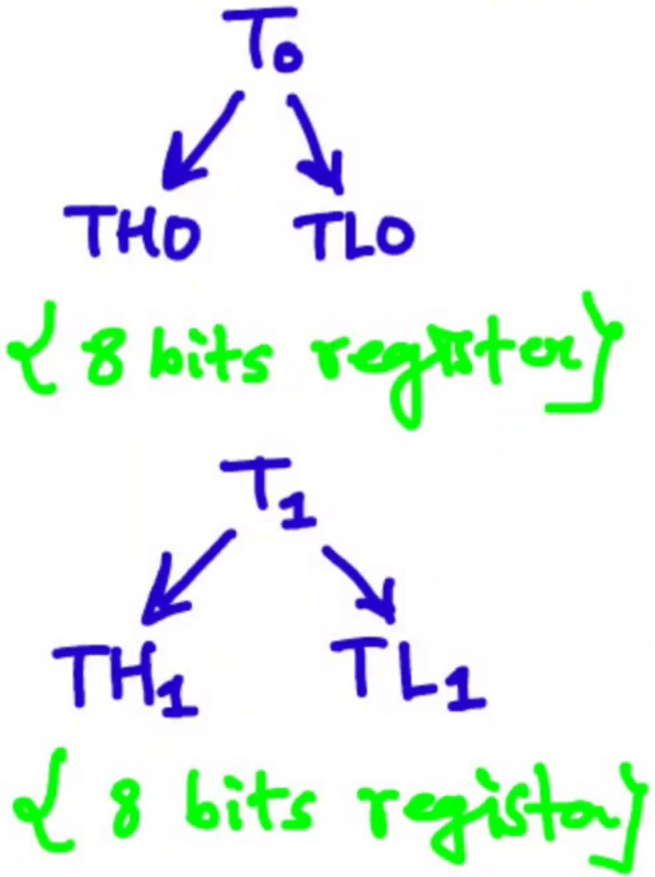

- ✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- ✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

T_0

$TH0$ $TL0$

{ 8 bits register }

T_1

TH_1 TL_1

{ 8 bits register }

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

Timer Overflow bit { Interrupt

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

T_0

$TH0$ $TL0$

{ 8 bits register }

T_1

TH_1 TL_1

{ 8 bits register }

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

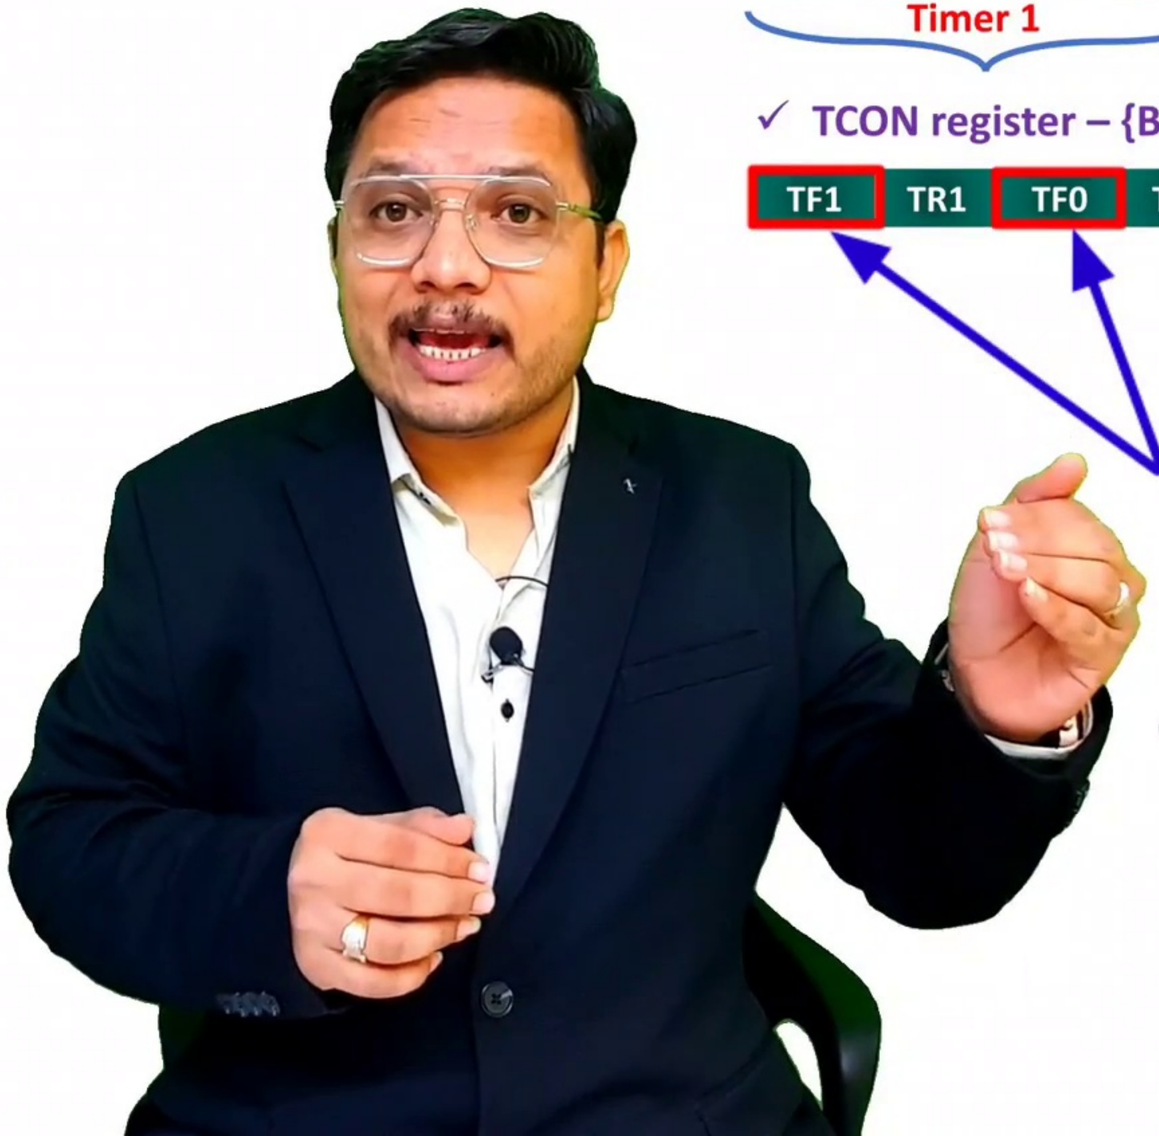

Timer Overflow bit { Interrupt on 8051 }

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

T_0

$TH0$ $TL0$

{ 8 bits register }

T_1

TH_1 TL_1

{ 8 bits register }

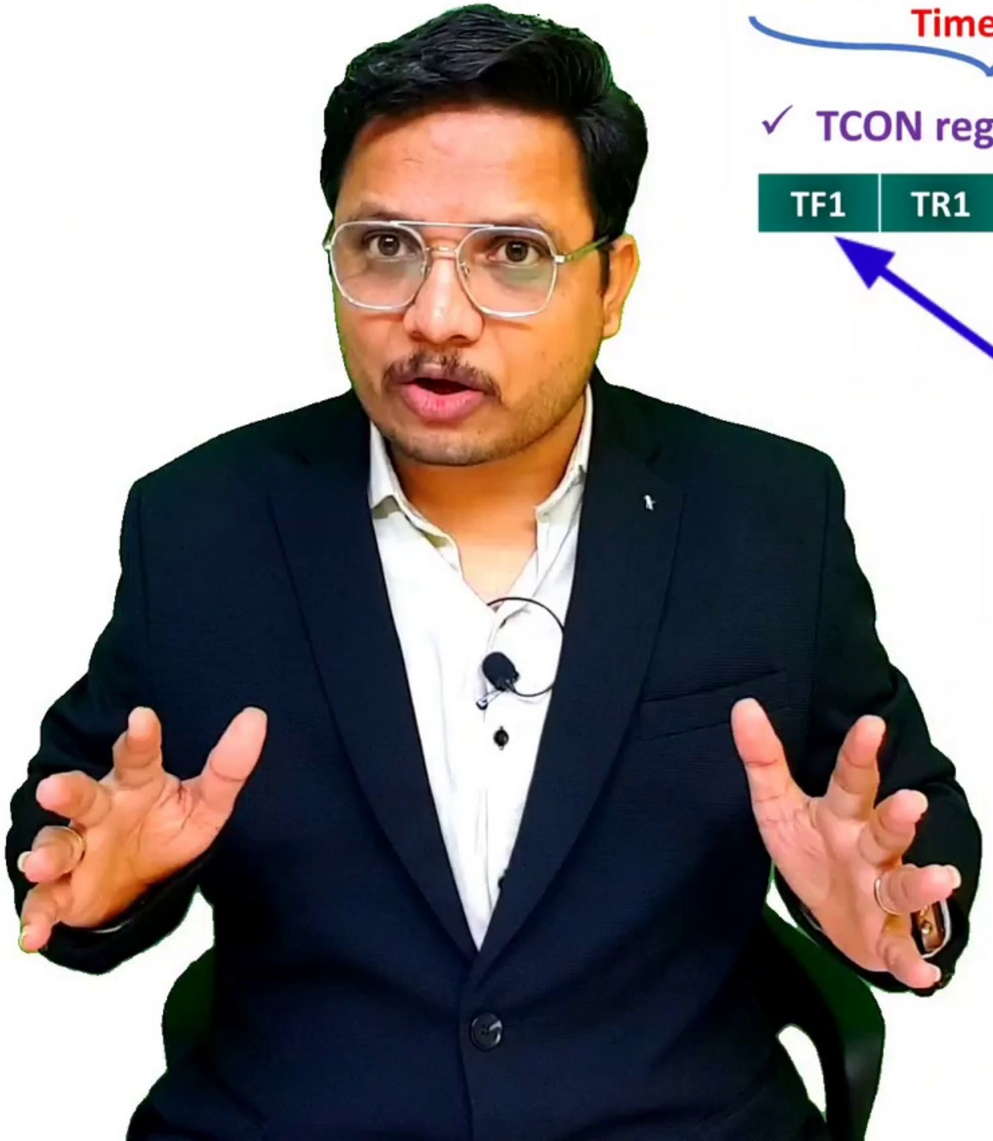

- ✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- ✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

Timer Overflow bit { Interrupt on 8051 }

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

T_0

$TH0$ $TL0$

{ 8 bits register }

T_1

TH_1 TL_1

{ 8 bits register }

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

Timer Overflow bit { Interrupt on 8051 }

Timer Programming in 8051 µC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

T_0

$TH0$ $TL0$

{ 8 bits register }

T_1

TH_1 TL_1

{ 8 bits register }

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

Timer Overflow bit { Interrupt on 8051 }

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

T_0

$TH0$ $TL0$

{ 8 bits register }

T_1

TH_1 TL_1

{ 8 bits register }

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

Timer Overflow bit { Interrupt on 8051 }

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

T_0

$TH0$ $TL0$

{ 8 bits register }

T_1

TH_1 TL_1

{ 8 bits register }

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

Timer Overflow bit { Interrupt on 8051 }

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 μSec and send logic 1 on P2.0. Assume Fosc = 12MHz

T_0

$TH0$ $TL0$

{ 8 bits register }

T_1

TH_1 TL_1

{ 8 bits register }

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

Timer Overflow bit { Interrupt on 8051 }

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H

- As timer is up counter actual value should be loaded will be

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be

Count = FFFFH – 14H + 1 = FFECH

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be

  Count = FFFFH – 14H + 1 = FFECH

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be

  Count = FFFFH – 14H + 1 = FFECH

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be

  Count = FFFFH – 14H + 1 = FFECH

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be

  Count = FFFFH – 14H + 1 = FFECH

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of C
- As timer is u
  Count = FF
- TL0 = ECH ar

```
MOV TMOD, #00000001B     ;Timer 0 Mode 1
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

```
MOV TMOD, #00000001B     ;Timer 0 Mode 1
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

```
MOV TMOD, #00000001B     ;Timer 0 Mode 1
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

```
MOV TMOD, #00000001B     ;Timer 0 Mode 1
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

```
MOV TMOD, #00000001B     ;Timer 0 Mode 1
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

```
MOV TMOD, #00000001B     ;Timer 0 Mode 1
MOV TL0, #ECH
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

```
MOV TMOD, #00000001B    ;Timer 0 Mode 1
MOV TL0, #ECH
MOV TH0, #FFH           ;Count 20 = 14H
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

```
MOV TMOD, #00000001B    ;Timer 0 Mode 1
MOV TL0, #ECH
MOV TH0, #FFH           ;Count 20 = 14H
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

```
MOV TMOD, #00000001B    ;Timer 0 Mode 1
MOV TL0, #ECH
MOV TH0, #FFH           ;Count 20 = 14H
MOV TCON, #00010000B    ;Start Timer
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

```
MOV TMOD, #00000001B    ;Timer 0 Mode 1
MOV TL0, #ECH
MOV TH0, #FFH           ;Count 20 = 14H
MOV TCON, #00010000B    ;Start Timer
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

```
MOV TMOD, #00000001B    ;Timer 0 Mode 1
MOV TL0, #ECH
MOV TH0, #FFH           ;Count 20 = 14H
MOV TCON, #00010000B    ;Start Timer
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

```
MOV TMOD, #00000001B    ;Timer 0 Mode 1
MOV TL0, #ECH
MOV TH0, #FFH           ;Count 20 = 14H
MOV TCON, #00010000B    ;Start Timer
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

```
MOV TMOD, #00000001B    ;Timer 0 Mode 1
MOV TL0, #ECH
MOV TH0, #FFH           ;Count 20 = 14H
MOV TCON, #00010000B    ;Start Timer
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

```
MOV TMOD, #00000001B    ;Timer 0 Mode 1
MOV TL0, #ECH
MOV TH0, #FFH           ;Count 20 = 14H
MOV TCON, #00010000B    ;Start Timer
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

```
        MOV TMOD, #00000001B    ;Timer 0 Mode 1
        MOV TL0, #ECH
        MOV TH0, #FFH           ;Count 20 = 14H
        MOV TCON, #00010000B    ;Start Timer
Wait:   JNB TCON.5, Wait        ;wait for 20µSec
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

```
        MOV TMOD, #00000001B    ;Timer 0 Mode 1
        MOV TL0, #ECH
        MOV TH0, #FFH           ;Count 20 = 14H
        MOV TCON, #00010000B    ;Start Timer
Wait:   JNB TCON.5, Wait        ;wait for 20µSec
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

```
        MOV TMOD, #00000001B    ;Timer 0 Mode 1
        MOV TL0, #ECH
        MOV TH0, #FFH           ;Count 20 = 14H
        MOV TCON, #00010000B    ;Start Timer
Wait:   JNB TCON.5, Wait        ;wait for 20µSec
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

```
        MOV TMOD, #00000001B    ;Timer 0 Mode 1
        MOV TL0, #ECH
        MOV TH0, #FFH           ;Count 20 = 14H
        MOV TCON, #00010000B    ;Start Timer
Wait:   JNB TCON.5, Wait        ;wait for 20µSec
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

```
        MOV TMOD, #00000001B    ;Timer 0 Mode 1
        MOV TL0, #ECH
        MOV TH0, #FFH           ;Count 20 = 14H
        MOV TCON, #00010000B    ;Start Timer
Wait:   JNB TCON.5, Wait        ;wait for 20µSec
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

```
        MOV TMOD, #00000001B    ;Timer 0 Mode 1
        MOV TL0, #ECH
        MOV TH0, #FFH           ;Count 20 = 14H
        MOV TCON, #00010000B    ;Start Timer
Wait:   JNB TCON.5, Wait        ;wait for 20µSec
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

```
        MOV TMOD, #00000001B    ;Timer 0 Mode 1
        MOV TL0, #ECH
        MOV TH0, #FFH           ;Count 20 = 14H
        MOV TCON, #00010000B    ;Start Timer
Wait:   JNB TCON.5, Wait        ;wait for 20µSec
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

```
        MOV TMOD, #00000001B    ;Timer 0 Mode 1
        MOV TL0, #ECH
        MOV TH0, #FFH           ;Count 20 = 14H
        MOV TCON, #00010000B    ;Start Timer
Wait:   JNB TCON.5, Wait        ;wait for 20µSec
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

```
        MOV TMOD, #00000001B    ;Timer 0 Mode 1
        MOV TL0, #ECH
        MOV TH0, #FFH           ;Count 20 = 14H
        MOV TCON, #00010000B    ;Start Timer
Wait:   JNB TCON.5, Wait        ;wait for 20µSec

        SETB P2.0               ;logic '1' on P2.0
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

```
        MOV TMOD, #00000001B    ;Timer 0 Mode 1
        MOV TL0, #ECH
        MOV TH0, #FFH           ;Count 20 = 14H
        MOV TCON, #00010000B    ;Start Timer
Wait:   JNB TCON.5, Wait        ;wait for 20µSec
        SETB P2.0               ;logic '1' on P2.0
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

```
        MOV TMOD, #00000001B    ;Timer 0 Mode 1
        MOV TL0, #ECH
        MOV TH0, #FFH           ;Count 20 = 14H
        MOV TCON, #00010000B    ;Start Timer
Wait:   JNB TCON.5, Wait        ;wait for 20µSec
        SETB P2.0               ;logic '1' on P2.0
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

```
        MOV TMOD, #00000001B    ;Timer 0 Mode 1
        MOV TL0, #ECH
        MOV TH0, #FFH           ;Count 20 = 14H
        MOV TCON, #00010000B    ;Start Timer
Wait:   JNB TCON.5, Wait        ;wait for 20µSec
        SETB P2.0               ;logic '1' on P2.0

        MOV TCON, #00000000B    ;Stop Timer
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

```
        MOV TMOD, #00000001B    ;Timer 0 Mode 1
        MOV TL0, #ECH
        MOV TH0, #FFH           ;Count 20 = 14H
        MOV TCON, #00010000B    ;Start Timer
Wait:   JNB TCON.5, Wait        ;wait for 20µSec
        SETB P2.0               ;logic '1' on P2.0
        MOV TCON, #00000000B    ;Stop Timer
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

```
        MOV TMOD, #00000001B    ;Timer 0 Mode 1
        MOV TL0, #ECH
        MOV TH0, #FFH           ;Count 20 = 14H
        MOV TCON, #00010000B    ;Start Timer
Wait:   JNB TCON.5, Wait        ;wait for 20µSec
        SETB P2.0               ;logic '1' on P2.0
        MOV TCON, #00000000B    ;Stop Timer
Here:   SJMP Here               ;End of Program
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

```
        MOV TMOD, #00000001B    ;Timer 0 Mode 1
        MOV TL0, #ECH
        MOV TH0, #FFH           ;Count 20 = 14H
        MOV TCON, #00010000B    ;Start Timer
Wait:   JNB TCON.5, Wait        ;wait for 20µSec
        SETB P2.0               ;logic '1' on P2.0
        MOV TCON, #00000000B    ;Stop Timer
Here:   SJMP Here               ;End of Program
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

```
        MOV TMOD, #00000001B    ;Timer 0 Mode 1
        MOV TL0, #ECH
        MOV TH0, #FFH           ;Count 20 = 14H
        MOV TCON, #00010000B    ;Start Timer
Wait:   JNB TCON.5, Wait        ;wait for 20µSec
        SETB P2.0               ;logic '1' on P2.0
        MOV TCON, #00000000B    ;Stop Timer
Here:   SJMP Here               ;End of Program
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

```
        MOV TMOD, #00000001B    ;Timer 0 Mode 1
        MOV TL0, #ECH
        MOV TH0, #FFH           ;Count 20 = 14H
        MOV TCON, #00010000B    ;Start Timer
Wait:   JNB TCON.5, Wait        ;wait for 20µSec
        SETB P2.0               ;logic '1' on P2.0
        MOV TCON, #00000000B    ;Stop Timer
Here:   SJMP Here               ;End of Program
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCON.0}

TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0

✓ TMOD register – Timer Mode Control register

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	M0
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMOD = 0000 0001B
- To start Timer 0 with mode 1, TCON = 0001 0000B
- To stop time 0 with mode 1, TCON = 0000 0000B

- To calculate Count, one count time = 12/Fosc = 1µSec.
- So value of Count = 20 = 14H
- As timer is up counter actual value should be loaded will be
  Count = FFFFH – 14H + 1 = FFECH
- TL0 = ECH and TH0 = FFH, to be loaded for delay of 20µSec.

```
        MOV TMOD, #00000001B    ;Timer 0 Mode 1
        MOV TL0, #ECH
        MOV TH0, #FFH           ;Count 20 = 14H
        MOV TCON, #00010000B    ;Start Timer
Wait:   JNB TCON.5, Wait        ;wait for 20µSec
        SETB P2.0               ;logic '1' on P2.0
        MOV TCON, #00000000B    ;Stop Timer
Here:   SJMP Here               ;End of Program
```

Timer Programming in 8051 μC

- Write a program to Generate delay of 20 µSec and send logic 1 on P2.0. Assume Fosc = 12MHz

✓ TCON register – {Bit Address TCON.7 to TCO

TF1	TR1	TF0	TR0	IE1	IT1	IE0	

✓ TMOD register – Timer Mode Control regis

GATE	C/$\overline{T}$	M1	M0	GATE	C/$\overline{T}$	M1	
Timer 1				Timer 0			

- For Timer 0 with Mode 1 as 16 bits timer, TMO
- To start Timer 0 with mode 1, TCON = 0001 00
- To stop time 0 with mode 1, TCON = 0000 00

- To calculate Count, one count time = 12/
- So value of C
- As timer is u
  Count = FF
- TL0 = ECH ar

```
MOV TMOD, #00000001B    ;Timer 0 Mode 1
MOV TL0, #ECH
MOV TH0, #FFH           ;Count 20 = 14H
MOV TCON, #00010000B    ;Start Timer
JNB TCON.5, Wait        ;wait for 20µSec
SETB P2.0               ;logic '1' on P2.0
MOV TCON, #00000000B    ;Stop Timer
   Here                 ;End of Program
```