
The APM lets you model a given manufacturing area. The first thing you should do is to create a "Physical Area" in the APM:

1. Go to "Implantation / Physical Areas"

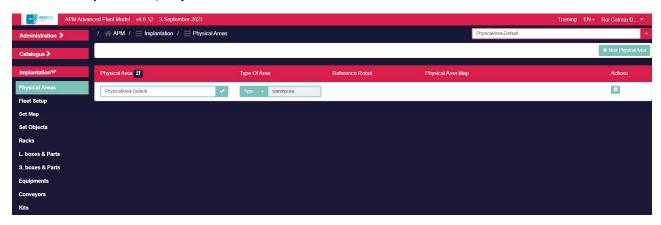

2. Press "New Physical Area" button (top right in the above screen)




- Supply an identifier (e.g. IILAB)
- Specify the **type** (warehouse or assembly line)
- Specify the width and height (meters) of the physical area
- Press "Save changes"
- Confirm the creation of the physical area (press the combo box on the top right).



• Select it so that you start modelling this new physical area.



- In case this is the first physical area you create, please remove the physical area with the name 'PhysicalArea-Default'
- Go to "Implantation / Set Objects". This is the place where you will implant objects on the Physical Area.

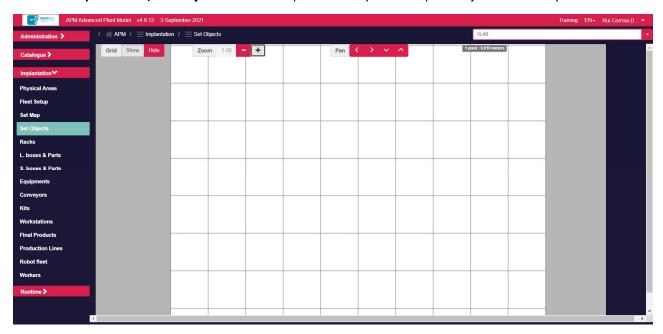

The grid is configured to show 1 x 1 meters of area.

You can zoom in or zoom out by pressing the Zoom button.

You can move in the area by pressing the fours Pan buttons.