

# Energy & Heat Transfer

## Lecture 2

*By: Mohammad Mehrali*

# LECTORIAL

- Lectorial : Friday, 10 September 2021, 13:45 - 15:30

Group	Friday 10-09-2021 13:45-15:30 13:45-15:30	Thursday 16-09-2021 13:45-15:30 13:45-15:30	Thursday 23-09-21 10:45-12:30 10:45-12:30	Thursday 30-09-21 08:45-10:30 08:45-10:30	Thursday 07-10-21 13:45-15:30 13:45-15:30	Thursday 14-01-21 13:45-15:30 13:45-15:30
1	CR2K	CR2K	RA2334	OH113	CR2K	CR2K
2	CR3C	CR3C	RA2334	OH115	CR3C	CR3C
3	CR2K	CR2K	RA2334	OH113	CR2K	CR2K
4	CR3C	CR3C	RA2334	OH115	CR3C	CR3C
5	CR2K	CR2K	RA2334	OH113	CR2K	CR2K
6	CR3C	CR3C	RA2334	OH115	CR3C	CR3C
7	CR2K	CR2K	RA2334	OH113	CR2K	CR2K
8	CR3C	CR3C	RA2334	OH115	CR3C	CR3C
9	CR2K	CR2K	RA2334	OH113	CR2K	CR2K
10	CR3C	CR3C	RA2334	OH115	CR3C	CR3C
11	CR2K	CR2K	RA2334	OH113	CR2K	CR2K
12	CR3C	CR3C	RA2334	OH115	CR3C	CR3C
13	CR2K	CR2K	RA2334	OH113	CR2K	CR2K
14	CR3C	CR3C	RA2334	OH115	CR3C	CR3C
15	CR2K	CR2K	RA2334	OH113	CR2K	CR2K
16	CR3C	CR3C	RA2334	OH115	CR3C	CR3C
17	CR2K	CR2K	RA2334	OH113	CR2K	CR2K
18	CR3C	CR3C	RA2334	OH115	CR3C	CR3C
19	CR2K	CR2K	RA2334	OH113	CR2K	CR2K
20	CR3C	CR3C	RA2334	OH115	CR3C	CR3C
21	CR2K	CR2K	RA2334	OH113	CR2K	CR2K
22	CR3C	CR3C	RA2334	OH115	CR3C	CR3C
23	CR2K	CR2K	RA2334	OH113	CR2K	CR2K
24	CR3C	CR3C	RA2334	OH115	CR3C	CR3C
25	CR2K	CR2K	RA2334	OH113	CR2K	CR2K
32	CR3C	CR3C	RA2334	OH115	CR3C	CR3C
EHT	CR3C	CR3C	RA2334	OH115	CR3C	CR3C

# RECAP OF LECTURE 1



- Work (W), energy (E), power (P)
- Work ( $W$ ), Energy ( $E$ ) in  $J = N \cdot m = \frac{kg \cdot m}{s^2} \cdot m$
- Power :  $P = \frac{\Delta E}{\Delta t}$  in Watt (W) = J / s
- Units kWh, kcal, hp, ....

# RECAP OF LECTURE 1



- Potential energy :  $E = F \cdot h$
  - Thermal energy :  $Q = m \cdot c \cdot \Delta T$ 
    - $c$  is specific heat capacity in J / (kg · K)
  - Electrical power:  $P = U \cdot I$ 
    - Electrical energy:  $E = P \cdot t = U \cdot I \cdot t$
    - Ohm's law:  $U = I \cdot R$
- $$\left. \begin{array}{l} P = I^2 \cdot R \\ E = I^2 \cdot R \cdot t \end{array} \right\}$$

# LEARNING OBJECTIVES LECTURE 2



- Energy in general**
  - Using an energy balance
  - Determine efficiency
  - Calculate losses for electric resistors
  
- Conductive heat transfer**
  - Explaining conduction principles*
  - Calculate conductive heat transfer*
  - Using thermal resistances and insulation values*

# LEARNING OBJECTIVES LECTURE 2



- Energy in general

- Using an energy balance

- Determine efficiency

- Calculate losses for electric resistors

- Conductive heat transfer

- *Explaining* conduction principles

- *Calculate* conductive heat transfer


- *Using thermal resistances* and insulation values

# ENERGY BALANCE



- Energy is always conserved!


- First law of Thermodynamics:

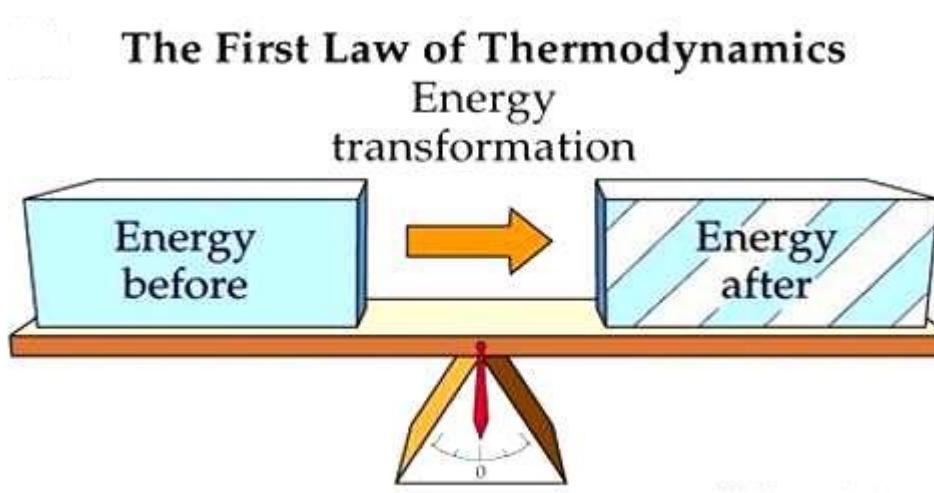

- <https://www.youtube.com/watch?v=d4K6ATZSJwk>


# ENERGY BALANCE

- Sankey diagram light bulb

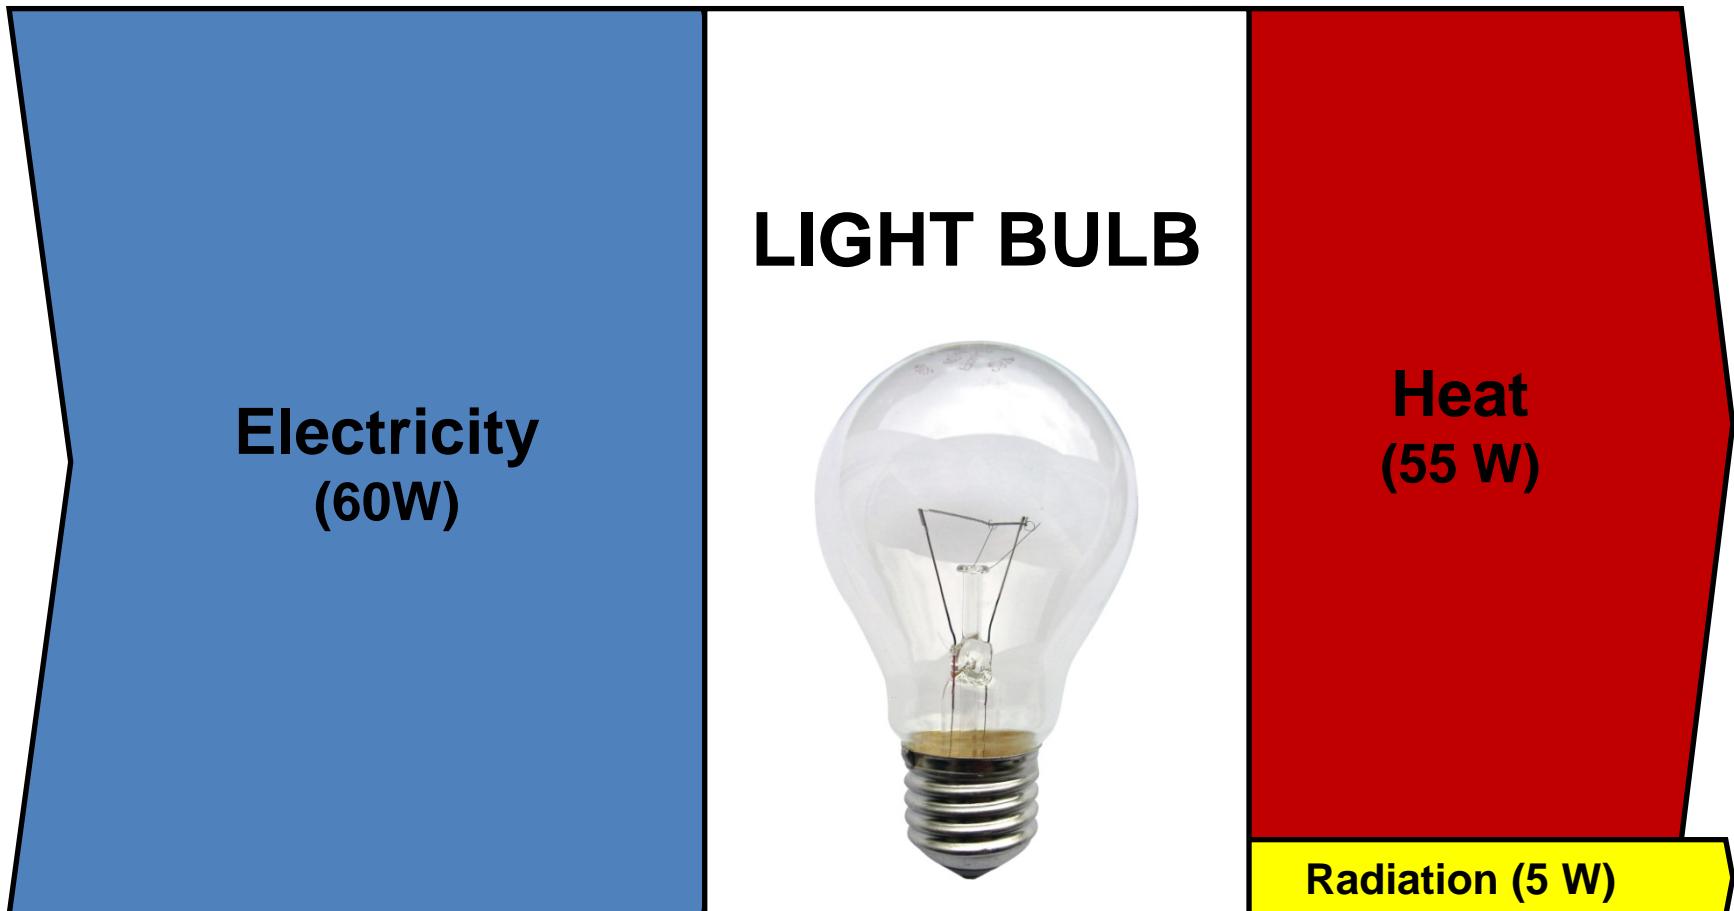

# ENERGY BALANCE

---

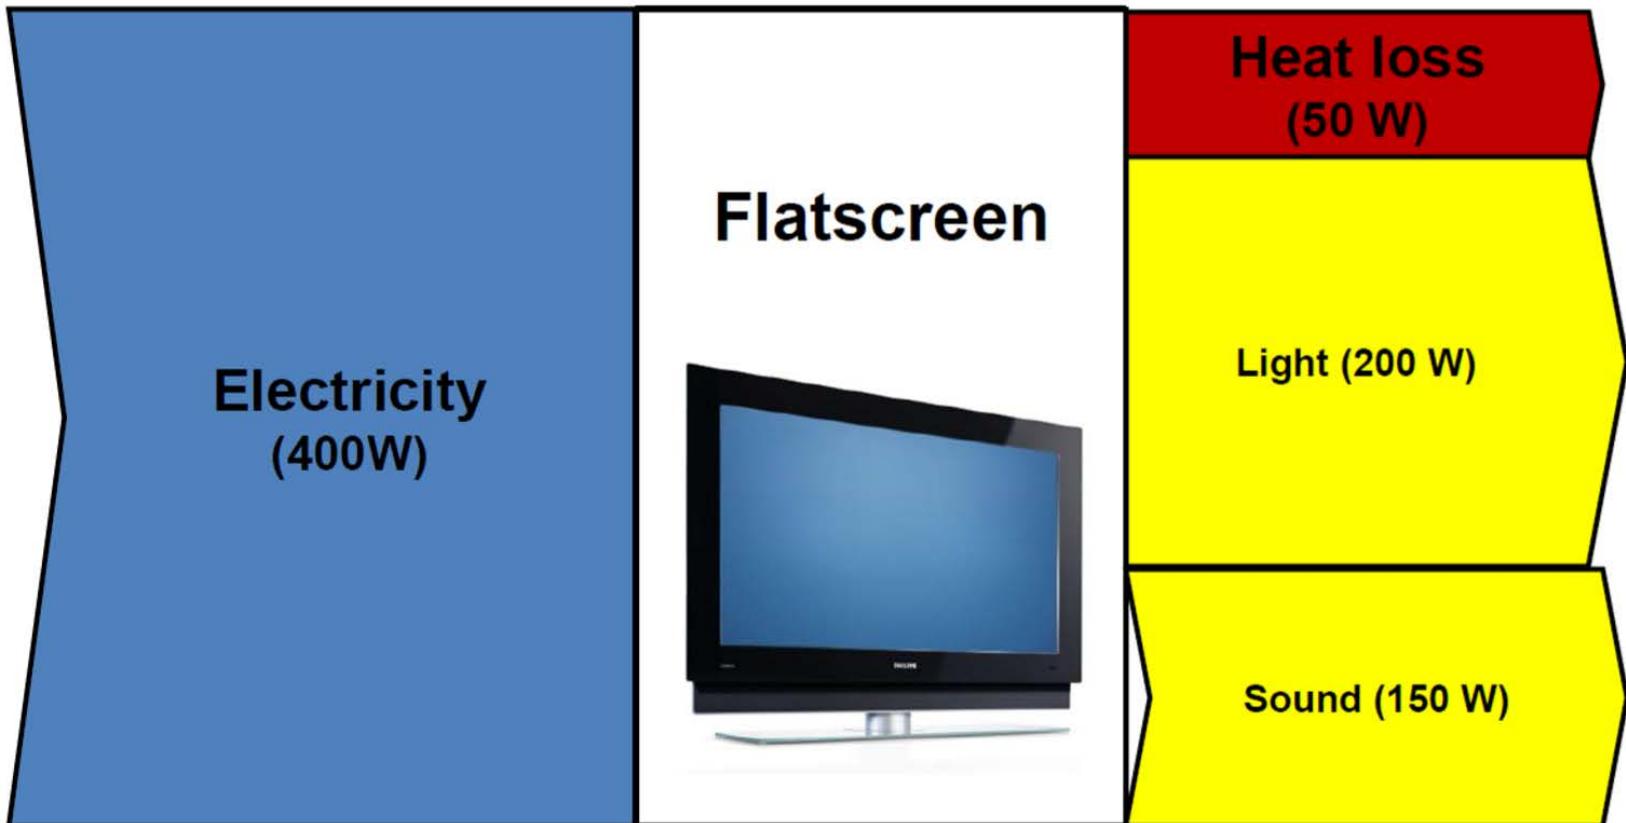


# ENERGY BALANCE

---



# ENERGY BALANCE

---

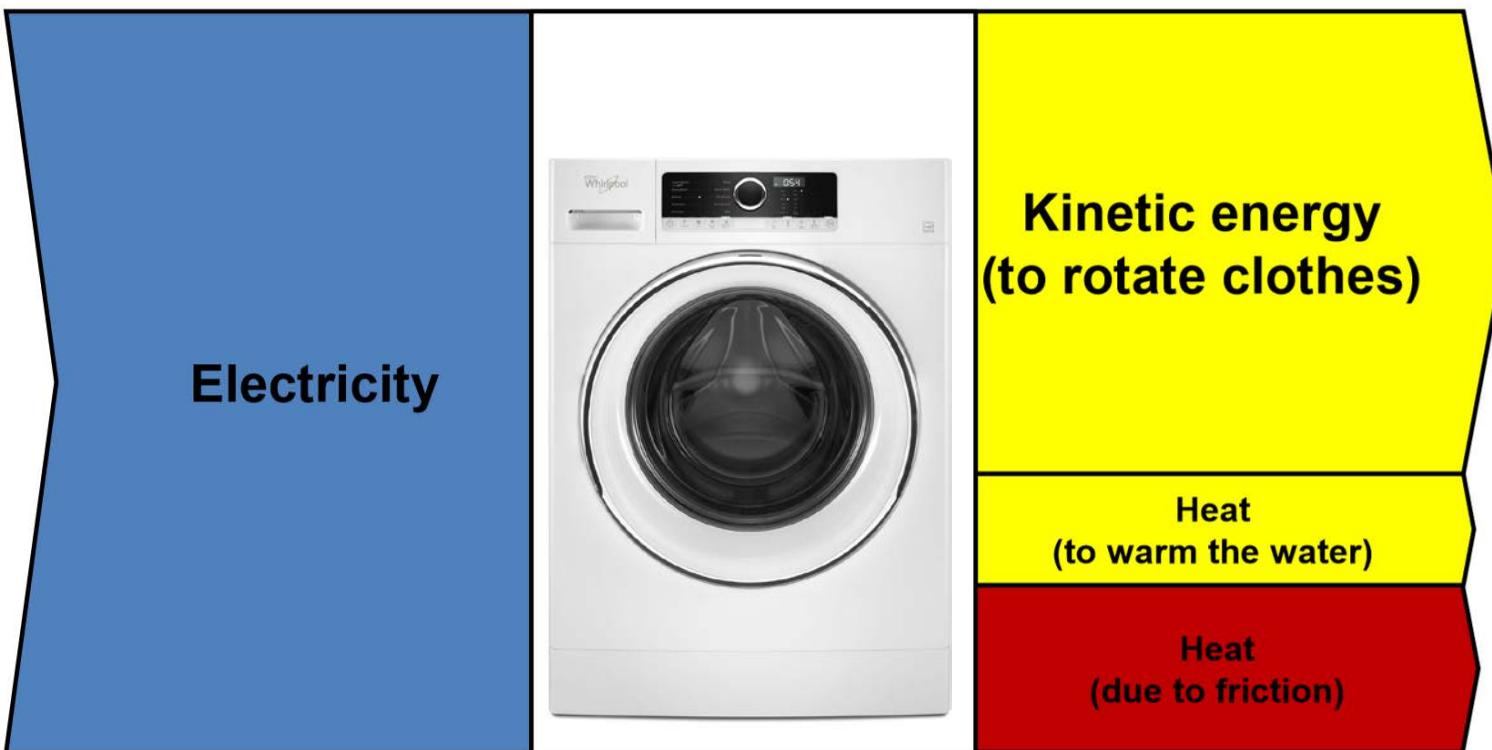

# LEARNING OBJECTIVES LECTURE 2



- **Energy in general**
  - Using an energy balance
  - **Determine efficiency**
  - Calculate losses for electric resistors
  
- **Conductive heat transfer**
  - *Explaining conduction principles*
  - *Calculate conductive heat transfer*
  - *Using thermal resistances and insulation values*

# EFFICIENCY




- Efficiency = fraction of “useful” work/power used
  - What is defined as useful?
  - What is the reference?
- Efficiency  $\eta = \frac{\text{useful work}}{\text{input energy}} = \frac{\text{useful power}}{\text{input power}}$  (-)
- Use a Sankey diagram!

# EFFICIENCY

Efficiency definition not clear:

- What is useful? What is the input? Give the reasons for the choices made

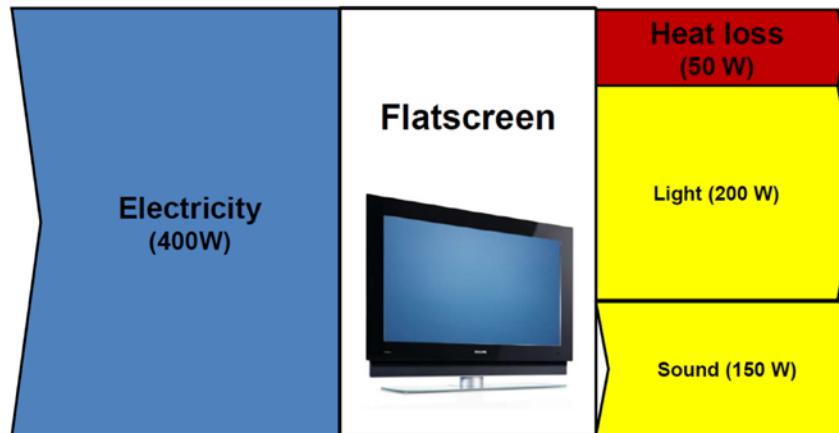

Flatscreen: useful spent power?

So always explain how you have defined efficiency!


# EFFICIENCY – PRACTICAL VALUES



Product	Efficiency	Remark
Solar panel	12%	Part of sun's radiation converted to electricity
Vacuum cleaner	20%	Part of electrical power converted to suction power
Petrol engine	35%	Part of chemical energy converted to kinetic energy
Electric kettle	84%	Part of electrical energy converted to useful heat in the water

Always state the used definition when talking about efficiency


# Solar panel efficiency

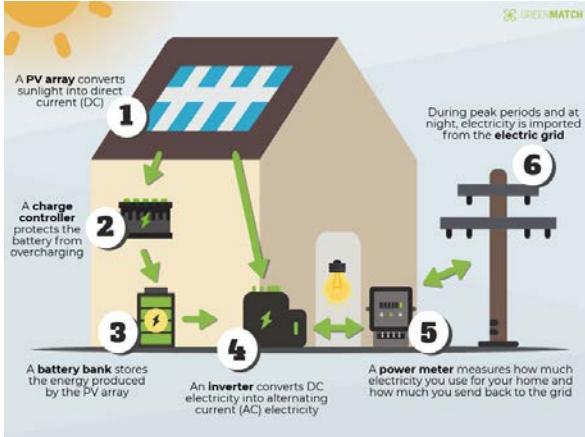

PV System



Solar-Thermal System

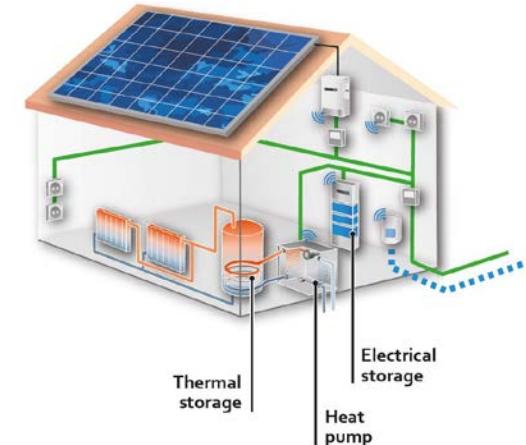

PV-T System

Part of sun's radiation converted to .....

Solar Collector	Efficiency	Remark
PV	$\approx 12\%$	Part of sun's radiation converted to electricity
Solar-Thermal	$\approx 30 - 45 \%$ .	Part of sun's radiation converted to heat
PV-T	$\approx 30\%$	Part of sun's radiation converted to heat and electricity

# LEARNING OBJECTIVES LECTURE 2



## ● Energy in general

- Using an energy balance
- Determine efficiency
- Calculate losses for electric resistors

## ● Conductive heat transfer

- *Explaining* conduction principles
- *Calculate* conductive heat transfer
- *Using thermal resistances* and insulation values

# RESISTORS

Electric resistors: barrier in electric circuit  
→ heat generation



*Heat: purpose*

*Heat: “byproduct”*

# RESISTORS

Schematical symbols:



Resistance  $R$  determined by:

- Length of the wire ( $L$ )
- Through-flow area ( $A$ )
- Material (resistivity  $\rho$ )

Pouillet's law:

$$R = \frac{\rho L}{A}$$

**Not** density:  
 $\Omega \cdot m \neq kg/m^3$



Compare: flow  
through straw

# RESISTOR AS HEAT SOURCE



Resistor converts electric energy into thermal energy:

$$E = I^2 R \Delta t = Q \quad [J]$$

So electric power becomes thermal power:

Notation:  $\dot{Q}$  (“Heat-flow” or heat transfer rate)

$$P = I^2 R = \dot{Q} \quad [J/s] = [W]$$

# SIDESTEP



Dot sign means: per unit time (time derivative)

$$\text{Power} = \frac{\text{Energy change}}{\text{Time}}$$

$$P = \frac{dE}{dt} \approx \frac{\Delta E}{\Delta t}$$

$$\dot{Q} = \frac{dQ}{dt} \approx \frac{\Delta Q}{\Delta t}$$

$$(\text{Velocity } v = \frac{dx}{dt} = \dot{x} \approx \frac{\text{displacement } \Delta x}{\Delta t})$$

$$(\text{Acceleration } a = \frac{dv}{dt} = \dot{v} = \ddot{x} \approx \frac{\text{velocity change } \Delta v}{\Delta t})$$



# RESISTIVITY

$$R = \rho \frac{L}{A}$$

Material	$\rho (\Omega \cdot \text{m}) \text{ at } 20^\circ \text{ C}$
Copper	$1,67 \cdot 10^{-8}$
Tungsten	$5,5 \cdot 10^{-8}$
Aluminum	$2,65 \cdot 10^{-8}$
Glass	$1 \cdot 10^{12}$
PVC	$1 \cdot 10^{14}$
Rubber	$1 \cdot 10^{15}$

} Conductors  
} Insulators

# CONDUCTORS / INSULATORS

---

Also thermal!



Insulators?



Conductors?

# LEARNING OBJECTIVES LECTURE 2



## ● Energy in general

- Using an energy balance
- Determine efficiency
- Calculate losses for electric resistors




## ● Conductive heat transfer

- *Explaining conduction principles*
- *Calculate conductive heat transfer*
- *Using thermal resistances and insulation values*


# HEAT TRANSFER MECHANISMS

Representations of heat transfer modes:


- (a) **conduction** through a solid, liquid or gas,
- (b) **convection** from a surface to a moving fluid,
- (c) **radiation** between two surfaces

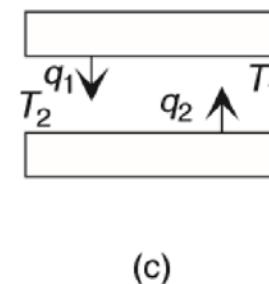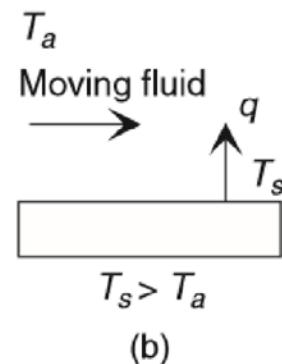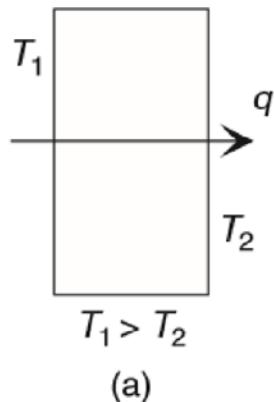

## Mechanisms of Heat Transfer

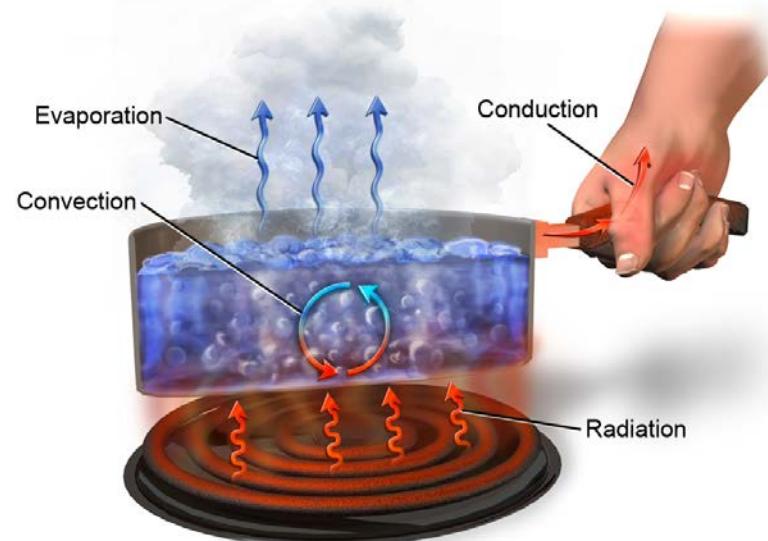

# HEAT TRANSFER MECHANISMS

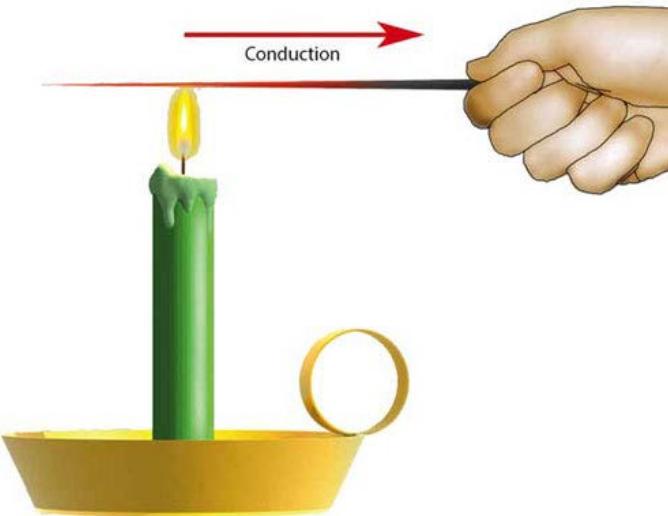




- Conduction
- Convection
- Radiation

# CONDUCTION


## Conduction:

Transfer of thermal energy between (non flowing) molecules

- Always **from** more energetic (**warm**) to less energetic (**cold**) particles!

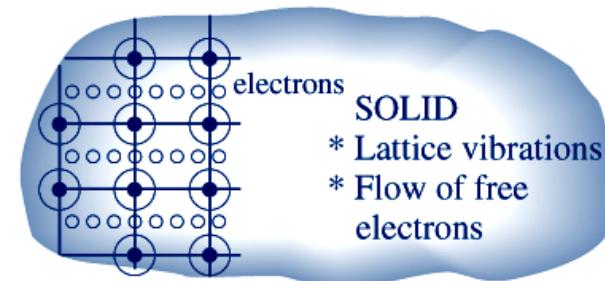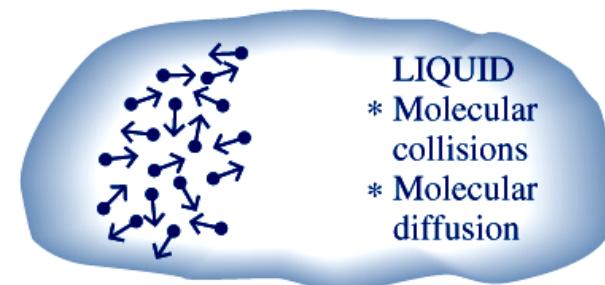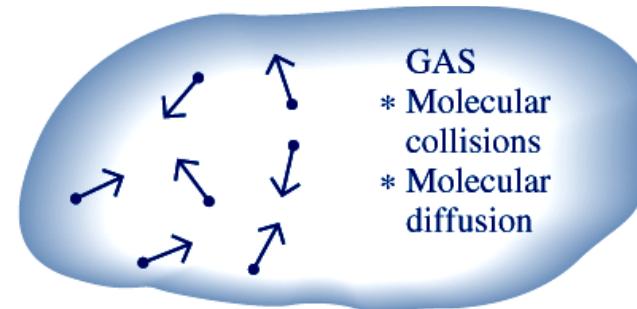

# CONDUCTION(FOURIER's LAW)

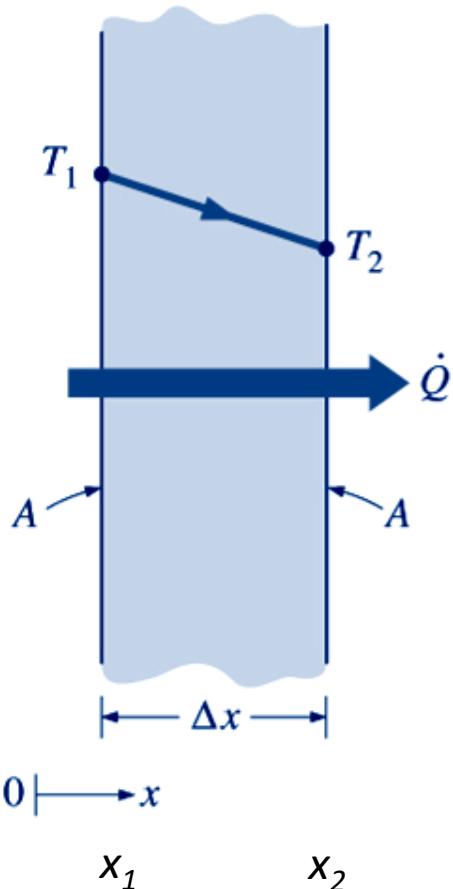

*Cross section of part of a wall (almost flat)*

Heat transfer rate :  $\dot{Q}$

- Steady state condition-1D
- Proportional to area  $A$
- Proportional to temp. Difference :  $T_2 - T_1$
- Inversely proportional to thickness:  $\Delta x = x_2 - x_1$
- Dependent on material  $\rightarrow$  thermal conductivity:  $k$

$$\dot{Q} = -k A \frac{T_2 - T_1}{x_2 - x_1} = -k A \frac{\Delta T}{\Delta x} \quad (\text{W})$$


Negative sign since **heat flow is positive** at a negative temperature gradient.

# CONDUCTION(FOURIER's LAW)

$$\dot{Q} = -kA \frac{T_2 - T_1}{x_2 - x_1} = -kA \frac{\Delta T}{\Delta x} (\text{W})$$

- Fourier's law simplified for **plane surface**
- Per  $\text{m}^2$ : **Heat flux**

$$\dot{q} = \frac{\dot{Q}}{A} = -k \frac{T_2 - T_1}{x_2 - x_1} = -k \frac{\Delta T}{\Delta x} (\text{W/m}^2)$$

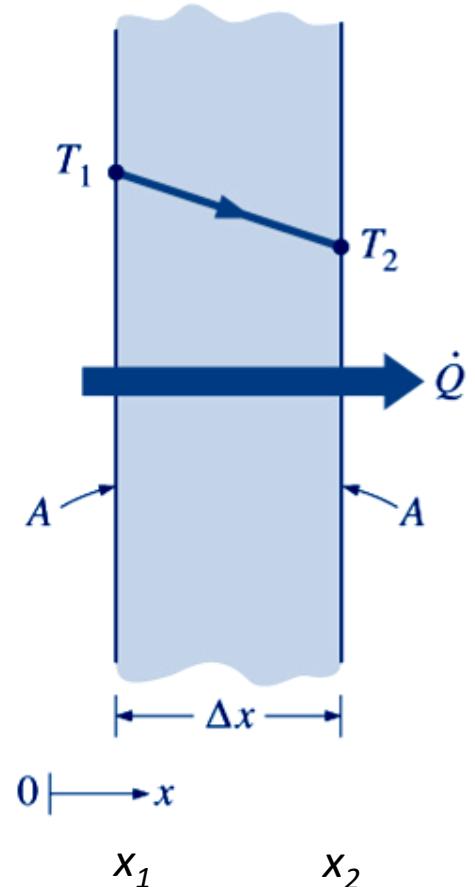

# Thermal conductivity ( $k$ )


Unit:

$$\frac{\text{W}}{\text{m} \cdot \text{K}}$$

→ The amount of power conducted through 1 m of material at a 1 K temperature difference

**High  $k$ : Conductor**

**Low  $k$ : Insulator**

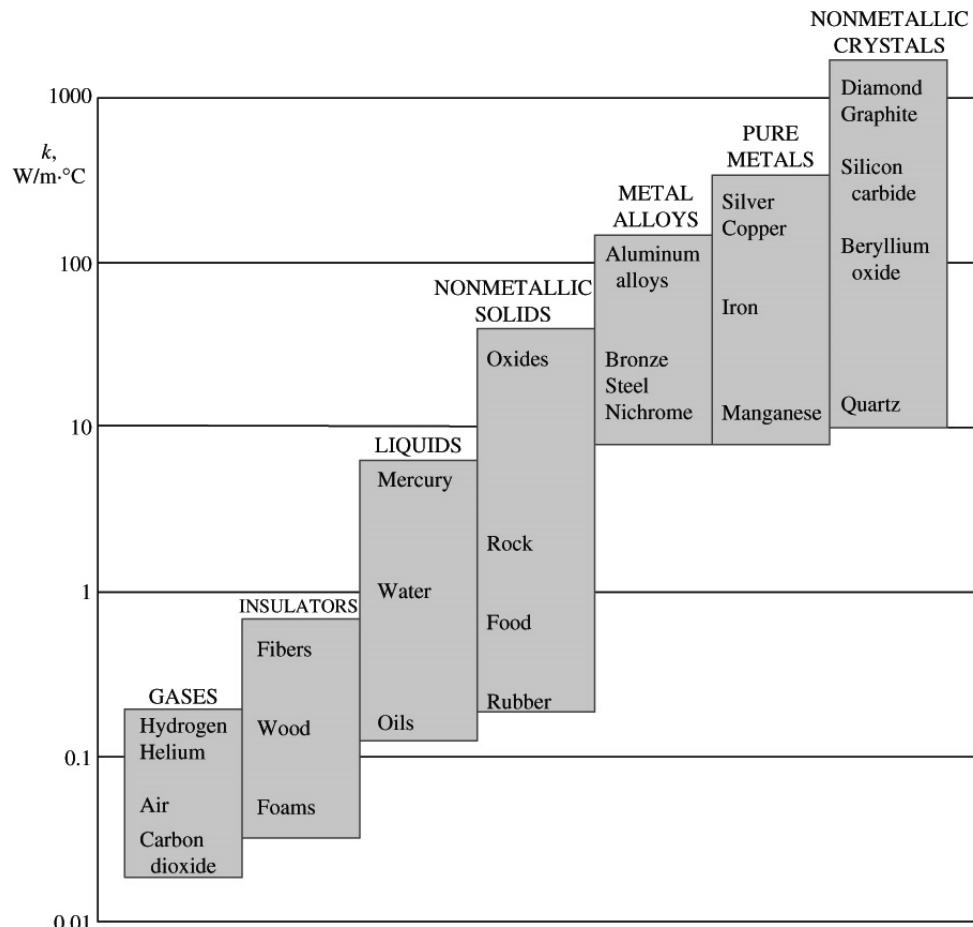

---

# Give reason : Birds puff up their feathers in winter

- A. So that they can trap more air
- B. So that can develop charge
- C. So that they can reduce the frictions
- D. So that they can dry them faster



---

# Give reason : Birds puff up their feathers in winter

- A. So that they can trap more air
- B. So that can develop charge
- C. So that they can reduce the frictions
- D. So that they can dry them faster



[https://www.youtube.com/watch?v=6CaNvHeWLVw&t=53s&ab\\_channel=LesleytheBirdNerd](https://www.youtube.com/watch?v=6CaNvHeWLVw&t=53s&ab_channel=LesleytheBirdNerd)



# LEARNING OBJECTIVES LECTURE 2



## ● Energy in general

- Using an energy balance
- Determine efficiency
- Calculate losses for electric resistors

## ● Conductive heat transfer

- *Explaining* conduction principles
- ***Calculate* conductive heat transfer**
- Using *thermal resistances* and insulation values

# ASSIGNMENT: ELECTRIC KETTLE

What is the **efficiency** of an electric kettle when the water is almost boiling ( $T=100\text{ }^{\circ}\text{C}$ )?

## Data/assumptions/simplifications:

- Wall temperature outside  $50\text{ }^{\circ}\text{C}$
- Diameter 10 cm
- Height 20 cm
- Plastic wall:
  - Thickness 2,7 mm
  - $k = 0,20 \text{ W} / (\text{m} \cdot \text{K})$
- Neglect losses through top and bottom
- Electric power  $P_{el} = 930 \text{ W}$




$$\dot{Q} = -k A \frac{\Delta T}{\Delta x}$$

# SOLUTION (1/2)


- Start with sketch (+data)
- Include units at (in between) answers
- Convert all units to the correct ones (m instead of mm, cm, ...)

Inside      Wall      Outside

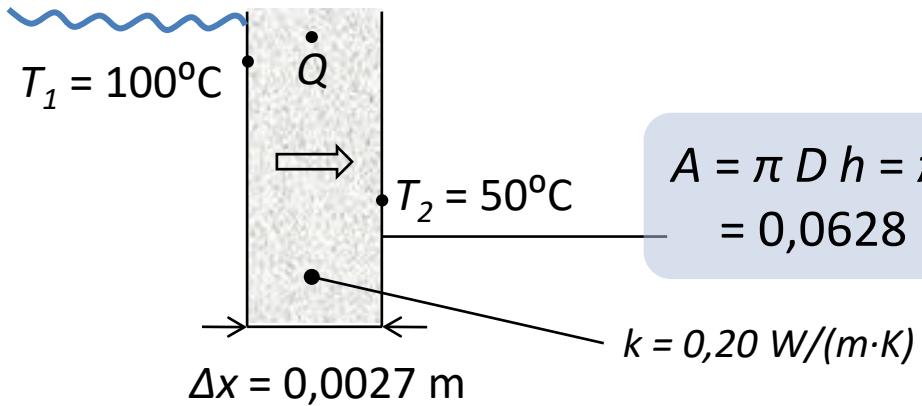

$$A = \pi D h = \pi \cdot 0,1 \cdot 0,2 \\ = 0,0628 \text{ m}^2$$

$$k = 0,20 \text{ W/(m}\cdot\text{K)}$$

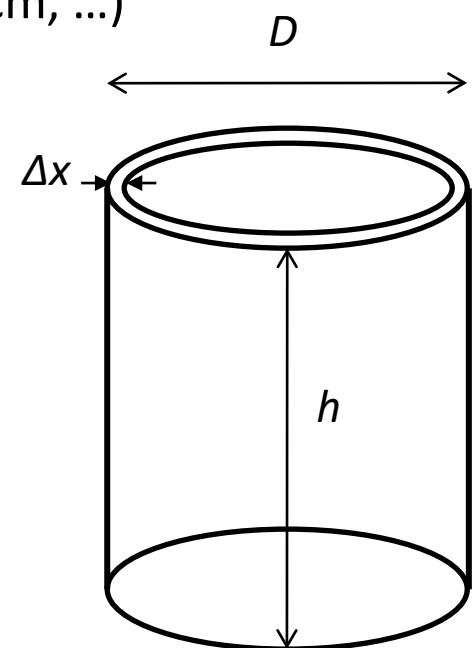

$$\dot{Q} = -kA \frac{T_2 - T_1}{\Delta x} = -0,20 \left( \text{W/m}\cdot\text{K} \right) \times 0,0628(\text{m}^2) \times \frac{323(\text{K}) - 373(\text{K})}{0,0027(\text{m})} \cong 233 \text{ (W)}$$

# SOLUTION (2/2)



Total power: 930 W

Heat loss: -233 W

Useful remainder: 697 W

Efficiency:  $\eta = \frac{697 \text{ W}}{930 \text{ W}} = 0,75 = 75\%$

# CONDUCTION FLAT WALL- SUMMARIZED



- Fourier's law for plane surface:

– Temperature difference	$\Delta T = T_2 - T_1$ (K)
– Thickness	$\Delta x = x_2 - x_1$ (m)
– Surface area	$A$ ( $m^2$ )
– Thermal conductivity	$k$ (W / (m · K))

Heat transfer rate:  $\dot{Q} = -k A \frac{\Delta T}{\Delta x}$  (W)

Heat flux:  $\dot{q} = -k \frac{\Delta T}{\Delta x}$  (W / m<sup>2</sup>)

**Next: model heat flow as thermal resistance network  
(Make it easier for calculations)**

# LEARNING OBJECTIVES LECTURE 2






## ● Energy in general

- Using an energy balance
- Determine efficiency
- Calculate losses for electric resistors

## ● Conductive heat transfer

- *Explaining* conduction principles
- *Calculate* conductive heat transfer
- **Using *thermal resistances* and insulation values**

# ANALOGY ELECTRICITY - HEAT

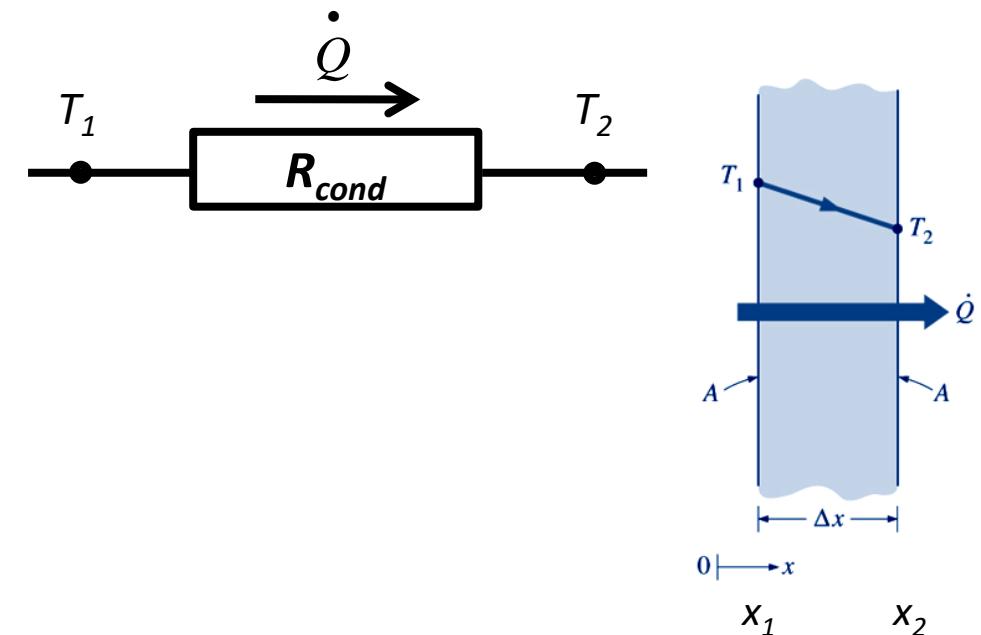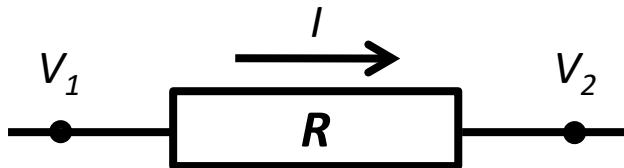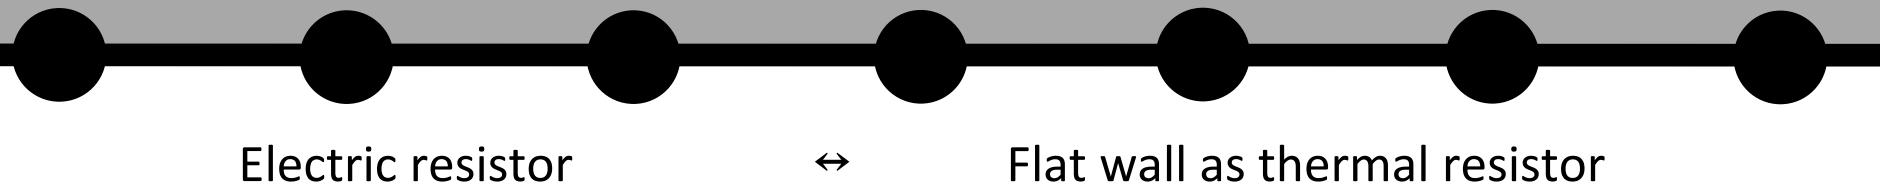

Voltage difference

$$V_1 - V_2 \leftrightarrow$$

Current flow

$$I \leftrightarrow$$

Electrical resistance

$$R \leftrightarrow$$

**unit:  $\Omega$**

Temperature difference

Heat flow

Thermal resistance

$$T_1 - T_2$$

$$\dot{Q}$$

$$R_{cond}$$

**unit: K/W**

# ANALOGY ELECTRICITY - HEAT

Heat conduction through plane wall

Fourier's law:

$$\dot{Q} = -k A \frac{T_2 - T_1}{\Delta x}$$

$$= +k A \frac{T_1 - T_2}{\Delta x}$$

$$= \frac{T_1 - T_2}{\frac{\Delta x}{k A}}$$

$$\dot{Q} = \frac{T_1 - T_2}{R_{cond}} \text{ with } R_{cond} = \frac{\Delta x}{kA} \text{ (K/W)}$$

Heat transfer in “Ohmic way”!

Electrical resistance

Ohm's law:

$$I = \frac{V_1 - V_2}{R}$$

$$V_1 - V_2 \leftrightarrow T_1 - T_2$$

$$I \leftrightarrow \dot{Q}$$

$$R \leftrightarrow R_{cond}$$



$$\Rightarrow \dot{Q} = \frac{T_1 - T_2}{R_{cond}}$$

# THERMAL RESISTANCE NETWORKS




Fridge wall: heat flow  $\dot{Q}$  through three resistors


- Outer wall ( $R_1$ )
- Insulation ( $R_2$ )
- Inner wall ( $R_3$ )

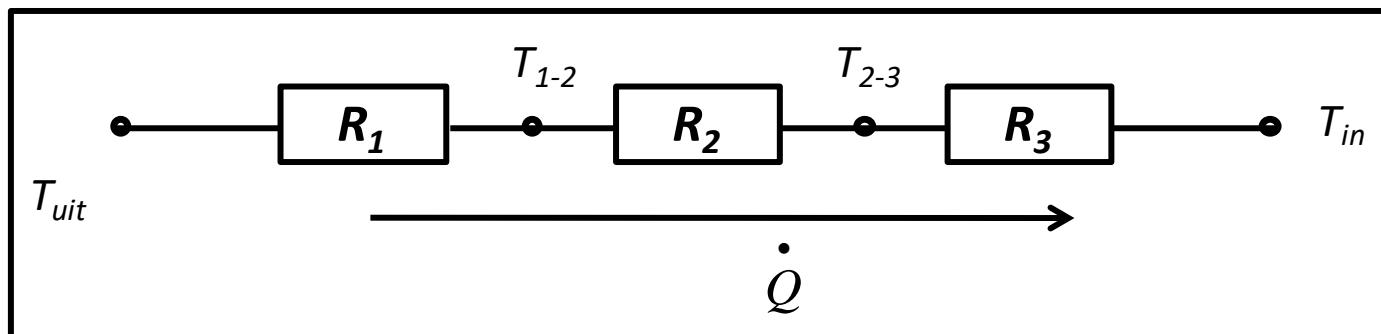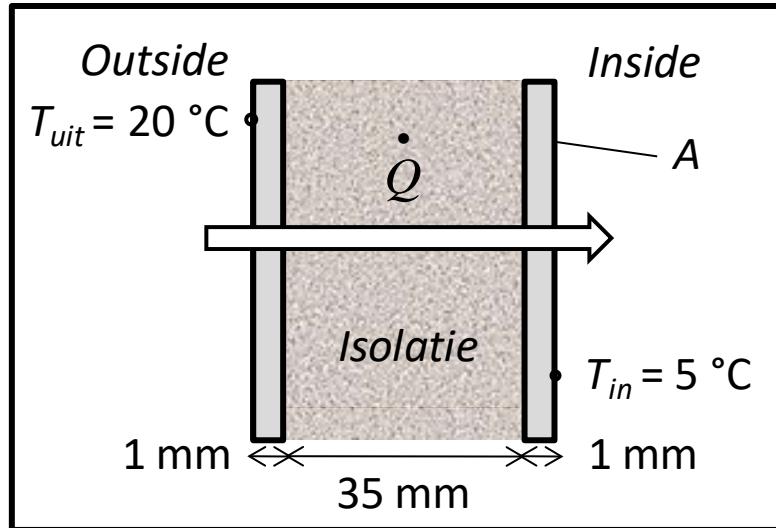

# THERMAL RESISTANCE NETWORKS

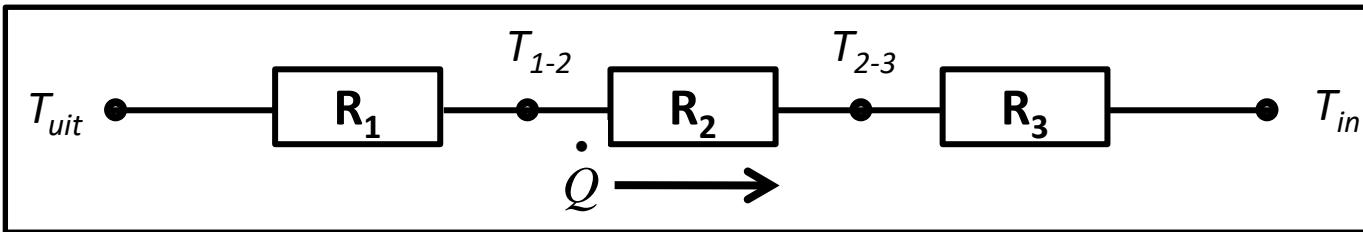

Total resistance  $R_{tot} = R_1 + R_2 + R_3$  (series)

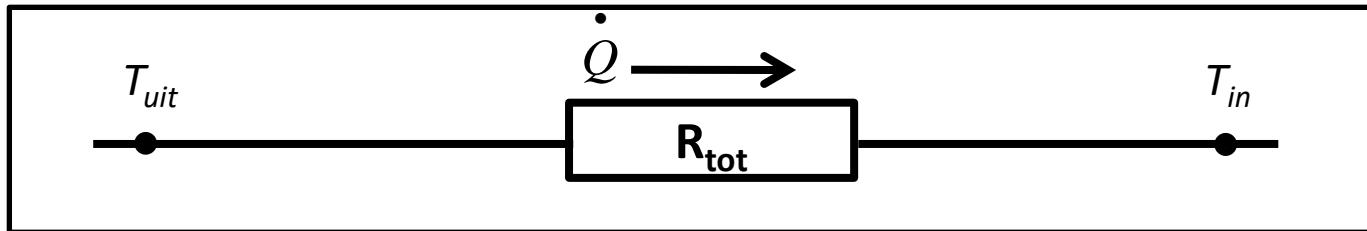


⇒ heat flow

$$\dot{Q} = \frac{T_{uit} - T_{in}}{R_{tot}}$$

Resistors in series: total resistance equals the sum of the individual resistances

# THERMAL RESISTANCE NETWORKS

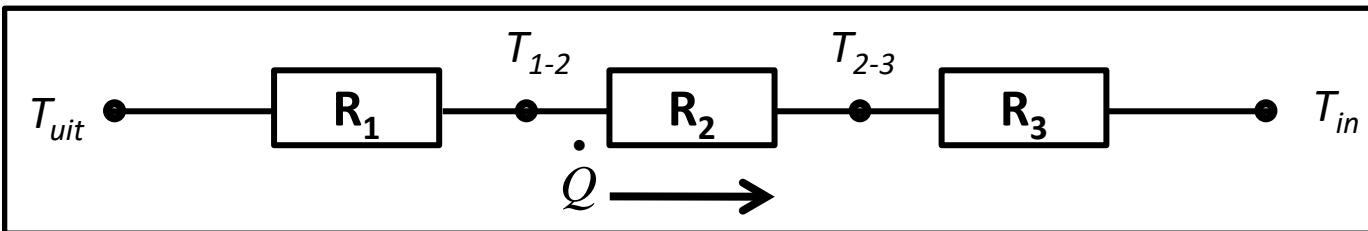


$T_{1-2}, T_{2-3} ?$       Use:  $\dot{Q} = \text{constant}$  throughout the resistors

$$\begin{aligned}\dot{Q} &= \frac{T_{uit} - T_{in}}{R_{tot}} \\ &= \frac{T_{uit} - T_{1-2}}{R_1} = \frac{T_{1-2} - T_{2-3}}{R_2} = \frac{T_{2-3} - T_{in}}{R_3} = \frac{T_{uit} - T_{2-3}}{R_1 + R_2} = \frac{T_{1-2} - T_{in}}{R_2 + R_3}\end{aligned}$$

⇒ Solve all unknown temperatures by comparing total and partial resistors in series, similar to voltage in an electrical circuit

⇒ **Next: parallel thermal resistors**



# THERMAL RESISTANCE NETWORKS

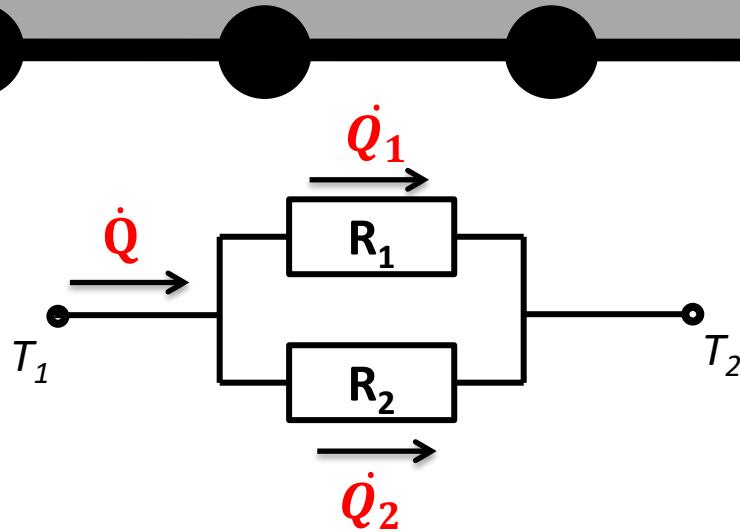

$$\dot{Q} = \dot{Q}_1 + \dot{Q}_2 = \frac{T_1 - T_2}{R_{\text{total}}}$$

$$\dot{Q} = \dot{Q}_1 + \dot{Q}_2 = \frac{T_1 - T_2}{R_1} + \frac{T_1 - T_2}{R_2} = (T_1 - T_2) \left( \frac{1}{R_1} + \frac{1}{R_2} \right)$$

$$\rightarrow \frac{1}{R_{\text{total}}} = \frac{1}{R_1} + \frac{1}{R_2} \longrightarrow R_{\text{total}} = \frac{R_1 R_2}{R_1 + R_2}$$

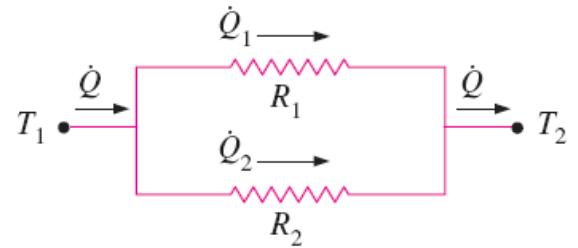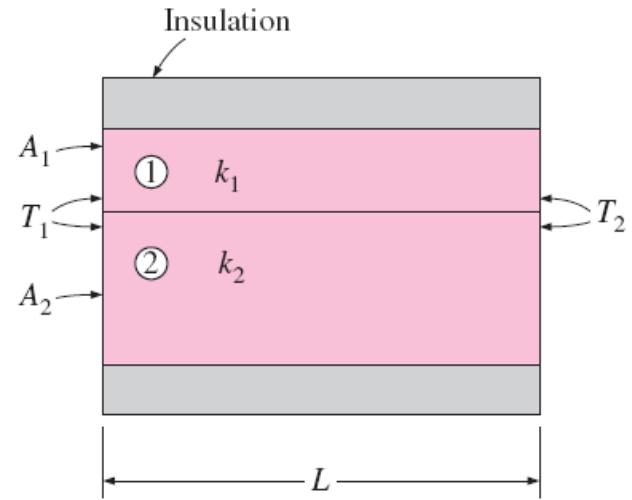


$$\dot{Q} = \dot{Q}_1 + \dot{Q}_2$$

# THERMAL RESISTANCE NETWORKS




## Series Resistors

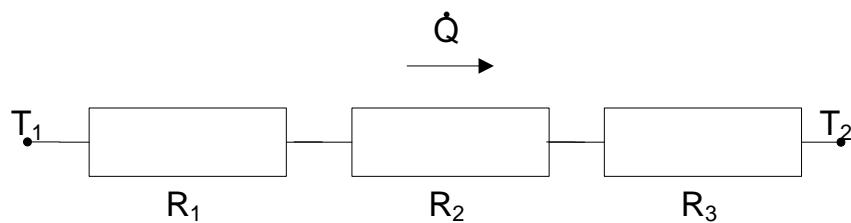

$$R_{tot} = \sum_i R_i$$

(Add Resistors)


## Parallel Resistors

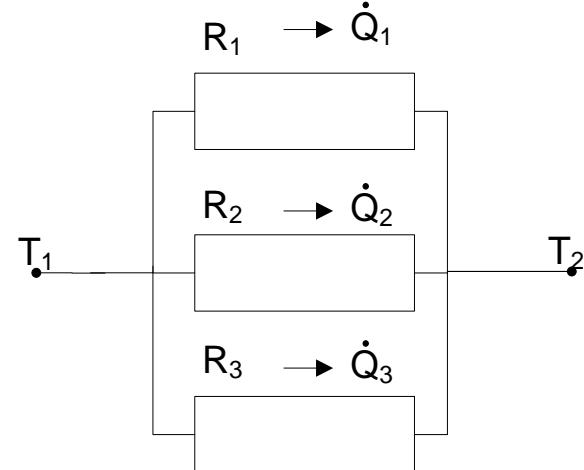

$$\frac{1}{R_{tot}} = \sum_i \frac{1}{R_i}$$

(Add Heat Flows)

# THERMAL RESISTANCE NETWORKS

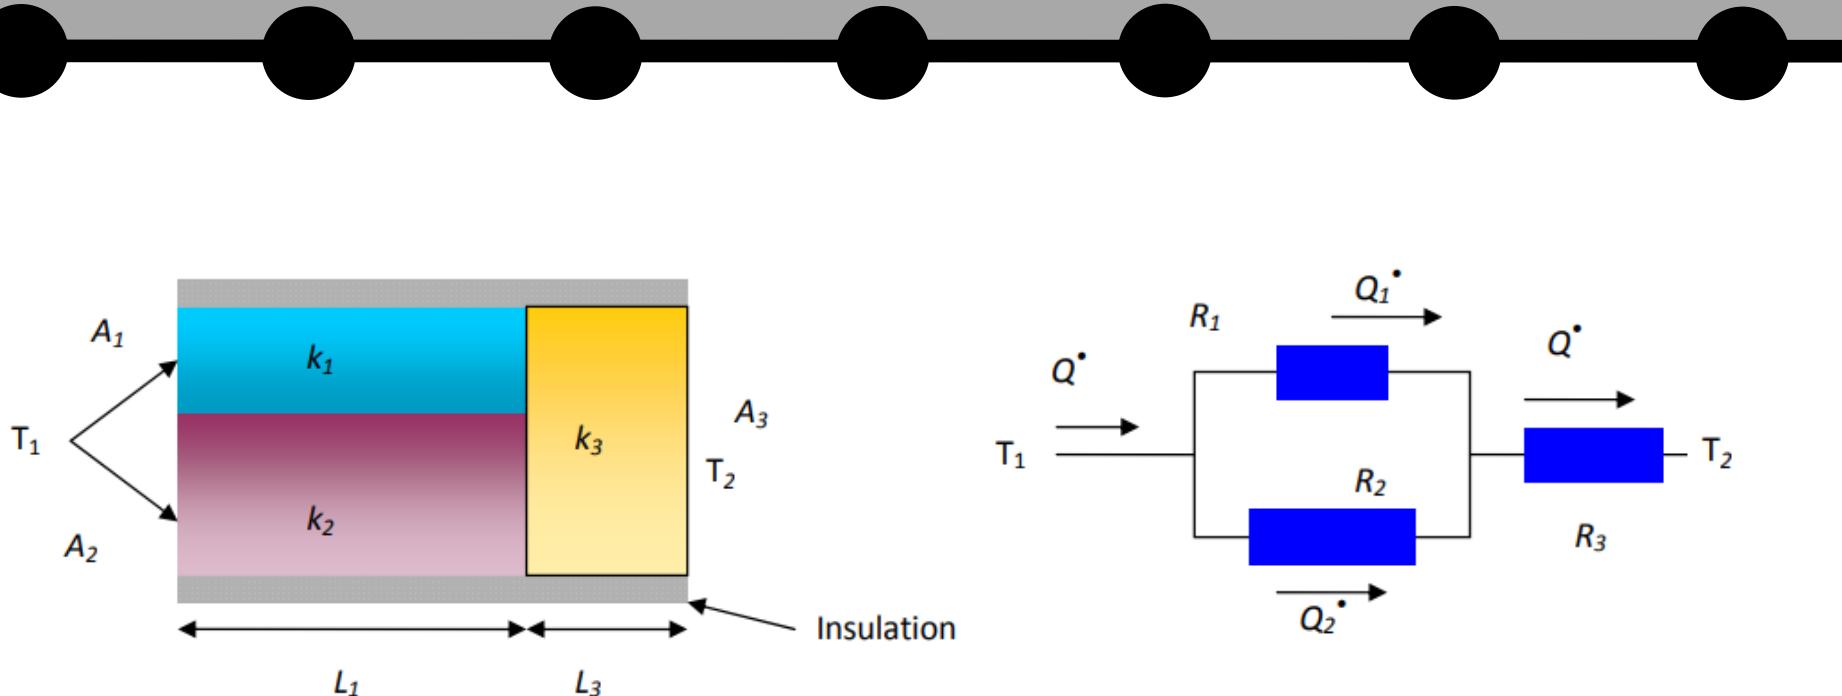

$$Q^\bullet = \frac{T_1 - T_\infty}{R_{total}}$$

$$R_{total} = R_{12} + R_3 = \frac{R_1 R_2}{R_1 + R_2} + R_3$$

# RESISTANCE AND INSULATION

Thermal resistance plane surface:

$$R = \frac{\Delta x}{kA} \quad \left( \frac{K}{W} \right)$$

Alternative concept: insulation value  
(building materials):

$$R-value = \frac{\Delta x}{k} = R \cdot A \quad \left( \frac{m^2 \cdot K}{W} \right)$$


⇒ Insulation value is the heat resistance of  
1 m<sup>2</sup> of material



Material	R-value (m <sup>2</sup> · K / W)
Bricks (wall)	0,26
Rockwool 5 cm thick	1,45
Glasswool 11 cm thick	2,50

NB: Often the symbol  $R$  is used for both concepts. Look at the units!

# CONDUCTION IN NON-PLANAR SURFACE


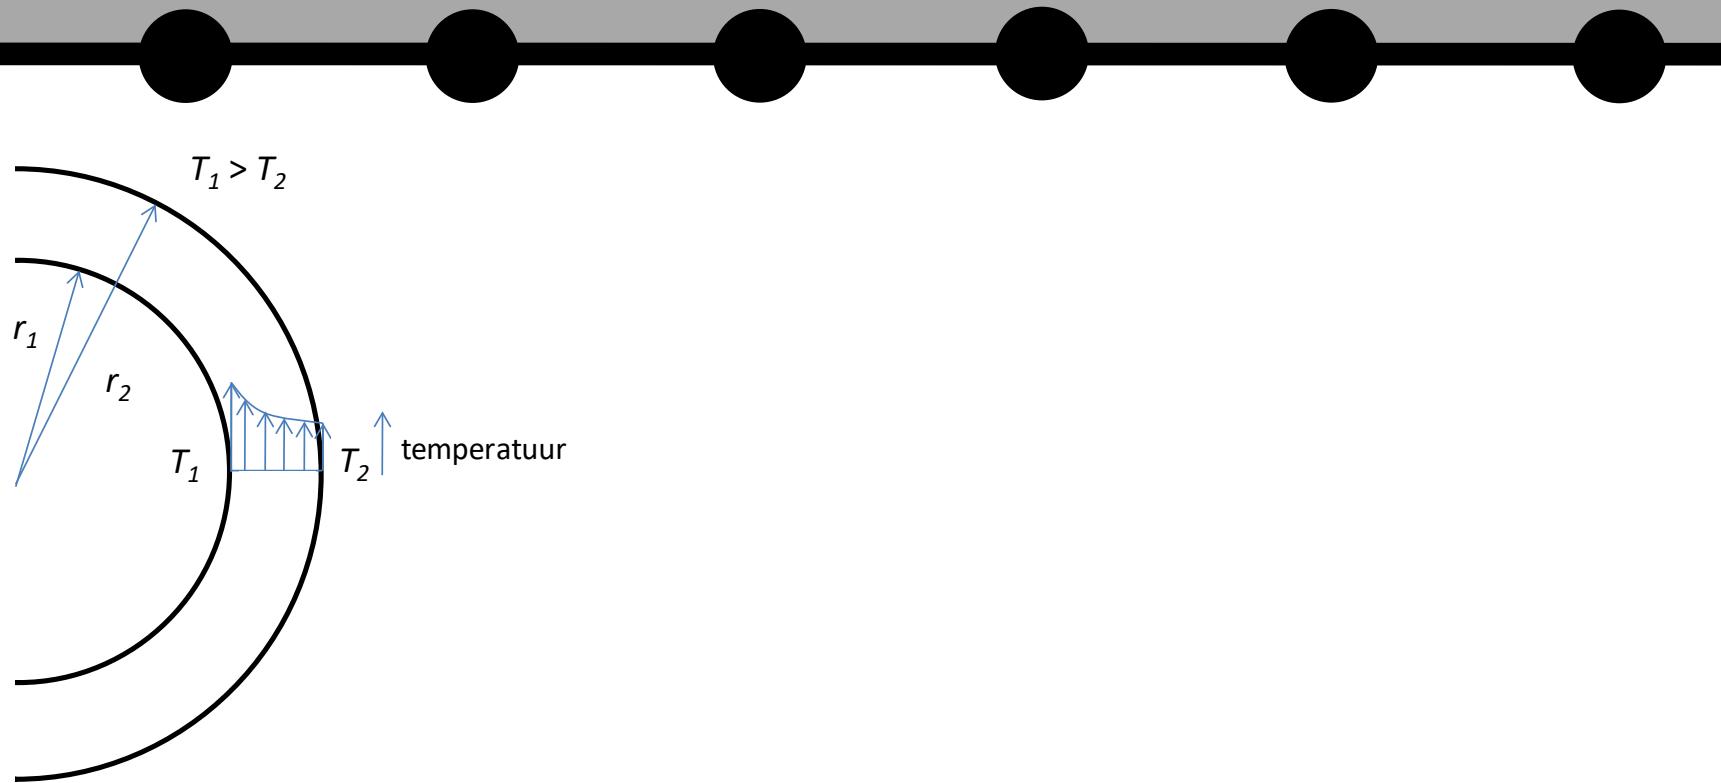


Small radius: small flow-through surface  $\rightarrow$  high resistance  $\rightarrow$  large temperature *gradient*

(In areas with a high resistance the temperature decreases more in the direction of the heat flow)

$$\dot{Q} = \frac{T_1 - T_2}{R}$$


# CONDUCTION IN NON-PLANAR SURFACE

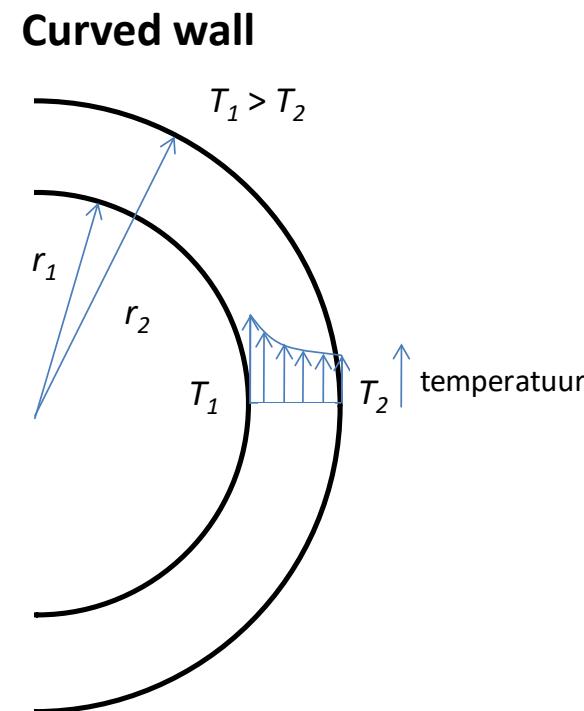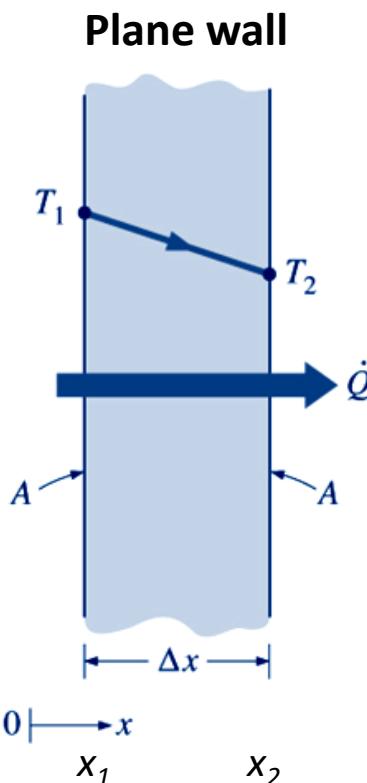


- Surface area constant over  $x$
- Temperature profile linearly decreasing (Fourier's law)
- Temperature gradient (= 'slope') constant

- Surface area increases with  $r$
- Temperature profile decreasing concave up
- Temperature gradient smaller with increasing radius  $r$


# VARIOUS CONDUCTION RESISTANCES

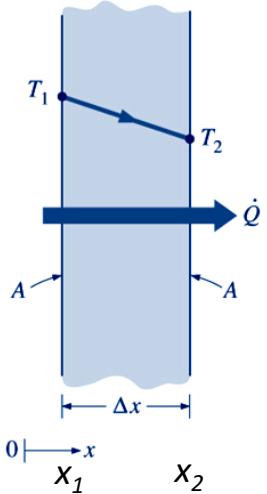

Plane wall

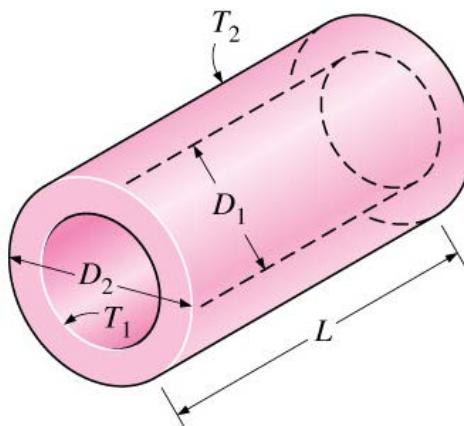

Cylindrical pipe

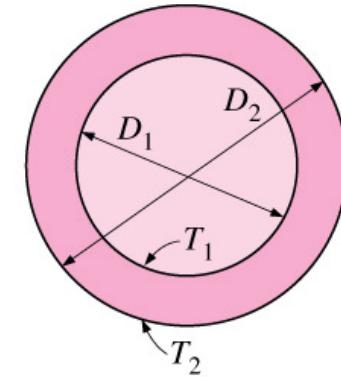

Spherical shell

$$R = \frac{\Delta x}{kA}$$

$$R = \frac{\ln(\frac{D_2}{D_1})}{2\pi L k}$$

$$R = \frac{D_2 - D_1}{2\pi k D_1 D_2}$$

$$\dot{Q} = \frac{T_1 - T_2}{R}$$

# LEARNING OBJECTIVES LECTURE 2



## ● Energy in general

- Using an energy balance
- Determine efficiency
- Calculate losses electric resistors

## ● Conductive heat transfer

- *Explaining* conduction principles
- *Calculate* conductive heat transfer
- *Using thermal resistances* and insulation values

# SUMMARY LECTURE 2 (1/2)

- Efficiency

$$\eta = \frac{\text{useful work}}{\text{inputted energy}} = \frac{\text{useful power}}{\text{inputted power}}$$

Justify the applied definition!

- Heat transfer rate  $\dot{Q}$  (W);    Heat flux:  $\dot{q} = \dot{Q}/A$  ( $\text{W/m}^2$ )

↑  
“Q-flux”

- Heat dissipation electric resistor

$$\dot{Q} = I^2 R \quad (\text{W}) \quad \text{with} \quad R = \rho \frac{L}{A} \quad (\Omega)$$

# SUMMARY LECTURE 2 (2/2)



- Conduction: heat transfer between molecules
- Different appearances of Fourier's law

- Plane surface:  $\dot{Q} = -k A \frac{T_2 - T_1}{x_2 - x_1} = \frac{T_1 - T_2}{R}$  with  $R = \frac{\Delta x}{kA}$  ( $\frac{\text{K}}{\text{W}}$ )

- Cylindrical tube:  $\dot{Q} = \frac{T_1 - T_2}{R}$  with  $R = \frac{\ln(\frac{D_2}{D_1})}{2\pi L k}$

- Spherical shell:  $\dot{Q} = \frac{T_1 - T_2}{R}$  with  $R = \frac{D_2 - D_1}{2\pi k D_1 D_2}$

- Thermal resistors: for ease of calculation
- Insulation value:  $R\text{-value} = R \cdot A$  ( $\frac{\text{m}^2 \cdot \text{K}}{\text{W}}$ )

# LECTORIAL 1

- Lectorial : Friday, 10 September 2021, 13:45 - 15:30
  - ⇒ Assignments: bundle on Canvas
  - ⇒ Deadlines: schedule on Canvas

*Ready, set,  
GO!...*

