

Energy & Heat Transfer

The background of the slide features a dynamic, abstract visualization of energy or fluid flow. It consists of several overlapping, translucent, wavy layers in shades of orange, yellow, red, purple, and blue. These colors represent different temperatures or energy levels, with warmer tones on the left and cooler tones on the right. The layers are set against a dark, almost black, background with small, scattered red and orange dots that suggest particles or heat sources.

Lecture 4

By: Mohammad Mehrali

Study Materials



- **Slides**
- **Book : (Y. A. Cengel& A. J. Ghajar. Heat and Mass Transfer: Fundamental & Application)**
- **Heat Quiz**
- **Learning activities**



QUESTION



Click on the projected screen to start the question



[Copy participation link](#)

Go to wooclap.com and use the code **OLBELO**

UNIVERSITY OF TWENTE.

How difficult was the question for the last Tutorial on force convection heat transfer?



Click on the projected screen to start the question

① Very difficult

22%

7

③

Normal

38%

12

② Difficult

41%

13

④

Easy

0%

0

wooclap



100 %



32 / 38



Recap of lecture 3



Forced and natural/free convection:

$$\dot{Q} = h A \Delta T$$

$$\dot{q} = h \Delta T \quad \text{Newton's cooling law}$$

Nusselt Number: dimensionless variety of heat transfer coefficient h

$$\text{Nu} = \frac{h L_c}{k} \quad \text{With } L_c \text{ a characteristic length for the considered geometry}$$

Determining the Nusselt Number: (empirical) correlations

- Forced convection: Nu as function of Re, Pr : $\text{Nu} = f(\text{Re}, \text{Pr})$
- Natural convection: This lecture

⇒ Relation Nu, Re, Pr dependent on geometry and flow regime (laminar/turbulent)

⇒ Nu, Re, Pr dimensionless numbers: reduction number of variables

Recap of lecture 3



Convection Resistance :

$$\dot{Q} = hA\Delta T = \frac{\Delta T}{R_{conv}} \quad \text{met} \quad R_{conv} = \frac{1}{hA} \quad (\text{K/W})$$

Dimensionless Numbers :

Nusselt Number: $\text{Nu} = \frac{hL_c}{k}$

Reynolds Number: $\text{Re} = \frac{\rho U L_c}{\mu}$

+ Background on boundary layers

Prandtl Number: $\text{Pr} = \frac{\mu c_p}{k}$

Recap of lecture 3



If \dot{Q} must be found:

- Calculate at film temperature : $T_f = \frac{T_s + T_\infty}{2}$
- Pull out ingredients like μ , ρ , k , Pr from tables – like assignment bundle: air or given fluid) at $T_f = \frac{T_s + T_\infty}{2}$
- Calculate Re and choose appropriate correlation based on geometry and Re
- Calculate Nu
- Derive h from it
- Fill out Newton's cooling law: $\dot{Q} = h A \Delta T$


Learning objectives lecture 4



- Heat transfer through natural convection
- Natural Convection
- Grashof Number
- Rayleigh Number
- Nusselt Number
- Using correlations for various configurations
- Calculating natural convection with step-by-step plan

TYPES OF CONVECTION (FROM LECTURE 3)

Forced convection

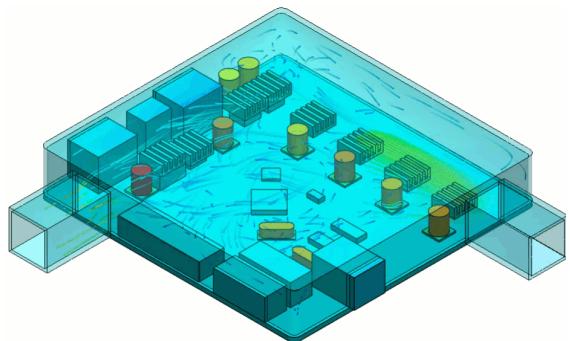

Imposed flow (by pump, fan, ...)

Natural/free convection



Temperature difference itself
starts the flow




General: flow velocity and heat transfer rates are larger for forced convection



Natural Convection

Also for natural convection velocity and thermal boundary layers!

- Velocity boundary layer is only area in which flow occurs
- **Hot surface: Upward flow**
- **Cold surface: Downward flow**

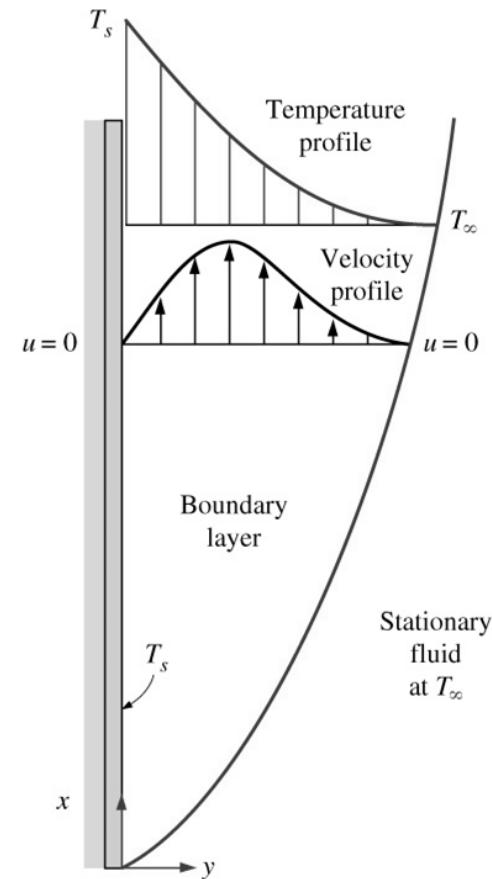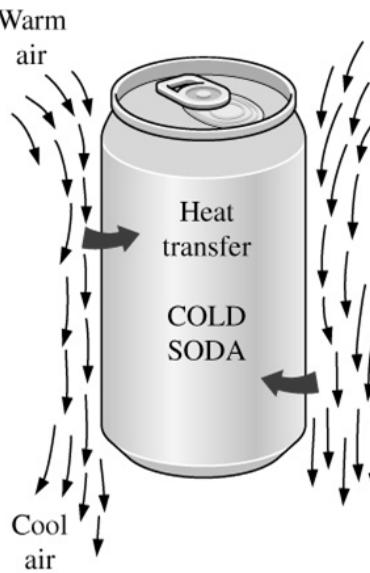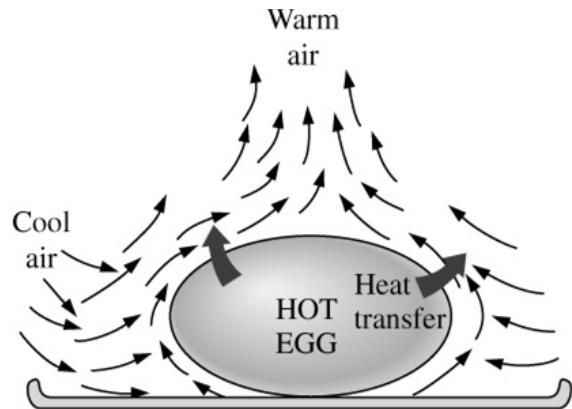



Convection currents

Learning objectives lecture 4



- Heat transfer through natural convection
- Natural Convection
- Grashof Number
- Rayleigh Number
- Nusselt Number
- Using correlations for various configurations
- Calculating natural convection with step-by-step plan

Grashof Number

Forced convection: velocity U imposed


Natural convection: velocity follows from temp. difference $T_s - T_\infty$ *

⇒ Alternative for Reynolds number, with temp.diff. instead U :

$$\text{Grashof number: } \text{Gr} = \frac{g\beta(T_s - T_\infty)L_c^3}{\nu^2} \quad (-)$$

Greek letter “nu”

The **Grashof number (Gr)** is a **dimensionless** number in fluid dynamics and heat transfer which approximates the **ratio of the buoyancy to viscous force** acting on a fluid.

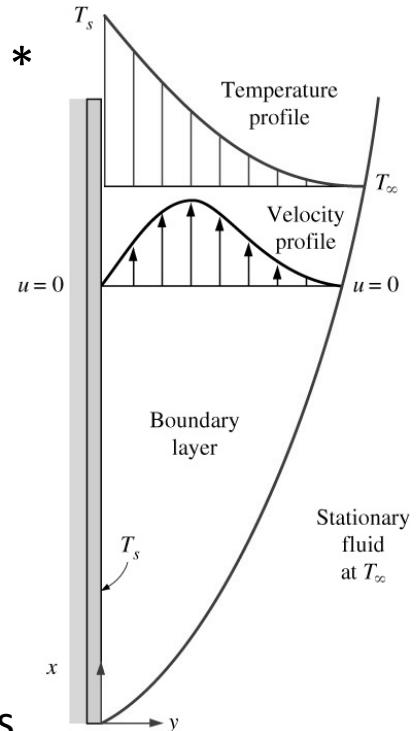

*Choose ΔT positive for convenience

Grashof Number


$$\text{Grashof number: } \text{Gr} = \frac{g\beta(T_s - T_\infty)L_c^3}{\nu^2} \quad (-)$$

- Gravitational acceleration : $g = 9,81 \text{ m/s}^2$
- Volume expansion coefficient $\beta (\text{K}^{-1})$; for most gases: $\beta = \frac{2}{T_s + T_\infty}$
(temperature in Kelvin; $0^\circ\text{C} = 273,15 \text{ K}$)
- Length L_c characteristic for geometry (**length L for plate, diameter D for sphere/cylinder**)
- Kinematic viscosity : $\nu = \frac{\mu}{\rho} (\text{m}^2/\text{s})$ at avg. Temp: $T_f = \frac{T_s + T_\infty}{2}$

Learning objectives lecture 4



- Heat transfer through natural convection
- Natural Convection
- Grashof Number
- **Rayleigh Number**
- Nusselt Number
- Using correlations for various configurations
- Calculating natural convection with step-by-step plan

Rayleigh Number

Laminar / turbulent:



Forced convection:

Determined by Reynolds number : **Re**

Natural convection:

Determined by Grashof number **Gr**

Often combined with Prandtl number:

Rayleigh number **Ra = Gr · Pr**


$$\text{Rayleigh Number : } \text{Ra} = \text{Gr} \cdot \text{Pr} = \frac{g \beta (T_s - T_\infty) L_c^3}{\nu^2} \text{Pr}$$

Rayleigh Number is a dimensionless number associated with buoyancy-driven flow, also known as free or natural convection

Rayleigh Number

$$\text{Rayleigh Number : } \text{Ra} = \text{Gr} \cdot \text{Pr} = \frac{g \beta (T_s - T_\infty) L_c^3}{\nu^2} \text{Pr}$$

Vertical, flat plate (ex. radiator)

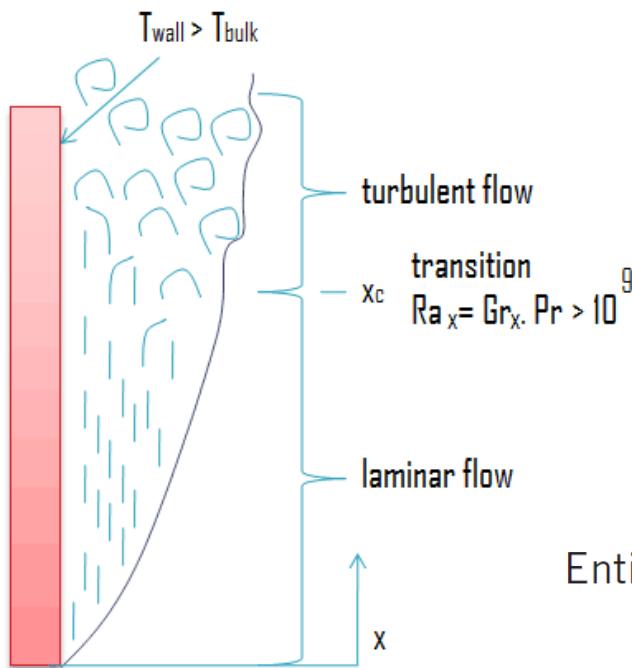

$$\begin{aligned} \text{Nu} &= 0,59 \text{ Ra}_L^{1/4} \text{ with } L_c = L \quad (10^4 < \text{Ra}_L < 10^9) \\ \text{Nu} &= 0,1 \text{ Ra}_L^{1/3} \text{ with } L_c = L \quad (10^9 < \text{Ra}_L < 10^{13}) \end{aligned}$$

$10^9 < \text{Ra}_L < 10^{10}$: find intermediate

Entire range


$$\rightarrow \text{Nu} = \left\{ 0.825 + \frac{0.387 \text{Ra}_L^{1/6}}{[1 + (0.492/\text{Pr})^{9/16}]^{8/27}} \right\}^2$$

(complex but more accurate)

Meer comfort

Minder stockkosten

speed

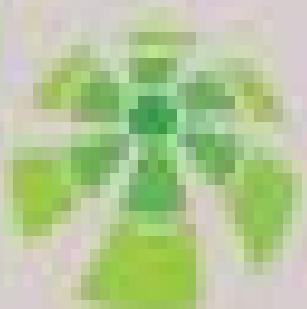

Learning objectives lecture 4



- Heat transfer through natural convection
- Natural Convection
- Grashof Number
- Rayleigh Number
- Nusselt Number
- Using correlations for various configurations
- Calculating natural convection with step-by-step plan

NUSSELT NUMBER

Forced Convection

$$\frac{hL}{k} = a \left(\frac{\rho UL}{\mu} \right)^b \frac{\mu c_p}{k}$$

$$\downarrow \quad \downarrow \quad \downarrow$$
$$Nu = a \cdot Re^b \cdot Pr^c$$

Natural Convection

Constant coefficient

$$Nu = C Ra_L^n$$

Nusselt number

Constant exponent

Rayleigh number

$$Ra = Gr \cdot Pr = \frac{g \beta (T_s - T_\infty) L_c^3}{\nu^2} Pr$$

NUSSELT NUMBER

$$\text{Rayleigh Number : } \text{Ra} = \text{Gr} \cdot \text{Pr} = \frac{g \beta (T_s - T_\infty) L_c^3}{\nu^2} \text{Pr}$$

Rayleigh number, which is the product of the Grashof and Prandtl numbers

$$\text{Nu} = C \text{Ra}_L^n$$

Constant coefficient
↓
Nu = C Ra_Lⁿ Constant exponent
↑
Rayleigh number
↑
Nusselt number

The values of the constants C and n depend on the

- ✓ geometry of the surface
- ✓ the flow regime

The value of n is usually

- ✓ 0,25 for laminar flow
- ✓ 0,33 for turbulent flow.

The value of C

- ✓ is normally less than 1.

All fluid properties are to be evaluated at the film temperature $T_f = (T_s + T_{inv})/2$.


Learning objectives lecture 4



- Heat transfer through natural convection**
- Natural Convection**
- Grashof Number**
- Rayleigh Number**
- Nusselt Number**
- Using correlations for various configurations**
- Calculating natural convection with step-by-step plan**

Free Convection Correlations

Vertical, flat plate

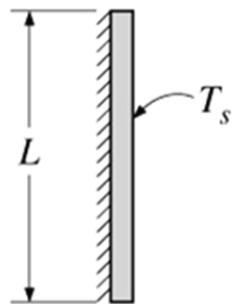


$$\text{Nu} = 0,59 \text{ Ra}_L^{1/4} \text{ with } L_c = L \quad (10^4 < \text{Ra}_L < 10^9)$$

$$\text{Nu} = 0,1 \text{ Ra}_L^{1/3} \text{ with } L_c = L \quad (10^{10} < \text{Ra}_L < 10^{13})$$

Entire range \rightarrow
$$\text{Nu} = \left\{ 0.825 + \frac{0.387 \text{Ra}_L^{1/6}}{[1 + (0.492/\text{Pr})^{9/16}]^{8/27}} \right\}^2$$

(complex but more accurate)

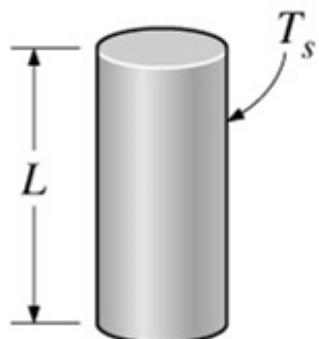


Treat a vertical plate with height L and surface $\pi D L$, if diameter D sufficiently large with respect to L ($D \geq \frac{35L}{Gr_L^{1/4}}$)


Vertical cylinder (e.g. can)

FREE CONVECTION CORRELATIONS

Horizontal cylinder (e.g. pipe)

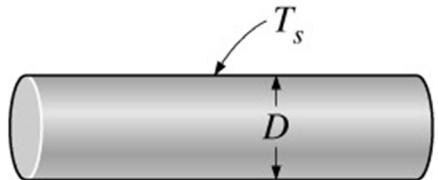

$$Nu = \left\{ 0.6 + \frac{0.387 Ra_D^{1/6}}{[1 + (0.559/\text{Pr})^{9/16}]^{8/27}} \right\}^2$$

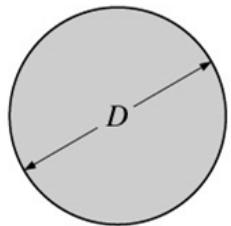

$$Nu = 2 + \frac{0.589 Ra_D^{1/4}}{[1 + (0.469/\text{Pr})^{9/16}]^{4/9}}$$

Sphere (e.g. light bulb)

Notation:

Ra_L is Ra with

$$L_c = L ;$$


Ra_D is Ra with

$$L_c = D$$

Free Convection Correlations

Horizontal plate: upward / downward flow perpendicular to surface → plumes instead of adjacent boundary layer

Hot surface

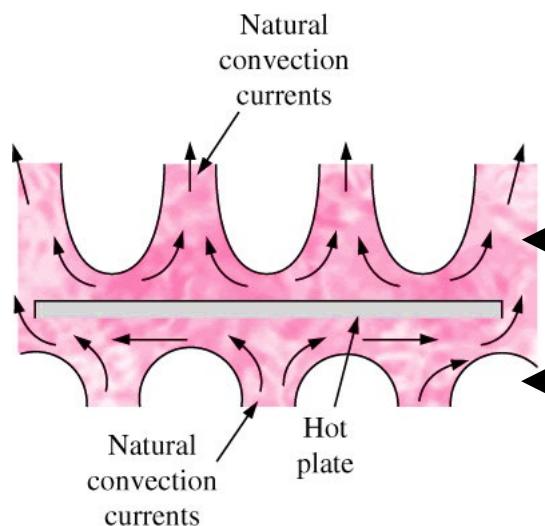

Fluid away from surface

Effective heat transfer

$$Nu = 0,54 Ra^{1/4} \quad (10^4 < Ra < 10^7)$$


$$Nu = 0,15 Ra^{1/3} \quad (10^7 < Ra < 10^{11})$$

Fluid towards surface

Reduced heat transfer

$$Nu = 0,27 Ra^{1/4} \quad (10^5 < Ra < 10^{11})$$

Cold surface

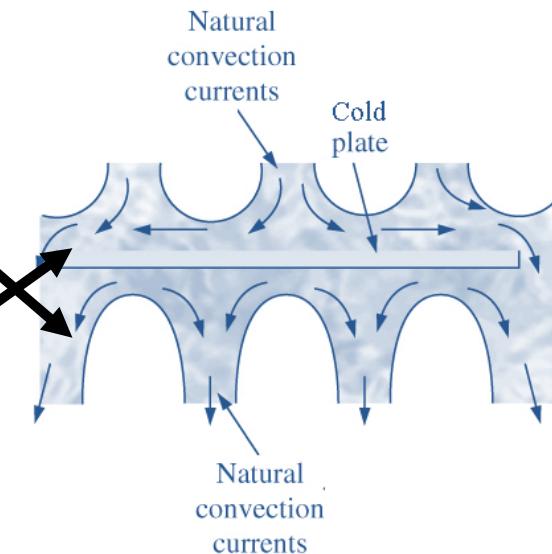

N.B.: Characteristic length
So actually: $Ra_{A/p}$

$$L_c = \frac{\text{Area}}{\text{Perimeter}} = \frac{A}{p}$$

Free Convection Correlations

Plate at angle θ with vertical axis
($\theta < 60^\circ$)

Hot surface:

- Top side: advanced methods
- Bottom side: same as vertical plate, except for using $g \cos \theta$ instead of g :

$$\text{Ra}_L = \text{Gr}_L \cdot \text{Pr} = \frac{g \cos \theta \beta (T_s - T_\infty) L^3}{\nu^2} \cdot \text{Pr}$$

Cold surface: everything upside down

- Bottom side: advanced methods
- Top side: same as vertical plate, except for using $g \cos \theta$ instead of g

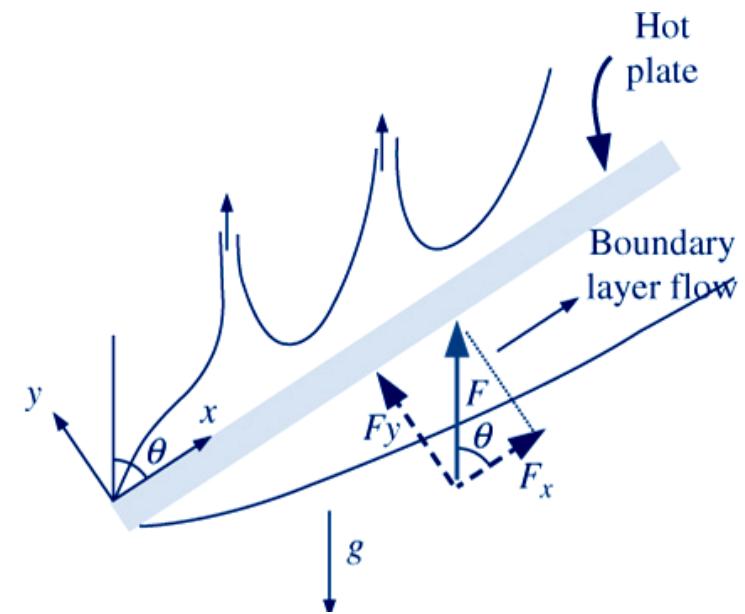


Plate at angle θ (ex. radiator in attic room)







Vertical plate:

$$\text{Nu} = 0,59 \text{ Ra}_L^{1/4} \quad (10^4 < \text{Ra}_L < 10^9)$$
$$\text{Nu} = 0,1 \text{ Ra}_L^{1/3} \quad (10^{10} < \text{Ra}_L < 10^{13})$$

Free Convection Correlations

TABLE 9-1

Empirical correlations for the average Nusselt number for natural convection over surfaces

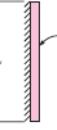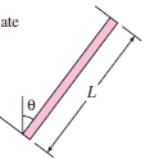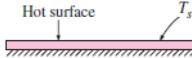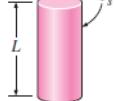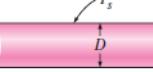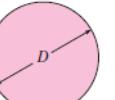Geometry	Characteristic length L_c	Range of Ra	Nu
Vertical plate 	L	$10^4\text{--}10^9$ $10^9\text{--}10^{13}$ Entire range	$\text{Nu} = 0.59\text{Ra}_L^{1/4}$ (9-19) $\text{Nu} = 0.1\text{Ra}_L^{1/3}$ (9-20) $\text{Nu} = \left\{ 0.825 + \frac{0.387\text{Ra}_L^{1/6}}{[1 + (0.492/\text{Pr})^{9/16}]^{8/27}} \right\}^2$ (9-21) (complex but more accurate)
Inclined plate 	L		Use vertical plate equations for the upper surface of a cold plate and the lower surface of a hot plate Replace g by $g \cos\theta$ for $\text{Ra} < 10^9$
Horizontal plate (Surface area A and perimeter p) (a) Upper surface of a hot plate (or lower surface of a cold plate)  (b) Lower surface of a hot plate (or upper surface of a cold plate) 	A_s/p	$10^4\text{--}10^7$ $10^7\text{--}10^{11}$	$\text{Nu} = 0.54\text{Ra}_L^{1/4}$ (9-22) $\text{Nu} = 0.15\text{Ra}_L^{1/3}$ (9-23)
		$10^5\text{--}10^{11}$	$\text{Nu} = 0.27\text{Ra}_L^{1/4}$ (9-24)
Vertical cylinder 	L		A vertical cylinder can be treated as a vertical plate when $D \geq \frac{35L}{\text{Gr}_L^{1/4}}$
Horizontal cylinder 	D	$\text{Ra}_D \leq 10^{12}$	$\text{Nu} = \left\{ 0.6 + \frac{0.387\text{Ra}_D^{1/6}}{[1 + (0.559/\text{Pr})^{9/16}]^{8/27}} \right\}^2$ (9-25)
Sphere 	D	$\text{Ra}_D \leq 10^{11}$ ($\text{Pr} \geq 0.7$)	$\text{Nu} = 2 + \frac{0.589\text{Ra}_D^{1/4}}{[1 + (0.469/\text{Pr})^{9/16}]^{4/9}}$ (9-26)


Learning objectives lecture 4




- Heat transfer through natural convection**
- Natural Convection
- Grashof Number
- Rayleigh Number
- Nusselt Number
- Using correlations for various configurations
- **Calculating natural convection with step-by-step plan**

Example 1


Cooling of a Plate in Different Orientations

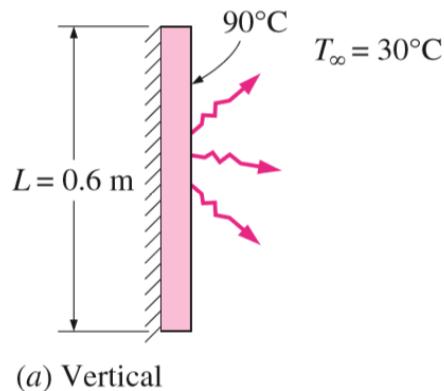

(a) Vertical

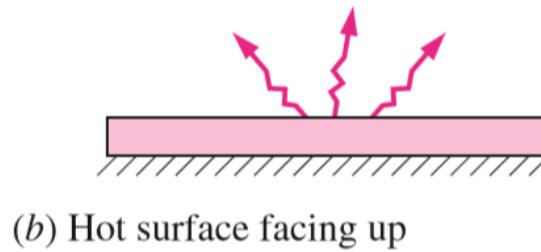

(b) Hot surface facing up

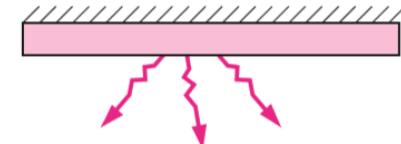


(c) Hot surface facing down

- A: $0.6\text{-m} \times 0.6\text{-m}$ thin square plate
- room temperature: 30°C .
- One side of the plate is maintained at a temperature of 90°C , while the other side is insulated
- Determine the rate of heat transfer from the plate by natural convection if the plate is
 - (a) vertical,
 - (b) horizontal with hot surface facing up, and
 - (c) horizontal with hot surface facing down.

Properties of air (in the back of assignment bundle):

Temp. <i>T</i> , °C	Density <i>ρ</i> , kg/m ³	Specific Heat <i>c_p</i> , J/kg · K	Thermal Conductivity <i>k</i> , W/m · K	Thermal Diffusivity <i>α</i> , m ² /s ²	Dynamic Viscosity <i>μ</i> , kg/m · s	Kinematic Viscosity <i>ν</i> , m ² /s	Prandtl Number <i>Pr</i>
20	1.204	1007	0.02514	2.074×10^{-5}	1.825×10^{-5}	1.516×10^{-5}	0.7309
25	1.184	1007	0.02551	2.141×10^{-5}	1.849×10^{-5}	1.562×10^{-5}	0.7296
30	1.164	1007	0.02588	2.208×10^{-5}	1.872×10^{-5}	1.608×10^{-5}	0.7282
35	1.145	1007	0.02625	2.277×10^{-5}	1.895×10^{-5}	1.655×10^{-5}	0.7268
40	1.127	1007	0.02662	2.346×10^{-5}	1.918×10^{-5}	1.702×10^{-5}	0.7255
45	1.109	1007	0.02699	2.416×10^{-5}	1.941×10^{-5}	1.750×10^{-5}	0.7241
50	1.092	1007	0.02735	2.487×10^{-5}	1.963×10^{-5}	1.798×10^{-5}	0.7228
60	1.059	1007	0.02808	2.632×10^{-5}	2.008×10^{-5}	1.896×10^{-5}	0.7202
70	1.028	1007	0.02881	2.780×10^{-5}	2.052×10^{-5}	1.995×10^{-5}	0.7177
80	0.9994	1008	0.02953	2.931×10^{-5}	2.096×10^{-5}	2.097×10^{-5}	0.7154
90	0.9718	1008	0.03024	3.086×10^{-5}	2.139×10^{-5}	2.201×10^{-5}	0.7132
100	0.9458	1009	0.03095	3.243×10^{-5}	2.181×10^{-5}	2.306×10^{-5}	0.7111
120	0.8977	1011	0.03235	3.565×10^{-5}	2.264×10^{-5}	2.522×10^{-5}	0.7073
140	0.8542	1013	0.03374	3.898×10^{-5}	2.345×10^{-5}	2.745×10^{-5}	0.7041
160	0.8148	1016	0.03511	4.241×10^{-5}	2.420×10^{-5}	2.975×10^{-5}	0.7014
180	0.7788	1019	0.03646	4.593×10^{-5}	2.504×10^{-5}	3.212×10^{-5}	0.6992
200	0.7459	1023	0.03779	4.954×10^{-5}	2.577×10^{-5}	3.455×10^{-5}	0.6974
250	0.6746	1033	0.04104	5.890×10^{-5}	2.760×10^{-5}	4.091×10^{-5}	0.6946

Example 1

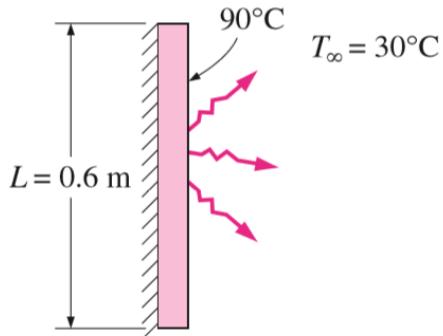

(a) Vertical

TABLE 9-1
Empirical correlations for the average Nusselt number for natural convection over surfaces

Geometry	Characteristic length L_c	Range of Ra	Nu
Vertical plate	L	$10^4\text{--}10^9$ $10^{10}\text{--}10^{11}$ Entire range	$\text{Nu} = 0.59\text{Ra}_L^{1/4}$ $\text{Nu} = 0.1\text{Ra}_L^{1/3}$ $\text{Nu} = \left\{ 0.825 + \frac{0.387\text{Ra}_L^{1/6}}{\left[1 + (0.492/\text{Pr})^{9/16} \right]^{8/27}} \right\}^2 \quad (9-19)$ (complex but more accurate)
Inclined plate	L		Use vertical plate equations for the upper surface of a cold plate and the lower surface of a hot plate Replace g by $g \cos \theta$ for $\text{Ra} < 10^8$
Horizontal plate (Outer area A and perimeter p) (a) Upper surface of a hot plate (or lower surface of a cold plate)	A, p	$10^4\text{--}10^9$ $10^{10}\text{--}10^{11}$	$\text{Nu} = 0.54\text{Ra}_L^{1/4}$ $\text{Nu} = 0.15\text{Ra}_L^{1/3} \quad (9-22)$
(b) Lower surface of a hot plate (or upper surface of a cold plate)	A, p	$10^{10}\text{--}10^{11}$	$\text{Nu} = 0.27\text{Ra}_L^{1/4} \quad (9-24)$
Vertical cylinder	L		A vertical cylinder can be treated as a vertical plate when $D \geq \frac{35L}{Gr^{1/4}}$
Horizontal cylinder	D	$\text{Ra}_D \leq 10^{12}$	$\text{Nu} = \left\{ 0.6 + \frac{0.387\text{Ra}_D^{1/6}}{\left[1 + (0.559/\text{Pr})^{9/16} \right]^{8/27}} \right\}^2 \quad (9-25)$
Sphere	D	$\text{Ra}_D \leq 10^{11}$ ($\text{Pr} \approx 0.7$)	$\text{Nu} = 2 + \frac{0.589\text{Ra}_D^{1/4}}{\left[1 + (0.469/\text{Pr})^{9/16} \right]^{8/27}} \quad (9-26)$

Properties The properties of air at the film temperature of $T_f = (T_s + T_\infty)/2 = (90 + 30)/2 = 60^\circ\text{C}$ and 1 atm are (Table A-15)

$$k = 0.02808 \text{ W/m} \cdot ^\circ\text{C} \quad \text{Pr} = 0.7202$$

$$\nu = 1.896 \times 10^{-5} \text{ m}^2/\text{s} \quad \beta = \frac{1}{T_f} = \frac{1}{333 \text{ K}}$$


Analysis (a) *Vertical*. The characteristic length in this case is the height of the plate, which is $L = 0.6 \text{ m}$. The Rayleigh number is

$$\begin{aligned} \text{Ra}_L &= \frac{g\beta(T_s - T_\infty)L^3}{\nu^2} \text{Pr} \\ &= \frac{(9.81 \text{ m/s}^2)[1/(333 \text{ K})](90 - 30 \text{ K})(0.6 \text{ m})^3}{(1.896 \times 10^{-5} \text{ m}^2/\text{s})^2} (0.722) = 7.656 \times 10^8 \end{aligned}$$

Then the natural convection Nusselt number can be determined from Eq. 9-21 to be

$$\begin{aligned} \text{Nu} &= \left\{ 0.825 + \frac{0.387 \text{Ra}_L^{1/6}}{\left[1 + (0.492/\text{Pr})^{9/16} \right]^{8/27}} \right\}^2 \\ &= \left\{ 0.825 + \frac{0.387(7.656 \times 10^8)^{1/6}}{\left[1 + (0.492/0.7202)^{9/16} \right]^{8/27}} \right\}^2 = 113.4 \end{aligned}$$

Example 1

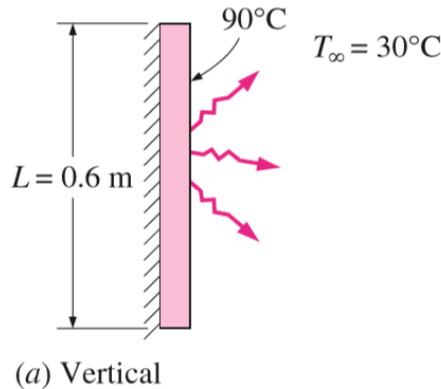

Note that the simpler relation Eq. 9-19 would give $\text{Nu} = 0.59 \text{ Ra}_L^{1/4} = 98.14$, which is 13 percent lower. Then,

$$h = \frac{k}{L} \text{Nu} = \frac{0.02808 \text{ W/m} \cdot ^\circ\text{C}}{0.6 \text{ m}} (113.4) = 5.306 \text{ W/m}^2 \cdot ^\circ\text{C}$$

$$A_s = L^2 = (0.6 \text{ m})^2 = 0.36 \text{ m}^2$$

and

$$\dot{Q} = hA_s(T_s - T_\infty) = (5.306 \text{ W/m}^2 \cdot ^\circ\text{C})(0.36 \text{ m}^2)(90 - 30)^\circ\text{C} = 115 \text{ W}$$

TABLE 9-1

Empirical correlations for the average Nusselt number for natural convection over surfaces


Geometry	Characteristic length, L_c	Range of Ra	Nu
Vertical plate		$10^4 \text{--} 10^7$ $10^9 \text{--} 10^{13}$	$\text{Nu} = 0.59 \text{Ra}_L^{1/4}$ (9-19) $\text{Nu} = 0.1 \text{Ra}_L^{1/3}$ (9-20) $\text{Nu} = \left(0.825 + \frac{0.387 \text{Ra}_L^{1/6}}{\{1 + (0.492/\text{Pr})^{1/16}\}^{2/3}} \right)^2$ (9-21) (complex but more accurate)
Inclined plate		L	Use vertical plate equations for the upper surface of a cold plate and the lower surface of a hot plate Replace g by $g \cos \theta$ for $\text{Ra} < 10^9$
Horizontal plate (Surface area A_s and perimeter p) (a) Upper surface of a hot plate (or lower surface of a cold plate)		$10^4 \text{--} 10^7$ $10^9 \text{--} 10^{11}$	$\text{Nu} = 0.54 \text{Ra}_s^{1/4}$ (9-22) $\text{Nu} = 0.15 \text{Ra}_s^{1/3}$ (9-23)
(b) Lower surface of a hot plate (or upper surface of a cold plate)		A_s/p	$10^9 \text{--} 10^{11}$ $\text{Nu} = 0.27 \text{Ra}_s^{1/4}$ (9-24)
Vertical cylinder		L	A vertical cylinder can be treated as a vertical plate when $D \gg \frac{35L}{Gr^{1/4}}$
Horizontal cylinder		D	$\text{Ra}_D \approx 10^{12}$ $\text{Nu} = \left\{ 0.6 + \frac{0.387 \text{Ra}_D^{1/6}}{\{1 + (0.559/\text{Pr})^{1/16}\}^{2/3}} \right\}^2$ (9-25)
Sphere		D	$\text{Ra}_D \approx 10^{11}$ ($\text{Pr} \geq 0.7$) $\text{Nu} = 2 + \frac{0.589 \text{Ra}_D^{1/4}}{\{1 + (0.465/\text{Pr})^{9/16}\}^{9/4}}$ (9-26)

Vertical plate:

$$\text{Nu} = 0.59 \text{ Ra}_L^{1/4} \quad (10^4 < \text{Ra}L < 10^9)$$

$$\text{Nu} = 0.1 \text{ Ra}_L^{1/3} \quad (10^9 < \text{Ra}L < 10^{13})$$

Example 1

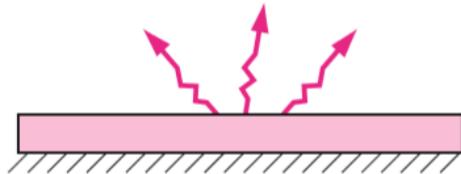

(b) Hot surface facing up

TABLE 9-1
Empirical correlations for the average Nusselt number for natural convection over surfaces

Geometry	Characteristic length L_c	Range of Ra	Nu
Vertical plate	 L	$10^4\text{--}10^9$ $10^9\text{--}10^{13}$ Entire range	$\text{Nu} = 0.59\text{Ra}^{1/4}$ (9-19) $\text{Nu} = 0.1\text{Ra}^{1/3}$ (9-20) $\text{Nu} = \left\{ 0.825 + \frac{0.387\text{Ra}^{1/4}}{\left[1 + (0.492/\text{Pr})^{1/16} \right]^{1/9}} \right\}^2$ (9-21) (complex but more accurate)
Inclined plate	 L		Use vertical plate equations for the upper surface of a cold plate and the lower surface of a hot plate Replace g by $g \cos \theta$ for $\text{Ra} < 10^9$
Horizontal plate (Surface area A and perimeter p) (a) Upper surface of a hot plate (or lower surface of a cold plate)	 A/p	$10^4\text{--}10^7$ $10^7\text{--}10^{11}$	$\text{Nu} = 0.54\text{Ra}^{1/4}$ (9-22) $\text{Nu} = 0.15\text{Ra}^{1/3}$ (9-23)
(b) Lower surface of a hot plate (or upper surface of a cold plate)	 A/p	$10^8\text{--}10^{11}$	$\text{Nu} = 0.27\text{Ra}^{1/4}$ (9-24)
Vertical cylinder	 L		A vertical cylinder can be treated as a vertical plate when $D \geq \frac{35L}{Gr^{1/4}}$
Horizontal cylinder	 D	$\text{Ra}_0 \leq 10^{12}$	$\text{Nu} = \left\{ 0.6 + \frac{0.387\text{Ra}^{1/6}}{\left[1 + (0.559/\text{Pr})^{1/16} \right]^{1/9}} \right\}^2$ (9-25)
Sphere	 D	$\text{Ra}_0 \leq 10^{11}$ ($\text{Pr} \approx 0.7$)	$\text{Nu} = 2 + \frac{0.589\text{Ra}^{1/6}}{\left[1 + (0.469/\text{Pr})^{1/16} \right]^{1/9}}$ (9-26)

(b) Horizontal with hot surface facing up. The characteristic length and the Rayleigh number in this case are

$$L_c = \frac{A_s}{p} = \frac{L^2}{4L} = \frac{L}{4} = \frac{0.6 \text{ m}}{4} = 0.15 \text{ m}$$

$$\text{Ra}_L = \frac{g\beta(T_s - T_\infty)L_c^3}{v^2} \text{Pr}$$

$$= \frac{(9.81 \text{ m/s}^2)[1/(333 \text{ K})](90 - 30 \text{ K})(0.15 \text{ m})^3}{(1.896 \times 10^{-5} \text{ m}^2/\text{s})^2} (0.7202) = 1.196 \times 10^7$$

The natural convection Nusselt number can be determined from Eq. 9-22 to be

$$\text{Nu} = 0.54 \text{Ra}_L^{1/4} = 0.54(1.196 \times 10^7)^{1/4} = 31.76$$

Then,


$$h = \frac{k}{L_c} \text{Nu} = \frac{0.0280 \text{ W/m} \cdot ^\circ\text{C}}{0.15 \text{ m}} (31.76) = 5.946 \text{ W/m}^2 \cdot ^\circ\text{C}$$

$$A_s = L^2 = (0.6 \text{ m})^2 = 0.36 \text{ m}^2$$

and

$$\dot{Q} = hA_s(T_s - T_\infty) = (5.946 \text{ W/m}^2 \cdot ^\circ\text{C})(0.36 \text{ m}^2)(90 - 30)^\circ\text{C} = 128 \text{ W}$$

Example 1

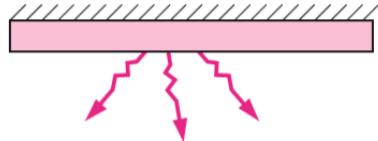

(c) Hot surface facing down

(c) *Horizontal with hot surface facing down.* The characteristic length, the heat transfer surface area, and the Rayleigh number in this case are the same as those determined in (b). But the natural convection Nusselt number is to be determined from Eq. 9-24,

$$\text{Nu} = 0.27 \text{ Ra}_L^{1/4} = 0.27(1.196 \times 10^7)^{1/4} = 15.86$$

TABLE 9-1

Empirical correlations for the average Nusselt number for natural convection over surfaces.

Geometry	Characteristic length L_c	Range of Ra	Nu
Vertical plate		10^4-10^9 10^9-10^{13}	$\text{Nu} = 0.598\text{Ra}^{1/4}$ $\text{Nu} = 0.1\text{Ra}^{1/3}$
	L	Entire range	$\text{Nu} = \left\{ 0.825 + \frac{0.387\text{Ra}^{1/6}}{\left[1 + (0.492/\text{Pr})^{1/3}(1/\text{Ra})^{2/3} \right]^2} \right\}^2$ (complex but more accurate)
Inclined plate		L	Use vertical plate equations for the upper surface of a cold plate and the lower surface of a hot plate Replace g by $g \cos \theta$ for $\text{Ra} < 10^8$
Horizontal plate (Surface A and perimeter p) (a) Upper surface of a hot plate (or lower surface of a cold plate)		10^4-10^7 10^7-10^{11}	$\text{Nu} = 0.548\text{Ra}^{1/4}$ $\text{Nu} = 0.158\text{Ra}^{1/3}$
(b) Lower surface of a hot plate (or upper surface of a cold plate)		A/p	$\text{Nu} = 0.27\text{Ra}^{1/4}$
		10^6-10^{11}	(9-24)
Vertical cylinder		L	A vertical cylinder can be treated as a vertical plate when $D \geq \frac{35L}{G_c^{1/4}}$
Horizontal cylinder		D	$\text{Ra}_D \approx 10^{12}$
			$\text{Nu} = \left\{ 0.6 + \frac{0.387\text{Ra}^{1/6}}{\left[1 + (0.559/\text{Pr})^{1/3}(1/\text{Ra})^{2/3} \right]^2} \right\}^2$
Sphere		D	$\text{Ra}_D \approx 10^{11}$ $(\text{Pr} \geq 0.7)$
			$\text{Nu} = 2 + \frac{0.589\text{Ra}^{1/6}}{\left[1 + (0.469/\text{Pr})^{1/3}(1/\text{Ra})^{2/3} \right]^2}$

$$h = \frac{k}{L_c} \text{Nu} = \frac{0.02808 \text{ W/m} \cdot ^\circ\text{C}}{0.15 \text{ m}} (15.86) = 2.973 \text{ W/m}^2 \cdot ^\circ\text{C}$$

and

$$\dot{Q} = hA_s(T_s - T_\infty) = (2.973 \text{ W/m}^2 \cdot ^\circ\text{C})(0.36 \text{ m}^2)(90 - 30)^\circ\text{C} = \mathbf{64.2 \text{ W}}$$


Step-by-step plan natural convection

If \dot{Q} must be found:

- Determine ingredients necessary for dimensionless no.
(Pr , k and ν at average temperature $\frac{T_s + T_\infty}{2}$)
- Determine Ra : $\text{Ra} = \text{Gr} \cdot \text{Pr} = \frac{g\beta(T_s - T_\infty)L_c^3}{\nu^2} \text{Pr}$
- Choose appropriate correlation based on geometry and Ra
- Determine Nu
- Resolve h from it
- Fill out Newton's cooling law: $\dot{Q} = hA\Delta T$

Example 2

How large is the heat flow?

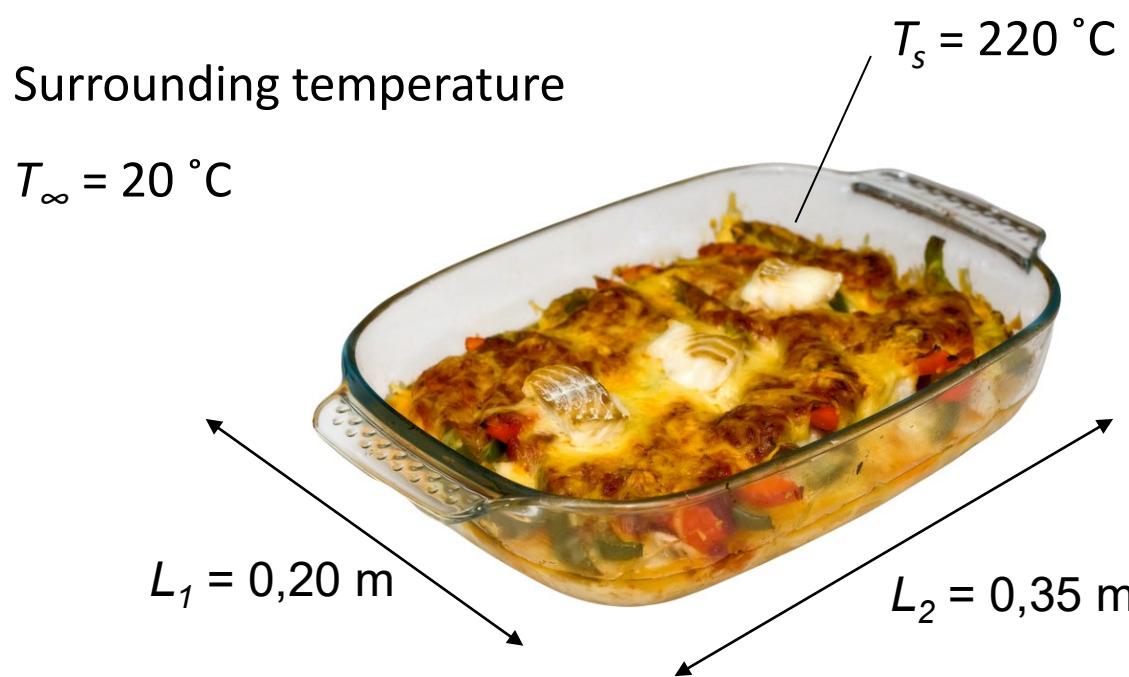

Natural convection

Example 2

$$\begin{aligned}L_1 &= 0,20 \text{ m} \\L_2 &= 0,35 \text{ m} \\T_s &= 220 \text{ }^\circ\text{C} \\T_\infty &= 20 \text{ }^\circ\text{C}\end{aligned}$$

Horizontal, flat, warm plate:

$$\text{Nu} = 0,54 \text{ Ra}^{1/4} \quad (10^4 < \text{Ra} < 10^7)$$

$$\text{Nu} = 0,15 \text{ Ra}^{1/3} \quad (10^7 < \text{Ra} < 10^{11})$$

Characteristic length $L_c = A/p$

$$\text{Ra} = \text{Gr} \cdot \text{Pr} = \frac{g \beta (T_s - T_\infty) L_c^3}{\nu^2} \text{Pr}$$


Properties of air (in the back of assignment module):

Temp. $T, \text{ }^\circ\text{C}$	Density $\rho, \text{ kg/m}^3$	Specific Heat $c_p, \text{ J/kg} \cdot \text{K}$	Thermal Conductivity $k, \text{ W/m} \cdot \text{K}$	Thermal Diffusivity $\alpha, \text{ m}^2/\text{s}^2$	Dynamic Viscosity $\mu, \text{ kg/m} \cdot \text{s}$	Kinematic Viscosity $\nu, \text{ m}^2/\text{s}$	Prandtl Number Pr
20	1.204	1007	0.02514	2.074×10^{-5}	1.825×10^{-5}	1.516×10^{-5}	0.7309
25	1.184	1007	0.02551	2.141×10^{-5}	1.849×10^{-5}	1.562×10^{-5}	0.7296
30	1.164	1007	0.02588	2.208×10^{-5}	1.872×10^{-5}	1.608×10^{-5}	0.7282
35	1.145	1007	0.02625	2.277×10^{-5}	1.895×10^{-5}	1.655×10^{-5}	0.7268
40	1.127	1007	0.02662	2.346×10^{-5}	1.918×10^{-5}	1.702×10^{-5}	0.7255
45	1.109	1007	0.02699	2.416×10^{-5}	1.941×10^{-5}	1.750×10^{-5}	0.7241
50	1.092	1007	0.02735	2.487×10^{-5}	1.963×10^{-5}	1.798×10^{-5}	0.7228
60	1.059	1007	0.02808	2.632×10^{-5}	2.008×10^{-5}	1.896×10^{-5}	0.7202
70	1.028	1007	0.02881	2.780×10^{-5}	2.052×10^{-5}	1.995×10^{-5}	0.7177
80	0.9994	1008	0.02953	2.931×10^{-5}	2.096×10^{-5}	2.097×10^{-5}	0.7154
90	0.9718	1008	0.03024	3.086×10^{-5}	2.139×10^{-5}	2.201×10^{-5}	0.7132
100	0.9458	1009	0.03095	3.243×10^{-5}	2.181×10^{-5}	2.306×10^{-5}	0.7111
120	0.8977	1011	0.03235	3.565×10^{-5}	2.264×10^{-5}	2.522×10^{-5}	0.7073
140	0.8542	1013	0.03374	3.898×10^{-5}	2.345×10^{-5}	2.745×10^{-5}	0.7041
160	0.8148	1016	0.03511	4.241×10^{-5}	2.420×10^{-5}	2.975×10^{-5}	0.7014
180	0.7788	1019	0.03646	4.593×10^{-5}	2.504×10^{-5}	3.212×10^{-5}	0.6992
200	0.7459	1023	0.03779	4.954×10^{-5}	2.577×10^{-5}	3.455×10^{-5}	0.6974
250	0.6746	1033	0.04104	5.890×10^{-5}	2.760×10^{-5}	4.091×10^{-5}	0.6946

Example 2

(Intermediate) answers

- Average temperature: 120 °C
- $\text{Ra} = 1,45 \cdot 10^6$
- $\text{Nu} = 18,7$
- $h = 9,48 \text{ W}/(\text{m}^2 \cdot \text{K})$
- Heat flow 133 W (around 1/3 forced convection: 462 W)

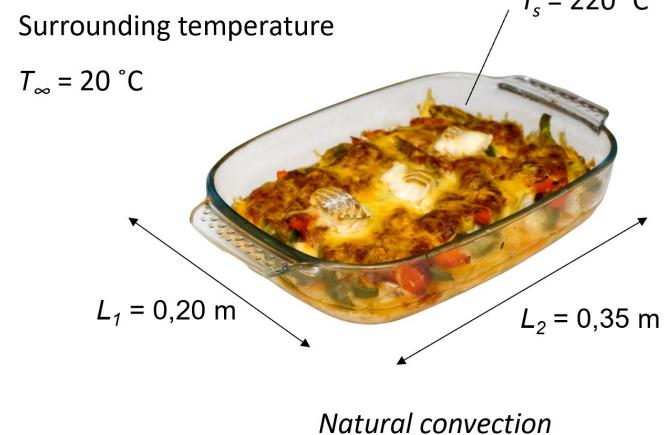


Blowing from long side

- $h = 33 \text{ W}/(\text{m}^2 \cdot \text{K})$
- Heat flow 462 W

Blowing from short side:

- $h = 24,9 \text{ W}/(\text{m}^2 \cdot \text{K})$
- Heat flow 349 W

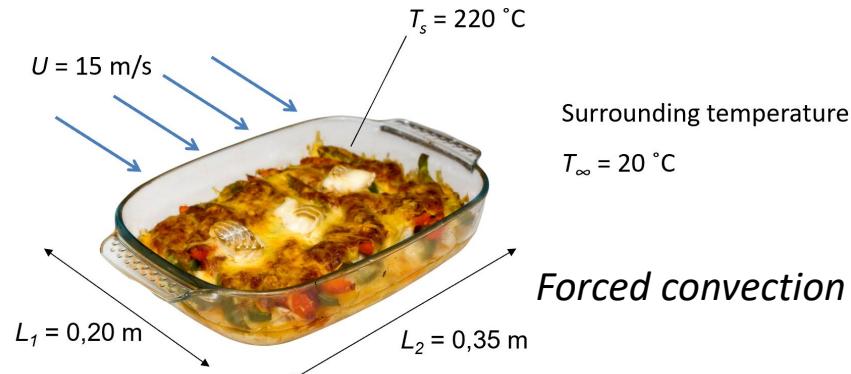

Example 3

Imagine: 25 W light bulb with diameter $D = 0,08 \text{ m}$ releases 22,5 W of heat. Determine T_s for $T_\infty = 20^\circ\text{C}$

Problem:


To calculate T_s , h is necessary ($\dot{Q} = hA(T_s - T_\infty)$) but h depends on T_s (because Nu, Ra, Pr are dependent on temperature) and that is the one we are looking for...



$$\text{Nu} = 2 + \frac{0.589 \text{Ra}_D^{1/4}}{[1 + (0.469/\text{Pr})^{9/16}]^{4/9}}$$



Example 3

Problem: T_s unknown \rightarrow starting values for step-by-step plan unknown (Pr , k , ν , ...)

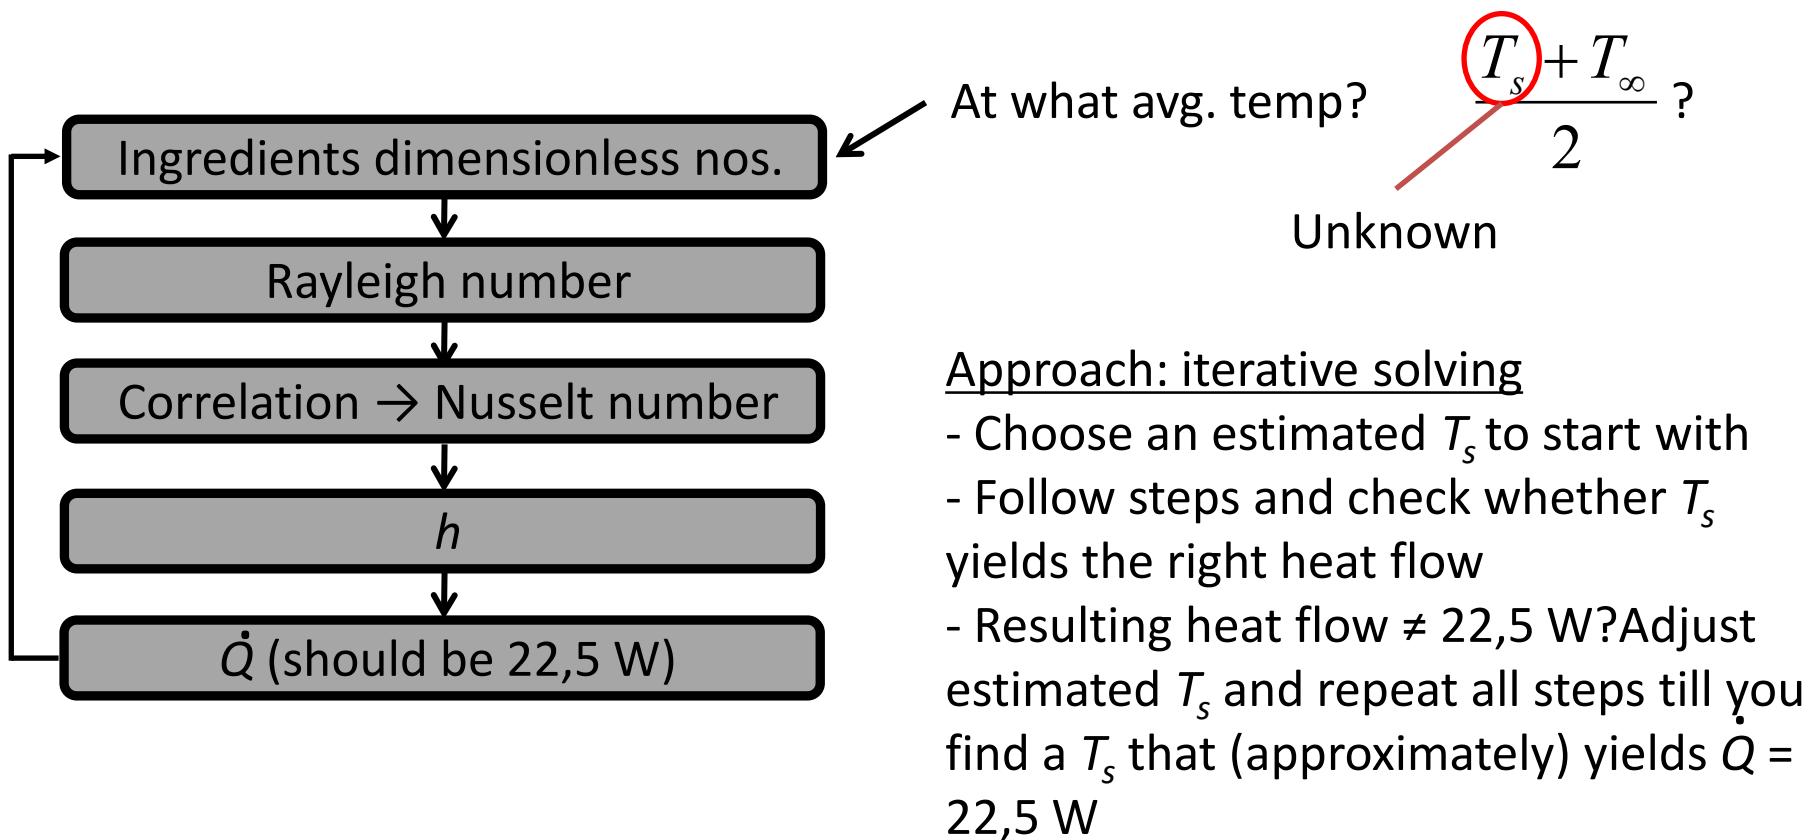

Fins

What is Purpose of the Fins on Engine Surfaces ? Why design such a thing ?

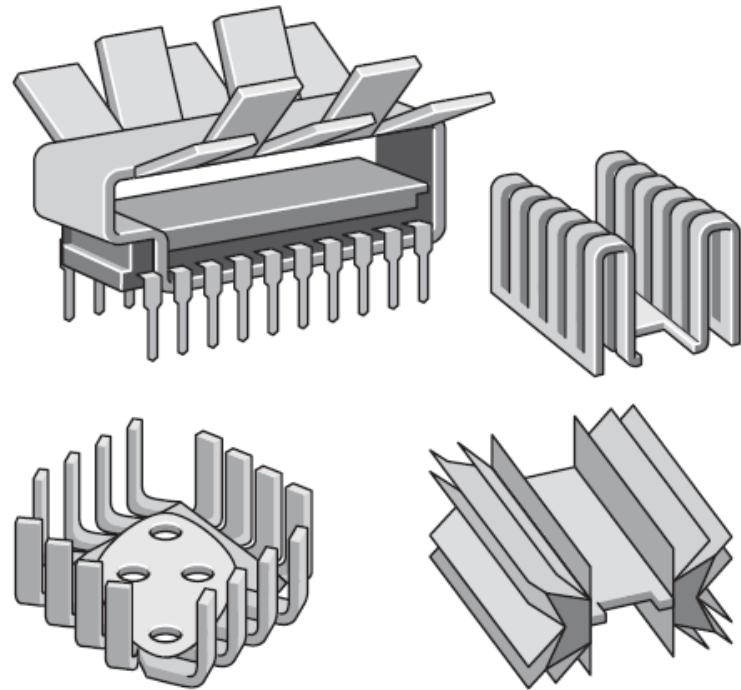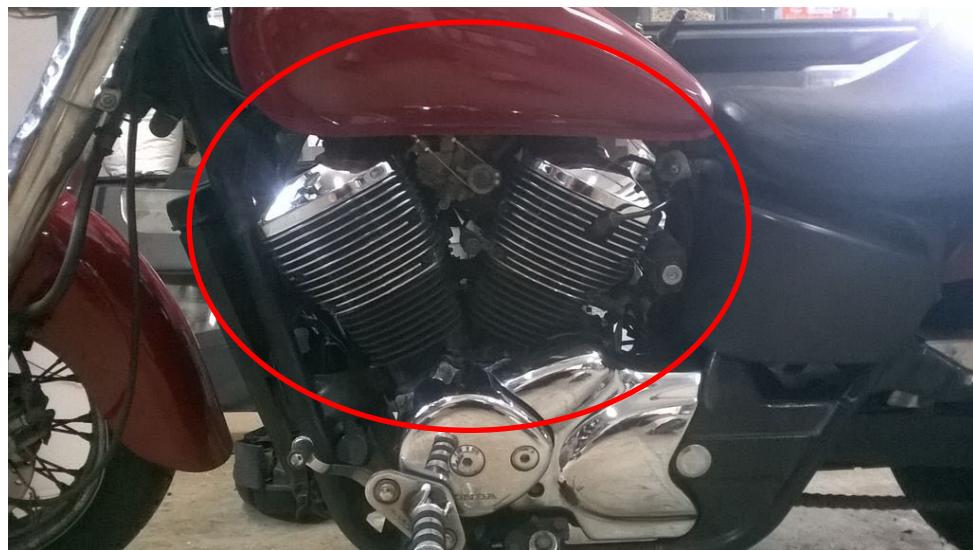

Fins are extended surfaces and they increase the surface area leading to increase in heat transfer rate. Useful in cooling applications

Summary natural convection

General (same as for forced convection)

$$\dot{Q} = h A \Delta T \quad (\text{W}) \quad \text{Newton's cooling law}$$

“Supporting” equations for h :

Nusselt number Nu as function of Rayleigh number $\text{Ra} = \text{Gr} \cdot \text{Pr}$

$$\text{Grashof number } \text{Gr} = \frac{g \beta (T_s - T_\infty) L_c^3}{\nu^2}$$


- Forced convection: $\text{Re} \leftrightarrow$ natural convection: Gr
- Ra and Nu just like Re based upon characteristic length of geometry
(indicate using subscript)

General conclusion convection

- Calculate heat flow using Newton's cooling law
 - Determine heat transfer coefficient h in this using correlations between Nu ($\rightarrow h$) and other dimensionless nos.
- ⇒ step-by-step plans (+ iterative solving)

Other learning objectives convection: *flow phenomena*

- Being able to sum up what parameter are influencing h
- Knowing differences between laminar and turbulent ,
- Explaining how velocity and thermal boundary layers form
- Predicting/reasoning the temperature development

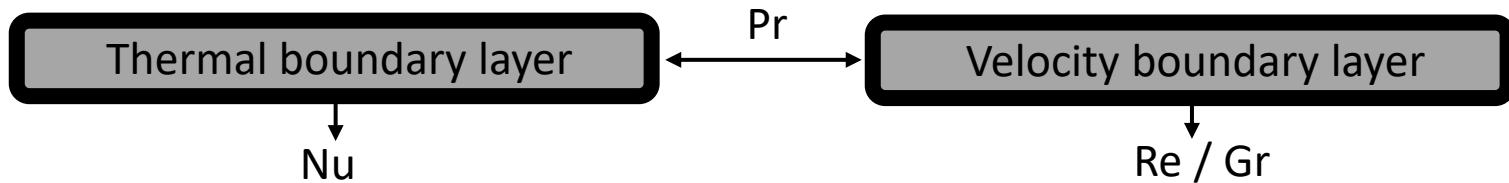

Feedback Session

- Next Lectorial : Natural Convection
- Questions? Feel free to ask!

