Moozaq UI: design handoff

Oct 17, 2026 · @Rob Coenen

Overview

The desktop web player is ready to build: four interactive screens at 1428 × 830, on Material 3 (dark) with Google Cast conventions. The Moozaq UI canvas is the source of truth; every artboard is a clickable prototype (press Play on it).

Artboard	What it shows
Browse + Now playing	Mix shelves, mix card states, the now-playing bar while casting
Your channels	Channel list, per-channel and bulk refresh, Add channel
Speakers	The Cast to picker over the browse screen
Nothing playing	The bar after Stop casting and on first launch (switch with the artboard's Tweak)

Out of scope for this handoff: mobile and tablet layouts, a light theme, and an expanded (full-screen) player.

Foundations

All colors are Material 3 dark-scheme roles generated with Google's material-color-utilities: primary from the Moozaq amber (#FFB56B), neutrals from the navy (#1B2029). Use the role names in code, not the hex values.

Color roles

Role	Hex	Used for
primary	#FFB872	Accent text buttons, filled buttons, play button, checkbox fill, active slider, now-playing outline
onPrimary	#4A2800	Text and icons on primary (play icon, button labels, checkmark)
primaryContainer / onPrimaryContainer	#6A3C00 / #FFDCBE	Link hover
secondaryContainer	#59422D	Inactive slider track
tertiary	#A2D2A3	Connected Cast icon
surface	#10131A	Page background, sticky shelf headings
surfaceContainerLowest	#0B0E15	Text field fill
surfaceContainer	#1C2026	Cards, now-playing bar, dialogs, popover
surfaceContainerHigh	#272A31	Card hover, empty cover tile
surfaceContainerHighest	#31353C	Selected card
onSurface	#E0E2EC	Primary text and icons
onSurfaceVariant	#BFC7D9	Secondary text, unchecked rows, pending states
outline	#8991A2	Outlined button border, tertiary text, unchecked box (pending)
outlineVariant	#3F4756	Cast chip border, list dividers, text field border
State layer	primary 8%	Hover on text and icon buttons

Role	Hex	Used for
Disabled	onSurface 12% / 38%	Disabled filled button container / label
Scrim	#000 at 45% (popover), 60% (modal)	Behind the Cast to popover and Your channels

Typography

Roboto Flex from Google Fonts (variable, 400 to 700), falling back to Roboto, then system-ui. Sizes follow the Material 3 type scale.

Style	Size / line height	Weight	Used for
Title large	22 / 28	400	Shelf headings, Cast to title
Headline small	24 / 32	400	Your channels title
Title medium	16 / 24	600	Mix titles, now-playing title, Nothing playing
Body large	16 / 24	400	Tagline, creator, device names
Body medium	14 / 20	400	Status line, hints
Label large	14 / 20	500	Buttons, Cast chip
Label medium	12 / 16	500	Times (tabular figures), badge

Shape and spacing

Element	Radius	Spacing
Page	n/a	24 px padding, 16 px between header, shelves, bar
Shelf	n/a	24 px between shelves, 16 px between cards
Mix card	12 px	240 px wide, 14 px text padding, 8 px gap
Cover in bar	10 px	104 × 104 px
Now-playing bar	20 px	136 px tall, 16 px padding, 20 px column gap

Element	Radius	Spacing
Buttons, chip, sliders' hit area	20 px (full pill)	40 px tall; slider hit area 44 px
Cast to popover	24 px	480 px wide, 12 to 16 px padding, rows 52 px
Your channels dialog	28 px	560 × 678 px, 28 px padding, rows 52 px

Motion

Element	Duration	Easing
Card play button fade and rise (6 px, 90% to 100% scale)	160 ms	ease
Card cover zoom to 104%	300 ms	ease
Card cover scrim to 35%	200 ms	ease
Equalizer bars (staggered by 300 ms)	900 ms loop	ease-in-out
Spinners	1 s loop	linear

Honor prefers-reduced-motion: no cover zoom, static equalizer bars.

Iconography

Use Material Icons (filled style, 24 px grid) everywhere; the Cast icon must be Google's own asset in its official states, recolored only to match the app.

Icon (Material name)	Size	Where
cast	20 px	Cast chip when nothing is casting (disconnected)
cast_connected	20 px	Cast chip while casting (connected: frame filled, tertiary)
speaker	24 px	Single speaker row in Cast to
speaker_group	24 px	Speaker group row (All speakers, Kitchen speaker + 1)

Icon (Material name)	Size	Where
tv	24 px	TV or Cast display row
volume_up	20 px	Volume slider in the bar
play_arrow / pause	22 px	Card play button, Play again
expand_more	18 px	Cast chip affordance
close	24 px	Cast to close button
music_note	36 px	Empty cover tile on first launch
refresh	18 px	Channel row refresh

Cast icon states, per the Cast button checklist: disconnected = outline, connecting = waves animate one by one, connected = filled frame. The prototype shows disconnected and connected only; build connecting with the Cast SDK's animated drawable, not a custom animation.

Screens and components

The browse screen is a fixed three-zone column: header, scrolling shelves, and a 136 px now-playing bar pinned to the bottom. Every other screen is a layer over it.

Header

Logo (220 × 56, left-aligned) with the tagline "Find your mood. Let it run." beside it, centered vertically; Channels text button on the right.

Mix card

240 px wide. Cover 240 × 135 (16:9, object-fit cover), then the title (2 lines max, clamped) and the creator (1 line, ellipsis). The whole card is one button (preview / select); the play button inside it is a separate 48 px circular button.

State	Card	Cover	Play button
Default	surfaceContainer	As is	Hidden (opacity 0, still focusable)

State	Card	Cover	Play button
Hover or focus	surfaceContainerHigh	Zoom 104%, scrim 35%	Fades and rises in, bottom-right 10 px inset
Selected (clicked)	surfaceContainerHighest	As is	As hover
Starting	As hover	As hover	Always visible, spinner
Now playing	2 px primary outline	Scrim 35%, badge top-left: animated equalizer + "Now playing"	On hover shows Pause; click pauses
Paused (this mix)	2 px primary outline	Badge reads "Paused", bars frozen	On hover shows Play; click resumes

Badge: 24 px tall pill, surface at 85%, label medium in primary.

Now-playing bar

This is the Cast mini controller. One row, three columns, 16 px padding, 20 px gaps:

1. Cover, 104 × 104, radius 10.
2. Info column (fills the width): title (1 line, ellipsis, title medium); status line "Playing · Sepia Lounge" (body medium); seek slider with elapsed time on the left and total duration on the right (tabular figures).
3. Right column: the Cast chip on top; below it the volume icon + 112 px slider, Stop casting (outlined button) and Pause / Resume (filled, min width 96).

State	Cover	Info column	Right column
Playing	Mix cover	Title, "Playing · Creator", live seek	Casting to chip, volume, Stop casting, Pause
Paused	Mix cover	"Paused · Creator", seek frozen	Resume
Pausing / Resuming / Stopping	Mix cover	Previous status until confirmed	Button label "Pausing…" etc., disabled, onSurfaceVariant fill

State	Cover	Info column	Right column
Seeking	Mix cover	Status reads "Seeking…", slider grey and locked	Unchanged
Stopped (after Stop casting)	Last mix cover at 70% opacity	"Nothing playing" + "Last played: <title>"	Cast to chip (disconnected icon), Play again (filled)
First launch	Empty tile, music note	"Nothing playing" + "Pick a mix above to start playing on Office speaker"	Cast to chip only

The cover stays 104 px in every state so the bar never changes height.

Cast chip

Outlined pill, 40 px tall, outlineVariant border. Contents: Cast icon (connected: tertiary filled frame; disconnected: onSurfaceVariant outline), lead text in onSurfaceVariant ("Casting to" / "Cast to"), device name in onSurface, expand_more. Click opens Cast to.

Cast to picker

A popover anchored above the Cast chip: 480 px wide, max 640 px tall, radius 24, surfaceContainer, shadow 0 24 56 at 55% black, a 16 px caret pointing at the chip. Scrim at 45%; clicking it closes the popover. Header: "Cast to" (title large) and a close icon button.

One row per device, 52 px tall, nothing else on the row:

1. Checkbox (40 px target, 18 px box): checked = this device plays the current mix.
2. Device icon (speaker, speaker_group or tv).
3. Device name, 148 px, ellipsis.
4. Volume slider for that device, filling the rest.

Checked rows use onSurface for icon and name, unchecked use onSurfaceVariant. The list scrolls inside the popover; the header stays fixed. Unchecking the last checked device stops playback.


Your channels

Modal dialog, 560 × 678, radius 28, scrim 60%. Title "Your channels" (headline small) and one status line: "10 channels · catalog up to date", or "Refreshing 3 channels…" while busy. Rows are 52 px: channel name, "99 videos · Oct 16" and a refresh icon button that spins while that channel refreshes. Footer: Debug info (quiet, left), then Add channel, Refresh all and Done (filled). Add channel reveals a link field, an Import button and the hint "Only mixes of an hour or longer show up. Importing never starts playback."; the button becomes Cancel.

Interaction states and latency

The UI never shows a new playback state until the Cast receiver confirms it; until then only the control that was used shows a pending state, and everything else stays usable.

Every playback change waits for the Cast receiver to confirm

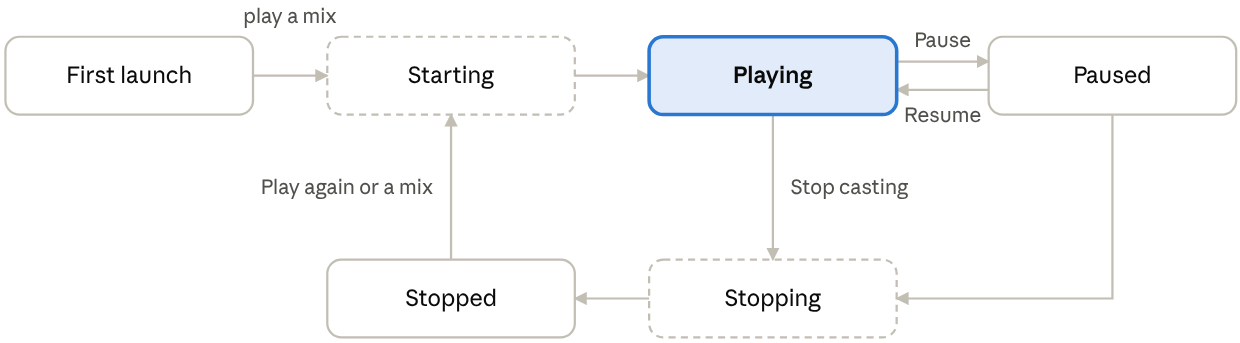

Dashed: the UI shows a pending label and locks that control until the receiver confirms

playback states · 6 states, 2 waiting

Stopped keeps the last mix so Play again can restart it; First launch has none.

Action	Pending UI	Prototype delay
Play a mix	Card play button stays visible with a spinner	1.6 s
Pause / Resume	Button reads Pausing… / Starting…, disabled	1.3 s
Stop casting	Button reads Stopping…, disabled	0.9 s

Action	Pending UI	Prototype delay
Seek	Status reads Seeking…, slider grey and locked	1.1 s
Bar volume	Slider grey and locked	0.9 s
Device volume in Cast to	That slider grey and locked	0.8 s
Add or remove a device	That row's checkbox grey and locked	1.2 s
Refresh a channel	Icon spins, row reads Refreshing…	1.6 s

The delays are simulated in the prototype; in production, end each pending state on the receiver's status event, not a timer.

Copy and Google Cast conventions

Cast-facing wording follows Google's Cast design checklist; use these strings exactly.

Where	String
Cast chip, casting	Casting to {device}
Cast chip, not casting	Cast to {device}
Picker title	Cast to
Bar button	Stop casting
Bar status	Playing · {creator} / Paused · {creator} / Seeking…
Pending button labels	Starting… / Pausing… / Stopping…
Stopped bar	Nothing playing / Last played: {title} / Play again
First launch bar	Nothing playing / Pick a mix above to start playing on {device}
Card badge	Now playing / Paused
Checkbox label (screen readers)	Cast to {device}
Slider label (screen readers)	{device} volume

In running text write "Google Cast" with both words capitalized, and never put Google Cast in the app's name (UX guidelines).

Gaps against the Cast checklist

These are required by Google but left out of the design on purpose, to keep the picker minimal. Decide before certification.

Requirement	Status in this design
Stop casting button inside the Cast dialog while casting (Cast dialog)	Only in the bar; unchecking every device also stops
"Casting {app name}" under devices already busy with another app	Not shown
First-run introduction that circles the Cast button (Cast button)	Not designed
Connecting state: Cast icon waves animate	Not drawn; use the SDK's animated icon

Requirement	Status in this design
Tapping the mini controller opens an expanded controller (Sender app)	No expanded player designed
Volume slider must reflect changes made from other senders or the remote	Engineering: subscribe to receiver volume events

Accessibility

Every text pair on the design passes WCAG AA; the lowest is the outline color at 5.2:1.

Pair	Contrast
onSurface #E0E2EC on surfaceContainer #1C2026	12.7:1
onSurfaceVariant #BFC7D9 on surfaceContainer	9.6:1
primary #FFB872 on surfaceContainer	9.6:1
onPrimary #4A2800 on primary	7.7:1
outline #8991A2 on surfaceContainer	5.2:1

- Use native controls: `<button>` for cards and icon buttons, `role="checkbox"` + `aria-checked` on device rows, native range inputs for every slider, each with the labels from the copy table.
- Icon-only buttons carry an aria-label (Close, Refresh {channel}, Play / Pause {title}).
- The card play button stays in the tab order while hidden and appears on focus, not only on hover.
- Visible focus ring: 2 px primary outline on every interactive element.
- The Cast to popover and Your channels dialog trap focus, close on Esc and return focus to the control that opened them. The prototype can't show Esc; production must have it.
- Hit targets are 40 px (44 px for sliders). That suits mouse use; raise them to 48 px if the layout ships to touch screens.
- prefers-reduced-motion: no cover zoom, static equalizer, spinners kept.

Open questions

- [ ] Device order in Cast to: alphabetical, groups first, or as the Cast SDK returns them?
- [ ] Group volume: does a group's slider scale its members, or set one shared level?
- [ ] The bar's volume slider: session (master) volume or the selected device's volume?
- [ ] Do we add Stop casting inside the picker for Cast certification (see Gaps)?
- [ ] First-run Cast introduction: design it now or before certification?
- [ ] Is an expanded player needed, or is the bar the only controller?
- [ ] Real device names and long-name behavior (the prototype truncates at 148 px).
- [ ] Mobile and tablet layouts, and whether a light theme is needed.