Moozaq Android: design handoff

Oct 17, 2026 · @Rob Coenen

Overview

The Android app is four screens on a 412 × 915 dp phone, built in Jetpack Compose with Material 3 (dark) and the Google Cast SDK. The Android row of the Moozaq UI canvas is the source of truth; every artboard is a tappable prototype. Tokens, copy and Cast rules match the desktop handoff.

Screen	What it shows
Browse	Top app bar with the Cast button, mix shelves, a 64 dp mini player floating over the bottom
Now playing	Full-screen expanded controller: cover, title, seek, play / pause, volume, Stop casting
Cast to	Modal bottom sheet: one card per device with a checkbox, icon, name and volume
Nothing playing	Browse with the mini player after Stop casting, or on first launch (switch with the artboard's Tweak)

Compared with the current app:

- The mini player shrinks from about a fifth of the screen to 64 dp; seek, volume and Stop casting move to Now playing.
- The device chip in the player becomes the standard Cast button, top-right in the app bar.
- The X button becomes "Stop casting", spelled out.
- Cards lose their always-visible play buttons: tapping a card plays it.

Out of scope: tablets, foldables, landscape, a light theme, and the Your channels screen.

Foundations

Use one custom dark `ColorScheme` (no dynamic color) so the amber brand survives on every phone; values come from Google's material-color-utilities with primary seed #FFB56B and neutral seed #1B2029.

Color roles

Compose role	Hex	Used for
primary	#FFB872	Play / pause button, checkbox, active slider, progress, now-playing outline, Stop casting label
onPrimary	#4A2800	Icons on primary, checkmark
secondaryContainer	#59422D	Inactive slider track, progress track
tertiary	#A2D2A3	Connected Cast icon
surface	#10131A	Browse background, fade under the mini player
surfaceContainerLowest	#0B0E15	Now playing background
surfaceContainerLow	#181C22	Cast to sheet
surfaceContainer	#1C2026	Mix cards, unchecked device cards
surfaceContainerHighest	#31353C	Mini player, empty cover tile
onSurface	#E0E2EC	Primary text and icons
onSurfaceVariant	#BFC7D9	Secondary text, unchecked devices, drag handle (40%)
outline	#8991A2	Stop casting border, pending device card border
Selected device card	primary 10% fill, primary 45% border	Checked rows in Cast to
Scrim	#000 at 32%	Behind the Cast to sheet

Type

Roboto Flex (bundle it, or use the Google Fonts provider), falling back to Roboto. Sizes in sp.

Style	Size / line	Weight	Used for
titleLarge	22 / 28	400	Shelf headings, Cast to title
titleLarge (bold)	22 / 28	600	Now playing title, 2 lines max
bodyLarge	16 / 24	400	Creator on Now playing, device names
titleSmall	14 / 20	600	Card titles (2 lines), mini player title (1 line)
bodyMedium	14 / 20	400	Card creator
labelLarge	14 / 20	500	Channels, Stop casting, device name in the top bar
bodySmall	12 / 16	400	Mini player status
labelMedium	12 / 16	500	Times, "Casting to", badge

Shape and spacing (dp)

Element	Size	Corner	Spacing
Top app bar	64 tall	n/a	16 start, 4 end
Mix card	200 wide, cover 200 × 112	12	12 between cards, 16 screen margin, 12 inner padding
Shelf heading	n/a	n/a	16 top, 8 bottom, 16 start
Mini player	full width minus 16, 64 tall	16	8 from the sides, 16 from the bottom; cover 48 (corner 8)
Fade under mini player	168 tall	n/a	surface 0% to 85% at 45% to 100% at 75%
Now playing cover	364 × 205 (16:9)	16	24 screen margin, 32 above the title
Play / pause button	96 × 96	28	24 above, 32 below

Element	Size	Corner	Spacing
Stop casting	full width, 48 tall	24	32 from the bottom
Cast to sheet	up to 820 tall	28 top corners	drag handle 32 × 4, 16 side margin
Device card	full width	20	8 between cards; checkbox target 48
Sliders	44 hit area, 12 to 16 track	6 to 8	thumb 4 wide

Motion

Element	Spec
Equalizer bars on the playing card	900 ms loop, ease-in-out, bars offset 300 ms
Spinners (starting, pending)	1 s linear loop
Card press	Material ripple over the whole card
Bottom sheet and full-screen player	Material 3 defaults (ModalBottomSheet; shared-element or slide-up for Now playing)

When the system's "Remove animations" setting is on, freeze the equalizer bars.

Screens

Browse

A vertical list of shelves under a 64 dp top app bar; each shelf is a horizontal row of mix cards that snaps card by card. The mini player floats 16 dp above the bottom edge, and content fades out under it.

- **Top app bar:** logo (148 × 40) at the start; Cast button (48 dp icon button) and "Channels" (text button) at the end. The Cast button is the SDK's `MediaRouteButton`, tinted to match.
- **Mix card:** the whole card is the tap target and starts that mix. No play icon on cards. Bottom padding of the list is 96 dp so the last row clears the mini player.

Card state	What changes
Default	Cover, 2-line title, creator
Pressed	Ripple over the whole card
Starting	Cover dims (surface at 35%), a 48 dp dark disc with a primary spinner in the center; other cards stay tappable but don't start a second mix
Now playing	2 dp primary outline, cover dims, badge top-start: animated equalizer + "Now playing"; tap opens Now playing
Paused (this mix)	Same, badge reads "Paused", bars frozen

Mini player (64 dp, corner 16, surfaceContainerHighest, 8 dp shadow):

State	Left (tap opens Now playing)	End	Bottom edge
Casting	48 dp cover, title (1 line), cast icon + "Casting · Bedroom speaker"	Pause icon button (48 dp)	3 dp progress bar, primary on secondaryContainer
Paused	Same, "Paused · Bedroom speaker"	Play icon button	Progress frozen
Pausing / Resuming	"Pausing…" / "Resuming…"	Spinner, disabled	As before
Stopped	Last cover at 70%, "Nothing playing", "Last played: {title}"	40 dp primary circle with play (Play again)	None
First launch	Music-note tile, "Nothing playing", "Pick a mix to cast to Bedroom speaker"	None	None

The Cast button in the app bar is connected (filled frame, tertiary) while casting, and disconnected (outline, onSurfaceVariant) when stopped.

Now playing

The Cast expanded controller. Full screen on surfaceContainerLowest, 24 dp side margins, content centered vertically between the top bar and Stop casting.

1. Top bar: collapse button (expand_more, back to Browse); centered "Casting to" over the device name; Cast button at the end (opens Cast to).
2. Cover, 364 × 205, corner 16.
3. Title (2 lines, bold titleLarge) and "Jazz Haze · Playing".
4. Seek slider (16 dp track, 44 dp hit area) with elapsed time at the start and total duration at the end.
5. Play / pause: 96 dp primary button, corner 28.
6. Volume row: volume_down icon, slider, volume_up icon. This is the session volume.
7. Stop casting: full-width outlined button pinned 32 dp from the bottom; stops playback and returns to Browse in the Stopped state.

Cast to

A Material 3 modal bottom sheet over Browse (scrim 32%), surfaceContainerLow, 28 dp top corners, drag handle, title "Cast to". Drag down or tap the scrim to close.

Each device is one card (corner 20) that holds everything for that device:

- Checkbox at the start, centered on the card: checked = this device plays the current mix.
- Device icon (speaker, speaker_group or tv) and the name on the first line.
- That device's volume slider right below, the full width of the text column.

Card state	Fill	Border	Icon and name
Checked	primary 10%	primary 45%	onSurface
Unchecked	surfaceContainer	none	onSurfaceVariant
Adding / removing	As target state	outline	Checkbox grey and locked

Unchecking the last device stops playback. The list scrolls inside the sheet when it is taller than 820 dp.


Nothing playing

Browse in the Stopped or First launch state of the mini player (table above). Play again restarts the last mix on the last device; a tap on any card does the same for that mix.

Navigation

Browse is the home screen; Now playing and the Cast to sheet open over it, and stopping always returns to Browse in its Nothing playing state.

Every screen opens from Browse, and Stop casting lands in Nothing playing

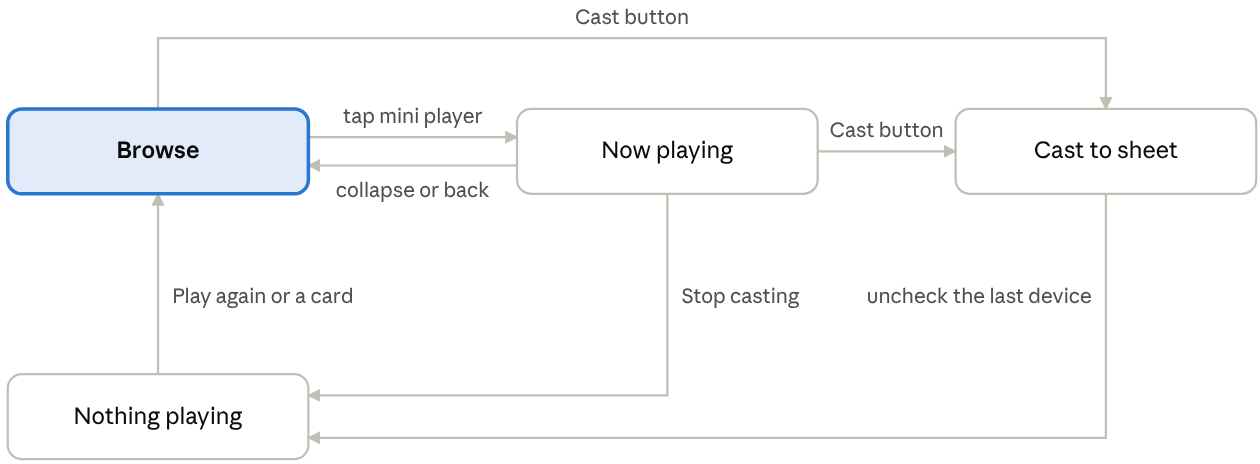

Android navigation · 4 screens

The Cast to sheet closes back to whichever screen opened it (drag down, tap the scrim, or system back).

Interaction, Cast behavior and latency

Nothing changes state until the Cast receiver confirms it; until then only the touched control shows a pending state, and the rest of the screen stays usable.

Action	Pending UI	Prototype delay
Tap a card	Cover dims, spinner disc on the cover	1.6 s
Pause / resume (mini player or Now playing)	Spinner in the button, "Pausing…" / "Resuming…", disabled	1.3 s

Action	Pending UI	Prototype delay
Seek	Status reads "Seeking…", slider grey and locked	1.1 s
Session volume	Slider grey and locked	0.9 s
Device volume in Cast to	That slider grey and locked	0.8 s
Check or uncheck a device	That card's border grey, checkbox locked	1.2 s

Prototype delays are simulated; in the app, end each pending state on the receiver's status callback, never a timer.

Touch

- Every control has a 48 × 48 dp touch target, including the 40 dp Play again circle and the 18 dp checkbox.
- Cards use a Material ripple; there are no hover states on Android.
- The mini player has two targets: the content area opens Now playing, the end button plays or pauses.

What the Cast SDK and the system must do

These come from Google's Cast sender checklist and are not drawn because Android or the SDK renders them.

Requirement	Implementation
Hardware volume buttons change cast volume and show a volume slider with the Cast icon	Handled by the Cast SDK / MediaRouter; don't override the volume keys
Volume sliders reflect changes from other phones or the remote	Observe the session's volume and update every slider
Media notification: app icon, artwork, title, receiver name, play / pause, an X action that stops casting; tap opens Now playing	Cast SDK media notification (MediaSession)

Requirement	Implementation
Lock screen: artwork, title, play / pause, hardware volume	Same MediaSession
Reopening the app while still casting restores the connected Cast button and the mini player	Session resume
First-run introduction that circles the Cast button the first time devices are found	SDK `IntroductoryOverlay` (not designed; default styling is acceptable)

Copy, accessibility and open questions

Copy

Where	String
Mini player status	Casting · {device} / Paused · {device} / Pausing… / Resuming…
Now playing top bar	Casting to / {device}
Now playing status	{creator} · Playing / Paused / Seeking…
Now playing button	Stop casting
Sheet title	Cast to
Card badge	Now playing / Paused
Stopped mini player	Nothing playing / Last played: {title}
First launch mini player	Nothing playing / Pick a mix to cast to {device}

TalkBack

Element	contentDescription / role
Mix card	Button, "Play {title}"; the now-playing card: "Open player: {title}"

Element	contentDescription / role
Cast button	"Casting to {device}. Choose devices" / "Cast to {device}"
Mini player content	"Open player: {title}"
Mini player and Now playing button	"Pause" / "Resume"
Play again	"Play again: {title}"
Device card	Checkbox "Cast to {device}", checked state announced
Sliders	"{device} volume", "Volume", "Playback position", with value
Collapse button	"Close player"

- Contrast: every text pair passes WCAG AA; the lowest is outline on surfaceContainer at 5.2:1 (full table in the desktop handoff).
- Text must reflow at 200% font scale: card titles stay 2 lines and ellipsize; the mini player title stays 1 line.
- Freeze the equalizer when animations are turned off.

Open questions

- [ ] Should the Cast to sheet also hold a Stop casting button (a Cast checklist requirement)?
- [ ] Group volume: does a group's slider scale its members or set one level?
- [ ] Device order in Cast to: alphabetical, groups first, or as the SDK returns them?
- [ ] Your channels on Android: full screen or a sheet?
- [ ] Predictive back: should the Now playing collapse follow the system back gesture animation?
- [ ] Tablet and landscape layouts.

Assets

The Android handoff zip (moozaq-android-handoff.zip) holds everything engineering needs besides this doc.

Path	Contents
`Moozaq-Android-design-handoff.pdf`	This doc
`compose/Color.kt`, `Theme.kt`, `Type.kt`, `Dimens.kt`	Drop-in Compose theme: dark ColorScheme, Roboto Flex typography, dp values from this doc
`res/values/colors.xml`	The same colors for XML views and the Cast SDK styles
`res/drawable/ic_*.xml`	The 12 Material icons as VectorDrawables
`tokens/tokens.json`	Platform-neutral tokens shared with desktop
`images/navigation.png`	The navigation diagram
`prototype-source/`	The four Android artboards and the canvas layout, for reference

Use the Cast SDK's own `MediaRouteButton` and its icons in the app; the cast vectors in the zip are for mockups.