#### Lab Sheet 5

#### **Bit Operations**

In the previous lab, you explored timing on the Arduino, and how to make the LEDs blink specific patterns. In this lab, you will explore different bit-wise operations on the Arduino.

### 1 Getting Started

Make sure you have everything you need to complete this lab. These items should be included in your CS1 Lab Kit. You will need to wire up all 8 LEDs supplied in your kit. If you are missing a resistor or LED, ask your TA for replacements.

- Arduino Nano.
- USB cable.
- Atmel ATmega328 Datasheet.
- Atmel 8-bit AVR Instruction Set Manual.
- Arduino Schematic Circuit Diagram.
- Breadboard.
- 8 LEDs.
- 8 330 $\Omega$  resistors (color coded: Orange-Orange-Black-Black-Brown).
- 9 jumper wires.

## 2 Wiring up 8 LEDs

For this lab we would like to connect all 8 LEDs to the Arduino so that we can display an entire byte of data. In Lab 2, you connected PORTB to 4 LEDs to display the lower 4 bits of a byte. Take a look at the Arduino schematic to see if it is possible to connect the upper 4 bits of PORTB (i.e. PB4 to PB7) to LEDs.

Question 1 What prevents us from connecting the upper 4 bits of PORTB to external LEDs?

What about using PORTC or PORTD? Take a look at the Arduino schematic again at PORTC . You will find that it does not have a full 8 bits to connect to LEDs. PORTD has all 8 bits, but its pins PDO and PD1 are used for the communication

over the USB cable while programming the Arduino. Given these constraints, how would we add another 4 bits of output to have 8 LEDs connected to the Arduino?

One solution is to use the upper 4 bits of PORTD (i.e. PD4 to PD7) to display the upper 4 bits of the byte that we wish to display. This way, we can still use the lower 4 bits of PORTB (i.e. PB0 to PB3) to display the lower 4 bits of the byte.

See the table below for how the LEDs are connected to the Ports Pins:

LED bit	PORT PIN	Arduino Pin
0	PB0	D8
1	PB1	D9
2	PB2	D10
3	PB3	D11
4	PD4	
5	PD5	
6	PD6	
7	PD7	

**Question 2** Assuming this set-up above, what pins from PORTD on the Arduino do we have to connect to the LEDs upper 4 bits?

# 3 Bit Shifting

A common set of operations in assembly are called *bit shifting* operations (https://en.wikipedia.org/wiki/Bitwise\_operation#Bit\_shifts). Bit shifting is where all of the bits in a binary number are moved one bit position to the *left* or to the *right*.

Using the instruction set documentation, look up the left bit shifting LSL instruction, and consider the code listing below:

```
1 ldi r16, 0x13
2 lsl r16
```

Listing 1: Bit shifting with LSL

Question 3 After the LSL instruction, what are the contents of the register r16?

Question 4 Effectively, what mathematical operation occurs in bit-shifting to the left?

Now, look up the right bit shifting instruction, LSR in the instruction set documentation and consider the code below:

```
1 ldi r16, 0x13
2 lsr r16
```

Listing 2: Bit shifting with LSR

Question 5 After the LSR instruction, what are the contents of the register r16?

Question 6 Effectively, what mathematical operation occurs in bit-shifting to the right?

# 4 Bit Masking with bitwise AND

Another set of binary operators commonly used in assembly are bitwise operators (https://en.wikipedia.org/wiki/Bitwise\_operation). Bitwise operations operate on the individual bits of one or more binary numbers. When applying a bitwise operation on two equal-length binary numbers, the corresponding bits from same bit positions in both numbers are evaluated with the operator.

One operator is the *logical AND* operator whose effective operation is multiplying the bits from to binary numbers with each other. In the table below, the bits in the first row are *AND*'d with the bits in the second row to produce the resulting third row.

	0	0	1	1
AND	0	1	0	1
Result	0	0	0	1

You can see that a 1 exists in the results only when both bits being AND'd are also 1.

AND operations are useful for bit masking operations. Bit masking is where you want to isolate a portion of bits in a binary number, and ignore the other bits by setting those bits to 0. We do this by using one binary number as a bit mask where we set the bits to 1 for the bit position we want to isolate. Then, by ANDing the bit mask with another binary number, the resulting byte contains only the isolated bit positions.

Using the instruction set documentation for the AND assembly instruction, consider this code:

```
1 ldi r16, 0x38
2 ldi r17, 0x2A
3 and r17, r16
```

Listing 3: Bit masking with logical AND

Question 7 After the AND instruction in Line 3, what are the contents of the register r16?

Question 8 After the AND instruction in Line 3, what are the contents of the register r17?

**Question 9** If we consider the binary number in **r16** as a *bit mask*, then what bit positions in **r17** are being isolated and remain in **r17** as a result of the above code?

## 5 Bit Composition with bit-wise OR

Another bitwise operator that is useful to use is the *logical OR* operator, where the results of each bit position is 0 if both bits are 0, while otherwise the result is a 1. In the table below, the bits in the first row are OR'd with the bits in the second row to produce the resulting third row.

	0	0	1	1
OR	0	1	0	1
Result	0	1	1	1

You can see that 0 exists in the results only when both bits being OR'd are also 0.

*OR* operations are useful for composing binary from parts of other binary numbers when used with bit masking. Using the instruction set documentation for the *OR* operation, consider this code:

```
1 ldi r16, 0x38
2 ldi r17, 0x2A
3 ldi r18, 0x0F
4 and r16, r18
5 ldi r18, 0xF0
6 and r17, r18
7 or r16, r17
```

Listing 4: Bit masking with logical OR

Question 10 BEFORE the OR instruction in Line 7 executes, what are the contents of r16?

Question 11 BEFORE the OR instruction in Line 7 executes, what are the contents of r17?

Question 12 AFTER the OR instruction in Line 7 executes, what are the contents of r16?


You can see that after the AND instruction in Line 4, the lower 4 bits of **r16** remain (i.e. the upper 4 bits are all 0). After the AND instruction in Line 6, the upper 4 bits of **r17** remain (i.e. the lower 4 bits are all 0). With the OR instruction in Line 7, these two parts are combined into a single binary number and is saved in register **r16**.

You will use *bit shifting*, the *logical AND* and *logical OR* operator in your Lab 5 session to manipulate bits in the Arduino registers. Other commonly used bitwise operators exist on the Arduino, and you may be interested in looking up the *NOT* and *XOR* instructions in the *instruction set* documentation.

#### 6 Wire up 8 LEDs to output a single byte

Before we start programming the Arduino, we need to wire up the 8 LEDs to the appropriate pins to PORTB and PORTD as described in Section 2. You will find the set-up similar to that of wiring PORTB from Lab 2.


As you can see in the photo below, 8 LEDs are lined up next to each other, so that a single byte of data can be read from the output. They are wired such that bit 0 of the byte output is the **right**-most LED, and bit 7 is the **left**-most LED.

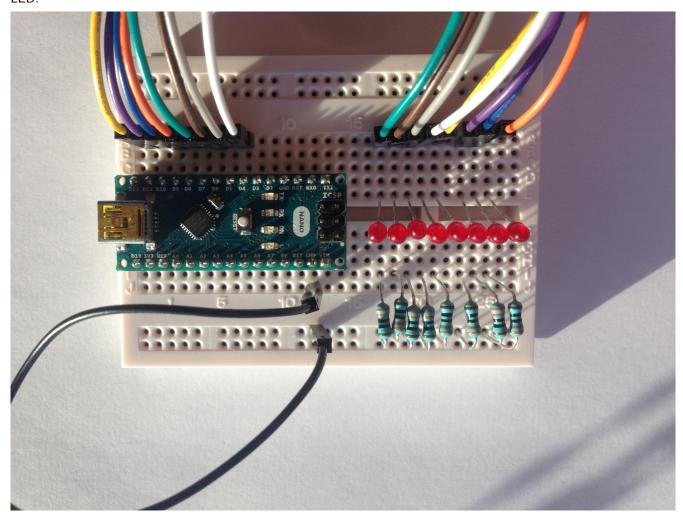

Now that you have 8 LEDs wired up to the Arduino, let us write a program that outputs a single byte, hexadeciamal 0xDB, to test the wiring set-up on the LEDs.

- 1. Using a copy of a previous program from Lab 2, create a new file and name it write\_DB.s. Your program should do all of the set-up that is required to write output to PORTB and PORTD, in particular:
  - (a) Declare the appropriate code symbols with .eq

- (b) Clear the SREG register at the beginning of the program.
- (c) Set-up the lower 4 bits of PORTB for output with the DDRB register
- (d) Set-up the upper 4 bits of PORTD for output with the DDRD register
- 2. Add code to your program that loads the value that we want to output (hexadecimal OxDB) into a register.
- 3. Write out the value from the register to **both** PORTB and PORTD using separate instructions. This should in effect display the value on the LEDs with the pattern in the photo below:

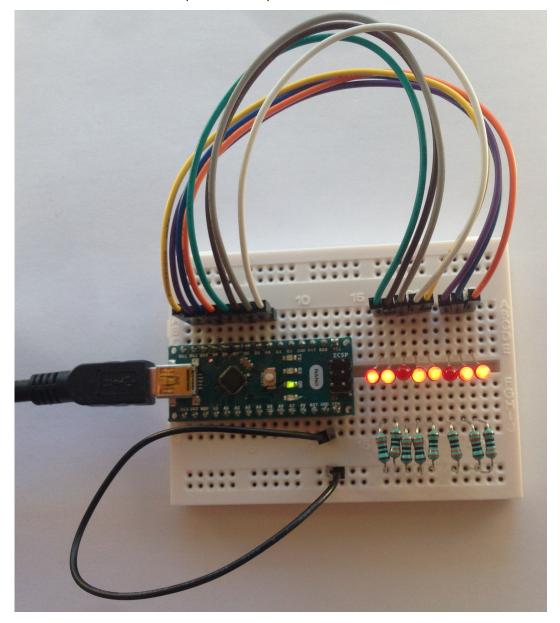

- 4. Make sure that you are able to correctly write the hexadecimal 0xDB value out to the LEDs before moving on to the next part.
- 5. Think of a new byte value to write out the LEDs, and test a variation of your assembly program with that value to make sure that you get the LED pattern that you would expect. Remember, for any value you wish to display on the LEDs, you will have to write it to both PORTB and PORTD as the LEDs are connected to different bits of both ports.

### 7 Bit shifting

Now that you can successfully display a byte value, let us write a program that uses the *bit shifting* operators LSL and LSR we explored earlier.

- 1. Copy your program from the previous Section 6 and call the new file bit\_shifting.s.
- 2. Start by loading the hexadecimal value 0x55 into a register. Display that value on the LEDs like you did with your write\_DB.s program.
- 3. Test your program to make sure that you can read the value 0x55 on the LEDs. You should see a bit pattern where every other LED is turned on.
- 4. Add code to your program to bit shift this value in the register 1 bit position to the *left*. Think about which operator you would use to do a left bit shift operation. Display this new value out on the LEDs.
- 5. Test your program to make sure that you have a new value displayed on the LEDs. What values/bit pattern should you see on the LEDs?
- 6. Add code to your program that bit shifts the current value in the register 1 bit position back to the *right*. Think about which operator you would use to do a right bit shift operation.
- 7. Test your program to make sure that you have a new value displayed on the LEDs. What values/bit pattern should you see on the LEDs?
- 8. At this point, you *should* have a program that displays the original value (hexadecimal *0x55*) on the LEDs. Even though different values are displayed on the LEDs throughout the code, they are displayed too quickly for the human eye to perceive.

Remember, in the previous Lab 4, we used nest loops to create a 0.5 second *delay*. Add delay code to your program to have a 0.5 second delay after each time a value displayed on the LEDs. Be *careful* that you are use *different* registers for storing you loop counters and the value that you are writing out to the LEDs.

- 9. Test your program to make sure that it works as you expect. It should:
  - (a) display the value 0x55 on the LEDs
  - (b) delay for 0.5 seconds
  - (c) shift bits to the left 1 position and display the new value on the LEDs
  - (d) delay for 0.5 seconds
  - (e) shift bits to the right 1 position and display the original value to the LEDs
- 10. Finally, it would be nice to not have to reset your Arduino every time you want to see this bit shifting. Add a loop to your program so that you bit shifting code repeats indefinitely.

Congratulations! You have successfully used bit-shifting operators to make the LEDs blink back and forth.

# 8 Bitwise Operations

Now, you will attempt to use the bitwise operators AND and OR on binary numbers stored in registers. You will use the operators along with the bit shifting operators to swap the upper and lower *nybbles* in a register. A *nybble* is another word for 4 bits, because a nybble is *half* a byte.

1. Start with a copy of your program from Section 6 and call the new file swap\_nybbles.s. This should be the program that simply displays a byte on the LEDs.

- 2. Load the hexadecimal value 0x81 into the register and display it on the LEDs. *Does it produce the value that you expect?*
- 3. Using the AND operator, *bit mask* the lower 4 bits of the value in the register and store it in a new register. Try to preserve the original value in the original register. You can overwrite the bit mask register to do this. Alternatively you can use the MOV operator to copy the value of one register into another (Take look in the *instruction set* documentation on how to use MOV).
- 4. Test your program by displaying the lower 4 bits on the LEDs. What value do you expect to be displayed on the LEDs?
- 5. Once you have a program that displays these 4 bits. Add code that shifts these 4 bits to the *left* so that they are in the upper 4 bits of the register. (This should be 4 LSL operations).
- 6. Test your program by displaying this new shifted value on the LEDs. What value do you expect to be displayed on the LEDs?
- 7. Add code to your program that bit masks the *upper* 4 bits from the original register (i.e. the one that held the hexadecimal value 0x81) and shifts those bits to the lower 4 bits in a new register. This code should be *very* similar to the code in steps 3-6. Test your program incrementally by displaying the intermediate values of registers on the LEDs.
- 8. Now you should have two registers, each with the upper and lower nybbles (i.e. 4 bits) from the original register shifted by 4 bit positions. Write code to use the OR operator to combine these two nybbles into one byte. Display this byte out to the LEDs. What value do you expect to be displayed on the LEDs?
- 9. Your program should have swapped the upper and lower bits in the original register, and as a result you should see the hexadecimal value 0x18 displayed on the LEDs.
- 10. Put the code that you wrote for the *nybble* swapping in a loop so that the upper and lower nybbles of a register are swapped continuously. Add a 0.5 second delay after the final LED display that you added in step 8 above.
- 11. Your program should now be constantly swapping the upper and lower 4 bits. Try starting with a different hexadecimal value, can you get a different LED blinking effect to happen?

**Congratulations!** You have successfully used bitwise operator AND and OR along with bit shifting operators to swap the upper and lower nybbles of a byte and display them on the LED.