

Plasterboard is costing you by the tonne.

Every tonne of plasterboard that leaves a Victorian transfer station for a metropolitan landfill carries **\$177.19** of state levy in 2026–27, before the gate fee. New South Wales charges \$180.20, Queensland \$135, South Australia \$171. The levy only moves one way.

Plastercycle puts an enclosed, hook-lift bin by your gate. Plasterboard goes in through the side, stays dry, and leaves your site as a recyclable — collected on our trucks and processed back into gypsum and paper.

~94%


of a sheet
is gypsum

**6–8
t**

in a full
bin
(estimate)

\$1,240

levy avoided
per full bin,
metro Vic

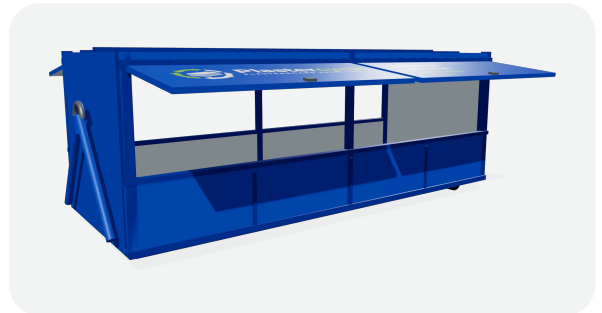

Why a dedicated bin

Buried with biodegradable waste, gypsum can produce hydrogen sulphide; in Europe it may only go into cells that take no biodegradable waste. Kept separate, clean and dry, it is one of the most recoverable materials you take in: recovered gypsum goes into new plasterboard, cement and soil conditioner.

Builders and renovators already arrive with loads that are mostly board. A bin by the gate lets them drop it straight in.

What it saves

Plasterboard a year	Full bins	Levy avoided, metro Vic
100 t	about 15	\$17,719
250 t	about 36	\$44,298
500 t	about 72	\$88,595
1,000 t	about 143	\$177,190

Levy only; gate fees are on top. Your own figures:
plastercycle.com/councils

The bin


Overall length	6,300 mm	Overall width	2,450 mm
Overall height	2,400 mm	Loading from about opening	1,000 mm
Side	two per side, panel stop-hinged	Rear door	full width, full height
Roof	enclosed, weatherproof	Inside	fully sheeted, smooth
Volume	about 37 m³	Lifting	hook-lift

What goes in

Plasterboard offcuts, part and whole sheets, cornice; standard, fire-rated and moisture-resistant board. Clean and separate.

What stays out

Fibro or anything that might contain asbestos; foil-backed and insulation-bonded board; lead paint; tiles, timber, metal, batts, plastic; general rubbish and hazardous waste. A printable bin sign and a one-page gate staff guide are at plastercycle.com/resources.

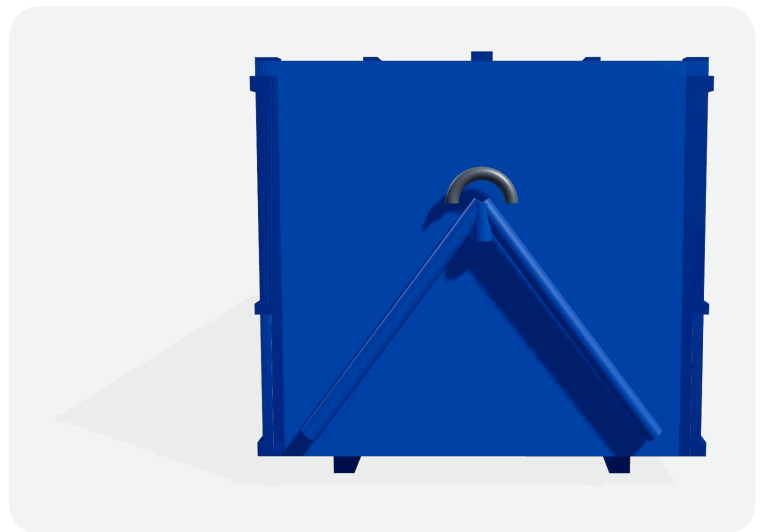

What a trial involves

1. **A spot by the gate.** Flat, firm ground for a 6.3 × 2.45 m bin, with room in front of the hook end for a truck to reverse up. We walk it with you before the first drop.
2. **Signage and the gate guide.** The bin sign goes on the bin; the guide goes in the gatehouse. Residents bring plasterboard separately; staff keep fibro out.
3. **A call when it's full.** We collect the full bin and leave an empty one. Loads are weighed, so you know what left your site.
4. **Review after the first loads.** Tonnes, bin cycle, what came through the gate — and whether a second bin or a schedule makes sense.

Next step

Tell us where the bin would go and roughly how much board you see. We'll come back with a plan and a quote. plastercycle.com/book · nigel@recycle.au

Sources: EPA Victoria waste levy (10.26 fee units × \$17.27 for 2026–27); NSW EPA, Queensland Government and EPA SA levy pages; Gypsum Board Manufacturers Association estimate via ReGyp; SEPA guidance on gypsum in landfill; British Gypsum and One Click LCA for board density. Full list with links at plastercycle.com/facts. Bin weights are estimates until loads are weighed.