

Field Repair Kit: Part Reference

HT 135 / MS 261 / MS 462

61 parts

Part	Part number	Bin	Page
Air filter	4180 141 0300	T0	3
Air filter HD2	1141 140 4400	T0	4
Air filter HD2	1142 140 4402	T0	5
Brake band	1141 160 5400	B0	6
Brake band	1142 160 5400	B0	7
Bumper strip	1121 648 6610	T9	8
Bumper strip	1123 648 6600	T9	9
Carrier	1121 647 3100	B3	10
Chain catcher	1141 656 7700	T10	11
Chain catcher	1142 656 7700	T10	12
Chain sprocket 3/8"P 7 teeth	0000 640 2003	T2	13
Chain tensioner kit	MA02 007 1002	B1	14
Chain tightener	4182 660 0700	B1	15
Clutch	1121 160 2051	B2	16
Clutch	1142 160 2000	B2	17
Clutch	4180 160 2000	B2	18
Collar nut M8	0000 995 0803	T11	19
Countersunk screw M5x18-10.9	9061 373 0982	T11	20
Decompression valve	1141 020 9430	T4	21
Decompression valve	1142 020 9400	T4	22
E-clip 8x1.3	9460 624 0801	T3	23
Fan housing with rewind starter	1141 080 2104	B0	24
Fan housing with rewind starter	1142 080 2102	B0	25
Filler cap	0000 350 0532	T0	26
Filler cap	0000 350 0533	T0	27
Filler cap, mix	0000 350 0527	T0	28
Filler cap, oil	0000 350 0529	T0	29
Guard	1141 656 1501	T8	30
Guard	1142 656 1500	T8	31
Inner side plate	1128 664 1000	B1	32
Inner side plate	1141 664 1030	B1	33
Needle cage 10x13x10	9512 933 2260	T1	34
Needle cage 10x16x12	9512 933 2379	T1	35
Oil filler cap	0000 350 0537	T0	36
Oil pump	1141 640 3200	B3	37
Oil pump	1142 640 3200	B3	38
Oil pump	4138 640 3200	B3	39
Pan head screw IS M5x20	9022 371 1020	T11	40
Pan head self-tapping screw	9074 477 4438	T11	41
Pawl	0000 195 7200	T5	42

Part index (continued)

Part	Part number	Bin	Page
Pickup body	0000 350 3518	T7	43
Pickup body	0000 350 3521	T7	44
Rewind starter	4182 190 4001	B0	45
Rim sprocket 0.325" 7T	0000 642 1236	T2	46
Rim sprocket 3/8" 7T	0000 642 1223	T2	47
Rim sprocket kit 0.325" 7T	1141 007 1002	B5	48
Rim sprocket kit 3/8" 8T	1128 007 1001	B5	49
Spark plug BPMR7A	0000 400 7000	B4	50
Spark plug NGK CMR6H	0000 400 7011	B4	51
Spline screw M5x12	9022 341 0960	T11	52
Spring	1118 195 3500	T5	53
Spring	1128 195 3500	T5	54
Spring	1128 647 2400	B3	55
Tension spring	1141 160 5500	T6	56
Tension spring	1142 160 5500	T6	57
Tensioner slide	1125 640 1900	B1	58
Washer	4182 162 8900	T2	59
Washer Ø 27 mm	0000 958 1022	T3	60
Washer Ø 27 mm	0000 958 1032	T3	61
Worm	1121 640 7111	B3	62
Worm	1128 640 7112	B3	63



Online guide

Air filter


4180 141 0300

Bin **T0** | 1 spare per kit | **S1** supervision

HT 135 — air filter

Air-filter element between the filter cover (item 6) and filter housing (item 9).

Item 8 | Qty listed: 1

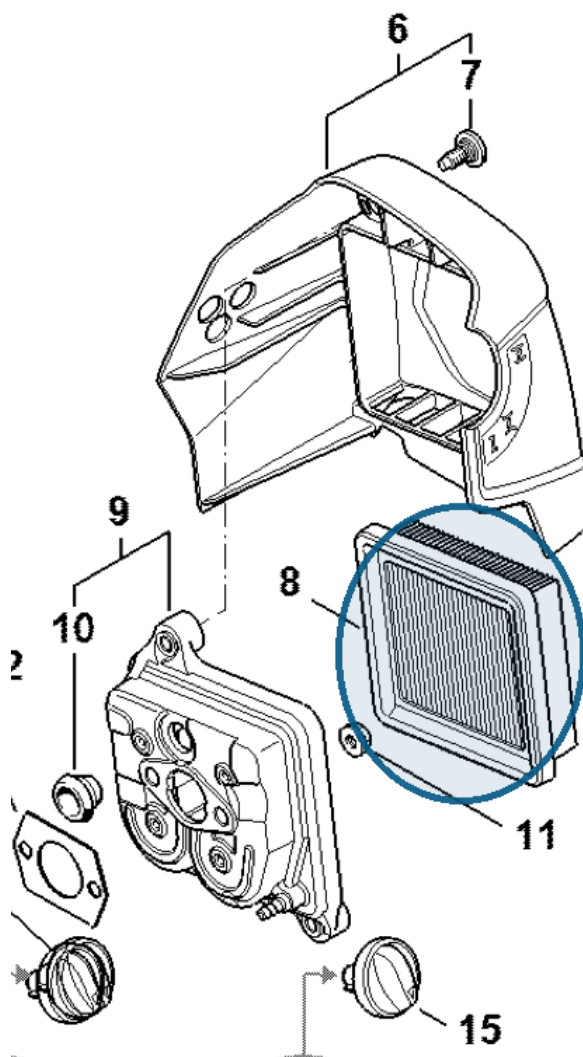

HT 135-Z spare-parts list, 10/28/2024. Drawing p. 20; parts table p. 21.



Online guide

Air filter HD2


1141 140 4400

Bin **T0** | 1 spare per kit | **S1** supervision

MS 261 — air filter

HD2 air filter on the carburetor bracket.

Item 19 | Qty listed: 1

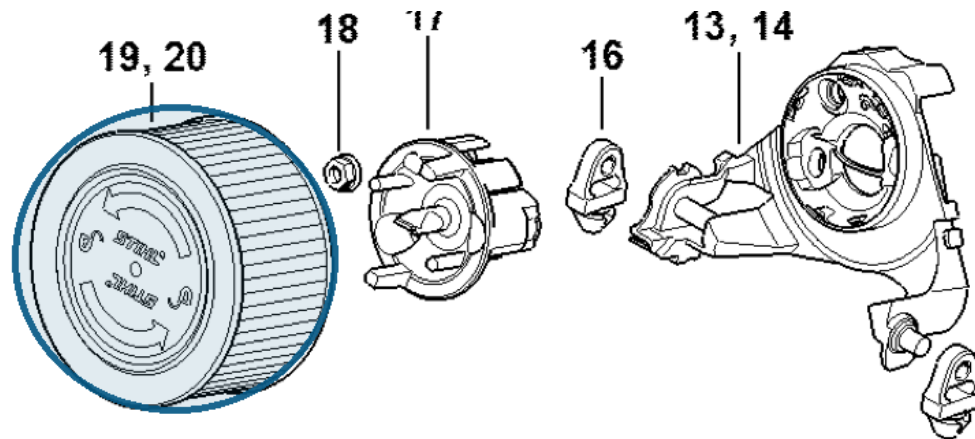

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 27; parts table p. 28.



Online guide

Air filter HD2


1142 140 4402

Bin **T0** | 1 spare per kit | **S1** supervision

MS 462 — air filter

HD2 air filter on the carburetor bracket.

Item 15 | Qty listed: 1

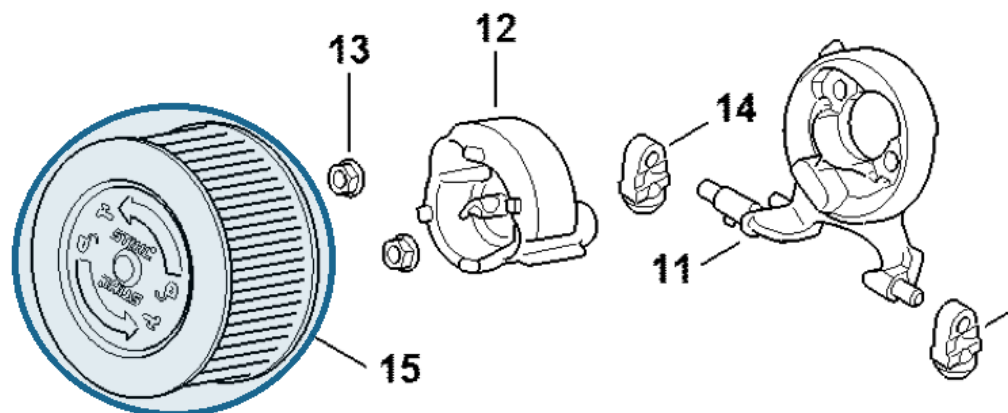

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 27; parts table p. 28.



Online guide

Brake band


1141 160 5400

Bin **B0** | 1 spare per kit | **S2** supervision

MS 261 — chain brake

Brake band around the clutch drum. Shown with tension spring 1141 160 5500.

Item 6 | Qty listed: 1

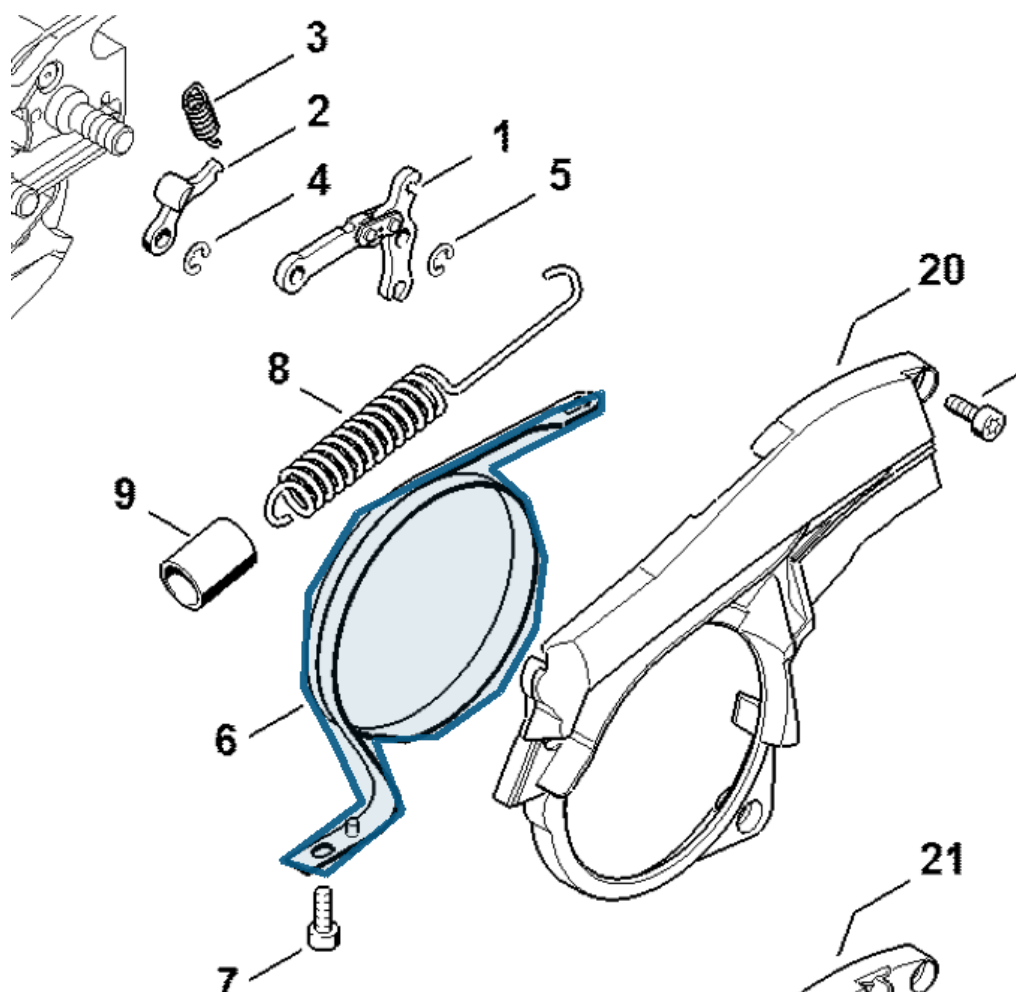

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 13; parts table p. 14.



Online guide

Brake band


1142 160 5400

Bin **B0** | 1 spare per kit | **S2** supervision

MS 462 — chain brake

Brake band around the clutch drum. Shown with tension spring 1142 160 5500.

Item 1 | Qty listed: 1

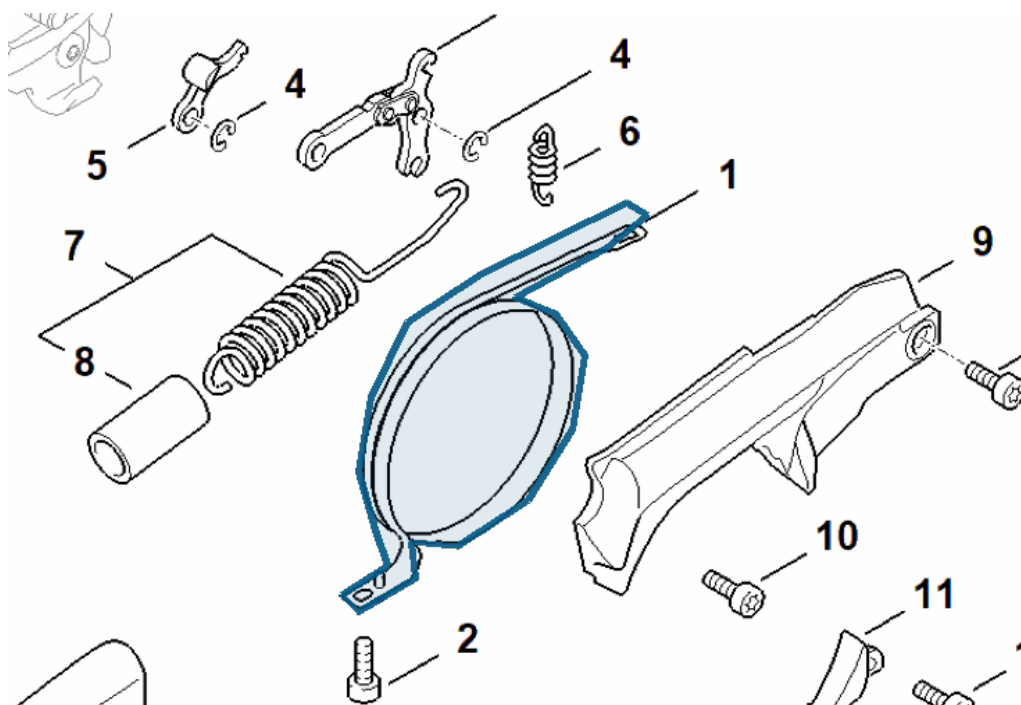

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 15; parts table p. 16.



Online guide

Bumper strip

1121 648 6610


Bin **T9** | 8 spares per kit | **S1** supervision

MS 261 — chain sprocket cover

Two strips on the inside of the chain sprocket cover.

Item 12 | Qty listed: 2

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 15;
parts table p. 16.

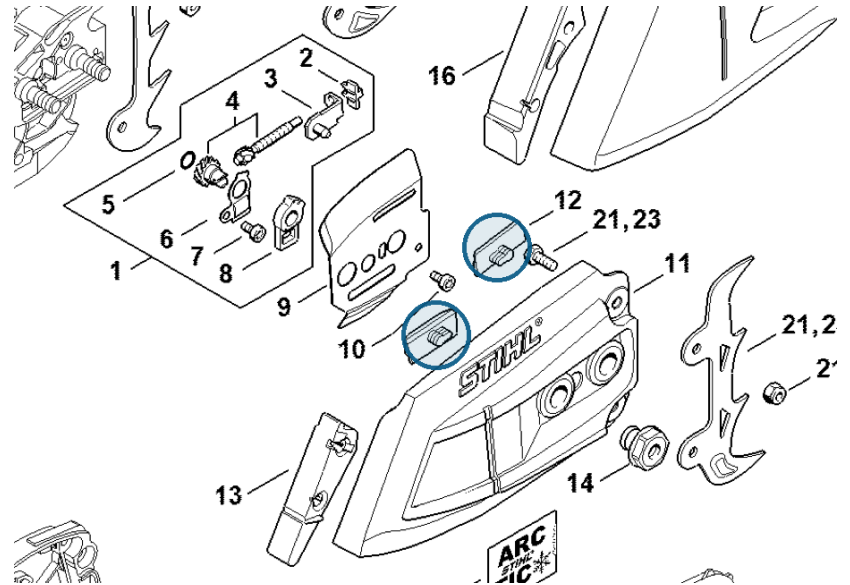


MS 462 — chain sprocket cover

Two strips on the inside of the chain sprocket cover.

Item 4 | Qty listed: 2

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 17;
parts table p. 18.

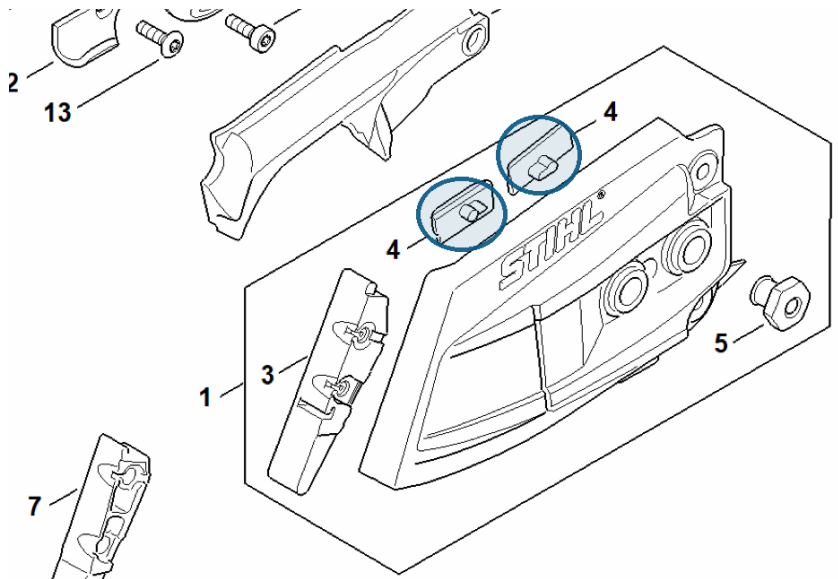



Online guide

Bumper strip


1123 648 6600

Bin **T9** | 4 spares per kit | **S1** supervision

HT 135 — chain sprocket cover

Two strips on the gear-head housing, behind the chain sprocket cover.

Item 12 | Qty listed: 2

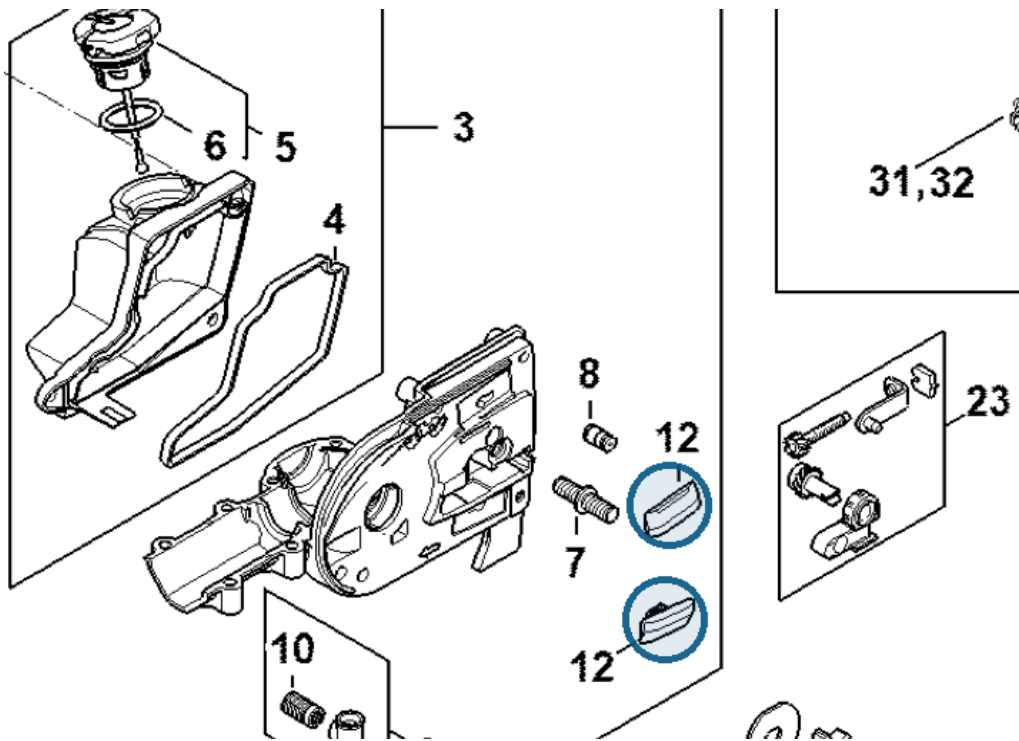

HT 135-Z spare-parts list, 10/28/2024. Drawing p. 17; parts table p. 18.



Online guide

Carrier


1121 647 3100

Bin **B3** | 3 spares per kit | **S2** supervision

MS 261 — oil pump drive

Carrier on worm 1121 640 7111 (item 11).

Item 12 | Qty listed: 1

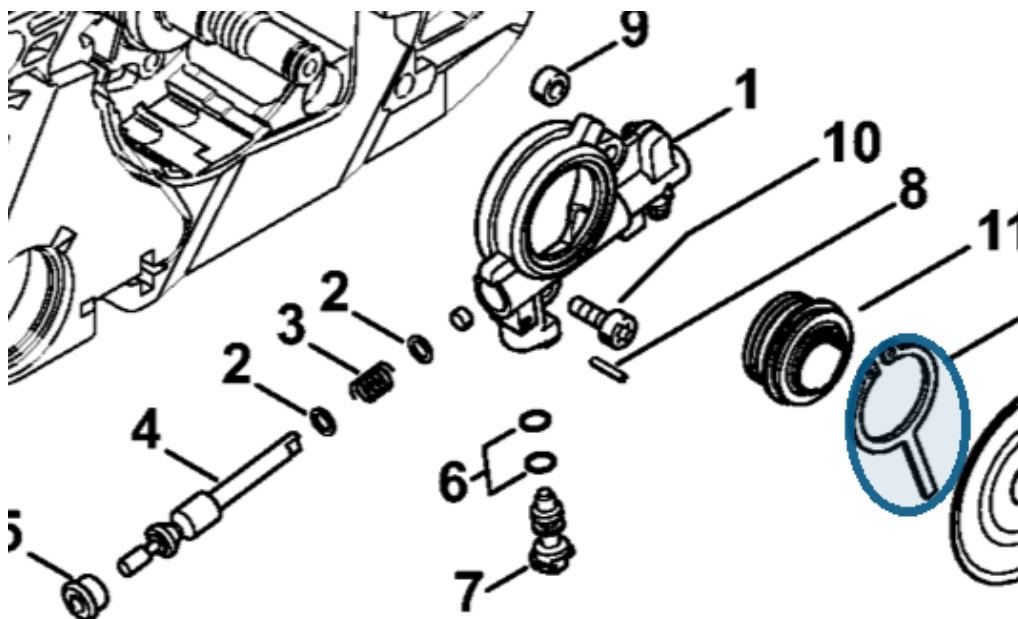

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 10; parts table p. 11.



Online guide

Chain catcher


1141 656 7700

Bin **T10** | 3 spares per kit | **AS1** supervision

MS 261 — chain catcher

Secured to the crankcase by self-tapping screw **9074 477 4438** (IS-P6×30; item 40).

Item 39 | Qty listed: 1

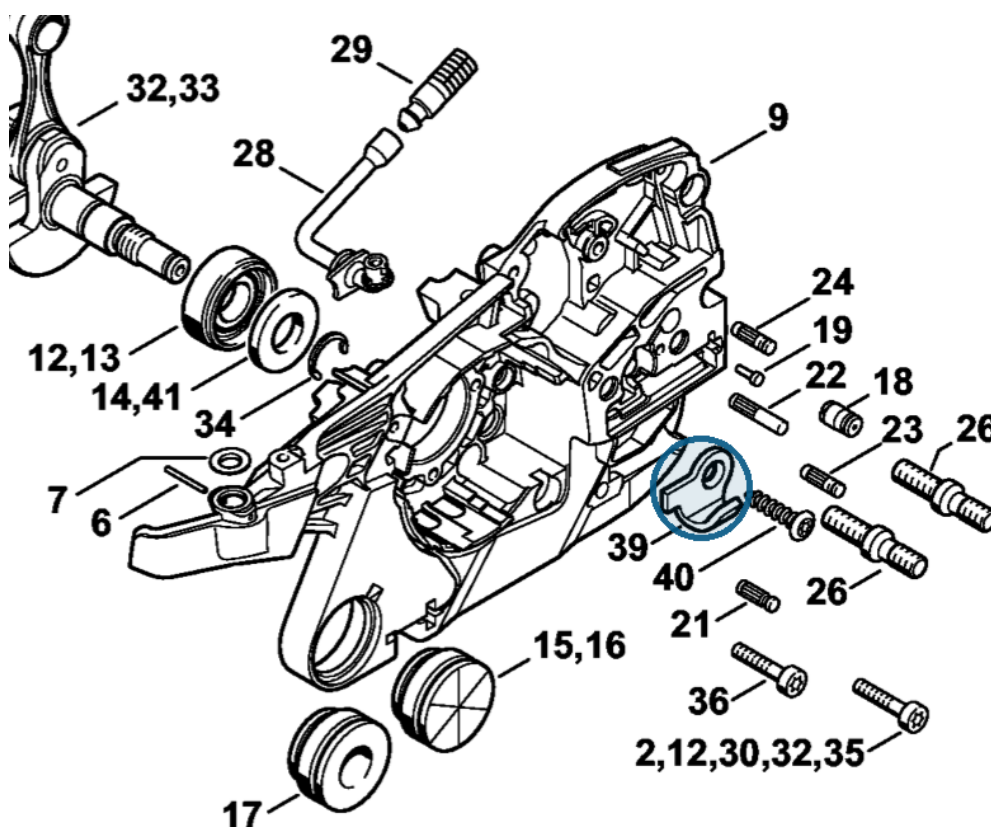

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 3; parts table p. 5.



Online guide

Chain catcher


1142 656 7700

Bin **T10** | 1 spare per kit | **AS1** supervision

MS 462 — chain catcher

Secured to the crankcase by countersunk screw **9061 373 0982** (M5×18-10.9; item 13).

Item 12 | Qty listed: 1

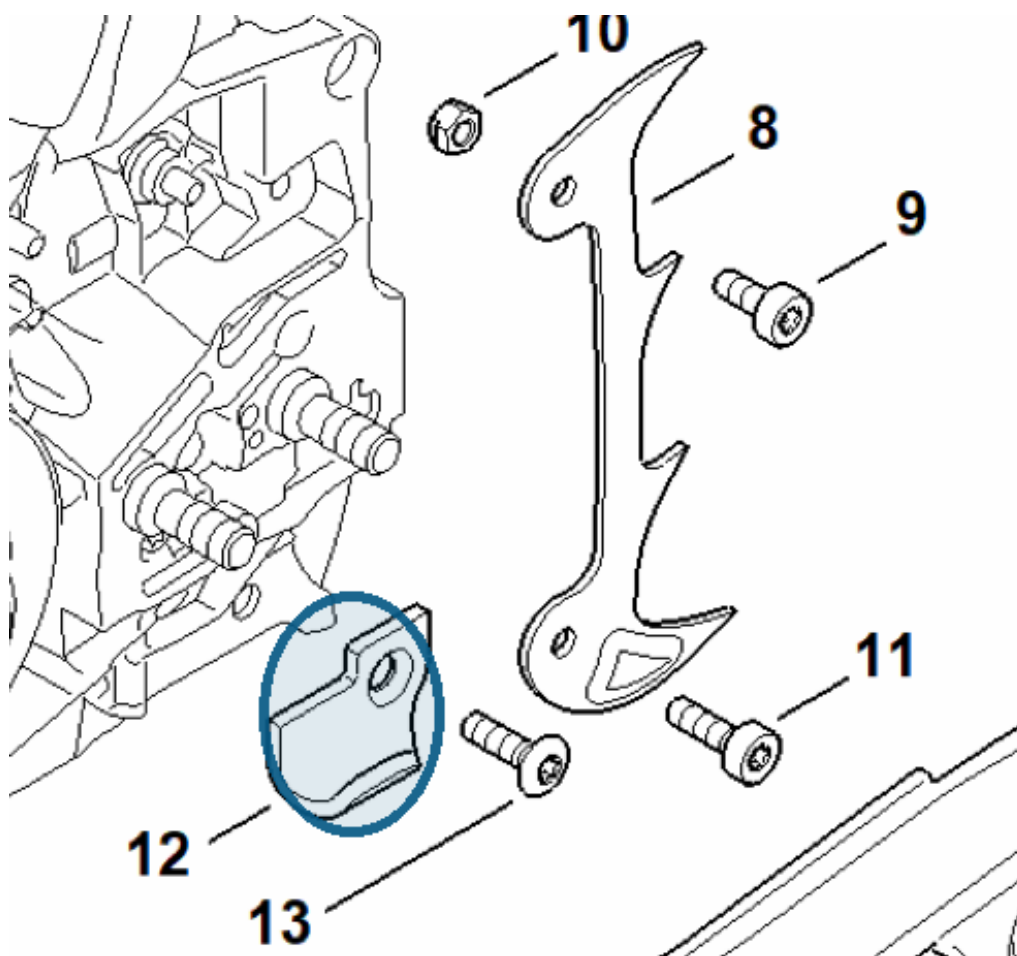

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 17; parts table p. 18.



Online guide

Chain sprocket 3/8"P 7 teeth


0000 640 2003

Bin **T2** | 1 spare per kit | **S2** supervision

HT 135 — gear head

3/8-inch P pitch; 7 teeth. Includes two washers 4182 162 8900 (item 27).

Item 26 | Qty listed: 1

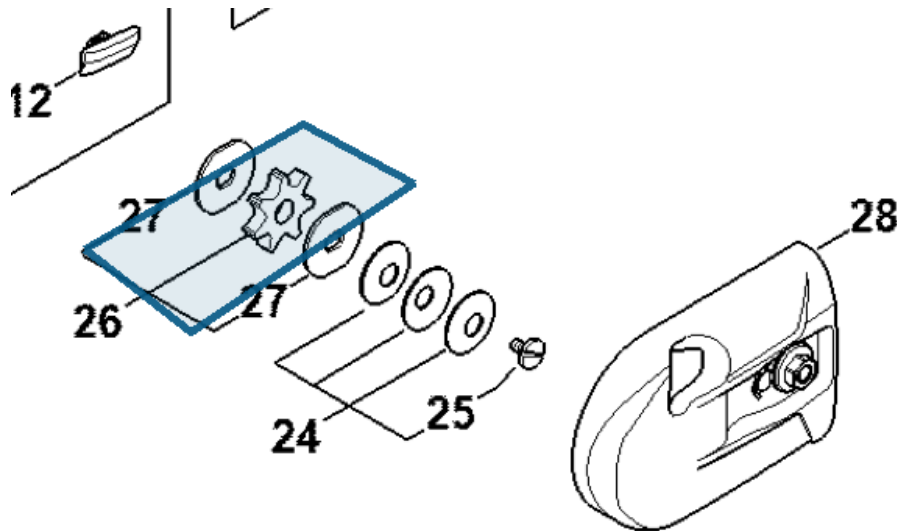

HT 135-Z spare-parts list, 10/28/2024. Drawing p. 17; parts table p. 18.



Online guide

Chain tensioner kit

MA02 007 1002


Bin **B1** | 2 spares per kit | **S2** supervision

MS 261 — chain tensioner

Includes items 2–8, including tensioner slide
1125 640 1900 (item 3).

Item 1 | Qty listed: 1

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 15;
parts table p. 16.

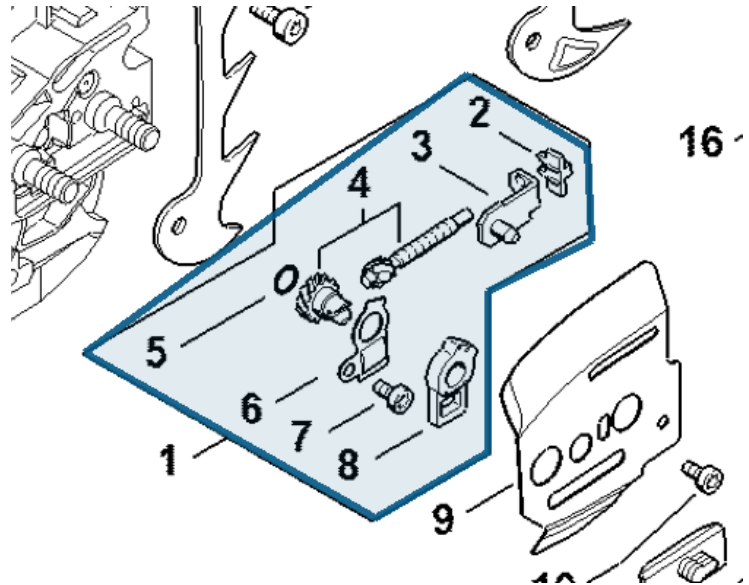


MS 462 — chain tensioner

Includes items 13–19, including tensioner slide
1125 640 1900 (item 14).

Item 12 | Qty listed: 1

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 15;
parts table p. 16.

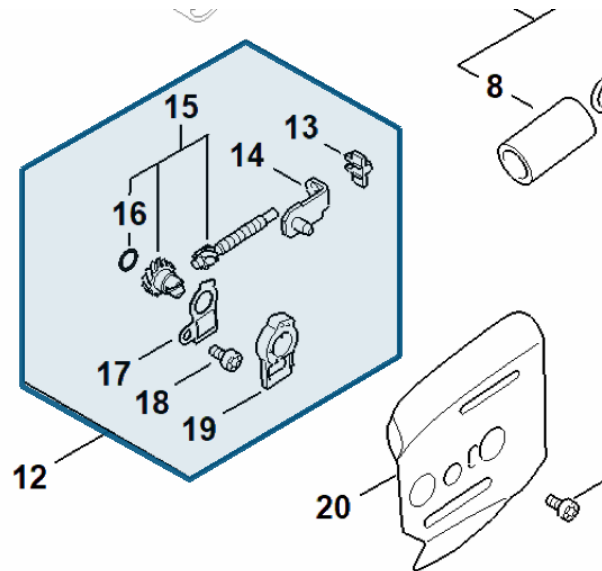



Online guide

Chain tightener


4182 660 0700

Bin **B1** | 1 spare per kit | **S2** supervision

HT 135 — chain tensioner

Chain-tensioning assembly on the gear head.

Item 23 | Qty listed: 1

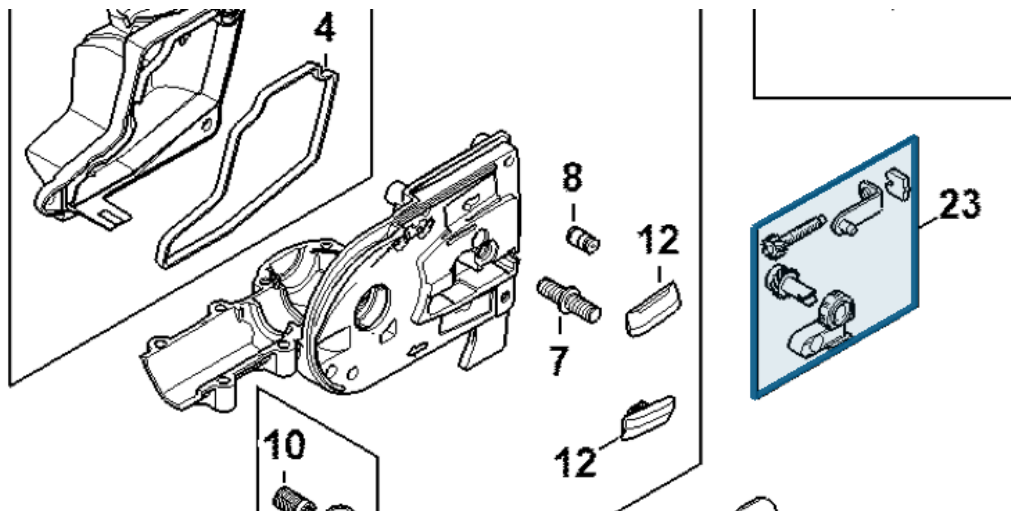

HT 135-Z spare-parts list, 10/28/2024. Drawing p. 17; parts table p. 18.



Online guide

Clutch


1121 160 2051

Bin **B2** | 2 spares per kit | **S2** supervision

MS 261 — clutch

Assembly includes items 14–18.

Item 13 | Qty listed: 1

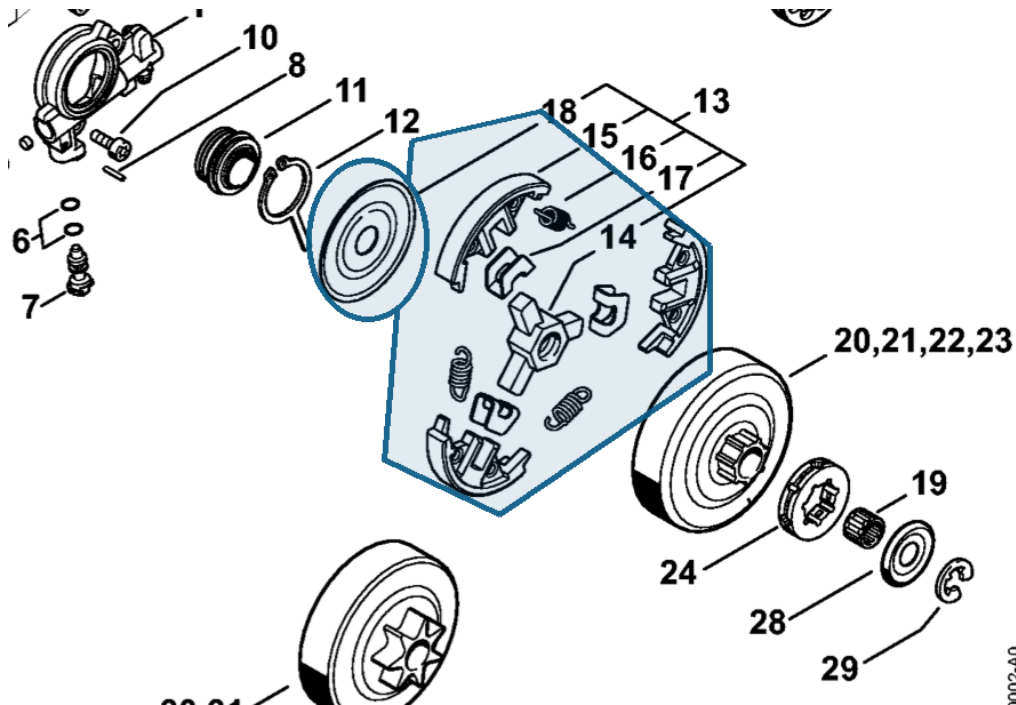

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 10; parts table p. 11.



Online guide

Clutch


1142 160 2000

Bin **B2** | 1 spare per kit | **S2** supervision

MS 462 — clutch

Assembly includes items 15–17.

Item 14 | Qty listed: 1

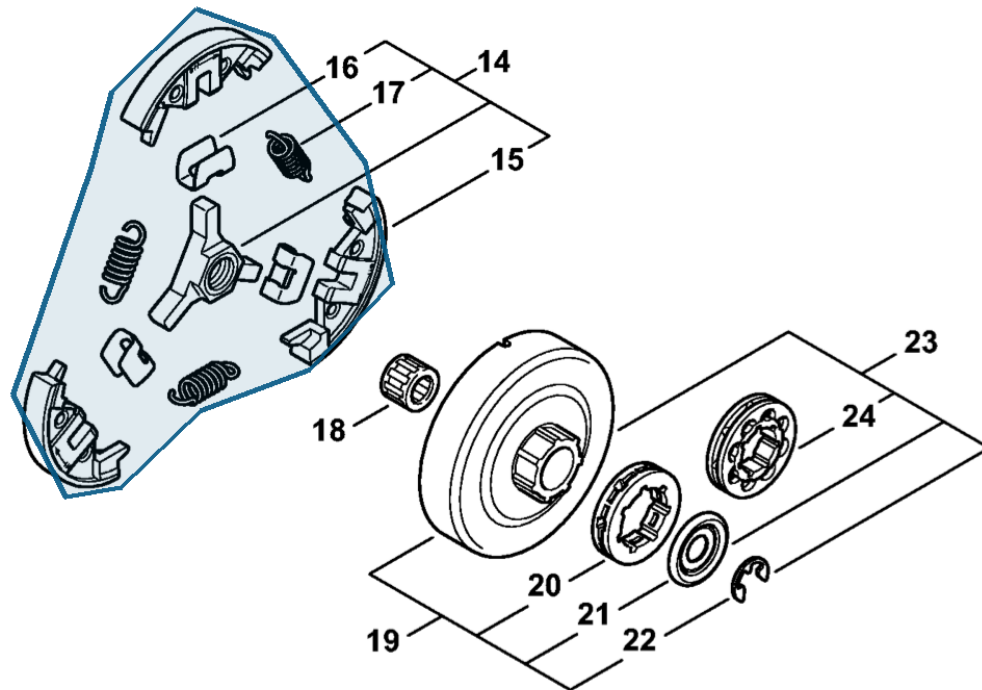

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 13; parts table p. 14.



Online guide

Clutch


4180 160 2000

Bin **B2** | 1 spare per kit | **S2** supervision

HT 135 — clutch

Clutch on the crankshaft; includes spring (item 2).

Item 1 | Qty listed: 1

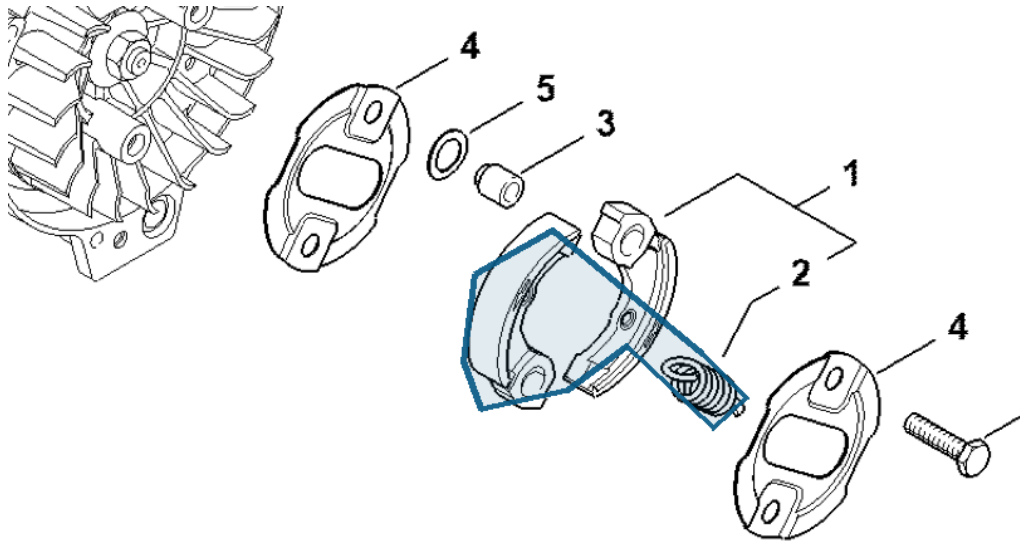

HT 135-Z spare-parts list, 10/28/2024. Drawing p. 13; parts table p. 14.



Online guide

Collar nut M8

0000 995 0803


Bin **T11** | 8 spares per kit | **S2** supervision

MS 261 — chain sprocket cover

M8 collar nut on the chain sprocket cover. The parts list records one at item 14.

Item 14 | Qty listed: 1

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 15;
parts table p. 16.

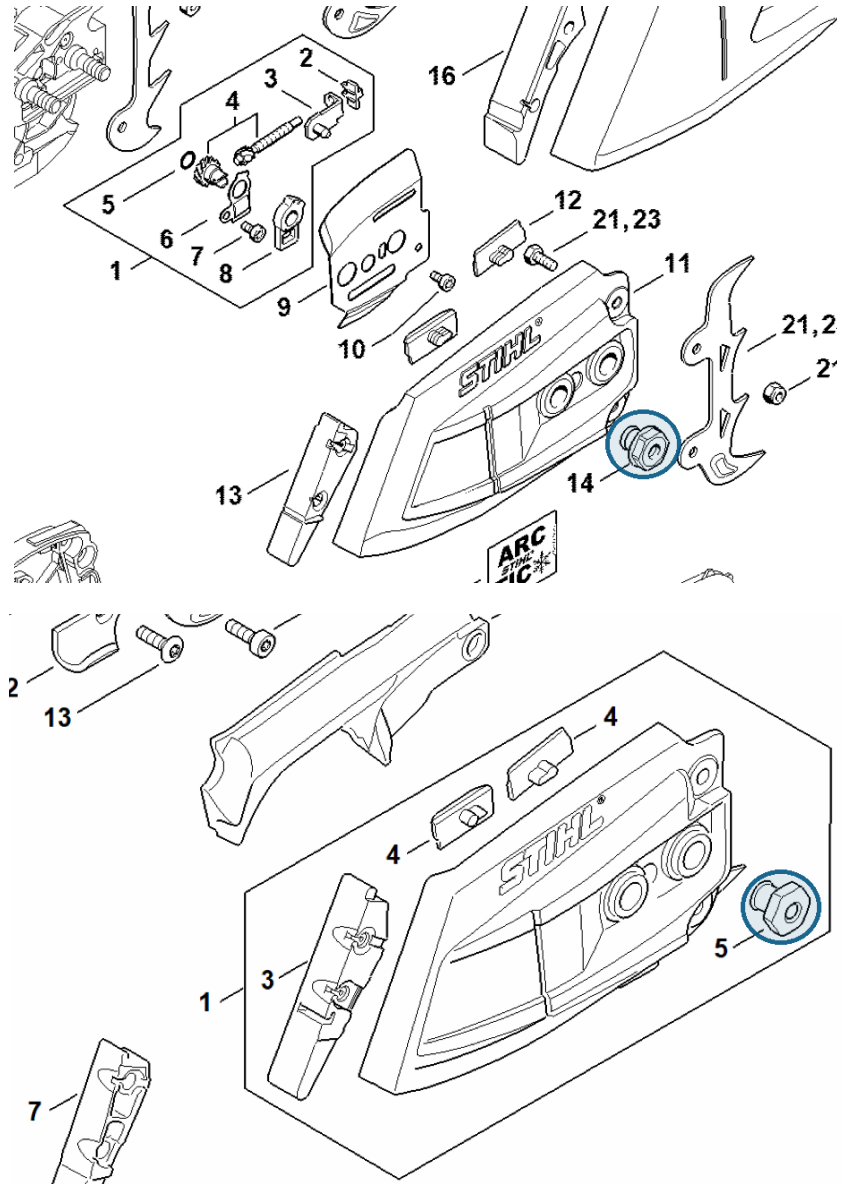

MS 462 — chain sprocket cover

M8 collar nuts on the chain sprocket cover.

Item 5 | Qty listed: 2

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 17;
parts table p. 18.



Online guide

Countersunk screw M5x18-10.9


9061 373 0982

Bin **T11** | 2 spares per kit | **AS1** supervision

MS 462 — chain catcher

Secures chain catcher 1142 656 7700 (item 12) to the crankcase.

Item 13 | Qty listed: 1

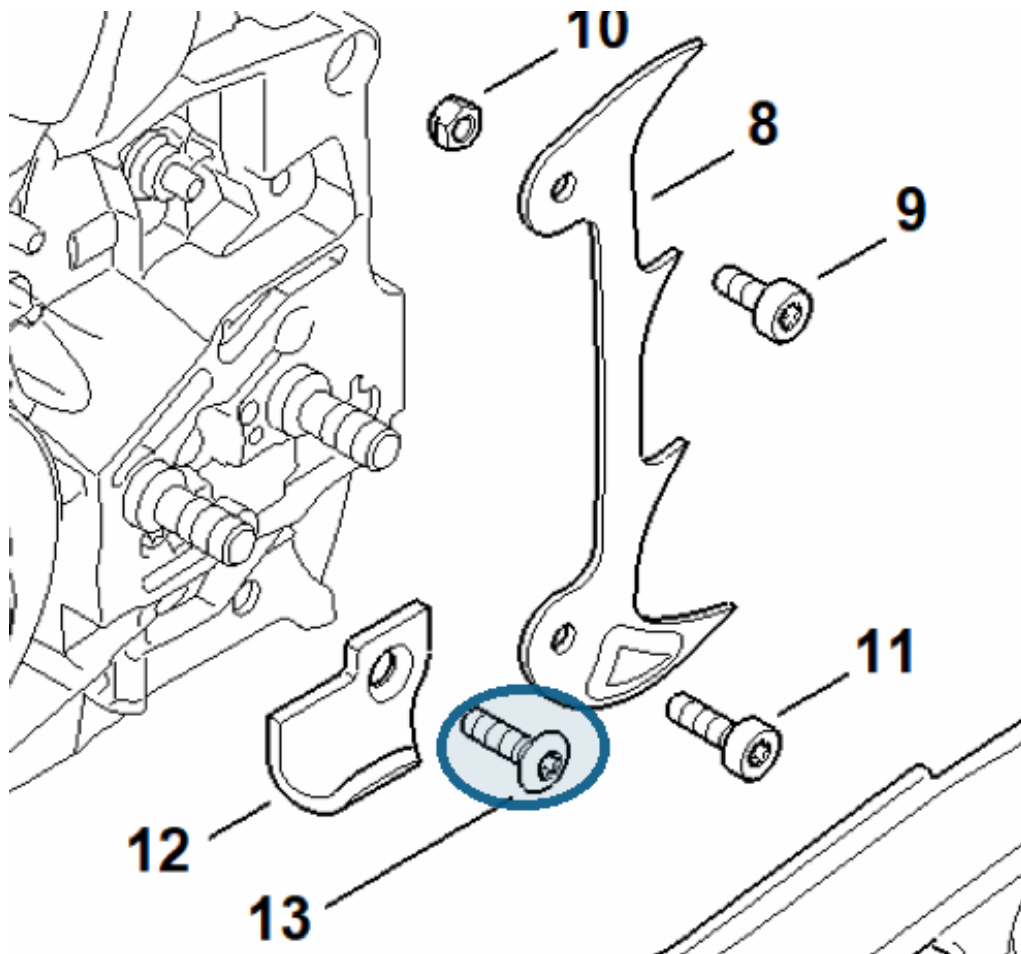

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 17; parts table p. 18.



Online guide

Decompression valve


1141 020 9430

Bin **T4** | 1 spare per kit | **S2** supervision

MS 261 — cylinder

Decompression valve in the cylinder.

Item 17 | Qty listed: 1

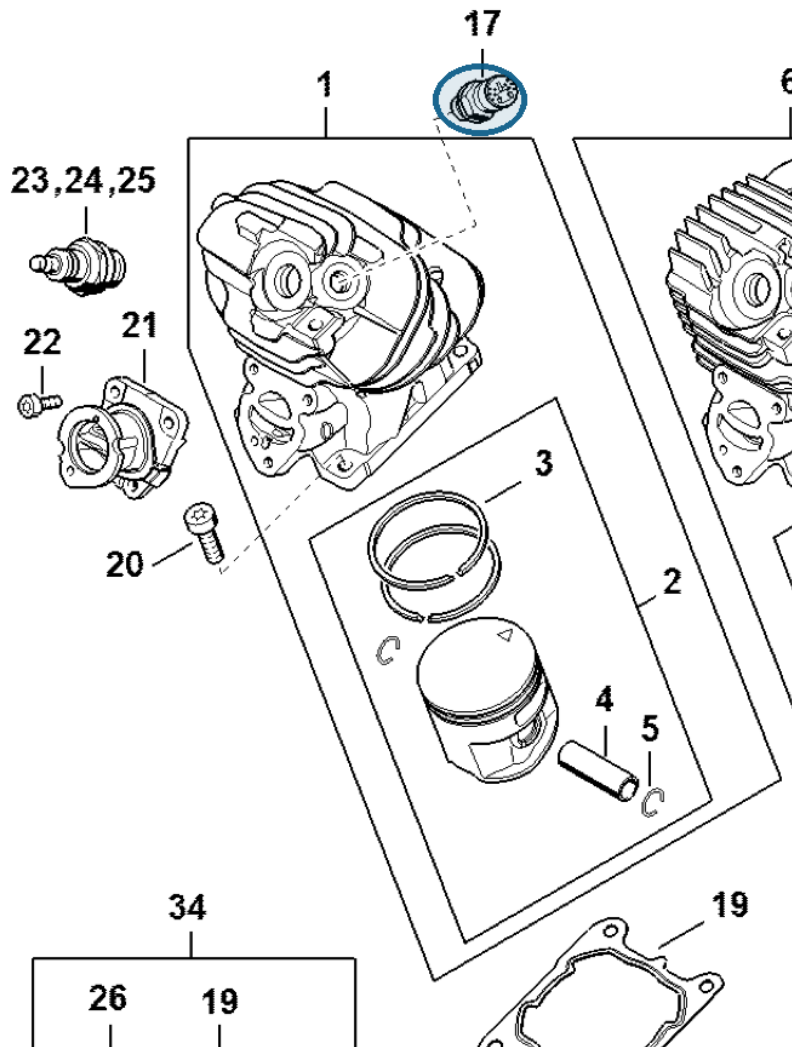

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 8; parts table p. 9.



Online guide

Decompression valve


1142 020 9400

Bin **T4** | 1 spare per kit | **S2** supervision

MS 462 — cylinder

Decompression valve in the cylinder. Also listed in section D, drawing p. 11 / table p. 12.

Item 9 | Qty listed: 1

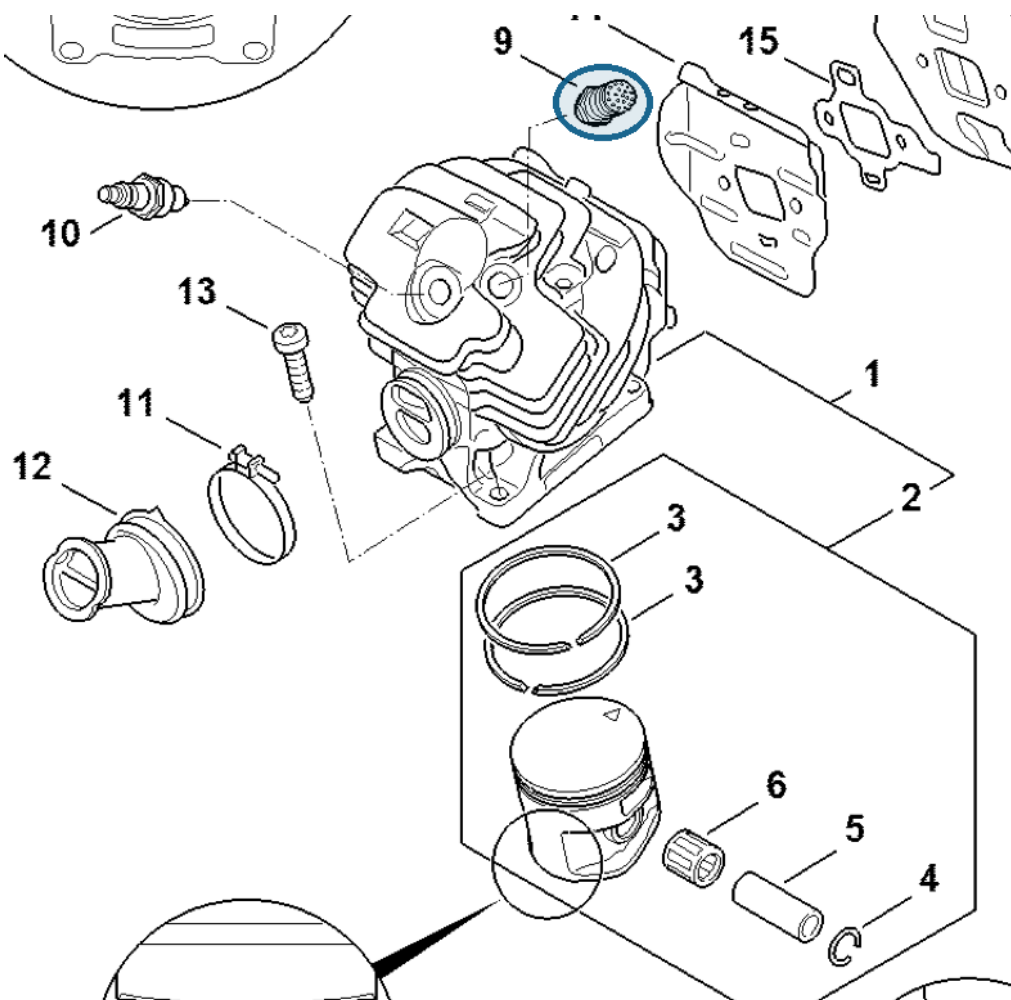

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 9; parts table p. 10.




Online guide

E-clip 8x1.3

9460 624 0801

Bin T3 | 12 spares per kit | AS1 supervision

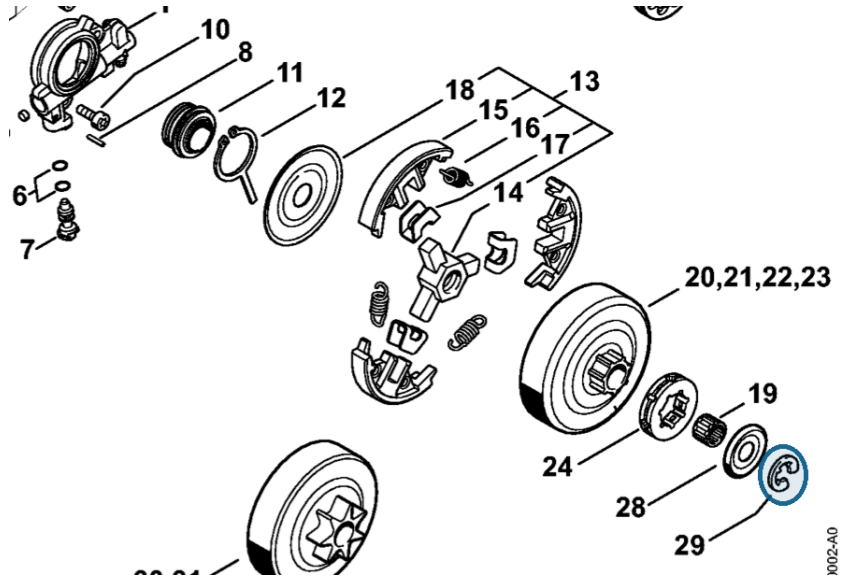

1002-A0

MS 261 — clutch drum

Retains washer 0000 958 1022. Included in rim sprocket kit 1141 007 1002.

Item 29 | Qty listed: 1


MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 10; parts table p. 12.

MS 462 — clutch drum

Retains washer 0000 958 1032. Included in rim sprocket kit 1128 007 1001.

Item 22 | Qty listed: 1

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 13; parts table p. 14.

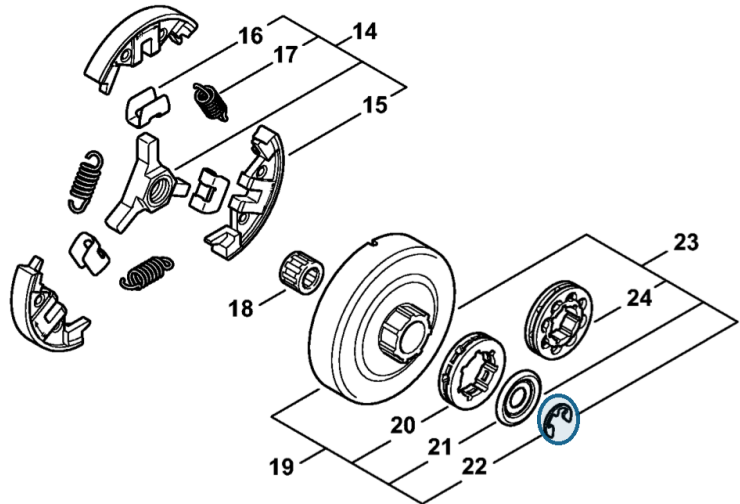



Online guide

Fan housing with rewind starter


1141 080 2104

Bin **B0** | 1 spare per kit | **S2** supervision

MS 261 — rewind starter

Complete fan housing with rewind starter; includes items 1–13, including spring 1128 195 3500 (item 10).

Item 1–13 | Qty listed: 1

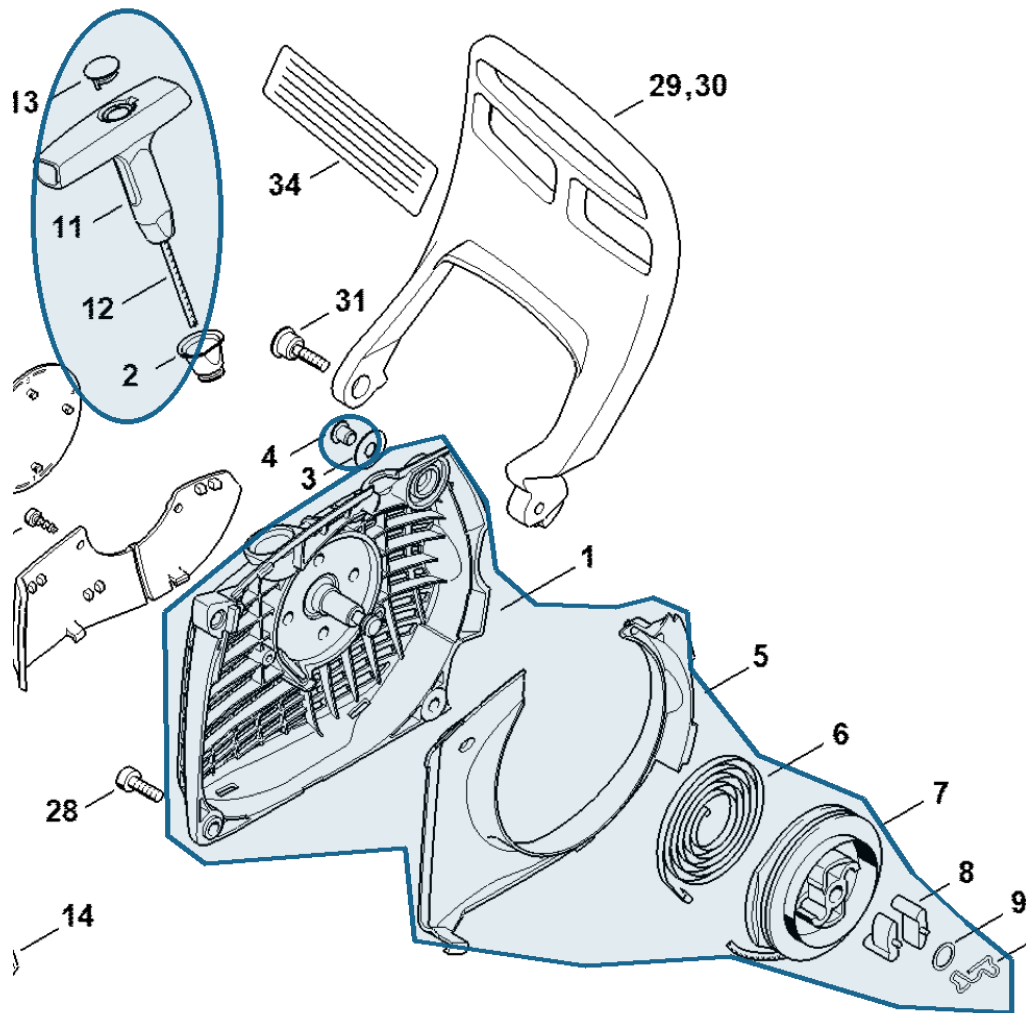

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 19; parts table p. 20.



Online guide

Fan housing with rewind starter


1142 080 2102

Bin **B0** | 1 spare per kit | **S2** supervision

MS 462 — rewind starter

Includes items 2–15, including spring 1128 195 3500 (item 12). Mounts to the crankcase with three pan head screws 9022 371 1020 (IS M5×20; item 17).

Item 1 | Qty listed: 1

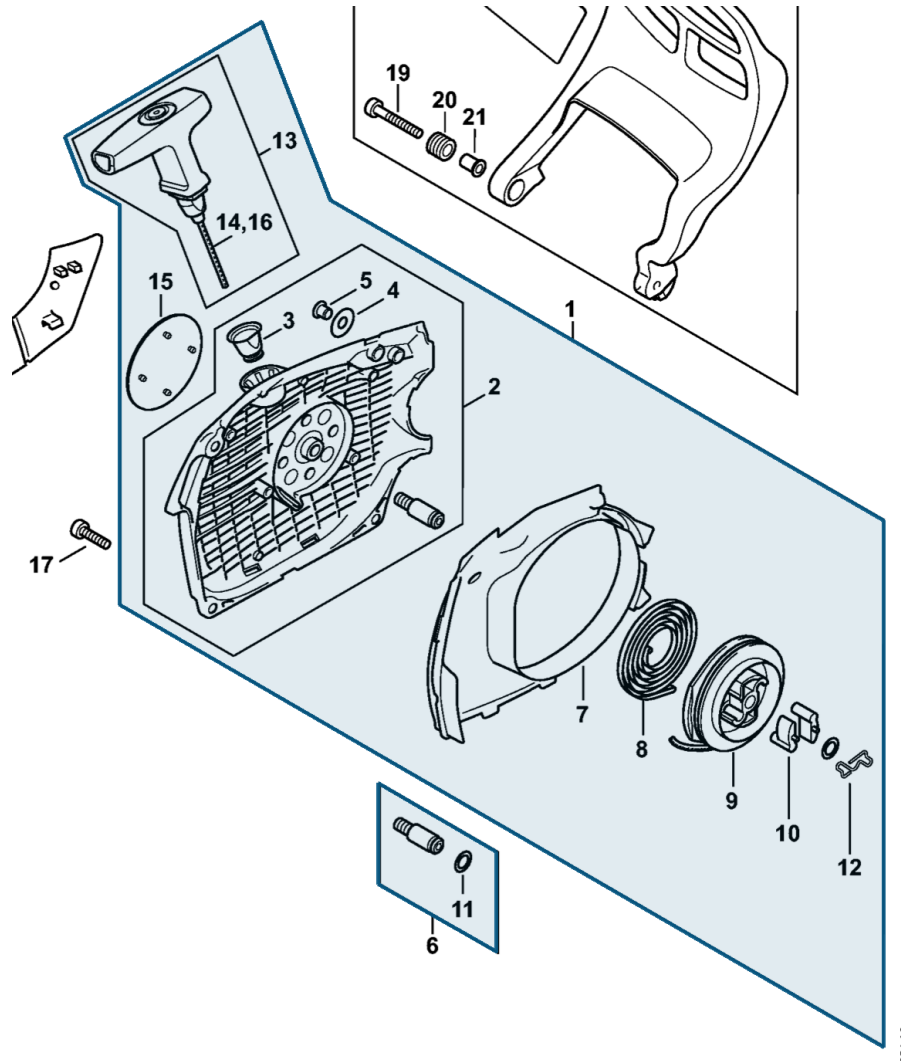

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 21; parts table p. 22.



Online guide

Filler cap


0000 350 0532

Bin **T0** | 1 spare per kit | **AS1** supervision

MS 261 — fuel tank

Fuel filler cap; includes seal (item 14).

Item 13 | Qty listed: 1

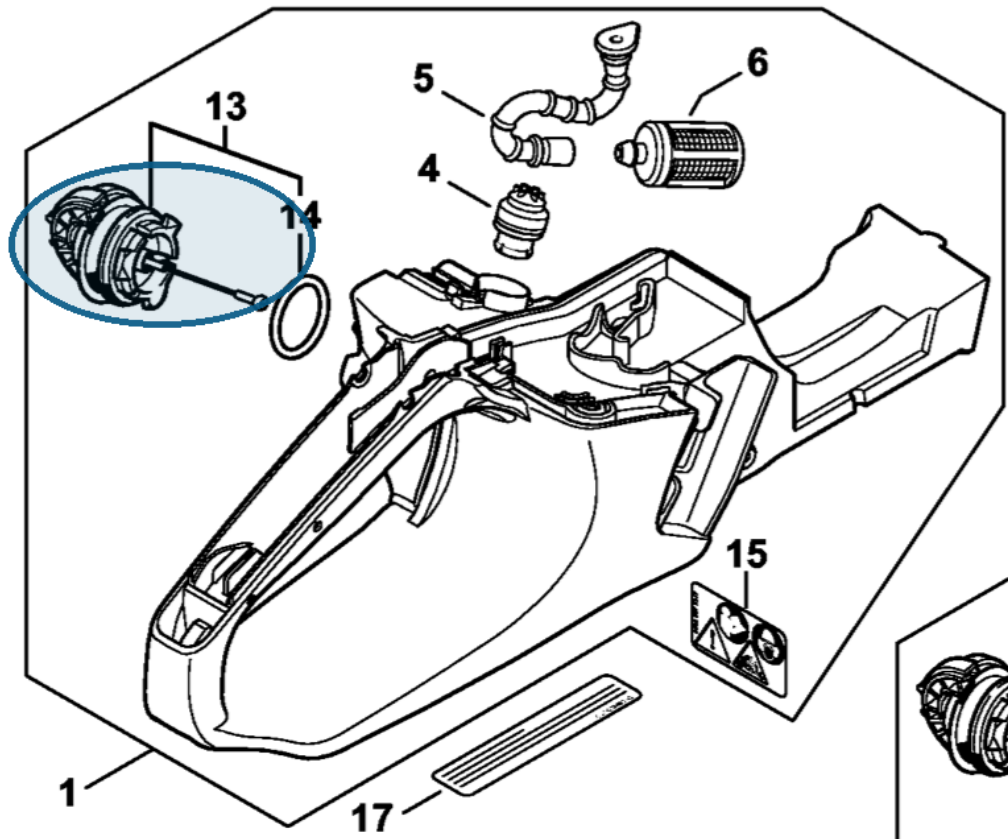

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 21; parts table p. 22.



Online guide

Filler cap

0000 350 0533

Bin **T0** | 2 spares per kit | **AS1** supervision

MS 462 — fuel tank

Fuel filler cap; includes seal (item 6). The same part is used on the oil tank.

Item 5 | Qty listed: 1


MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 23; parts table p. 24.

MS 462 — oil tank

Oil filler cap in the crankcase; includes seal (item 9). Also listed in crankcase section B, table p. 7.

Item 8 | Qty listed: 1

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 3; parts table p. 4.

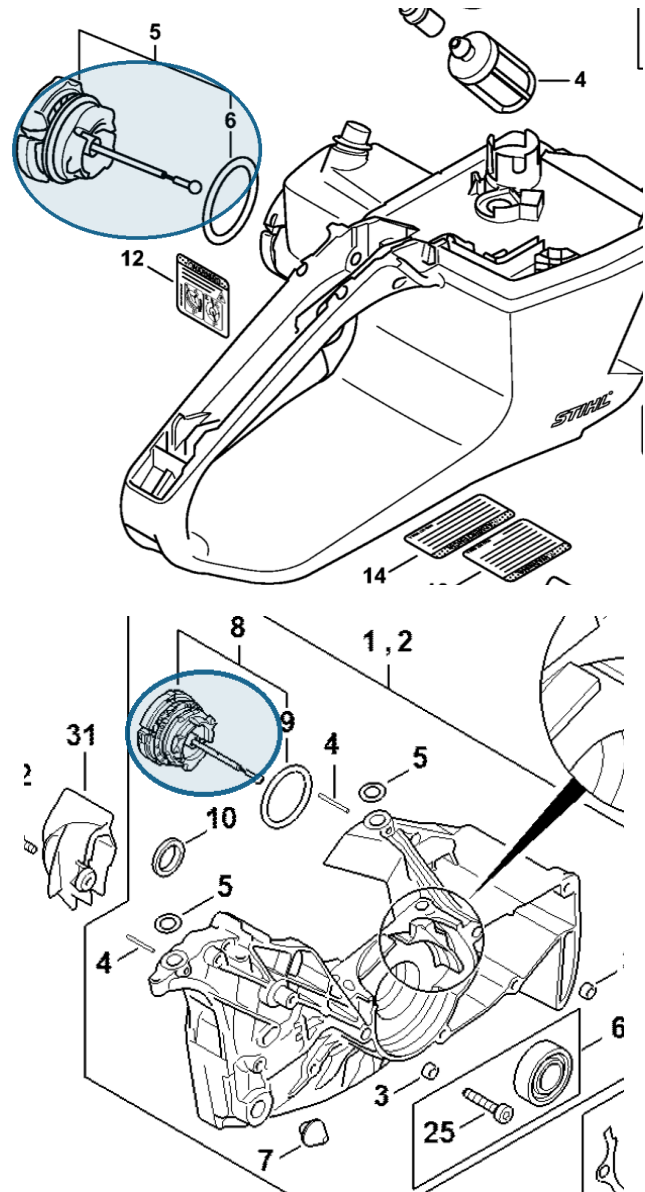



Online guide

Filler cap, mix


0000 350 0527

Bin **T0** | 1 spare per kit | **AS1** supervision

HT 135 — fuel tank

Fuel filler cap; includes items 26 and 27.

Item 25 | Qty listed: 1

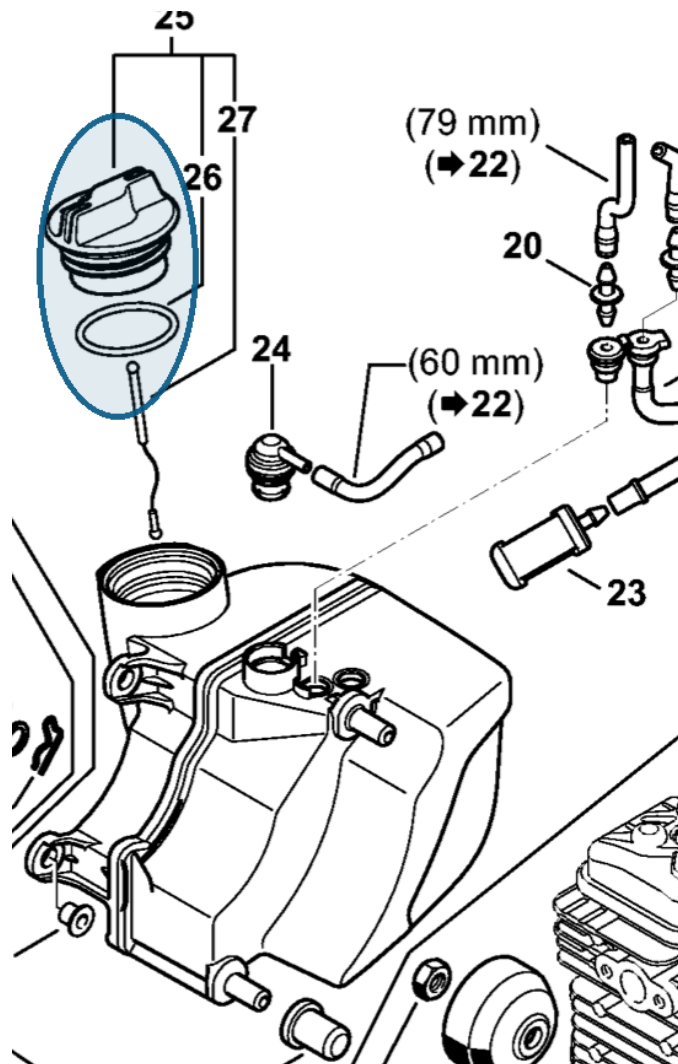

HT 135-Z spare-parts list, 10/28/2024. Drawing p. 5; parts table p. 7.



Online guide

Filler cap, oil


0000 350 0529

Bin **T0** | 1 spare per kit | **AS1** supervision

HT 135 — oil tank

Gear-head oil filler cap; includes seal (item 6).

Item 5 | Qty listed: 1

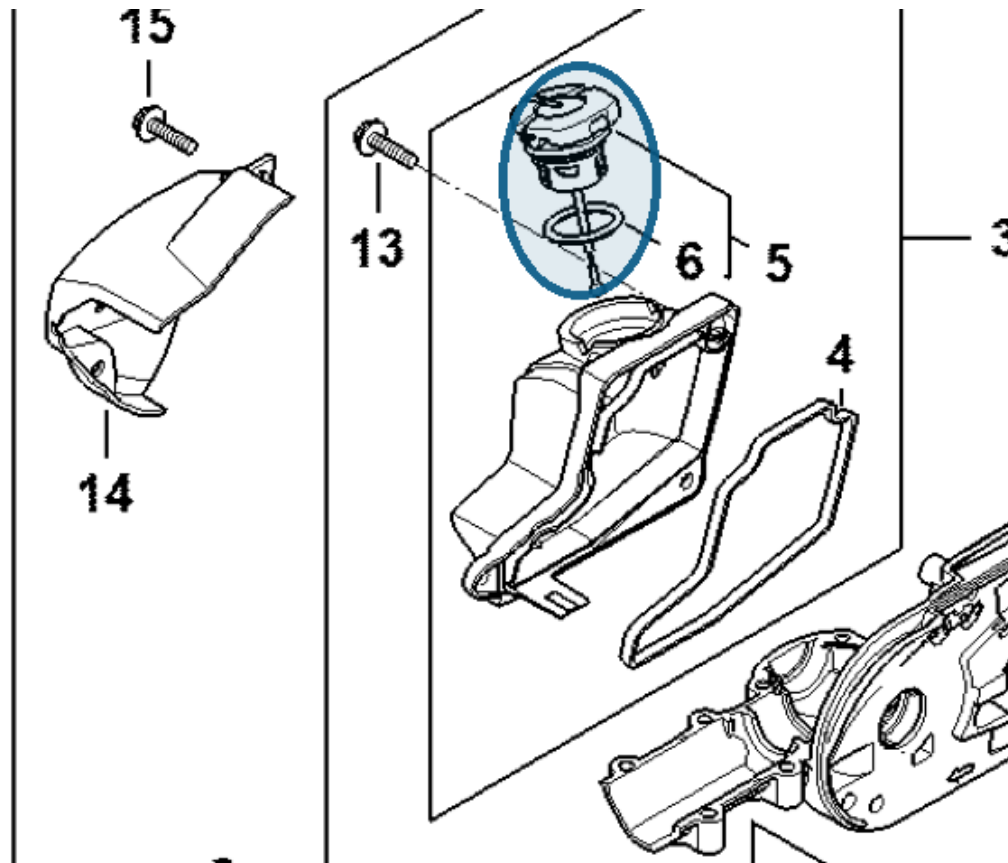

HT 135-Z spare-parts list, 10/28/2024. Drawing p. 17; parts table p. 18.



Online guide

Guard


1141 656 1501

Bin **T8** | 1 spare per kit | **S1** supervision

MS 261 — chain sprocket cover

Guard fitted to the chain sprocket cover.

Item 13 | Qty listed: 1

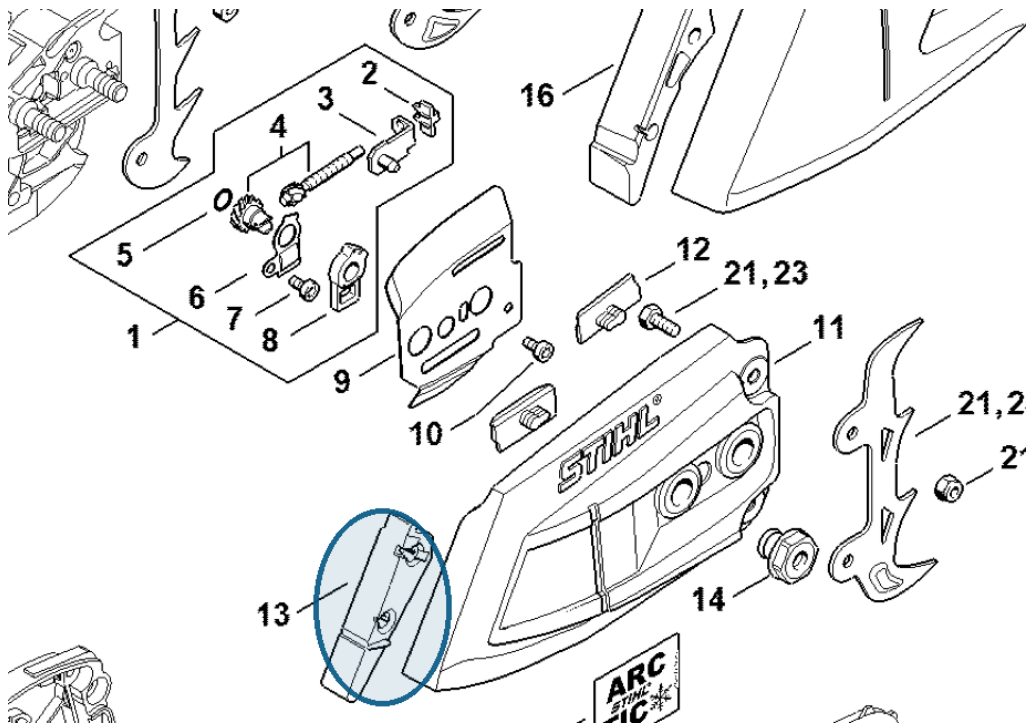

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 15; parts table p. 16.



Online guide

Guard


1142 656 1500

Bin **T8** | 1 spare per kit | **S1** supervision

MS 462 — chain sprocket cover

Guard fitted to the chain sprocket cover.

Item 7 | Qty listed: 1

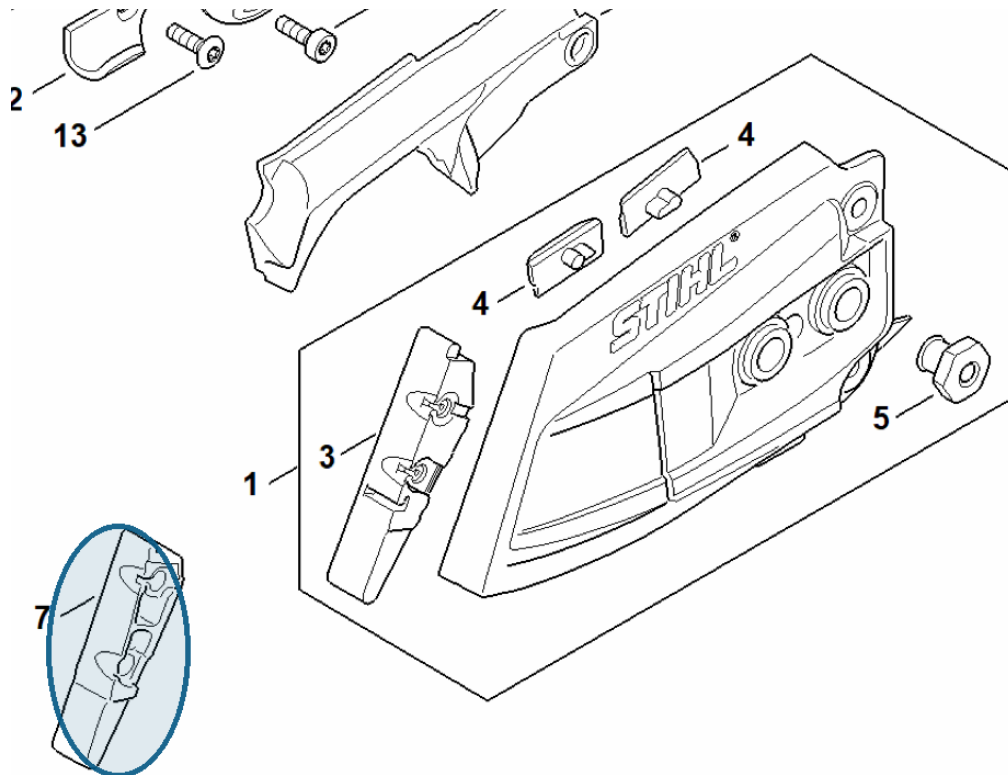

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 17; parts table p. 18.



Online guide

Inner side plate


1128 664 1000

Bin **B1** | 1 spare per kit | **S2** supervision

MS 462 — guide bar

Inner side plate between the crankcase and guide bar.

Item 20 | Qty listed: 1

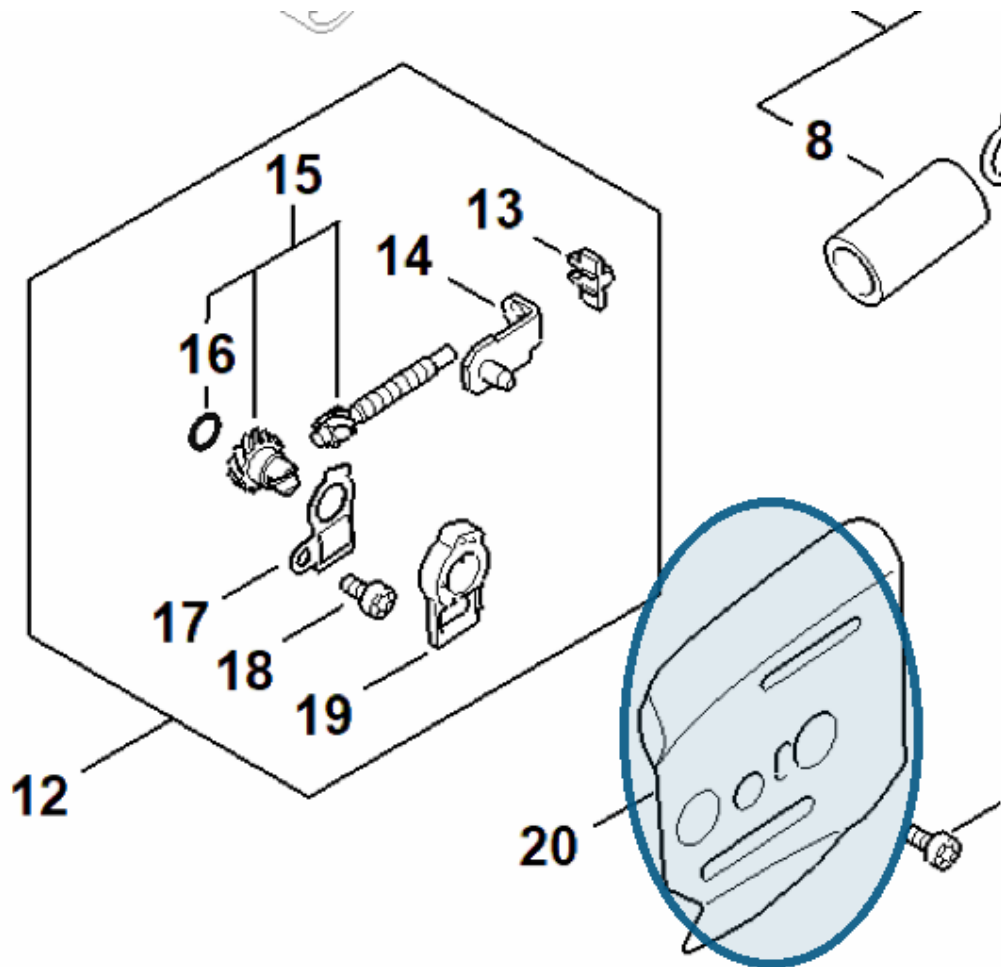

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 15; parts table p. 16.



Online guide

Inner side plate


1141 664 1030

Bin **B1** | 2 spares per kit | **S2** supervision

MS 261 — guide bar

Inner side plate between the crankcase and guide bar.

Item 9 | Qty listed: 1

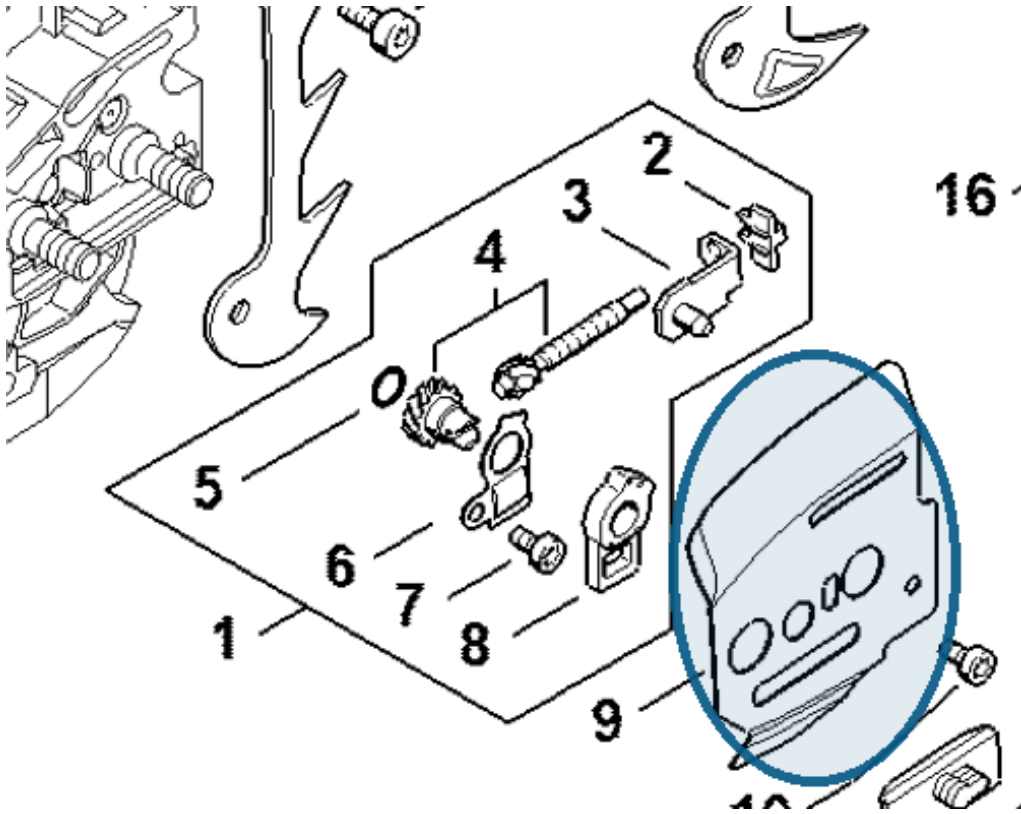

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 15; parts table p. 16.



Online guide

Needle cage 10x13x10


9512 933 2260

Bin **T1** | 3 spares per kit | **AS1** supervision

MS 261 — clutch drum

Needle cage inside the clutch drum.

Item 19 | Qty listed: 1

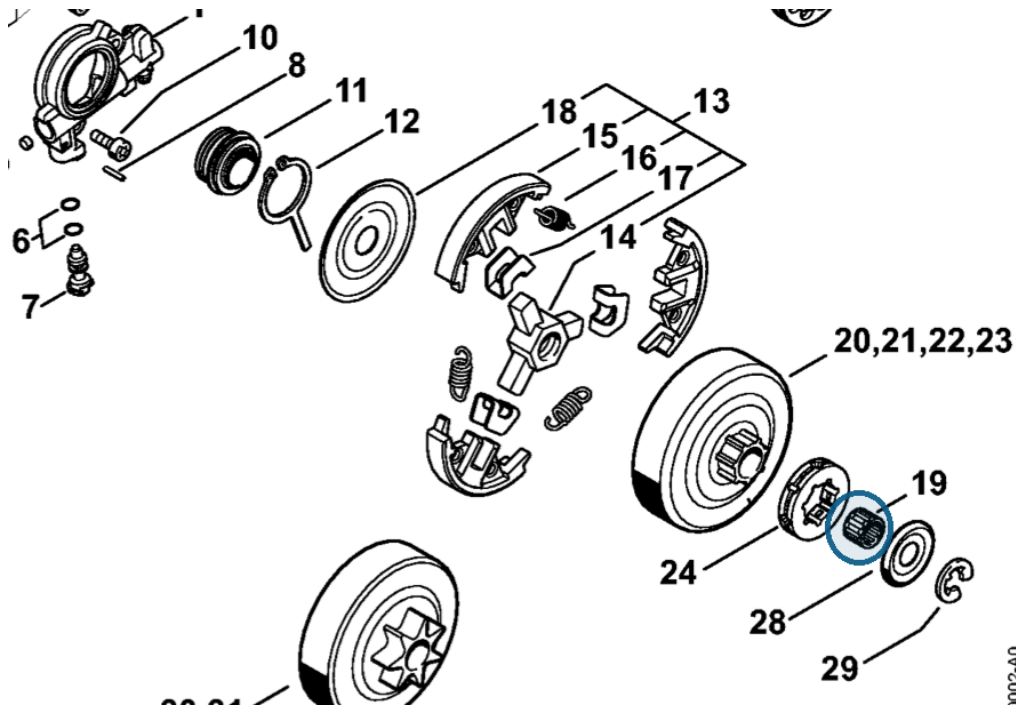

1002-A0

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 10; parts table p. 11.



Online guide

Needle cage 10x16x12


9512 933 2379

Bin **T1** | 1 spare per kit | **AS1** supervision

MS 462 — clutch drum

Needle cage inside the clutch drum.

Item 18 | Qty listed: 1

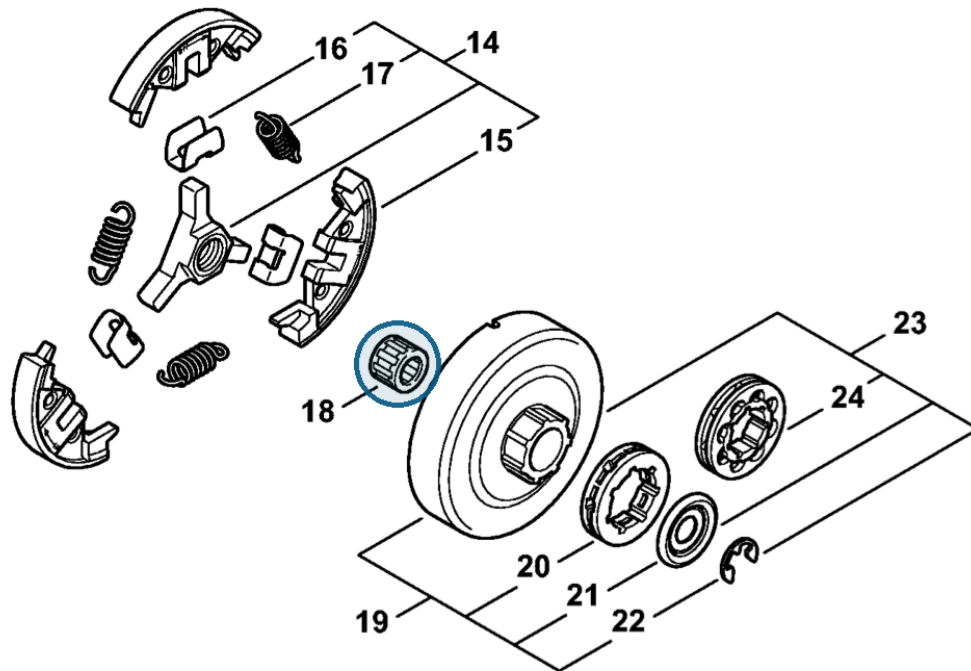

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 13; parts table p. 14.



Online guide

Oil filler cap


0000 350 0537

Bin **T0** | 1 spare per kit | **AS1** supervision

MS 261 — oil tank

Oil filler cap in the crankcase; includes seal (item 38).

Item 37 | Qty listed: 1

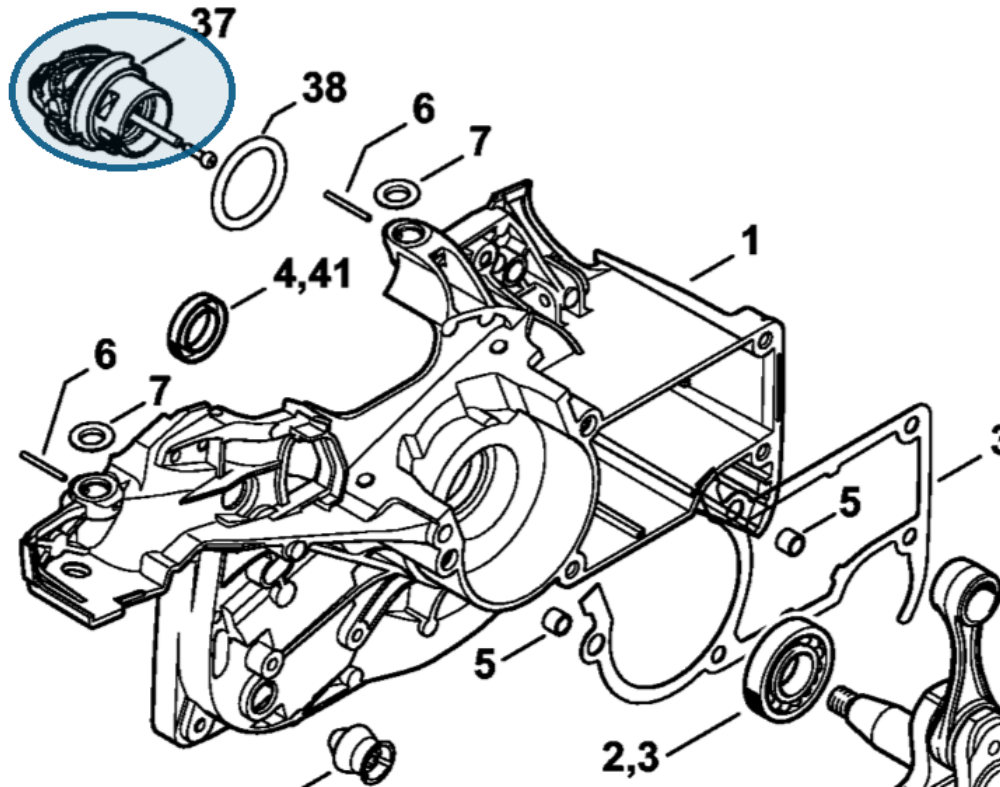

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 3; parts table p. 5.



Online guide

Oil pump


1141 640 3200

Bin **B3** | 1 spare per kit | **S2** supervision

MS 261 — oil pump

Assembly includes items 2–8. Driven by worm 1121 640 7111.

Item 1 | Qty listed: 1

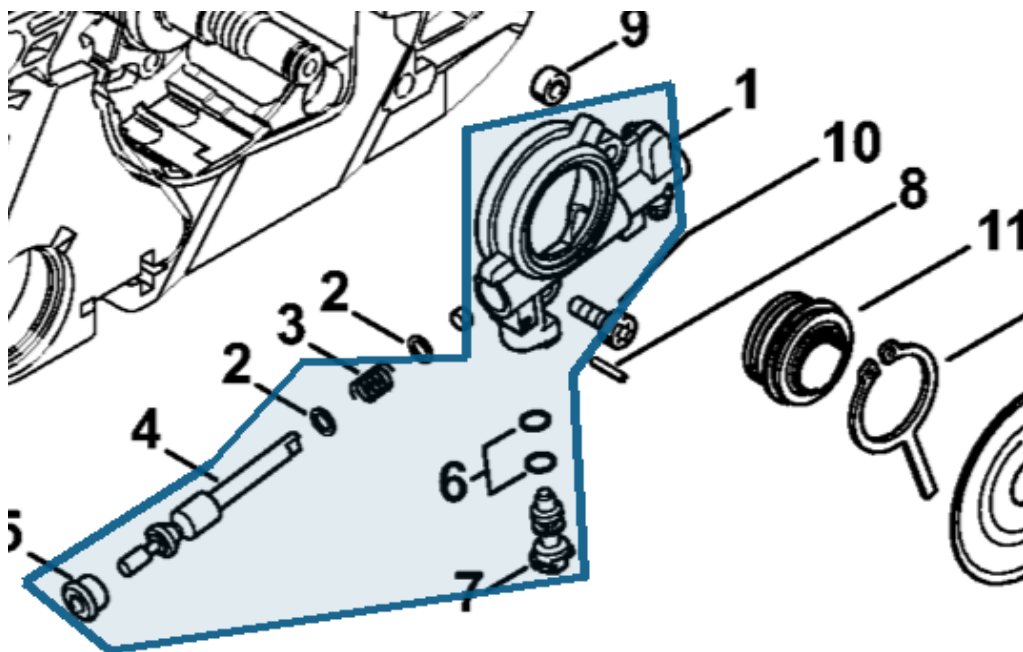

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 10; parts table p. 11.



Online guide

Oil pump


1142 640 3200

Bin **B3** | 1 spare per kit | **S2** supervision

MS 462 — oil pump

Assembly includes items 2–8. Driven by worm 1128 640 7112.

Item 1 | Qty listed: 1

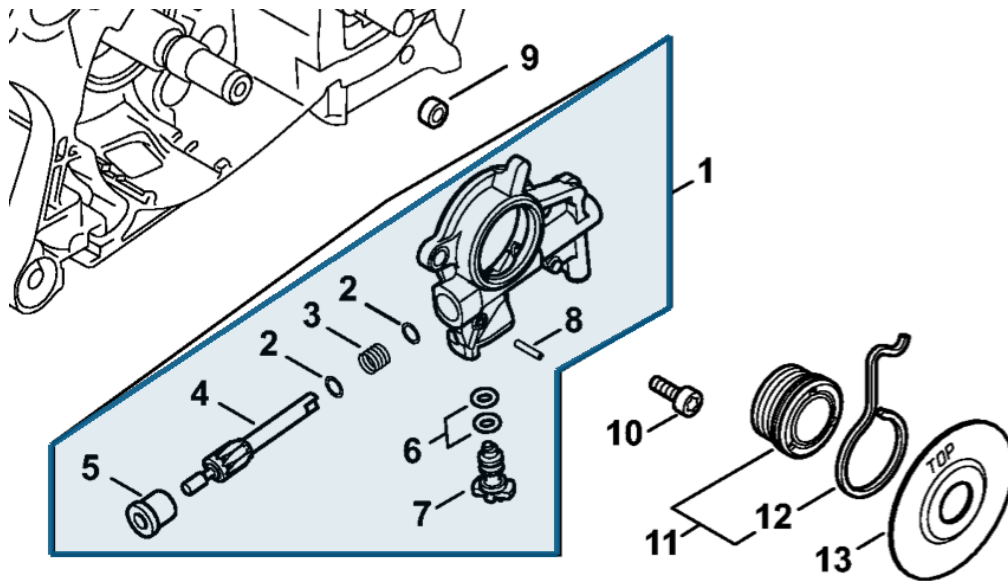

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 13; parts table p. 14.



Online guide

Oil pump


4138 640 3200

Bin **B3** | 1 spare per kit | **S2** supervision

HT 135 — oil pump

Oil pump in the gear-head housing.

Item 11 | Qty listed: 1

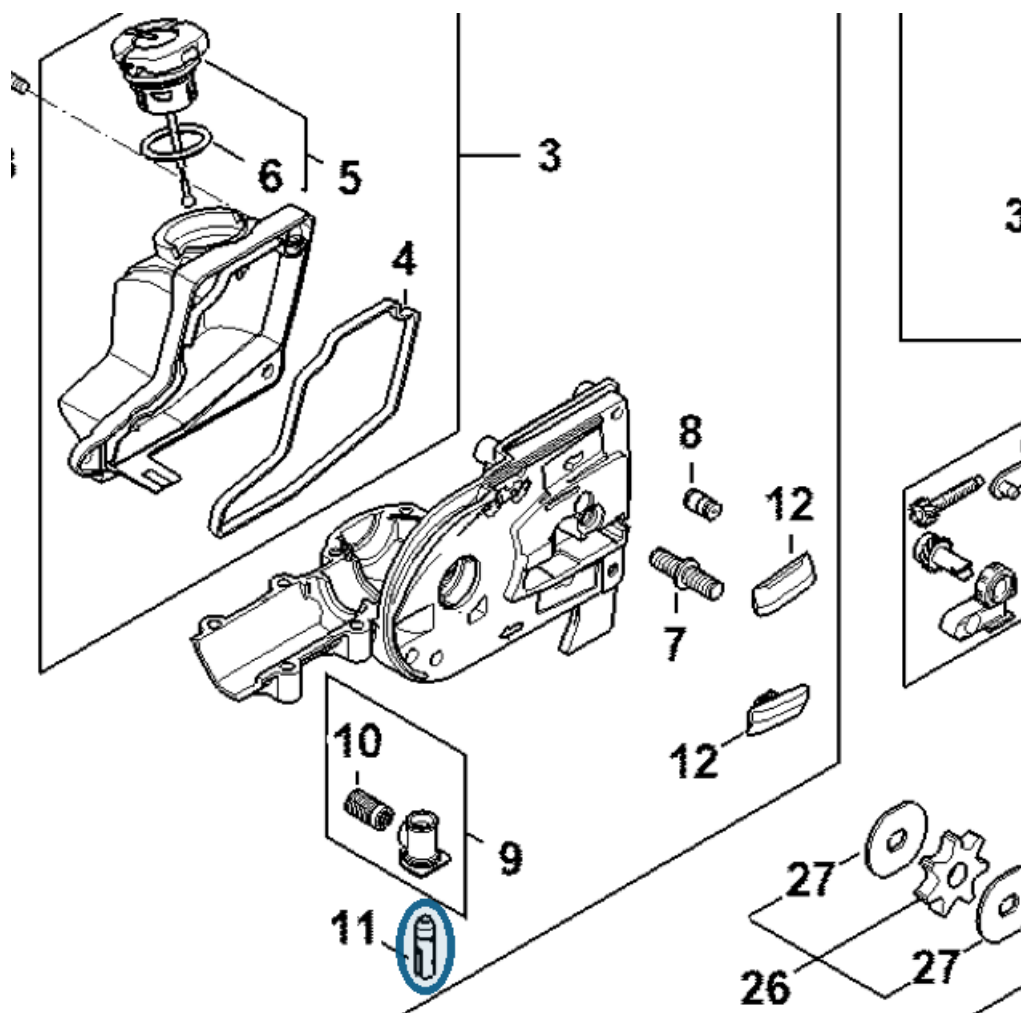

HT 135-Z spare-parts list, 10/28/2024. Drawing p. 17; parts table p. 18.



Online guide

Pan head screw IS M5x20

9022 371 1020


Bin **T11** | 1 spare per kit | **S2** supervision

MS 462 — starter housing

IS M5x20. Secures fan housing 1142 080 2102 to the crankcase.

Item 17 | Qty listed: 3

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 21; parts table p. 22.

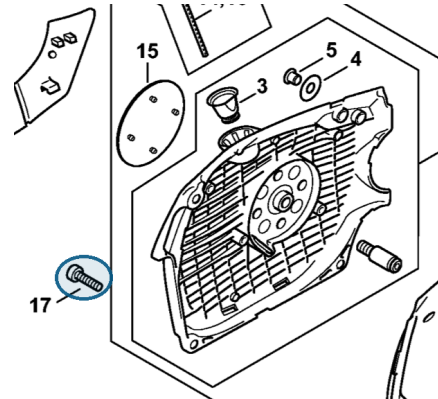


MS 462 — AV system

IS M5x20. Fastening in the anti-vibration assembly.

Item 5 | Qty listed: 1

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 32; parts table p. 33.

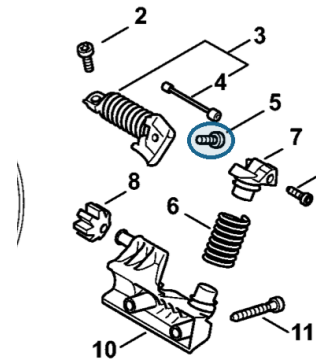


MS 261 — cylinder

IS M5x20. Cylinder-to-crankcase fastening.

Item 20 | Qty listed: 4

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 8; parts table p. 9.

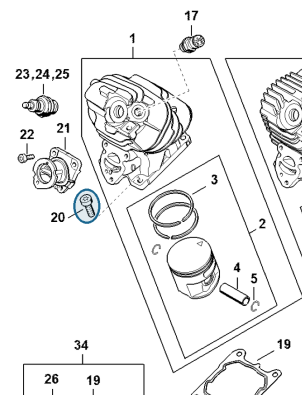



Online guide

Pan head self-tapping screw


9074 477 4438

Bin **T11** | 2 spares per kit | **AS1** supervision

MS 261 — chain catcher

IS-P6×30. Secures chain catcher 1141 656 7700 (item 39) to the crankcase.

Item 40 | Qty listed: 1

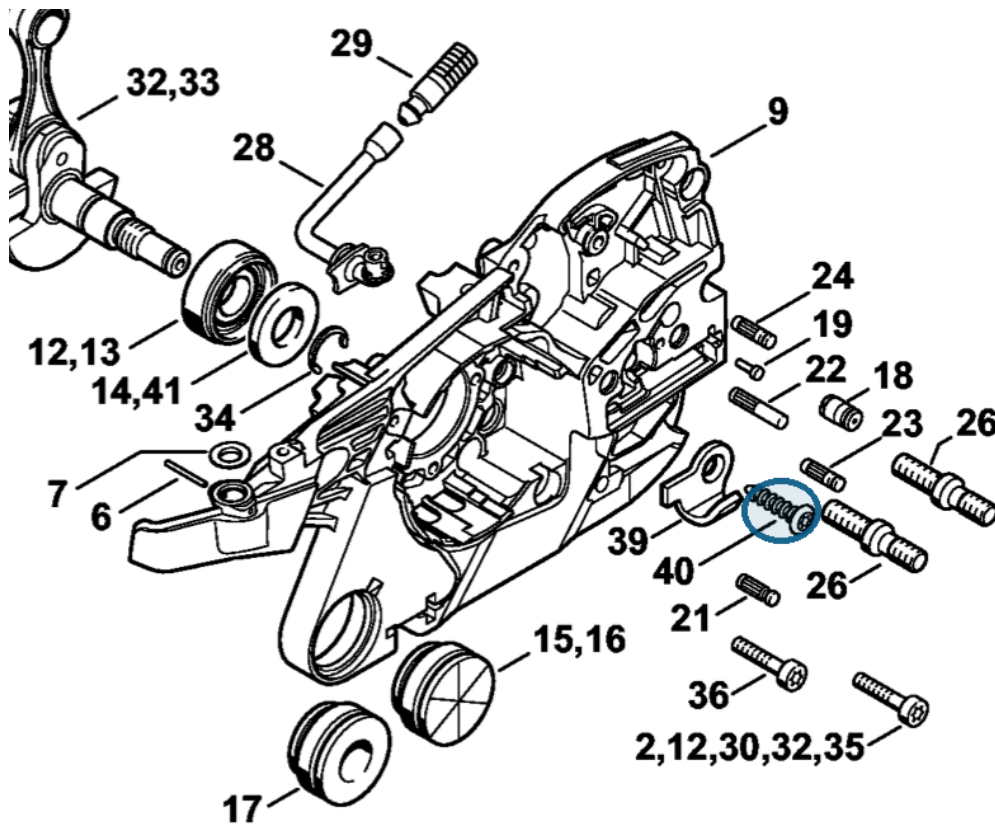

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 3; parts table p. 5.



Online guide

Pawl

0000 195 7200


Bin **T5** | 5 spares per kit | **S2** supervision

HT 135 — rewind starter

Manual-listed pawl: 4116 195 7200. Shown in rewind starter [4182](#) [190](#) [4001](#).

Item 8 | Qty listed: **1**

HT 135-Z spare-parts list, 10/28/2024. Drawing p. 5; parts table p. 6.

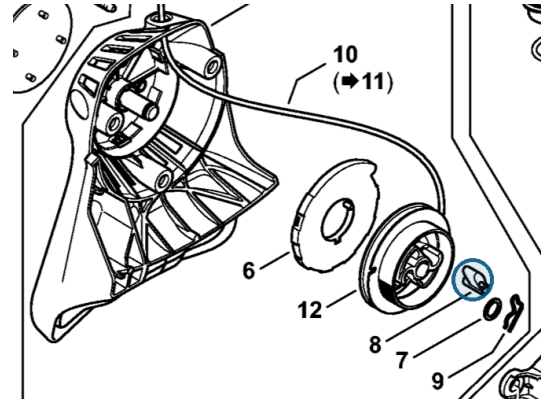


MS 261 — rewind starter

Manual-listed pawl: 1125 195 7200. Shown in fan housing [1141](#) [080](#) [2104](#).

Item 8 | Qty listed: **2**

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 19; parts table p. 20.

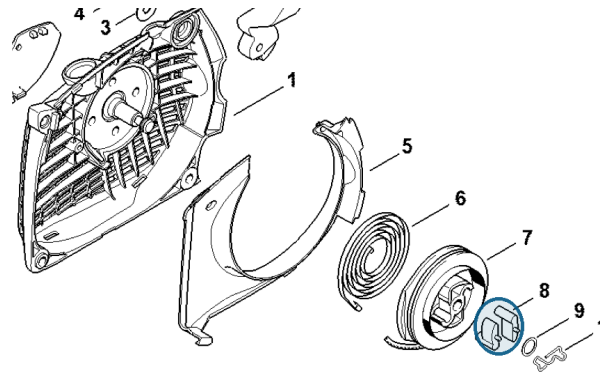


MS 462 — rewind starter

Manual-listed pawl: 1125 195 7200. Shown in fan housing [1142](#) [080](#) [2102](#).

Item 10 | Qty listed: **2**

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 21; parts table p. 22.

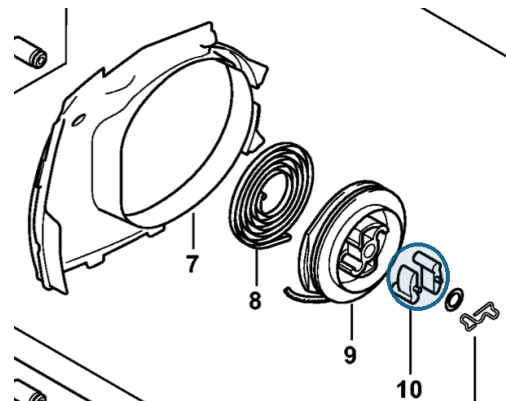



Online guide

Pickup body

0000 350 3518


Bin T7 | 4 spares per kit | S2 supervision

MS 261 — fuel tank

Fuel pickup body inside the tank, on fuel hose (item 5).

Item 6 | Qty listed: 1

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 21;
parts table p. 22.

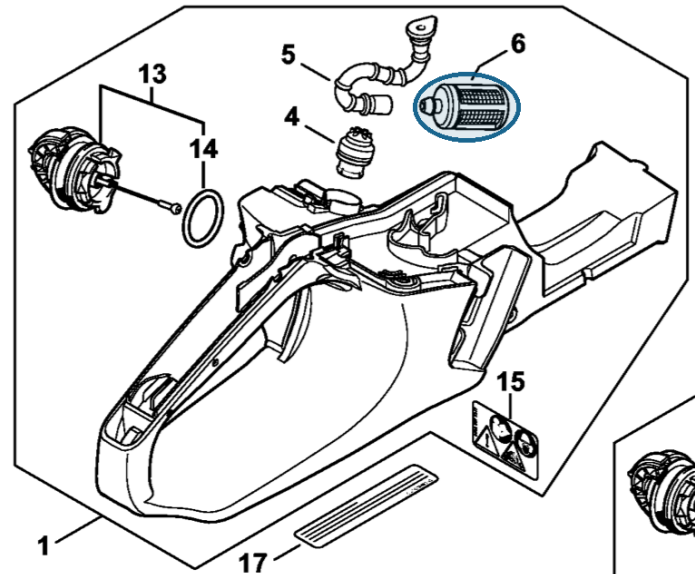


MS 462 — fuel tank

Fuel pickup body inside the tank, on fuel hose (item 3).

Item 4 | Qty listed: 1

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 23;
parts table p. 24.

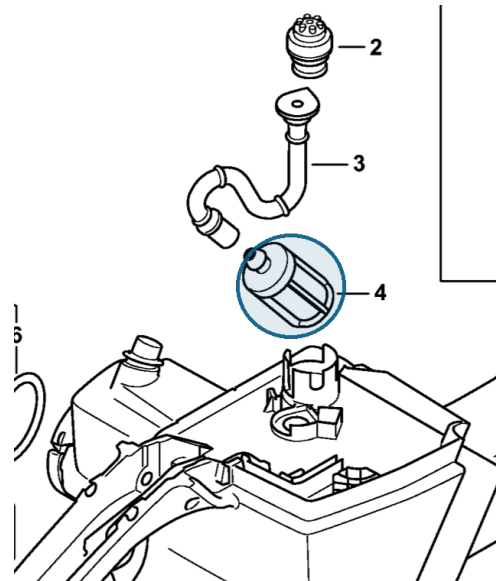



Online guide

Pickup body


0000 350 3521

Bin **T7** | 1 spare per kit | **S2** supervision

HT 135 — fuel tank

Fuel pickup body inside the tank, on the fuel hose.

Item 23 | Qty listed: 1

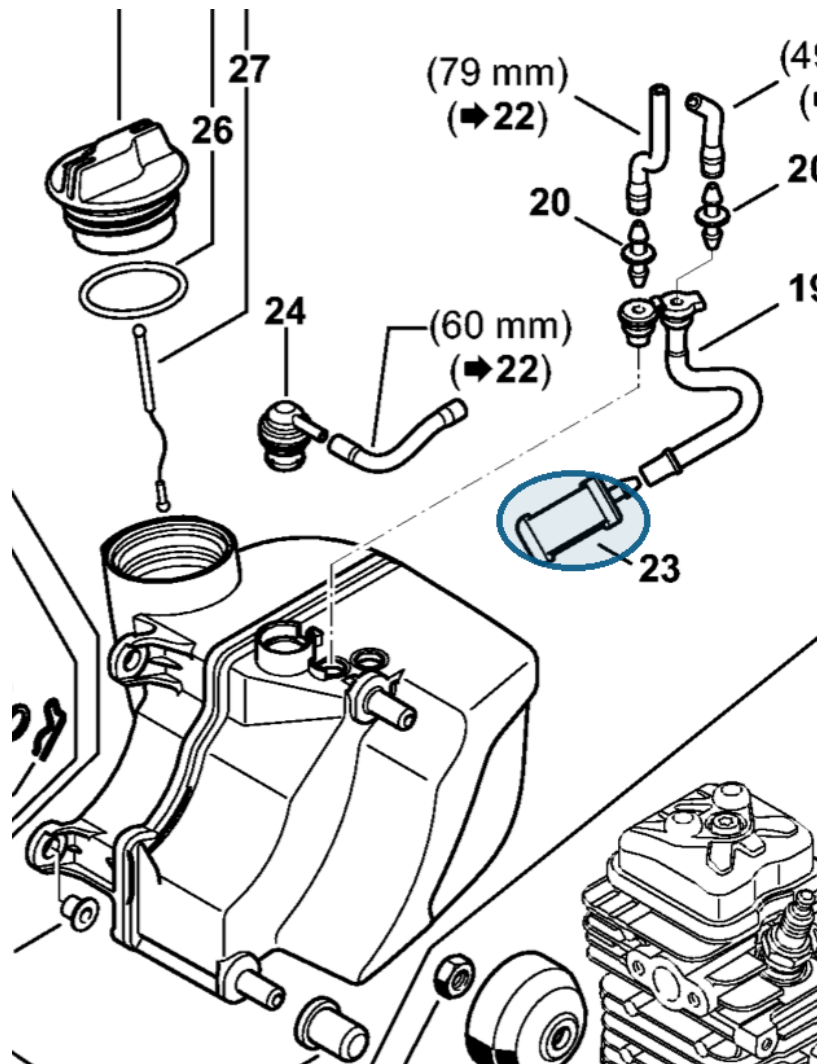

HT 135-Z spare-parts list, 10/28/2024. Drawing p. 5; parts table p. 6.



Online guide

Rewind starter


4182 190 4001

Bin **B0** | 1 spare per kit | **S2** supervision

HT 135 — rewind starter

Assembly includes items 4–10, 12 and 13, including spring 1118 195 3500 (item 9).

Item 3 | Qty listed: 1

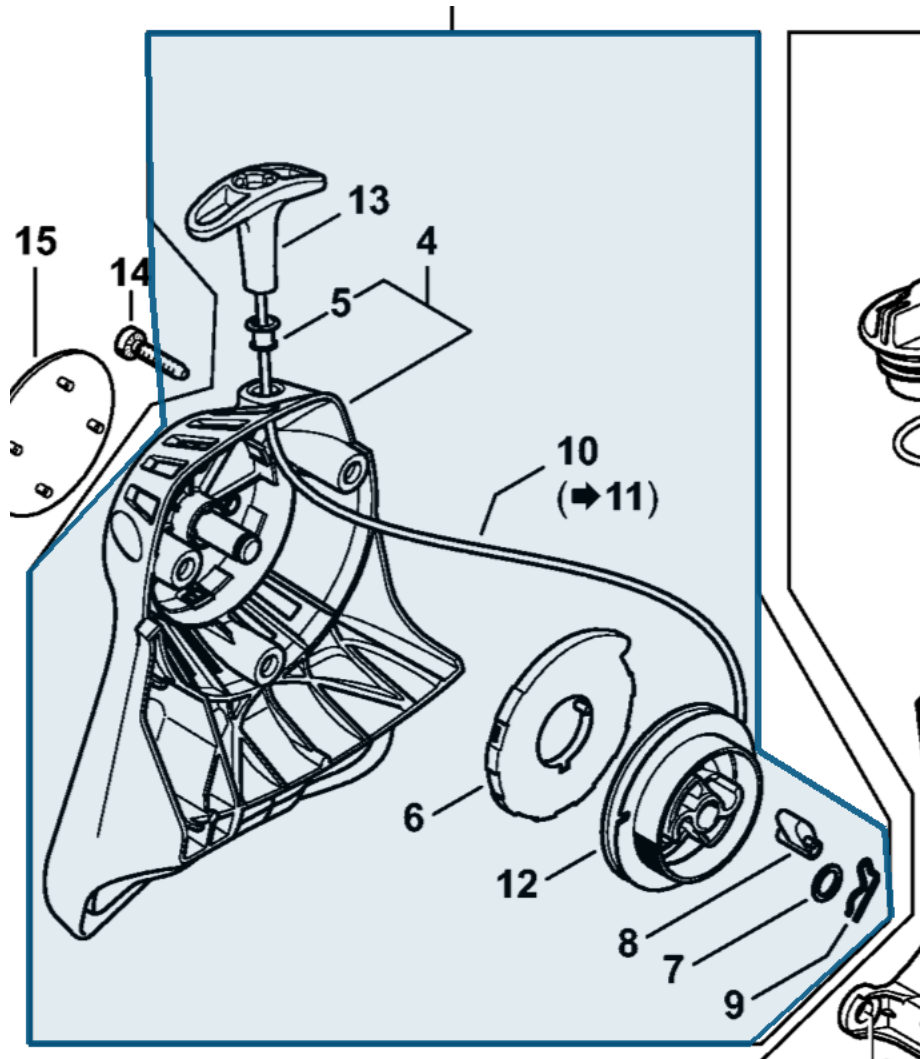

HT 135-Z spare-parts list, 10/28/2024. Drawing p. 5; parts table p. 6.



Online guide

Rim sprocket 0.325" 7T


0000 642 1236

Bin T2 | 2 spares per kit | AS1 supervision

MS 261 — rim sprocket

0.325-inch pitch; 7 teeth. Included in rim sprocket kit 1141 007 1002.

Item 24 | Qty listed: 1

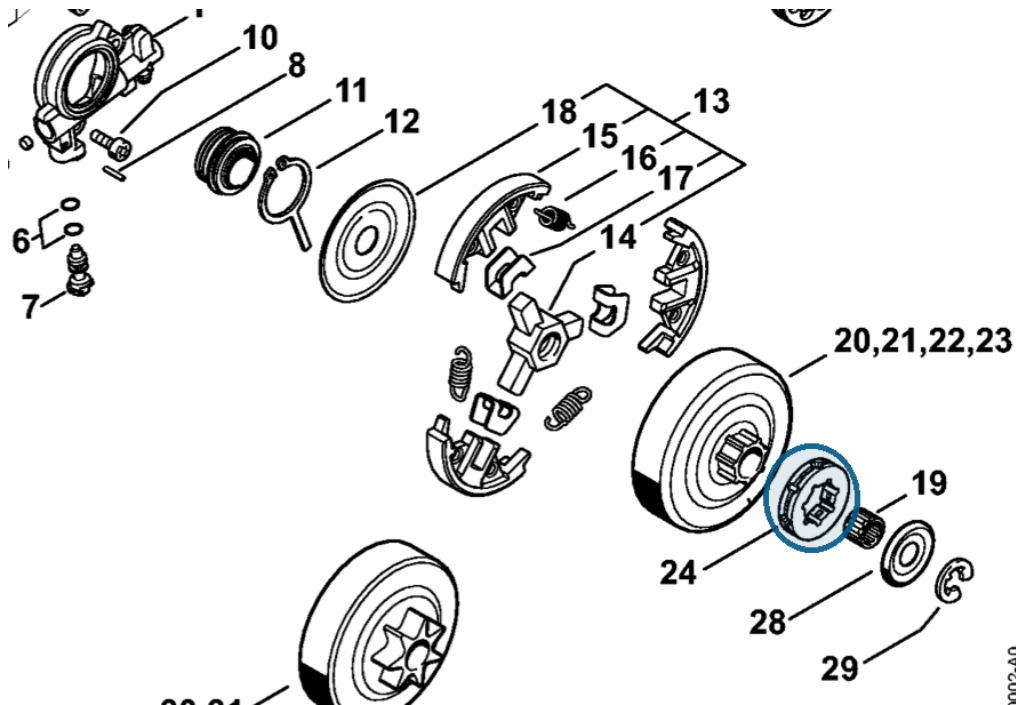

1002-A0

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 10; parts table p. 11.



Online guide

Rim sprocket 3/8" 7T


0000 642 1223

Bin **T2** | 1 spare per kit | **AS1** supervision

MS 462 — rim sprocket

3/8-inch pitch; 7 teeth. The FRK also contains the separate 8-tooth kit [1128 007 1001](#).

Item 20 | Qty listed: 1

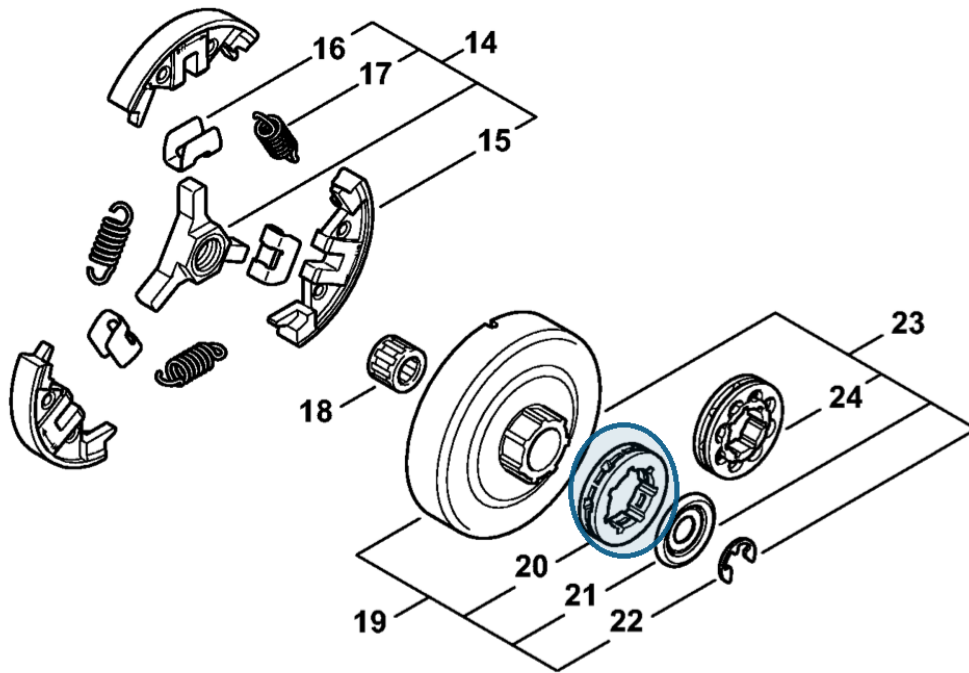

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 13; parts table p. 14.



Online guide

Rim sprocket kit 0.325" 7T


1141 007 1002

Bin B5 | 1 spare per kit | AS1 supervision

MS 261 — rim sprocket kit

0.325-inch pitch; 7 teeth. Includes rim sprocket 0000 642 1236 (item 24), washer 0000 958 1022 (item 28) and E-clip 9460 624 0801 (item 29).

Item 20 | Qty listed: 1

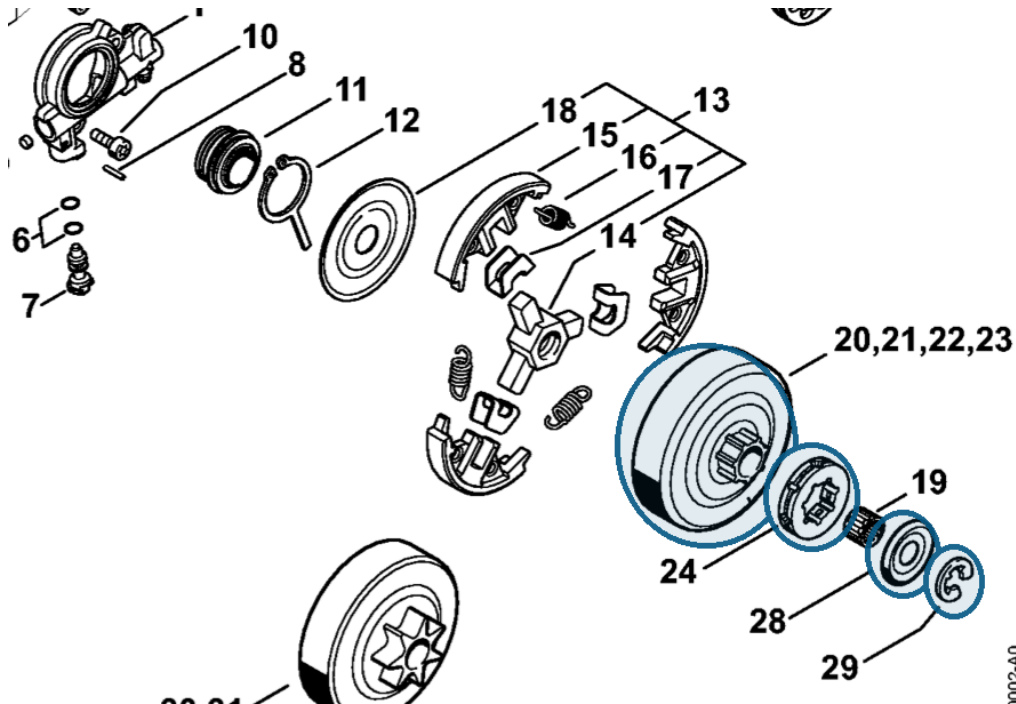

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 10; parts table p. 11.



Online guide

Rim sprocket kit 3/8" 8T


1128 007 1001

Bin B5 | 1 spare per kit | AS1 supervision

MS 462 — rim sprocket kit

3/8-inch pitch; 8 teeth. Includes washer 0000 958 1032 (item 21), E-clip 9460 624 0801 (item 22) and 8-tooth rim sprocket (item 24).

Item 23 | Qty listed: 1

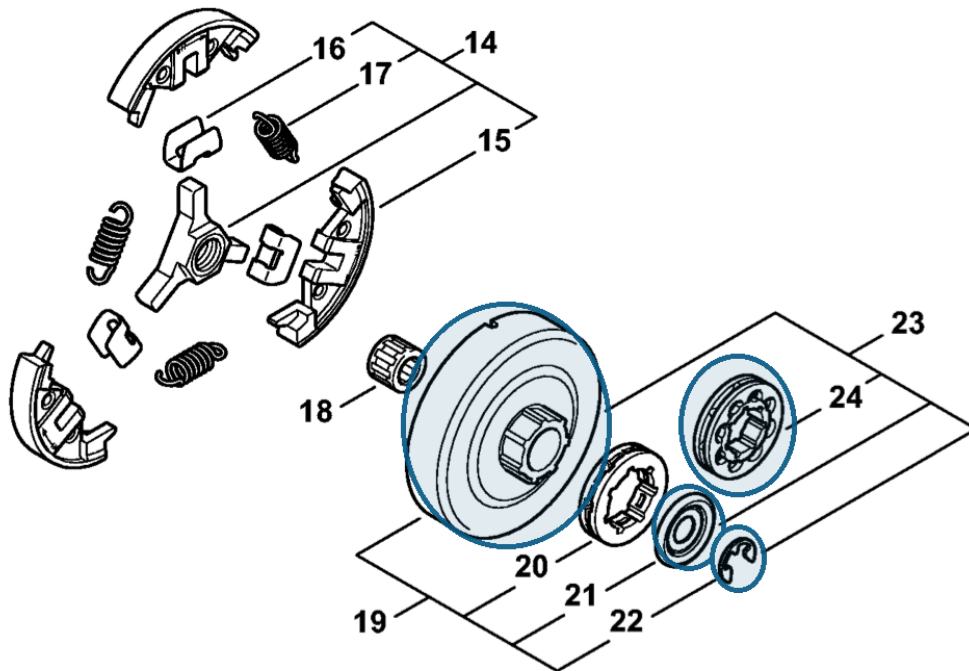

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 13; parts table p. 14.



Online guide

Spark plug BPMR7A


0000 400 7000

Bin **B4** | 3 spares per kit | **S1** supervision

MS 261 — cylinder

Spark plug in the cylinder.

Item 23 | Qty listed: 1

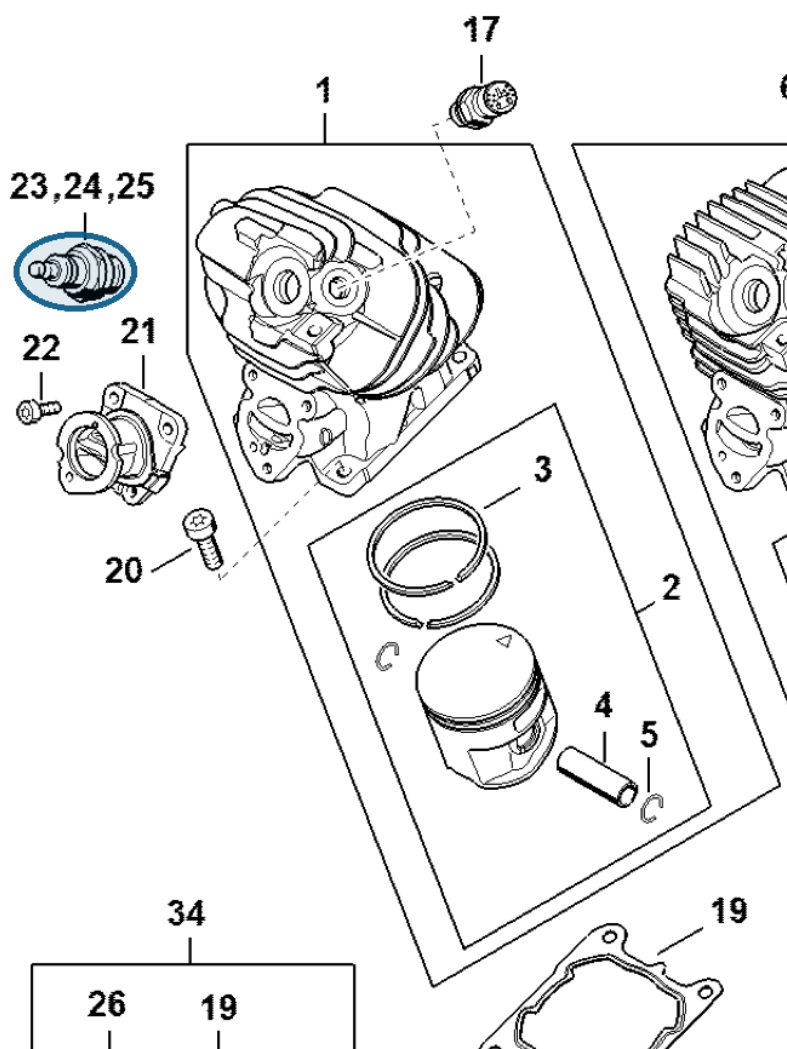

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 8; parts table p. 9.



Online guide

Spark plug NGK CMR6H

0000 400 7011


Bin **B4** | 2 spares per kit | **S1** supervision

MS 462 — cylinder

Spark plug in the cylinder. Also listed in section D and the ignition-system section.

Item 10 | Qty listed: 1

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 9; parts table p. 10.

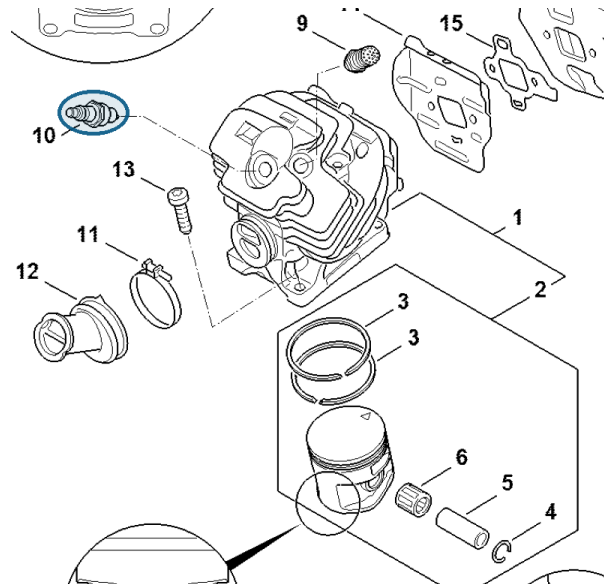


HT 135 — cylinder

Spark plug in the cylinder.

Item 9 | Qty listed: 1

HT 135-Z spare-parts list, 10/28/2024. Drawing p. 8; parts table p. 9.

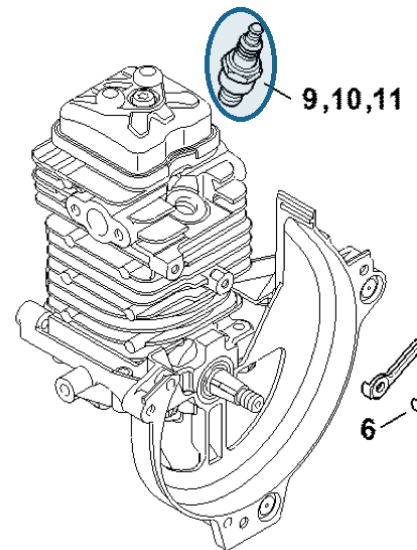




Online guide

Spline screw M5x12

9022 341 0960

Bin **T11** | 1 spare per kit | **S2** supervision

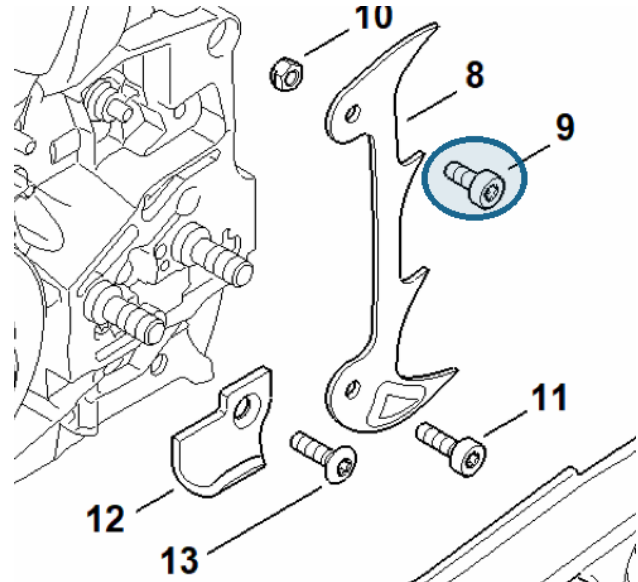


MS 462 — bumper spike

IS-M5x12. Screw at the upper hole of the inner bumper spike (item 8).

Item 9 | Qty listed: 1

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 17; parts table p. 18.

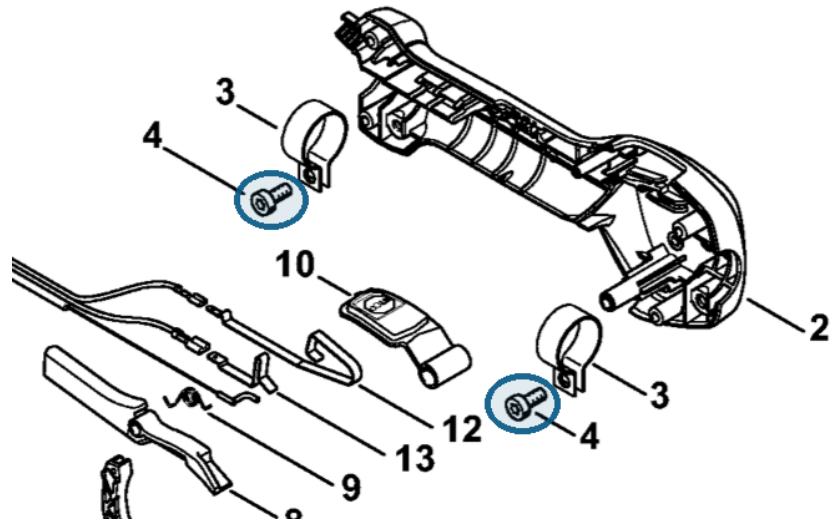

HT 135 — handle clamps

IS-M5x12. Two screws secure the clamps (item 3) inside the control handle.

Item 4 | Qty listed: 2

HT 135-Z spare-parts list, 10/28/2024. Drawing p. 15; parts table p. 16.



Online guide

Spring


1118 195 3500

Bin **T5** | 1 spare per kit | **S2** supervision

HT 135 — rewind starter

Pawl-retaining spring in rewind starter **4182 190 4001** (item 9).

Item 9 | Qty listed: 1

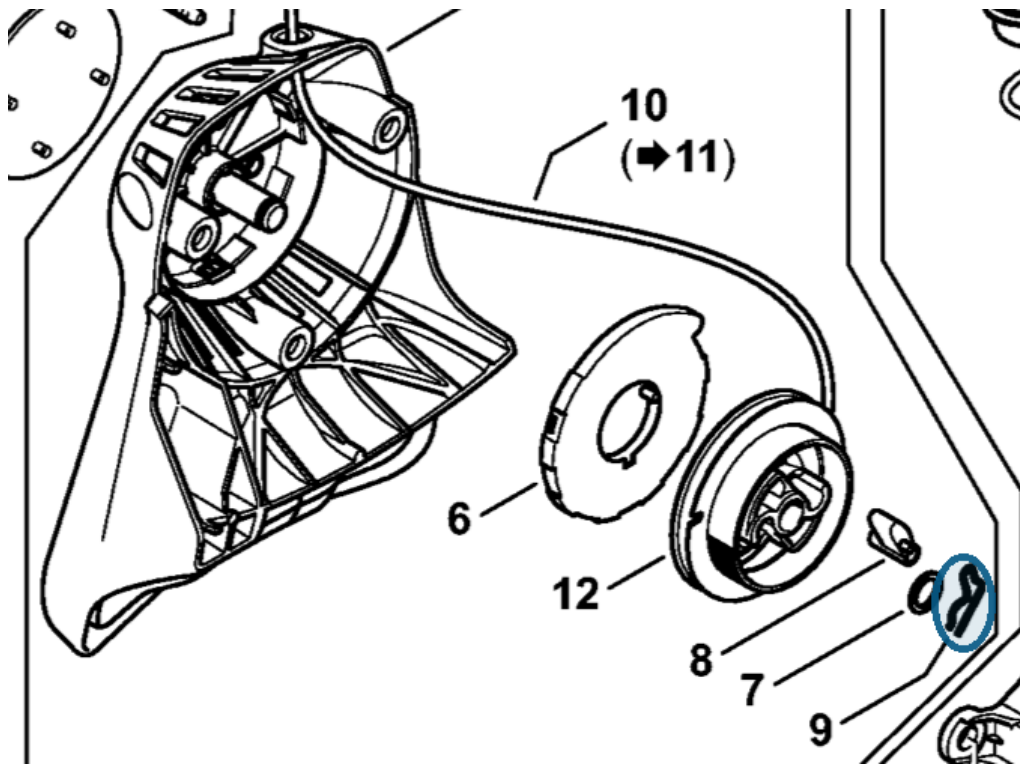

HT 135-Z spare-parts list, 10/28/2024. Drawing p. 5; parts table p. 6.




Online guide

Spring

1128 195 3500

Bin **T5** | 3 spares per kit | **S2** supervision

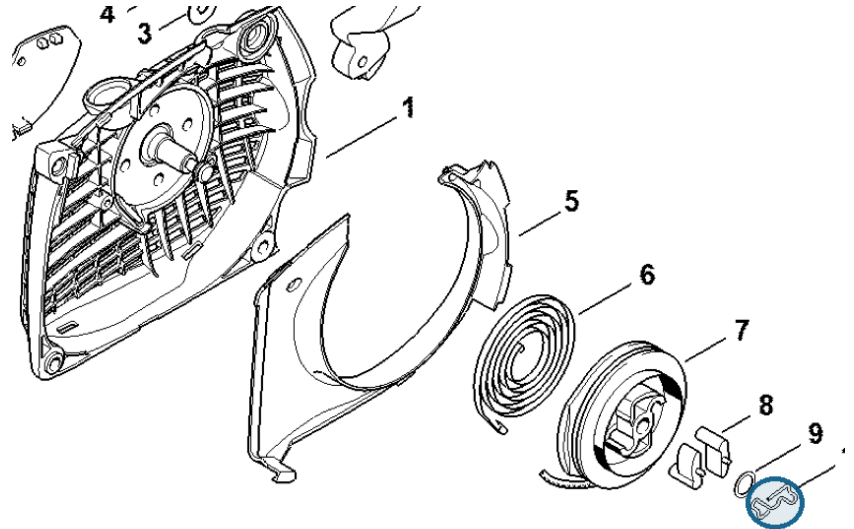

MS 261 — rewind starter

Pawl-retaining spring in fan housing 1141 080 2104 (item 10).

Item 10 | Qty listed: 1


MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 19; parts table p. 20.

MS 462 — rewind starter

Pawl-retaining spring in fan housing 1142 080 2102 (item 12).

Item 12 | Qty listed: 1

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 21; parts table p. 22.

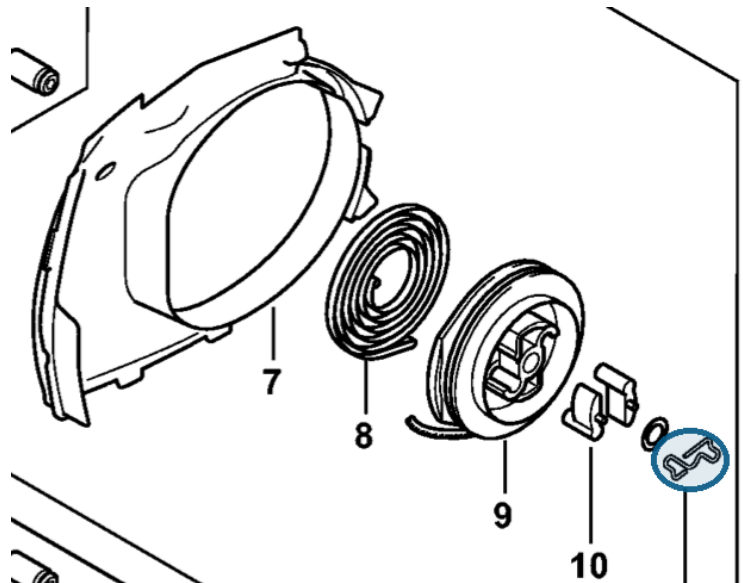



Online guide

Spring


1128 647 2400

Bin **B3** | 1 spare per kit | **S2** supervision

MS 462 — oil pump drive

Spring on worm 1128 640 7112 (item 11).

Item 12 | Qty listed: 1

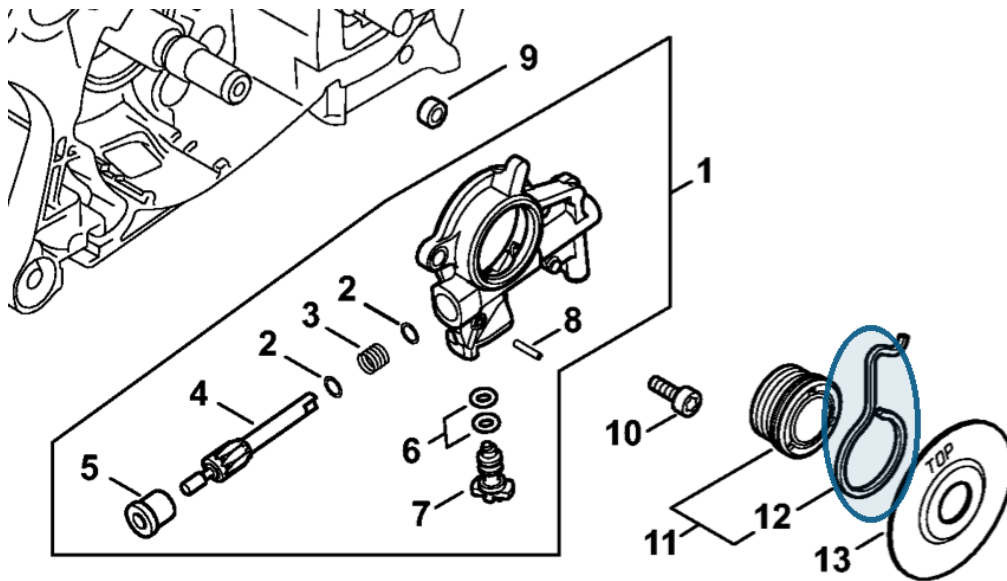

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 13; parts table p. 14.



Online guide

Tension spring


1141 160 5500

Bin **T6** | 3 spares per kit | **S2** supervision

MS 261 — chain brake

Includes sleeve (item 9). Shown with brake band 1141 160 5400.

Item 8 | Qty listed: 1

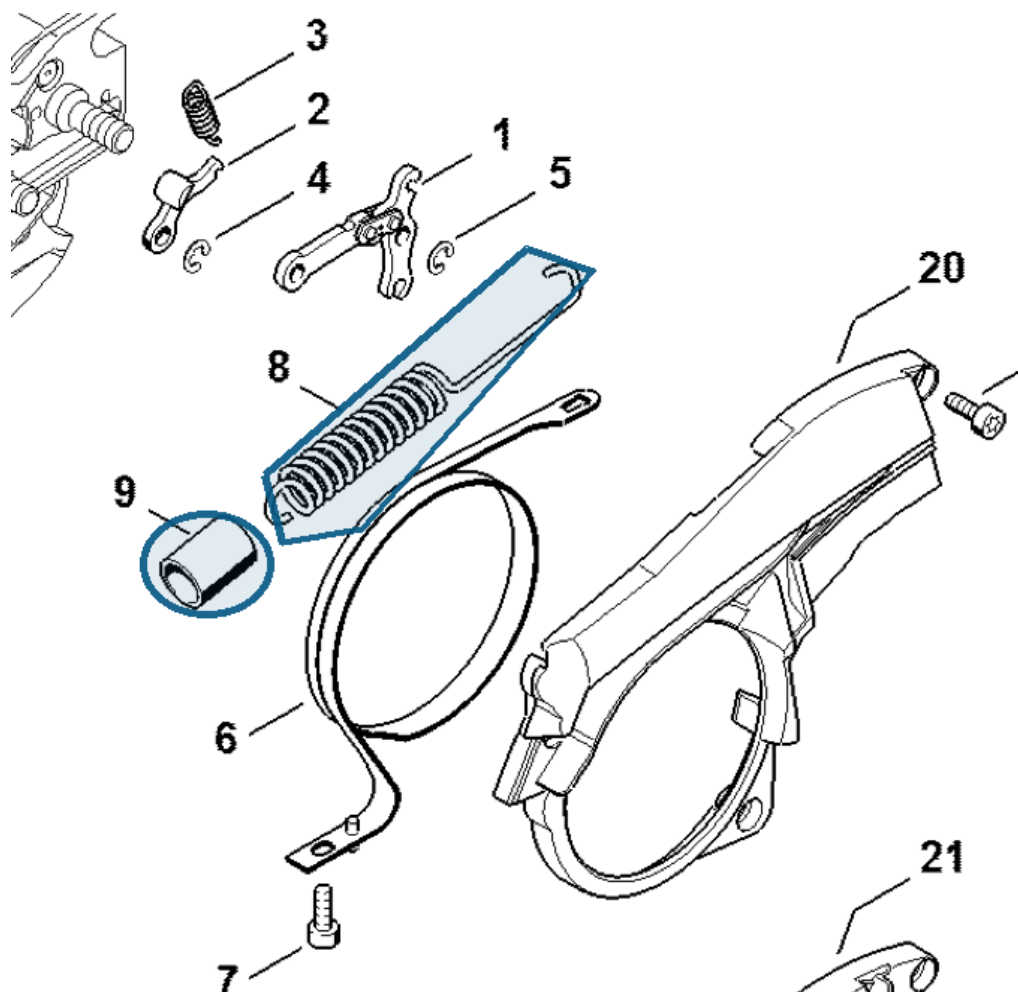

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 13; parts table p. 14.



Online guide

Tension spring


1142 160 5500

Bin **T6** | 1 spare per kit | **S2** supervision

MS 462 — chain brake

Includes sleeve (item 8). Shown with brake band 1142 160 5400.

Item 7 | Qty listed: 1

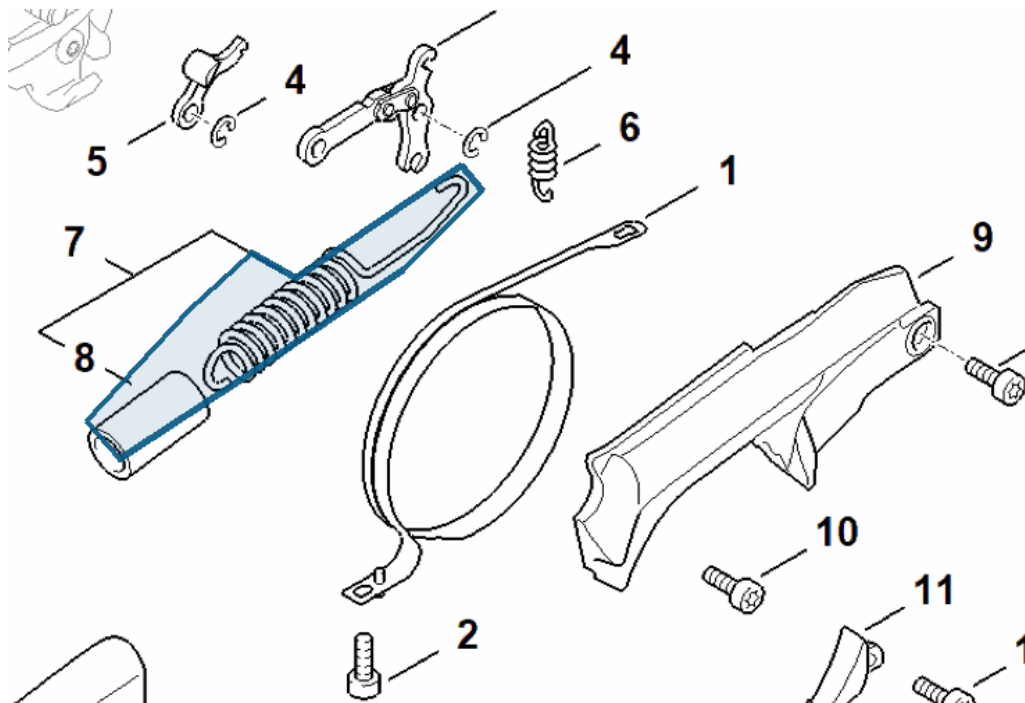

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 15; parts table p. 16.



Online guide

Tensioner slide

1125 640 1900


Bin **B1** | 2 spares per kit | **S2** supervision

MS 261 — chain tensioner

Slide in chain tensioner kit MA02 007 1002.

Item 3 | Qty listed: 1

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 15;
parts table p. 16.

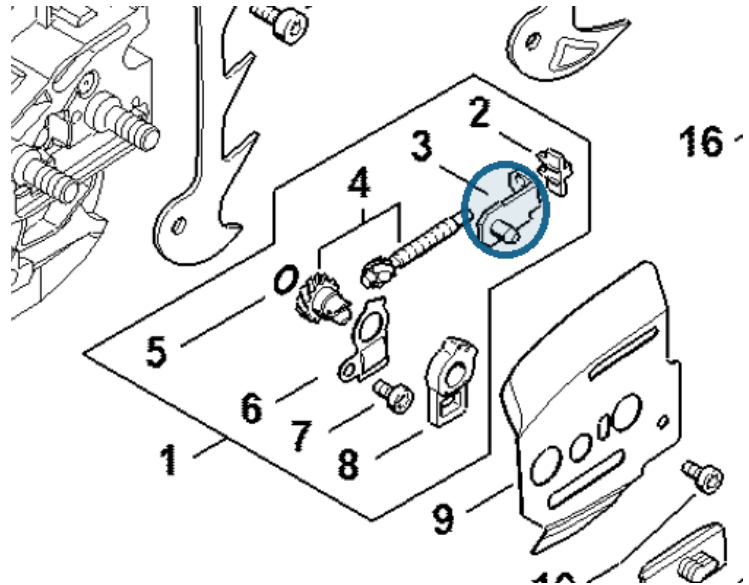


MS 462 — chain tensioner

Slide in chain tensioner kit MA02 007 1002.

Item 14 | Qty listed: 1

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 15;
parts table p. 16.

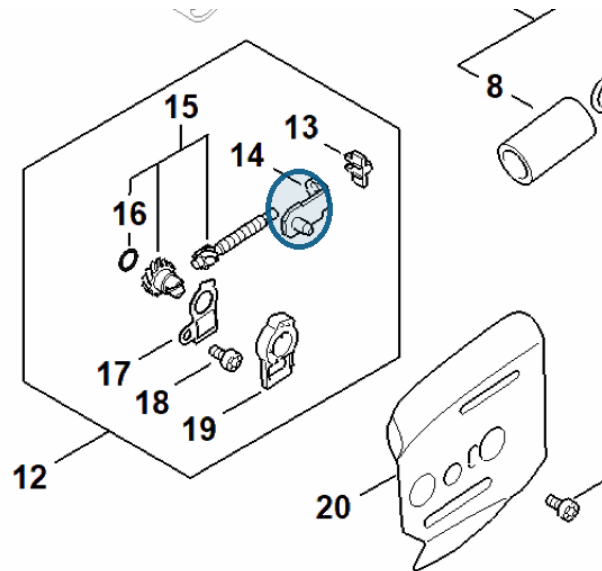



Online guide

Washer


4182 162 8900

Bin **T2** | 2 spares per kit | **S2** supervision

HT 135 — gear head

Washers on either side of chain sprocket **0000 640 2003** (item 26).

Item 27 | Qty listed: 2

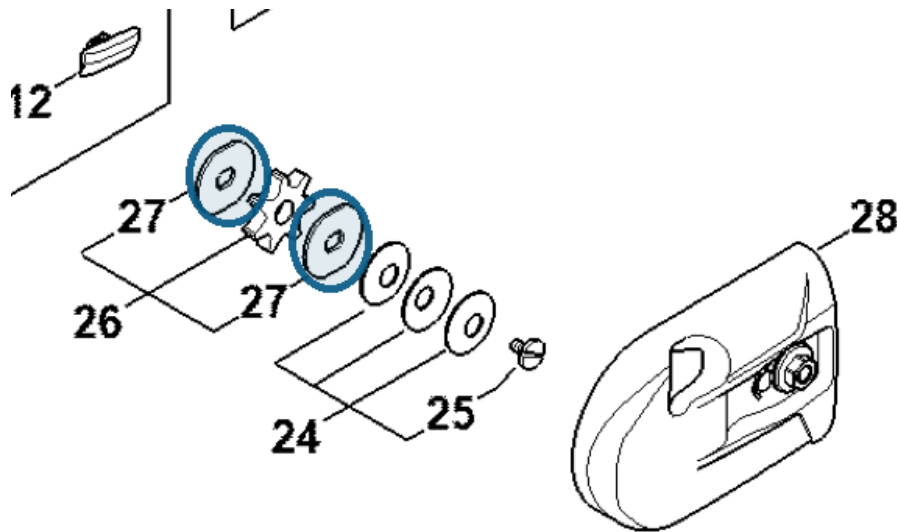

HT 135-Z spare-parts list, 10/28/2024. Drawing p. 17; parts table p. 18.



Online guide

Washer Ø 27 mm


0000 958 1022

Bin **T3** | 10 spares per kit | **AS1** supervision

MS 261 — clutch drum

Retained by E-clip [9460 624 0801](#). Included in rim sprocket kit [1141 007 1002](#).

Item 28 | Qty listed: 1

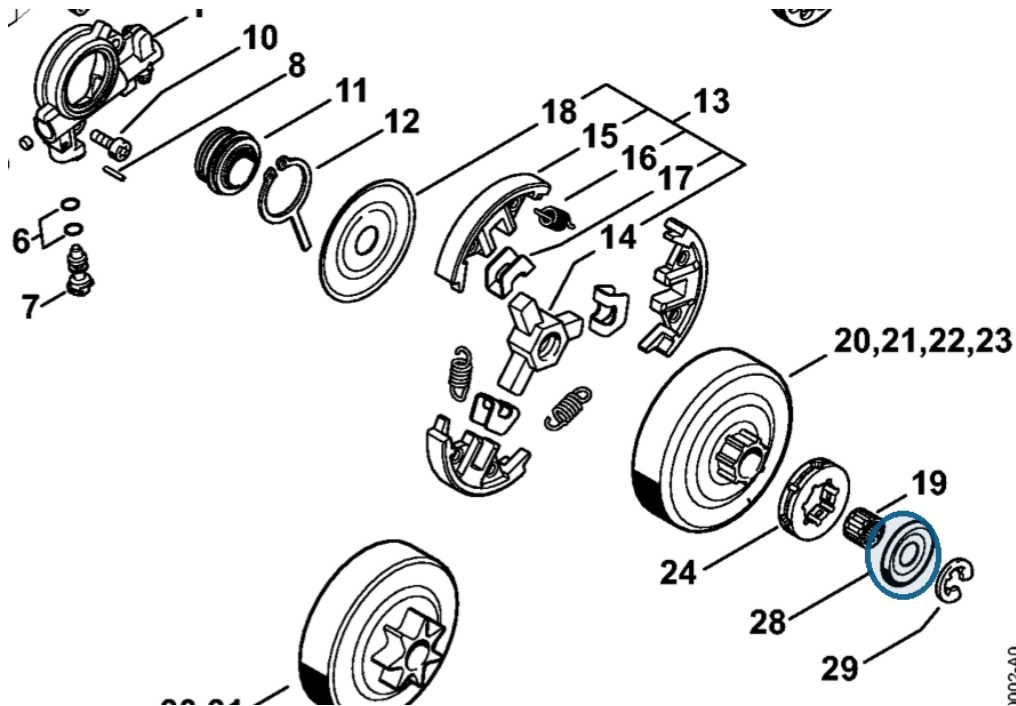

1002-A0

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 10; parts table p. 12.



Online guide

Washer Ø 27 mm


0000 958 1032

Bin **T3** | 1 spare per kit | **AS1** supervision

MS 462 — clutch drum

Retained by E-clip [9460 624 0801](#). Included in rim sprocket kit [1128 007 1001](#).

Item 21 | Qty listed: 1

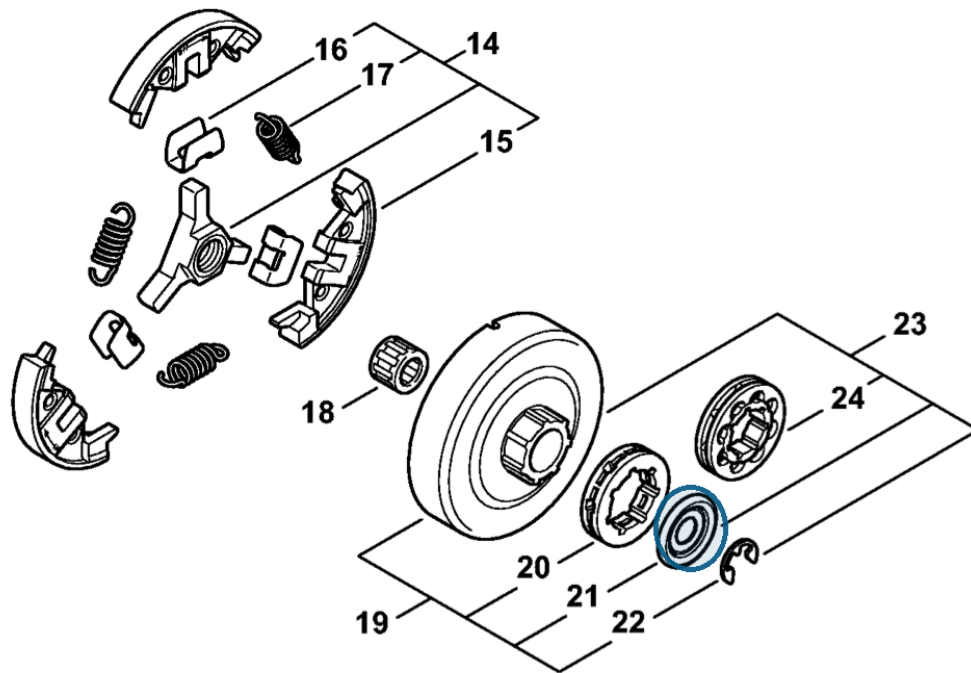

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 13; parts table p. 14.



Online guide

Worm


1121 640 7111

Bin **B3** | 3 spares per kit | **S2** supervision

MS 261 — oil pump drive

Includes carrier 1121 647 3100 (item 12). Drives oil pump 1141 640 3200.

Item 11 | Qty listed: 1

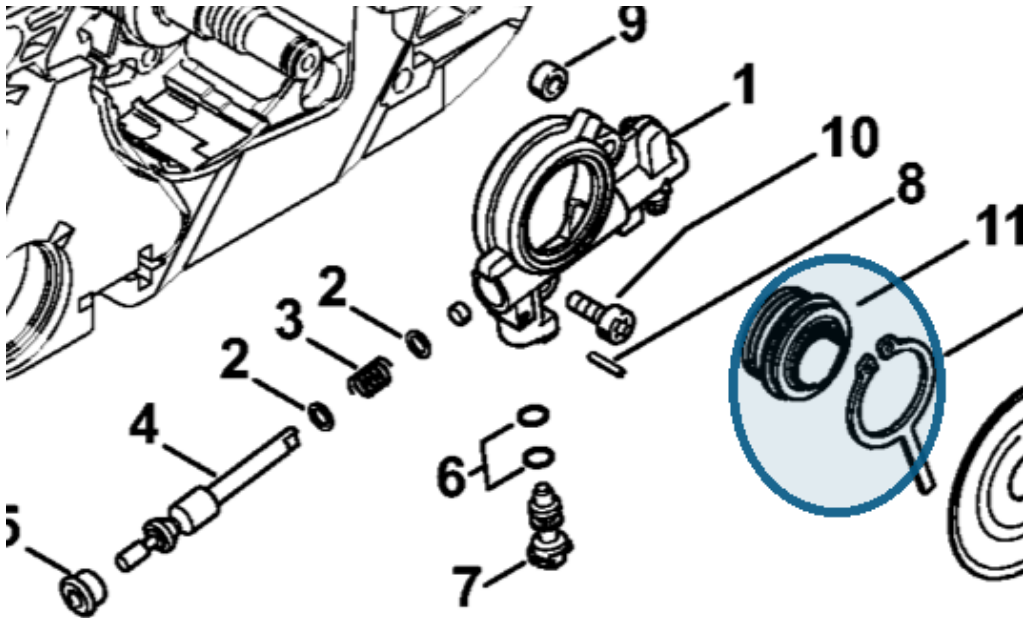

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 10; parts table p. 11.



Online guide

Worm


1128 640 7112

Bin **B3** | 1 spare per kit | **S2** supervision

MS 462 — oil pump drive

Includes spring 1128 647 2400 (item 12). Drives oil pump 1142 640 3200.

Item 11 | Qty listed: 1

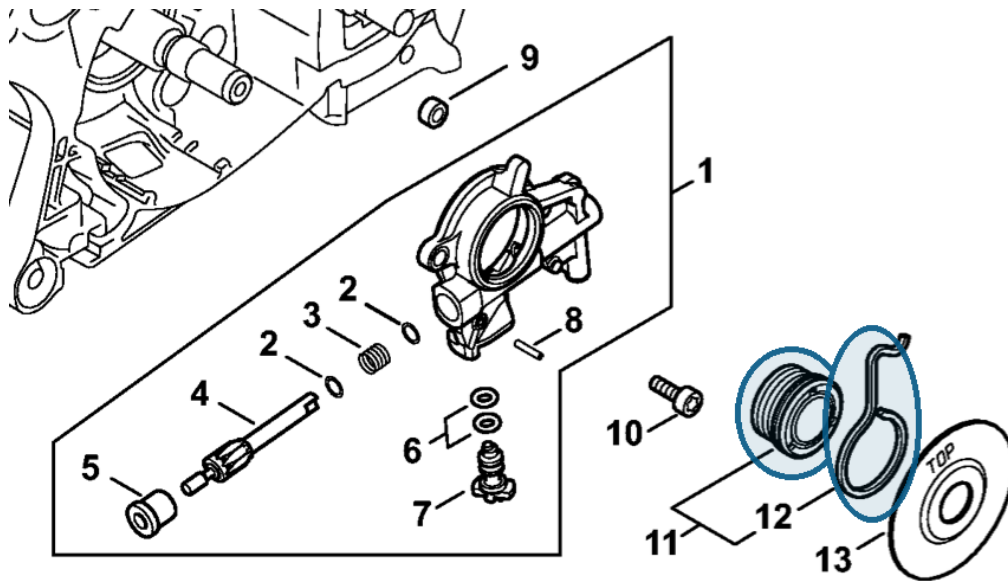

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 13; parts table p. 14.