TEAM RUBICON
DISASTER RESPONSE

2026-09-28

Field Repair Kit: Part Reference

HT 135 / MS 261 / MS 462

61 parts

Part	Saws	Part number	Bin	Page
Air filter	HT 135	4180 141 0300	T0	3
Air filter HD2	MS 261	1141 140 4400	T0	4
Air filter HD2	MS 462	1142 140 4402	T0	5
Brake band	MS 261	1141 160 5400	B0	6
Brake band	MS 462	1142 160 5400	B0	7
Bumper strip	MS 261, MS 462	1121 648 6610	T9	8
Bumper strip	HT 135	1123 648 6600	T9	9
Carrier	MS 261	1121 647 3100	B3	10
Chain catcher	MS 261	1141 656 7700	T10	11
Chain catcher	MS 462	1142 656 7700	T10	12
Chain sprocket 3/8"P 7 teeth	HT 135	0000 640 2003	T2	13
Chain tensioner kit	MS 261, MS 462	MA02 007 1002	B1	14
Chain tightener	HT 135	4182 660 0700	B1	15
Clutch	MS 261	1121 160 2051	B2	16
Clutch	MS 462	1142 160 2000	B2	17
Clutch	HT 135	4180 160 2000	B2	18
Collar nut M8	MS 261, MS 462	0000 995 0803	T11	19
Countersunk screw M5x18-10.9	MS 462	9061 373 0982	T11	20
Decompression valve	MS 261	1141 020 9430	T4	21
Decompression valve	MS 462	1142 020 9400	T4	22
E-clip 8x1.3	MS 261, MS 462	9460 624 0801	T3	23
Fan housing with rewind starter	MS 261	1141 080 2104	B0	24
Fan housing with rewind starter	MS 462	1142 080 2102	B0	25
Filler cap	MS 261	0000 350 0532	T0	26
Filler cap	MS 462	0000 350 0533	T0	27
Filler cap, mix	HT 135	0000 350 0527	T0	28
Filler cap, oil	HT 135	0000 350 0529	T0	29
Guard	MS 261	1141 656 1501	T8	30
Guard	MS 462	1142 656 1500	T8	31
Inner side plate	MS 462	1128 664 1000	B1	32
Inner side plate	MS 261	1141 664 1030	B1	33
Needle cage 10x13x10	MS 261	9512 933 2260	T1	34
Needle cage 10x16x12	MS 462	9512 933 2379	T1	35
Oil filler cap	MS 261	0000 350 0537	T0	36

Part index (continued)

Part	Saws	Part number	Bin	Page
Oil pump	MS 261	1141 640 3200	B3	37
Oil pump	MS 462	1142 640 3200	B3	38
Oil pump	HT 135	4138 640 3200	B3	39
Pan head screw IS M5x20	MS 261, MS 462	9022 371 1020	T11	40
Pan head self-tapping screw	MS 261	9074 477 4438	T11	41
Pawl	HT 135, MS 261, MS 462	0000 195 7200	T5	42
Pickup body	MS 261, MS 462	0000 350 3518	T7	43
Pickup body	HT 135	0000 350 3521	T7	44
Rewind starter	HT 135	4182 190 4001	B0	45
Rim sprocket 0.325" 7T	MS 261	0000 642 1236	T2	46
Rim sprocket 3/8" 7T	MS 462	0000 642 1223	T2	47
Rim sprocket kit 0.325" 7T	MS 261	1141 007 1002	B5	48
Rim sprocket kit 3/8" 7T	MS 462	1128 007 1000	B5	49
Spark plug BPMR7A	MS 261	0000 400 7000	B4	50
Spark plug NGK CMR6H	HT 135, MS 462	0000 400 7011	B4	51
Spline screw M5x12	HT 135, MS 462	9022 341 0960	T11	52
Spring	HT 135	1118 195 3500	T5	53
Spring	MS 261, MS 462	1128 195 3500	T5	54
Spring	MS 462	1128 647 2400	B3	55
Tension spring	MS 261	1141 160 5500	T6	56
Tension spring	MS 462	1142 160 5500	T6	57
Tensioner slide	MS 261, MS 462	1125 640 1900	B1	58
Washer	HT 135	4182 162 8900	T2	59
Washer Ø 27 mm	MS 261	0000 958 1022	T3	60
Washer Ø 27 mm	MS 462	0000 958 1032	T3	61
Worm	MS 261	1121 640 7111	B3	62
Worm	MS 462	1128 640 7112	B3	63

Air filter

4180 141 0300


Bin **T0** | **1** spare per kit | **S1** supervision

Online guide

HT 135 — air filter

Air-filter element between the filter cover (item 6) and filter housing (item 9).

Item 8 | **Qty listed: 1**

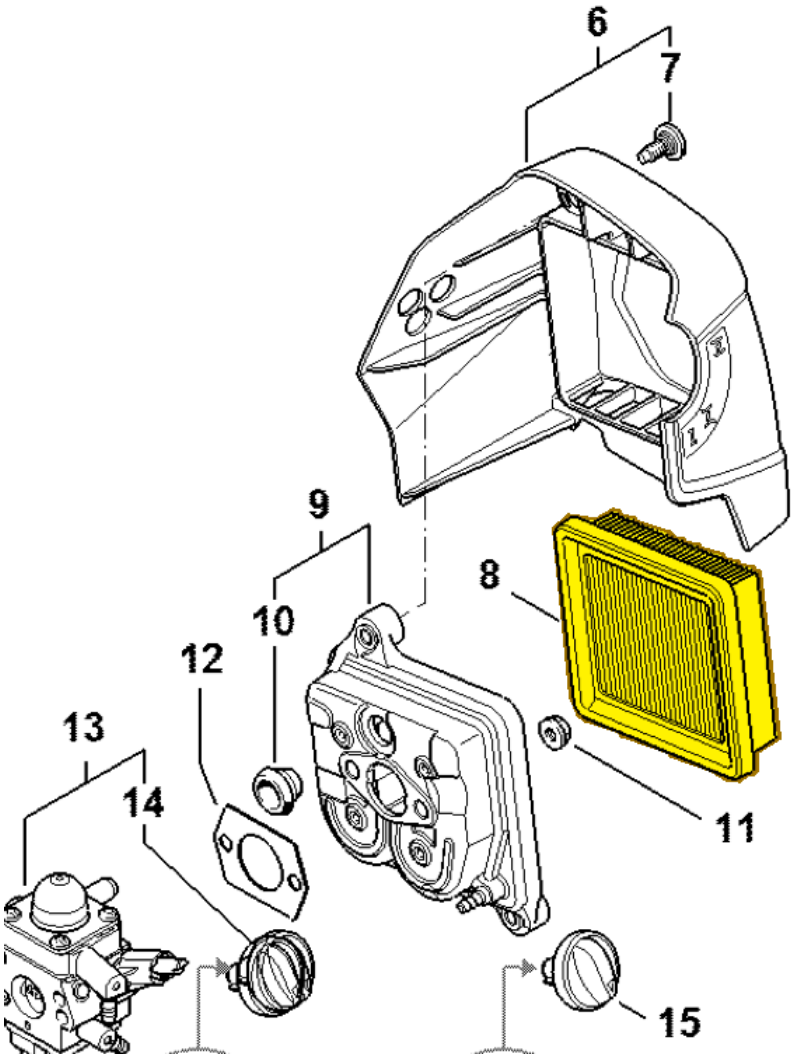

HT 135-Z spare-parts list, 10/28/2024. Drawing p. 20; parts table p. 21.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Air filter HD2

1141 140 4400


Bin **T0** | **1** spare per kit | **S1** supervision

Online guide

MS 261 — air filter

HD2 air filter on the carburetor bracket.

Item 19 | **Qty listed: 1**

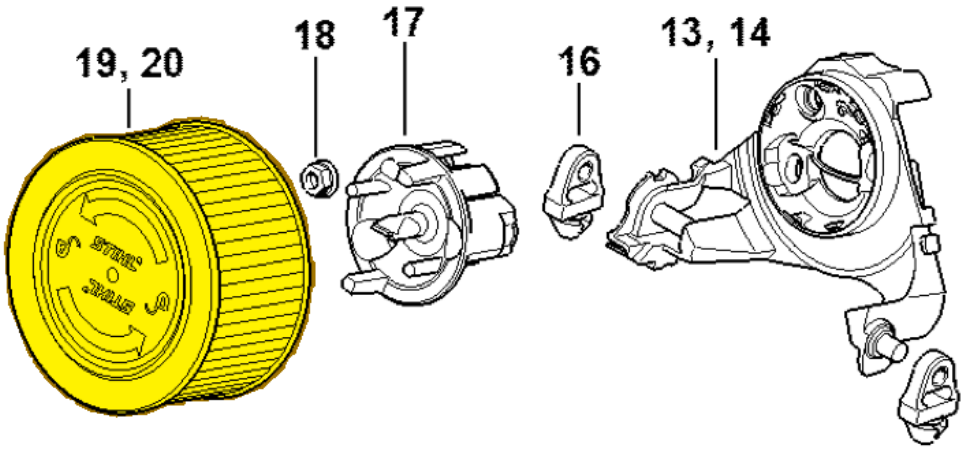

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 27; parts table p. 28.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Air filter HD2

1142 140 4402


Bin **T0** | **1** spare per kit | **S1** supervision

Online guide

MS 462 — air filter

HD2 air filter on the carburetor bracket.

Item 15 | **Qty listed: 1**

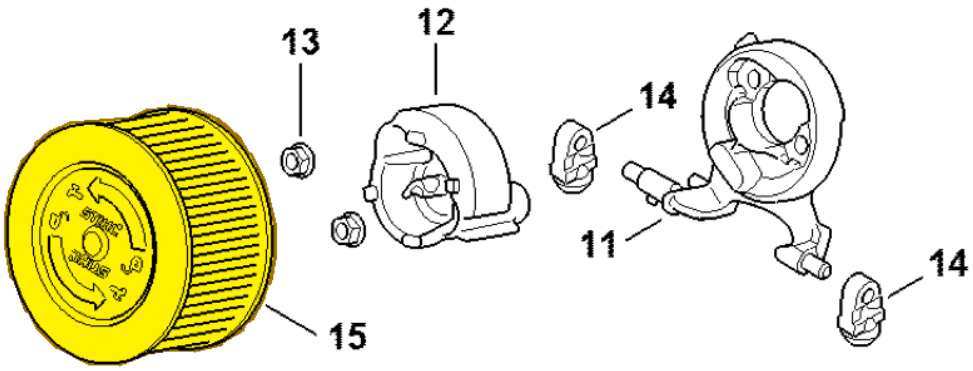

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 27; parts table p. 28.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Brake band

1141 160 5400


Bin **B0** | **1** spare per kit | **S2** supervision

Online guide

MS 261 — chain brake

Brake band around the clutch drum. Shown with tension spring 1141 160 5500.

Item 6 | **Qty listed: 1**

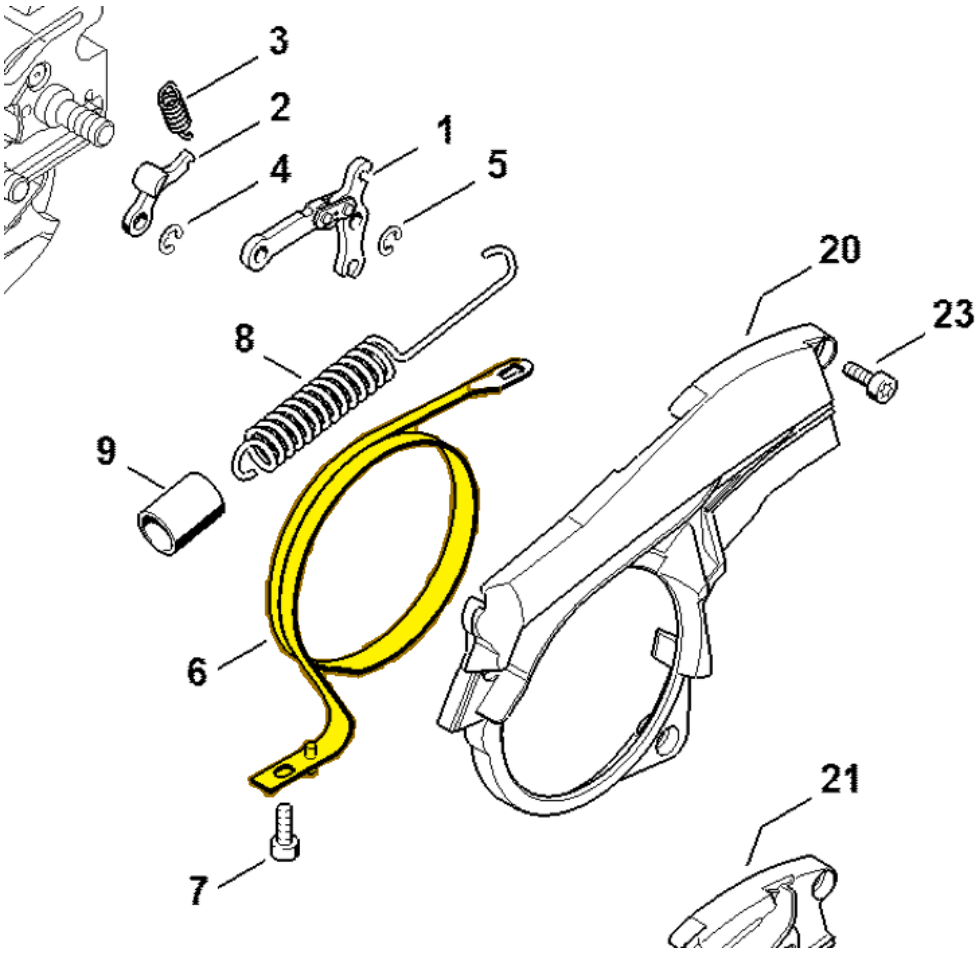

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 13; parts table p. 14.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Brake band

1142 160 5400


Bin **B0** | **1** spare per kit | **S2** supervision

Online guide

MS 462 — chain brake

Brake band around the clutch drum. Shown with tension spring 1142 160 5500.

Item 1 | **Qty listed: 1**

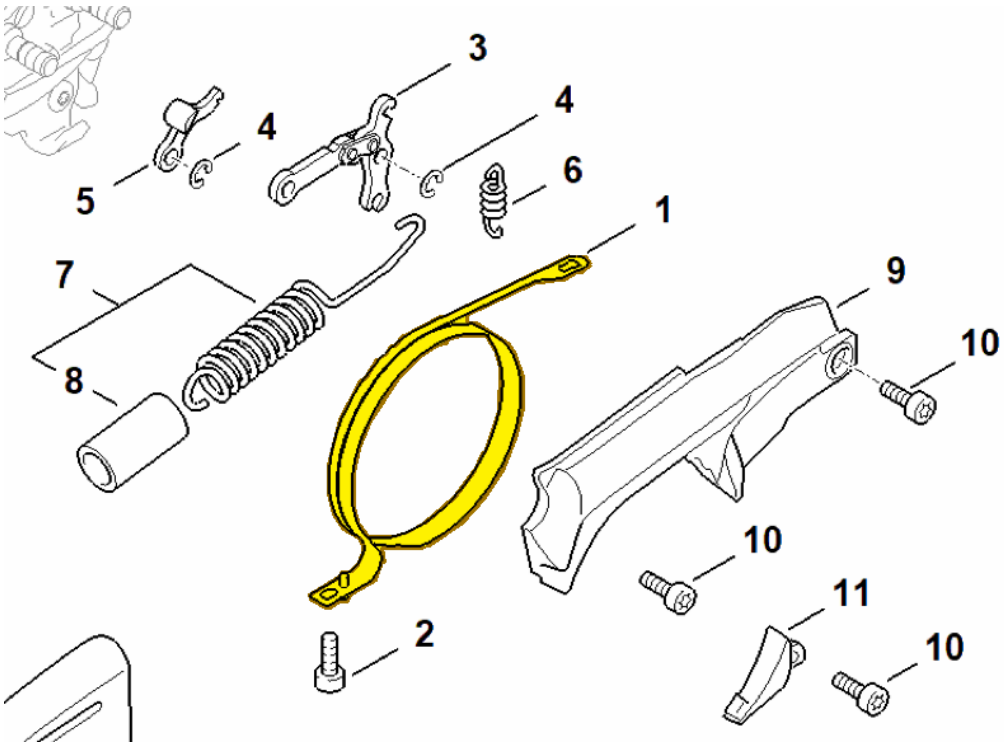

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 15; parts table p. 16.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Bumper strip

1121 648 6610

Bin **T9** | **8** spares per kit | **S1** supervision


Online guide

MS 261 — chain sprocket cover

Two strips on the inside of the chain sprocket cover.

Item 12 | **Qty listed: 2**

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 15; parts table p. 16.

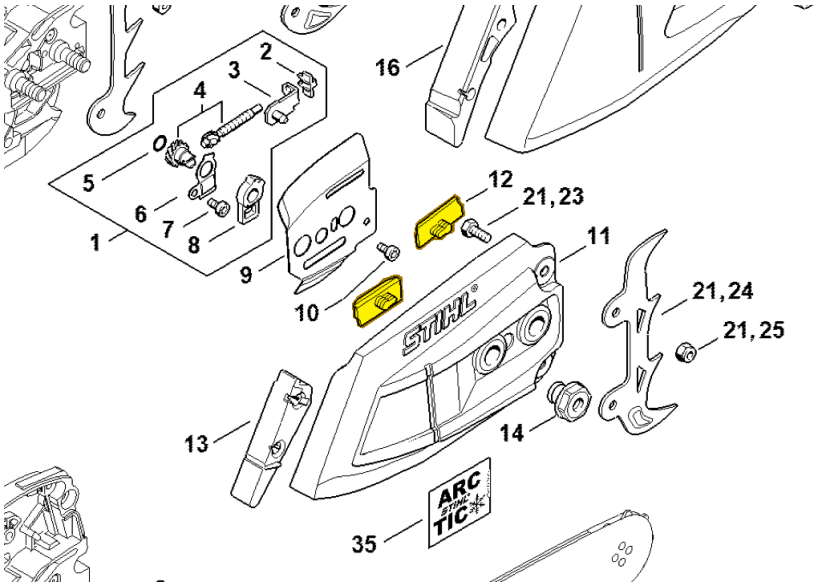


MS 462 — chain sprocket cover

Two strips on the inside of the chain sprocket cover.

Item 4 | **Qty listed: 2**

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 17; parts table p. 18.

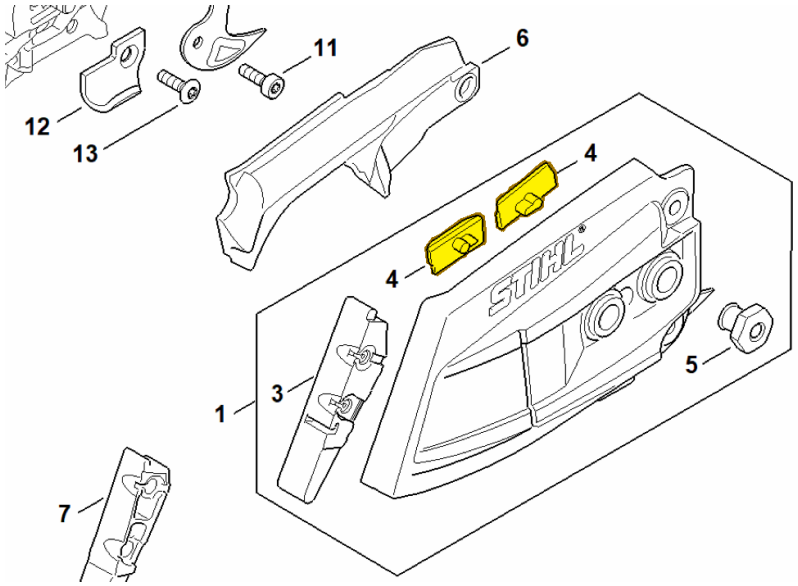

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Bumper strip

1123 648 6600


Bin **T9** | **4** spares per kit | **S1** supervision

Online guide

HT 135 — chain sprocket cover

Two strips on the gear-head housing, behind the chain sprocket cover.

Item 12 | **Qty listed: 2**

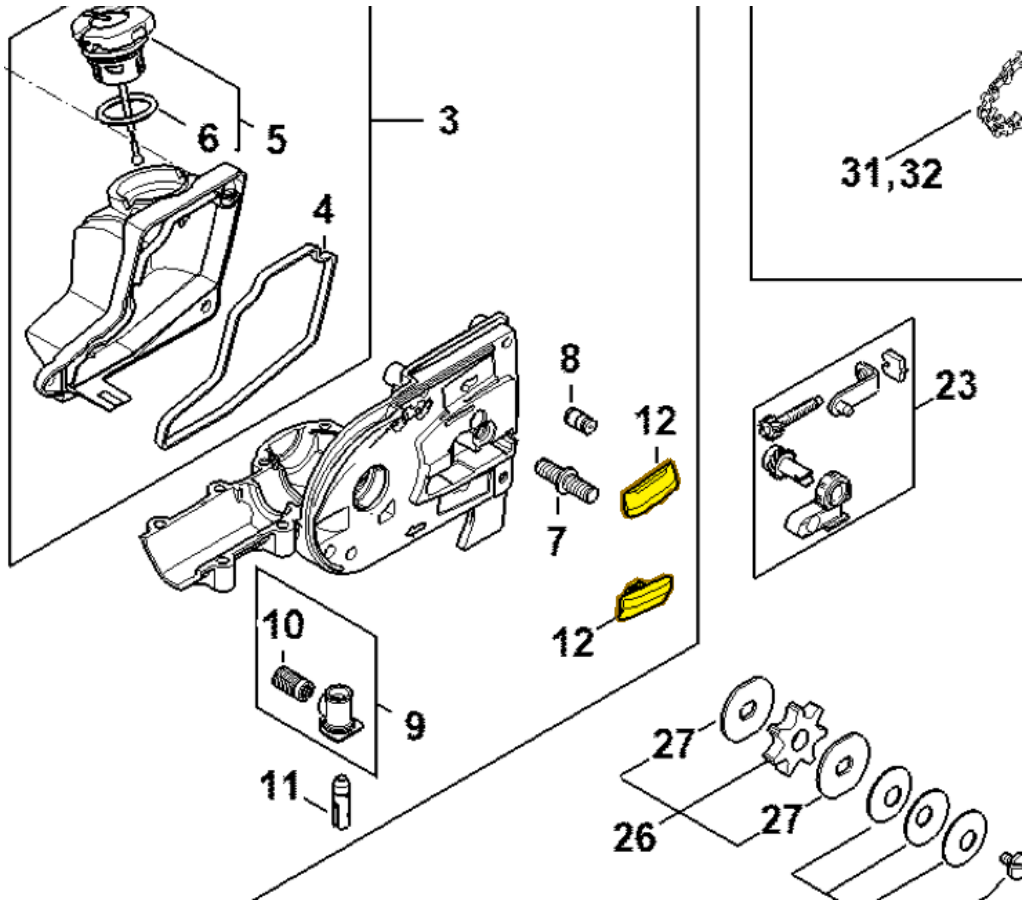

HT 135-Z spare-parts list, 10/28/2024. Drawing p. 17; parts table p. 18.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Carrier

1121 647 3100


Bin **B3** | **3** spares per kit | **S2** supervision

Online guide

MS 261 — oil pump drive

Carrier on worm 1121 640 7111 (item 11).

Item 12 | **Qty listed: 1**

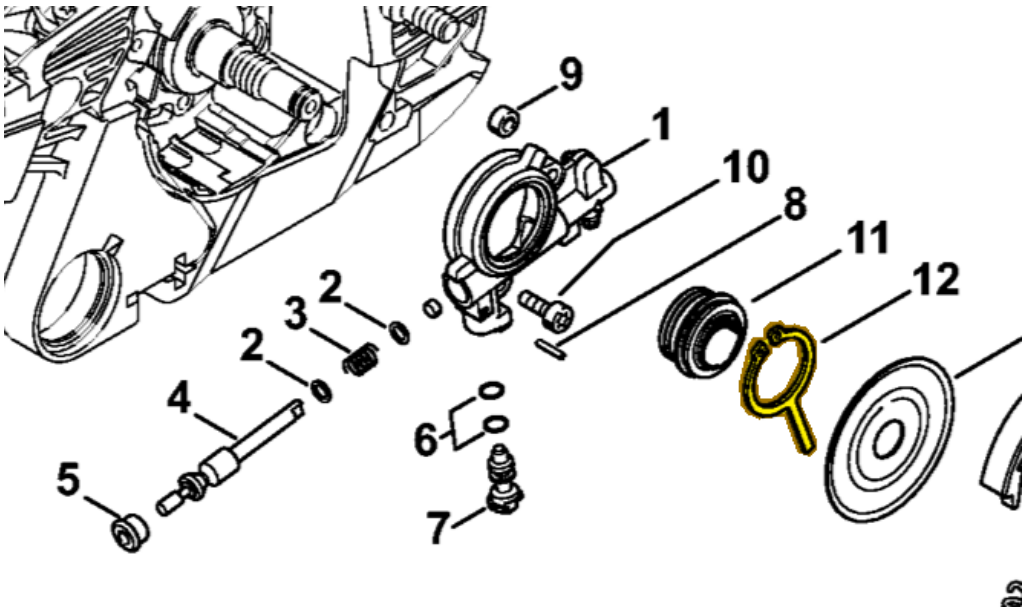

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 10; parts table p. 11.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Chain catcher

1141 656 7700


Bin **T10** | **3** spares per kit | **AS1** supervision

Online guide

MS 261 — chain catcher

Secured to the crankcase by self-tapping screw 9074 477 4438 (IS-P6×30; item 40).

Item 39 | **Qty listed: 1**

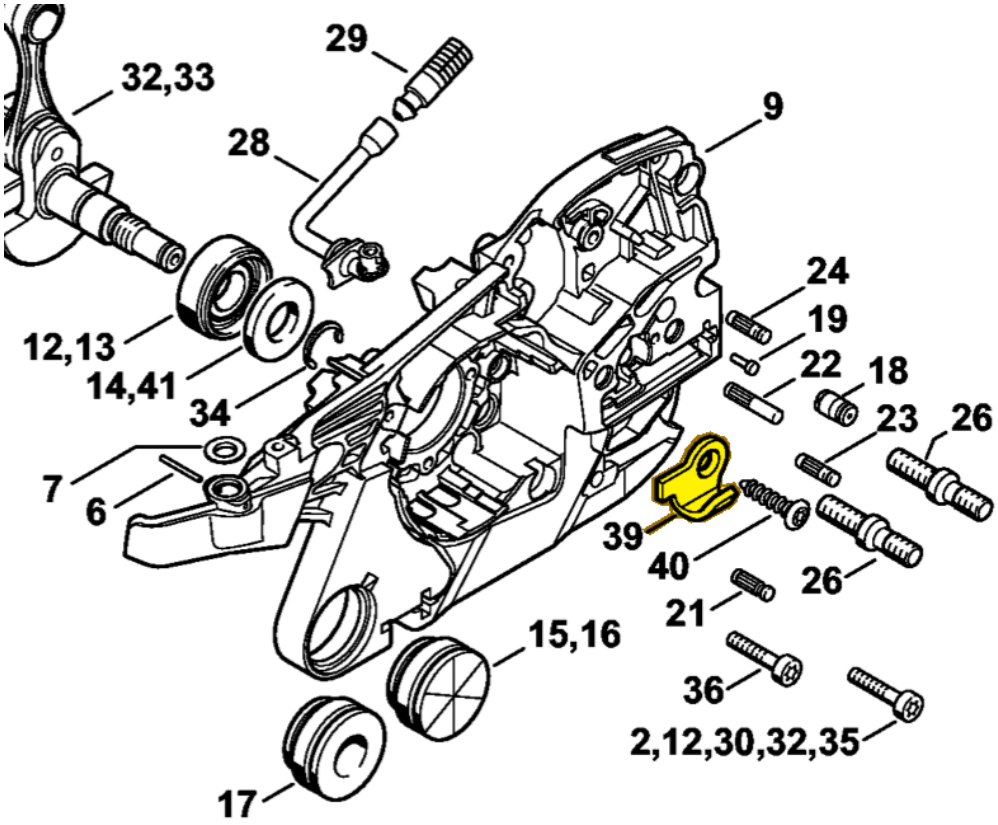

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 3; parts table p. 5.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Chain catcher

1142 656 7700


Bin **T10** | **1** spare per kit | **AS1** supervision

Online guide

MS 462 — chain catcher

Secured to the crankcase by countersunk screw 9061 373 0982 (M5×18-10.9; item 13).

Item 12 | **Qty listed: 1**

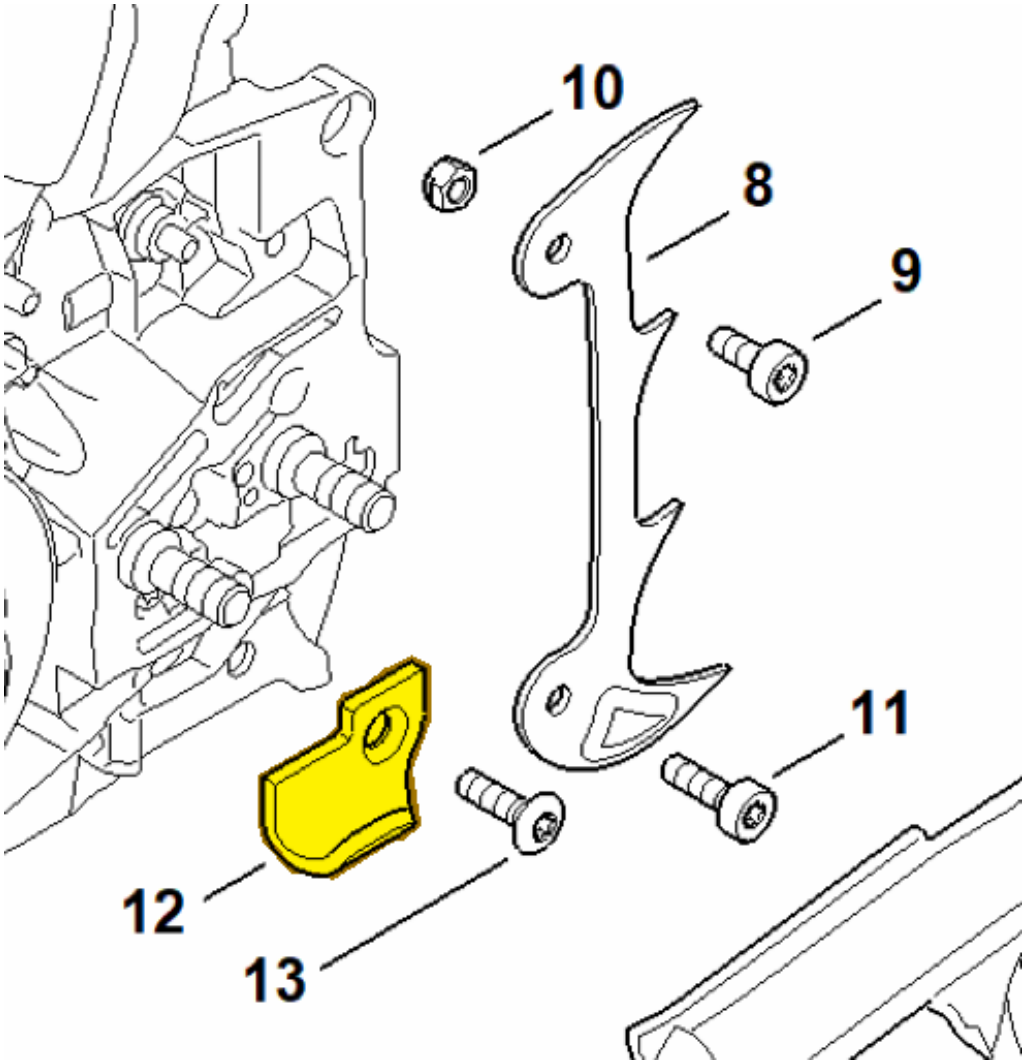

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 17; parts table p. 18.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Chain sprocket 3/8"P 7 teeth

0000 640 2003


Bin **T2** | **1** spare per kit | **S2** supervision

Online guide

HT 135 — gear head

3/8-inch P pitch; 7 teeth. Includes two washers 4182 162 8900 (item 27).

Item 26 | **Qty listed: 1**

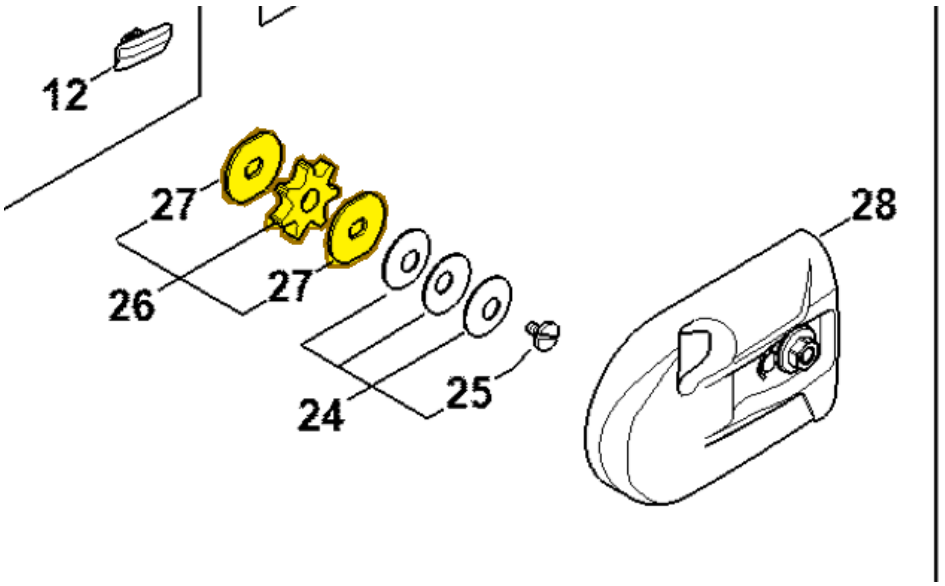

HT 135-Z spare-parts list, 10/28/2024. Drawing p. 17; parts table p. 18.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Chain tensioner kit

MA02 007 1002

Bin **B1** | **2** spares per kit | **S2** supervision


Online guide

MS 261 — chain tensioner

Includes items 2–8, including tensioner slide `1125 640 1900` (item 3).

Item 1 | **Qty listed: 1**

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 15; parts table p. 16.

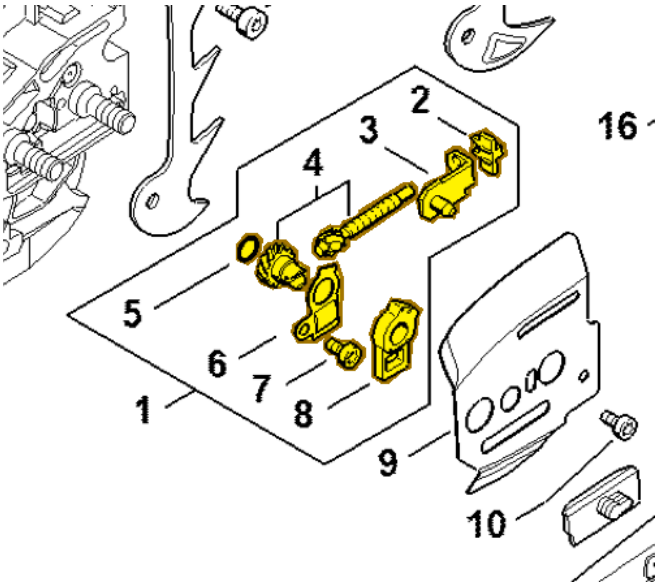


MS 462 — chain tensioner

Includes items 13–19, including tensioner slide `1125 640 1900` (item 14).

Item 12 | **Qty listed: 1**

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 15; parts table p. 16.

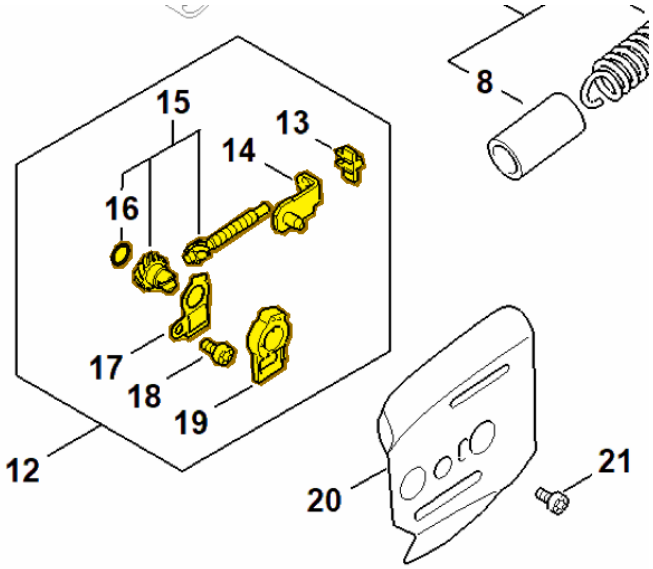

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Chain tightener

4182 660 0700


Bin **B1** | **1** spare per kit | **S2** supervision

Online guide

HT 135 — chain tensioner

Chain-tensioning assembly on the gear head.

Item 23 | **Qty listed: 1**

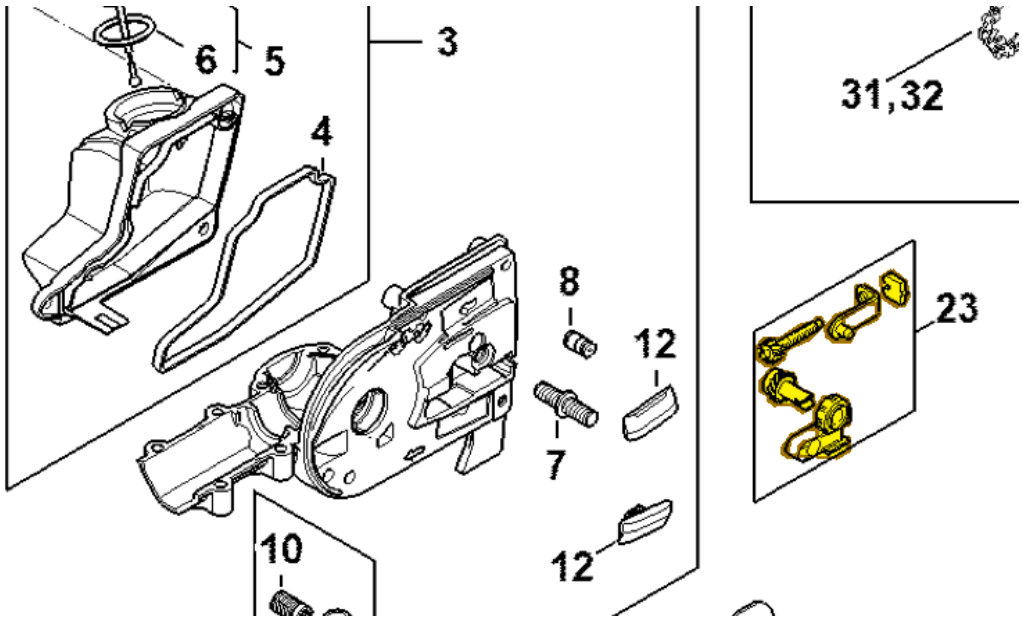

HT 135-Z spare-parts list, 10/28/2024. Drawing p. 17; parts table p. 18.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Clutch

1121 160 2051


Bin **B2** | **2** spares per kit | **S2** supervision

Online guide

MS 261 — clutch

Assembly includes items 14–18.

Item 13 | **Qty listed: 1**

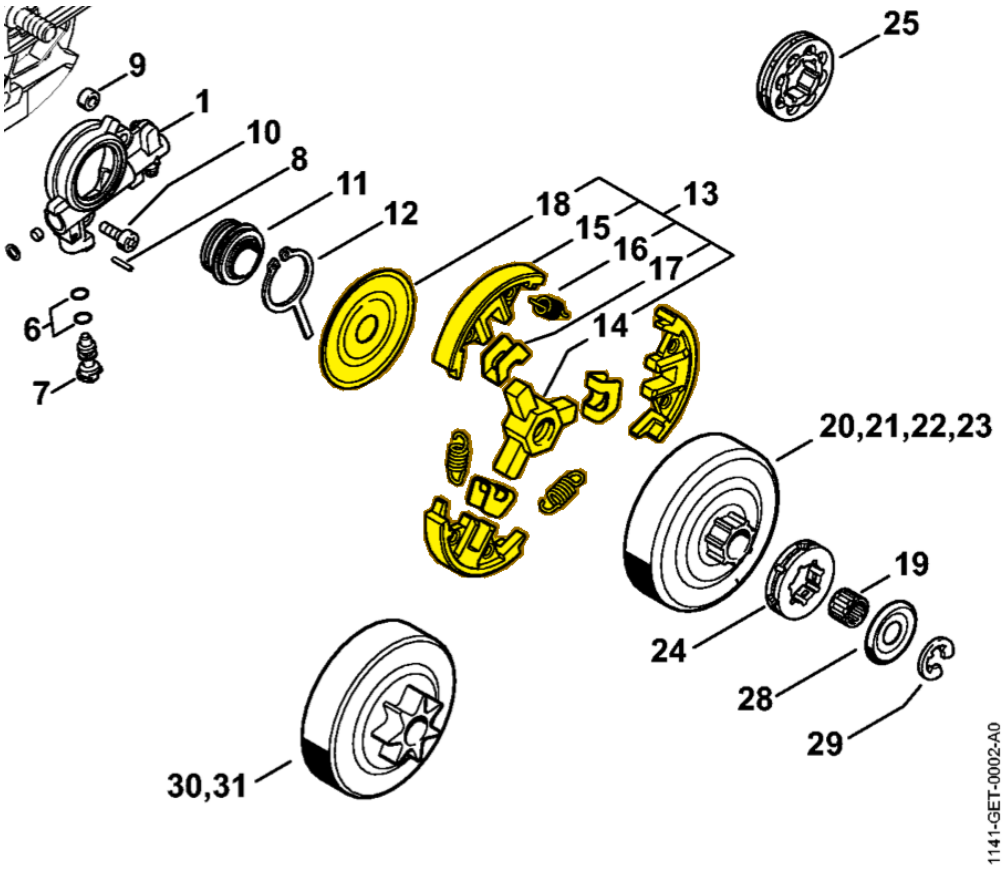

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 10; parts table p. 11.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Clutch

1142 160 2000


Bin **B2** | **1** spare per kit | **S2** supervision

Online guide

MS 462 — clutch

Assembly includes items 15–17.

Item 14 | **Qty listed: 1**

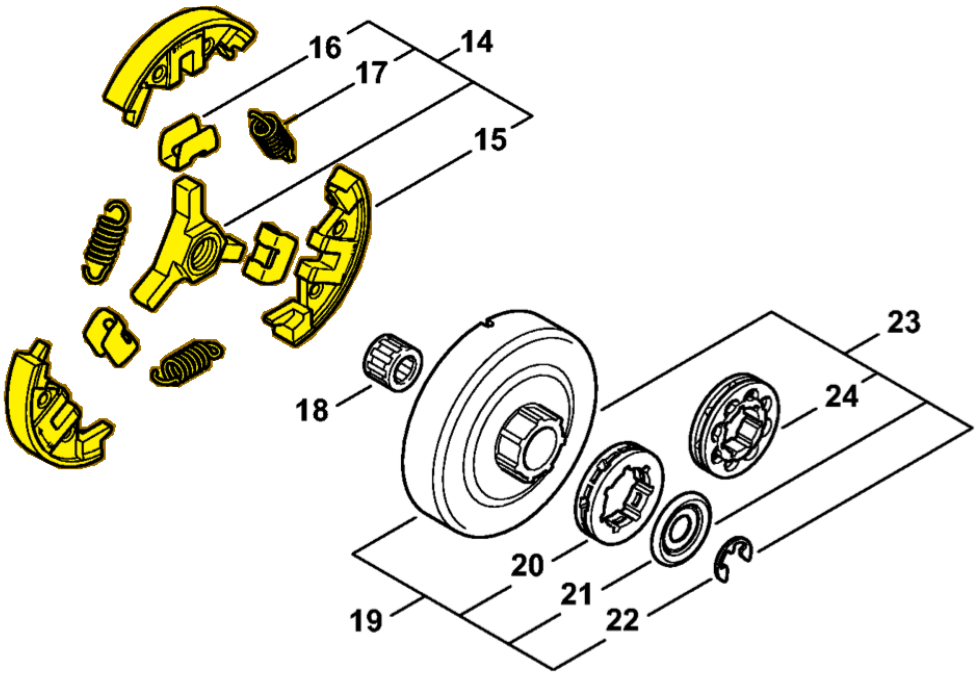

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 13; parts table p. 14.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Clutch

4180 160 2000


Bin **B2** | **1** spare per kit | **S2** supervision

Online guide

HT 135 — clutch

Clutch on the crankshaft; includes spring (item 2).

Item 1 | **Qty listed: 1**

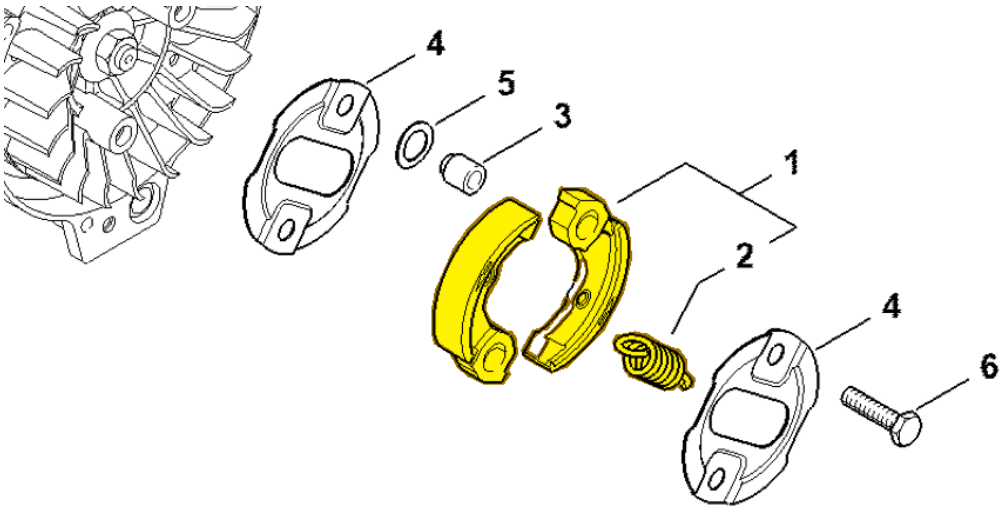

HT 135-Z spare-parts list, 10/28/2024. Drawing p. 13; parts table p. 14.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Collar nut M8

0000 995 0803

Bin **T11** | **8** spares per kit | **S2** supervision


Online guide

MS 261 — chain sprocket cover

M8 collar nut on the chain sprocket cover.

Item 14 | **Qty listed: 1**

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 15; parts table p. 16.

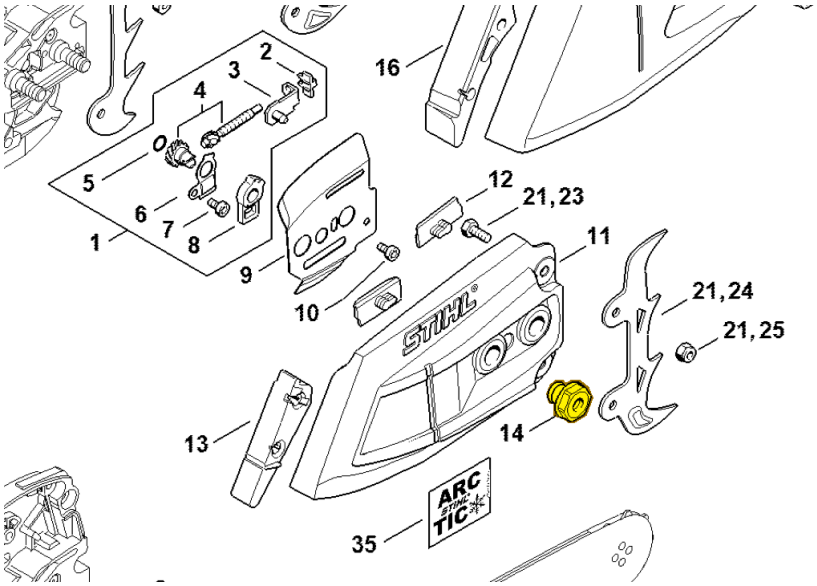


MS 462 — chain sprocket cover

M8 collar nuts on the chain sprocket cover.

Item 5 | **Qty listed: 2**

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 17; parts table p. 18.

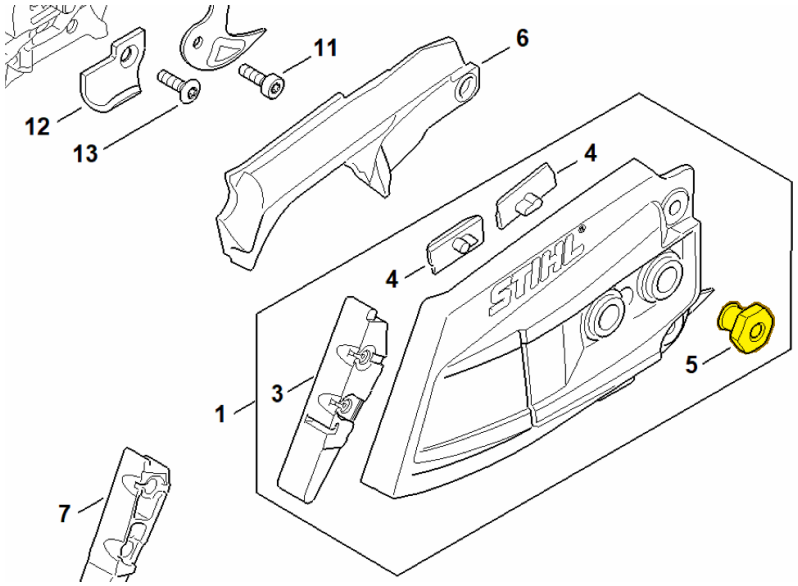

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Countersunk screw M5x18-10.9

9061 373 0982


Bin **T11** | **2** spares per kit | **AS1** supervision

Online guide

MS 462 — chain catcher

Secures chain catcher 1142 656 7700 (item 12) to the crankcase.

Item 13 | **Qty listed: 1**

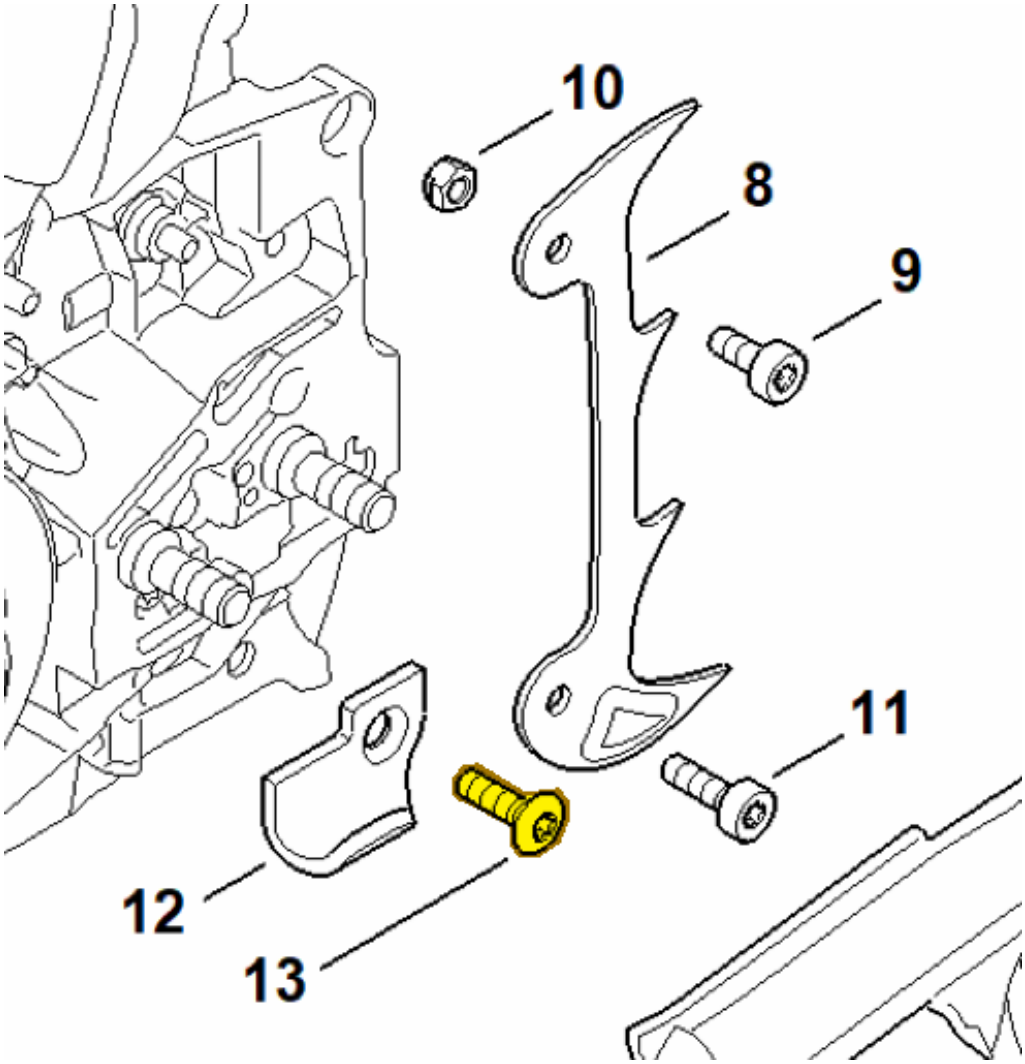

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 17; parts table p. 18.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Decompression valve

1141 020 9430


Bin **T4** | **1** spare per kit | **S2** supervision

Online guide

MS 261 — cylinder

Decompression valve in the cylinder.

Item 17 | **Qty listed: 1**

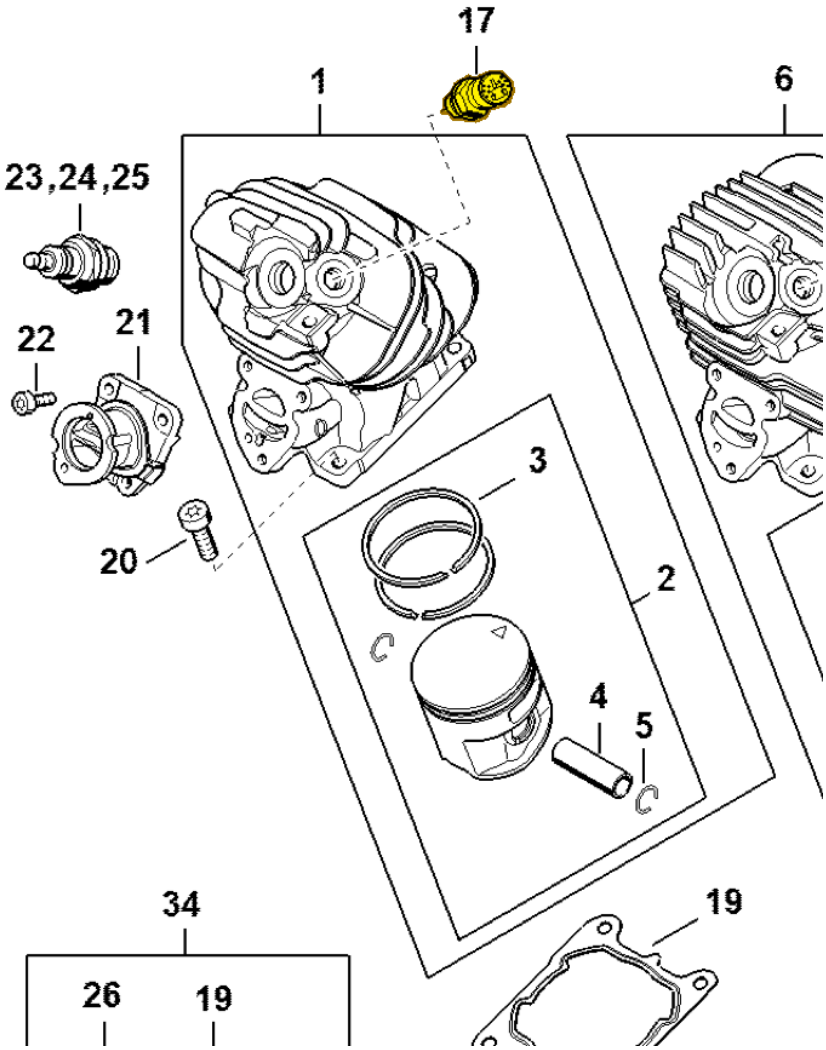

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 8; parts table p. 9.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Decompression valve

1142 020 9400


Bin **T4** | **1** spare per kit | **S2** supervision

Online guide

MS 462 — cylinder

Decompression valve used in both MS 462 cylinder configurations.

Item 9 | **Qty listed: 1**

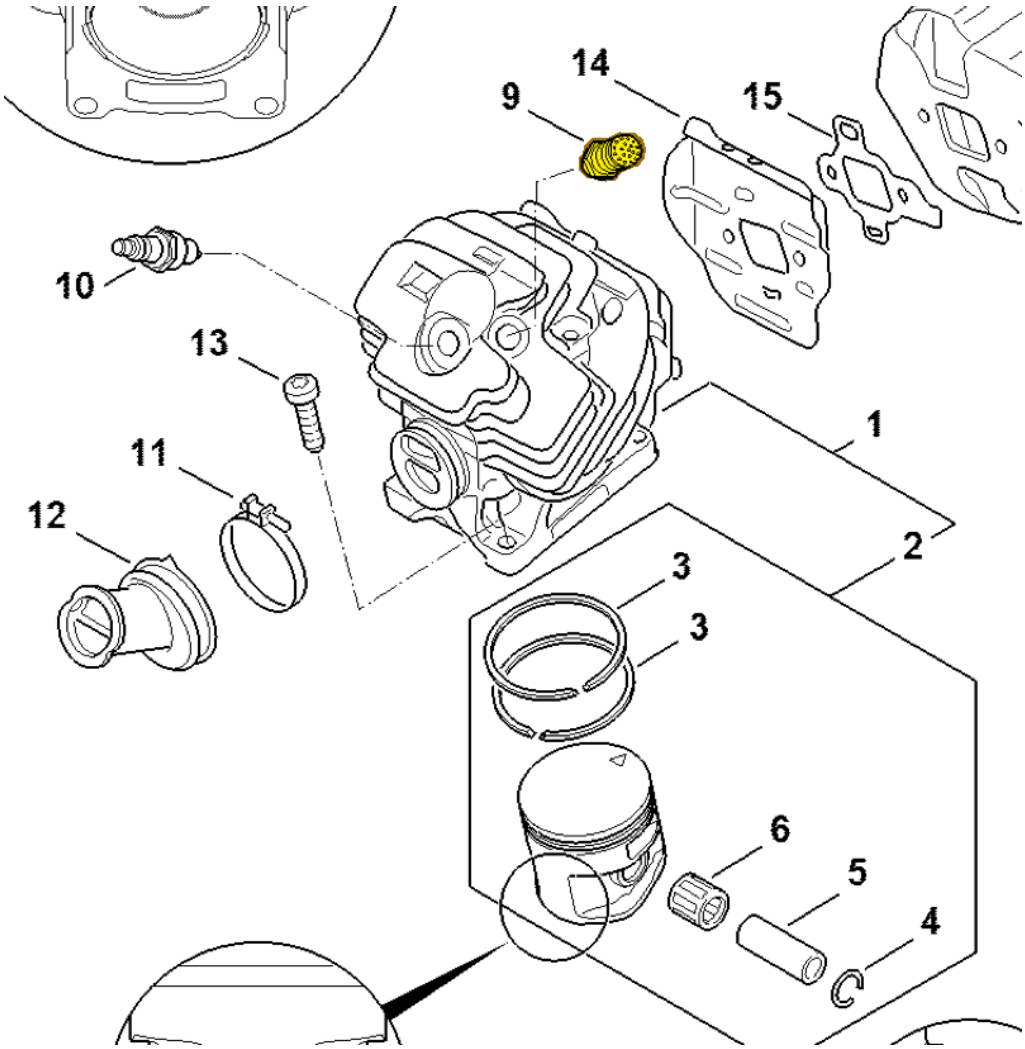

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 9; parts table p. 10.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

E-clip 8x1.3

9460 624 0801

Bin **T3** | **12** spares per kit | **AS1** supervision


Online guide

MS 261 — clutch drum

Retains washer 0000 958 1022. Included in rim sprocket kit 1141 007 1002.

Item 29 | **Qty listed: 1**

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 10; parts table p. 12.

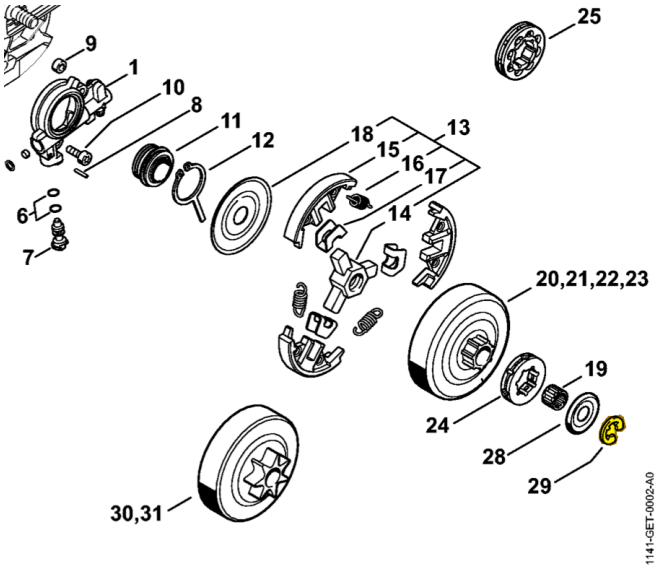


MS 462 — clutch drum

Retains washer 0000 958 1032. Included in rim sprocket kit 1128 007 1000.

Item 22 | **Qty listed: 1**

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 13; parts table p. 14.

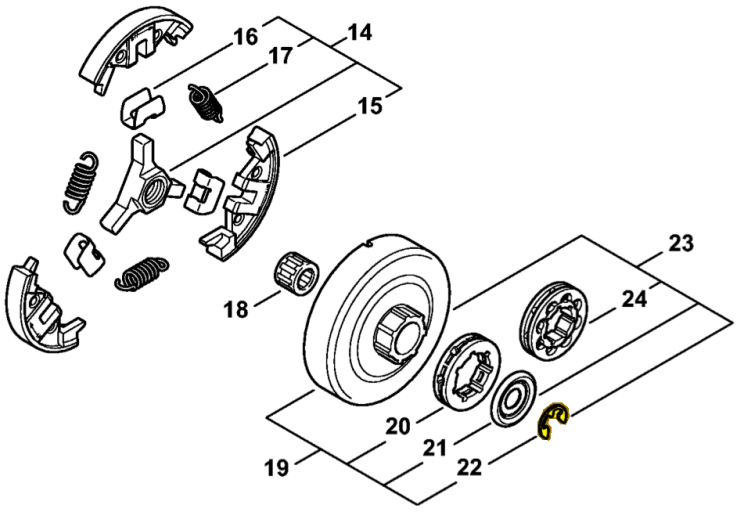

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Fan housing with rewind starter

1141 080 2104


Bin **B0** | **1** spare per kit | **S2** supervision

Online guide

MS 261 — rewind starter

Complete fan housing with rewind starter; includes items 1–13, including spring 1128 195 3500 (item 10).

Item 1–13 | **Qty listed: 1**

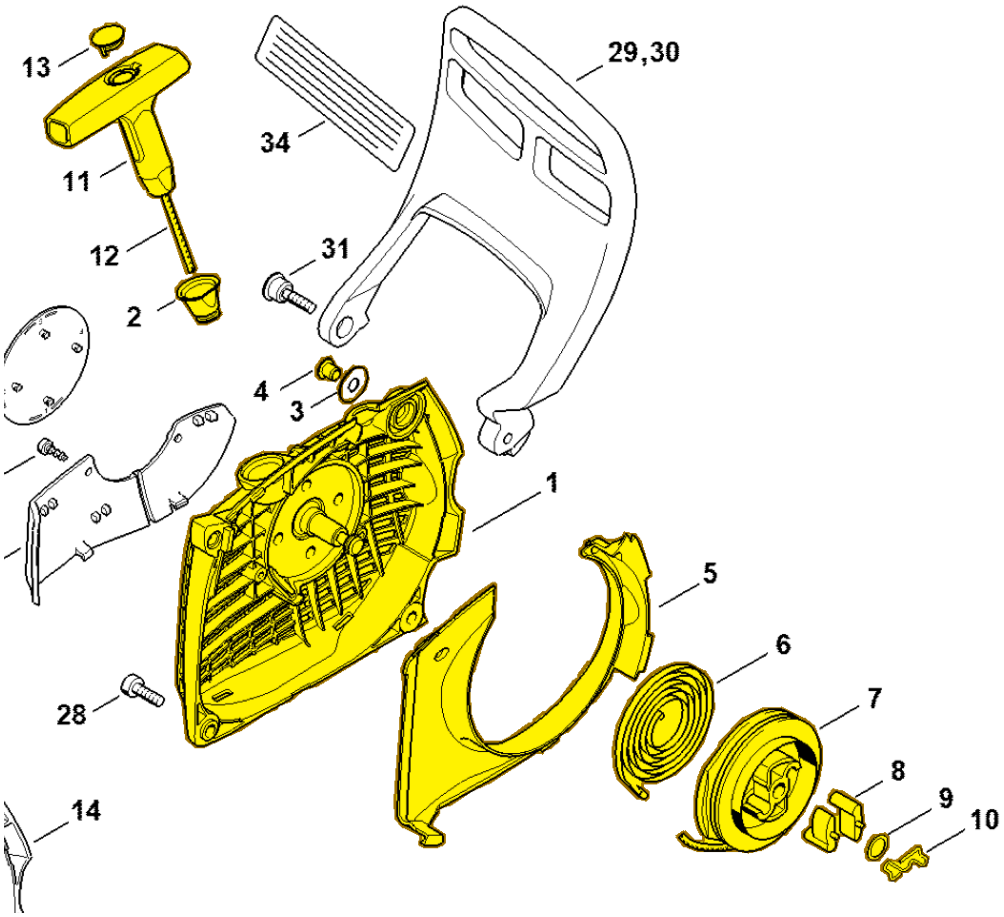

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 19; parts table p. 20.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Fan housing with rewind starter

1142 080 2102


Bin **B0** | **1** spare per kit | **S2** supervision

Online guide

MS 462 — rewind starter

Includes items 2–15, including spring 1128 195 3500 (item 12). Mounts to the crankcase with three pan head screws 9022 371 1020 (IS M5×20; item 17).

Item 1 | **Qty listed: 1**

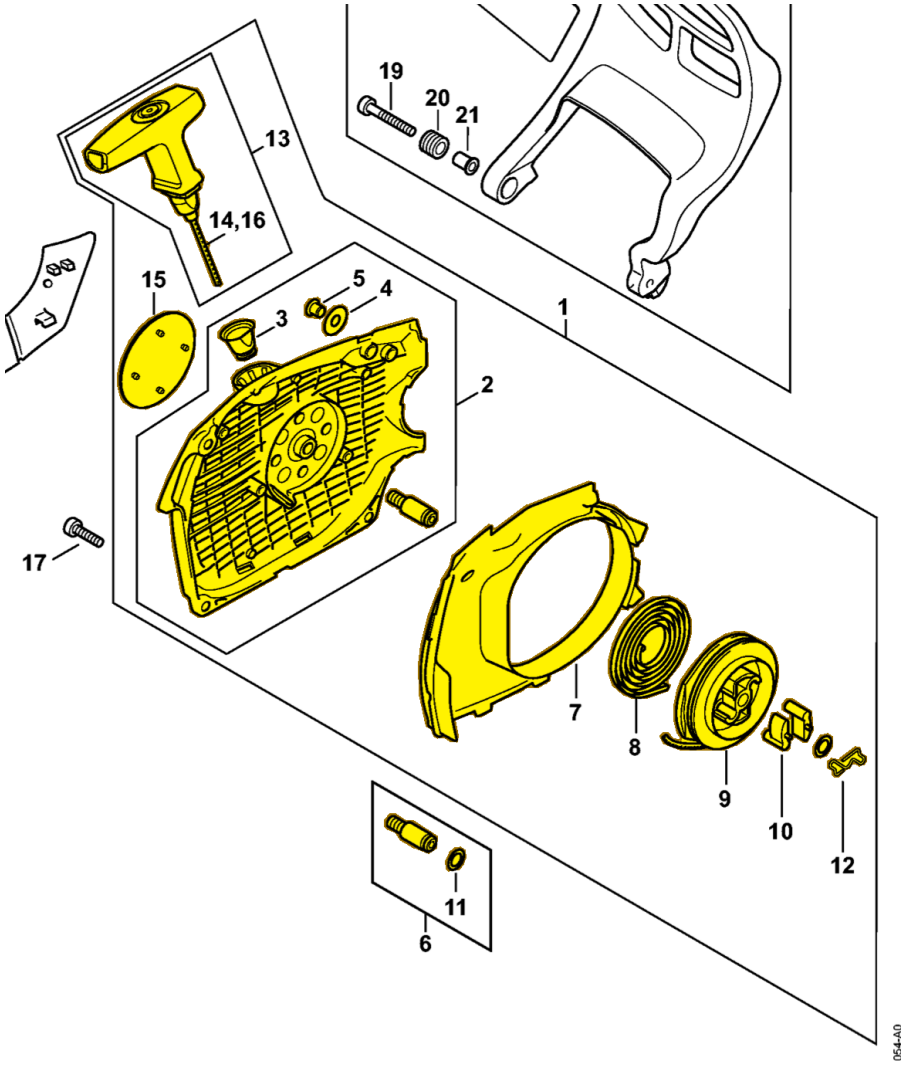

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 21; parts table p. 22.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Filler cap

0000 350 0532


Bin **T0** | **1** spare per kit | **AS1** supervision

Online guide

MS 261 — fuel tank

Fuel filler cap; includes seal (item 14).

Item 13 | **Qty listed: 1**

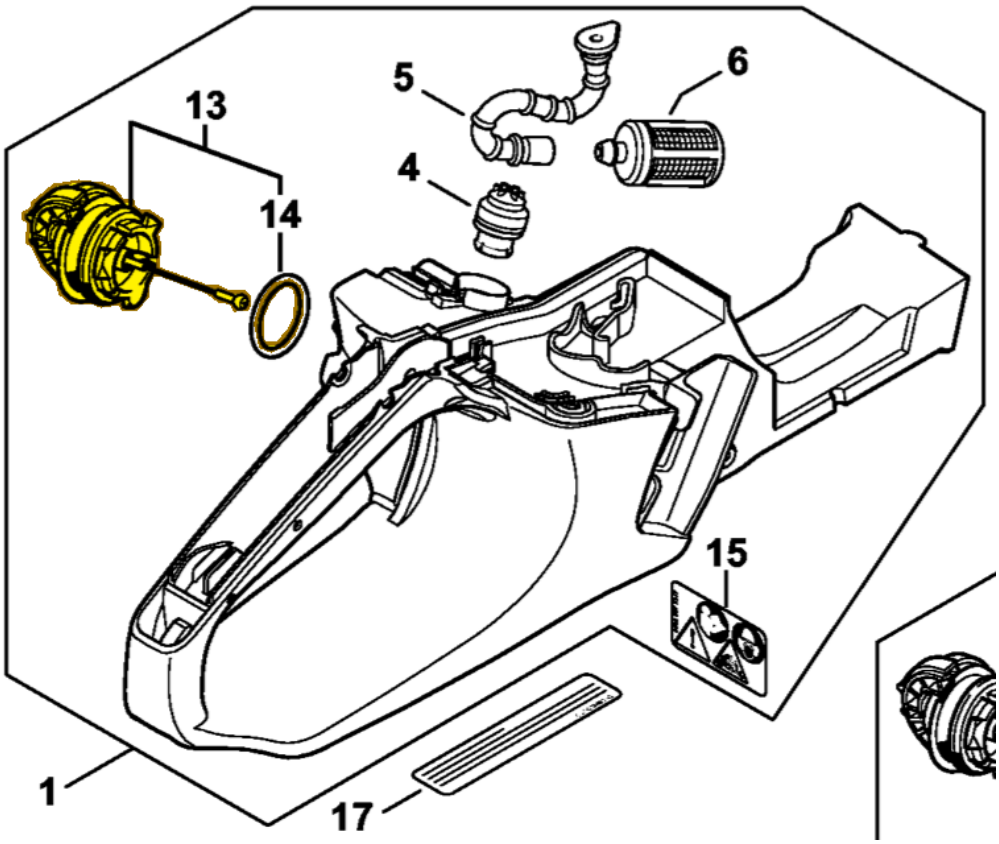

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 21; parts table p. 22.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Filler cap

0000 350 0533

Bin **T0** | **2** spares per kit | **AS1** supervision


Online guide

MS 462 — fuel tank

Fuel filler cap; includes seal (item 6). The same part is used on the oil tank.

Item 5 | **Qty listed: 1**

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 23; parts table p. 24.

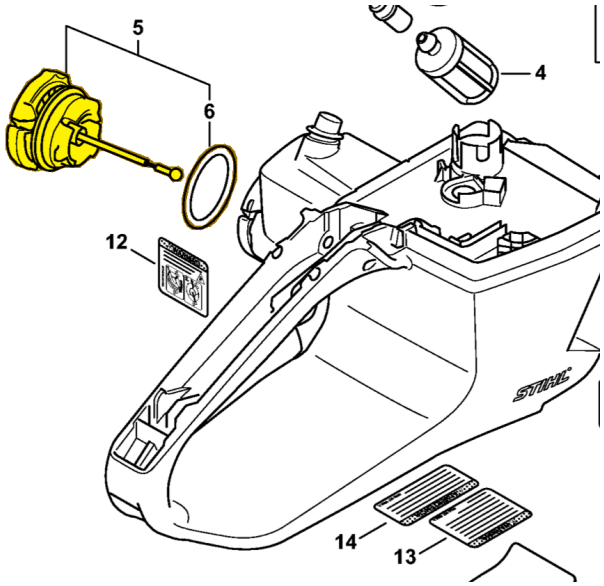


MS 462 — oil tank

Oil filler cap used in both MS 462 crankcase configurations; includes seal (item 9).

Item 8 | **Qty listed: 1**

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 3; parts table p. 4.

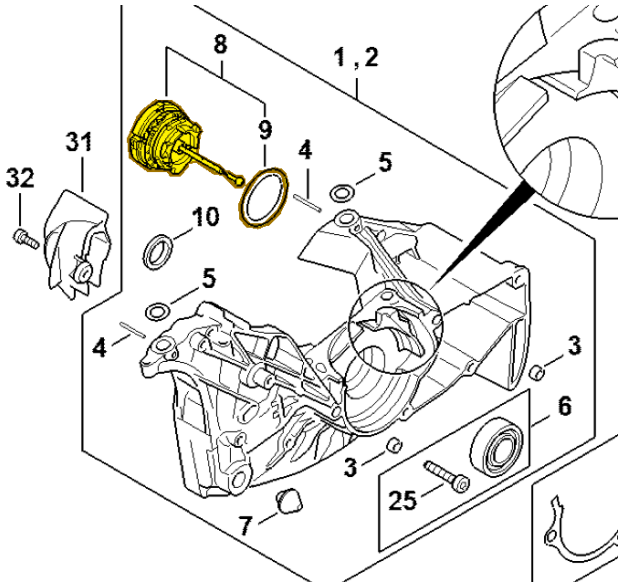

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Filler cap, mix

0000 350 0527


Bin **T0** | **1** spare per kit | **AS1** supervision

Online guide

HT 135 — fuel tank

Fuel filler cap; includes items 26 and 27.

Item 25 | **Qty listed: 1**

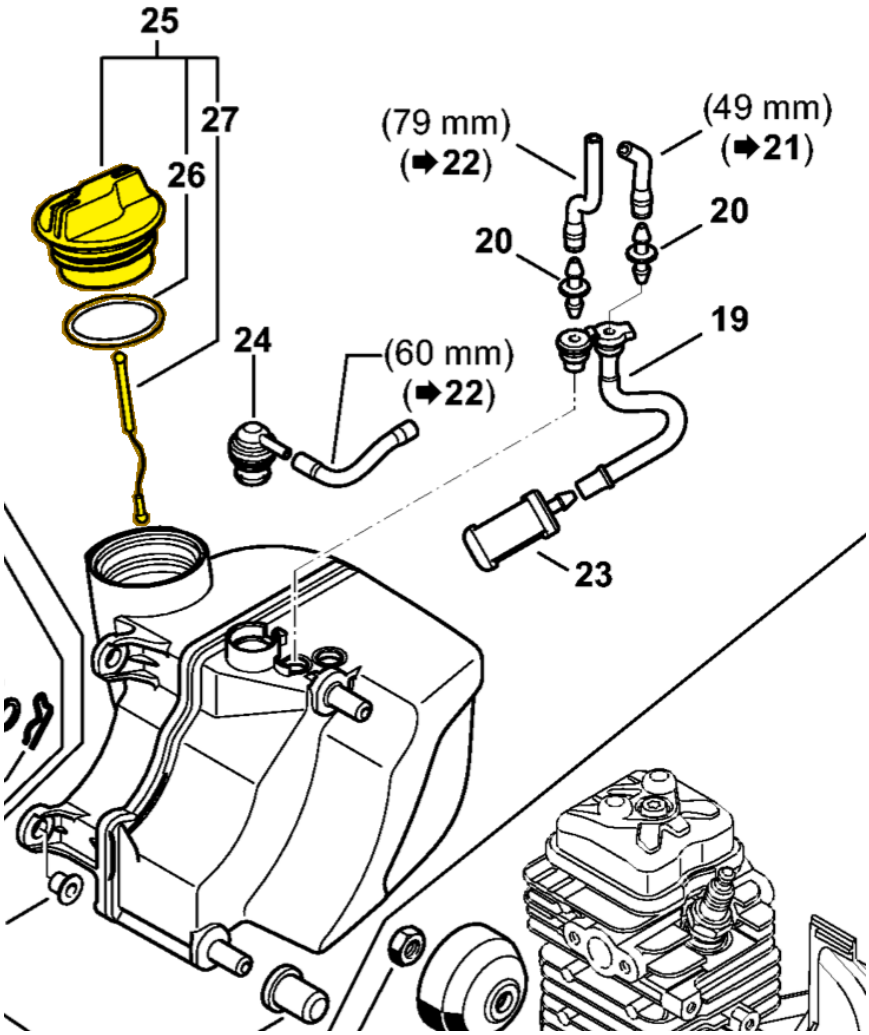

HT 135-Z spare-parts list, 10/28/2024. Drawing p. 5; parts table p. 7.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Filler cap, oil

0000 350 0529


Bin **T0** | **1** spare per kit | **AS1** supervision

Online guide

HT 135 — oil tank

Gear-head oil filler cap; includes seal (item 6).

Item 5 | **Qty listed: 1**

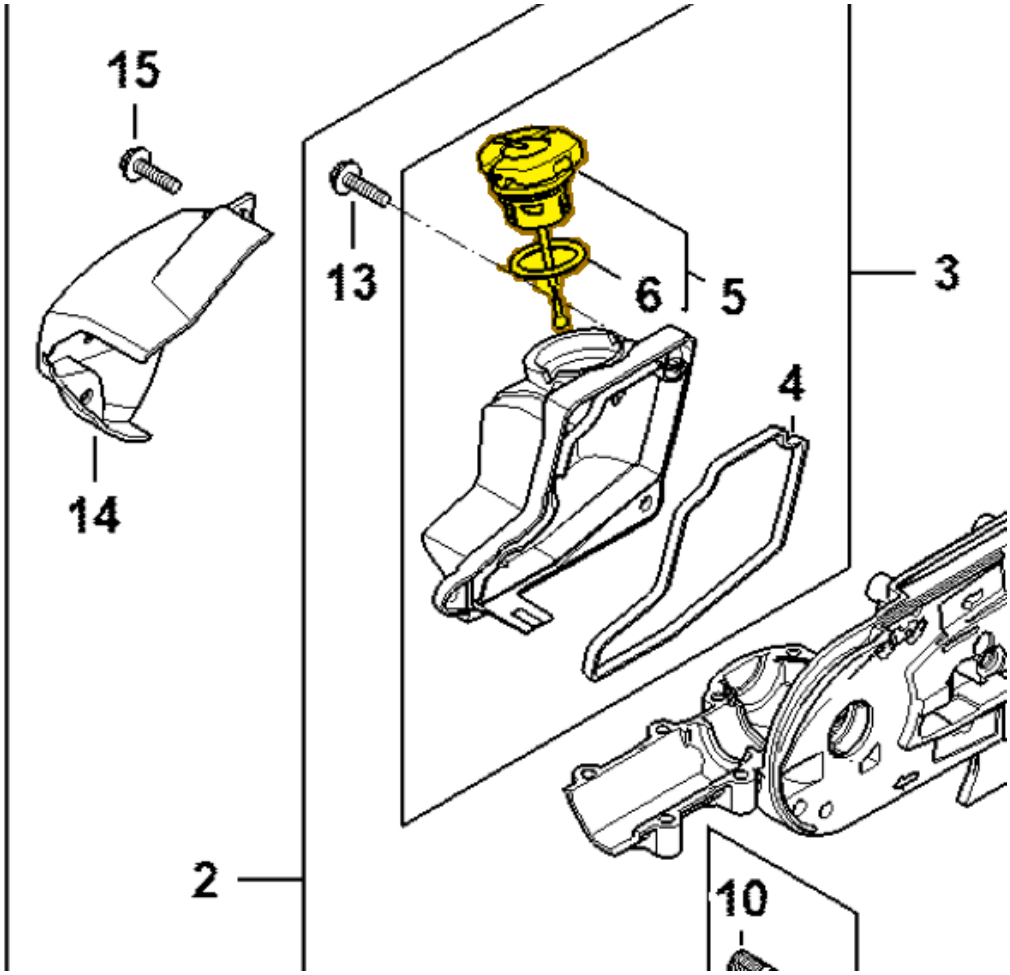

HT 135-Z spare-parts list, 10/28/2024. Drawing p. 17; parts table p. 18.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Guard

1141 656 1501


Bin **T8** | **1** spare per kit | **S1** supervision

Online guide

MS 261 — chain sprocket cover

Guard fitted to the chain sprocket cover.

Item 13 | **Qty listed: 1**

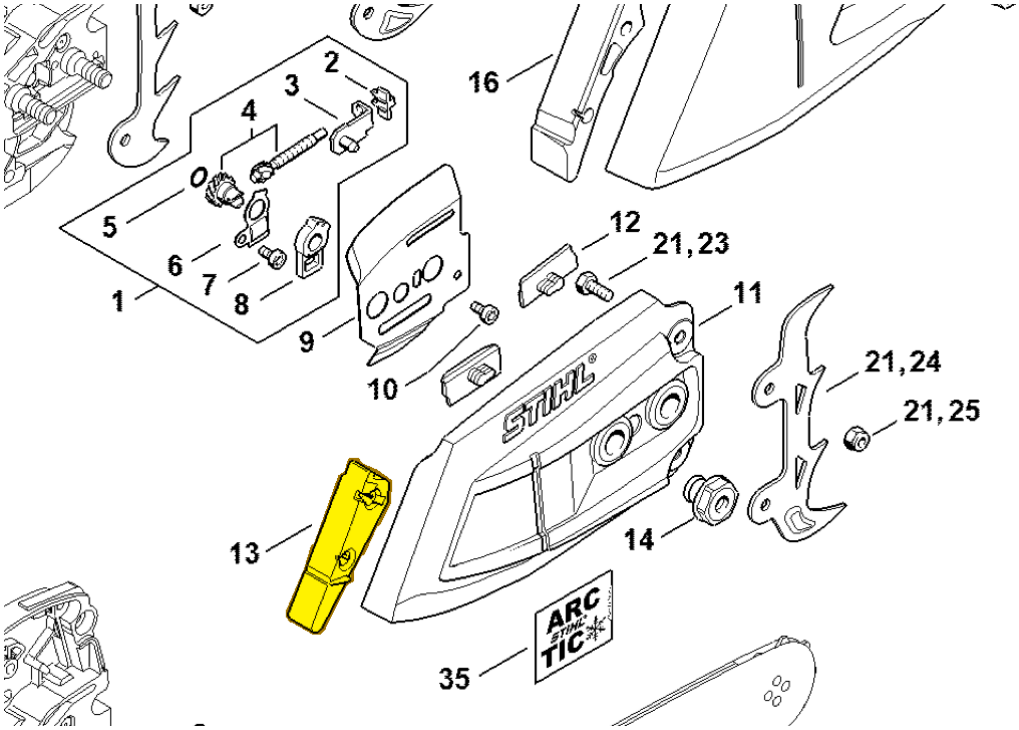

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 15; parts table p. 16.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Guard

1142 656 1500


Bin **T8** | **1** spare per kit | **S1** supervision

Online guide

MS 462 — chain sprocket cover

Guard fitted to the chain sprocket cover.

Item 7 | **Qty listed: 1**

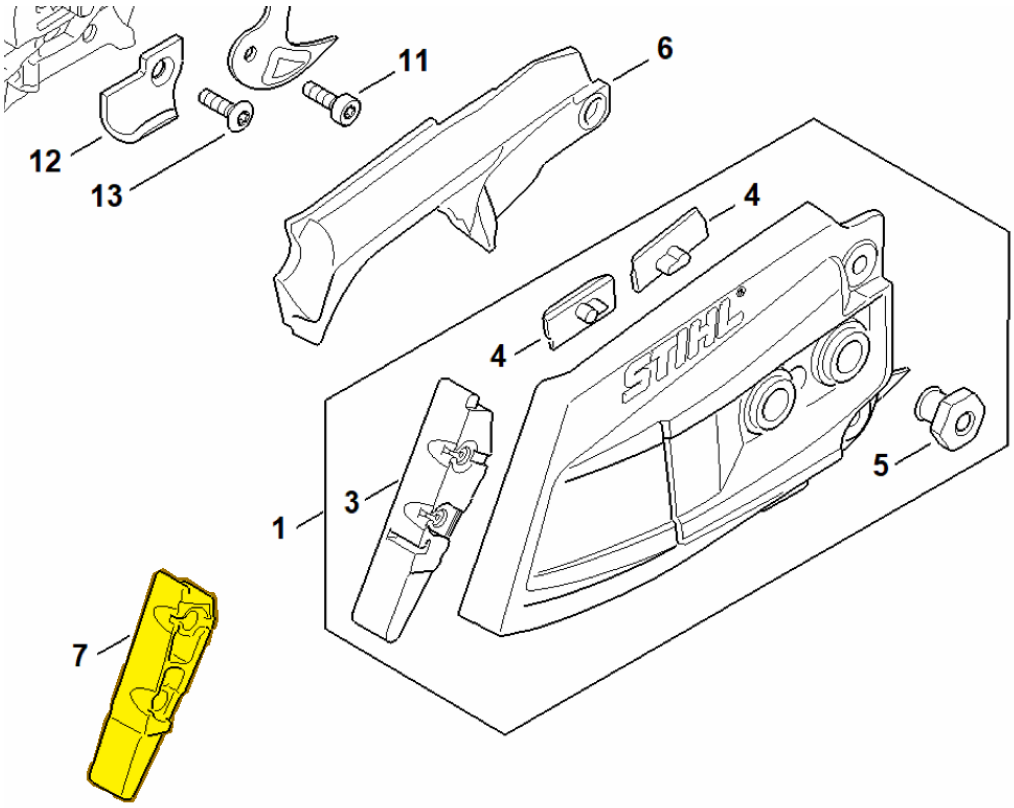

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 17; parts table p. 18.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Inner side plate

1128 664 1000


Bin **B1** | **1** spare per kit | **S2** supervision

Online guide

MS 462 — guide bar

Inner side plate between the crankcase and guide bar.

Item 20 | **Qty listed: 1**

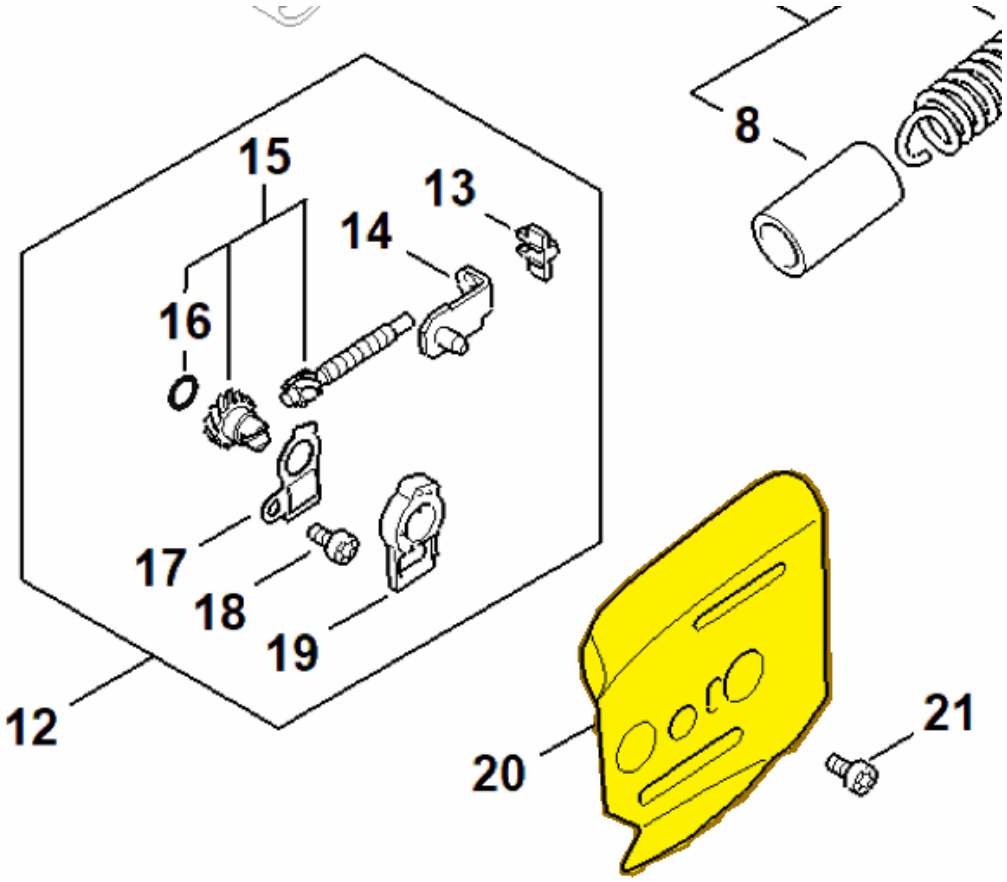

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 15; parts table p. 16.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Inner side plate

1141 664 1030


Bin **B1** | **2** spares per kit | **S2** supervision

Online guide

MS 261 — guide bar

Inner side plate between the crankcase and guide bar.

Item 9 | **Qty listed: 1**

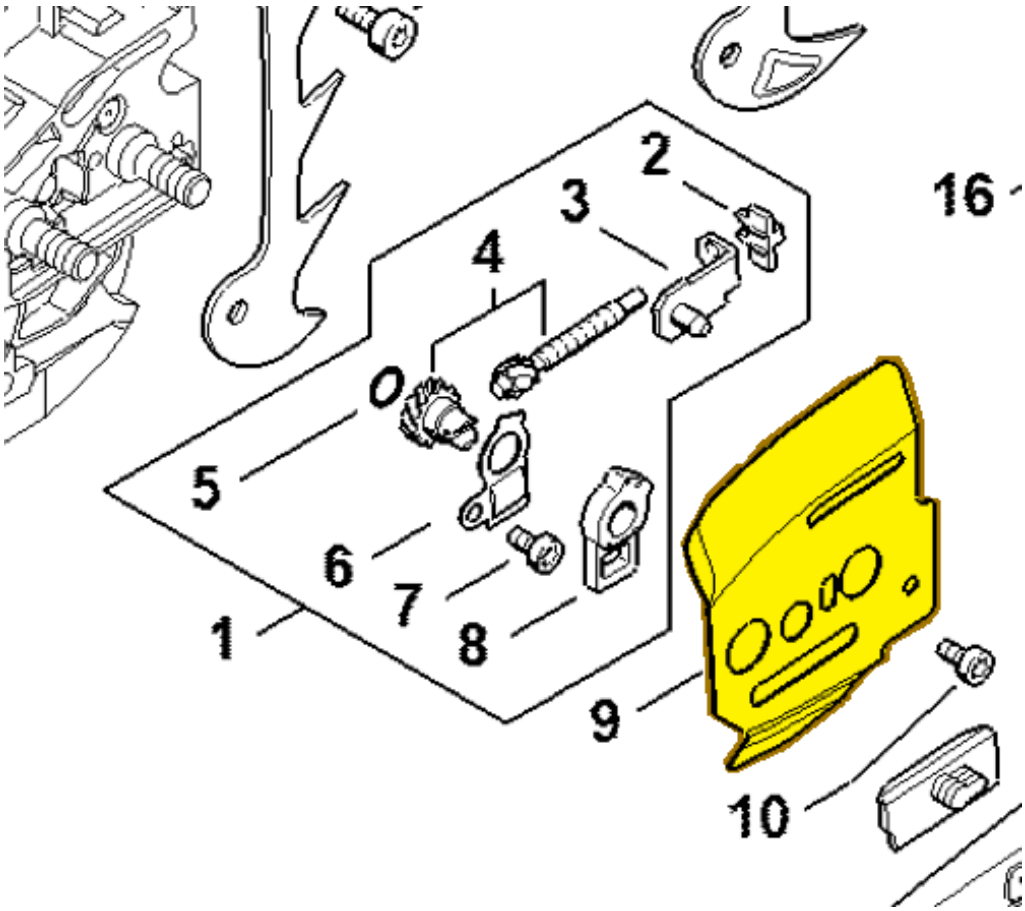

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 15; parts table p. 16.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Needle cage 10x13x10

9512 933 2260


Bin **T1** | **3** spares per kit | **AS1** supervision

Online guide

MS 261 — clutch drum

Needle cage inside the clutch drum.

Item 19 | **Qty listed: 1**

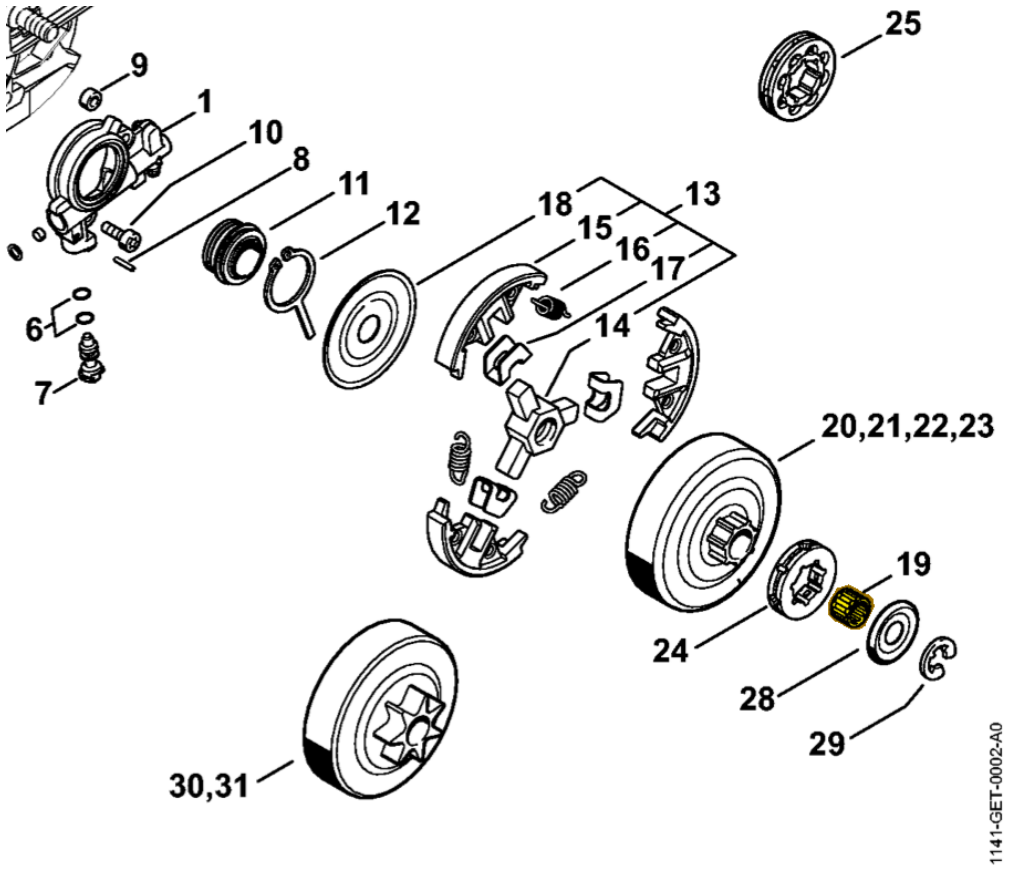

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 10; parts table p. 11.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Needle cage 10x16x12

9512 933 2379


Bin **T1** | **1** spare per kit | **AS1** supervision

Online guide

MS 462 — clutch drum

Needle cage inside the clutch drum.

Item 18 | **Qty listed: 1**

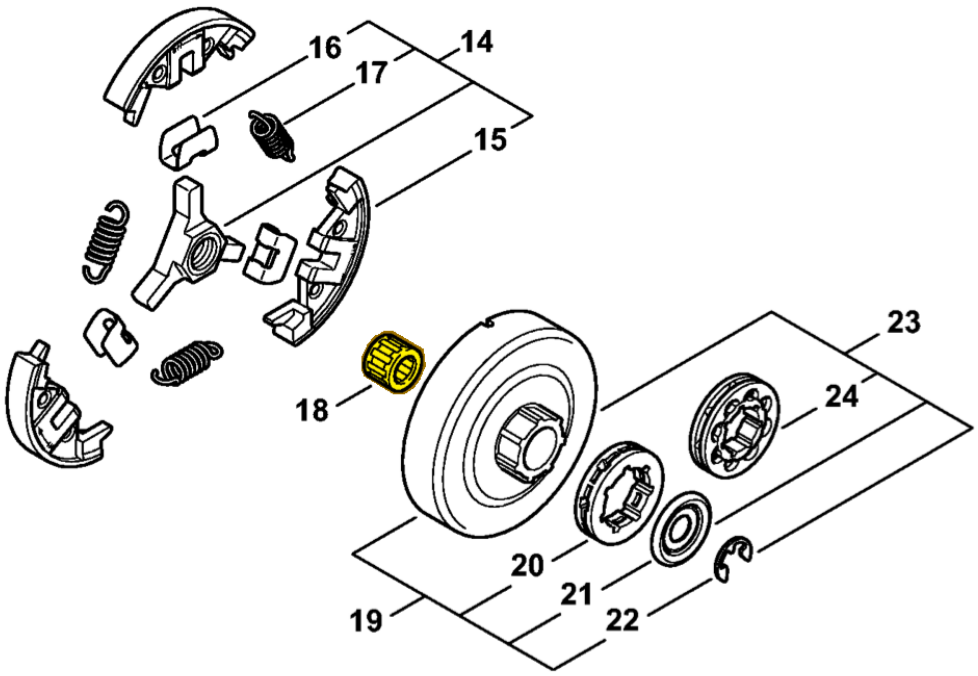

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 13; parts table p. 14.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Oil filler cap

0000 350 0537


Bin **T0** | **1** spare per kit | **AS1** supervision

Online guide

MS 261 — oil tank

Oil filler cap in the crankcase; includes seal (item 38).

Item 37 | **Qty listed: 1**

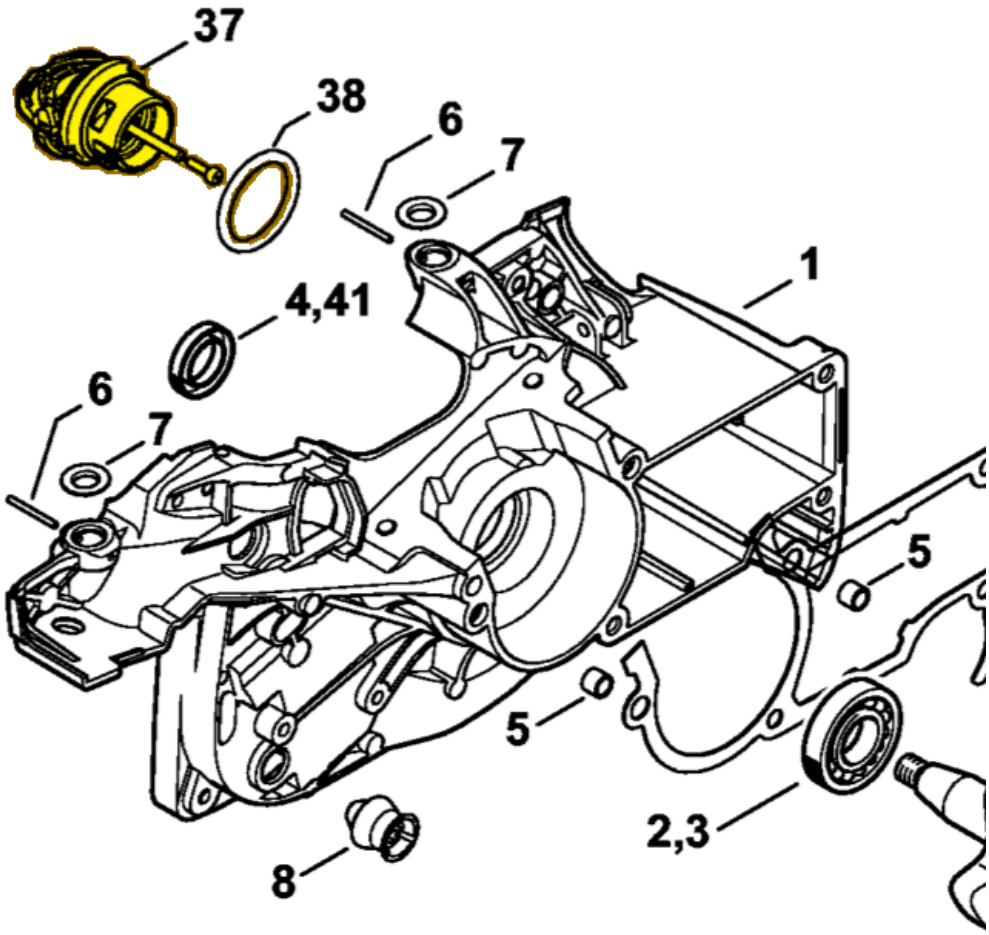

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 3; parts table p. 5.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Oil pump

1141 640 3200


Bin **B3** | **1** spare per kit | **S2** supervision

Online guide

MS 261 — oil pump

Assembly includes items 2–8. Driven by worm 1121 640 7111.

Item 1 | **Qty listed: 1**

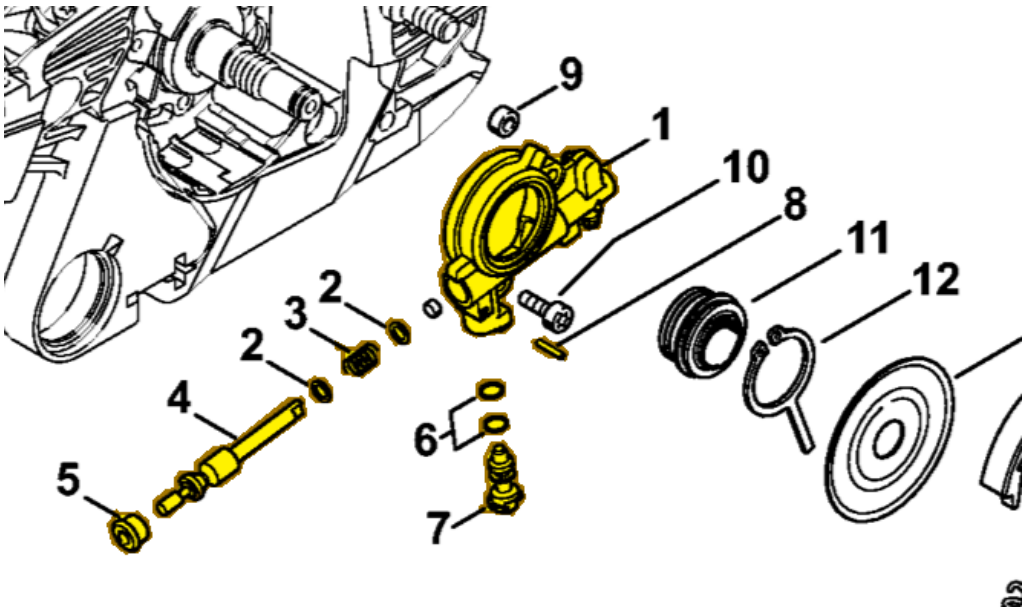

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 10; parts table p. 11.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Oil pump

1142 640 3200


Bin **B3** | **1** spare per kit | **S2** supervision

Online guide

MS 462 — oil pump

Assembly includes items 2–8. Driven by worm 1128 640 7112.

Item 1 | **Qty listed: 1**

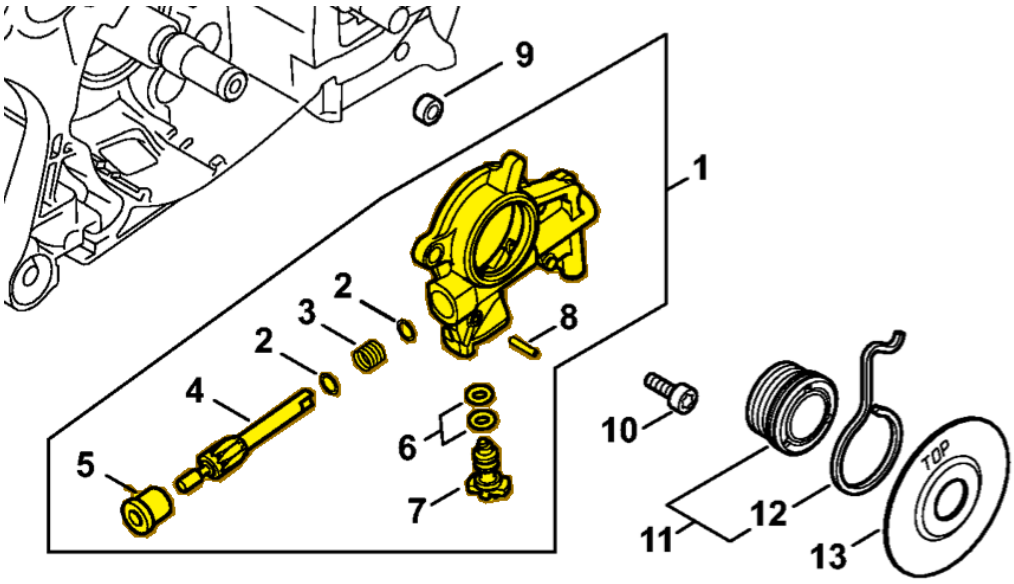

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 13; parts table p. 14.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Oil pump

4138 640 3200


Bin **B3** | **1** spare per kit | **S2** supervision

Online guide

HT 135 — oil pump

Oil pump in the gear-head housing.

Item 11 | **Qty listed: 1**

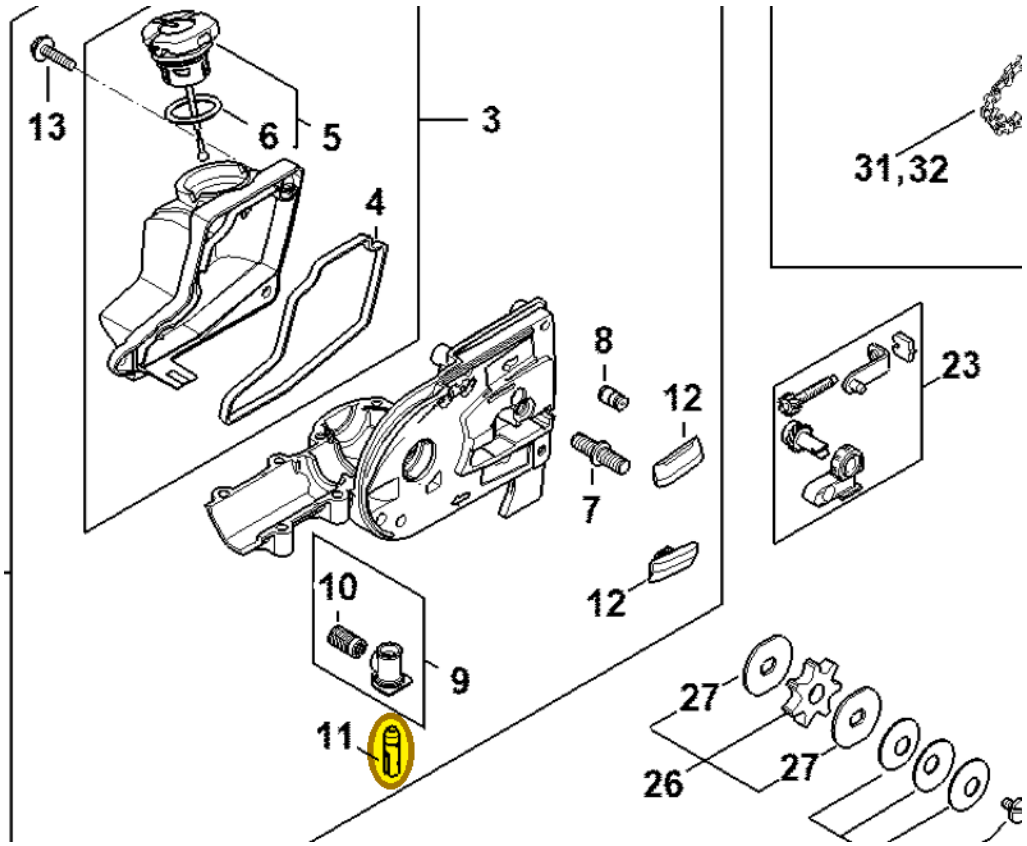

HT 135-Z spare-parts list, 10/28/2024. Drawing p. 17; parts table p. 18.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Pan head screw IS M5x20

9022 371 1020

Bin **T11** | **1** spare per kit | **S2** supervision


Online guide

MS 462 — starter housing

IS M5×20. Secures fan housing 1142 080 2102 to the crankcase.

Item 17 | **Qty listed: 3**

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 21; parts table p. 22.

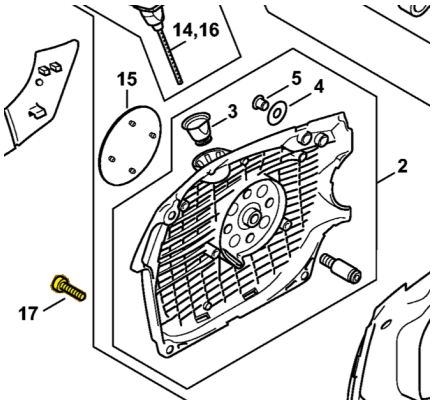


MS 462 — AV system

IS M5×20. Fastening in the anti-vibration assembly.

Item 5 | **Qty listed: 1**

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 32; parts table p. 33.

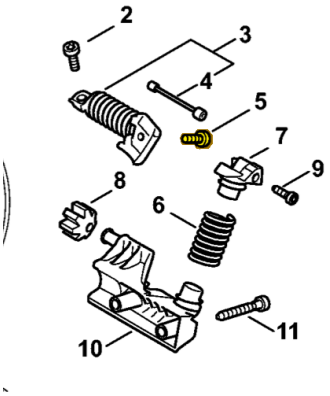


MS 261 — cylinder

IS M5×20. Cylinder-to-crankcase fastening.

Item 20 | **Qty listed: 4**

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 8; parts table p. 9.

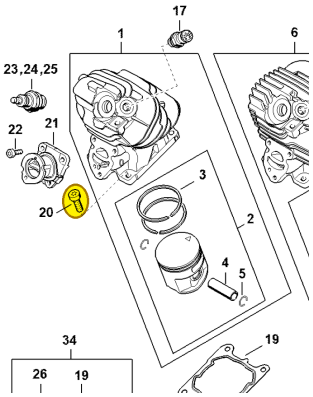

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Pan head self-tapping screw

9074 477 4438


Bin **T11** | **2** spares per kit | **AS1** supervision

Online guide

MS 261 — chain catcher

IS-P6×30. Secures chain catcher 1141 656 7700 (item 39) to the crankcase.

Item 40 | **Qty listed: 1**

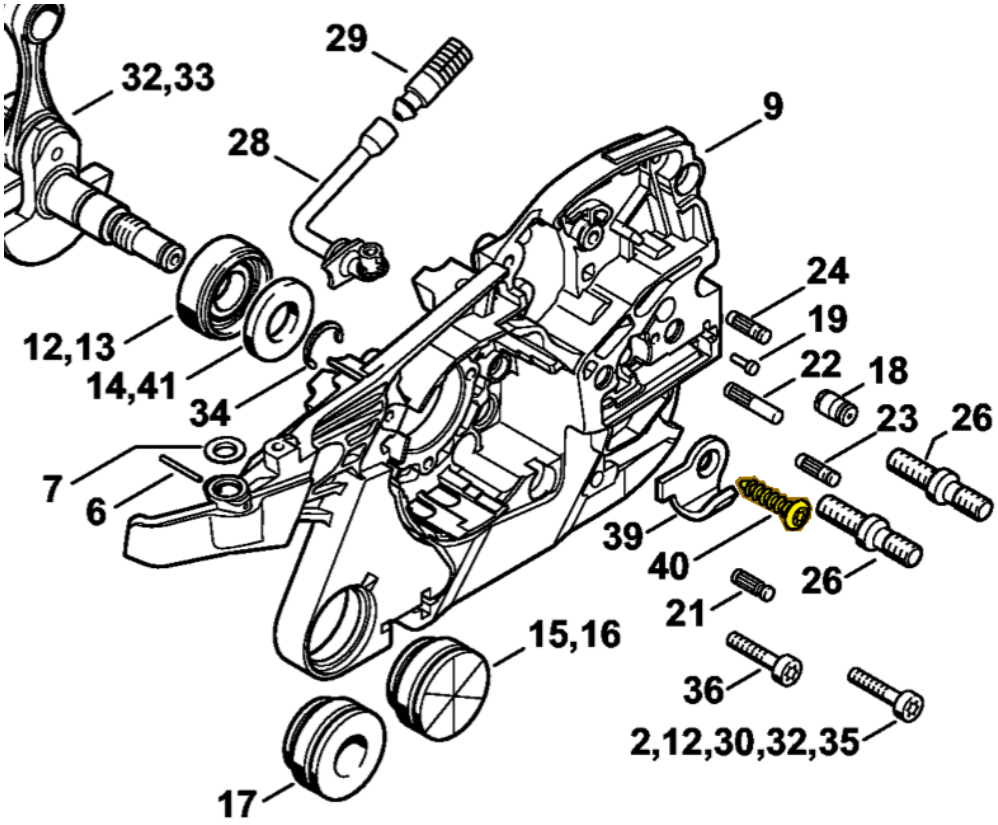

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 3; parts table p. 5.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Pawl

0000 195 7200

Bin **T5** | **5** spares per kit | **S2** supervision


Online guide

HT 135 — rewind starter

Manual-listed pawl: 4116 195 7200. Shown in rewind starter 4182 190 4001.

Item 8 | **Qty listed: 1**

HT 135-Z spare-parts list, 10/28/2024. Drawing p. 5; parts table p. 6.

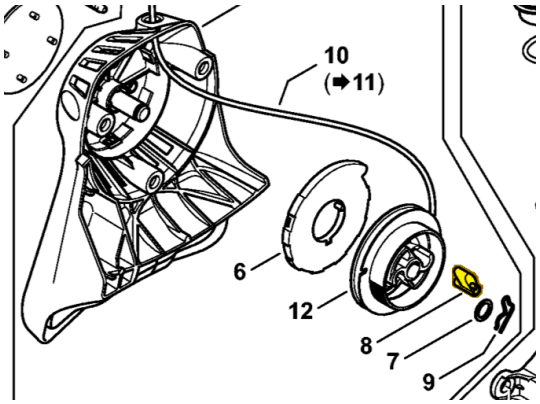


MS 261 — rewind starter

Manual-listed pawl: 1125 195 7200. Shown in fan housing 1141 080 2104.

Item 8 | **Qty listed: 2**

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 19; parts table p. 20.

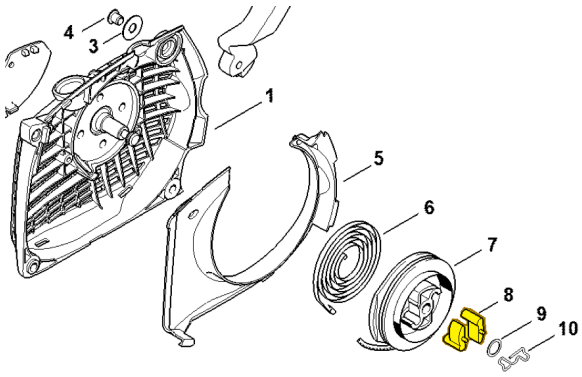


MS 462 — rewind starter

Manual-listed pawl: 1125 195 7200. Shown in fan housing 1142 080 2102.

Item 10 | **Qty listed: 2**

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 21; parts table p. 22.

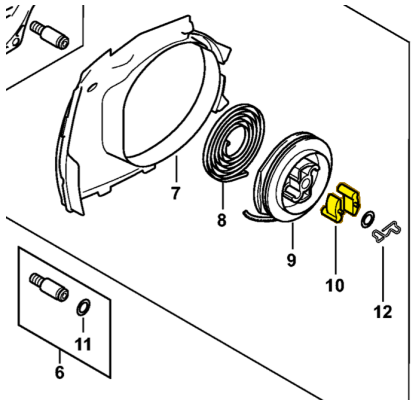


Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Pickup body

0000 350 3518

Bin **T7** | **4** spares per kit | **S2** supervision

Online guide

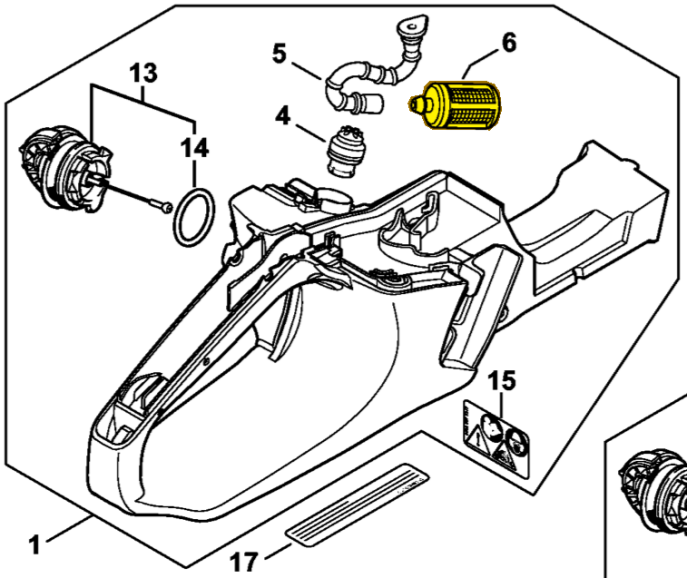


MS 261 — fuel tank

Fuel pickup body inside the tank, on fuel hose (item 5).

Item 6 | **Qty listed: 1**

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 21; parts table p. 22.

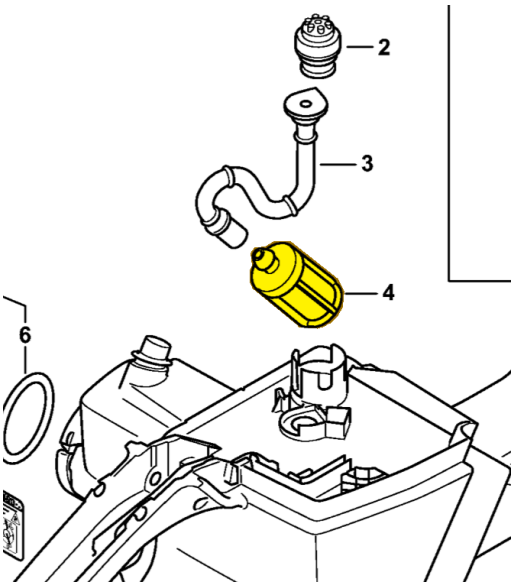

MS 462 — fuel tank

Fuel pickup body inside the tank, on fuel hose (item 3).

Item 4 | **Qty listed: 1**

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 23; parts table p. 24.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Pickup body

0000 350 3521


Bin **T7** | **1** spare per kit | **S2** supervision

Online guide

HT 135 — fuel tank

Fuel pickup body inside the tank, on the fuel hose.

Item 23 | **Qty listed: 1**

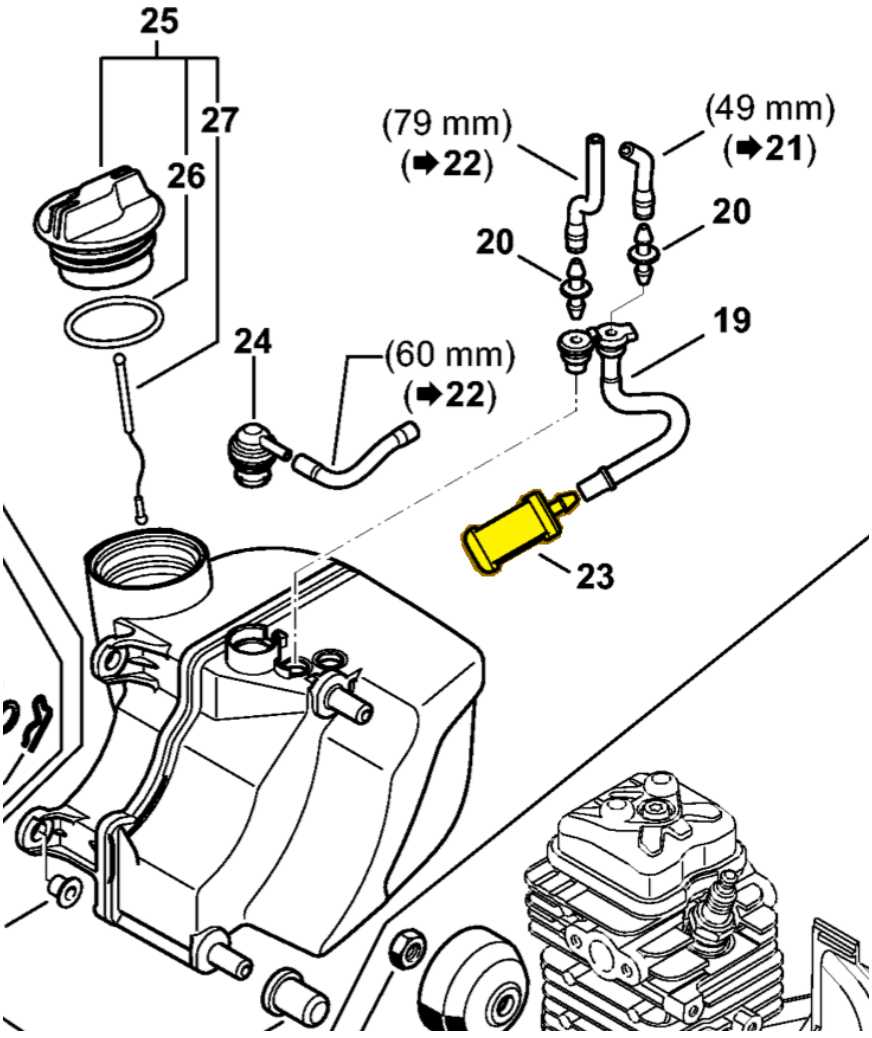

HT 135-Z spare-parts list, 10/28/2024. Drawing p. 5; parts table p. 6.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Rewind starter

4182 190 4001


Bin **B0** | **1** spare per kit | **S2** supervision

Online guide

HT 135 — rewind starter

Assembly includes items 4–10, 12 and 13, including spring 1118 195 3500 (item 9).

Item 3 | **Qty listed: 1**

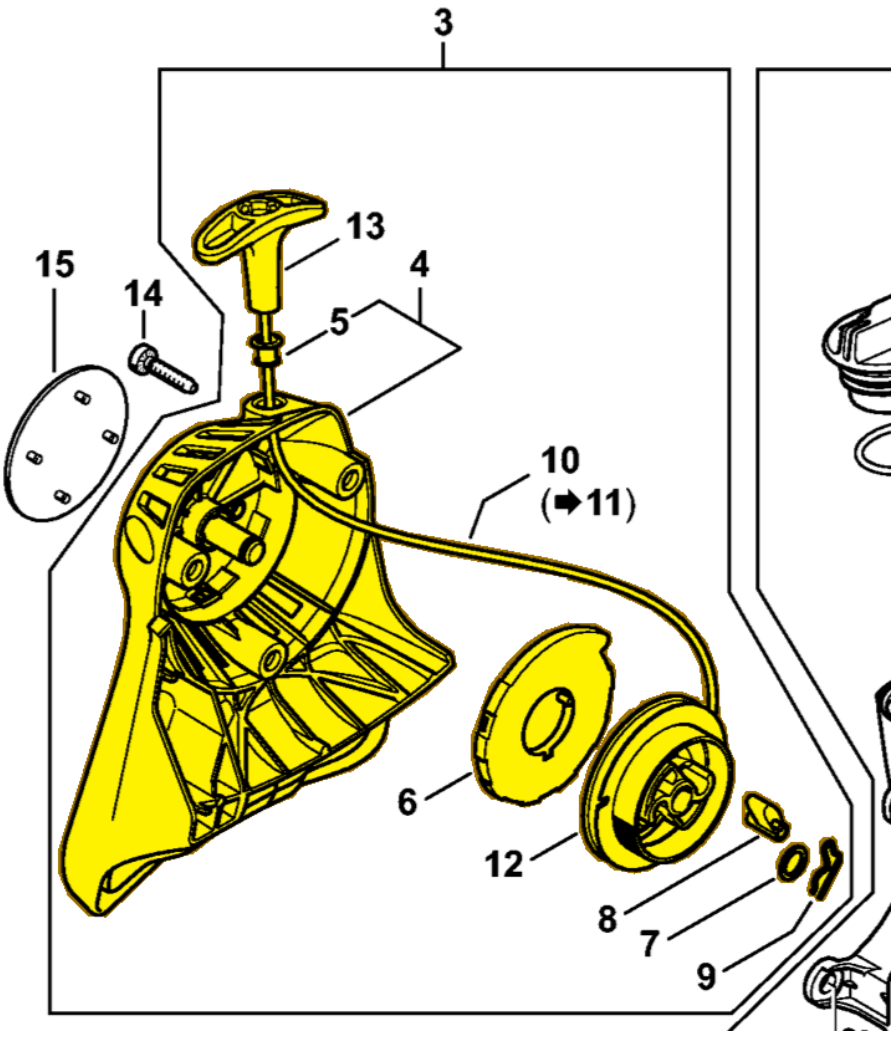

HT 135-Z spare-parts list, 10/28/2024. Drawing p. 5; parts table p. 6.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Rim sprocket 0.325" 7T

0000 642 1236


Bin **T2** | **2** spares per kit | **AS1** supervision

Online guide

MS 261 — rim sprocket

0.325-inch pitch; 7 teeth. Included in rim sprocket kit 1141 007 1002.

Item 24 | **Qty listed: 1**

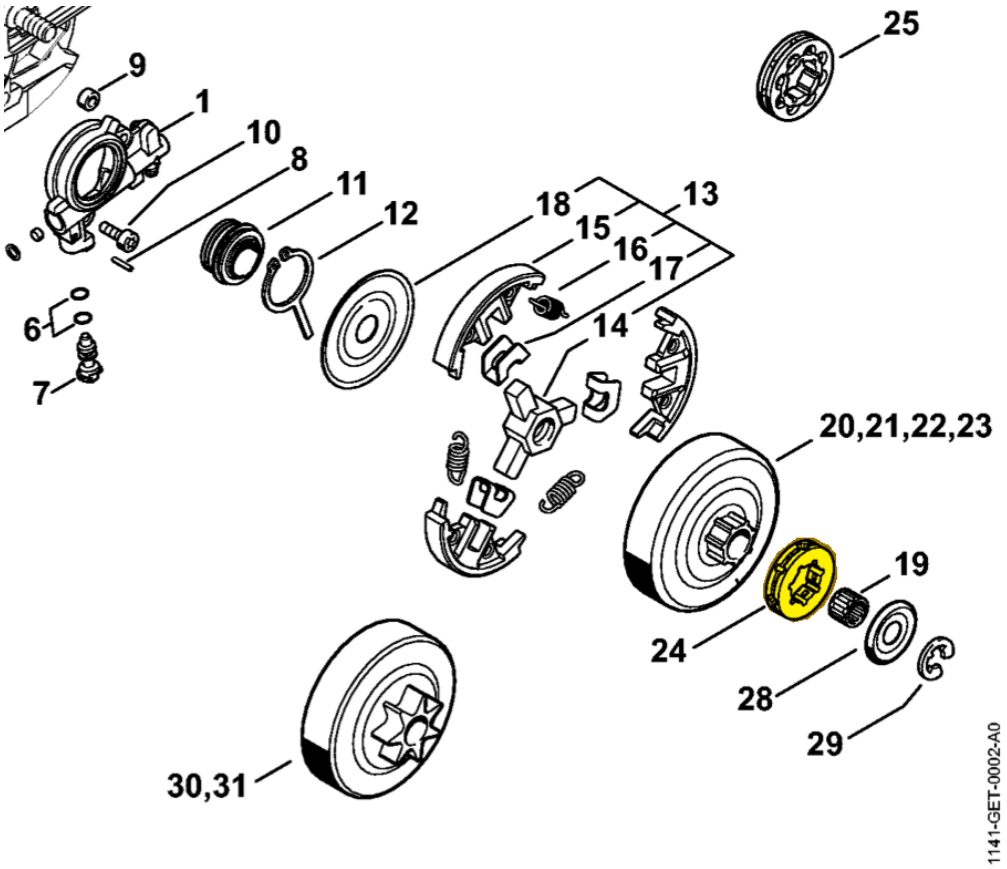

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 10; parts table p. 11.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Rim sprocket 3/8" 7T

0000 642 1223


Bin **T2** | **1** spare per kit | **AS1** supervision

Online guide

MS 462 — rim sprocket

3/8-inch pitch; 7 teeth. Included in rim sprocket kit 1128 007 1000 (item 19).

Item 20 | **Qty listed: 1**

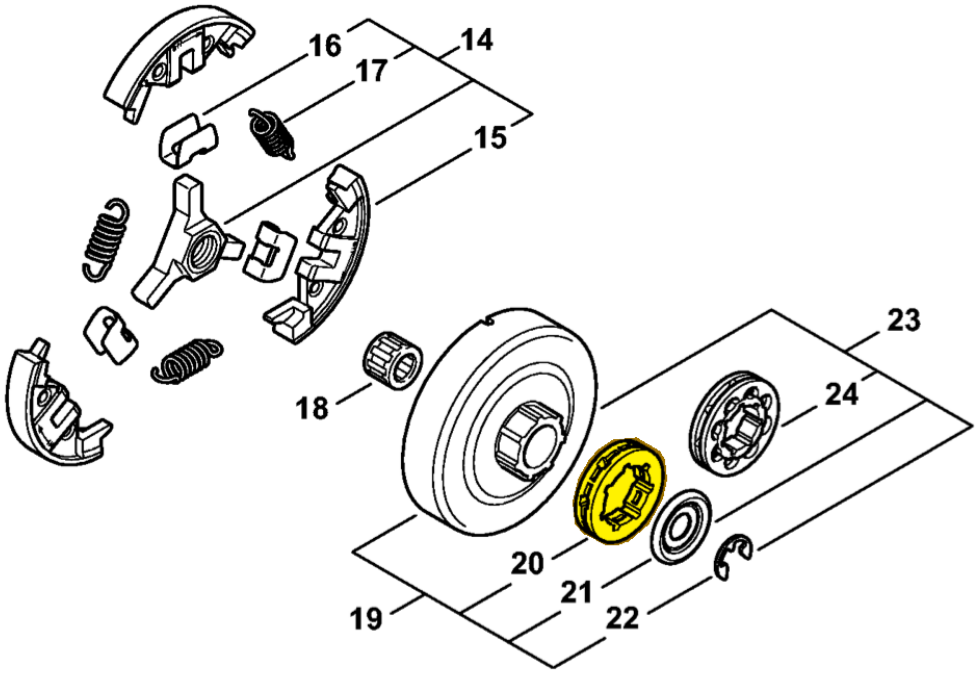

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 13; parts table p. 14.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Rim sprocket kit 0.325" 7T

1141 007 1002


Bin **B5** | **1** spare per kit | **AS1** supervision

Online guide

MS 261 — rim sprocket kit

0.325-inch pitch; 7 teeth. Includes rim sprocket `0000 642 1236` (item 24), washer `0000 958 1022` (item 28) and E-clip `9460 624 0801` (item 29).

Item 20 | **Qty listed: 1**

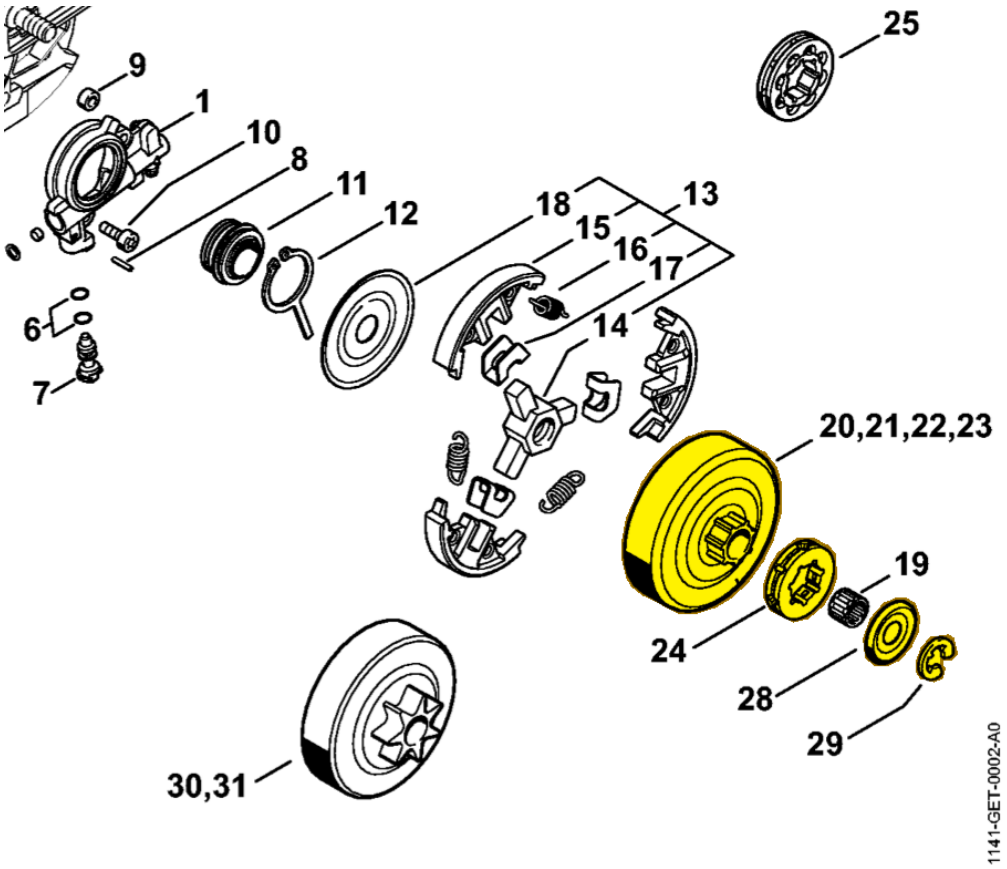

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 10; parts table p. 11.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Rim sprocket kit 3/8" 7T

1128 007 1000


Bin **B5** | **1** spare per kit | **AS1** supervision

Online guide

MS 462 — rim sprocket kit

3/8-inch pitch; 7 teeth. Includes rim sprocket `0000 642 1223` (item 20), washer `0000 958 1032` (item 21) and E-clip `9460 624 0801` (item 22).

Item 19 | **Qty listed: 1**

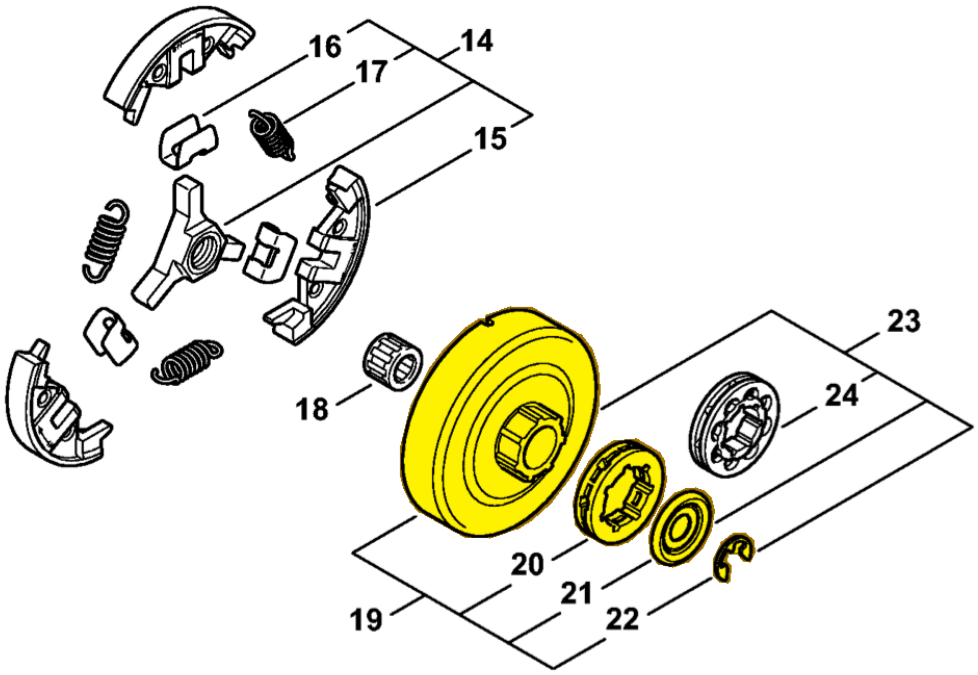

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 13; parts table p. 14.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Spark plug BPMR7A

0000 400 7000

Bin **B4** | **3** spares per kit | **S1** supervision

Online guide


MS 261 — cylinder

Spark plug in the cylinder.

Item 23 | **Qty listed: 1**

Alternative spark plug

Bosch WSR6F · 1110 400 7005

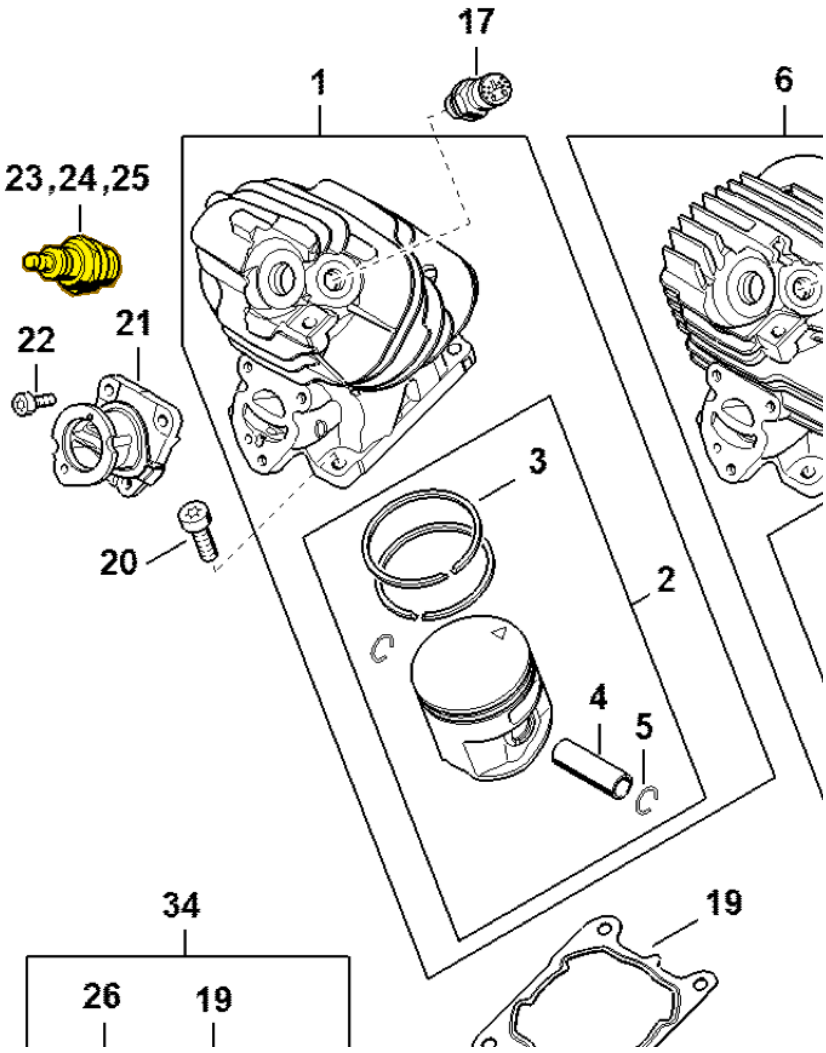

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 8; parts table p. 9.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Spark plug NGK CMR6H

0000 400 7011

Bin **B4** | **2** spares per kit | **S1** supervision

Online guide

MS 462 — cylinder


Spark plug used in both MS 462 cylinder configurations.

Item 10 | **Qty listed: 1**

Alternative spark plug

Bosch USR4AC

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 9; parts table p. 10.

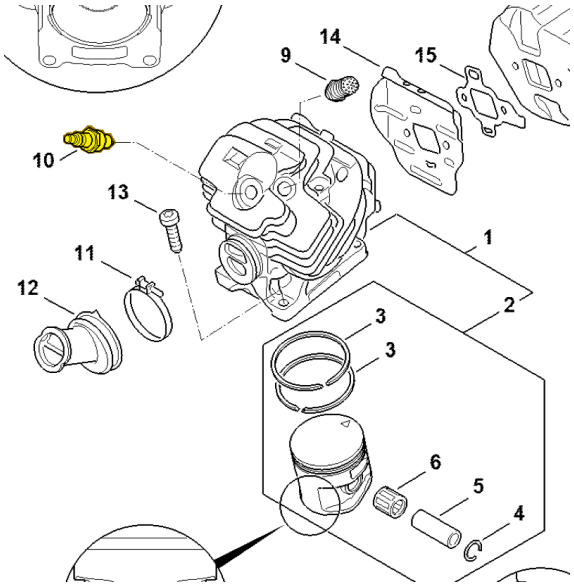

HT 135 — cylinder


Spark plug in the cylinder.

Item 9 | **Qty listed: 1**

Alternative spark plug

Bosch USR4AC

HT 135-Z spare-parts list, 10/28/2024. Drawing p. 8; parts table p. 9.

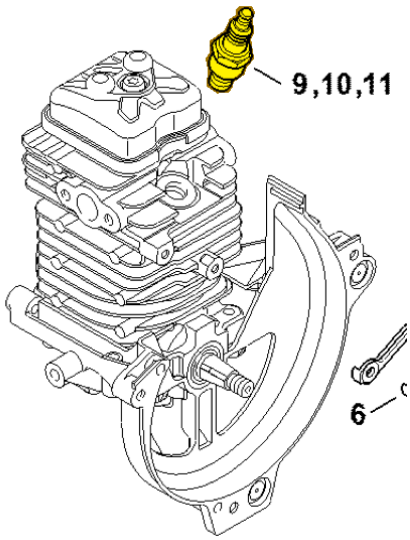

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Spline screw M5x12

9022 341 0960

Bin **T11** | **1** spare per kit | **S2** supervision


Online guide

MS 462 — bumper spike

IS-M5×12. Screw at the upper hole of the inner bumper spike (item 8).

Item 9 | **Qty listed: 1**

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 17; parts table p. 18.

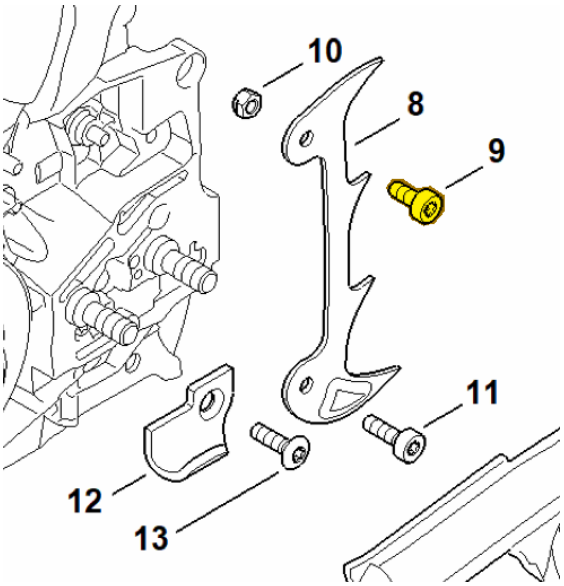


HT 135 — handle clamps

IS-M5×12. Two screws secure the clamps (item 3) inside the control handle.

Item 4 | **Qty listed: 2**

HT 135-Z spare-parts list, 10/28/2024. Drawing p. 15; parts table p. 16.

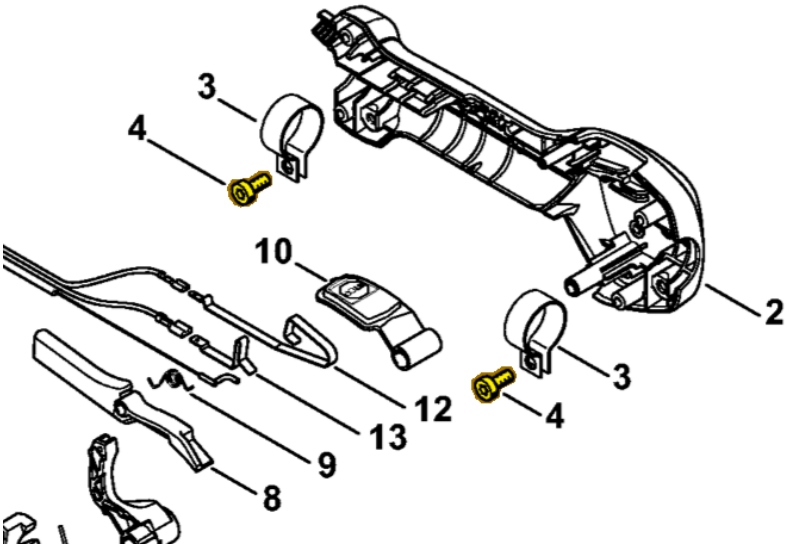

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Spring

1118 195 3500


Bin **T5** | **1** spare per kit | **S2** supervision

Online guide

HT 135 — rewind starter

Pawl-retaining spring in rewind starter 4182 190 4001 (item 9).

Item 9 | **Qty listed: 1**

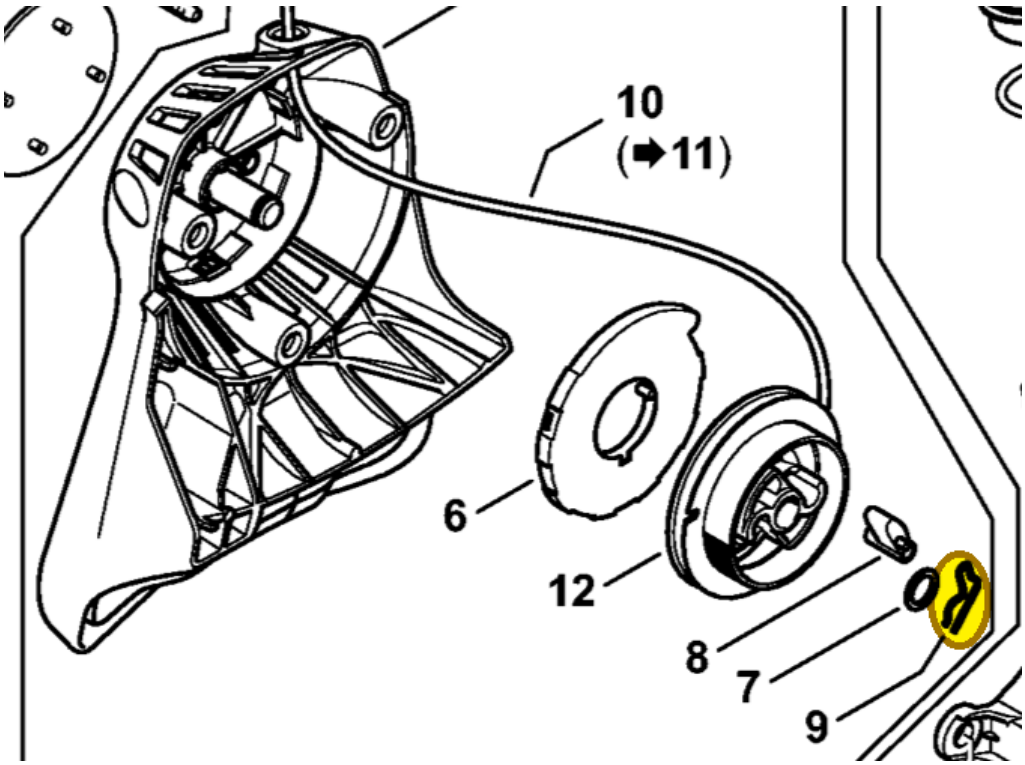

HT 135-Z spare-parts list, 10/28/2024. Drawing p. 5; parts table p. 6.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Spring

1128 195 3500

Bin **T5** | **3** spares per kit | **S2** supervision


Online guide

MS 261 — rewind starter

Pawl-retaining spring in fan housing 1141 080 2104 (item 10).

Item 10 | **Qty listed: 1**

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 19; parts table p. 20.

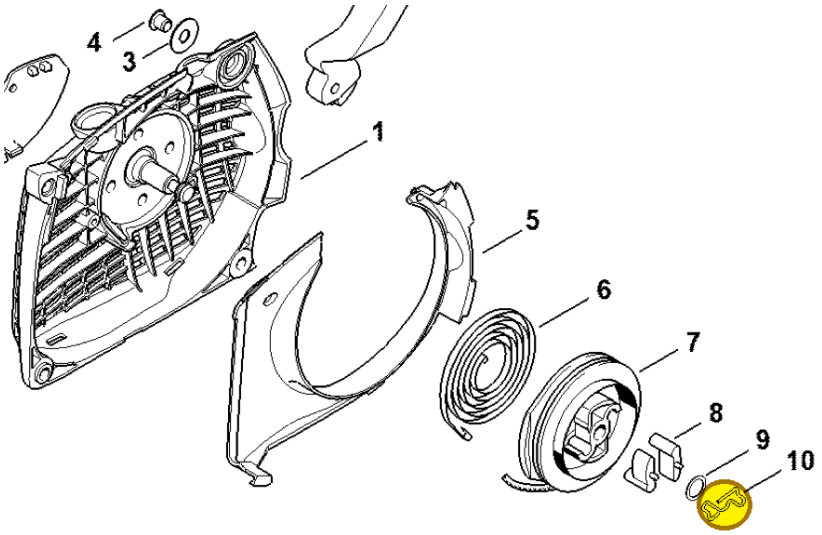


MS 462 — rewind starter

Pawl-retaining spring in fan housing 1142 080 2102 (item 12).

Item 12 | **Qty listed: 1**

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 21; parts table p. 22.

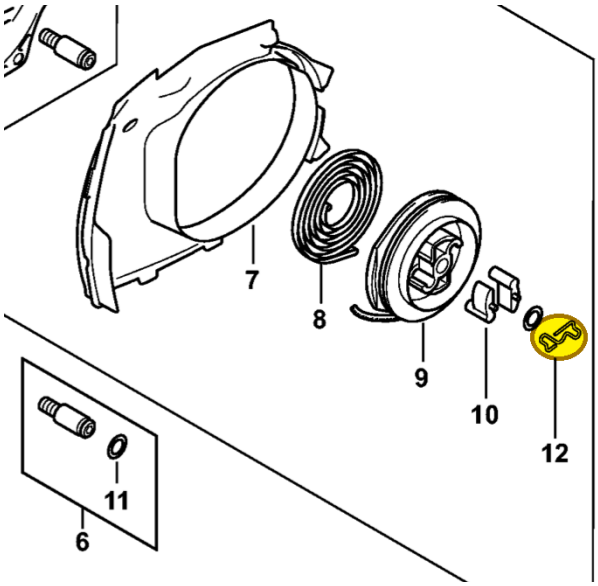

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Spring

1128 647 2400


Bin **B3** | **1** spare per kit | **S2** supervision

Online guide

MS 462 — oil pump drive

Spring on worm 1128 640 7112 (item 11).

Item 12 | **Qty listed: 1**

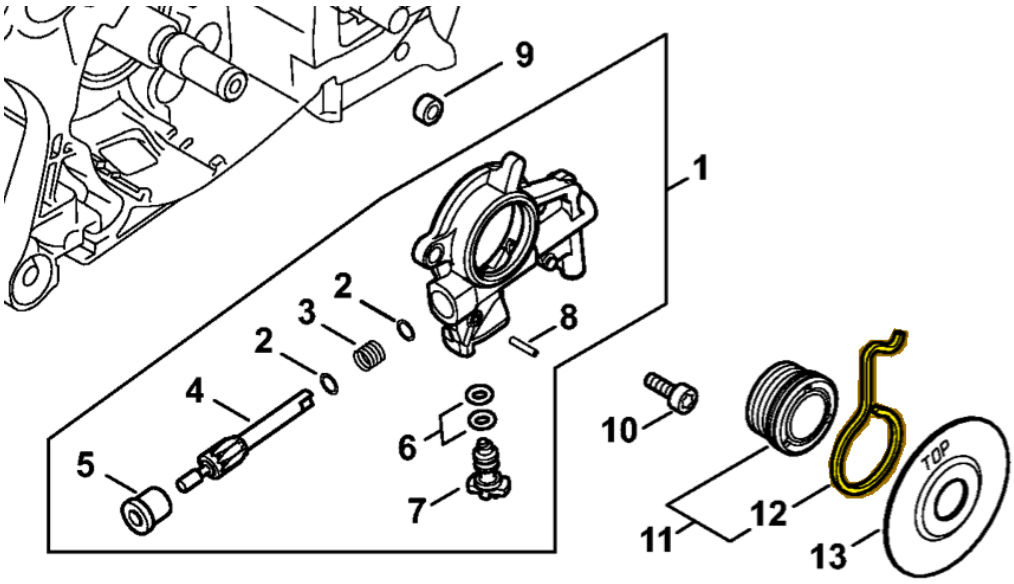

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 13; parts table p. 14.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Tension spring

1141 160 5500


Bin **T6** | **3** spares per kit | **S2** supervision

Online guide

MS 261 — chain brake

Includes sleeve (item 9). Shown with brake band 1141 160 5400.

Item 8 | **Qty listed: 1**

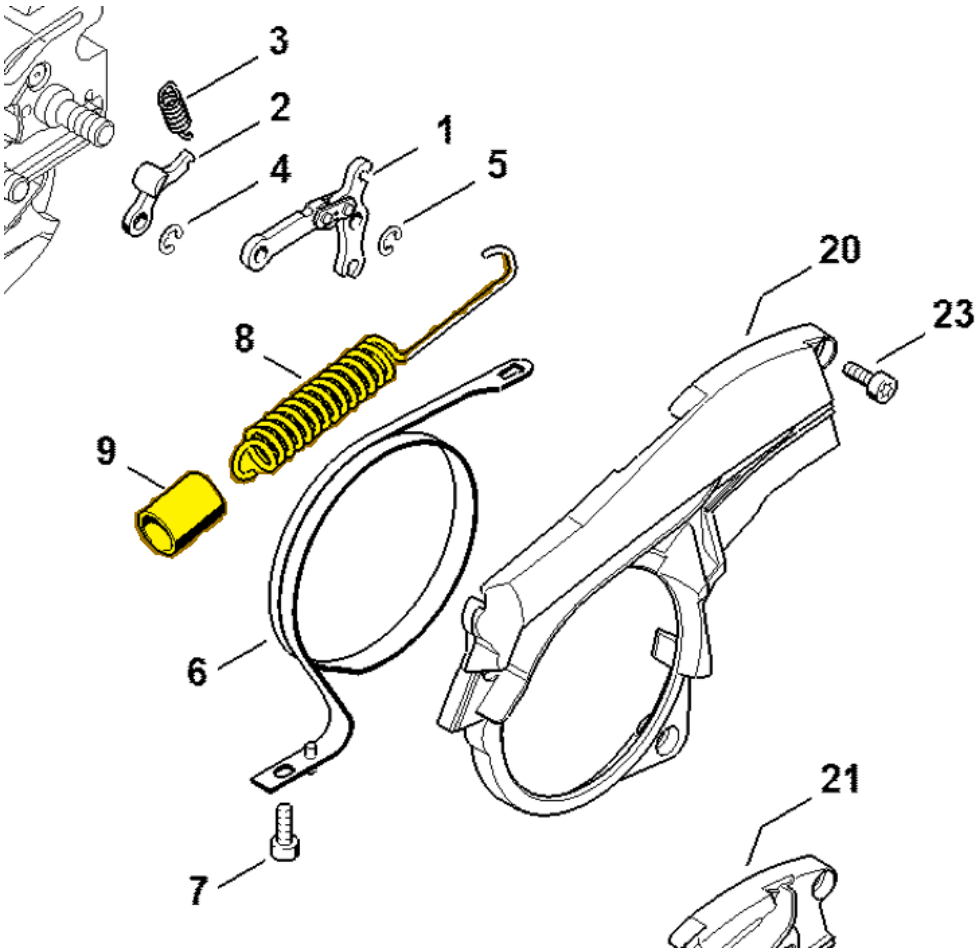

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 13; parts table p. 14.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Tension spring

1142 160 5500


Bin **T6** | **1** spare per kit | **S2** supervision

Online guide

MS 462 — chain brake

Includes sleeve (item 8). Shown with brake band 1142 160 5400.

Item 7 | **Qty listed: 1**

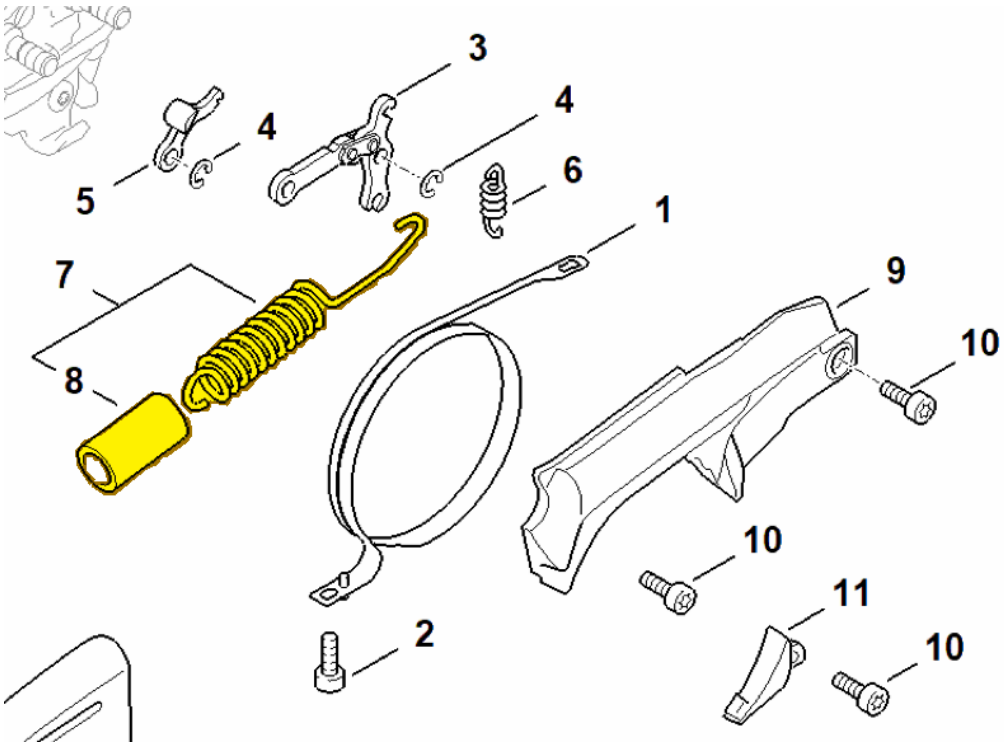

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 15; parts table p. 16.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Tensioner slide

1125 640 1900

Bin **B1** | **2** spares per kit | **S2** supervision


Online guide

MS 261 — chain tensioner

Slide in chain tensioner kit MA02 007 1002.

Item 3 | **Qty listed: 1**

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 15; parts table p. 16.

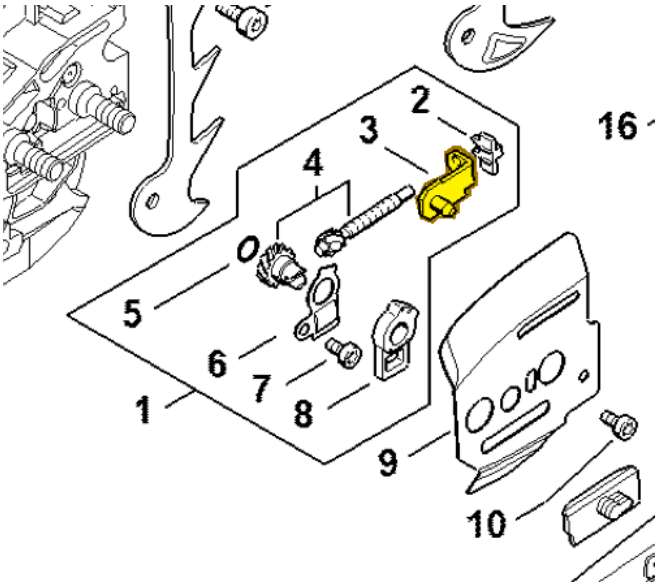


MS 462 — chain tensioner

Slide in chain tensioner kit MA02 007 1002.

Item 14 | **Qty listed: 1**

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 15; parts table p. 16.

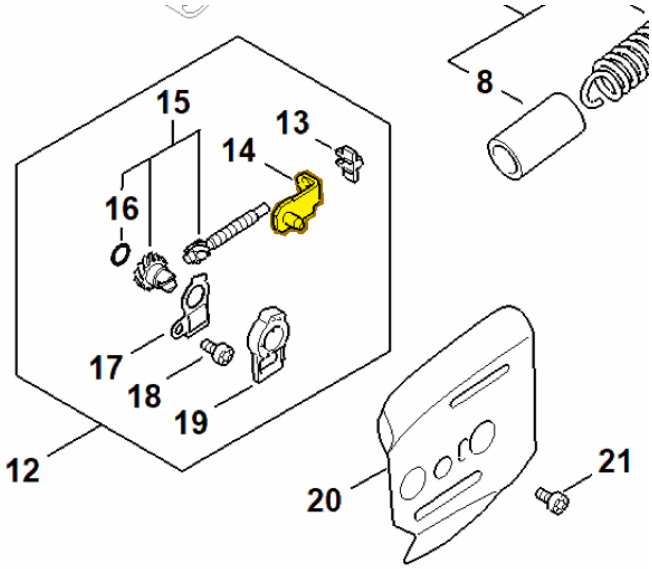

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Washer

4182 162 8900


Bin **T2** | **2** spares per kit | **S2** supervision

Online guide

HT 135 — gear head

Washers on either side of chain sprocket `0000 640 2003` (item 26).

Item 27 | **Qty listed: 2**

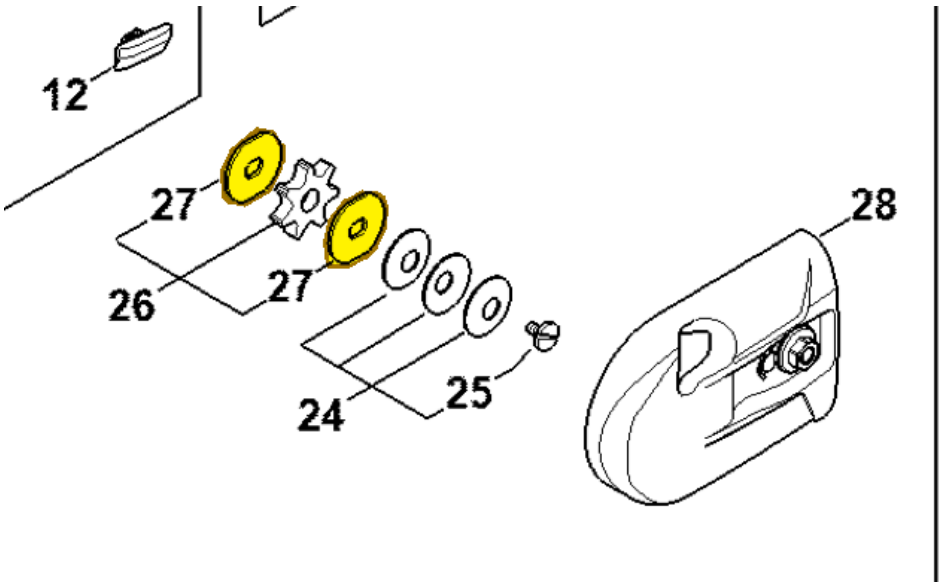

HT 135-Z spare-parts list, 10/28/2024. Drawing p. 17; parts table p. 18.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Washer Ø 27 mm

0000 958 1022


Bin **T3** | **10** spares per kit | **AS1** supervision

Online guide

MS 261 — clutch drum

Retained by E-clip 9460 624 0801. Included in rim sprocket kit 1141 007 1002.

Item 28 | **Qty listed: 1**

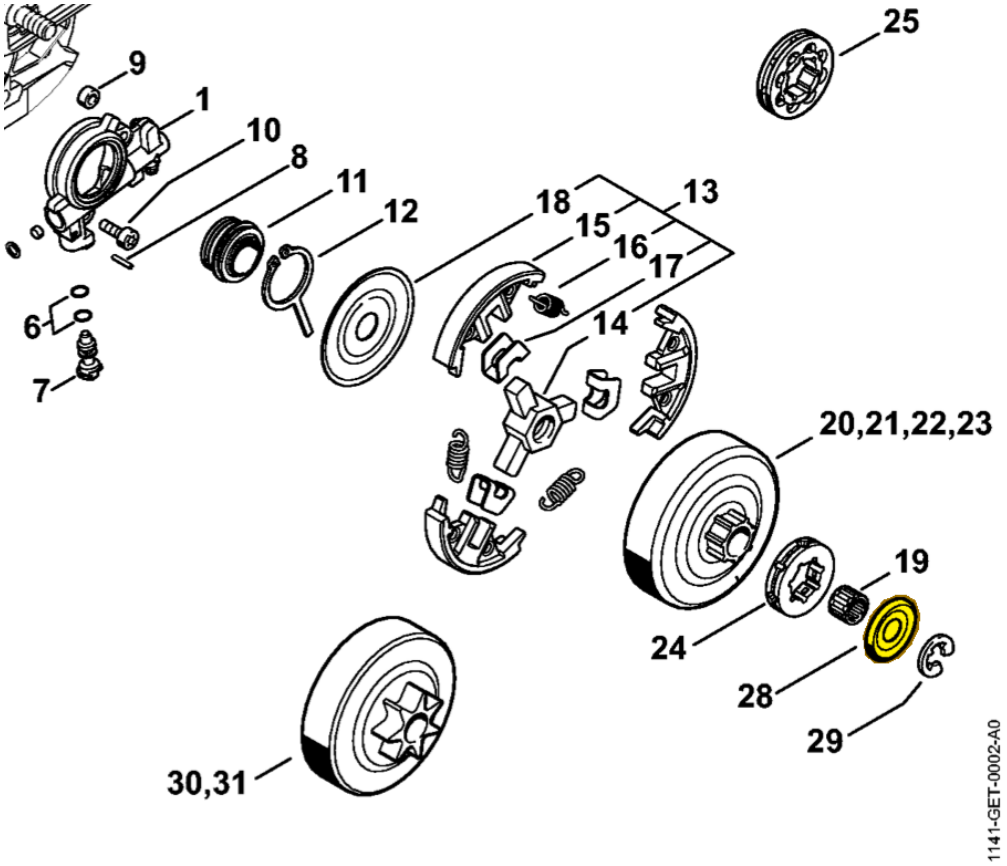

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 10; parts table p. 12.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Washer Ø 27 mm

0000 958 1032


Bin **T3** | **1** spare per kit | **AS1** supervision

Online guide

MS 462 — clutch drum

Retained by E-clip 9460 624 0801. Included in rim sprocket kit 1128 007 1000.

Item 21 | **Qty listed: 1**

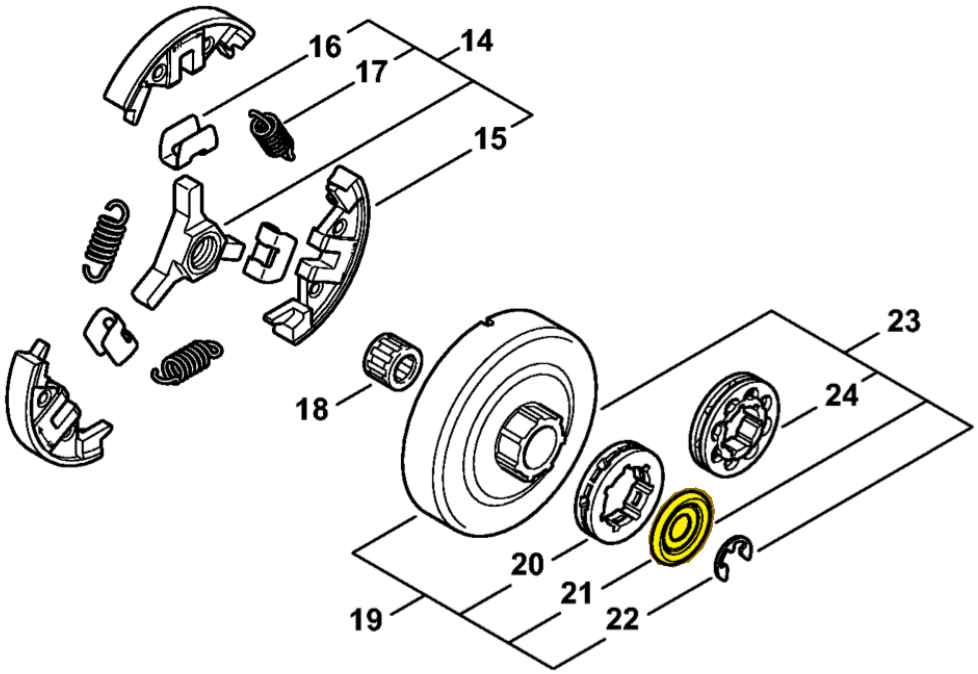

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 13; parts table p. 14.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Worm

1121 640 7111


Bin **B3** | **3** spares per kit | **S2** supervision

Online guide

MS 261 — oil pump drive

Includes carrier 1121 647 3100 (item 12). Drives oil pump 1141 640 3200.

Item 11 | **Qty listed: 1**

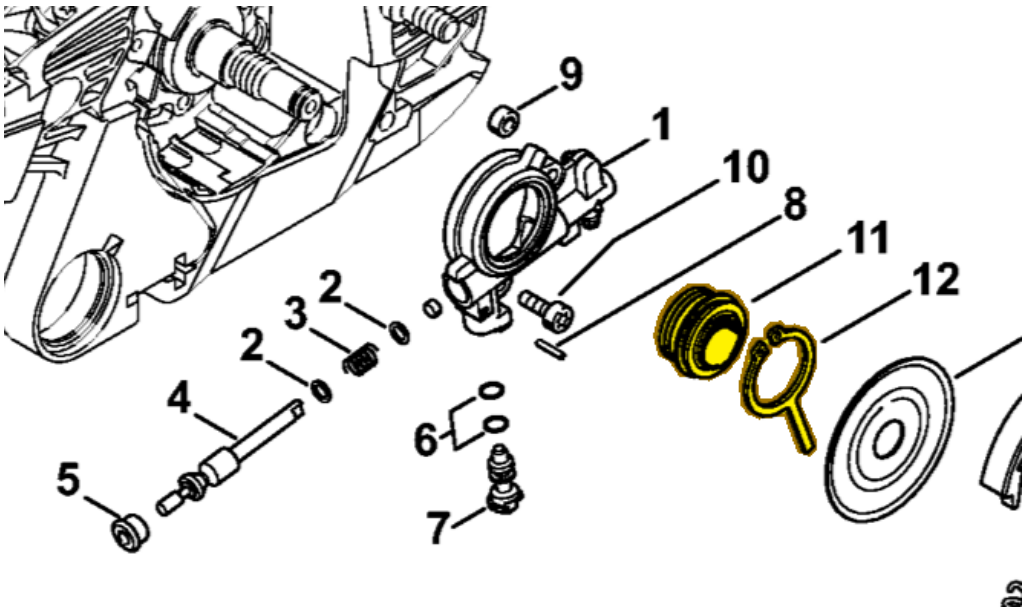

MS 261 C-M spare-parts list, 10/02/2023. Drawing p. 10; parts table p. 11.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.

Worm

1128 640 7112


Bin **B3** | **1** spare per kit | **S2** supervision

Online guide

MS 462 — oil pump drive

Includes spring 1128 647 2400 (item 12). Drives oil pump 1142 640 3200.

Item 11 | **Qty listed: 1**

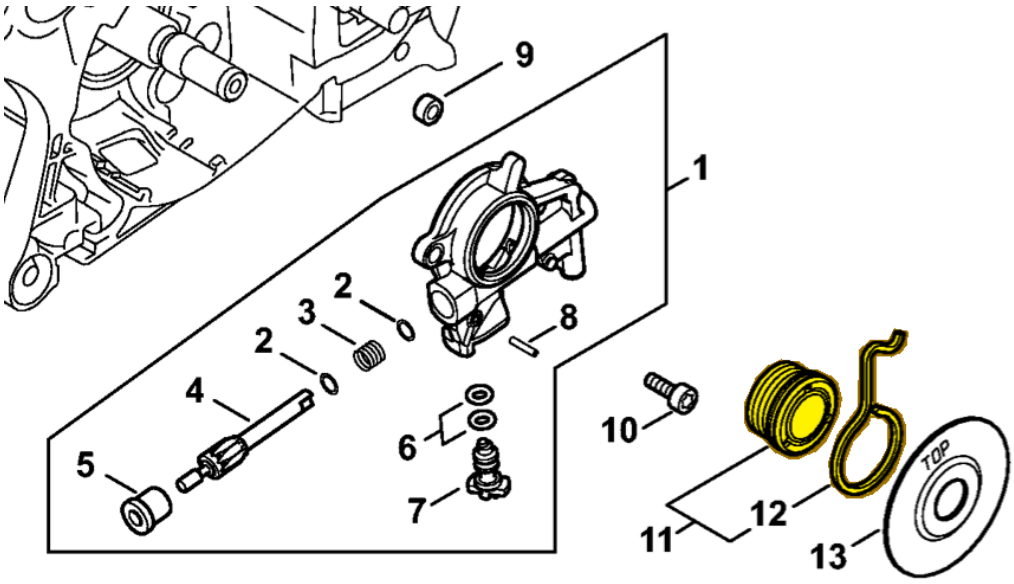

MS 462 C-M Z spare-parts list, 10/29/2024. Drawing p. 13; parts table p. 14.

Drawing © ANDREAS STIHL AG & Co. KG. Not to scale.